


Operating Instructions **Proline Promag H 200** **PROFIBUS PA**

Electromagnetic flowmeter

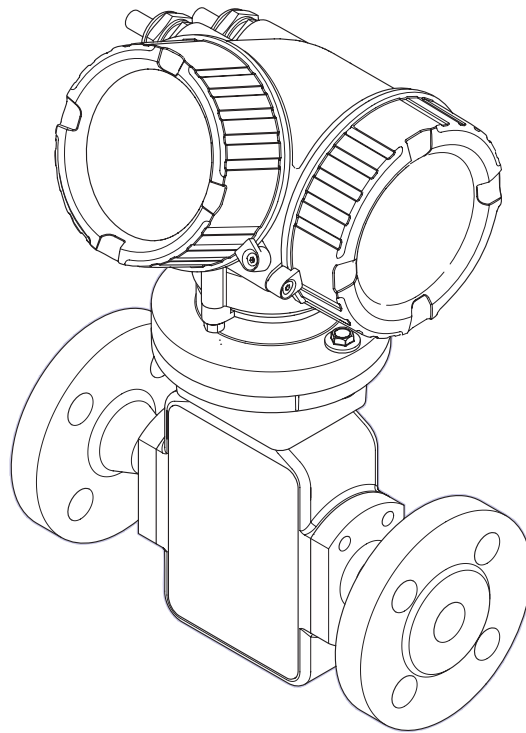

- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser Sales Center will supply you with current information and updates to these instructions.

Table of contents

1	Document information	6		
1.1	Document function	6		
1.2	Symbols used	6		
1.2.1	Safety symbols	6		
1.2.2	Electrical symbols	6		
1.2.3	Tool symbols	6		
1.2.4	Symbols for certain types of information	7		
1.2.5	Symbols in graphics	7		
1.3	Documentation	7		
1.3.1	Standard documentation	8		
1.3.2	Supplementary device-dependent documentation	8		
1.4	Registered trademarks	8		
2	Basic safety instructions	9		
2.1	Requirements for the personnel	9		
2.2	Designated use	9		
2.3	Workplace safety	10		
2.4	Operational safety	10		
2.5	Product safety	10		
2.6	IT security	11		
3	Product description	12		
3.1	Product design	12		
4	Incoming acceptance and product identification	13		
4.1	Incoming acceptance	13		
4.2	Product identification	13		
4.2.1	Transmitter nameplate	14		
4.2.2	Sensor nameplate	15		
4.2.3	Symbols on measuring device	16		
5	Storage and transport	17		
5.1	Storage conditions	17		
5.2	Transporting the product	17		
5.2.1	Measuring devices without lifting lugs	17		
5.2.2	Measuring devices with lifting lugs	18		
5.2.3	Transporting with a fork lift	18		
5.3	Packaging disposal	18		
6	Installation	19		
6.1	Installation conditions	19		
6.1.1	Mounting position	19		
6.1.2	Requirements from environment and process	21		
6.1.3	Special mounting instructions	22		
6.2	Mounting the measuring device	23		
6.2.1	Required tools	23		
6.2.2	Preparing the measuring device	23		
6.2.3	Mounting the sensor	23		
6.2.4	Turning the transmitter housing	26		
6.2.5	Turning the display module	27		
6.3	Post-installation check	27		
7	Electrical connection	28		
7.1	Connection conditions	28		
7.1.1	Required tools	28		
7.1.2	Connecting cable requirements	28		
7.1.3	Terminal assignment	31		
7.1.4	Pin assignment, device plug	31		
7.1.5	Shielding and grounding	31		
7.1.6	Requirements for the supply unit	33		
7.1.7	Preparing the measuring device	33		
7.2	Connecting the measuring device	33		
7.2.1	Connecting the transmitter	33		
7.2.2	Ensuring potential equalization	35		
7.3	Special connection instructions	37		
7.3.1	Connection examples	37		
7.4	Hardware settings	38		
7.4.1	Setting the device address	38		
7.5	Ensuring the degree of protection	39		
7.6	Post-connection check	40		
8	Operating options	41		
8.1	Overview of operating options	41		
8.2	Structure and function of the operating menu	42		
8.2.1	Structure of the operating menu	42		
8.2.2	Operating philosophy	43		
8.3	Access to the operating menu via the local display	44		
8.3.1	Operational display	44		
8.3.2	Navigation view	45		
8.3.3	Editing view	47		
8.3.4	Operating elements	49		
8.3.5	Opening the context menu	49		
8.3.6	Navigating and selecting from list	51		
8.3.7	Calling the parameter directly	51		
8.3.8	Calling up help text	52		
8.3.9	Changing the parameters	53		
8.3.10	User roles and related access authorization	54		
8.3.11	Disabling write protection via access code	54		
8.3.12	Enabling and disabling the keypad lock	54		
8.4	Access to the operating menu via the operating tool	55		
8.4.1	Connecting the operating tool	55		
8.4.2	FieldCare	57		
8.4.3	SIMATIC PDM	58		

9	System integration	59	12	Diagnostics and troubleshooting	100
9.1	Overview of device description files	59	12.1	General troubleshooting	100
9.1.1	Current version data for the device	59	12.2	Diagnostic information on local display	102
9.1.2	Operating tools	59	12.2.1	Diagnostic message	102
9.2	Device master file (GSD)	59	12.2.2	Calling up remedial measures	104
9.2.1	Manufacturer-specific GSD	60	12.3	Diagnostic information in FieldCare	104
9.2.2	Profile GSD	60	12.3.1	Diagnostic options	104
9.3	Cyclic data transmission	60	12.3.2	Calling up remedy information	105
9.3.1	Block model	60	12.4	Adapting the diagnostic information	106
9.3.2	Description of the modules	61	12.4.1	Adapting the measured value and device status	106
10	Commissioning	66	12.4.2	Adapting the diagnostic behavior	107
10.1	Function check	66	12.5	Overview of diagnostic information	109
10.2	Switching on the measuring device	66	12.5.1	Diagnostic of sensor	110
10.3	Configuring the device address via software	66	12.5.2	Diagnostic of electronic	110
10.3.1	PROFIBUS network	66	12.5.3	Diagnostic of configuration	115
10.4	Setting the operating language	66	12.5.4	Diagnostic of process	119
10.5	Configuring the measuring device	67	12.6	Pending diagnostic events	121
10.5.1	Defining the tag name	68	12.7	Diagnostic list	122
10.5.2	Setting the system units	68	12.8	Event logbook	123
10.5.3	Configuring communication interface	70	12.8.1	Event history	123
10.5.4	Configuring the analog inputs	71	12.8.2	Filtering the event logbook	123
10.5.5	Configuring the local display	71	12.8.3	Overview of information events	123
10.5.6	Configuring the low flow cut off	73	12.9	Resetting the measuring device	124
10.5.7	Configuring empty pipe detection	75	12.9.1	Function scope of the "Device reset" parameter	125
10.6	Advanced settings	76	12.10	Device information	125
10.6.1	Carrying out a sensor adjustment	77	12.11	Firmware history	127
10.6.2	Configuring the pulse/frequency/switch output	77	13	Maintenance	128
10.6.3	Configuring the totalizer	84	13.1	Maintenance tasks	128
10.6.4	Carrying out additional display configurations	86	13.1.1	Exterior cleaning	128
10.6.5	Administration configuration	88	13.1.2	Interior cleaning	128
10.7	Configuration management	89	13.1.3	Replacing seals	128
10.7.1	Function scope of the "Configuration management" parameter	90	13.2	Measuring and test equipment	128
10.8	Simulation	90	13.3	Endress+Hauser services	128
10.9	Protecting settings from unauthorized access	92	14	Repair	129
10.9.1	Write protection via access code	92	14.1	General notes	129
10.9.2	Write protection via write protection switch	93	14.2	Spare parts	129
11	Operation	95	14.3	Endress+Hauser services	130
11.1	Reading the device locking status	95	14.4	Return	130
11.2	Adjusting the operating language	95	14.5	Disposal	130
11.3	Configuring the display	95	14.5.1	Removing the measuring device	130
11.4	Reading measured values	95	14.5.2	Disposing of the measuring device	131
11.4.1	Process variables	95	15	Accessories	132
11.4.2	Totalizer	96	15.1	Device-specific accessories	132
11.5	Adapting the measuring device to the process conditions	97	15.1.1	For the transmitter	132
11.6	Performing a totalizer reset	97	15.1.2	For the sensor	132
11.7	Showing data logging	98	15.2	Service-specific accessories	133
			15.3	System components	133
			16	Technical data	134
			16.1	Application	134
			16.2	Function and system design	134

16.3	Input	134
16.4	Output	135
16.5	Power supply	138
16.6	Performance characteristics	139
16.7	Installation	140
16.8	Environment	140
16.9	Process	141
16.10	Mechanical construction	142
16.11	Operability	146
16.12	Certificates and approvals	148
16.13	Application packages	149
16.14	Accessories	150
16.15	Documentation	150
Index		152

1 Document information

1.1 Document function

These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

1.2 Symbols used


1.2.1 Safety symbols

Symbol	Meaning
 DANGER	DANGER! This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
 WARNING	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
 CAUTION	CAUTION! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
 NOTICE	NOTE! This symbol contains information on procedures and other facts which do not result in personal injury.

1.2.2 Electrical symbols

Symbol	Meaning	Symbol	Meaning
	Direct current		Alternating current
	Direct current and alternating current		Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.		Equipotential connection A connection that has to be connected to the plant grounding system: This may be a potential equalization line or a star grounding system depending on national or company codes of practice.

 1.2.3 Tool symbols

Symbol	Meaning
	Flat blade screwdriver
	Allen key
	Open-ended wrench

1.2.4 Symbols for certain types of information

Symbol	Meaning
	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
	Forbidden Procedures, processes or actions that are forbidden.
	Tip Indicates additional information.
	Reference to documentation
	Reference to page
	Reference to graphic
	Series of steps
	Result of a step
	Help in the event of a problem
	Visual inspection

1.2.5 Symbols in graphics

Symbol	Meaning	Symbol	Meaning
1, 2, 3, ...	Item numbers		Series of steps
A, B, C, ...	Views	A-A, B-B, C-C, ...	Sections
	Hazardous area		Safe area (non-hazardous area)
	Flow direction		

1.3 Documentation

-  For an overview of the scope of the associated Technical Documentation, refer to the following:
- The CD-ROM provided for the device (depending on the device version, the CD-ROM might not be part of the delivery!)
 - The *W@M Device Viewer* : Enter the serial number from the nameplate (www.endress.com/deviceviewer)
 - The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.
-  For a detailed list of the individual documents along with the documentation code

1.3.1 Standard documentation

Document type	Purpose and content of the document
Technical Information	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Brief Operating Instructions	Guide that takes you quickly to the 1st measured value The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.

1.3.2 Supplementary device-dependent documentation

Additional documents are supplied depending on the device version ordered: Always comply strictly with the instructions in the supplementary documentation. The supplementary documentation is an integral part of the device documentation.

1.4 Registered trademarks

PROFIBUS®

Registered trademark of the PROFIBUS User Organization, Karlsruhe, Germany

Applicator®, FieldCare®, Field Xpert™, HistoROM®, Heartbeat Technology™

Registered or registration-pending trademarks of the Endress+Hauser Group

2 Basic safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task
- ▶ Are authorized by the plant owner/operator
- ▶ Are familiar with federal/national regulations
- ▶ Before beginning work, the specialist staff must have read and understood the instructions in the Operating Instructions and supplementary documentation as well as in the certificates (depending on the application)
- ▶ Following instructions and basic conditions

The operating personnel must fulfill the following requirements:

- ▶ Being instructed and authorized according to the requirements of the task by the facility's owner-operator
- ▶ Following the instructions in these Operating Instructions

2.2 Designated use

Application and media

The measuring device is only suitable for flow measurement of liquids with a minimum conductivity of 20 $\mu\text{S}/\text{cm}$.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in hazardous areas, in hygienic applications or in applications where there is an increased risk due to process pressure, are labeled accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- ▶ Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- ▶ Check the nameplate to verify if the device ordered can be put to its intended use in the approval-related area (e.g. explosion protection, pressure vessel safety).
- ▶ Use the measuring device only for media against which the process-wetted materials are adequately resistant.
- ▶ If the measuring device is not operated at atmospheric temperature, compliance with the relevant basic conditions specified in the associated device documentation is absolutely essential: "Documentation" section →  7.
- ▶ Protect the measuring device permanently against corrosion from environmental influences.

Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.

WARNING

Danger of breakage of the sensor due to corrosive or abrasive fluids or from environmental conditions!

- ▶ Verify the compatibility of the process fluid with the sensor material.
- ▶ Ensure the resistance of all fluid-wetted materials in the process.
- ▶ Keep within the specified pressure and temperature range.

Verification for borderline cases:

- ▶ For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

Residual risks

The external surface temperature of the housing can increase by max. 10 K due to the power consumption of the electronic components. Hot process fluids passing through the measuring device will further increase the surface temperature of the housing. The surface of the sensor, in particular, can reach temperatures which are close to the fluid temperature.

Possible burn hazard due to fluid temperatures!

- ▶ For elevated fluid temperature, ensure protection against contact to prevent burns.

2.3 Workplace safety

For work on and with the device:

- ▶ Wear the required personal protective equipment according to federal/national regulations.

For welding work on the piping:

- ▶ Do not ground the welding unit via the measuring device.

If working on and with the device with wet hands:

- ▶ It is recommended to wear gloves on account of the higher risk of electric shock.

2.4 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

- ▶ If, despite this, modifications are required, consult with Endress+Hauser.

Repair

To ensure continued operational safety and reliability,

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from Endress+Hauser only.

2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EC directives listed in the device-specific EC Declaration of Conformity. Endress+Hauser confirms this by affixing the CE mark to the device.

2.6 IT security

We only provide a warranty if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the device settings.

IT security measures in line with operators' security standards and designed to provide additional protection for the device and device data transfer must be implemented by the operators themselves.


3 Product description

The device consists of a transmitter and a sensor.

The device is available as a compact version:

The transmitter and sensor form a mechanical unit.

3.1 Product design

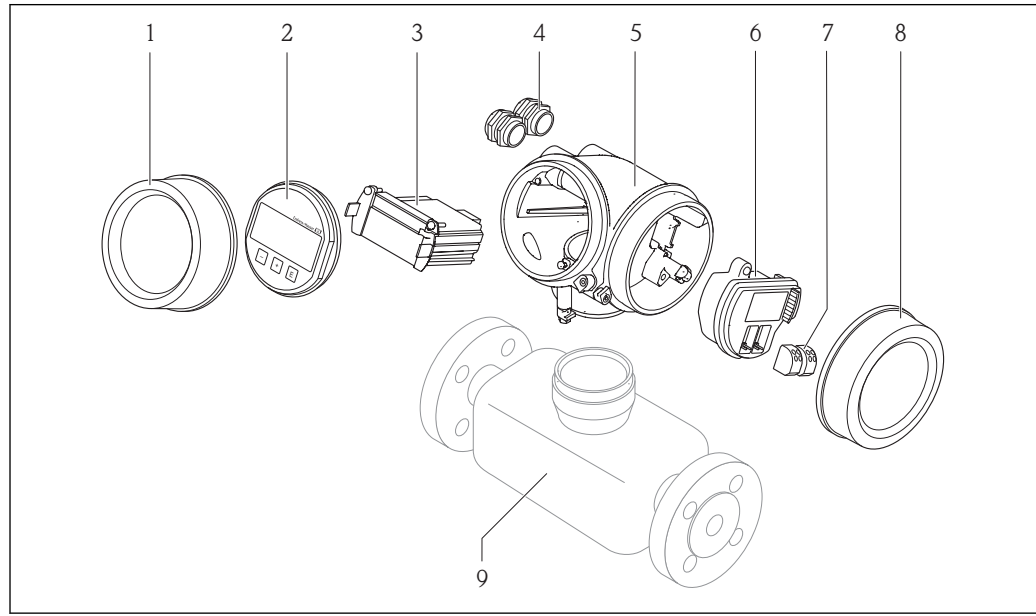





A0014056

 1 Important components of a measuring device

- 1 Electronics compartment cover
- 2 Display module
- 3 Main electronics module
- 4 Cable glands
- 5 Transmitter housing (incl. integrated HistoROM)
- 6 I/O electronics module
- 7 Terminals (pluggable spring terminals)
- 8 Connection compartment cover
- 9 Sensor

4 Incoming acceptance and product identification

 4.1 Incoming acceptance

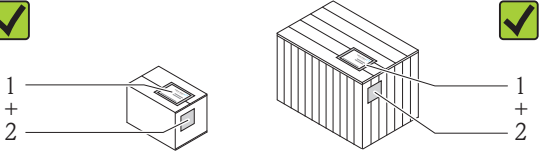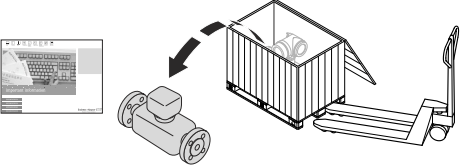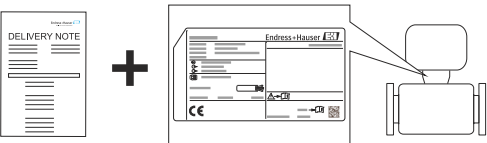 			Are the order codes on the delivery note (1) and the product sticker (2) identical?
			
 			Are the goods undamaged?
 			Do the nameplate data match the ordering information on the delivery note?
 			Is the CD-ROM with the Technical Documentation (depends on device version) and documents present?

-  ■ If one of the conditions is not satisfied, contact your Endress+Hauser Sales Center.
- Depending on the device version, the CD-ROM might not be part of the delivery! The Technical Documentation is available via the Internet or via the *Endress+Hauser Operations App*, see the "Product identification" section →  14.

4.2 Product identification


The following options are available for identification of the measuring device:

- Nameplate specifications
- Order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in *W@M Device Viewer* (www.endress.com/deviceviewer): All information about the measuring device is displayed.
- Enter the serial number from the nameplates into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information for the measuring device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The chapters "Additional standard documentation on the device" →  8 and "Supplementary device-dependent documentation" →  8
- The *W@M Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

4.2.1 Transmitter nameplate

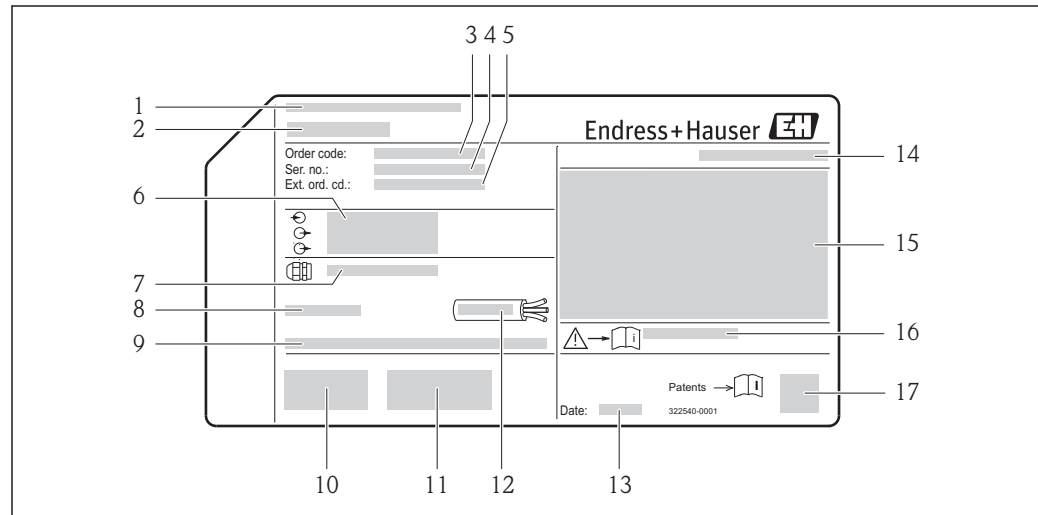


A0013906

 2 Example of a transmitter nameplate

- 1 Manufacturing location
- 2 Name of the transmitter
- 3 Order code
- 4 Serial number (Ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Electrical connection data, e.g. available inputs and outputs, supply voltage
- 7 Type of cable glands
- 8 Permitted ambient temperature (T_a)
- 9 Firmware version (FW) from the factory
- 10 CE mark, C-Tick
- 11 Additional information on version: certificates, approvals
- 12 Permitted temperature range for cable
- 13 Manufacturing date: year-month
- 14 Degree of protection
- 15 Approval information for explosion protection
- 16 Document number of safety-related supplementary documentation
- 17 2-D matrix code

4.2.2 Sensor nameplate

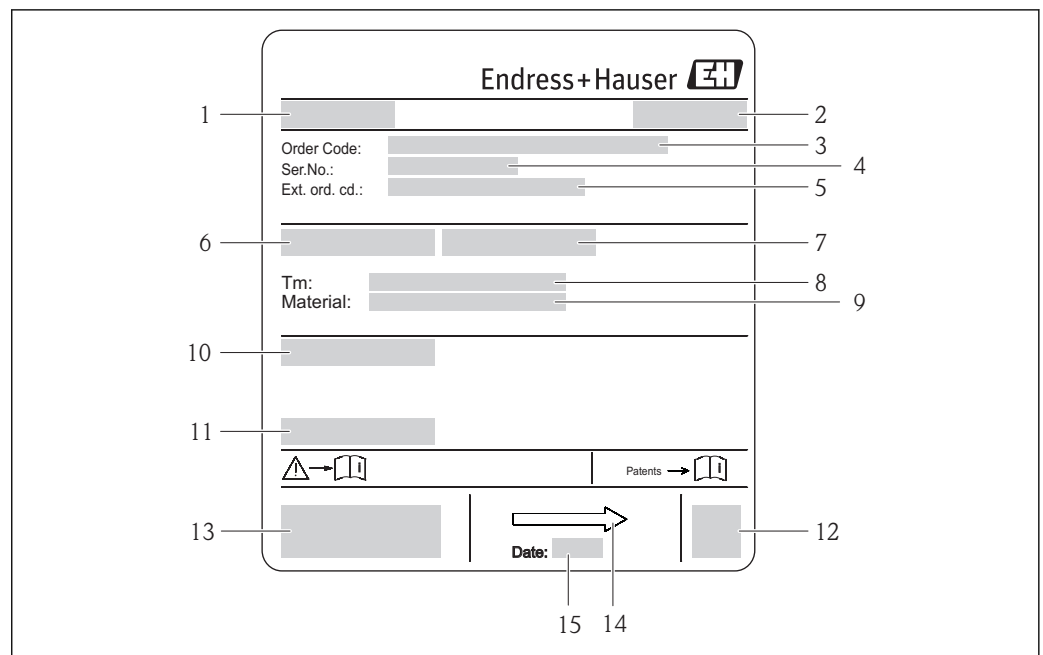

3 Example of sensor nameplate

- 1 Name of the sensor
- 2 Manufacturing location
- 3 Order code
- 4 Serial number (ser. no.)
- 5 Extended order code (ext. ord. cd.)
- 6 Nominal diameter of sensor
- 7 Test pressure of the sensor
- 8 Fluid temperature range
- 9 Material of lining and electrodes
- 10 Degree of protection: e.g. IP, NEMA
- 11 Permitted ambient temperature (T_a)
- 12 2-D matrix code
- 13 CE mark, C-Tick
- 14 Flow direction
- 15 Manufacturing date: year-month



Order code

The measuring device is reordered using the order code.

Extended order code

- The device type (product root) and basic specifications (mandatory features) are always listed.
- Of the optional specifications (optional features), only the safety and approval-related specifications are listed (e.g. LA). If other optional specifications are also ordered, these are indicated collectively using the # placeholder symbol (e.g. #LA#).
- If the ordered optional specifications do not include any safety and approval-related specifications, they are indicated by the + placeholder symbol (e.g. XXXXXX-ABCDE +).

4.2.3 Symbols on measuring device

Symbol	Meaning
	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
	Reference to documentation Refers to the corresponding device documentation.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.

5 Storage and transport

5.1 Storage conditions


Observe the following notes for storage:

- Store in the original packaging to ensure protection from shock.
- Do not remove protective covers or protective caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.
- Protect from direct sunlight to avoid unacceptably high surface temperatures.
- Select a storage location where moisture cannot collect in the measuring device as fungus and bacteria infestation can damage the lining.
- Store in a dry and dust-free place.
- Do not store outdoors.

Storage temperature →  140

5.2 Transporting the product

Transport the measuring device to the measuring point in the original packaging.

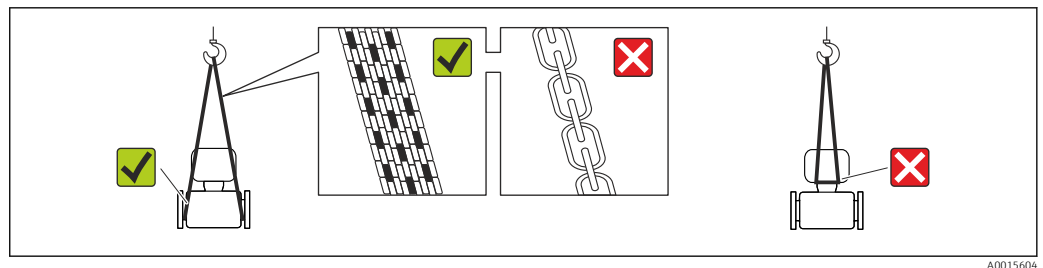

-  Do not remove protective covers or caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.


5.2.1 Measuring devices without lifting lugs

WARNING

Center of gravity of the measuring device is higher than the suspension points of the webbing slings.

Risk of injury if the measuring device slips.

- ▶ Secure the measuring device against slipping or turning.
- ▶ Observe the weight specified on the packaging (stick-on label).

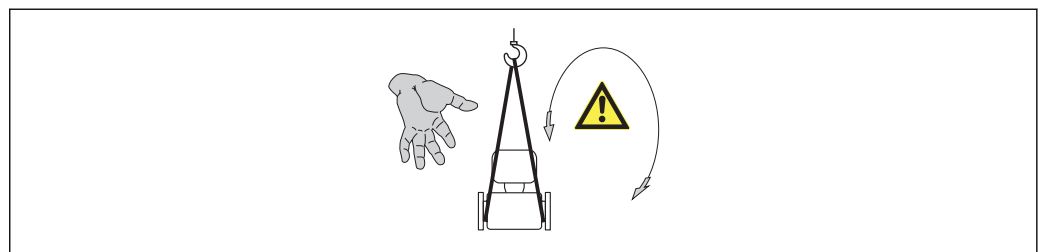

5.2.2 Measuring devices with lifting lugs

⚠ CAUTION

Special transportation instructions for devices with lifting lugs

- ▶ Only use the lifting lugs fitted on the device or flanges to transport the device.
- ▶ The device must always be secured at two lifting lugs at least.


5.2.3 Transporting with a fork lift

If transporting in wood crates, the floor structure enables the crates to be lifted lengthwise or at both sides using a forklift.

⚠ CAUTION

Risk of damaging the magnetic coil

- ▶ If transporting by forklift, do not lift the sensor by the metal casing.
- ▶ This would buckle the casing and damage the internal magnetic coils.

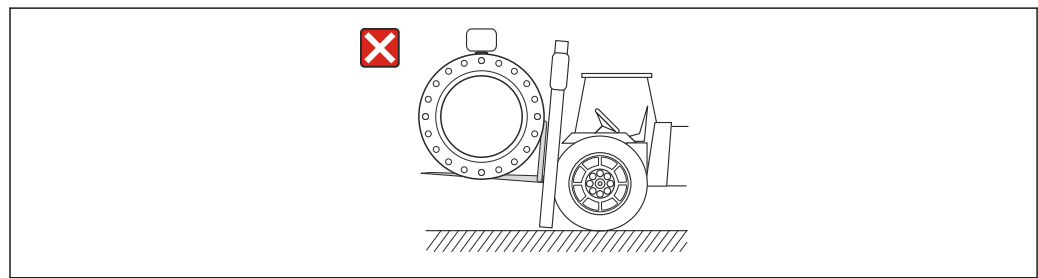

A0023726

5.3 Packaging disposal

All packaging materials are environmentally friendly and 100% recyclable:


- Measuring device secondary packaging: polymer stretch film that conforms to EC Directive 2002/95/EC (RoHS).
- Packaging:
 - Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.
 - or
 - Carton in accordance with European Packaging Directive 94/62EC; recyclability is confirmed by the affixed RESY symbol.
- Seaworthy packaging (optional): Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.
- Carrying and mounting hardware:
 - Disposable plastic pallet
 - Plastic straps
 - Plastic adhesive strips
- Dunnage: Paper cushion

6 Installation

6.1 Installation conditions

6.1.1 Mounting position

Mounting location

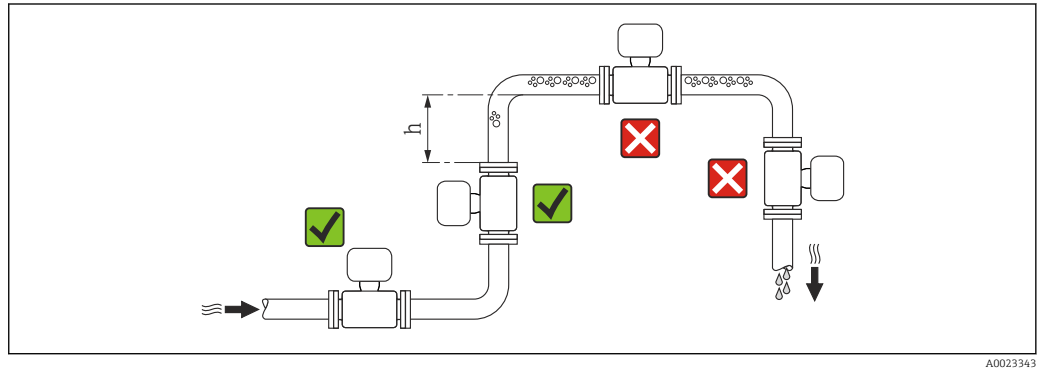

A0023343

Preferably install the sensor in an ascending pipe, and ensure a sufficient distance to the next pipe elbow: $h \geq 2 \times DN$

To prevent measuring errors arising from accumulation of gas bubbles in the measuring tube, avoid the following mounting locations in the pipe:


- Highest point of a pipeline.
- Directly upstream of a free pipe outlet in a down pipe.

Installation in down pipes

Install a siphon with a vent valve downstream of the sensor in down pipes whose length $h \geq 5 \text{ m}$ (16.4 ft). This precaution is to avoid low pressure and the consequent risk of damage to the measuring tube. This measure also prevents the system losing prime.



For information on the liner's resistance to partial vacuum

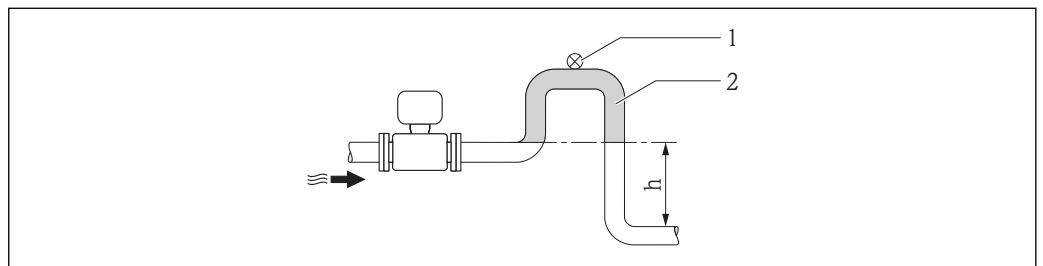


A0017064

4 Installation in a down pipe

- 1 Vent valve
- 2 Pipe siphon
- h Length of down pipe

Installation in partially filled pipes

A partially filled pipe with a gradient necessitates a drain-type configuration.

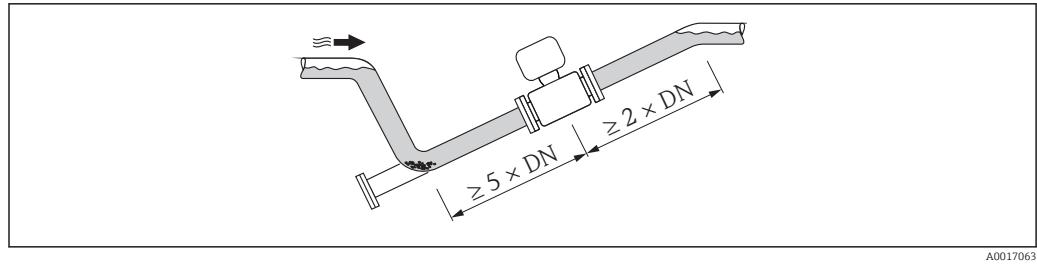

A0017063


Orientation

The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

An optimum orientation position helps avoid gas and air accumulations and deposits in the measuring tube.

The measuring device also offers the empty pipe detection function to detect partially filled measuring pipes in the event of outgassing fluids or variable process pressures.


Vertical

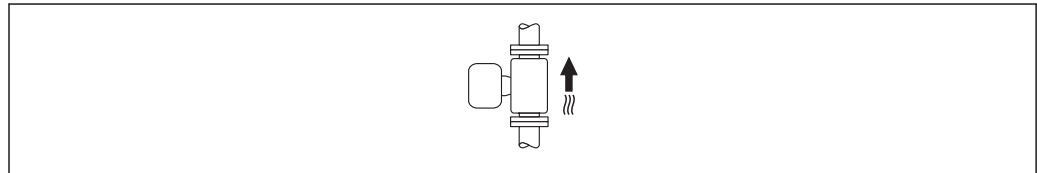

A0015591

Optimum for self-emptying pipe systems and for use in conjunction with empty pipe detection.

Horizontal

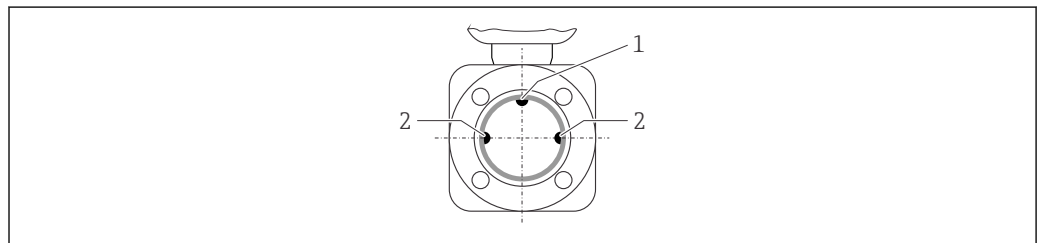

A0019602

- 1 EPD electrode for empty pipe detection
2 Measuring electrodes for signal detection




- The measuring electrode plane must be horizontal. This prevents brief insulation of the two measuring electrodes by entrained air bubbles.
- Empty pipe detection only works if the transmitter housing is pointing upwards as otherwise there is no guarantee that the empty pipe detection function will actually respond to a partially filled or empty measuring tube.

Inlet and outlet runs

If possible, install the sensor upstream from fittings such as valves, T-pieces or elbows.

Observe the following inlet and outlet runs to comply with accuracy specifications:

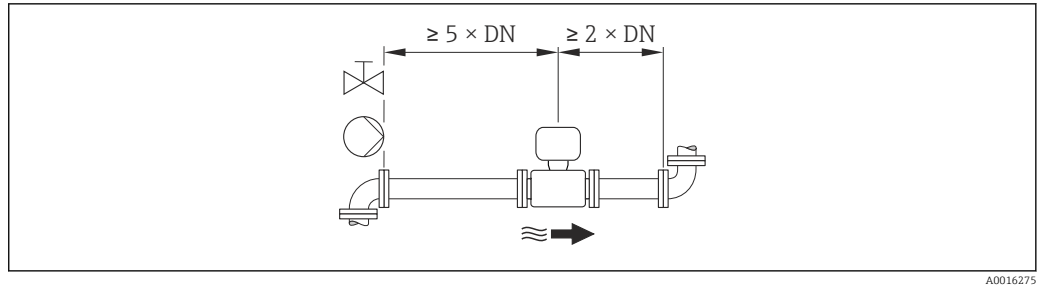

A0016275

Installation dimensions



For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section

6.1.2 Requirements from environment and process

Ambient temperature range

Transmitter	-40 to +60 °C (-40 to +140 °F)
Local display	-20 to +60 °C (-4 to +140 °F), the readability of the display may be impaired at temperatures outside the temperature range.
Sensor	-20 to +60 °C (-4 to +140 °F)
Liner	Do not exceed or fall below the permitted temperature range of the liner .

If operating outdoors:

- Install the measuring device in a shady location.
- Avoid direct sunlight, particularly in warm climatic regions.
- Avoid direct exposure to weather conditions.

Temperature tables




Observe the interdependencies between the permitted ambient and fluid temperatures when operating the device in hazardous areas.



For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

System pressure

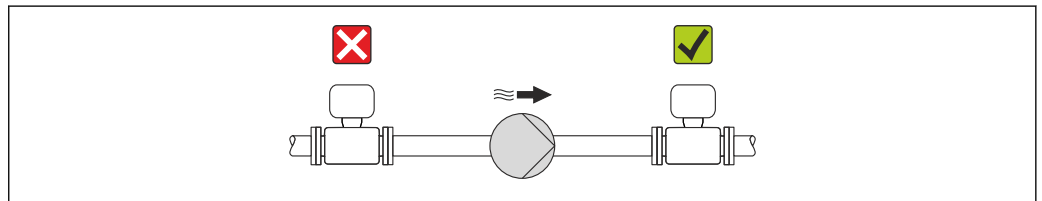

A0015594

Never install the sensor on the pump suction side in order to avoid the risk of low pressure, and thus damage to the liner.



Furthermore, install pulse dampers if reciprocating, diaphragm or peristaltic pumps are used.




- For information on the liner's resistance to partial vacuum → 142
- For information on the shock resistance of the measuring system → 141
- For information on the vibration resistance of the measuring system → 141

Vibrations

In the event of very strong vibrations, the pipe and sensor must be supported and fixed.

- For information on the shock resistance of the measuring system → 141
- For information on the vibration resistance of the measuring system → 141

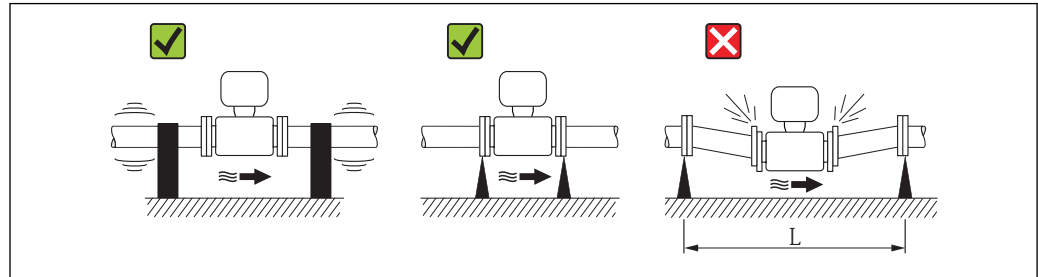


5 Measures to avoid device vibrations ($L > 10\text{ m}$ (33 ft))

Adapters

Suitable adapters to DIN EN 545 (double-flange reducers) can be used to install the sensor in larger-diameter pipes. The resultant increase in the rate of flow improves measuring accuracy with very slow-moving fluids. The nomogram shown here can be used to calculate the pressure loss caused by reducers and expanders.

The nomogram only applies to liquids with a viscosity similar to that of water.

1. Calculate the ratio of the diameters d/D .
2. From the nomogram read off the pressure loss as a function of flow velocity (downstream from the reduction) and the d/D ratio.

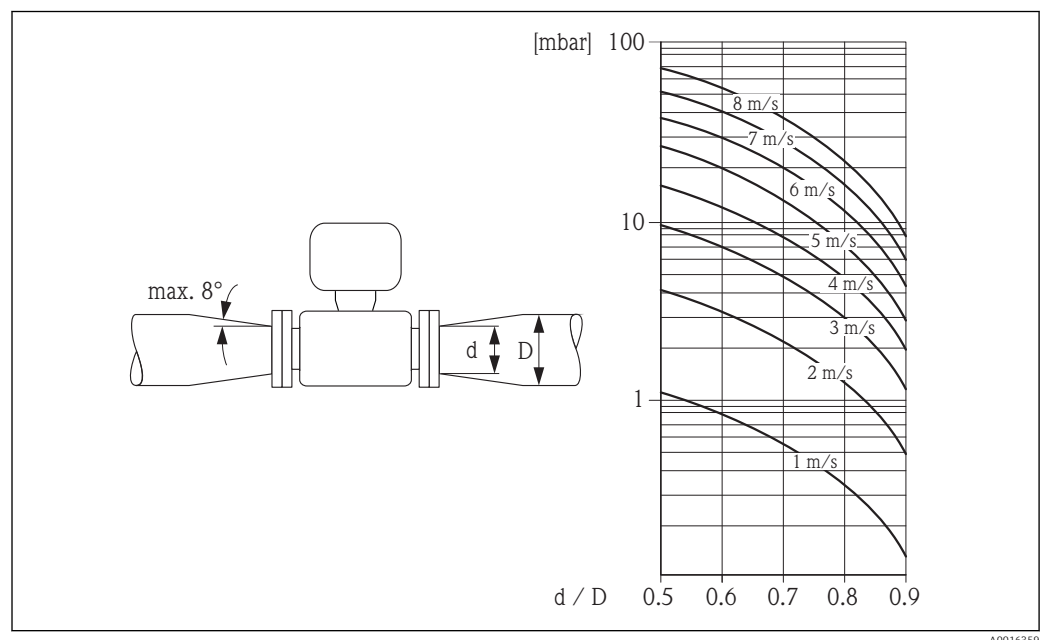

6.1.3 Special mounting instructions

Display protection

- To ensure that the optional display protection can be easily opened, maintain the following minimum head clearance: 350 mm (13.8 in)

6.2 Mounting the measuring device

6.2.1 Required tools

For transmitter

- For turning the transmitter housing: Open-ended wrench 8 mm
- For opening the securing clamps: Allen key 3 mm

For sensor

For flanges and other process connections:

- Screws, nuts, seals etc. are not included in the scope of supply and must be provided by the customer.
- Appropriate mounting tools

6.2.2 Preparing the measuring device

1. Remove all remaining transport packaging.
2. Remove any protective covers or protective caps present from the sensor.
3. Remove stick-on label on the electronics compartment cover.


6.2.3 Mounting the sensor

⚠ WARNING

Danger due to improper process sealing!

- ▶ Ensure that the inside diameters of the gaskets are greater than or equal to that of the process connections and piping.
- ▶ Ensure that the gaskets are clean and undamaged.
- ▶ Install the gaskets correctly.


1. Ensure that the direction of the arrow on the sensor matches the flow direction of the medium.
2. To ensure compliance with device specifications, install the measuring device between the pipe flanges in a way that it is centered in the measurement section.
3. Install the measuring device or turn the transmitter housing so that the cable entries do not point upwards.

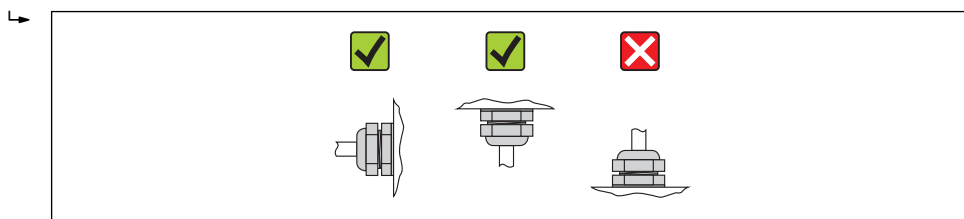

A0013964

The sensor is supplied to order, with or without pre-installed process connections. Pre-installed process connections are firmly secured to the sensor by 4 or 6 hexagonal-headed bolts.

- i** The sensor may need to be supported or additionally secured depending on the application and pipe length. In particular, it is absolutely essential to secure the sensor additionally if plastic process connections are used. An appropriate wall mounting kit can be ordered separately as an accessory from Endress+Hauser → 150.

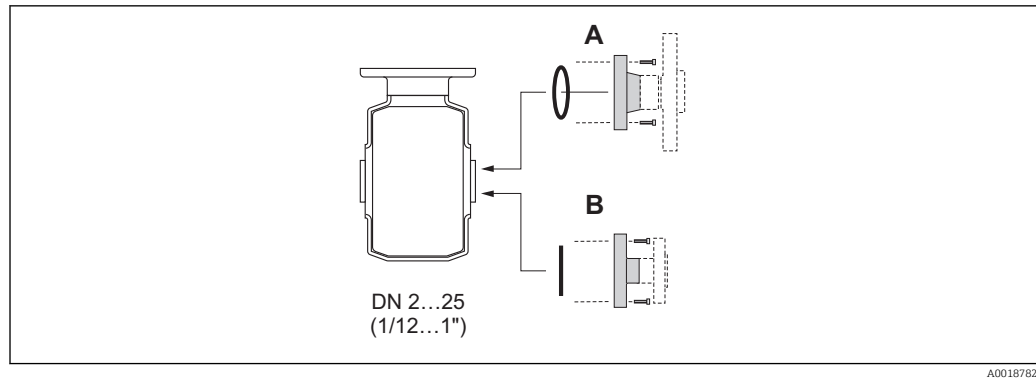

6 Process connection seals

A Process connections with O-ring seal

B Process connections with aseptic molded seal

Welding the sensor into the pipe (welding connections)

⚠ WARNING

Risk of destroying the electronics!

► Make sure that the welding system is not grounded via the sensor or transmitter.

1. Tack-weld the sensor to secure it in the pipe. A suitable welding aid can be ordered separately as an accessory → 150.
2. Release the screws on the process connection flange and remove the sensor, along with the seal, from the pipe.
3. Weld the process connection into the pipe.
4. Reinstall the sensor in the pipe, and in doing so make sure that the seal is clean and in the right position.

- i** ■ If thin-walled pipes carrying food are welded correctly, the seal is not damaged by the heat even when mounted. However, it is recommended to disassemble the sensor and seal.
- It must be possible to open the pipe by approx. 8 mm (0.31 in) in total to permit disassembly.

Cleaning with pigs

It is essential to take the internal diameters of the measuring tube and process connection into account when cleaning with pigs. All the dimensions and lengths of the sensor and transmitter are provided in the separate "Technical Information" document.

Mounting the seals

⚠ CAUTION

An electrically conductive layer could form on the inside of the measuring tube!

Risk of measuring signal short circuit.

► Do not use electrically conductive sealing compounds such as graphite.

Comply with the following instructions when installing seals:


- Make sure that the seals do not protrude into the piping cross-section.
- In the case of metal process connections, the screws must be tightened securely. The process connection forms a metal connection with the sensor, which ensures a defined compression of the seal.
- In the case of plastic process connections, comply with the max. screw tightening torques for lubricated threads: 7 Nm (5.2 lbf ft). In the case of plastic flanges, always insert a seal between the connection and the counterflange.
- For "PFA" lining: additional seals are **always** required.
- Depending on the application the seals should be replaced periodically, particularly if molded seals are used (aseptic version)! The interval between changes depends on the frequency of the cleaning cycles, the cleaning temperature and the medium temperature. Replacement seals can be ordered as an accessory →  150.

Mounting grounding rings (DN 2 to 25 (1/12 to 1"))

 Pay attention to the information on potential equalization →  35.

In the case of plastic process connections (e.g. flange connections or adhesive fittings), additional ground rings must be used to ensure potential matching between the sensor and the fluid. If grounding rings are not installed, this can affect the measuring accuracy or cause the destruction of the sensor as a result of the electrochemical decomposition of the electrodes.

-  ■ Depending on the option ordered, plastic disks are used instead of grounding rings on some process connections. These plastic disks only act as "spacers" and do not have any potential matching function. Furthermore, they also perform a significant sealing function at the sensor/process connection interface. Therefore, in the case of process connections without metal grounding rings, these plastic disks/seals should never be removed and should always be installed!
- Grounding rings can be ordered separately as an accessory from Endress+Hauser →  150. When ordering make sure that the grounding rings are compatible with the material used for the electrodes, as otherwise there is the danger that the electrodes could be destroyed by electrochemical corrosion! Material specifications →  144.
- Grounding rings, including seals, are mounted inside the process connections. Therefore the installation length is not affected.

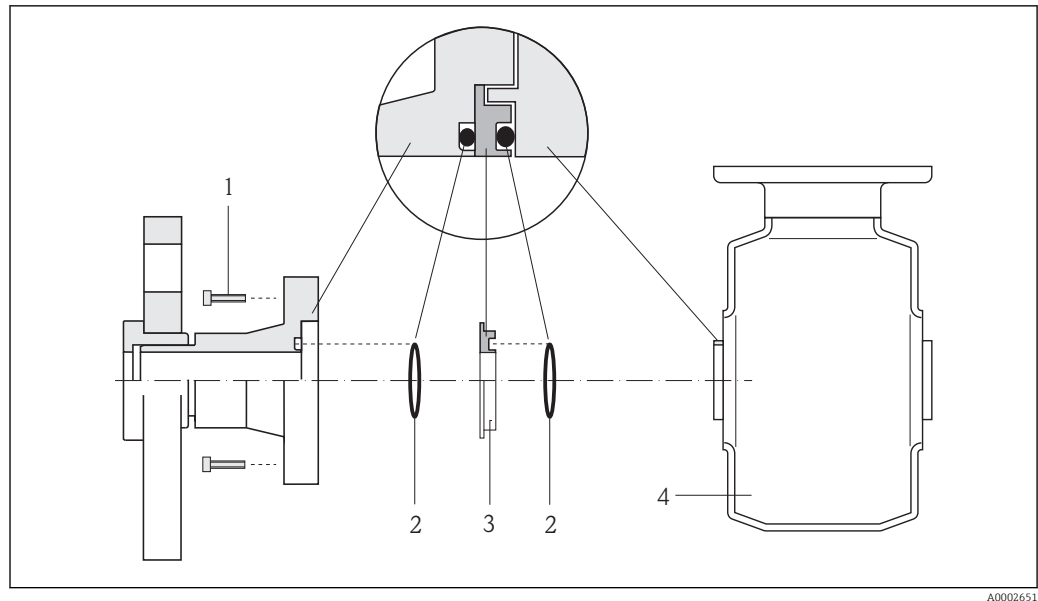

A0002651


7 Installing grounding rings

- 1 Hexagonal-headed bolts of process connection
- 2 O-ring seals
- 3 Grounding ring or plastic disk (spacer)
- 4 Sensor

1. Release the 4 or 6 hexagonal-headed bolts (1) and remove the process connection from the sensor (4).
2. Remove the plastic disk (3), along with the two O-ring seals (2), from the process connection.
3. Place the first O-ring seal (2) back into the groove of the process connection.
4. Fit the metal grounding ring (3) in the process connection as illustrated.
5. Place the second O-ring seal (2) into the groove of the grounding ring.
6. Mount the process connection back on the sensor. In doing so, make sure to observe the maximum screw tightening torques for lubricated threads: 7 Nm (5.2 lbf ft)

6.2.4 Turning the transmitter housing

To provide easier access to the connection compartment or display module, the transmitter housing can be turned.

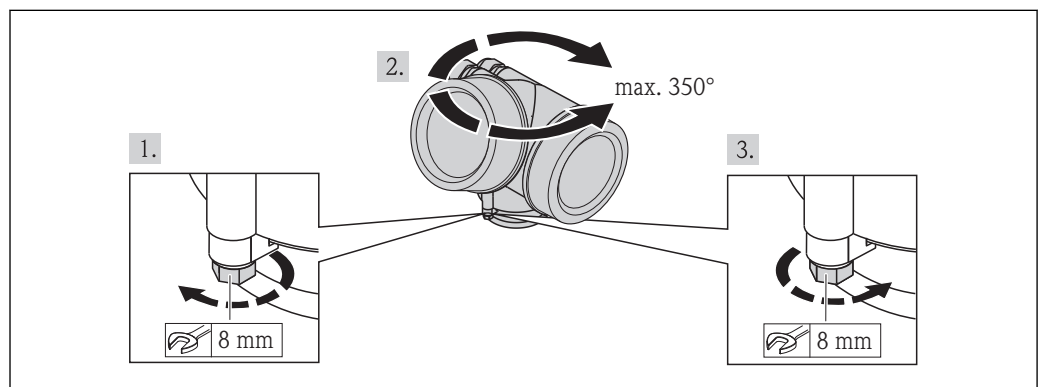


A0013713

1. Release the fixing screw.
2. Turn the housing to the desired position.

3. Firmly tighten the securing screw.

6.2.5 Turning the display module

The display module can be turned to optimize display readability and operability.

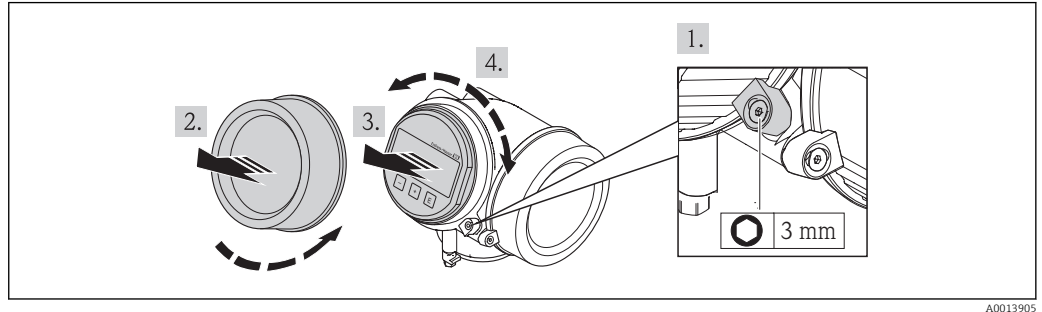

1. Loosen the securing clamp of the electronics compartment cover using an Allen key.
2. Unscrew cover of the electronics compartment from the transmitter housing.
3. Optional: pull out the display module with a gentle rotational movement.
4. Rotate the display module into the desired position: Max. $8 \times 45^\circ$ in each direction.
5. Without display module pulled out:
Allow display module to engage at desired position.
6. With display module pulled out:
Feed the cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment until it engages.
7. Reverse the removal procedure to reassemble the transmitter.

6.3 Post-installation check

Is the device undamaged (visual inspection)?	☐
Does the measuring device conform to the measuring point specifications? For example: ■ Process temperature ■ Process pressure (refer to the section on "Pressure-temperature ratings" in the "Technical Information" document) ■ Ambient temperature ■ Measuring range	☐
Has the correct orientation for the sensor been selected ? ■ According to sensor type ■ According to medium temperature ■ According to medium properties (outgassing, with entrained solids)	☐
Does the arrow on the sensor nameplate match the direction of flow of the fluid through the piping ?	☐
Are the measuring point identification and labeling correct (visual inspection)?	☐
Is the device adequately protected from precipitation and direct sunlight?	☐
Have the fixing screws been tightened with the correct tightening torque?	☐

7 Electrical connection

 The measuring device does not have an internal circuit breaker. For this reason, assign the measuring device a switch or power-circuit breaker so that the power supply line can be easily disconnected from the mains.

7.1 Connection conditions

7.1.1 Required tools

- For cable entries: Use corresponding tools
- For securing clamp: Allen key 3 mm
- Wire stripper
- When using stranded cables: crimping tool for ferrule
- For removing cables from terminal: flat blade screwdriver ≤ 3 mm (0.12 in)

7.1.2 Connecting cable requirements

The connecting cables provided by the customer must fulfill the following requirements.

Electrical safety

In accordance with applicable federal/national regulations.

Permitted temperature range

- -40°C (-40°F) to $+80^{\circ}\text{C}$ ($+176^{\circ}\text{F}$)
- Minimum requirement: cable temperature range $\geq$ ambient temperature $+20$ K

Signal cable

PROFIBUS PA

Twisted, shielded two-wire cable. Cable type A is recommended →  29.

 For further information on planning and installing PROFIBUS PA networks see:

- Operating Instructions "PROFIBUS DP/PA: Guidelines for planning and commissioning" (BA00034S)
- PNO Directive 2.092 "PROFIBUS PA User and Installation Guideline"
- IEC 61158-2 (MBP)

Pulse/frequency/switch output

Standard installation cable is sufficient.

Cable diameter

- Cable glands supplied:
M20 $\times$ 1.5 with cable ϕ 6 to 12 mm (0.24 to 0.47 in)
- Plug-in spring terminals for device version without integrated overvoltage protection:
wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG)
- Screw terminals for device version with integrated overvoltage protection: wire cross-sections 0.2 to 2.5 mm² (24 to 14 AWG)

Fieldbus cable specification*PROFIBUS PA**Cable type*

In accordance with IEC 61158-2 (MBP), cable type A is recommended. Cable type A has a cable shielding that guarantees adequate protection from electromagnetic interference and thus the most reliable data transfer.

The electrical data of the fieldbus cable have not been specified but determine important characteristics of the design of the fieldbus, such as distances bridged, number of users, electromagnetic compatibility, etc.

Cable type	A
Cable structure	Twisted, shielded twin-core cable
Wire cross-section	0.8 mm ² (AWG 18)
Loop resistance (direct current)	44 Ω/km
Characteristic impedance at 31.25 kHz	100 Ω ±20%
Attenuation constant at 39.0 kHz	3 dB/km
Capacitive asymmetry	2 nF/km
Envelope delay distortion (7.9 to 39 kHz)	1.7 ms/km
Shield coverage	90 %

The following are examples of suitable cable types:

Non-hazardous area:

- Siemens 6XV1 830-5BH10
- Belden 3076F
- Kerpen CEL-PE/OSCR/PVC/FRLA FB-02YS(ST)YFL

Maximum overall cable length

The maximum network expansion depends on the type of protection and the cable specifications. The overall cable length combines the length of the main cable and the length of all spurs >1 m (3.28 ft).

The maximum overall cable length for cable type A: 1 900 m (6 200 ft)

If repeaters are used, the maximum permissible cable length is doubled. A maximum of three repeaters are permitted between the user and master.

Maximum spur length

The line between the distribution box and field device is described as a spur. In the case of non-Ex applications, the max. length of a spur depends on the number of spurs >1 m (3.28 ft):

Number of spurs	Max. length per spur
1...12	120 m (400 ft)
13...14	90 m (300 ft)
15...18	60 m (200 ft)
19...24	30 m (100 ft)
25...32	1 m (3 ft)

Number of field devices

In the case of systems in accordance with the Fieldbus Intrinsically Safe Concept (FISCO) with EEx ia explosion protection, the cable length is limited to a maximum length of 1000 m (3300 ft). A maximum of 32 users per segment in non-Ex areas or a maximum of 10 users in an Ex-area (EEx ia IIC) is possible. The actual number of users must be determined during the planning stage.

Bus termination



The start and end of each fieldbus segment must always be terminated by a bus terminator. With various junction boxes (non-Ex), the bus termination can be activated via a switch. If this is not the case, a separate bus terminator must be installed. Please also note the following:

- In the case of a branched bus segment, the device furthest from the segment coupler represents the end of the bus.
- If the fieldbus is extended with a repeater then the extension must also be terminated at both ends.

7.1.3 Terminal assignment

Transmitter

Connection version for PROFIBUS PA, pulse/frequency/switch output

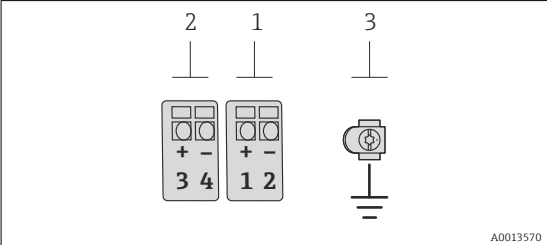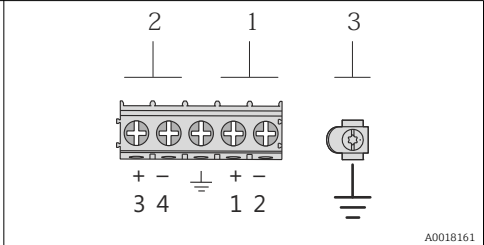	
Maximum number of terminals	Maximum number of terminals for order code for "Accessory mounted", option NA "Overvoltage protection"
1 Output 1: PROFIBUS PA 2 Output 2 (passive: pulse/frequency/switch output 3 Ground terminal for cable shield	


Order code for "Output"	Terminal numbers			
	Output 1		Output 2	
	1 (+)	2 (-)	3 (+)	4 (-)
Option G ^{1) 2)}	PROFIBUS PA		Pulse/frequency/switch output (passive)	

- 1) Output 1 must always be used; output 2 is optional.
- 2) PROFIBUS PA with integrated reverse polarity protection.

7.1.4 Pin assignment, device plug

PROFIBUS PA

Device plug for signal transmission (device side)

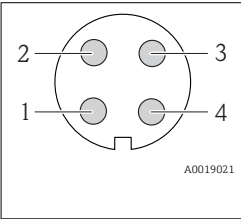	Pin	Assignment		Coding	Plug/socket
	1	+	PROFIBUS PA +	A	Plug
	2		Grounding		
	3	-	PROFIBUS PA -		
	4		Not assigned		

7.1.5 Shielding and grounding

PROFIBUS PA

- Optimum electromagnetic compatibility (EMC) of the fieldbus system can only be guaranteed if the system components and, in particular, the lines are shielded and the shield forms as complete a cover as possible. A shield coverage of 90% is ideal.
- To ensure an optimum EMC protective effect, connect the shield as often as possible to the reference ground.
 - For reasons of explosion protection, you should refrain from grounding however.

To comply with both requirements, the fieldbus system allows three different types of shielding:

- Shielding at both ends.
- Shielding at one end on the feed side with capacitance termination at the field device.
- Shielding at one end on the feed side.

Experience shows that the best results with regard to EMC are achieved in most cases in installations with one-sided shielding on the feed side (without capacitance termination at the field device). Appropriate measures with regard to input wiring must be taken to allow unrestricted operation when EMC interference is present. These measures have been taken into account for this device. Operation in the event of disturbance variables as per NAMUR NE21 is thus guaranteed.

Where applicable, national installation regulations and guidelines must be observed during the installation!


Where there are large differences in potential between the individual grounding points, only one point of the shielding is connected directly with the reference ground. In systems without potential equalization, therefore, cable shielding of fieldbus systems should only be grounded on one side, for example at the fieldbus supply unit or at safety barriers.

NOTICE

In systems without potential matching, the multiple grounding of the cable shield causes mains frequency equalizing currents!

Damage to the bus cable shield.

- Only ground the bus cable shield to either the local ground or the protective ground at one end. Insulate the shield that is not connected.

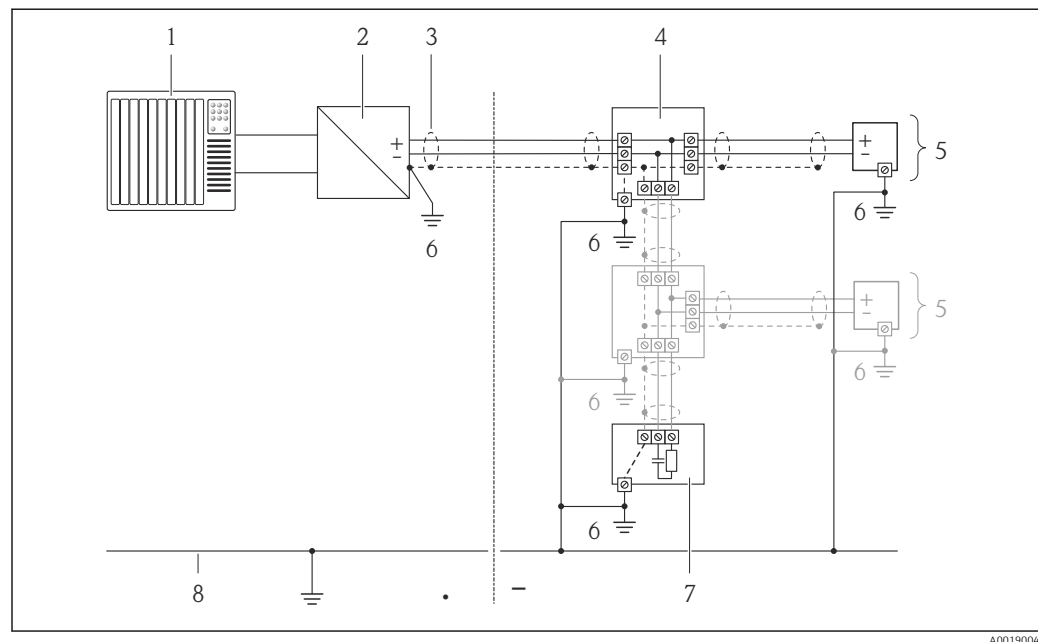

A0019004

- 1 Controller (e.g. PLC)
- 2 Segment coupler PROFIBUS DP/PA
- 3 Cable shield
- 4 T-box
- 5 Measuring device
- 6 Local grounding
- 7 Bus terminator
- 8 Potential matching line

7.1.6 Requirements for the supply unit

Supply voltage

Transmitter

An external power supply is required for each output.

The following supply voltage values apply for the outputs available:

Order code for "Output"	Minimum terminal voltage	Maximum terminal voltage
Option G: PROFIBUS PA, pulse/frequency/switch output	≥ DC 9 V	DC 32 V

7.1.7 Preparing the measuring device

1. Remove dummy plug if present.
2. **NOTICE!** Insufficient sealing of the housing! Operational reliability of the measuring device could be compromised. Use suitable cable glands corresponding to the degree of protection.
If measuring device is delivered without cable glands:
Provide suitable cable gland for corresponding connecting cable .
3. If measuring device is delivered with cable glands:
Observe cable specification .

7.2 Connecting the measuring device

NOTICE


Limitation of electrical safety due to incorrect connection!

- Have electrical connection work carried out by correspondingly trained specialists only.
- Observe applicable federal/national installation codes and regulations.
- Comply with local workplace safety regulations.
- For use in potentially explosive atmospheres, observe the information in the device-specific Ex documentation.

7.2.1 Connecting the transmitter


The connection of the transmitter depends on the following order codes:

Connection version: terminals or device plug

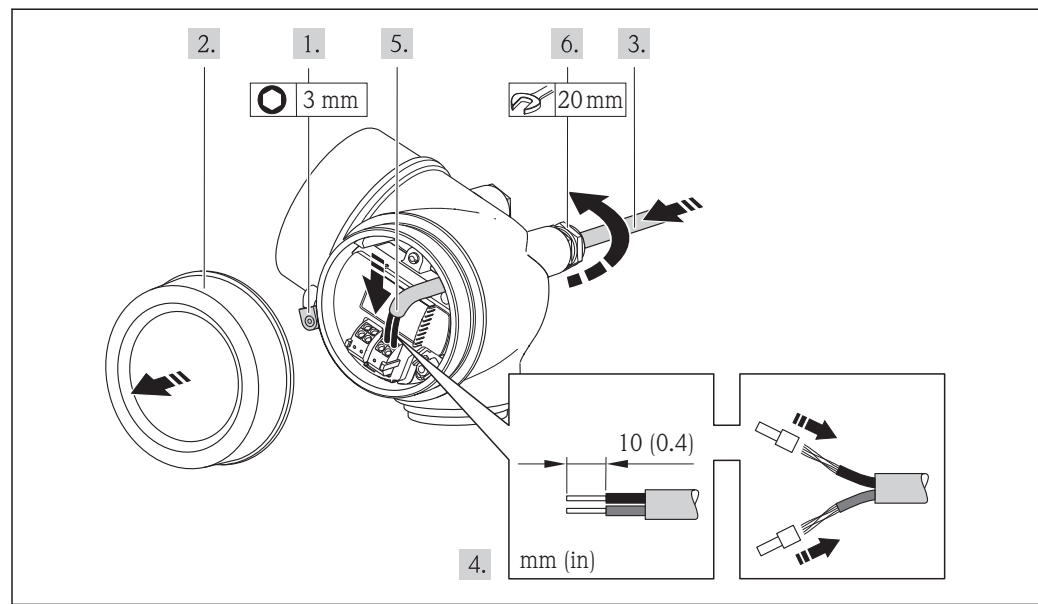Connection via terminals

A0013836


1. Loosen the securing clamp of the connection compartment cover.
2. Unscrew the connection compartment cover.
3. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
4. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules.
5. Connect the cable in accordance with the terminal assignment .
6. **WARNING!** Housing degree of protection may be voided due to insufficient sealing of the housing. Screw in the screw without using any lubricant. The threads on the cover are coated with a dry lubricant.
Reverse the removal procedure to reassemble the transmitter.

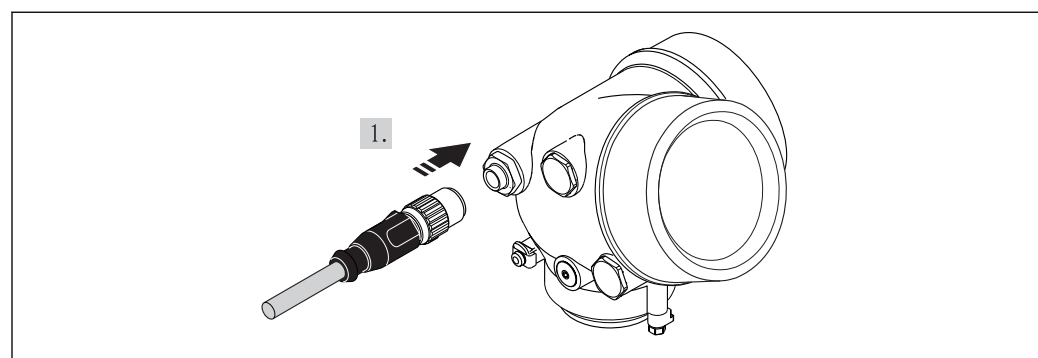Connection via device plug

A0019147

- Plug in the device plug and tighten firmly.

Removing a cable

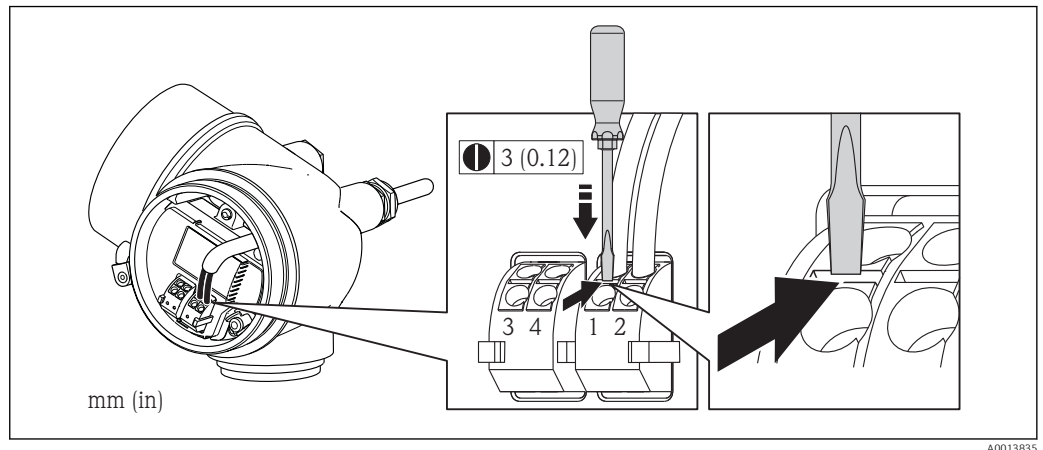

- To remove a cable from the terminal, use a flat-blade screwdriver to push the slot between the two terminal holes while simultaneously pulling the cable end out of the terminal.

7.2.2 Ensuring potential equalization

Requirements

CAUTION

Electrode damage can result in the complete failure of the device!

- Same electrical potential for the fluid and sensor
- Company-internal grounding concepts
- Pipe material and grounding



For devices intended for use in hazardous locations, please observe the guidelines in the Ex documentation (XA).

Connection example, standard scenario

Metal process connections

Potential equalization is generally via the metal process connections that are in contact with the medium and mounted directly on the sensor. Therefore there is generally no need for additional potential equalization measures.

Connection example in special situations


Plastic process connections

In the case of plastic process connections, additional grounding rings or process connections with an integrated grounding electrode must be used to ensure potential matching between the sensor and the fluid. If there is no potential matching, this can affect the measuring accuracy or cause the destruction of the sensor as a result of the electrochemical decomposition of the electrodes.

Note the following when using grounding rings:

- Depending on the option ordered, plastic disks are used instead of grounding rings on some process connections. These plastic disks only act as "spacers" and do not have any potential matching function. Furthermore, they also perform a significant sealing function at the sensor/connection interface. Therefore, in the case of process connections without metal grounding rings, these plastic disks/seals should never be removed and should always be installed!
- Grounding rings can be ordered separately as an accessory from Endress+Hauser. When ordering make sure that the grounding rings are compatible with the material used for the electrodes, as otherwise there is the danger that the electrodes could be destroyed by electrochemical corrosion!
- Grounding rings, including seals, are mounted inside the process connections. Therefore the installation length is not affected.


Potential equalization via additional grounding ring

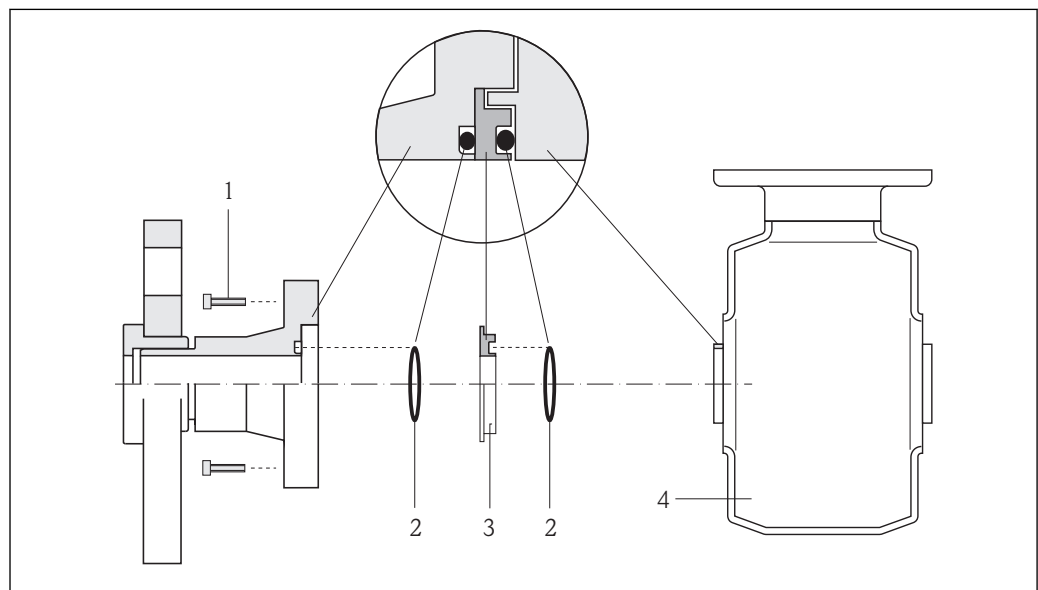

A0002651

- 1 Hexagonal-headed bolts of process connection
- 2 O-ring seals
- 3 Plastic disk (spacer) or grounding ring
- 4 Sensor

Potential equalization via grounding electrodes on process connection

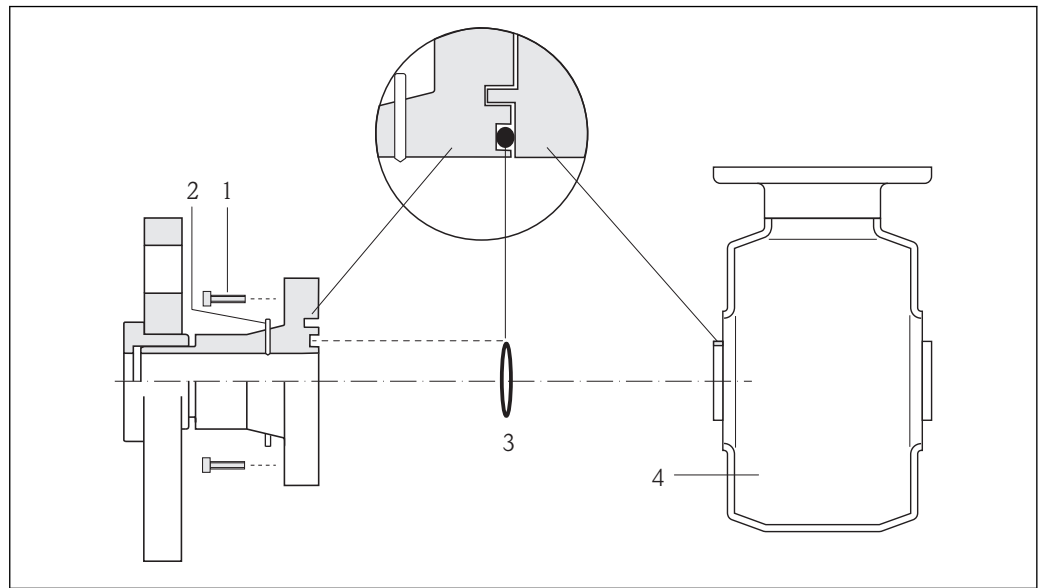


A0017293

- 1 Hexagonal-headed bolts of process connection
- 2 Integrated grounding electrodes
- 3 O-ring seal
- 4 Sensor

7.3 Special connection instructions

7.3.1 Connection examples


Pulse/frequency output

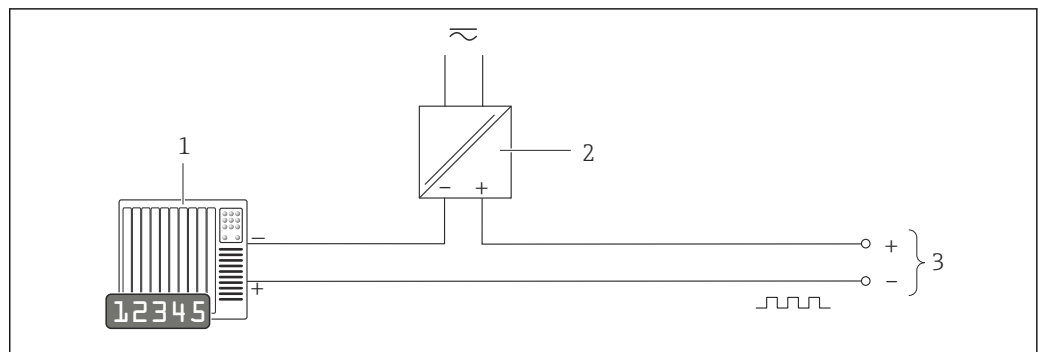

A0016801

8 Connection example for pulse/frequency output (passive)

- 1 Automation system with pulse/frequency input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: observe input values → 135

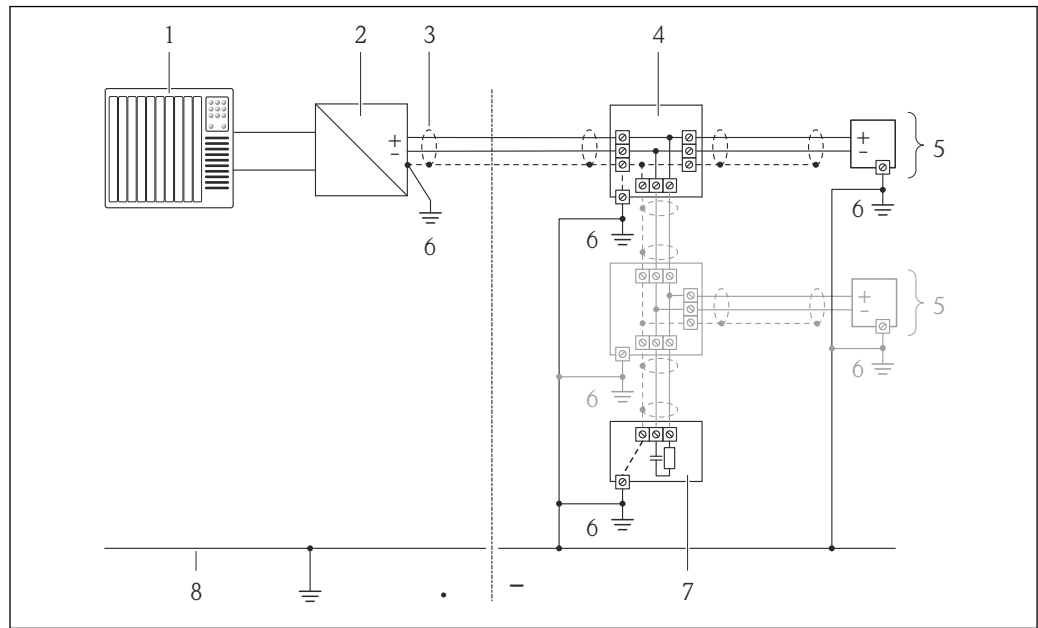PROFIBUS-PA

A0019004

9 Connection example for PROFIBUS-PA


- 1 Control system (e.g. PLC)
- 2 Segment coupler PROFIBUS DP/PA
- 3 Cable shield
- 4 T-box
- 5 Measuring device
- 6 Local grounding
- 7 Bus terminator
- 8 Potential matching line

7.4 Hardware settings

7.4.1 Setting the device address

PROFIBUS PA

The address must always be configured for a PROFIBUS DP/PA device. The valid address range is between 1 and 126. In a PROFIBUS DP/PA network, each address can only be assigned once. If an address is not configured correctly, the device is not recognized by the master. All measuring devices are delivered from the factory with the device address 126 and with the software addressing method.

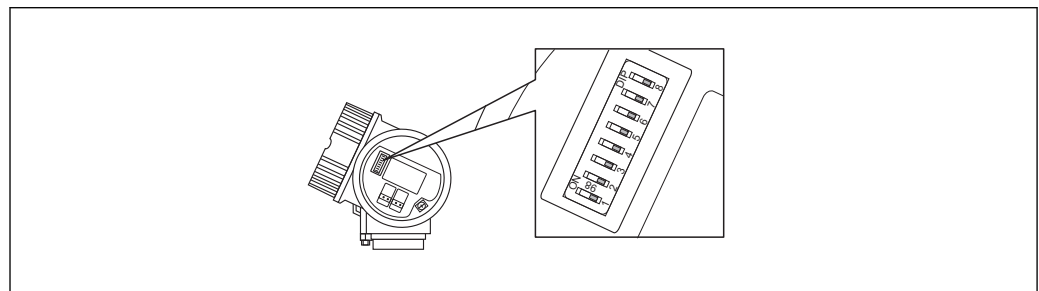

A0015686


10 Address switch in the connection compartment

Hardware addressing

1. Set switch 8 to the "OFF" position.
2. Using switches 1 to 7, set the address as indicated in the table below.

The change of address takes effect after 10 seconds. The device is restarted.

Switch	1	2	3	4	5	6	7
Value in "ON" position	1	2	4	8	16	32	64
Value in "OFF" position	0	0	0	0	0	0	0

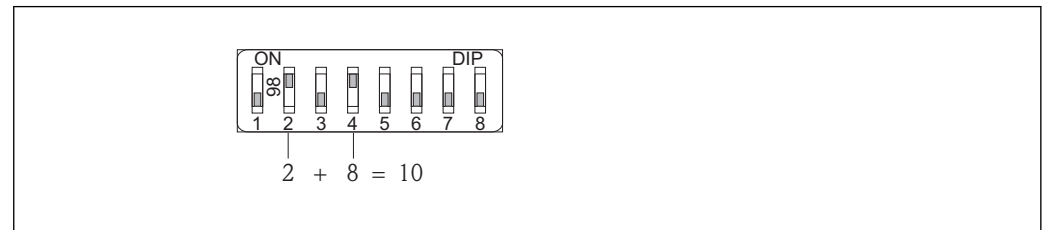


A0015902

 11 Example of hardware addressing; switch 8 is set to the "OFF" position; switches 1 to 7 define the address.

Software addressing

1. Set switch 8 to "ON".
 - ↳ The device restarts automatically and reports the current address (factory setting: 126).
2. Configuring the address via the operating menu: **Setup** menu → **Communication** submenu → **Device address** parameter

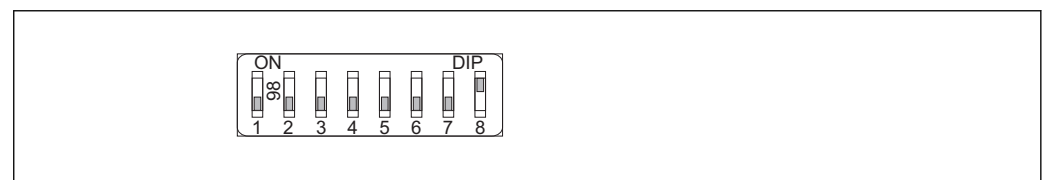

A0015903

 12 Example of software addressing; switch 8 is set to the "ON" position; the address is defined in the operating menu ("Setup" menu → "Communication" submenu → "Device address" parameter).


7.5 Ensuring the degree of protection

The measuring device fulfills all the requirements for the IP66/67 degree of protection, Type 4X enclosure.

To guarantee IP66/67 degree of protection, Type 4X enclosure, carry out the following steps after the electrical connection:

1. Check that the housing seals are clean and fitted correctly. Dry, clean or replace the seals if necessary.
2. Tighten all housing screws and screw covers.
3. Firmly tighten the cable glands.

- 4. To ensure that moisture does not enter the cable entry, route the cable so that it loops down before the cable entry ("water trap").

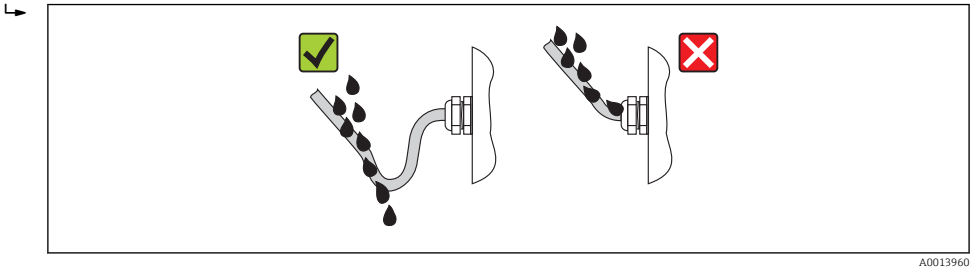

A0013960


- 5. Insert dummy plugs into unused cable entries.

7.6 Post-connection check

Are cables or the device undamaged (visual inspection)?	☐
Do the cables comply with the requirements ?	☐
Do the cables have adequate strain relief?	☐
Are all the cable glands installed, firmly tightened and leak-tight? Cable run with "water trap" → 39 ?	☐
Depending on the device version: are all the device plugs firmly tightened ?	☐
Does the supply voltage match the specifications on the transmitter nameplate ?	☐
Is the terminal assignment correct ?	☐
Is the terminal assignment or the pin assignment of the device plug correct?	☐
If supply voltage is present, do values appear on the display module?	☐
Is the potential equalization established correctly → 35?	☐
Are all housing covers installed and firmly tightened?	☐
Is the securing clamp tightened correctly?	☐

8 Operating options

8.1 Overview of operating options

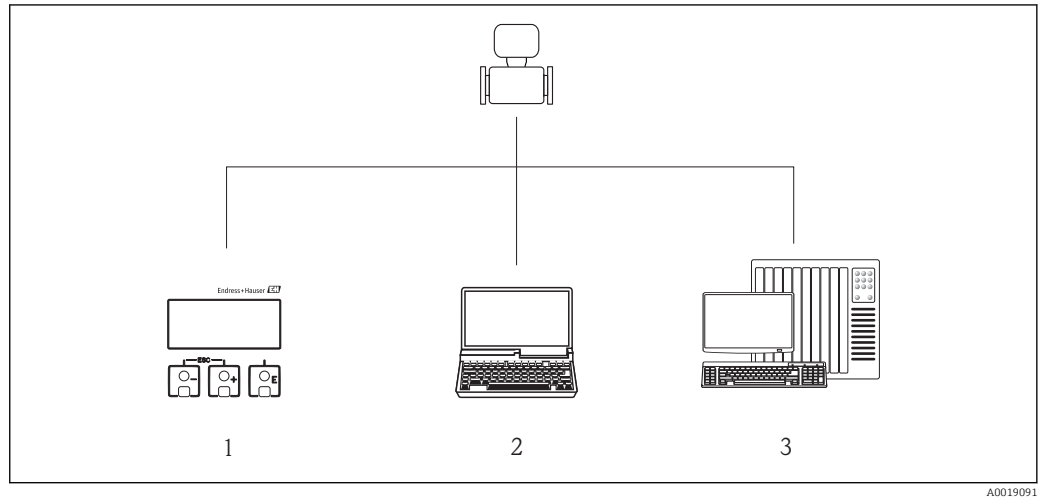


- 1 Local operation via display module
- 2 Computer with operating tool (e.g. FieldCare, SIMATIC PDM)
- 3 Automation system (e.g. PLC)

8.2 Structure and function of the operating menu

8.2.1 Structure of the operating menu

 For an overview of the operating menu with menus and parameters

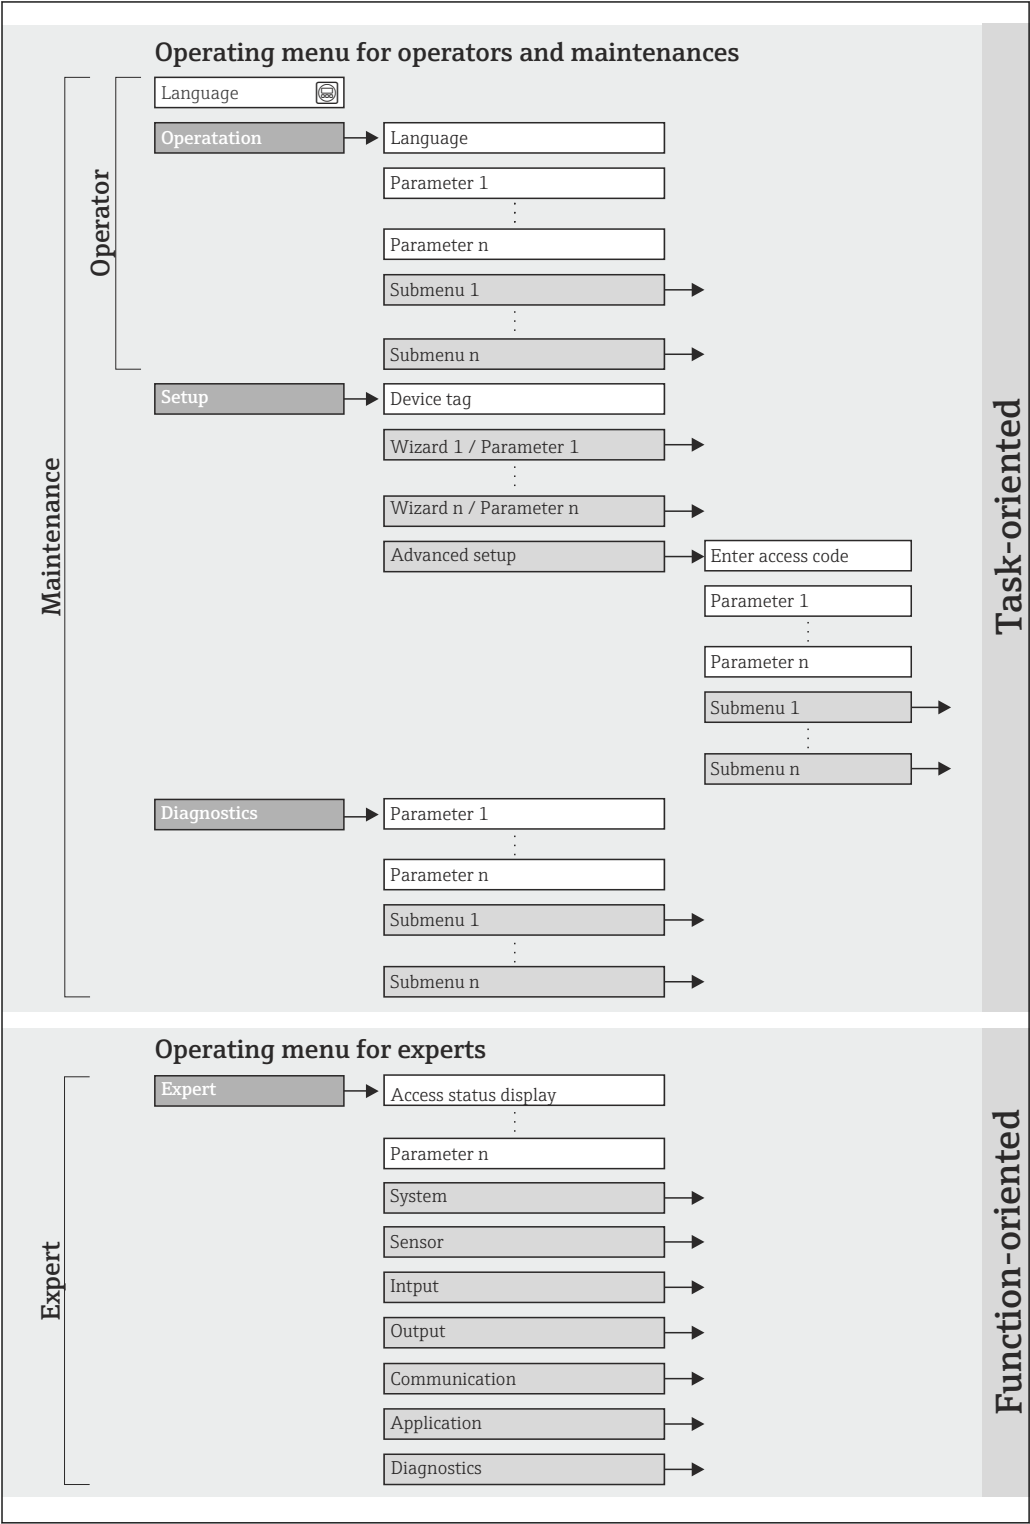

 13 Schematic structure of the operating menu

A0018237-EN


8.2.2 Operating philosophy

The individual parts of the operating menu are assigned to certain user roles (operator, maintenance etc.). Each user role contains typical tasks within the device lifecycle.

Menu/parameter		User role and tasks	Content/meaning
Language	task-oriented	Role "Operator", "Maintenance" Tasks during operation: ■ Configuring the operational display ■ Reading measured values	Defining the operating language
Operation			■ Configuring the operational display (e.g. display format, display contrast) ■ Resetting and controlling totalizers
Setup		"Maintenance" role Commissioning: ■ Configuration of the measurement ■ Configuration of the inputs and outputs	Wizards for fast commissioning: ■ Configure the outputs ■ Configuring the operational display ■ Define the output conditioning ■ Empty pipe detection ■ Set the low flow cut off Advanced setup ■ For more customized configuration of the measurement (adaptation to special measuring conditions) ■ Configuration of totalizers ■ Configuration of electrode cleaning (optional) ■ Administration (define access code, reset measuring device)
Diagnostics		"Maintenance" role Fault elimination: ■ Diagnostics and elimination of process and device errors ■ Measured value simulation	Contains all parameters for error detection and analyzing process and device errors: ■ Diagnostic list Contains up to 5 currently pending diagnostic messages. ■ Event logbook Contains up to 20 or 100 (order option "Extended HistoROM") event messages that have occurred. ■ Device information Contains information for identifying the device. ■ Measured values Contains all current measured values. ■ Analog inputs Is used to display the analog input. ■ Data logging (Order option "Extended HistoROM") Storage and visualization of up to 1000 measured values ■ Heartbeat The functionality of the device is checked on demand and the verification results are documented. ■ Simulation Is used to simulate measured values or output values.
Expert	function-oriented	Tasks that require detailed knowledge of the function of the device: ■ Commissioning measurements under difficult conditions ■ Optimal adaptation of the measurement to difficult conditions ■ Detailed configuration of the communication interface ■ Error diagnostics in difficult cases	Contains all the parameters of the device and makes it possible to access these parameters directly using an access code. The structure of this menu is based on the function blocks of the device: ■ System Contains all higher-order device parameters which do not concern the measurement or the communication interface. ■ Sensor Configuration of the measurement. ■ Output Configuration of the pulse/frequency/status output. ■ Communication Configuration of the digital communication interface. ■ Submenus for function blocks (e.g. "Analog Inputs") Configuration of function blocks. ■ Application Configuration of the functions that go beyond the actual measurement (e.g. totalizer). ■ Diagnostics Error detection and analysis of process and device errors and for device simulation and Heartbeat Technology.

8.3 Access to the operating menu via the local display

8.3.1 Operational display

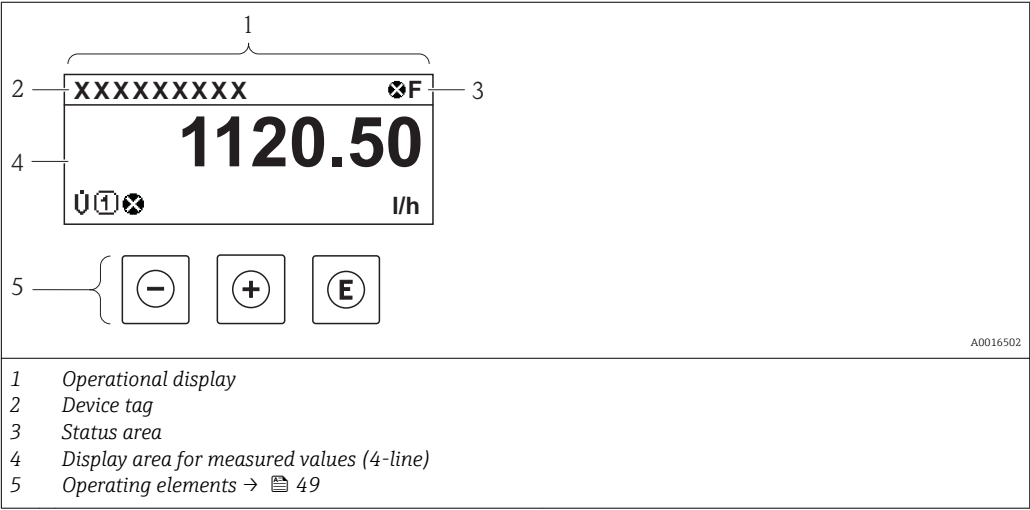


Status area

The following symbols appear in the status area of the operational display at the top right:

- Status signals → 102
 - F: Failure
 - C: Function check
 - S: Out of specification
 - M: Maintenance required
- Diagnostic behavior → 103
 - Alarm
 - Warning
- Locking (the device is locked via the hardware)
- Communication (communication via remote operation is active)

Display area

In the display area, each measured value is prefaced by certain symbol types for further description:

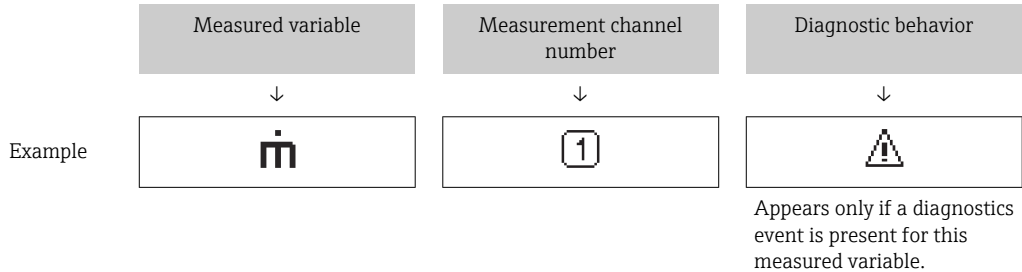

Measured variables

Symbol	Meaning
U	Volume flow

	Mass flow
	Totalizer  The measurement channel number indicates which of the three totalizers is displayed.

Measurement channel numbers



Symbol	Meaning
	Measurement channel 1 to 4
The measurement channel number is displayed only if more than one channel is present for the same measured variable type (e.g. totalizer 1-3).	

Diagnostic behavior

The diagnostic behavior pertains to a diagnostic event that is relevant to the displayed measured variable. For information on the symbols →  103

 The number and display format of the measured values can be configured via the **"Format display" parameter** →  71. "Operation" menu → Display → Format display

8.3.2 Navigation view

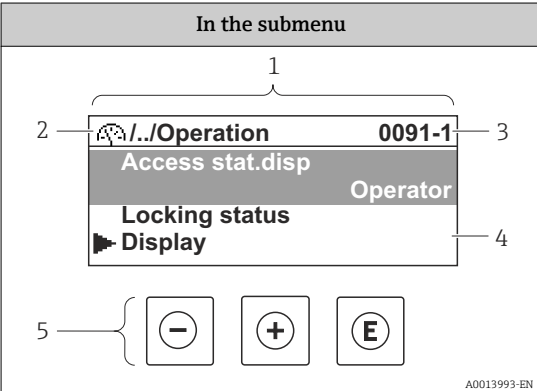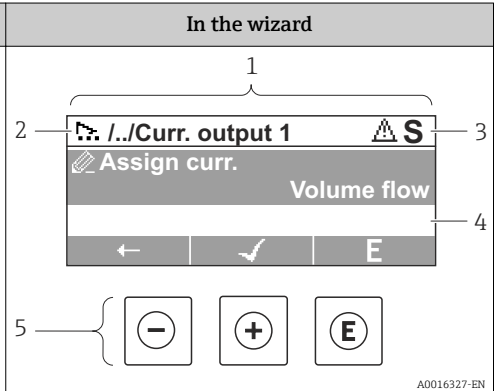In the submenu	In the wizard
 A0013993-EN	 A0016327-EN
1 Navigation view 2 Navigation path to current position 3 Status area 4 Display area for navigation 5 Operating elements →  49	

Navigation path

The navigation path - displayed at the top left in the navigation view - consists of the following elements:

	- In the submenu: Display symbol for menu - In the wizard: Display symbol for wizard	Omission symbol for operating menu levels in between	- Name of current - Submenu - Wizard - Parameter
	↓	↓	↓
Examples		/ .. /	Display
		/ .. /	Display

 For more information about the menu icons, refer to the "Display area" section
→  46

Status area

The following appears in the status area of the navigation view in the top right corner:

- Of the submenu
 - The direct access code for the parameter you are navigating to (e.g. 0022-1)
 - If a diagnostic event is present, the diagnostic behavior and status signal
 - In the wizard
 - If a diagnostic event is present, the diagnostic behavior and status signal
-  ■ For information on the diagnostic behavior and status signal →  102
- For information on the function and entry of the direct access code →  51

Display area

Menus

Symbol	Meaning
	Operation Appears: ■ In the menu next to the "Operation" selection ■ At the left in the navigation path in the "Operation" menu
	Setup Appears: ■ In the menu next to the "Setup" selection ■ At the left in the navigation path in the "Setup" menu
	Diagnostics Appears: ■ In the menu next to the "Diagnostics" selection ■ At the left in the navigation path in the "Diagnostics" menu
	Expert Appears: ■ In the menu next to the "Expert" selection ■ At the left in the navigation path in the "Expert" menu

Submenus, wizards, parameters

Symbol	Meaning
	Submenu
	Wizard
	Parameters within a wizard  No display symbol exists for parameters in submenus.

Locking

Symbol	Meaning
	Parameter locked When displayed in front of a parameter name, indicates that the parameter is locked. ■ By a user-specific access code ■ By the hardware write protection switch

Wizard operation

Symbol	Meaning
	Switches to the previous parameter.
	Confirms the parameter value and switches to the next parameter.
	Opens the editing view of the parameter.

8.3.3 Editing view

1

20

01234
56789
- . ← C
X ✓

4

-

+

E

A0013941

1

User

ABC DEFG HIJK
LMNO PQRS TUVW
XYZ ↵C↵ Aa1@
C ✓ X

4

-

+

E

A0013999

1 Editing view

2 Display area of the entered values

 
3 Input mask

4 Operating elements → 49

Input mask

The following input symbols are available in the input mask of the numeric and text editor:

Numeric editor

Symbol	Meaning
 ... 	Selection of numbers from 0 to 9.
	Inserts decimal separator at the input position.
	Inserts minus sign at the input position.
	Confirms selection.
	Moves the input position one position to the left.
	Exits the input without applying the changes.
	Clears all entered characters.

Text editor

Symbol	Meaning
	Toggle - Between upper-case and lower-case letters - For entering numbers - For entering special characters
 ... 	Selection of letters from A to Z.
 ... 	Selection of letters from a to z.
 ... 	Selection of special characters.
	Confirms selection.
	Switches to the selection of the correction tools.
	Exits the input without applying the changes.
	Clears all entered characters.

Correction symbols under

Symbol	Meaning
	Clears all entered characters.
	Moves the input position one position to the right.
	Moves the input position one position to the left.
	Deletes one character immediately to the left of the input position.

8.3.4 Operating elements

Key	Meaning
	Minus key <i>In a menu, submenu</i> Moves the selection bar upwards in a choose list. <i>With a Wizard</i> Confirms the parameter value and goes to the previous parameter. <i>With a text and numeric editor</i> In the input mask, moves the selection bar to the left (backwards).
	Plus key <i>In a menu, submenu</i> Moves the selection bar downwards in a choose list. <i>With a Wizard</i> Confirms the parameter value and goes to the next parameter. <i>With a text and numeric editor</i> Moves the selection bar to the right (forwards) in an input screen.
	Enter key <i>For operational display</i> - Pressing the key briefly opens the operating menu. - Pressing the key for 2 s opens the context menu. <i>In a menu, submenu</i> - Pressing the key briefly: - Opens the selected menu, submenu or parameter. - Starts the wizard. - If help text is open, closes the help text of the parameter. - Pressing the key for 2 s for parameter: - If present, opens the help text for the function of the parameter. <i>With a Wizard</i> Opens the editing view of the parameter. <i>With a text and numeric editor</i> - Pressing the key briefly: - Opens the selected group. - Carries out the selected action. - Pressing the key for 2 s confirms the edited parameter value.
	Escape key combination (press keys simultaneously) <i>In a menu, submenu</i> - Pressing the key briefly: - Exits the current menu level and takes you to the next higher level. - If help text is open, closes the help text of the parameter. - Pressing the key for 2 s returns you to the operational display ("home position"). <i>With a Wizard</i> Exits the wizard and takes you to the next higher level. <i>With a text and numeric editor</i> Closes the text or numeric editor without applying changes.
	Minus/Enter key combination (press the keys simultaneously) Reduces the contrast (brighter setting).
	Plus/Enter key combination (press and hold down the keys simultaneously) Increases the contrast (darker setting).
	Minus/Plus/Enter key combination (press the keys simultaneously) <i>For operational display</i> Enables or disables the keypad lock (only SD02 display module).

8.3.5 Opening the context menu


Using the context menu, the user can call up the following menus quickly and directly from the operational display:

- Setup
- Conf. backup disp.
- Simulation

Calling up and closing the context menu

The user is in the operational display.

1. Press  for 2 s.
 - ↳ The context menu opens.

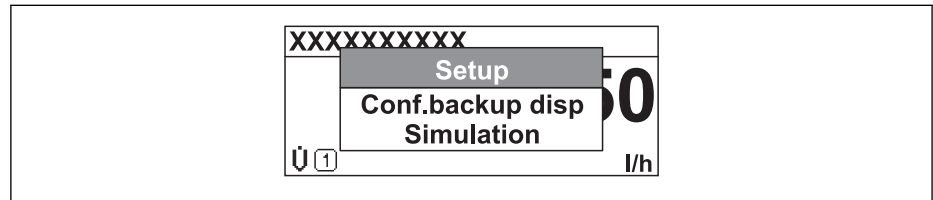

A0016326-EN

2. Press  +  simultaneously.
 - ↳ The context menu is closed and the operational display appears.

Calling up the menu via the context menu


1. Open the context menu.
2. Press  to navigate to the desired menu.
3. Press  to confirm the selection.
 - ↳ The selected menu opens.

8.3.6 Navigating and selecting from list

Different operating elements are used to navigate through the operating menu. The navigation path is displayed on the left in the header. Icons are displayed in front of the individual menus. These icons are also shown in the header during navigation.

 For an explanation of the navigation view with symbols and operating elements →  45

Example: Setting the number of displayed measured values to "2 values"

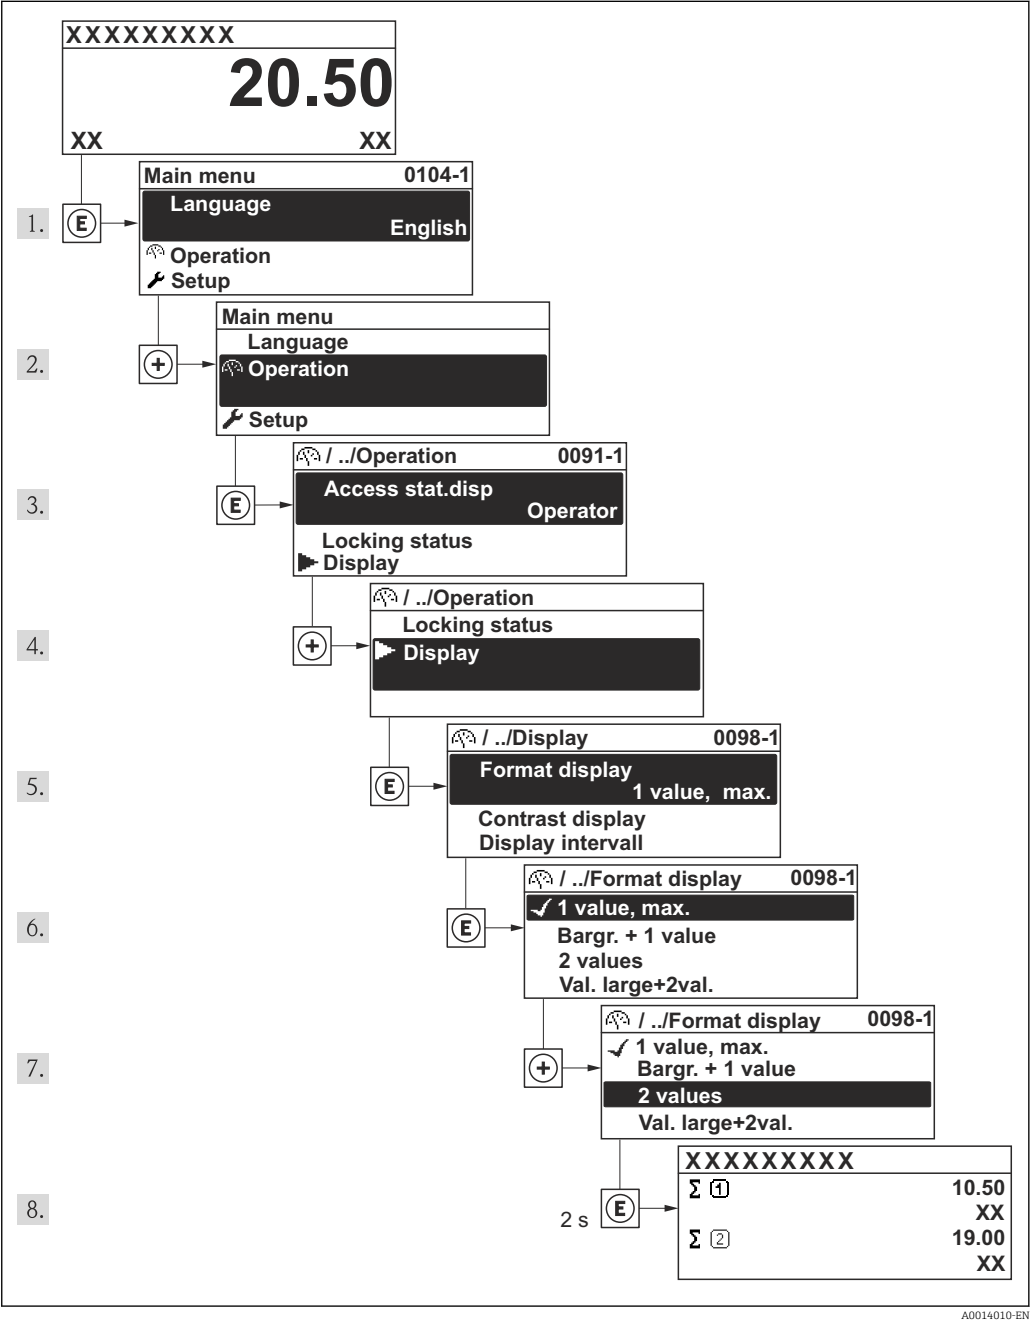

A0014010-EN


8.3.7 Calling the parameter directly

A parameter number is assigned to every parameter to be able to access a parameter directly via the onsite display. Entering this access code in the **Direct access** parameter calls up the desired parameter directly.

Navigation path

"Expert" menu → Direct access

The direct access code consists of a 4-digit number and the channel number, which identifies the channel of a process variable: e.g. 0914-1. In the navigation view, this appears on the right-hand side in the header of the selected parameter.

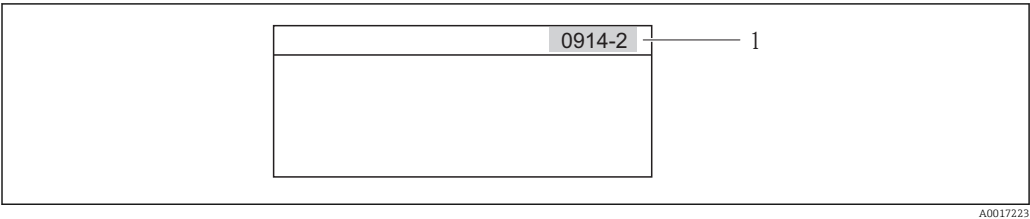

1 Direct access code

Note the following when entering the direct access code:

- The leading zeros in the direct access code do not have to be entered.
Example: Input of "914" instead of "0914"
- If no channel number is entered, channel 1 is jumped to automatically.
Example: Input of "0914" → Parameter **Totalizer 1**
- If a different channel is jumped to: Enter the direct access code with the corresponding channel number.
Example: Input of "0914-2" → Parameter **Totalizer 2**

 For the direct access codes of the individual parameters


8.3.8 Calling up help text

For some parameters, help texts exist, which the user can call up from the navigation view. These briefly describe the function of the parameter and thus support fast and reliable commissioning.

Calling up and closing the help text

The user is in the navigation view and the selection bar is on a parameter.

1. Press  for 2 s.
↳ The help text for the selected parameter opens.

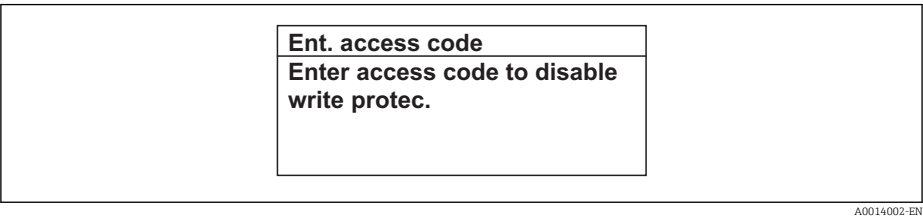


 14 Example: Help text for parameter "Enter access code"

2. Press  +  simultaneously.
↳ The help text is closed.

8.3.9 Changing the parameters

 For a description of the editing display - consisting of text editor and numeric editor - with symbols →  47, for a description of the operating elements →  49

Example: Changing the tag name in the "Tag description" parameter from 001-FT-101 to 001-FT-102

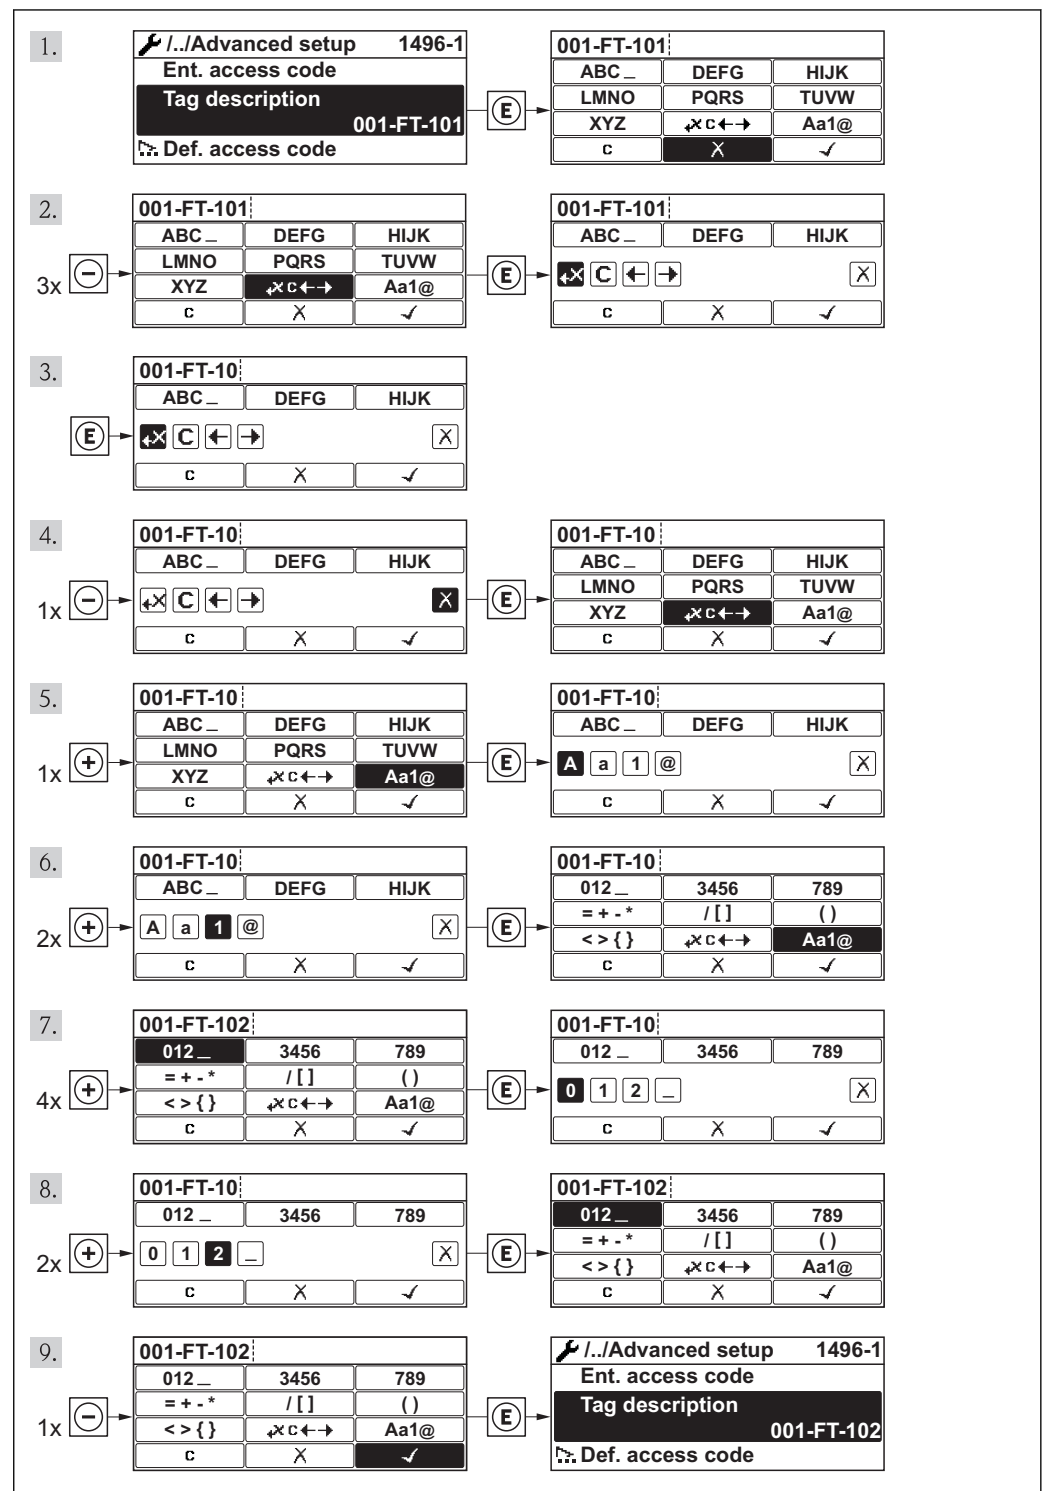

A message is displayed if the value entered is outside the permitted value range.

A0014020-EN

Ent. access code Invalid or out of range input value Min:0 Max:9999
--

A0014049-EN

8.3.10 User roles and related access authorization

The two user roles "Operator" and "Maintenance" have different write access to the parameters if the customer defines a user-specific access code. This protects the device configuration via the local display from unauthorized access .

Access authorization to parameters

User role	Read access		Write access	
	Without access code (from the factory)	With access code	Without access code (from the factory)	With access code
Operator	✓	✓	✓	-- 1)
Maintenance	✓	✓	✓	✓

1) Despite the defined access code, certain parameters can always be modified and thus are excepted from the write protection, as they do not affect the measurement. Refer to the "Write protection via access code" section

If an incorrect access code is entered, the user obtains the access rights of the "Operator" role.

 The user role with which the user is currently logged on is indicated by the **Access status display** parameter. Navigation path: Operation → Access status display

8.3.11 Disabling write protection via access code

If the -symbol appears on the local display in front of a parameter, the parameter is write-protected by a user-specific access code and its value cannot be changed at the moment using the local display .

The locking of the write access via local operation can be disabled by entering the customer-defined access code via the respective access option.

1. After you press , the input prompt for the access code appears.
2. Enter the access code.

↳ The -symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.

8.3.12 Enabling and disabling the keypad lock

The keypad lock makes it possible to block access to the entire operating menu via local operation. As a result, it is no longer possible to navigate through the operating menu or change the values of individual parameters. Users can only read the measured values on the operational display.

Local operation with mechanical push buttons (display module SD02)

 Display module SD02: order characteristic "Display; Operation", option **C**

The keypad lock is switched on and off in the same way:

Switching on the keypad lock

- ▶ The device is in the measured value display.
Press the  +  +  keys simultaneously.
↳ The message **Keylock on** appears on the display: The keypad lock is switched on.

 If the user attempts to access the operating menu while the keypad lock is active, the message **Keylock on** appears.

Switching off the keypad lock

- ▶ The keypad lock is switched on.
Press the  +  +  keys simultaneously.
↳ The message **Keylock off** appears on the display: The keypad lock is switched off.

Local operation with touch control (display module SD03)

 Display module SD03: Order characteristic "Display; Operation", option **E**

The keypad lock is switched on and off via the context menu.

Switching on the keypad lock

The keypad lock is switched on automatically:

- Each time the device is restarted.
- If the device has not been operated for longer than one minute in the measured value display.

1. The device is in the measured value display.
Press the  key for longer than 2 seconds.
↳ A context menu appears.
2. In the context menu, select the **Keylock on** option.
↳ The keypad lock is switched on.

 If the user attempts to access the operating menu while the keypad lock is active, the message **Keylock on** appears.

Switching off the keypad lock

1. The keypad lock is switched on.
Press the  key for longer than 2 seconds.
↳ A context menu appears.
2. In the context menu, select the **Keylock off** option.
↳ The keypad lock is switched off.


8.4 Access to the operating menu via the operating tool

The structure of the operating menu in the operating tools is the same as for operation via the local display.

8.4.1 Connecting the operating tool

Via PROFIBUS PA network

This communication interface is available in device versions with PROFIBUS PA.

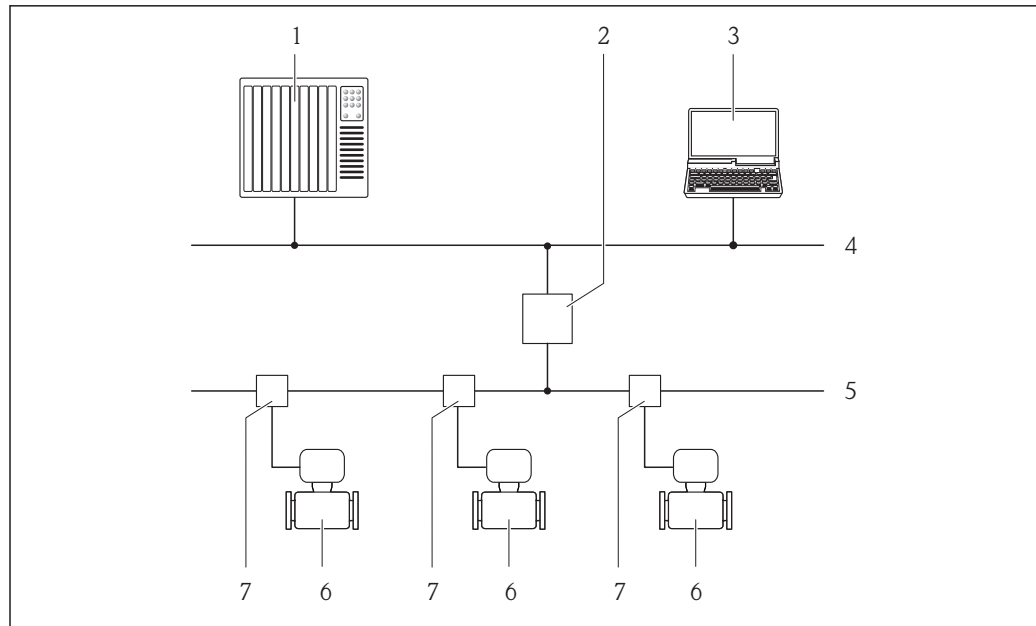


A0019013

 15 Options for remote operation via PROFIBUS PA network

- 1 Automation system
- 2 Segment coupler PROFIBUS DP/PA
- 3 Computer with PROFIBUS network card
- 4 PROFIBUS DP network
- 5 PROFIBUS PA network
- 6 Measuring device
- 7 T-box

Via service interface (CDI)

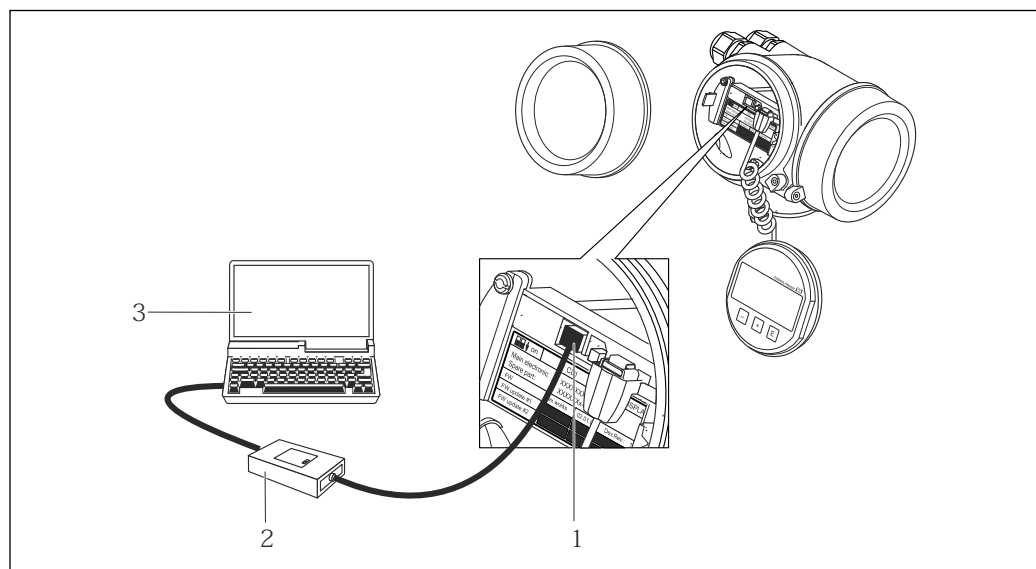

A0014019

- 1 Service interface (CDI = Endress+Hauser Common Data Interface) of the measuring device
- 2 Commubox FXA291
- 3 Computer with "FieldCare" operating tool with COM DTM "CDI Communication FXA291"

8.4.2 FieldCare

Function scope

FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field devices in a system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.

Access is via:

- PROFIBUS PA protocol →  15,  56
- Service interface CDI →  56

Typical functions:

- Configuring parameters of transmitters
- Loading and saving device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook

 For details, see Operating Instructions BA00027S and BA00059S


Source for device description files

See data →  59

Establishing a connection

 For details, see Operating Instructions BA00027S and BA00059S

User interface

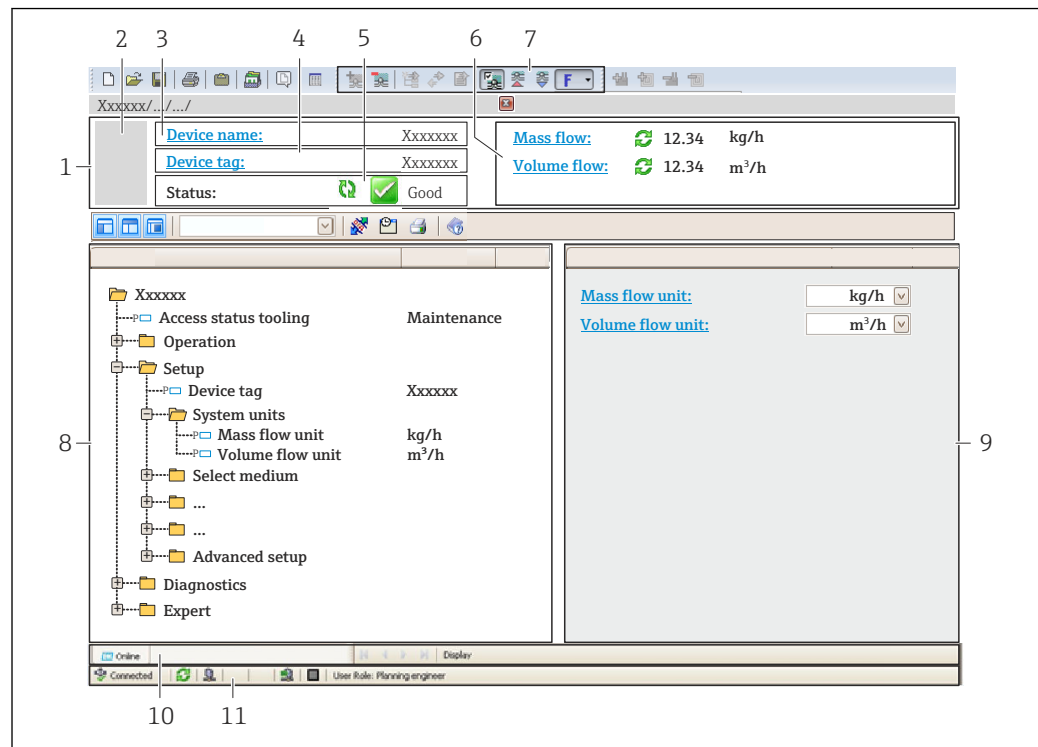

A0021051-EN

- 1 Header
- 2 Picture of device
- 3 Device name
- 4 Tag name
- 5 Status area with status signal
- 6 Display area for current measured values
- 7 Edit toolbar with additional functions such as save/restore, event list and create documentation
- 8 Navigation area with operating menu structure
- 9 Working area
- 10 Range of action
- 11 Status area

8.4.3 SIMATIC PDM

Function scope

SIMATIC PDM is a standardized, manufacturer-independent program from Siemens for the operation, configuration, maintenance and diagnosis of intelligent field devices via PROFIBUS PA protocol.

Source for device description files

See data → 59

9 System integration

9.1 Overview of device description files

9.1.1 Current version data for the device

Firmware version	01.01.zz	■ On the title page of the Operating instructions ■ On the transmitter nameplate →  13 ■ Firmware version "Diagnostics" menu → Device information → Firmware version
Release date of firmware version	06.2015	---
Manufacturer ID	0x11	Manufacturer ID "Diagnostics" menu → Device information → Manufacturer ID
Device type ID	0x1563	Device type "Diagnostics" menu → Device information → Device type
Profile version	3.02	---

 For an overview of the different firmware versions for the device →  127

9.1.2 Operating tools

The suitable device description file for the individual operating tools is listed in the table below, along with information on where the file can be acquired.

Operating tool via PROFIBUS protocol	Sources for obtaining device descriptions
FieldCare	■ www.endress.com → Download Area ■ CD-ROM (contact Endress+Hauser) ■ DVD (contact Endress+Hauser)
SIMATIC PDM (Siemens)	www.endress.com → Download Area

9.2 Device master file (GSD)

In order to integrate field devices into a bus system, the PROFIBUS system needs a description of the device parameters, such as output data, input data, data format, data volume and supported transmission rate.

These data are available in the device master file (GSD) which is provided to the PROFIBUS Master when the communication system is commissioned. In addition device bit maps, which appear as icons in the network structure, can also be integrated.

With the Profile 3.0 device master file (GSD) it is possible to exchange field devices made by different manufacturers without having to reconfigure.

Generally speaking two different GSD versions are possible with Profile 3.0 and higher.

-  Before configuring, the user must decide which GSD should be used to operate the system.
- The setting can be changed via a Class 2 master.

9.2.1 Manufacturer-specific GSD

This GSD guarantees the unrestricted functionality of the measuring device. Device-specific process parameters and functions are therefore available.

Manufacturer-specific GSD	ID number	File name
PROFIBUS PA	0x1564	EH3x1564.gsd

The fact that the manufacturer-specific GSD should be used is specified in the **Ident number selector** parameter by selecting the **Manufacturer** option.



Where to acquire the manufacturer-specific GSD:

www.endress.com → Download Area

9.2.2 Profile GSD

Differs in terms of the number of Analog Input blocks (AI) and the measured values. If a system is configured with a Profile GSD, it is possible to exchange devices made by different manufacturers. However, it is essential to ensure that the order of the cyclic process values is correct.

ID number	Supported blocks	Supported channels
0x9740	1 Analog Input 1 Totalizer	- Channel Analog Input: volume flow - Channel totalizer: volume flow
0x9741	2 Analog Input 1 Totalizer	- Channel Analog Input 1: volume flow - Channel Analog Input 2: mass flow - Channel totalizer: volume flow
0x9742	3 Analog Input 1 Totalizer	- Channel Analog Input 1: volume flow - Channel Analog Input 2: mass flow - Channel Analog Input 3: corrected volume flow - Channel totalizer: volume flow

The Profile GSD that is to be used is specified in the **Ident number selector** parameter by selecting the **Profile 0x9740** option, **Profile 0x9741** option or **Profile 0x9742** option.

9.3 Cyclic data transmission

Cyclic data transmission when using the device master file (GSD).

9.3.1 Block model

The block model shows which input and output data the measuring device makes available for cyclic data exchange. Cyclic data exchange takes place with a PROFIBUS master (Class 1), e.g. a control system etc.

Measuring device					Control system
Transducer Block	Analog Input block 1 to 2	→	61	Output value AI	→
				Output value TOTAL	→
	Totalizer block 1 to 3	→	62	Controller SETTOT	←
				Configuration MODETOT	←
	Discrete Input block 1 to 2	→	64	Output values DI	→
	Discrete Output block 1 to 3	→	64	Input values DO	←
					PROFIBUS PA

Defined order of modules

The measuring device works as a modular PROFIBUS slave. In contrast to a compact slave, a modular slave has a variable design and consists of several individual modules. The device master file (GSD) contains a description of the individual modules (input and output data) along with their individual properties.

The modules are permanently assigned to the slots, i.e. when configuring the modules, the order and the arrangement of the modules must be respected.

Slot	Module	Function block
1...2	AI	Analog Input block 1 to 2
3	TOTAL or SETTOT_TOTAL or SETTOT_MODETOT_TOTAL	Totalizer block 1
4		Totalizer block 2
5		Totalizer block 3
6...7	DI	Discrete Input block 1 to 2
8...10	DO	Discrete Output block 1 to 3

To optimize the data throughput rate of the PROFIBUS network, it is advisable to only configure modules that are processed in the PROFIBUS master system. If this results in gaps between the configured modules, these gaps must be assigned to the EMPTY_MODULE.

9.3.2 Description of the modules



The data structure is described from the perspective of the PROFIBUS master:

- Input data: Are sent from the measuring device to the PROFIBUS master.
- Output data: Are sent from the PROFIBUS master to the measuring device.

AI module (Analog Input)

Transmit an input variable from the measuring device to the PROFIBUS master (Class 1).

The selected input variable, along with the status, is cyclically transmitted to the PROFIBUS Master (Class 1) via the AI module. The input variable is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the input variable.

Four Analog Input blocks are available (slot 1 to 2).

Selection: input variable

The input variable can be specified using the CHANNEL parameter.

CHANNEL	Input variable
9	Volume flow
11	Mass flow

Factory setting

Function block	Factory setting
AI 1	Volume flow
AI 2	Mass flow

*Data structure**Input data of Analog Input*

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status

TOTAL module

Transmit a totalizer value from the measuring device to the PROFIBUS master (Class 1).

A selected totalizer value, along with the status, is cyclically transmitted to a PROFIBUS Master (Class 1) via the TOTAL module. The totalizer value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the totalizer value.

Three Totalizer blocks are available (slot 3 to 5).

Selection: totalizer value

The totalizer value can be specified using the CHANNEL parameter.

CHANNEL	Input variable
9	Mass flow
11	Volume flow

Factory setting

Function block	Factory setting: TOTAL
Totalizer 1, 2 and 3	Volume flow

*Data structure**Input data of TOTAL*

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status

SETTOT_TOTAL module

The module combination consists of the SETTOT and TOTAL functions:

- SETTOT: Control the totalizers via the PROFIBUS master.
- TOTAL: Transmit totalizer value, along with the status, to the PROFIBUS master.

Three Totalizer blocks are available (slot 3 to 5).

Selection: control totalizer

Value SETTOT	Control totalizer
0	Totalize
1	Resetting
2	Adopt totalizer initial setting

Factory setting

Function block	Factory setting: Value SETTOT (meaning)
Totalizer 1, 2 and 3	0 (totalizing)

*Data structure**Output data of SETTOT*

Byte 1
Control variable 1

Input data of TOTAL

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status

SETTOT_MODETOT_TOTAL module

The module combination consists of the SETTOT, MODETOT and TOTAL functions:

- SETTOT: Control the totalizers via the PROFIBUS master.
- MODETOT: Configure the totalizers via the PROFIBUS master.
- TOTAL: Transmit totalizer value, along with the status, to the PROFIBUS master.

Three Totalizer blocks are available (slot 3 to 5).

Selection: totalizer configuration

MODETOT value	Totalizer configuration
0	Balancing
1	Balance the positive flow
2	Balance the negative flow
3	Stop totalizing

Factory setting

Function block	Factory setting: Value MODETOT (meaning)
Totalizer 1, 2 and 3	0 (balancing)

*Data structure**Output data of SETTOT and MODETOT*

Byte 1	Byte 2
Control variable 1: SETTOT	Control variable 2: MODETOT

Input data of TOTAL

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status

DI module (Discrete Input)

Transmit discrete input values from the measuring device to the PROFIBUS master (Class 1). Discrete input values are used by the measuring device to transmit the state of device functions to the PROFIBUS master (Class 1).

The DI module cyclically transmits the discrete input value, along with the status, to the PROFIBUS Master (Class 1). The discrete input value is depicted in the first byte. The second byte contains standardized status information pertaining to the input value.

Two Discrete Input blocks are available (slot 6 to 7).

Selection: device function

The device function can be specified using the CHANNEL parameter.

CHANNEL	Device function	Factory setting: Status (meaning)
893	Status switch output	■ 0 (device function not active) ■ 1 (device function active)
894	Empty pipe detection	
895	Low flow cut off	
1430	Status verification ¹⁾	

1) Only available with the Heartbeat Verification application package

Factory setting

Function block	Factory setting
DI 1	Empty pipe detection
DI 2	Low flow cut off

Data structure

Input data of Discrete Input

Byte 1	Byte 2
Discrete	Status

DO module (Discrete Output)

Transmit discrete output values from the PROFIBUS master (Class 1) to the measuring device. Discrete output values are used by the PROFIBUS master (Class 1) to enable and disable device functions.

The DO module cyclically transmits the discrete output value, along with the status, to the measuring device. The discrete output value is depicted in the first byte. The second byte contains standardized status information pertaining to the output value.

Three Discrete Output blocks are available (slot 8 to 10).

Assigned device functions

A device function is permanently assigned to the individual Discrete Output blocks.

CHANNEL	Function block	Device function	Values: control (meaning)
891	DO 1	Flow override	▪ 0 (disable device function) ▪ 1 (enable device function)
253	DO 2	Pulse/freq./switch output	
1429	DO 3	Start verification ¹⁾	

1) Only available with the Heartbeat Verification application package

Data structure

Output data of Discrete Output

Byte 1	Byte 2
Discrete	Status

EMPTY_MODULE module

This module is used to assign empty spaces arising from modules not being used in the slots →  61.

10 Commissioning

10.1 Function check

Before commissioning the measuring device:

- ▶ Make sure that the post-installation and post-connection checks have been performed.
- "Post-installation check" checklist →  27
- "Post-connection check" checklist →  40

10.2 Switching on the measuring device

- ▶ After a successful function check, switch on the measuring device.
 - ↳ After a successful startup, the local display switches automatically from the startup display to the operational display.

 If nothing appears on the local display or a diagnostic message is displayed, refer to the section on "Diagnostics and troubleshooting" →  100.

10.3 Configuring the device address via software

In the **"Communication" submenu** the device address can be set.

Navigation

"Setup" menu → Communication → Device address

10.3.1 PROFIBUS network


At time of delivery, the measuring device has the following factory setting:

Device address	126
----------------	-----

 If hardware addressing is active, software addressing is blocked →  38

10.4 Setting the operating language

Factory setting: English or ordered local language

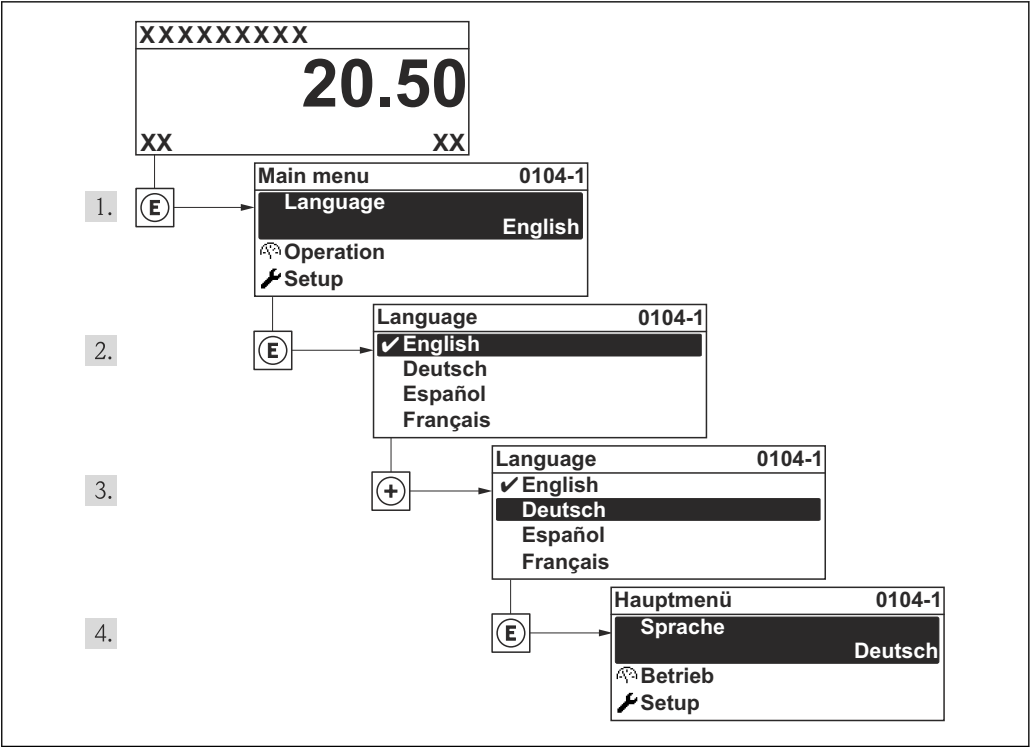


16 Taking the example of the local display

10.5 Configuring the measuring device


The **Setup** menu with its guided wizards contains all the parameters needed for standard operation.

Navigation to the **Setup** menu

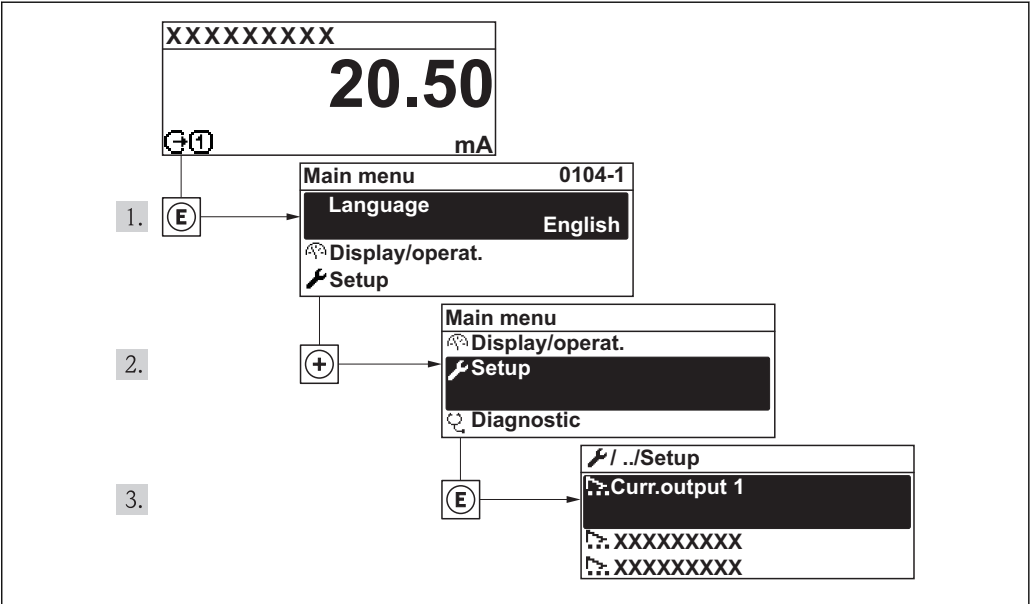


17 Illustrated using the example of the local display

Navigation
"Setup" menu

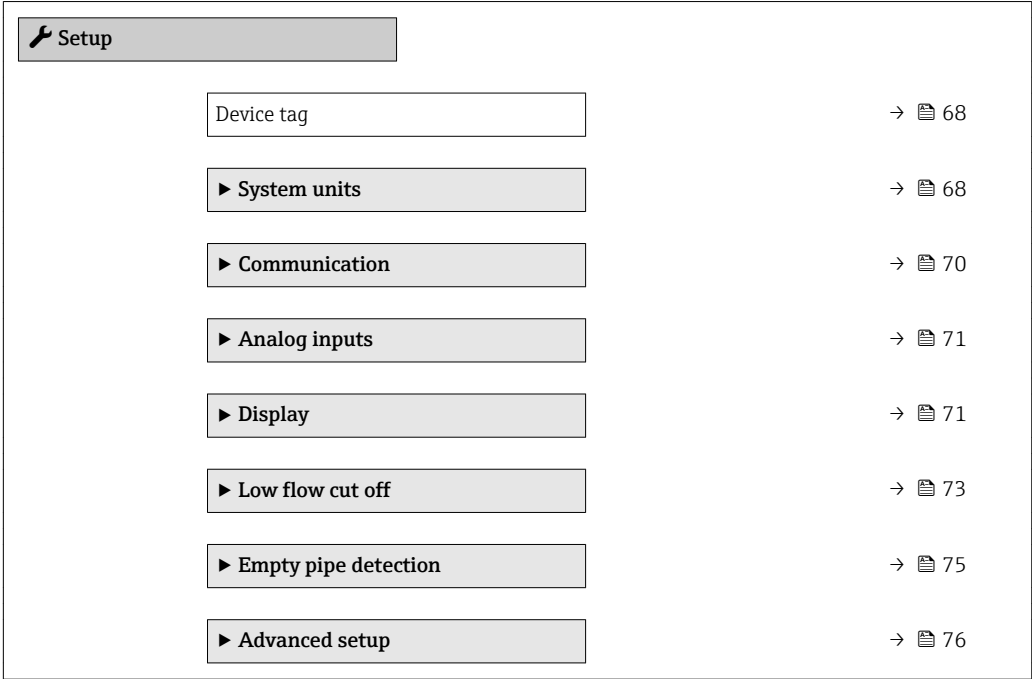

10.5.1 Defining the tag name

To enable fast identification of the measuring point within the system, you can enter a unique designation using the **Device tag** parameter and thus change the factory setting.

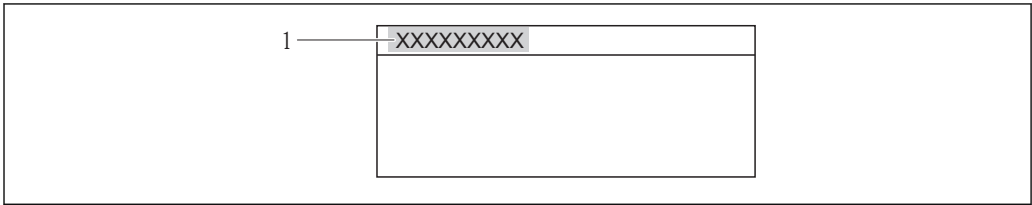

 18 Header of the operational display with tag name

1 Device tag

-  The number of characters displayed depends on the characters used.
- Enter the tag name in the "FieldCare" operating tool →  58

Navigation
"Setup" menu → Device tag

Parameter overview with brief description

Parameter	Description	User entry	Factory setting
Device tag	Enter the name for the measuring point.	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).	Promag 200 PA

10.5.2 Setting the system units

In the **System units** submenu the units of all the measured values can be set.

Navigation

"Setup" menu → System units

▶ System units

Volume flow unit

Volume unit

Mass flow unit

Mass unit

Density unit

Temperature unit

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Volume flow unit	Select volume flow unit. <i>Result</i> The selected unit applies for: ■ Output ■ Low flow cut off ■ Simulation process variable	Unit choose list	Country-specific: ■ l/h ■ gal/min (us)
Volume unit	Select volume unit.	Unit choose list	Country-specific: ■ m³ ■ gal (us)
Mass flow unit	Select mass flow unit. <i>Result</i> The selected unit applies for: ■ Output ■ Low flow cut off ■ Simulation process variable	Unit choose list	Country-specific: ■ kg/h ■ lb/min
Mass unit	Select mass unit.	Unit choose list	Country-specific: ■ kg ■ lb
Density unit	Select density unit. <i>Result</i> The selected unit applies for: ■ Output ■ Simulation process variable	Unit choose list	Country-specific: ■ kg/l ■ lb/ft³
Temperature unit	Select temperature unit. <i>Result</i> The selected unit applies for: ■ Maximum value ■ Minimum value ■ Maximum value ■ Minimum value ■ Average value	Unit choose list	Country-specific: ■ °C ■ °F

10.5.3 **Configuring communication interface**

The **Communication** submenu guides you systematically through all the parameters that have to be configured for selecting and setting the communication interface.

Navigation

"Setup" menu → Communication

► Communication

Device address

Parameter overview with brief description

Parameter	Description	User entry	Factory setting
Device address	Enter device address.	0 to 126	126

10.5.4 Configuring the analog inputs

Navigation

"Setup" menu → Analog inputs

► Analog inputs

► Analog input 1 to 2

Channel

PV filter time

Fail safe type

Fail safe value

Parameter overview with brief description


Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Channel	–	Select the process variable.	■ Volume flow ■ Mass flow	Volume flow
PV filter time	–	Specify the time to suppress signal peaks. During the specified time the analog input does not respond to an erratic increase in the process variable.	Positive floating-point number	0
Fail safe type	–	Select the failure mode.	■ Fail safe value ■ Fallback value ■ Off	Off
Fail safe value	In Fail safe type parameter, the Fail safe value option is selected.	Specify the values to be output when an error occurs.	Signed floating-point number	0

10.5.5 Configuring the local display

The **Display** wizard guides you systematically through all the parameters that can be configured for configuring the local display.

Navigation
"Setup" menu → Display

Structure of the wizard

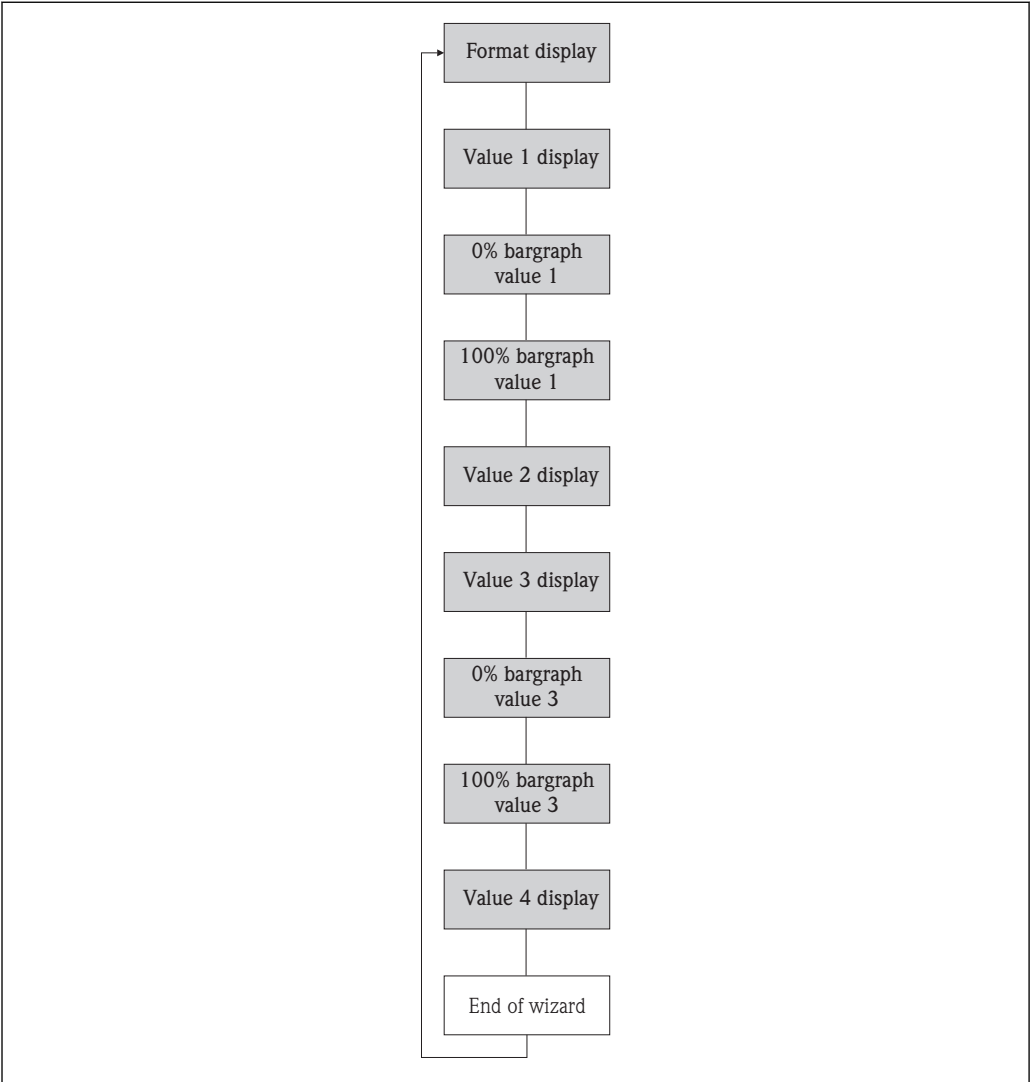

19 "Display" wizard in the "Setup" menu

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	1 value, max. size 1 bargraph + 1 value 2 values 1 value large + 2 values 4 values	1 value, max. size
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	- Volume flow - Mass flow - Totalizer 1 - Totalizer 2 - Totalizer 3	Volume flow

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: ■ 0 l/h ■ 0 gal/min (us)
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	Picklist see Value 1 display parameter	None
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	Picklist see Value 1 display parameter	None
0% bargraph value 3	A selection has been made in the Value 3 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: ■ 0 l/h ■ 0 gal/min (us)
100% bargraph value 3	An option was selected in the Value 3 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	Picklist see Value 1 display parameter	None


10.5.6 Configuring the low flow cut off

The **Low flow cut off** wizard guides you systematically through all the parameters that have to be set for configuring the low flow cut off.

Navigation

"Setup" menu → Low flow cut off

Structure of the wizard

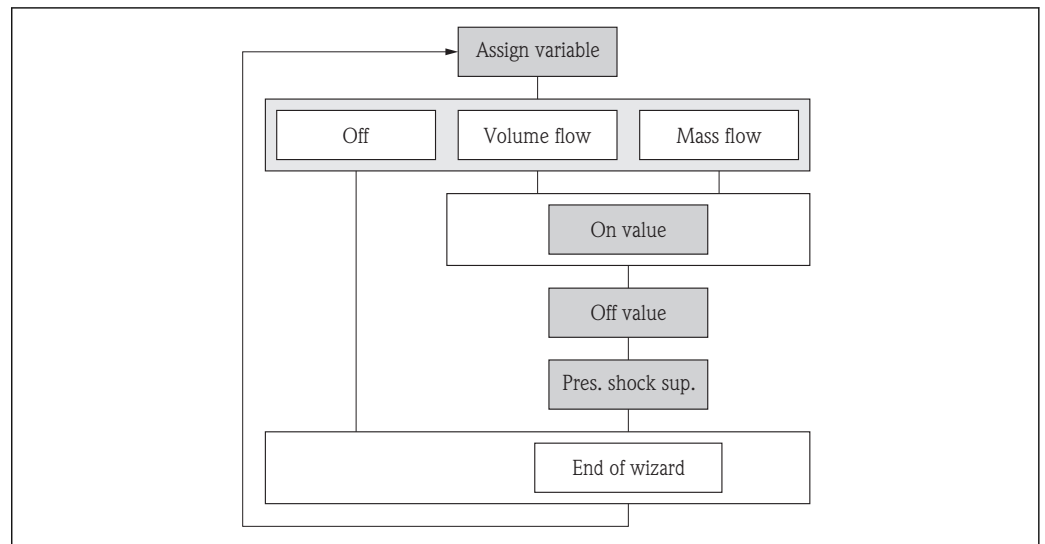

20 "Low flow cut off" wizard in the "Setup" menu

A0017209-EN

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	–	Select process variable for low flow cut off.	■ Off ■ Volume flow ■ Mass flow	Volume flow
On value low flow cutoff	One of the following options is selected in the Assign process variable parameter (→ 74): ■ Volume flow ■ Mass flow	Enter on value for low flow cut off.	Signed floating-point number	Depends on country and nominal diameter
Off value low flow cutoff	One of the following options is selected in the Assign process variable parameter (→ 74): ■ Volume flow ■ Mass flow	Enter off value for low flow cut off.	0 to 100.0 %	50 %
Pressure shock suppression	One of the following options is selected in the Assign process variable parameter (→ 74): ■ Volume flow ■ Mass flow	Enter time frame for signal suppression (= active pressure shock suppression).	0 to 100 s	0 s


10.5.7 Configuring empty pipe detection

The **Empty pipe detection** wizard guides you systematically through all the parameters that have to be set for configuring empty pipe detection.

Navigation

"Setup" menu → Empty pipe detection

Structure of the wizard

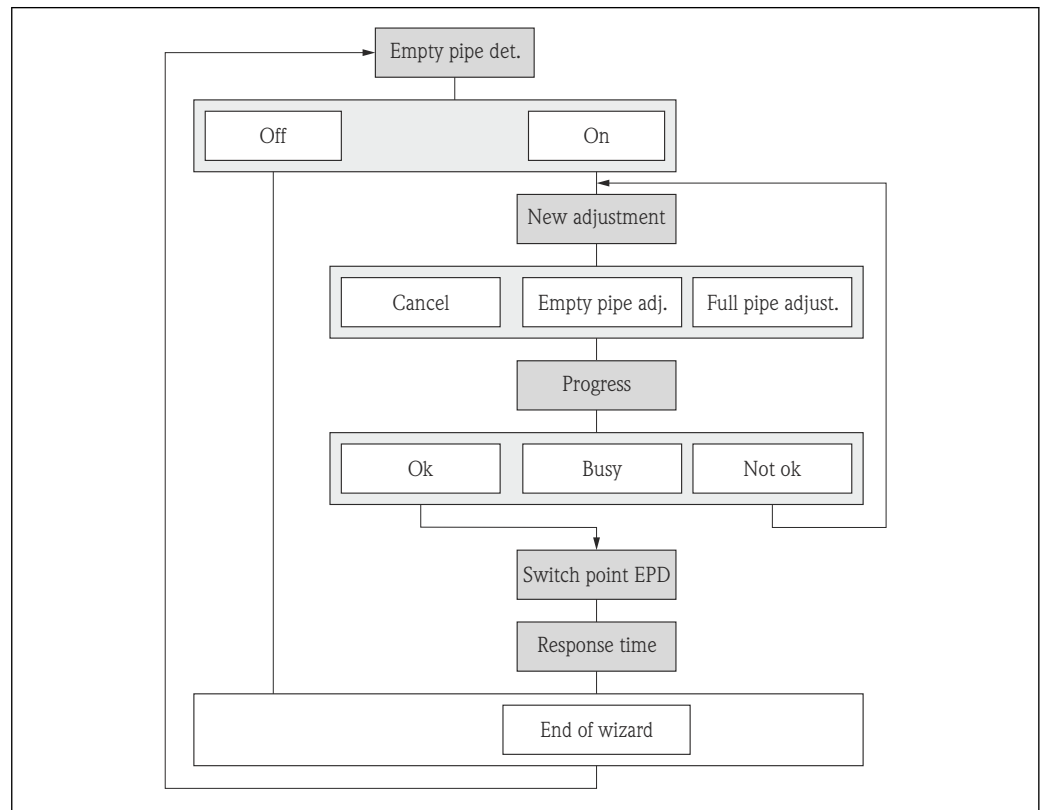

21 "Empty pipe detection" wizard in the "Setup" menu


Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Empty pipe detection	–	Switch empty pipe detection on and off.	■ Off ■ On	Off
New adjustment	The On option is selected in the Empty pipe detection parameter.	Select type of adjustment.	■ Cancel ■ Empty pipe adjust ■ Full pipe adjust	Cancel
Progress	The On option is selected in the Empty pipe detection parameter.	Shows the progress.	■ Ok ■ Busy ■ Not ok	–
Switch point empty pipe detection	The On option is selected in the Empty pipe detection parameter.	Enter hysteresis in %, below this value the measuring tube will detected as empty.	1 to 99 %	10 %
Response time empty pipe detection	In the Empty pipe detection parameter, the On option is selected.	Enter the time before diagnostic message S862 'Pipe empty' is displayed for empty pipe detection.	0 to 100 s	1 s

10.6 Advanced settings

The **Advanced setup** submenu with its submenus contains parameters for specific settings.


Navigation to the "Advanced setup" submenu

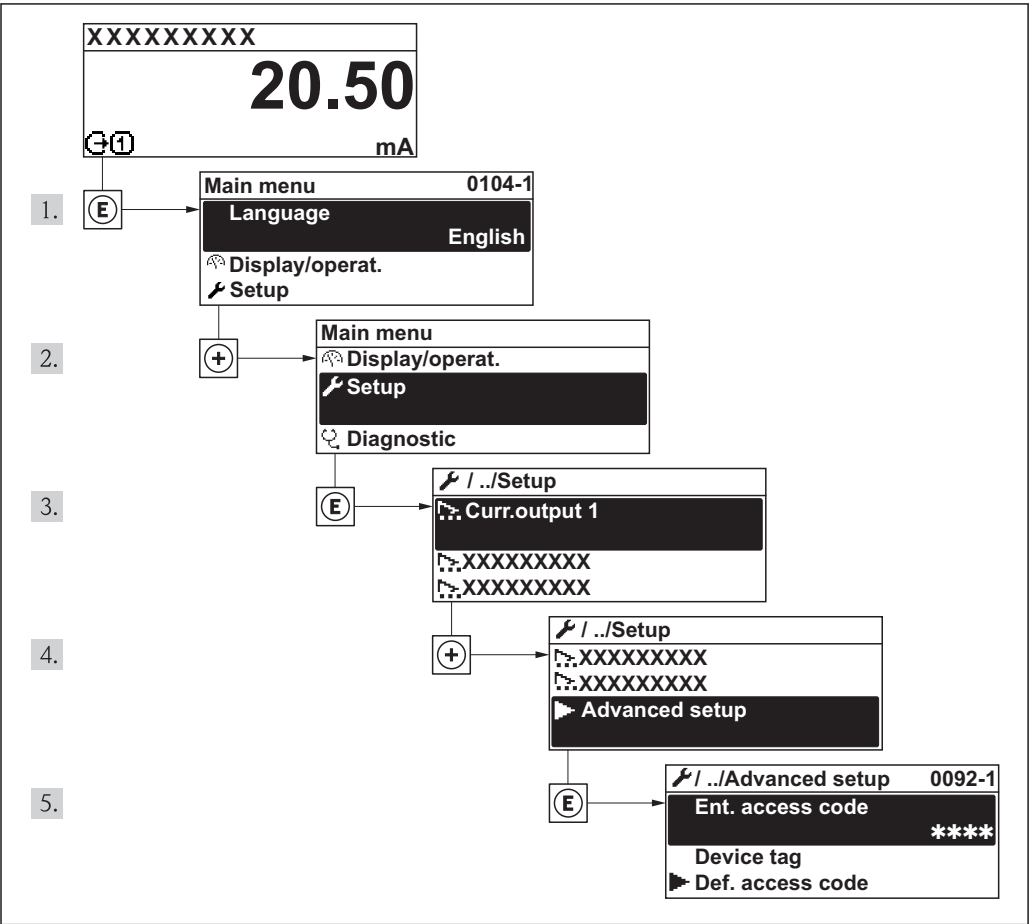

 For detailed information on the parameter descriptions of the **Heartbeat Verification** application package, see the Special Documentation for the device

Navigation

"Setup" menu → Advanced setup

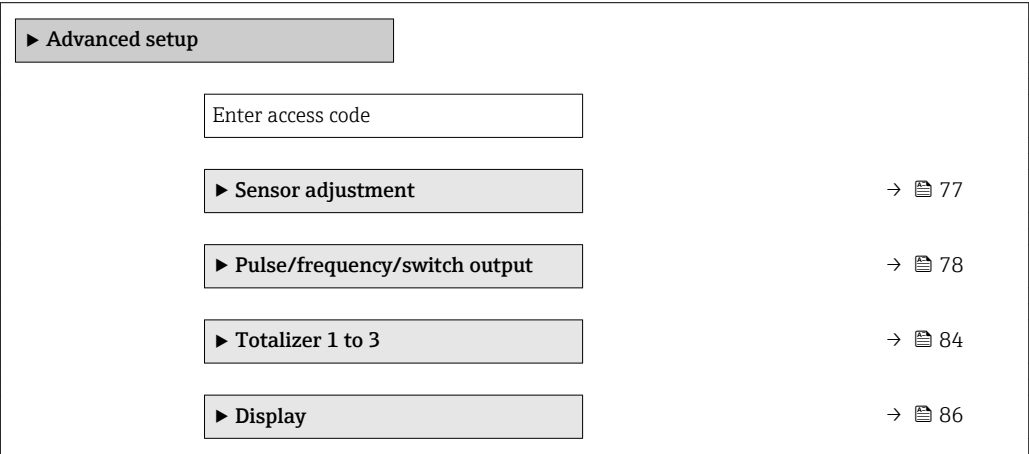

▶ Heartbeat setup

▶ Configuration backup display → 89

▶ Administration → 88

10.6.1 Carrying out a sensor adjustment

The **Sensor adjustment** submenu contains parameters that pertain to the functionality of the sensor.

Navigation

"Setup" menu → Advanced setup → Sensor adjustment

▶ Sensor adjustment

Installation direction

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Installation direction	Set sign of flow direction to match the direction of the arrow on the sensor.	▪ Flow in arrow direction ▪ Flow against arrow direction	Flow in arrow direction

10.6.2 Configuring the pulse/frequency/switch output


The **Pulse/frequency/switch output** wizard guides you systematically through all the parameters that can be set for configuring the selected output type.

Configuring the pulse output

Navigation

"Setup" menu → Pulse/frequency/switch output

Structure of the wizard for the pulse output

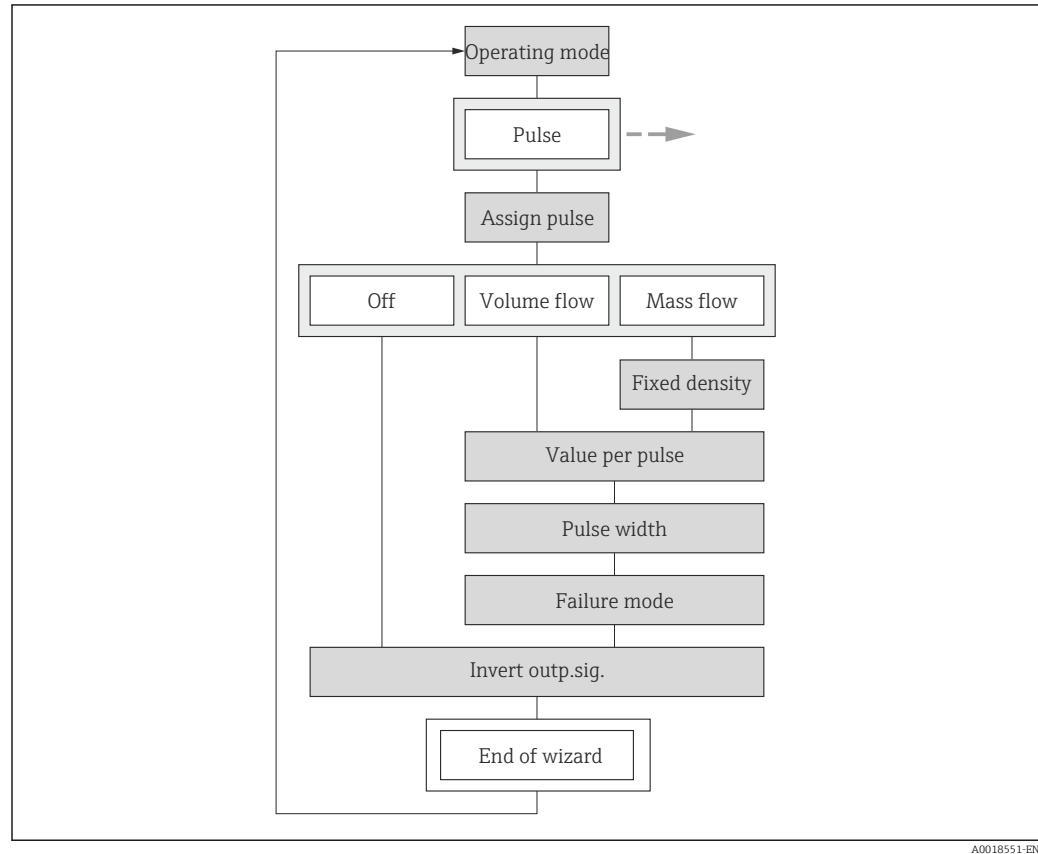

A0018551-EN

22 "Pulse/frequency/switch output" wizard in the "Setup" menu: "Operating mode" parameter "Pulse" option

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Operating mode	–	Define the output as a pulse, frequency or switch output.	■ Pulse ■ Frequency ■ Switch	Pulse
Assign pulse output	In Operating mode parameter, the Pulse option is selected.	Select process variable for pulse output.	■ Off ■ Mass flow ■ Volume flow	Off
Value per pulse	In the Operating mode parameter, the Pulse option is selected and one of the following options is selected in the Assign pulse output parameter (→ 78): ■ Mass flow ■ Volume flow	Enter measured value at which a pulse is output.	Signed floating-point number	0


Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Pulse width	In the Operating mode parameter, the Pulse option is selected and one of the following options is selected in the Assign pulse output parameter (→ 78): ■ Mass flow ■ Volume flow	Define time width of the output pulse.	5 to 2 000 ms	100 ms
Failure mode	In the Operating mode parameter, the Pulse option is selected and one of the following options is selected in the Assign pulse output parameter (→ 78): ■ Mass flow ■ Volume flow	Define output behavior in alarm condition.	■ Actual value ■ No pulses	No pulses
Invert output signal	–	Invert the output signal.	■ No ■ Yes	No

Configuring the frequency output

Navigation

"Setup" menu → Advanced setup → Pulse/frequency/switch output

Structure of the wizard for the frequency output

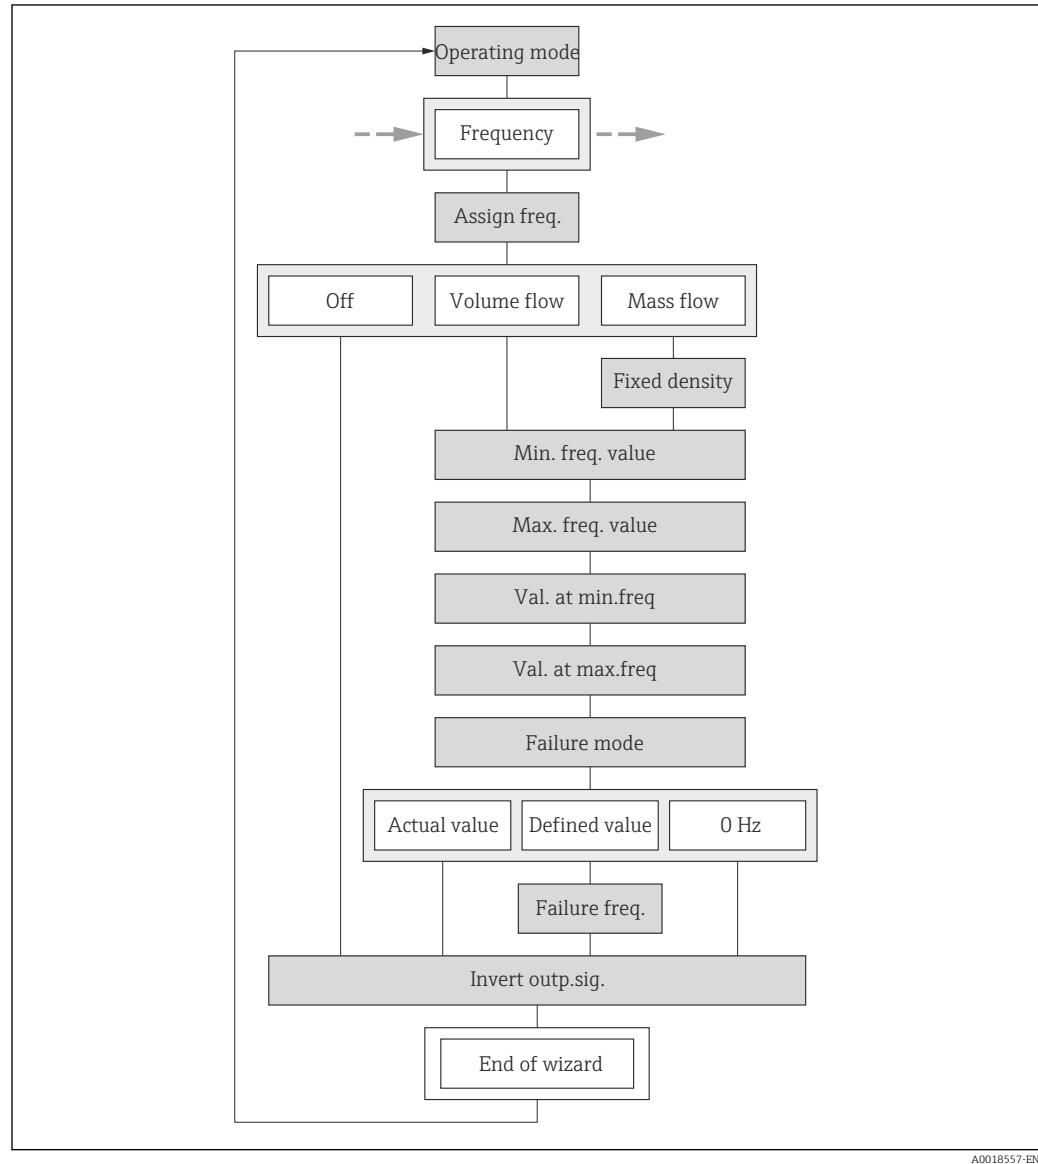

A0018557-EN

23 "Pulse/frequency/switch output" wizard in the "Advanced setup" submenu: "Operating mode" parameter "Frequency" option

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Operating mode	–	Define the output as a pulse, frequency or switch output.	■ Pulse ■ Frequency ■ Switch	Pulse
Assign frequency output	In Operating mode parameter (→ 78), the Frequency option is selected.	Select process variable for frequency output.	■ Off ■ Volume flow ■ Mass flow	Off


Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Minimum frequency value	In the Operating mode parameter, the Frequency option is selected and one of the following options is selected in the Assign frequency output parameter (→ 80): ■ Volume flow ■ Mass flow	Enter minimum frequency.	0 to 1000 Hz	0 Hz
Maximum frequency value	In the Operating mode parameter, the Frequency option is selected and one of the following options is selected in the Assign frequency output parameter (→ 80): ■ Volume flow ■ Mass flow	Enter maximum frequency.	0 to 1000 Hz	1000 Hz
Measuring value at minimum frequency	In the Operating mode parameter, the Frequency option is selected and one of the following options is selected in the Assign frequency output parameter (→ 80): ■ Volume flow ■ Mass flow	Enter measured value for minimum frequency.	Signed floating-point number	Depends on country and nominal diameter
Measuring value at maximum frequency	In the Operating mode parameter, the Frequency option is selected and one of the following options is selected in the Assign frequency output parameter (→ 80): ■ Volume flow ■ Mass flow	Enter measured value for maximum frequency.	Signed floating-point number	Depends on country and nominal diameter
Failure mode	In the Operating mode parameter (→ 78), the Frequency option is selected and one of the following options is selected in the Assign frequency output parameter (→ 80): ■ Volume flow ■ Mass flow	Define output behavior in alarm condition.	■ Actual value ■ Defined value ■ 0 Hz	0 Hz
Failure frequency	In the Operating mode parameter (→ 78), the Frequency option is selected and one of the following options is selected in the Assign frequency output parameter (→ 80): ■ Volume flow ■ Mass flow	Enter frequency output value in alarm condition.	0.0 to 1250.0 Hz	0.0 Hz
Invert output signal	–	Invert the output signal.	■ No ■ Yes	No

Configuring the switch output

Navigation


"Setup" menu → Advanced setup → Pulse/frequency/switch output

Structure of the wizard for the switch output

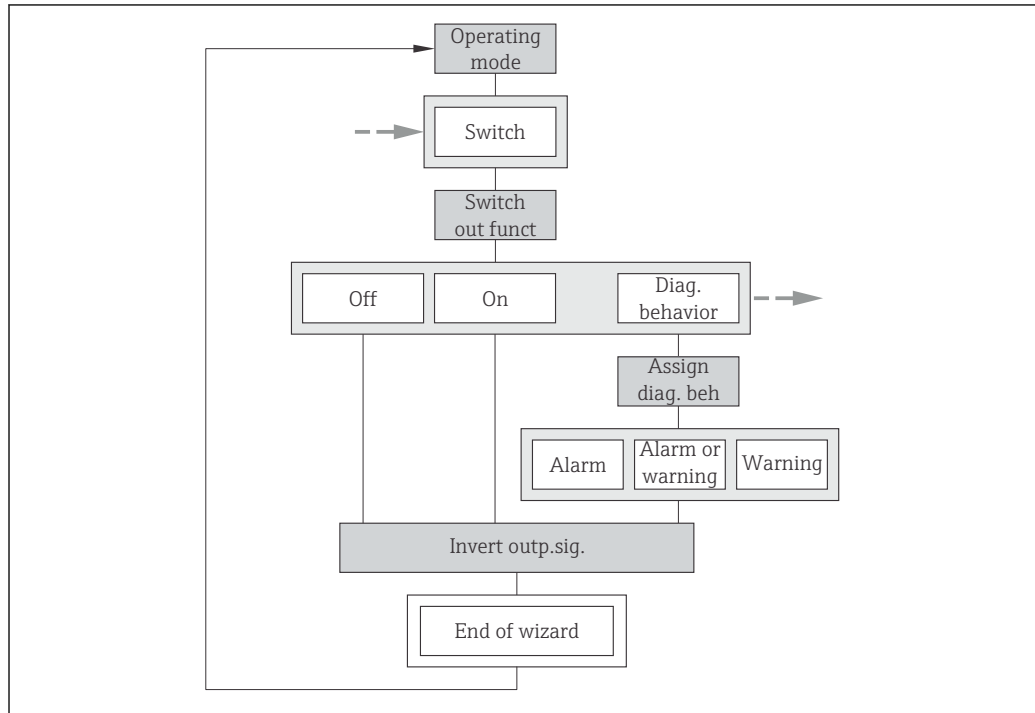

A0018575-EN

24 "Pulse/frequency/switch output" wizard in the "Advanced setup" submenu: "Operating mode" parameter "Switch" option (part 1)

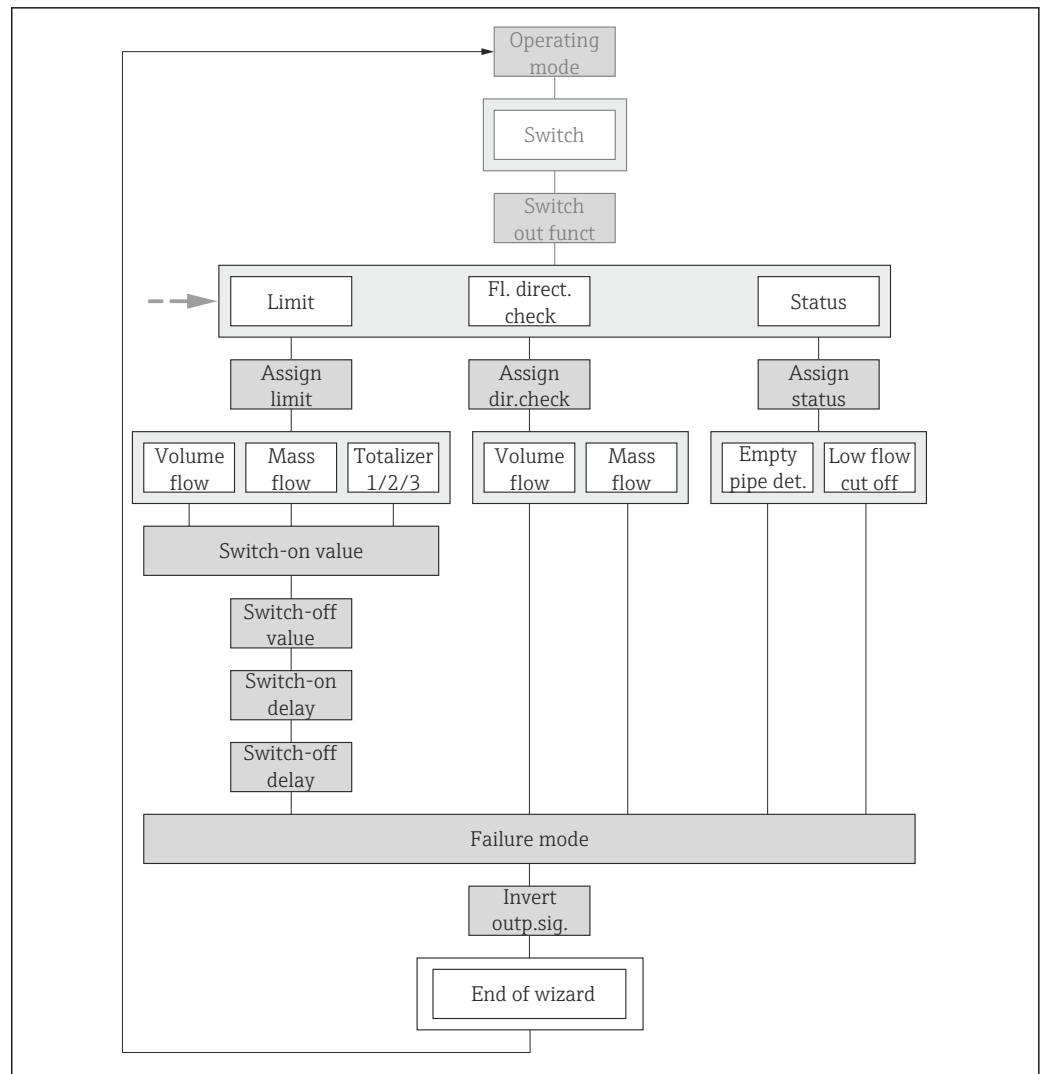

A0018576-EN

25 "Pulse/frequency/switch output" wizard in the "Advanced setup" submenu: "Operating mode" parameter "Switch" option (part 2)

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Operating mode	–	Define the output as a pulse, frequency or switch output.	■ Pulse ■ Frequency ■ Switch	Pulse
Switch output function	The Switch option is selected in the Operating mode parameter.	Select function for switch output.	■ Off ■ On ■ Diagnostic behavior ■ Limit ■ Flow direction check ■ Status	Off
Assign diagnostic behavior	The Diagnostic behavior option is selected in the Switch output function parameter.	Select diagnostic behavior for switch output.	■ Alarm ■ Alarm or warning ■ Warning	Alarm

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign limit	In Switch output function parameter, the Limit option is selected.	Select process variable for limit function.	- Volume flow - Mass flow - Totalizer 1 - Totalizer 2 - Totalizer 3	Volume flow
Assign flow direction check	The Flow direction check option is selected in the Switch output function parameter.	Select process variable for flow direction monitoring.	- Volume flow - Mass flow	Volume flow
Assign status	The Status option is selected in the Switch output function parameter.	Select device status for switch output.	- Empty pipe detection - Low flow cut off - Digital output 2	Empty pipe detection
Switch-on value	In Switch output function parameter, the Limit option is selected.	Enter measured value for the switch-on point.	Signed floating-point number	Country-specific: 0 l/h 0 gal/min (us)
Switch-off value	In Switch output function parameter, the Limit option is selected.	Enter measured value for the switch-off point.	Signed floating-point number	Country-specific: 0 l/h 0 gal/min (us)
Switch-on delay	The Limit option is selected in the Switch output function parameter.	Define delay for the switch-on of status output.	0.0 to 100.0 s	0.0 s
Switch-off delay	The Limit option is selected in the Switch output function parameter.	Define delay for the switch-off of status output.	0.0 to 100.0 s	0.0 s
Failure mode	–	Define output behavior in alarm condition.	- Actual status - Open - Closed	Open
Invert output signal	–	Invert the output signal.	- No - Yes	No

10.6.3 Configuring the totalizer

In the "**Totalizer 1 to 3**" submenu the individual totalizer can be configured.

Navigation

"Setup" menu → Advanced setup → Totalizer 1 to 3

► Totalizer 1 to 3

Assign process variable

Unit totalizer

Totalizer operation mode

Control Totalizer 1 to 3

Failure mode

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection	Factory setting
Assign process variable	–	Select process variable for totalizer.	■ Volume flow ■ Mass flow	Volume flow
Unit totalizer	One of the following options is selected in the Assign process variable parameter: ■ Volume flow ■ Mass flow	Select the unit for the process variable of the totalizer.	Unit choose list	Country-specific: ■ m³ ■ ft³
Control Totalizer 1 to 3	One of the following options is selected in the Assign process variable parameter: ■ Volume flow ■ Mass flow	Control totalizer value.	■ Totalize ■ Reset + hold ■ Preset + hold	Totalize
Totalizer operation mode	One of the following options is selected in the Assign process variable parameter: ■ Volume flow ■ Mass flow	Select totalizer calculation mode.	■ Net flow total ■ Forward flow total ■ Reverse flow total ■ Last valid value	Net flow total
Failure mode	One of the following options is selected in the Assign process variable parameter: ■ Volume flow ■ Mass flow	Define the totalizer behavior in the event of a device alarm.	■ Stop ■ Actual value ■ Last valid value	Actual value

10.6.4 Carrying out additional display configurations

In the **Display** submenu you can set all the parameters associated with the configuration of the local display.

Navigation

"Setup" menu → Advanced setup → Display

► Display

Format display

Value 1 display

0% bargraph value 1

100% bargraph value 1

Decimal places 1

Value 2 display

Decimal places 2

Value 3 display

0% bargraph value 3

100% bargraph value 3

Decimal places 3

Value 4 display

Decimal places 4

Language

Display interval

Display damping

Header

Header text

Separator

Backlight

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	■ 1 value, max. size ■ 1 bargraph + 1 value ■ 2 values ■ 1 value large + 2 values ■ 4 values	1 value, max. size
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	■ Volume flow ■ Mass flow ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3	Volume flow
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: ■ 0 l/h ■ 0 gal/min (us)
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Decimal places 1	A measured value is specified in the Value 1 display parameter.	Select the number of decimal places for the display value.	■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx	x.xx
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	Picklist see Value 1 display parameter	None
Decimal places 2	A measured value is specified in the Value 2 display parameter.	Select the number of decimal places for the display value.	■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx	x.xx
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	Picklist see Value 1 display parameter	None
0% bargraph value 3	A selection has been made in the Value 3 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: ■ 0 l/h ■ 0 gal/min (us)
100% bargraph value 3	An option was selected in the Value 3 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Decimal places 3	A measured value is specified in the Value 3 display parameter.	Select the number of decimal places for the display value.	■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx	x.xx
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	Picklist see Value 1 display parameter	None
Decimal places 4	A measured value is specified in the Value 4 display parameter.	Select the number of decimal places for the display value.	■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx	x.xx

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Language	A local display is provided.	Set display language.	■ English ■ Deutsch * ■ Français * ■ Español * ■ Italiano * ■ Nederlands * ■ Portuguesa * ■ Polski * ■ русский язык (Russian) * ■ Svenska * ■ Türkçe * ■ 中文 (Chinese) * ■ 日本語 (Japanese) * ■ 한국어 (Korean) * ■ العربية (Arabic) * ■ Bahasa Indonesia * ■ ภาษาไทย (Thai) * ■ tiếng Việt (Vietnamese) * ■ čeština (Czech) *	English (alternatively, the ordered language is preset in the device)
Display interval	A local display is provided.	Set time measured values are shown on display if display alternates between values.	1 to 10 s	5 s
Display damping	A local display is provided.	Set display reaction time to fluctuations in the measured value.	0.0 to 999.9 s	0.0 s
Header	A local display is provided.	Select header contents on local display.	■ Device tag ■ Free text	Device tag
Header text	The Free text option is selected in the Header parameter.	Enter display header text.	Max. 12 characters such as letters, numbers or special characters (e.g. @, %, /)	-----
Separator	A local display is provided.	Select decimal separator for displaying numerical values.	■ . (point) ■ , (comma)	. (point)
Backlight	–	Switch the local display backlight on and off.  Only for device version with local display SD03 (touch control)	■ Disable ■ Enable	Disable

* Visibility depends on order options or device settings

10.6.5 Administration configuration

The **Administration** submenu contains administrative parameters.

Navigation

"Setup" menu → Advanced setup → Administration

▶ Administration

Define access code

Device reset

Parameter overview with brief description

Parameter	Description	User entry / Selection	Factory setting
Define access code	Restrict write-access to parameters to protect the configuration of the device against unintentional changes via the local display.	0 to 9 999	0
Device reset	Reset the device configuration - either entirely or in part - to a defined state.	■ Cancel ■ To fieldbus defaults * ■ To factory defaults ■ To delivery settings ■ Restart device	Cancel

* Visibility depends on communication

10.7 Configuration management

After commissioning, you can save the current device configuration, copy it to another measuring point or restore the previous device configuration.

You can do so using the **Configuration management** parameter and the related options found in the **Configuration backup display** submenu.

Navigation

"Setup" menu → Advanced setup → Configuration backup display

► Configuration backup display

Operating time

Last backup

Configuration management

Comparison result

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface / Selection	Factory setting
Operating time	–	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)	–
Last backup	A local display is provided.	Indicates when the last data backup was saved to the display module.	Days (d), hours (h), minutes (m) and seconds (s)	–

Parameter	Prerequisite	Description	User interface / Selection	Factory setting
Configuration management	A local display is provided.	Select action for managing the device data in the display module.	■ Cancel ■ Execute backup ■ Restore ■ Duplicate ■ Compare ■ Clear backup data	Cancel
Comparison result	A local display is provided.	Comparison between present device data and display backup.	■ Settings identical ■ Settings not identical ■ No backup available ■ Backup settings corrupt ■ Check not done ■ Dataset incompatible	Check not done

10.7.1 Function scope of the "Configuration management" parameter

Options	Description
Execute backup	The current device configuration is backed up from the integrated HistoROM to the device's display module. The backup copy includes the transmitter data of the device.
Restore	The last backup copy of the device configuration is restored from the display module to the device's integrated HistoROM. The backup copy includes the transmitter data of the device.
Duplicate	The transmitter configuration from another device is duplicated to the device using the display module.
Compare	The device configuration saved in the display module is compared with the current device configuration of the integrated HistoROM.
Clear backup data	The backup copy of the device configuration is deleted from the display module of the device.



Integrated HistoROM

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.



While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.

10.8 Simulation

The **Simulation** submenu enables you to simulate, without a real flow situation, various process variables in the process and the device alarm mode and to verify downstream signal chains (switching valves or closed-control loops).

Navigation

"Diagnostics" menu → Simulation

▶ Simulation

Assign simulation process variable

Process variable value

Simulation current output 1 to 2
Value current output 1 to 2
Frequency output simulation
Frequency value
Pulse output simulation
Pulse value
Switch output simulation
Switch status
Simulation device alarm
Diagnostic event category
Diagnostic event simulation

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign simulation process variable	–	Select a process variable for the simulation process that is activated.	- Off - Volume flow - Mass flow	Off
Process variable value	One of the following options is selected in the Assign simulation process variable parameter (→ 91): - Volume flow - Mass flow	Enter the simulation value for the selected process variable.	Depends on the process variable selected	0
Simulation current output 1 to 2	–		- Off - On	Off
Value current output 1 to 2	In the Simulation current output 1 to 2 parameter, the On option is selected.		3.59 to 22.5 mA	3.59 mA
Frequency output simulation	The Frequency option is selected in the Operating mode parameter.	Switch the simulation of the frequency output on and off.	- Off - On	Off
Frequency value	The On option is selected in the Frequency output simulation parameter.	Enter the frequency value for the simulation.	0.0 to 1250.0 Hz	0.0 Hz
Pulse output simulation	The Pulse option is selected in the Operating mode parameter.	Set and switch off the pulse output simulation.  For Fixed value option: Pulse width parameter (→ 79) defines the pulse width of the pulses output.	- Off - Fixed value - Down-counting value	Off

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Pulse value	In the Pulse output simulation parameter (→  91), the Down-counting value option is selected.	Enter the number of pulses for simulation.	0 to 65 535	0
Switch output simulation	The Switch option is selected in the Operating mode parameter.	Switch the simulation of the switch output on and off.	■ Off ■ On	Off
Switch status	The On option is selected in the Switch output simulation parameter (→  92).	Select the status of the status output for the simulation.	■ Open ■ Closed	Open
Simulation device alarm	–	Switch the device alarm on and off.	■ Off ■ On	Off
Diagnostic event category	–	Select a diagnostic event category.	■ Sensor ■ Electronics ■ Configuration ■ Process	Process
Diagnostic event simulation	–	Select a diagnostic event to simulate this event.	■ Off ■ Diagnostic event picklist (depends on the category selected)	Off

10.9 Protecting settings from unauthorized access

The following options exist for protecting the configuration of the measuring device from unintentional modification after commissioning:

- Write protection via access code
- Write protection via write protection switch
- Write protection via keypad lock →  54

10.9.1 Write protection via access code

With the customer-specific access code, the parameters for the measuring device configuration are write-protected and their values can no longer be changed via local operation.

Navigation

"Setup" menu → Advanced setup → Administration → Define access code

▶ Define access code

Defining the access code via local display

1. Navigate to the **Enter access code** parameter.
2. Max. Define a max. 4-digit numeric code as an access code.
3. Enter the access code again to confirm the code.
 - ↳ The -symbol appears in front of all write-protected parameters.


The device automatically locks the write-protected parameters again if a key is not pressed for 10 minutes in the navigation and editing view. The device locks the write-protected parameters automatically after 60 s if the user skips back to the operational display mode from the navigation and editing view.



- If write access is activated via access code, it can be also be deactivated only via the access code → 54.
- The user role with which the user is currently logged on via the local display → 54 is indicated by the **Access status display** parameter. Navigation path: "Operation" menu → Access status display

Parameters which can always be modified via the local display

Certain parameters that do not affect the measurement are excepted from write protection via the local display. Despite the defined access code, these parameters can always be modified even if the other parameters are locked.

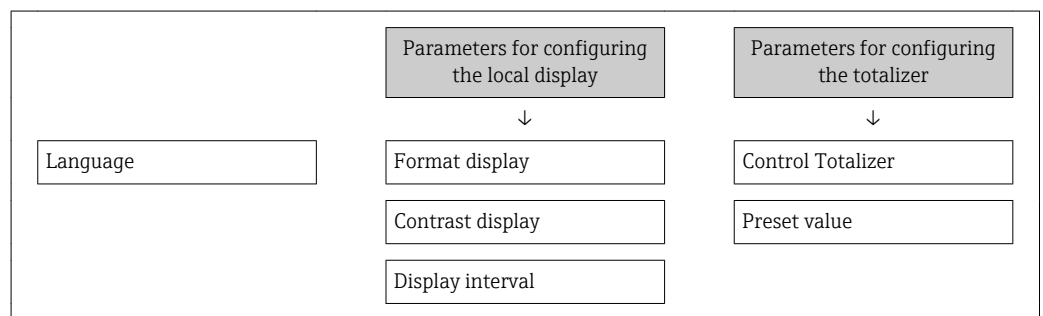


10.9.2 Write protection via write protection switch

Unlike write protection via a user-specific access code, this allows write access to the entire operating menu - other than the **"Contrast display" parameter** - to be locked.

The parameter values are now read only and cannot be edited any more (exception **"Contrast display" parameter**):

- Via local display
- Via PROFIBUS PA protocol

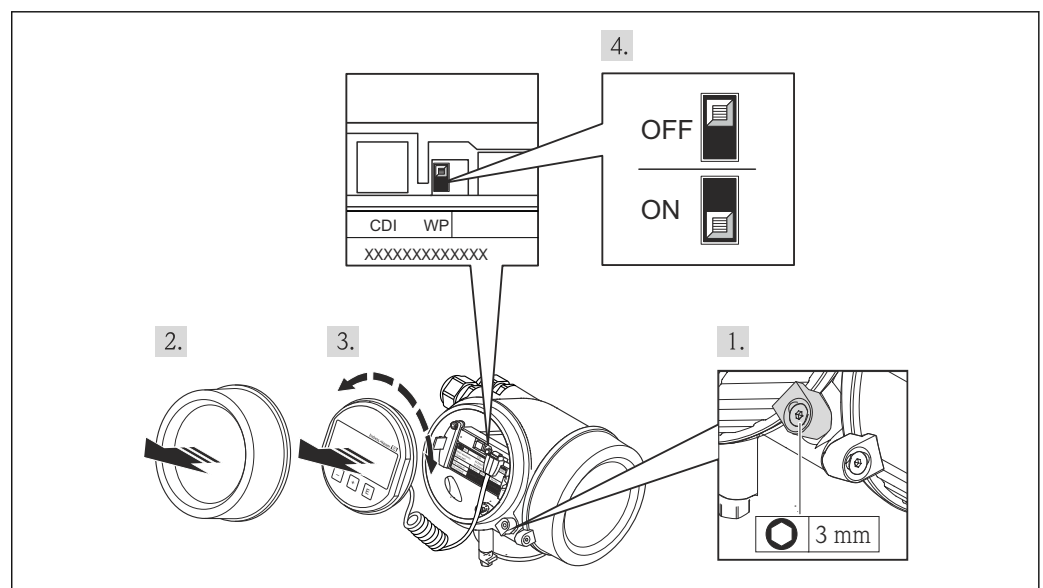


A0025794

1. Loosen the securing clamp.
2. Unscrew the electronics compartment cover.

3. Pull out the display module with a gentle rotational movement. To make it easier to access the write protection switch, attach the display module to the edge of the electronics compartment.


↳ Display module is attached to the edge of the electronics compartment.

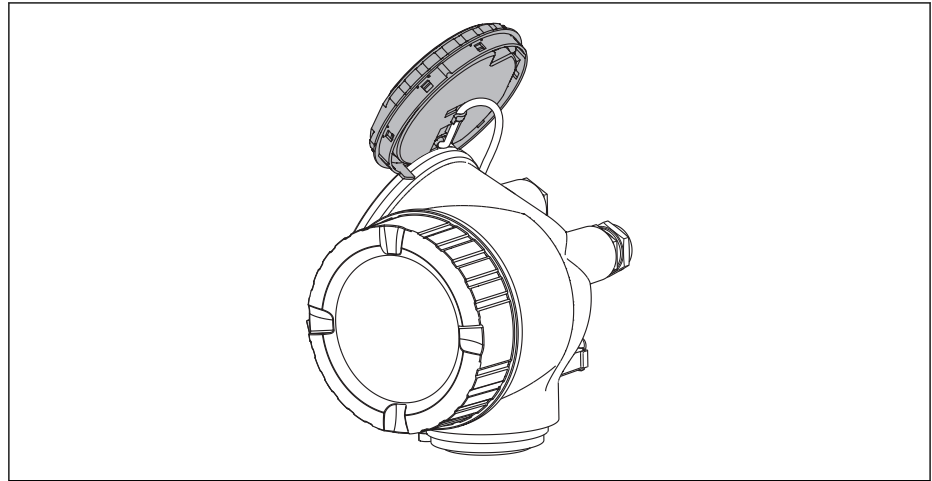

A0013909

4. Setting the write protection switch (WP) on the main electronics module to the **ON** position enables hardware write protection. Setting the write protection switch (WP) on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.

↳ If hardware write protection is enabled, the **Locking status** parameter displays the **Hardware locked** option. In addition, on the local display the -symbol appears in front of the parameters in the header of the operational display and in the navigation view.

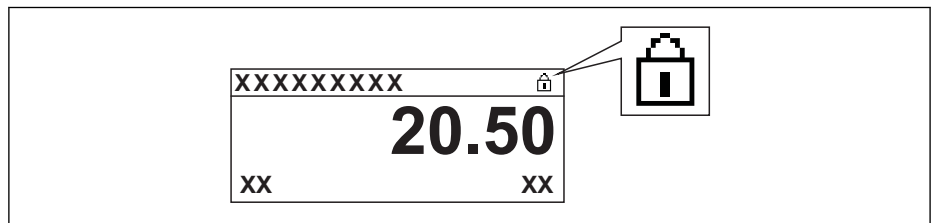

A0015870

If hardware write protection is disabled, no option is displayed in the **Locking status** parameter. On the local display, the -symbol disappears from in front of the parameters in the header of the operational display and in the navigation view.

5. Feed the cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment in the desired direction until it engages.
6. Reverse the removal procedure to reassemble the transmitter.

11 Operation

11.1 Reading the device locking status

Device active write protection: **Locking status** parameter

Navigation

"Operation" menu → Locking status

Function scope of the "Locking status" parameter

Options	Description
None	The access status displayed in " Access status display " parameter applies →  54. Only appears on local display.
Hardware locked	The DIP switch for hardware locking is activated on the main electronics module. This prevents write access to the parameters .
Temporarily locked	Write access to the parameters is temporarily lock due to device-internal processing (e.g. data upload/download, reset). Once the internal processing has been completed, the parameters can be changed once again.

11.2 Adjusting the operating language

Information →  66

 For information on the operating languages supported by the measuring device
→  148

11.3 Configuring the display

- Basic settings for local display →  71
- Advanced settings for local display →  86

11.4 Reading measured values

With the **Measured values** submenu, it is possible to read all the measured values.

11.4.1 Process variables

The **Process variables** submenu contains all the parameters needed to display the current measured values for every process variable.

Navigation

"Diagnostics" menu → Measured values → Process variables

► Process variables

Volume flow

Mass flow

Parameter overview with brief description


Parameter	Description	User interface
Volume flow	Displays the volume flow currently measured. <i>Dependency</i> The unit is taken from the Volume flow unit parameter	Signed floating-point number
Mass flow	Displays the mass flow currently calculated. <i>Dependency</i> The unit is taken from the Mass flow unit parameter	Signed floating-point number

11.4.2 Totalizer

The **Totalizer** submenu contains all the parameters needed to display the current measured values for every totalizer.

Navigation

"Diagnostics" menu → Measured values → Totalizer 1 to 3

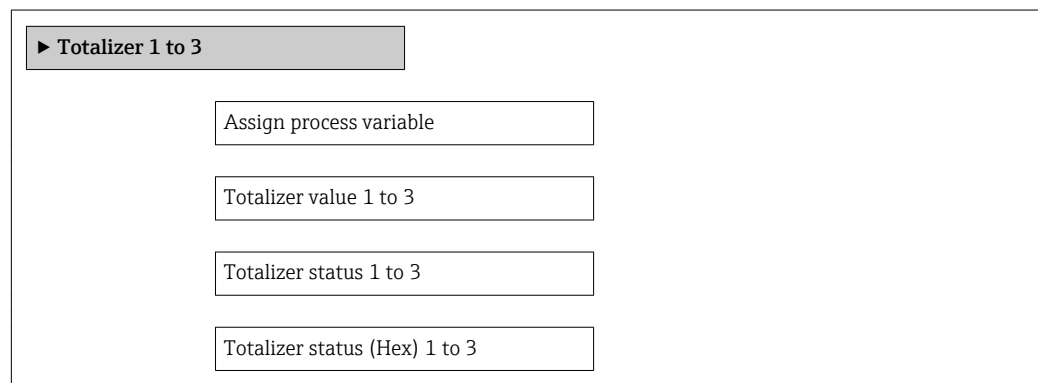

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Assign process variable	–	Select process variable for totalizer.	■ Volume flow ■ Mass flow	Volume flow
Totalizer value 1 to 3	In the Assign process variable parameter one of the following options is selected: ■ Volume flow ■ Mass flow ■ Corrected volume flow ■ Total mass flow ■ Condensate mass flow ■ Energy flow ■ Heat flow difference	Displays the current totalizer counter value.	Signed floating-point number	0 m ³
Totalizer status 1 to 3	–	Displays the current totalizer status.	■ Good ■ Uncertain ■ Bad	–
Totalizer status (Hex) 1 to 3	In Target mode parameter, the Auto option is selected.	Displays the current status value (hex) of the totalizer.	0 to 0xFF	–

11.5 Adapting the measuring device to the process conditions

The following are available for this purpose:

- Basic settings using the **Setup** menu
- Advanced settings using the **Advanced setup** submenu

11.6 Performing a totalizer reset

In the **Operation** submenu the totalizers are reset:
Control Totalizer

Function scope of the "Control Totalizer" parameter

Options	Description
Totalize	The totalizer is started.
Reset + hold	The totaling process is stopped and the totalizer is reset to 0.
Preset + hold	The totaling process is stopped and the totalizer is set to its defined start value from the Preset value 1 to 3 parameter.
Stop totalizing option	Totalizing is stopped.

Navigation

"Operation" menu → Operation

► Totalizer handling

Control Totalizer 1 to 3

Preset value 1 to 3

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Control Totalizer	One of the following options is selected in the Assign process variable parameter: ■ Volume flow ■ Mass flow	Control totalizer value.	■ Totalize ■ Reset + hold ■ Preset + hold	Totalize
Preset value	In the Assign process variable parameter one of the following options is selected: ■ Volume flow ■ Mass flow ■ Corrected volume flow ■ Total mass flow ■ Condensate mass flow ■ Energy flow ■ Heat flow difference	Specify start value for totalizer.	Signed floating-point number	0 m ³
Reset all totalizers	–	Reset all totalizers to 0 and start.	■ Cancel ■ Reset + totalize	Cancel


11.7 Showing data logging

The **Extended HistoROM** application package must be enabled in the device (order option) for the **Data logging** submenu to appear. This contains all the parameters for the measured value history.

 The measured value history is also accessible via the FieldCare plant asset management tool →  57.

Function scope

- A total of 1000 measured values can be stored
- 4 logging channels
- Adjustable logging interval for data logging
- Display of the measured value trend for each logging channel in the form of a chart

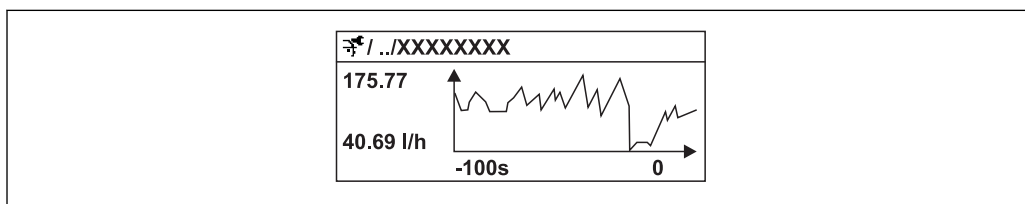

A0016222

 26 Chart of a measured value trend


- x-axis: depending on the number of channels selected displays 250 to 1000 measured values of a process variable.
- y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.

 If the length of the logging interval or the assignment of the process variables to the channels is changed, the content of the data logging is deleted.

Navigation

"Diagnostics" menu → Data logging

"Data logging" submenu

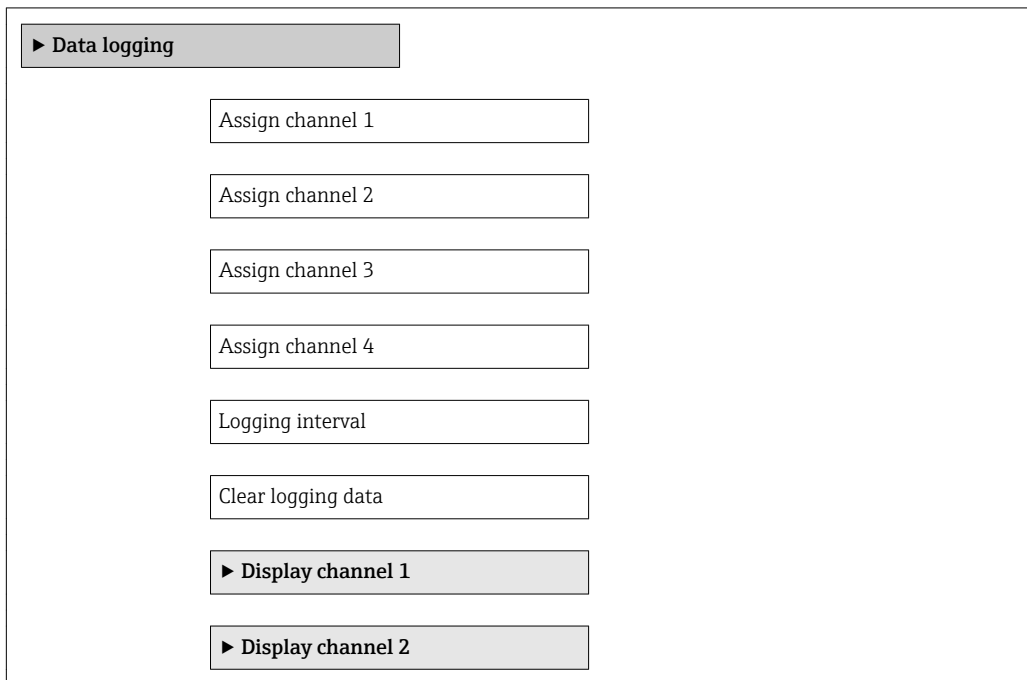

The figure shows the "Data logging" submenu interface. It features a header bar with the text "► Data logging". Below this, there are several input fields and buttons arranged vertically:

- Assign channel 1
- Assign channel 2
- Assign channel 3
- Assign channel 4
- Logging interval
- Clear logging data
- Display channel 1
- Display channel 2

 The "Assign channel" fields and "Display channel" buttons are highlighted with a light gray background.

► Display channel 3 ► Display channel 4

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign channel 1 to 4	The Extended HistoROM application package is available.  The software options currently enabled are displayed in the Software option overview parameter.	Assign process variable to logging channel.	■ Off ■ Volume flow ■ Mass flow ■ Electronic temperature ■ Current difference potential	Off
Logging interval	The Extended HistoROM application package is available.  The software options currently enabled are displayed in the Software option overview parameter.	Define the logging interval for data logging. This value defines the time interval between the individual data points in the memory.	1.0 to 3 600.0 s	10.0 s
Clear logging data	The Extended HistoROM application package is available.  The software options currently enabled are displayed in the Software option overview parameter.	Clear the entire logging data.	■ Cancel ■ Clear data	Cancel

12 Diagnostics and troubleshooting

12.1 General troubleshooting

For local display

Problem	Possible causes	Remedy
Local display dark and no output signals	Supply voltage does not match the value indicated on the nameplate.	Apply the correct supply voltage .
Local display dark and no output signals	The polarity of the supply voltage is wrong.	Correct the polarity.
Local display dark and no output signals	No contact between connecting cables and terminals.	Check the connection of the cables and correct if necessary.
Local display dark and no output signals	Terminals are not plugged into the I/O electronics module correctly.	Check terminals.
Local display dark and no output signals	I/O electronics module is defective.	Order spare part → 129.
Local display is dark, but signal output is within the valid range	Display is set too bright or too dark.	- Set the display brighter by simultaneously pressing $\boxplus$ + $\boxminus$. - Set the display darker by simultaneously pressing $\boxminus$ + $\boxplus$.
Local display is dark, but signal output is within the valid range	The cable of the display module is not plugged in correctly.	Insert the plug correctly into the main electronics module and display module.
Local display is dark, but signal output is within the valid range	Display module is defective.	Order spare part → 129.
Backlighting of local display is red	Diagnostic event with "Alarm" diagnostic behavior has occurred.	Perform remedial measures → 109
Text on local display appears in a foreign language and cannot be understood.	Incorrect operating language is configured.	- Press 2 s $\boxplus$ + $\boxplus$ ("home position"). - Press $\boxminus$. - Set the desired language in the Language parameter.
Message on local display: "Communication Error" "Check Electronics"	Communication between the display module and the electronics is interrupted.	- Check the cable and the connector between the main electronics module and display module. - Order spare part → 129.

For output signals

Problem	Possible causes	Remedy
Signal output outside the valid range	Main electronics module is defective.	Order spare part → 129.
Device shows correct value on local display, but signal output is incorrect, though in the valid range.	Configuration error	Check and correct the parameter configuration.
Device measures incorrectly.	Configuration error or device is operated outside the application.	- Check and correct parameter configuration. - Observe limit values specified in the "Technical Data".


For access

Problem	Possible causes	Remedy
No write access to parameters	Hardware write protection enabled	Set the write protection switch on the main electronics module to the OFF position .
No write access to parameters	Current user role has limited access authorization	1. Check user role →  54. 2. Enter correct customer-specific access code →  54.
No connection via service interface	Incorrect configuration of USB interface on PC or driver not installed correctly.	Observe the documentation for the Commubox.  FXA291: Document "Technical Information" TI00405C

12.2 Diagnostic information on local display

12.2.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the operational display.

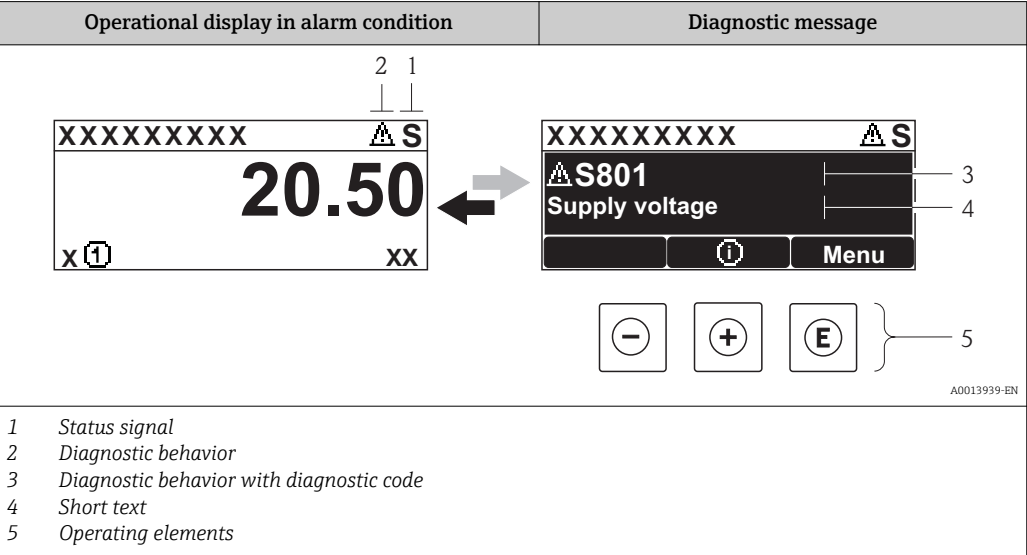

If two or more diagnostic events are pending simultaneously, only the message of the diagnostic event with the highest priority is shown.

- Other diagnostic events that have occurred can be called up in the **Diagnostics** menu:
 - Via parameters → 121
 - Via submenus → 122

Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

- The status signals are categorized according to VDI/VDE 2650 and NAMUR Recommendation NE 107: F = Failure, C = Function Check, S = Out of Specification, M = Maintenance Required


Symbol	Meaning
F A0013956	Failure A device error has occurred. The measured value is no longer valid.
C A0013959	Function check The device is in service mode (e.g. during a simulation).
S A0013958	Out of specification The device is operated: Outside its technical specification limits (e.g. outside the process temperature range)
M A0013957	Maintenance required Maintenance is required. The measured value remains valid.

Diagnostic behavior

Symbol	Meaning
 A0013961	Alarm ■ Measurement is interrupted. ■ Signal outputs and totalizers assume the defined alarm condition. ■ A diagnostic message is generated. ■ For local display with touch control: the background lighting changes to red.
 A0013962	Warning Measurement is resumed. The signal outputs and totalizers are not affected. A diagnostic message is generated.

Diagnostic information


The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

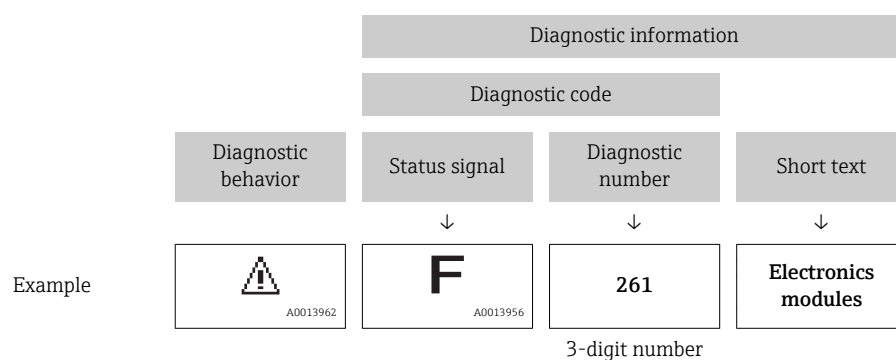

Operating elements

Key	Meaning
 A0013970	Plus key <i>In a menu, submenu</i> Opens the message about remedy information.
 A0013952	Enter key <i>In a menu, submenu</i> Opens the operating menu.

12.2.2 Calling up remedial measures

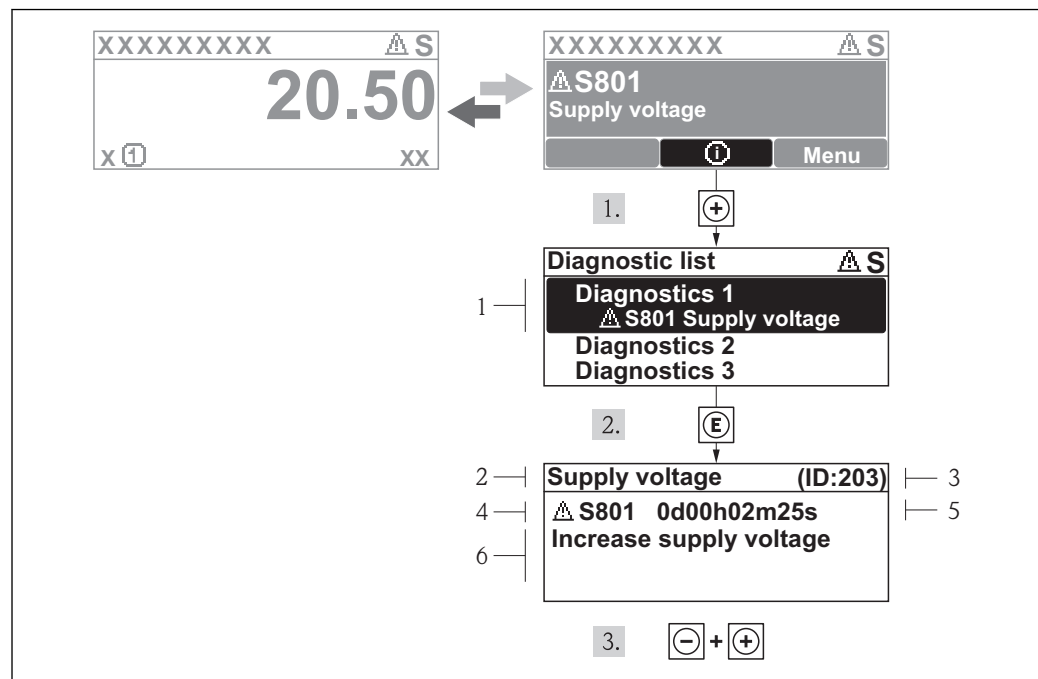

A0013940-EN

27 Message for remedial measures

- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time of occurrence
- 6 Remedial measures

The user is in the diagnostic message.

1. Press **+** (**i** symbol).
↳ The **Diagnostic list** submenu opens.
2. Select the desired diagnostic event with **+** or **-** and press **E**.
↳ The message for the remedial measures for the selected diagnostic event opens.
3. Press **-** + **+** simultaneously.
↳ The message for the remedial measures closes.


The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in the **Diagnostic list** submenu or the **Previous diagnostics** parameter.

1. Press **E**.
↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press **-** + **+** simultaneously.
↳ The message for the remedial measures closes.

12.3 Diagnostic information in FieldCare

12.3.1 Diagnostic options

Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

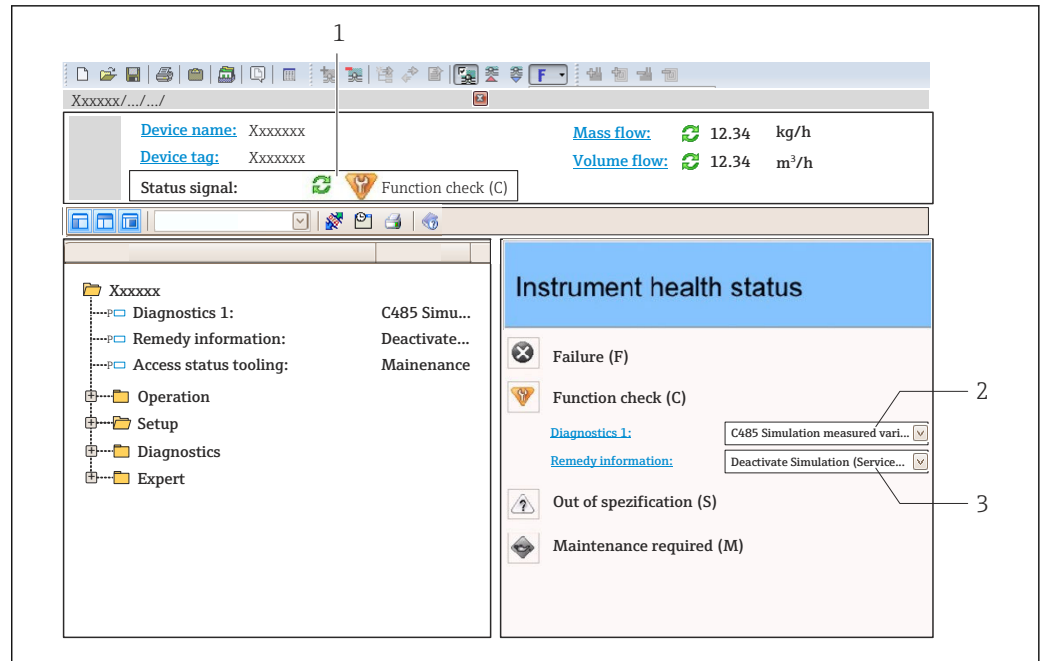

A0021799-EN


- 1 Status area with status signal → 102
- 2 Diagnostic information → 103
- 3 Remedy information with Service ID

i Furthermore, diagnostic events that have occurred can be viewed in the **Diagnostics** menu:

- Via parameter → 121
- Via submenu → 122

Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

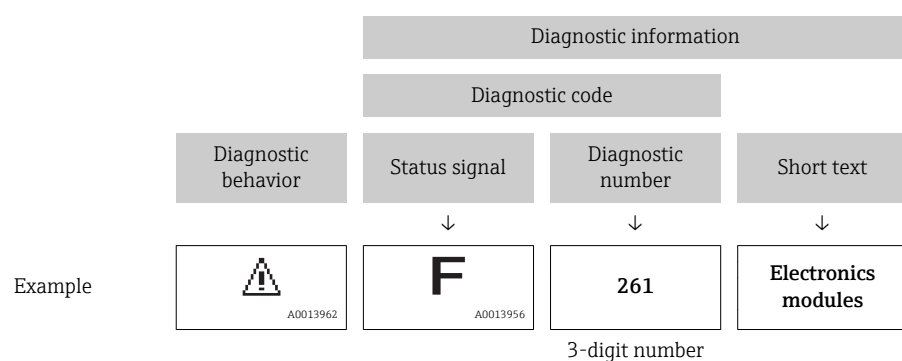

12.3.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

- On the home page
Remedy information is displayed in a separate field below the diagnostics information.
- In the **Diagnostics** menu
Remedy information can be called up in the working area of the user interface.

The user is in the **Diagnostics** menu.

1.
2.
- ↳
- Call up the desired parameter.
- On the right in the working area, mouse over the parameter.
- A tool tip with remedy information for the diagnostic event appears.

12.4 Adapting the diagnostic information

12.4.1 Adapting the measured value and device status

Measured value status

Each diagnostic number is assigned a specific measured value status at the factory. The user can change this assignment for specific diagnostic numbers via the **Var. status xx** parameter.

Navigation path

"Expert" menu → System → Diagnostic handling → Condensed status →Assign behavior of measured value status xx

🔧 / ../Condensed statu. 1421-1

Var. status: 44

Uncert.:Proc.(S)

Dev.status: 44

Var. status: 46

A0019175-EN

Quality	Substatus	Status (hex)	Event category	Event class
GOOD	None	0x80	–	–
GOOD	Maintenance required	0xA4	M	Warning
GOOD	Maintenance demanded	0xA8	M	Warning
GOOD	Function check	0xBC	–	–
BAD	Maintenance alarm	0x24	F	Alarm
BAD	Process related, no maintenance	0x28	F	Alarm
BAD	Function check	0x3C	C	Warning
UNCERTAIN	Maintenance demanded	0x68	M	Warning
UNCERTAIN	Process related, no maintenance	0x78	S	Warning

Device status

Each diagnostic number is assigned a specific device status at the factory. The user can change this assignment for specific diagnostic numbers via the **Dev. status xx** parameter.

Navigation path

"Expert" menu → System → Diagnostic handling → Condensed status →Assign behavior of device status xx

🔧 / ../Condensed statu. 1405-1

Var. status: 44

Dev.status: 44

Inval.proc.cond

Var. status: 46

A0019186-EN


Mnemonic	Octet	Bit
Maintenance required	2	5
Maintenance alarm	3	0
Maintenance demanded	3	1
Function check	3	2
Invalid process conditions	3	3

12.4.2 Adapting the diagnostic behavior

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for certain diagnostic information in the **Diagnostic behavior** submenu.

 Diagnostic behavior in accordance with Specification PROFIBUS Profile 3.02, Condensed Status.

"Expert" menu → System → Diagnostic handling → Diagnostic behavior

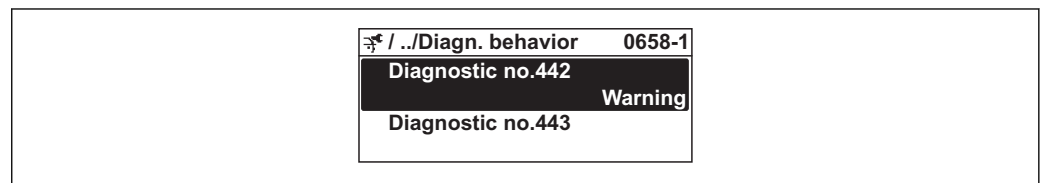

A0019179-EN


Available diagnostic behaviors

The following diagnostic behaviors can be assigned:

Diagnostic behavior	Description
Alarm	Measurement is interrupted. The totalizers assume the defined alarm condition. A diagnostic message is generated. For local display with touch control: the background lighting changes to red.
Warning	Measurement is resumed. Measured value output via PROFIBUS and totalizers are not affected. A diagnostic message is generated.
Logbook entry only	The device continues to measure. The diagnostic message is entered in the Event logbook (events list) submenu only and is not displayed in alternation with the measured value display.
Off	The diagnostic event is ignored, and no diagnostic message is generated or entered.

Displaying the measured value status

If the Analog Input, Digital Input and Totalizer function blocks are configured for cyclic data transmission, the device status is coded as per PROFIBUS Profile Specification 3.02 and transmitted along with the measured value to the PROFIBUS Master (Class 1) via the coding byte (byte 5). The coding byte is split into three segments: Quality, Quality Substatus and Limits.

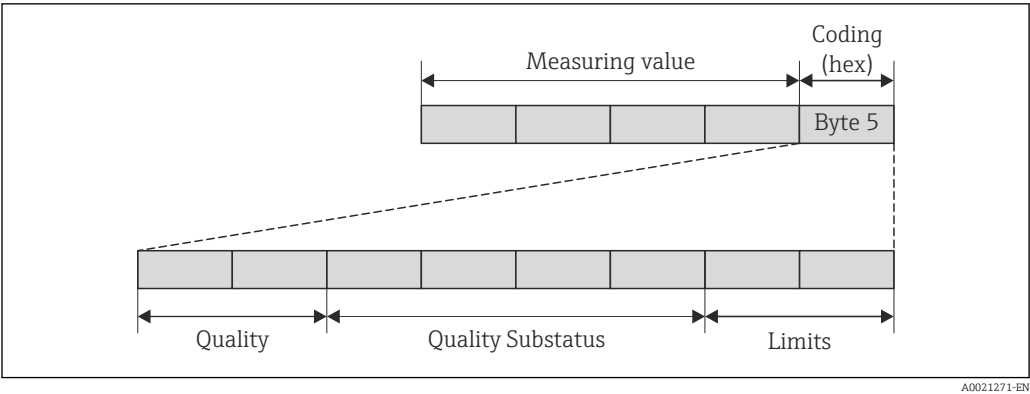

28 Structure of the coding byte

The content of the coding byte depends on the configured failsafe mode in the particular function block. Depending on which failsafe mode has been configured, status information in accordance with PROFIBUS Profile Specification 3.02 is transmitted to the PROFIBUS Master (Class 1) via the coding byte.

Determining the measured value status and device status via the diagnostic behavior

When the diagnostic behavior is assigned, this also changes the measured value status and device status for the diagnostic information. The measured value status and device status depend on the choice of diagnostic behavior and the group in which the diagnostic information is located. The measured value status and device status are firmly assigned to the particular diagnostic behavior and cannot be changed individually.

The diagnostic information is grouped as follows:

- Diagnostic information pertaining to the sensor: diagnostic number 000 to 199
→ 108
- Diagnostic information pertaining to the electronics: diagnostic number 200 to 399
→ 109
- Diagnostic information pertaining to the configuration: diagnostic number 400 to 599
→ 109
- Diagnostic information pertaining to the process: diagnostic number 800 to 999
→ 109

Depending on the group in which diagnostic information is located, the following measured value status and device status are firmly assigned to the particular diagnostic behavior:

Diagnostic information pertaining to the sensor (diagnostic no.: 000 to 199)

Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnostics (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Alarm	BAD	Maintenance alarm	0x24 to 0x27	F (Failure)	Maintenance alarm
Warning	GOOD	Maintenance demanded	0xA8 to 0xAB	M (Maintenance)	Maintenance demanded
Logbook entry only	GOOD	ok	0x80 to 0x8E	–	–
Off					

Diagnostic information pertaining to the electronics (diagnostic no.: 200 to 399)

Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnostics (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Alarm	BAD	Maintenance alarm	0x24 to 0x27	F (Failure)	Maintenance alarm
Warning					
Logbook entry only	GOOD	ok	0x80 to 0x8E	–	–
Off					

Diagnostic information pertaining to the configuration (diagnostic no.: 400 to 599)

Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnostics (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Alarm	BAD	Process related	0x28 to 0x2B	F (Failure)	Invalid process condition
Warning	UNCERTAIN	Process related	0x78 to 0x7B	S (Out of specification)	Invalid process condition
Logbook entry only	GOOD	ok	0x80 to 0x8E	–	–
Off					

Diagnostic information pertaining to the process (diagnostic no.: 800 to 999)

Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnostics (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Alarm	BAD	Process related	0x28 to 0x2B	F (Failure)	Invalid process condition
Warning	UNCERTAIN	Process related	0x78 to 0x7B	S (Out of specification)	Invalid process condition
Logbook entry only	GOOD	ok	0x80 to 0x8E	–	–
Off					

12.5 Overview of diagnostic information

 The amount of diagnostic information and the number of measured variables affected increase if the measuring device has one or more application packages.

 In the case of some items of diagnostic information, the diagnostic behavior can be changed. Change the diagnostic information →  106

12.5.1 Diagnostic of sensor

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
004	Sensor		1. Change sensor 2. Contact service	■ Empty pipe detection ■ Low flow cut off ■ Mass flow ■ Switch output status ■ Volume flow
	Measuring variable status [from the factory] ¹⁾			
	Quality	Uncertain		
	Quality substatus	Process related		
	Coding (hex)	0x78 to 0x7B		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
082	Data storage		1. Change main electronic module 2. Change sensor	■ Empty pipe detection ■ Low flow cut off ■ Mass flow ■ Switch output status ■ Volume flow
	Measuring variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
083	Memory content		1. Restart device 2. Restore S-Dat data 3. Change sensor	■ Empty pipe detection ■ Low flow cut off ■ Mass flow ■ Switch output status ■ Volume flow
	Measuring variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

12.5.2 Diagnostic of electronic

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
222	Electronic drift		Change main electronic module	■ Empty pipe detection ■ Low flow cut off ■ Mass flow ■ Switch output status ■ Volume flow
	Measuring variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
242	Software incompatible		1. Check software 2. Flash or change main electronics module	▪ Empty pipe detection ▪ Low flow cut off ▪ Mass flow ▪ Switch output status ▪ Volume flow
	Measuring variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
252	Modules incompatible		1. Check electronic modules 2. Change I/O or main electronic module	▪ Empty pipe detection ▪ Low flow cut off ▪ Mass flow ▪ Switch output status ▪ Volume flow
	Measuring variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
261	Electronic modules		1. Restart device 2. Check electronic modules 3. Change I/O Modul or main electronics	▪ Empty pipe detection ▪ Low flow cut off ▪ Mass flow ▪ Switch output status ▪ Volume flow
	Measuring variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
262	Module connection		1. Check module connections 2. Change electronic modules	▪ Empty pipe detection ▪ Low flow cut off ▪ Mass flow ▪ Switch output status ▪ Volume flow
	Measuring variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information		Remedy instructions	Influenced measuring variables
No.	Short text		
270	Main electronic failure	Change main electronic module	■ Empty pipe detection ■ Low flow cut off ■ Mass flow ■ Switch output status ■ Status ■ Volume flow
	Measuring variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measuring variables
No.	Short text		
271	Main electronic failure	1. Restart device 2. Change main electronic module	■ Empty pipe detection ■ Low flow cut off ■ Mass flow ■ Switch output status ■ Volume flow
	Measuring variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measuring variables
No.	Short text		
272	Main electronic failure	1. Restart device 2. Contact service	■ Empty pipe detection ■ Low flow cut off ■ Mass flow ■ Switch output status ■ Volume flow
	Measuring variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measuring variables
No.	Short text		
273	Main electronic failure	1. Emergency operation via display 2. Change main electronics	■ Empty pipe detection ■ Low flow cut off ■ Mass flow ■ Switch output status ■ Volume flow
	Measuring variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
275	I/O module failure		Change I/O module	▪ Empty pipe detection ▪ Low flow cut off ▪ Mass flow ▪ Switch output status ▪ Volume flow
	Measuring variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
276	I/O module failure		1. Restart device 2. Change I/O module	▪ Empty pipe detection ▪ Low flow cut off ▪ Mass flow ▪ Switch output status ▪ Volume flow
	Measuring variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
282	Data storage		1. Restart device 2. Contact service	■ Empty pipe detection ■ Low flow cut off ■ Mass flow ■ Switch output status ■ Volume flow
	Measuring variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
283	Memory content		1. Transfer data or reset device 2. Contact service	▪ Empty pipe detection ▪ Low flow cut off ▪ Mass flow ▪ Switch output status ▪ Volume flow
	Measuring variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
302	Device verification active		Device verification active, please wait.	■ Empty pipe detection ■ Mass flow ■ Switch output status ■ Status ■ Volume flow
	Measuring variable status			
	Quality	Good		
	Quality substatus	Function check		
	Coding (hex)	0xBC to 0xBF		
	Status signal	C		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
311	Electronic failure		1. Transfer data or reset device 2. Contact service	■ Empty pipe detection ■ Low flow cut off ■ Mass flow ■ Switch output status ■ Volume flow
	Measuring variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
311	Electronic failure		Maintenance required! 1. Do not perform reset 2. Contact service	■ Empty pipe detection ■ Low flow cut off ■ Mass flow ■ Switch output status ■ Volume flow
	Measuring variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	M		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
323	Electronic drift		1. Perform verification manually 2. Change electronic	–
	Measuring variable status			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	F		
	Diagnostic behavior	Alarm		

12.5.3 Diagnostic of configuration

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
410	Data transfer		1. Check connection 2. Retry data transfer	▪ Empty pipe detection ▪ Low flow cut off ▪ Mass flow ▪ Switch output status ▪ Volume flow
	Measuring variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
411	Up-/download active		Up-/download active, please wait	▪ Empty pipe detection ▪ Low flow cut off ▪ Mass flow ▪ Switch output status ▪ Volume flow
	Measuring variable status			
	Quality	Bad		
	Quality substatus	Function check		
	Coding (hex)	0x3C to 0x3F		
	Status signal	C		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
412	Processing Download		Download active, please wait	▪ Empty pipe detection ▪ Low flow cut off ▪ Mass flow ▪ Switch output status ▪ Volume flow
	Measuring variable status			
	Quality	Uncertain		
	Quality substatus	Initial value		
	Coding (hex)	0x4C to 0x4F		
	Status signal	C		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
437	Configuration incompatible		1. Restart device 2. Contact service	▪ Empty pipe detection ▪ Low flow cut off ▪ Mass flow ▪ Switch output status ▪ Volume flow
	Measuring variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
438	Dataset		1. Check data set file 2. Check device configuration 3. Up- and download new configuration	■ Empty pipe detection ■ Low flow cut off ■ Mass flow ■ Switch output status ■ Volume flow
	Measuring variable status			
	Quality	Uncertain		
	Quality substatus	Maintenance demanded		
	Coding (hex)	0x68 to 0x6B		
	Status signal	M		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
442	Frequency output		1. Check process 2. Check frequency output settings	–
	Measuring variable status [from the factory] ¹⁾			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
443	Pulse output		1. Check process 2. Check pulse output settings	–
	Measuring variable status [from the factory] ¹⁾			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
453	Flow override		Deactivate flow override	▪ Empty pipe detection ▪ Low flow cut off ▪ Mass flow ▪ Switch output status ▪ Volume flow
	Measuring variable status			
	Quality	Good		
	Quality substatus	Function check		
	Coding (hex)	0xBC to 0xBF		
	Status signal	C		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
482	FB not Auto/Cas		Set Block in AUTO mode	–
	Measuring variable status			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
484	Simulation failure mode		Deactivate simulation	■ Empty pipe detection ■ Low flow cut off ■ Mass flow ■ Switch output status ■ Volume flow
	Measuring variable status			
	Quality	Bad		
	Quality substatus	Function check		
	Coding (hex)	0x3C to 0x3F		
	Status signal	C		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
485	Simulation measured variable		Deactivate simulation	▪ Empty pipe detection ▪ Low flow cut off ▪ Mass flow ▪ Switch output status ▪ Volume flow
	Measuring variable status			
	Quality	Good		
	Quality substatus	Function check		
	Coding (hex)	0xBC to 0xBF		
	Status signal	C		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
492	Simulation frequency output		Deactivate simulation frequency output	▪ Empty pipe detection ▪ Low flow cut off ▪ Mass flow ▪ Switch output status ▪ Volume flow
	Measuring variable status			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	C		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
493	Simulation pulse output		Deactivate simulation pulse output	■ Empty pipe detection ■ Low flow cut off ■ Mass flow ■ Switch output status ■ Volume flow
	Measuring variable status			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	C		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
494	Switch output simulation		Deactivate simulation switch output	■ Empty pipe detection ■ Low flow cut off ■ Mass flow ■ Switch output status ■ Volume flow
	Measuring variable status			
	Quality	Good		
	Quality substatus	Function check		
	Coding (hex)	0xBC to 0xBF		
	Status signal	C		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
495	Diagnostic event simulation		Deactivate simulation	–
	Measuring variable status			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	C		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
497	Simulation block output		Deactivate simulation	–
	Measuring variable status			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	C		
	Diagnostic behavior	Warning		

Diagnostic information		Remedy instructions	Influenced measuring variables
No.	Short text		
531	Empty pipe detection	Execute EPD adjustment	■ Empty pipe detection ■ Low flow cut off ■ Mass flow ■ Switch output status ■ Volume flow
	Measuring variable status [from the factory] ¹⁾		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

12.5.4 Diagnostic of process

Diagnostic information		Remedy instructions	Influenced measuring variables
No.	Short text		
801	Supply voltage too low	Increase supply voltage	■ Empty pipe detection ■ Low flow cut off ■ Mass flow ■ Switch output status ■ Volume flow
	Measuring variable status [from the factory] ¹⁾		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions	Influenced measuring variables
No.	Short text		
832	Electronic temperature too high	Reduce ambient temperature	■ Empty pipe detection ■ Low flow cut off ■ Mass flow ■ Switch output status ■ Volume flow
	Measuring variable status [from the factory] ¹⁾		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
833	Electronic temperature too low		Increase ambient temperature	■ Empty pipe detection ■ Low flow cut off ■ Mass flow ■ Switch output status ■ Volume flow
	Measuring variable status [from the factory] ¹⁾			
	Quality	Uncertain		
	Quality substatus	Process related		
	Coding (hex)	0x78 to 0x7B		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
842	Process limit		Low flow cut off active! 1. Check low flow cut off configuration	■ Empty pipe detection ■ Low flow cut off ■ Mass flow ■ Switch output status ■ Volume flow
	Measuring variable status			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
861	Process fluid		Check process conditions	■ Empty pipe detection ■ Low flow cut off ■ Mass flow ■ Switch output status ■ Volume flow
	Measuring variable status [from the factory] ¹⁾			
	Quality	Bad		
	Quality substatus	Process related		
	Coding (hex)	0x28 to 0x2B		
	Status signal	F		
	Diagnostic behavior	Alarm		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
862	Empty pipe		1. Check for gas in process 2. Adjust empty pipe detection	■ Empty pipe detection ■ Low flow cut off ■ Mass flow ■ Switch output status ■ Volume flow
	Measuring variable status [from the factory] ¹⁾			
	Quality	Uncertain		
	Quality substatus	Process related		
	Coding (hex)	0x78 to 0x7B		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
937	EMC interference		Change main electronic module	■ Empty pipe detection ■ Low flow cut off ■ Mass flow ■ Switch output status ■ Volume flow
	Measuring variable status [from the factory] ¹⁾			
	Quality	Uncertain		
	Quality substatus	Process related		
	Coding (hex)	0x78 to 0x7B		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measuring variables
No.	Short text			
937	EMC interference		Change main electronic module	■ Empty pipe detection ■ Mass flow ■ Switch output status ■ Volume flow
	Measuring variable status [from the factory] ¹⁾			
	Quality	Uncertain		
	Quality substatus	Process related		
	Coding (hex)	0x78 to 0x7B		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

12.6 Pending diagnostic events

The **Diagnostics** menu allows the user to view the current diagnostic event and the previous diagnostic event separately.

 To call up the measures to rectify a diagnostic event:


- Via local display →  104
- Via "FieldCare" operating tool →  105

 Other pending diagnostic events can be displayed in the **Diagnostic list** submenu
→  122

Navigation

"Diagnostics" menu

Structure of the submenu

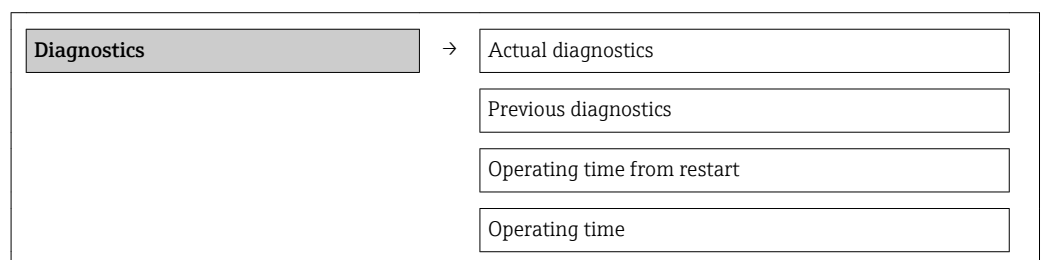

Parameter overview with brief description


Parameter	Prerequisite	Description	User interface
Actual diagnostics	A diagnostic event has occurred.	Shows the current occurred diagnostic event along with its diagnostic information.  If two or more messages occur simultaneously, the message with the highest priority is shown on the display.	Symbol for diagnostic behavior, diagnostic code and short message.
Previous diagnostics	Two diagnostic events have already occurred.	Shows the diagnostic event that occurred prior to the current diagnostic event along with its diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.
Operating time from restart	–	Shows the time the device has been in operation since the last device restart.	Days (d), hours (h), minutes (m) and seconds (s)
Operating time	–	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)

12.7 Diagnostic list

In the **Diagnostic list** submenu, up to 5 currently pending diagnostic events can be displayed along with the related diagnostic information. If more than 5 diagnostic events are pending, the events with the highest priority are shown on the display.

Navigation path

Diagnostics menu → **Diagnostic list** submenu

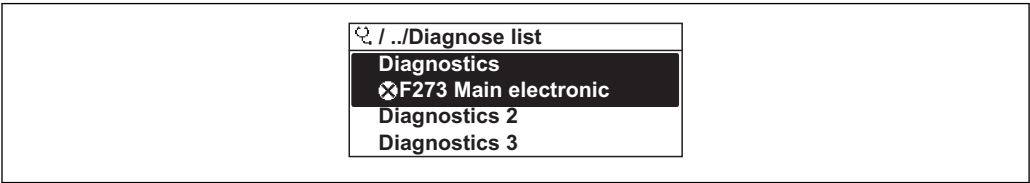


A0014006-EN

 29 Illustrated using the example of the local display

-  To call up the measures to rectify a diagnostic event:
- Via local display →  104
 - Via "FieldCare" operating tool →  105

12.8 Event logbook

12.8.1 Event history

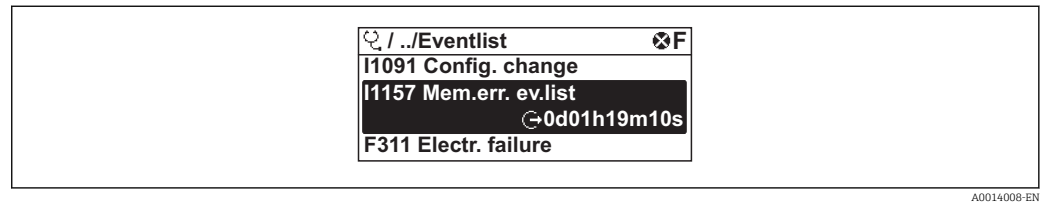

30 Taking the example of the local display

To call up the measures to rectify a diagnostic event:

- Via local display → 104
- Via "FieldCare" operating tool → 105

For filtering the displayed event messages → 123

12.8.2 Filtering the event logbook

Using the **Filter options** parameter, you can define which category of event messages is displayed in the **Events list** submenu.

Navigation path

"Diagnostics" menu → Event logbook → Filter options

Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

12.8.3 Overview of information events

Unlike a diagnostic event, an information event is displayed in the event logbook only and not in the diagnostic list.

Info number	Info name
I1000	----- (Device ok)
I1079	Sensor changed
I1089	Power on
I1090	Configuration reset
I1091	Configuration changed
I1092	Trend data deleted
I1110	Write protection switch changed
I1137	Electronic changed
I1151	History reset
I1154	Reset terminal voltage min/max
I1155	Reset electronic temperature
I1156	Memory error trend
I1157	Memory error event list

Info number	Info name
I1185	Display backup done
I1186	Restore via display done
I1187	Settings downloaded with display
I1188	Display data cleared
I1189	Backup compared
I1227	Sensor emergency mode activated
I1228	Sensor emergency mode failed
I1256	Display: access status changed
I1264	Safety sequence aborted
I1335	Firmware changed
I1351	Empty pipe detection adjustment failure
I1353	Empty pipe detection adjustment ok
I1397	Fieldbus: access status changed
I1398	CDI: access status changed
I1440	Main electronic module changed
I1442	I/O module changed
I1444	Device verification passed
I1445	Device verification failed
I1459	Failed: I/O module verification
I1461	Failed: Sensor verification
I1512	Download started
I1513	Download finished
I1514	Upload started
I1515	Upload finished
I1552	Failed: Main electronic verification
I1554	Safety sequence started
I1555	Safety sequence confirmed
I1556	Safety mode off

12.9 Resetting the measuring device

Using the **Device reset** parameter it is possible to reset the entire device configuration or some of the configuration to a defined state.

Navigation

"Setup" menu → Advanced setup → Administration → Device reset

▶ Administration

▶ Define access code

Define access code

Confirm access code

Device reset

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Device reset	Reset the device configuration - either entirely or in part - to a defined state.	■ Cancel ■ To fieldbus defaults * ■ To factory defaults ■ To delivery settings ■ Restart device	Cancel

* Visibility depends on communication

12.9.1 Function scope of the "Device reset" parameter

Options	Description
Cancel	No action is executed and the user exits the parameter.
To delivery settings	Every parameter for which a customer-specific default setting was ordered is reset to this customer-specific value. All other parameters are reset to the factory setting.
Restart device	The restart resets every parameter whose data are in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.
History reset	Every parameter is reset to the factory setting.

12.10 Device information

The **Device information** submenu contains all the parameters that display different information for identifying the device.

Navigation

"Diagnostics" menu → Device information

▶ Device information

Device tag

Serial number

Firmware version
Device name
Order code
Extended order code 1
Extended order code 2
Extended order code 3
ENP version

Parameter overview with brief description

Parameter	Description	User interface	Factory setting
Device tag	Display the name for the measuring point.	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /)	Promag 200 PA
Serial number	Shows the serial number of the measuring device.	A maximum of 11-digit character string comprising letters and numbers.	–
Firmware version	Shows the device firmware version installed.	Character string with the following format: xx.yy.zz	01.01.zz
Device name	Shows the name of the transmitter.  The name can be found on the nameplate of the transmitter.	Promag 200	–
Order code	Shows the device order code.  The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.	Character string composed of letters, numbers and certain punctuation marks (e.g. /).	–
Extended order code 1	Shows the 1st part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	–
Extended order code 2	Shows the 2nd part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	–
Extended order code 3	Shows the 3rd part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	–
ENP version	Shows the version of the electronic nameplate (ENP).		2.02.00

Parameter	Description	User interface	Factory setting
PROFIBUS ident number	Displays the PROFIBUS identification number.	0 to FFFF	0x1563
Status PROFIBUS Master Config	Displays the status of the PROFIBUS Master configuration.	■ Active ■ Not active	Not active

12.11 Firmware history

Release date	Firmware version	Order code for "Firmware version"	Firmware changes	Documentation type	Documentation
06.2015	01.00.zz	Option 77	Original firmware	Operating Instructions	BA01375D/06/EN/01.15

 Flashing the firmware to the current version or to the previous version is possible via the service interface (CDI) .

 For the compatibility of the firmware version with the previous version, the installed device description files and operating tools, observe the information about the device in the "Manufacturer's information" document.

 The manufacturer's information is available:

- In the Download Area of the Endress+Hauser Internet site: www.endress.com → Download
- Specify the following details:
 - Text search: Manufacturer's information
 - Search range: documentation

13 Maintenance

13.1 Maintenance tasks

No special maintenance work is required.

13.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

13.1.2 Interior cleaning

No interior cleaning is planned for the device.

13.1.3 Replacing seals

The sensor's seals (particularly aseptic molded seals) must be replaced periodically.

The interval between changes depends on the frequency of the cleaning cycles, the cleaning temperature and the medium temperature.

Replacement seals (accessory) →  150

13.2 Measuring and test equipment

Endress+Hauser offers a wide variety of measuring and test equipment, such as W@M or device tests.



Your Endress+Hauser Sales Center can provide detailed information on the services.



For a list of some of the measuring and test equipment, refer to the "Accessories" chapter of the "Technical Information" document for the device.

13.3 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.



Your Endress+Hauser Sales Center can provide detailed information on the services.

14 Repair

14.1 General notes

Repair and conversion concept

The Endress+Hauser repair and conversion concept provides for the following:

- The measuring devices have a modular design.
- Spare parts are grouped into logical kits with the associated Installation Instructions.
- Repairs are carried out by Endress+Hauser Service or by correspondingly trained customers.
- Certified devices can be converted into other certified devices by Endress+Hauser Service or at the factory only.

Notes for repair and conversion

For repair and modification of a measuring device, observe the following notes:


- Use only original Endress+Hauser spare parts.
- Carry out the repair according to the Installation Instructions.
- Observe the applicable standards, federal/national regulations, Ex documentation (XA) and certificates.
- Document every repair and each conversion and enter them into the *W@M* life cycle management database.

14.2 Spare parts

Some interchangeable measuring device components are listed on an overview sign in the connection compartment cover.

The spare part overview sign contains the following information:

- A list of the most important spare parts for the measuring device, including their ordering information.
- The URL for the *W@M Device Viewer* (www.endress.com/deviceviewer):
All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.

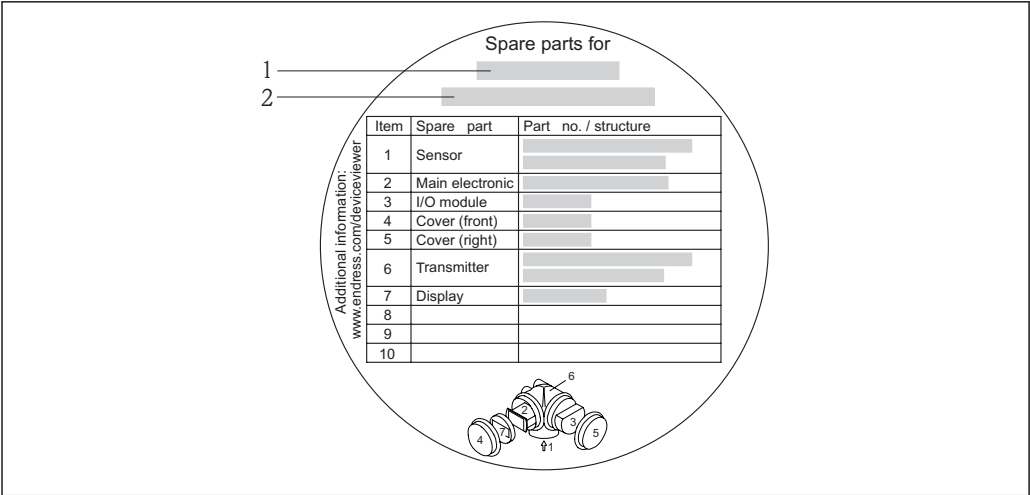

31 Example for "Spare part overview sign" in connection compartment cover

- 1 Measuring device name
- 2 Measuring device serial number

- i** Measuring device serial number:
 - Is located on the device nameplate and the spare part overview sign.
 - Can be read out via the **Serial number** parameter in the **Device information** submenu .

14.3 Endress+Hauser services

Endress+Hauser offers a wide range of services.

- i** Your Endress+Hauser Sales Center can provide detailed information on the services.

14.4 Return

The measuring device must be returned if it is need of repair or a factory calibration, or if the wrong measuring device has been delivered or ordered. Legal specifications require Endress+Hauser, as an ISO-certified company, to follow certain procedures when handling products that are in contact with the medium.

To ensure safe, swift and professional device returns, please refer to the procedure and conditions for returning devices provided on the Endress+Hauser website at <http://www.endress.com/support/return-material>

14.5 Disposal

14.5.1 Removing the measuring device

1. Switch off the device.
2. **WARNING!** Danger to persons from process conditions. Beware of hazardous process conditions such as pressure in the measuring device, high temperatures or aggressive fluids.

Carry out the mounting and connection steps from the chapters "Mounting the measuring device" and "Connecting the measuring device" in the logically reverse sequence. Observe the safety instructions.

14.5.2 Disposing of the measuring device

WARNING

Danger to personnel and environment from fluids that are hazardous to health.

- ▶ Ensure that the measuring device and all cavities are free of fluid residues that are hazardous to health or the environment, e.g. substances that have permeated into crevices or diffused through plastic.

Observe the following notes during disposal:

- Observe valid federal/national regulations.
- Ensure proper separation and reuse of the device components.

15 Accessories

Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

15.1 Device-specific accessories

15.1.1 For the transmitter

Accessories	Description
Remote display FHX50	FHX50 housing to accommodate a display module →  147. - FHX50 housing suitable for: - SD02 display module (push buttons) - SD03 display module (touch control) - Housing material: - Plastic PBT - Stainless steel CF-3M (316L, 1.4404) - Length of connecting cable: up to max. 60 m (196 ft) (cable lengths available for order: 5 m (16 ft), 10 m (32 ft), 20 m (65 ft), 30 m (98 ft)) The measuring device can be ordered with the FHX50 housing and a display module. The following options must be selected in the separate order codes: - Order code for measuring device, feature 030: Option L or M "Prepared for FHX50 display" - Order code for FHX50 housing, feature 050 (device version): Option A "Prepared for FHX50 display" - Order code for FHX50 housing, depends on the desired display module in feature 020 (display, operation): - Option C: for an SD02 display module (push buttons) - Option E: for an SD03 display module (touch control) The FHX50 housing can also be ordered as a retrofit kit. The measuring device display module is used in the FHX50 housing. The following options must be selected in the order code for the FHX50 housing: - Feature 050 (measuring device version): option B "Not prepared for FHX50 display" - Feature 020 (display, operation): option A "None, existing displayed used"  For details, see Special Documentation SD01007F
Overvoltage protection for 2-wire devices	Ideally, the overvoltage protection module should be ordered directly with the device. See product structure, characteristic 610 "Accessory mounted", option NA "Overvoltage protection". Separate order necessary only if retrofitting. - OVP10: For 1-channel devices (characteristic 020, option A): - OVP20: For 2-channel devices (characteristic 020, options B, C, E or G)  For details, see Special Documentation SD01090F.
Weather protection cover	Is used to protect the measuring device from the effects of the weather: e.g. rainwater, excess heating from direct sunlight or extreme cold in winter.  For details, see Special Documentation SD00333F

15.1.2 For the sensor

Accessories	Description
Seal set	For the regular replacement of seals for the sensor.
Welding jig	Welded connection as process connection: welding jig for installation in pipe.

Grounding rings	Are used to ground the fluid in lined measuring tubes to ensure proper measurement.  For details, see Installation Instructions EA00070D
Mounting kit	Consists of: ■ 2 process connections ■ Screws ■ Seals

15.2 Service-specific accessories

Accessories	Description
Applicator	Software for selecting and sizing Endress+Hauser measuring devices: ■ Calculation of all the data needed to determine the optimum flowmeter: e.g. nominal diameter, pressure drop, performance characteristics or process connections. ■ Graphic illustration of the calculation results Administration, documentation and access to all project-related data and parameters throughout the entire life cycle of a project. Applicator is available: ■ Via the Internet: https://wapps.endress.com/applicator ■ On CD-ROM for local PC installation.
W@M	Life cycle management for your plant W@M supports you with a wide range of software applications over the entire process: from planning and procurement, to the installation, commissioning and operation of the measuring devices. All the relevant information is available for every measuring device over time entire life cycle, such as the device status, spare parts, device-specific documentation, etc. The application already contains the data of your Endress+Hauser device. Endress+Hauser also takes care of maintaining and updating the data records. W@M is available: ■ Via the Internet: www.endress.com/lifecyclemanagement ■ On CD-ROM for local PC installation.
FieldCare	FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.  For details, see Operating Instructions BA00027S and BA00059S

15.3 System components

Accessories	Description
Memograph M graphic display recorder	The Memograph M graphic display recorder provides information on all relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.  For details, see "Technical Information" TI00133R and Operating Instructions BA00247R

16 Technical data

16.1 Application

The measuring device is only suitable for flow measurement of liquids with a minimum conductivity of 20 µS/cm.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

To ensure that the device remains in proper operating condition for its service life, use the measuring device only for media against which the process-wetted materials are adequately resistant.

16.2 Function and system design

Measuring principle	Electromagnetic flow measurement on the basis of <i>Faraday's law of magnetic induction</i> .
Measuring system	The device consists of a transmitter and a sensor. The device is available as a compact version: The transmitter and sensor form a mechanical unit. For information on the structure of the measuring device →  12

16.3 Input

Measured variable	Direct measured variables Volume flow (proportional to induced voltage) Calculated measured variables Mass flow
Measuring range	Typically v = 0.01 to 10 m/s (0.03 to 33 ft/s) with the specified accuracy <i>Flow characteristic values in SI units</i>

Nominal diameter		Recommended flow	Factory settings		
		Min./max. full scale value (v ~ 0.3/10 m/s)	Full scale value current output (v ~ 2.5 m/s)	Pulse value (~ 2 pulse/s)	Low flow cut off (v ~ 0.04 m/s)
[mm]	[in]	[dm³/min]	[dm³/min]	[dm³]	[dm³/min]
2	1/12	0.06 to 1.8	0,5	0.005	0,01
4	1/8	0.25 to 7	2	0.025	0,05
8	3/8	1 to 30	8	0.1	0,1
15	½	4 to 100	25	0.2	0,5
25	1	9 to 300	75	0.5	1

Flow characteristic values in US units

Nominal diameter		Recommended flow Min./max. full scale value (v ~ 0.3/10 m/s)	Factory settings		
			Full scale value current output (v ~ 2.5 m/s)	Pulse value (~ 2 pulse/s)	Low flow cut off (v ~ 0.04 m/s)
[in]	[mm]	[gal/min]	[gal/min]	[gal]	[gal/min]
1/12	2	0.015 to 0.5	0,1	0,001	0,002
1/8	4	0.07 to 2	0,5	0,005	0,008
3/8	8	0.25 to 8	2	0,02	0,025
½	15	1 to 27	6	0,05	0,1
1	25	2.5 to 80	18	0,2	0,25

Recommended measuring range

"Flow limit" section →  142

Operable flow range Over 1000 : 1

16.4 Output

Output signal

Pulse/frequency/switch output

Function	Can be set to pulse, frequency or switch output
Version	Passive, open collector
Maximum input values	■ DC 35 V ■ 50 mA
Voltage drop	■ For ≤ 2 mA: 2 V ■ For 10 mA: 8 V
Residual current	≤ 0.05 mA
Pulse output	
Pulse width	Adjustable: 5 to 2 000 ms
Maximum pulse rate	100 Impulse/s
Pulse value	Adjustable
Assignable measured variables	■ Volume flow ■ Mass flow
Frequency output	
Output frequency	Adjustable: 0 to 1 000 Hz
Damping	Adjustable: 0 to 999 s
Pulse/pause ratio	1:1
Assignable measured variables	■ Volume flow ■ Mass flow
Switch output	
Switching behavior	Binary, conductive or non-conductive
Switching delay	Adjustable: 0 to 100 s

Number of switching cycles	Unlimited
Assignable functions	■ Off ■ On ■ Diagnostic behavior ■ Limit value – Volume flow – Mass flow ■ Flow direction monitoring ■ Status – Empty pipe detection – Low flow cut off

PROFIBUS PA

Signal encoding	Manchester Bus Powered (MBP)
Data transfer	31.25 KBit/s, Voltage mode

Signal on alarm

Depending on the interface, failure information is displayed as follows:

Pulse/frequency/switch output*Pulse output*

Failure mode	Choose from: ■ Actual value ■ No pulses
---------------------	--

Frequency output

Failure mode	Choose from: ■ Actual value ■ 0 Hz ■ Defined value: 0 to 1250 Hz
---------------------	--

Switch output

Failure mode	Choose from: ■ Current status ■ Open ■ Closed
---------------------	---

PROFIBUS PA

Status and alarm messages	Diagnostics in accordance with PROFIBUS PA Profile 3.02
Error current FDE (Fault Disconnection Electronic)	0 mA

Local display

Plain text display	With information on cause and remedial measures
Backlight	Additionally for device version with SD03 local display: red lighting indicates a device error.



Status signal as per NAMUR recommendation NE 107

Operating tool

- Via digital communication:
PROFIBUS PA
- Via service interface

Plain text display	With information on cause and remedial measures
---------------------------	---

Low flow cut off	The switch points for low flow cut off are user-selectable.
------------------	---

Galvanic isolation	All outputs are galvanically isolated from one another.
--------------------	---

Protocol-specific data

PROFIBUS PA

Manufacturer ID	0x11
Ident number	0x1563
Profile version	3.02
Device description files (GSD, DTM, DD)	Information and files under: ■ www.endress.com ■ www.profibus.org
Output values (from measuring device to automation system)	Analog input 1 to 2 ■ Mass flow ■ Volume flow Digital input 1 to 2 ■ Empty pipe detection ■ Low flow cut off ■ Status switch output ■ Status verification Totalizer 1 to 3 ■ Mass flow ■ Volume flow ■ Corrected volume flow
Input values (from automation system to measuring device)	Digital output 1 to 3 (fixed assignment) ■ Digital output 1: switch positive zero return on/off ■ Digital output 2: switch switch output on/off ■ Digital output 3: start verification Totalizer 1 to 3 ■ Totalize ■ Reset and hold ■ Preset and hold ■ Operating mode configuration: – Net flow total – Forward flow total – Reverse flow total

Supported functions	■ Identification & Maintenance Simplest device identification on the part of the control system and nameplate ■ PROFIBUS upload/download Reading and writing parameters is up to ten times faster with PROFIBUS upload/download ■ Condensed status Simplest and self-explanatory diagnostic information by categorizing diagnostic messages that occur
Configuration of the device address	■ DIP switches on the I/O electronics module ■ Local display ■ via operating tools (e.g. FieldCare)

16.5 Power supply

Terminal assignment →  31

Pin assignment, device plug →  31

Supply voltage

Transmitter

An external power supply is required for each output.

The following supply voltage values apply for the outputs available:

Order code for "Output"	Minimum terminal voltage	Maximum terminal voltage
Option G: PROFIBUS PA, pulse/frequency/switch output	≥ DC 9 V	DC 32 V

Power consumption

Transmitter

Order code for "Output"	Maximum power consumption
Option G: PROFIBUS PA, pulse/frequency/switch output	■ Operation with output 1: 512 mW ■ Operation with output 1 and 2: 2 512 mW

Current consumption

PROFIBUS PA

16 mA

Power supply failure

- Totalizers stop at the last value measured.
- Configuration is retained in the device memory (HistoROM).
- Error messages (incl. total operated hours) are stored.

Electrical connection →  33

Potential equalization →  35

Terminals

- For device version without integrated overvoltage protection: plug-in spring terminals for wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG)
- For device version with integrated overvoltage protection: screw terminals for wire cross-sections 0.2 to 2.5 mm² (24 to 14 AWG)

Cable entries	■ Cable gland: M20 × 1.5 with cable $\phi 6$ to 12 mm (0.24 to 0.47 in) ■ Thread for cable entry: – NPT ½" – G ½"
---------------	---

Cable specification	→  28
---------------------	--

Overvoltage protection	The device can be ordered with integrated overvoltage protection for diverse approvals: <i>Order code for "Accessory mounted", option NA "Overvoltage protection"</i>
------------------------	--

Input voltage range	Values correspond to supply voltage specifications ¹⁾
Resistance per channel	2 · 0.5 Ω max
DC sparkover voltage	400 to 700 V
Trip surge voltage	< 800 V
Capacitance at 1 MHz	< 1.5 pF
Nominal discharge current (8/20 μ s)	10 kA
Temperature range	–40 to +85 °C (–40 to +185 °F)

1) The voltage is reduced by the amount of the internal resistance $I_{min} \cdot R_i$


 Depending on the temperature class, restrictions apply to the ambient temperature for device versions with overvoltage protection .

 For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

16.6 Performance characteristics

Reference operating conditions	In accordance with DIN EN 29104 ■ Water, typically 15 to 45 °C (59 to 113 °F); 2 to 6 bar (29 to 87 psi) ■ Data as indicated in the calibration protocol ± 5 °C (± 41 °F) and ± 2 bar (± 29 psi) ■ Accuracy based on accredited calibration rigs traced to ISO 17025 ■ Medium temperature: $+28 \pm 2$ °C ($+82 \pm 4$ °F) ■ Ambient temperature: $+22 \pm 2$ °C ($+72 \pm 4$ °F) ■ Warm-up period: 30 min Installation ■ Inlet run > 10 × DN ■ Outlet run > 5 × DN ■ Sensor and transmitter grounded. ■ The sensor is centered in the pipe.
--------------------------------	--

Maximum measured error	Error limits under reference operating conditions o.r. = of reading Volume flow ± 0.5 % o.r. ± 2 mm/s (0.08 in/s)  Fluctuations in the supply voltage do not have any effect within the specified range.
------------------------	--

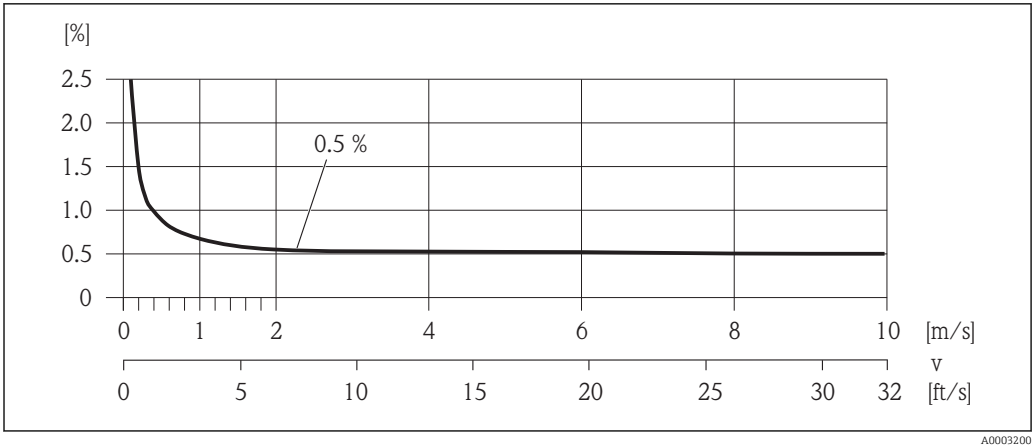

32 Maximum measured error in % o.r.

Accuracy of outputs

The outputs have the following base accuracy specifications.

Pulse/frequency output

o.r. = of reading

Accuracy	Max. ±100 ppm o.r.
----------	--------------------

Repeatability

o.r. = of reading

Volume flow

Max. ±0.2 % o.r. ± 2 mm/s (0.08 in/s)

Influence of ambient temperature

Pulse/frequency output

o.r. = of reading

Temperature coefficient	Max. ±100 ppm o.r.
-------------------------	--------------------

16.7 Installation

"Mounting requirements" → 19

16.8 Environment

Ambient temperature range

→ 21

Temperature tables

- Observe the interdependencies between the permitted ambient and fluid temperatures when operating the device in hazardous areas.
- For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

Storage temperature


The storage temperature corresponds to the operating temperature range of the measuring transmitter and the appropriate measuring sensors.

- Protect the measuring device against direct sunlight during storage in order to avoid unacceptably high surface temperatures.
- Select a storage location where moisture cannot collect in the measuring device as fungus or bacteria infestation can damage the liner.
- If protection caps or protective covers are mounted these should never be removed before installing the measuring device.

Degree of protection	Transmitter ■ As standard: IP66/67, type 4X enclosure ■ When housing is open: IP20, type 1 enclosure ■ Display module: IP20, type 1 enclosure Sensor IP66/67, type 4X enclosure Connector IP67, only in screwed situation
Shock resistance	As per IEC/EN 60068-2-31
Vibration resistance	Acceleration up to 2 g, according to IEC 60068-2-6
Mechanical load	■ Protect the transmitter housing against mechanical effects, such as shock or impact. ■ Never use the transmitter housing as a ladder or climbing aid.
Electromagnetic compatibility (EMC)	As per IEC/EN 61326 and NAMUR Recommendation 21 (NE 21)  For details, refer to the Declaration of Conformity.

16.9 Process

Medium temperature range	-20 to +150 °C (-4 to +302 °F) for PFA
--------------------------	--

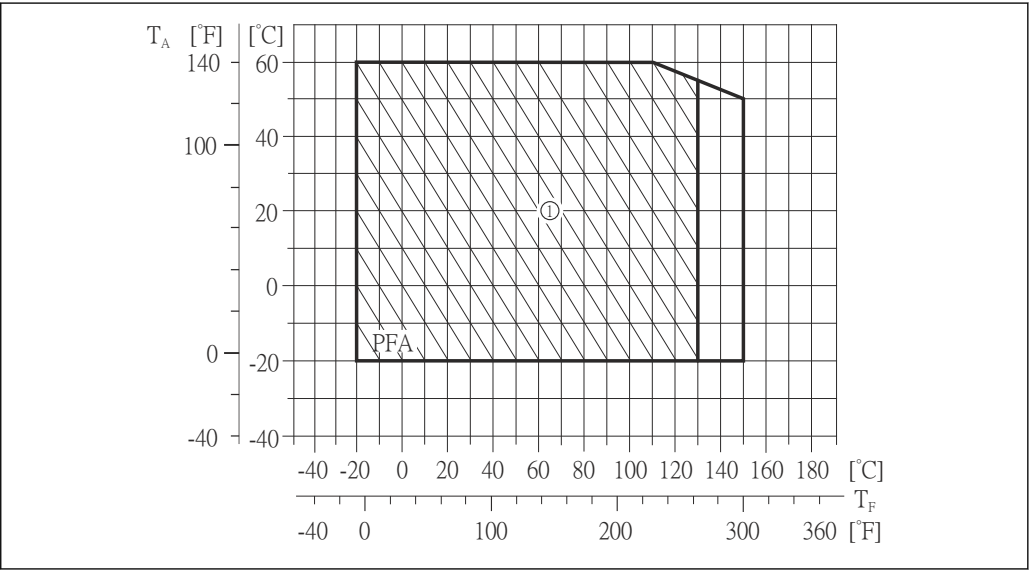

A0019805

- T_A Ambient temperature
 T_F Medium temperature
1 Hatched area: harsh environment only up to +130 °C (+266 °F)

Conductivity $\geq 20 \mu\text{S/cm}$ for liquids in general

Pressure-temperature ratings  An overview of the pressure-temperature ratings for the process connections is provided in the "Technical Information" document

Pressure tightness *Liner: PFA*

Nominal diameter		Limit values for absolute pressure in [mbar] ([psi]) for fluid temperatures:				
[mm]	[in]	+25 °C (+77 °F)	+80 °C (+176 °F)	+100 °C (+212 °F)	+130 °C (+266 °F)	+150 °C (+302 °F)
2 to 25	$\frac{1}{12}$ to 1	0 (0)	0 (0)	0 (0)	0 (0)	0 (0)

Flow limit The diameter of the pipe and the flow rate determine the nominal diameter of the sensor. The optimum velocity of flow is between 2 to 3 m/s (6.56 to 9.84 ft/s). Also match the velocity of flow (v) to the physical properties of the fluid:

- $v < 2 \text{ m/s}$ (6.56 ft/s): for abrasive fluids
- $v > 2 \text{ m/s}$ (6.56 ft/s): for fluids producing buildup

 A necessary increase in the flow velocity can be achieved by reducing the sensor nominal diameter.

 For an overview of the measuring range full scale values, see the "Measuring range" section →  134

Pressure loss

- No pressure loss occurs as of nominal diameter DN 8 (3/8") if the sensor is installed in a pipe with the same nominal diameter.
- Pressure losses for configurations incorporating adapters according to DIN EN 545 →  22

System pressure →  21

Vibrations →  22

16.10 Mechanical construction

Design, dimensions  For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section

Weight **Compact version**

- Including the transmitter (1.9 kg (4.2 lbs))
- Weight specifications apply to standard pressure ratings and without packaging material.

Nominal diameter		Weight	
[mm]	[in]	[kg]	[lbs]
2	1/12	3.7	8.2
4	1/8	3.7	8.2
8	3/8	3.8	8.4
15	1/2	3.9	8.6
25	1	4.0	8.8

Measuring tube specification

Nominal diameter		Pressure rating ¹⁾	Process connection internal diameter	
[mm]	[in]	EN (DIN)	PFA	
		[bar]	[mm]	[in]
2	1/12	PN 16/40	2.25	0.09
4	1/8	PN 16/40	4.5	0.18
8	3/8	PN 16/40	9.0	0.35
15	1/2	PN 16/40	16.0	0.63
–	1	PN 16/40	22.6	0.89
25	–	PN 16/40	26.0	1.02


1) Depending on process connection and seals used

Materials

Transmitter housing

- Order code for "Housing", option **C** "Compact, aluminum coated": Aluminum, AlSi10Mg, coated
- Window material: glass

Cable entries/cable glands

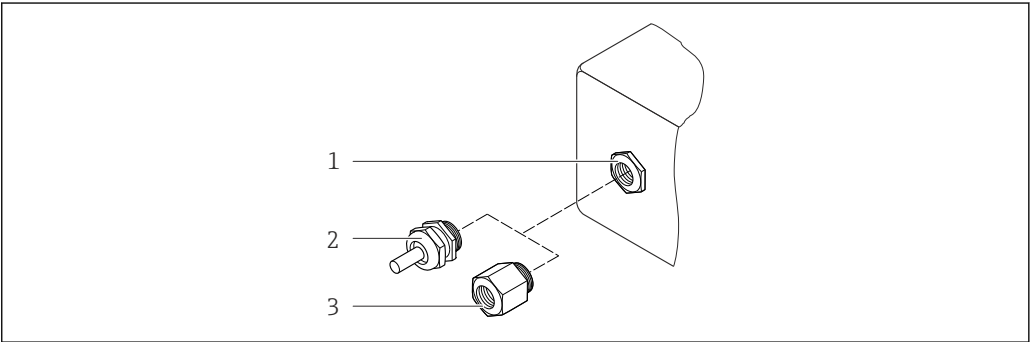

A0020640

33 Possible cable entries/cable glands

- 1 Cable entry in transmitter housing with internal thread M20 x 1.5
- 2 Cable gland M20 x 1.5
- 3 Adapter for cable entry with internal thread G 1/2" or NPT 1/2"

Order code for "Housing", option C "GT20 two-chamber, aluminum coated"

Cable entry/cable gland	Type of protection	Material
Cable gland M20 × 1.5	■ Non-Ex ■ Ex ia ■ Ex ic	Plastic
	Adapter for cable entry with internal thread G ½"	Nickel-plated brass
Adapter for cable entry with internal thread NPT ½"	For non-Ex and Ex (except for CSA Ex d/XP)	Nickel-plated brass
Thread NPT ½" via adapter	For non-Ex and Ex	

Device plug

Electrical connection	Material
Plug M12x1	■ Socket: stainless steel, 1.4401/316 ■ Contact housing: plastic, PUR, black ■ Contacts: metal, CuZn, gold-plated ■ Threaded connection seal: NBR

Sensor housing

Stainless steel 1.4301 (304)

Measuring tubes

Stainless steel 1.4301 (304)

Liner

PFA (USP Class VI, FDA 21 CFR 177.1550, 3A)

Process connections

- Stainless steel 1.4404 (F316L)
- PVDF
- PVC adhesive sleeve

Electrodes

- Standard: 1.4435 (316L)
- Optional: Alloy C22, tantalum, platinum

Seals

- O-ring seal: EPDM, FKM, Kalrez
- Aseptic molded seal: EPDM ¹⁾, FKM, silicone ¹⁾

Accessories

Weather protection cover

Stainless steel 1.4404 (316L)

1) USP Class VI, FDA 21 CFR 177.2600, 3A

Grounding rings

- Standard: 1.4435 (F316L)
- Optional: Alloy C22, tantalum

Wall mounting kit



Stainless steel 1.4301 (304)

Fitted electrodes	Measuring electrodes and empty pipe detection electrodes (only DN 25 (1")): 1.4435 (316L), Alloy C22, platinum, tantalum
Process connections	With O-ring seal ■ Weld-in nipple (DIN EN ISO 1127, ODT/SMS, ISO 2037) ■ Flange (EN (DIN), ASME, JIS) ■ Flange from PVDF (EN (DIN), ASME, JIS) ■ External thread ■ Internal thread ■ Hose connection ■ PVC adhesive sleeve With aseptic molded seal: ■ Weld-in nipple (EN 10357 (DIN 11850), ODT/SMS, ISO 2037) ■ Clamp (ISO 2852, DIN 32676, L14 AM7) ■ Coupling (DIN 11851, DIN 11864-1, ISO 2853, SMS 1145) ■ Flange DIN 11864-2  For information on the materials of the process connections →  144
Surface roughness	Stainless steel electrodes, 1.4435 (F316L); Alloy C22, 2.4602 (UNS N06022); platinum; tantalum: ≤ 0.3 to $0.5\ \mu\text{m}$ (11.8 to $19.7\ \mu\text{in}$) (All data relate to parts in contact with fluid) Liner with PFA: $\leq 0.4\ \mu\text{m}$ ($15.7\ \mu\text{in}$) (All data relate to parts in contact with fluid) Stainless steel process connections: $\leq 0.8\ \mu\text{m}$ ($31\ \mu\text{in}$) (All data relate to parts in contact with fluid)

16.11 Operability

Local operation

Via display module

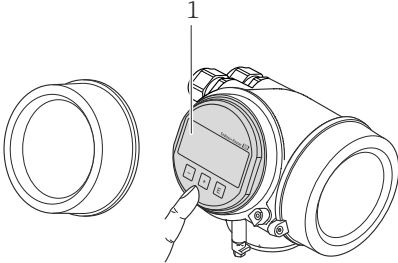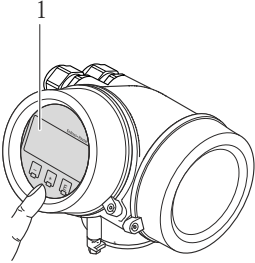Order code for "Display; Operation", option C "SD02"	Order code for "Display; Operation", option E "SD03"
 <i>1 Operation with pushbuttons</i>	 <i>1 Operation with touch control</i>

Display elements

- 4-line display
- With order code for "Display; operation", option **E**:
White background lighting; switches to red in event of device errors
- Format for displaying measured variables and status variables can be individually configured
- Permitted ambient temperature for the display: -20 to +60 °C (-4 to +140 °F)
The readability of the display may be impaired at temperatures outside the temperature range.


Operating elements

- With order code for "Display; operation", option **C**:
Local operation with 3 push buttons: , , 
- With order code for "Display; operation", option **E**:
External operation via touch control; 3 optical keys: , , 
- Operating elements also accessible in various hazardous areas

Additional functionality

- Data backup function
The device configuration can be saved in the display module.
- Data comparison function
The device configuration saved in the display module can be compared to the current device configuration.
- Data transfer function
The transmitter configuration can be transmitted to another device using the display module.

Via remote display and operating module FHX50

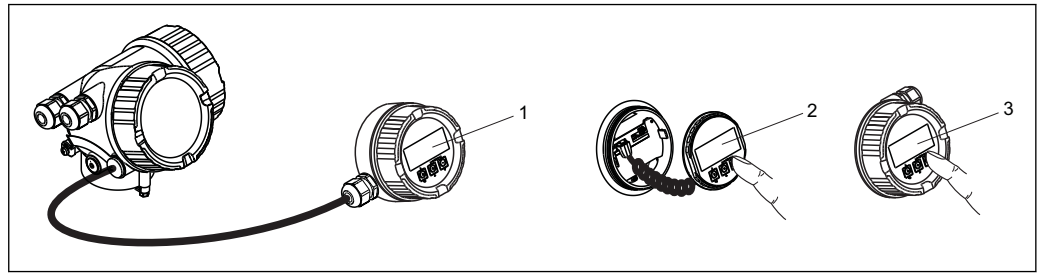

A0013137


34 Operating options via FHX50

- 1 Housing of remote display and operating module FHX50
- 2 SD02 display and operating module, push buttons: cover must be opened for operation
- 3 SD03 display and operating module, optical buttons: operation possible through cover glass

Remote operation

Via PROFIBUS PA network

This communication interface is available in device versions with PROFIBUS PA.

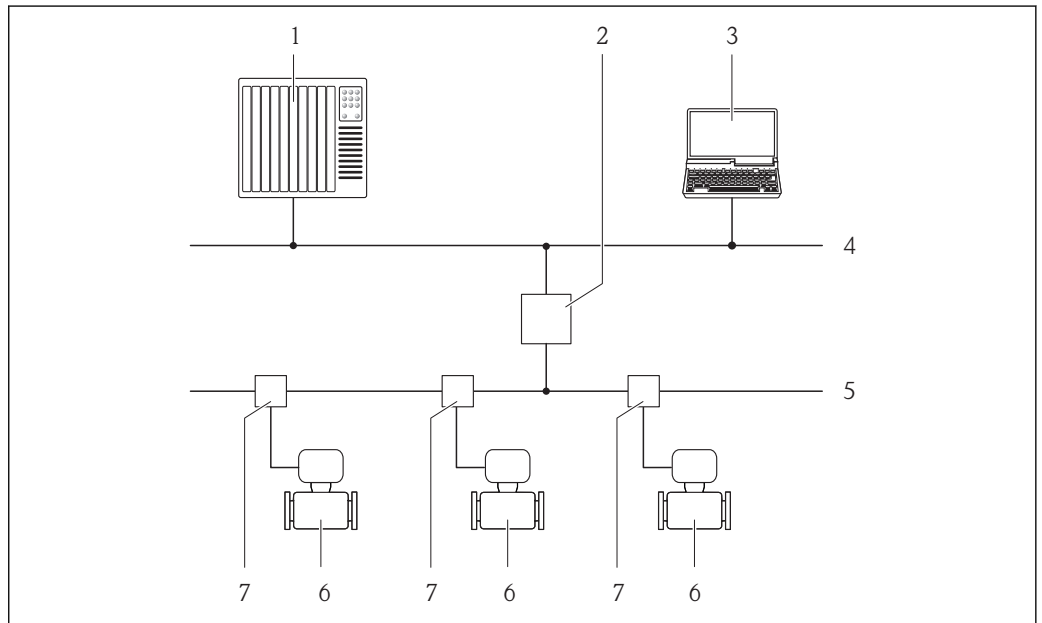


A0019013

35 Options for remote operation via PROFIBUS PA network

- 1 Automation system
- 2 Segment coupler PROFIBUS DP/PA
- 3 Computer with PROFIBUS network card
- 4 PROFIBUS DP network
- 5 PROFIBUS PA network
- 6 Measuring device
- 7 T-box

Service interface

Via service interface (CDI)

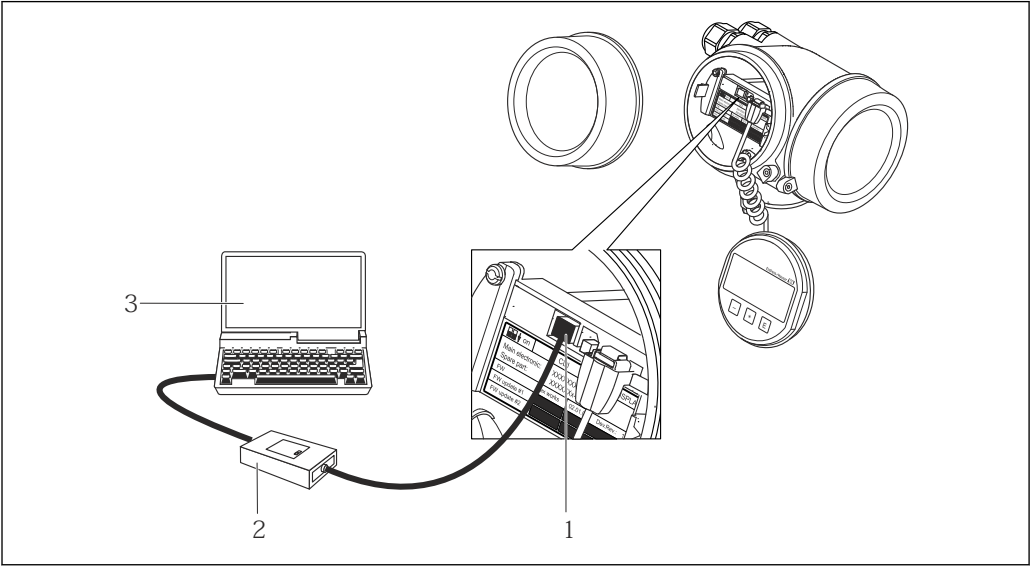

A0014019

- 1 Service interface (CDI = Endress+Hauser Common Data Interface) of the measuring device
- 2 Commubox FXA291
- 3 Computer with "FieldCare" operating tool with COM DTM "CDI Communication FXA291"

Languages

- Can be operated in the following languages:
- Via local display:
English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Swedish, Turkish, Chinese, Japanese, Bahasa (Indonesian), Vietnamese, Czech
 - Via "FieldCare" operating tool:
English, German, French, Spanish, Italian, Chinese, Japanese

16.12 Certificates and approvals

CE mark

The measuring system is in conformity with the statutory requirements of the applicable EC Directives. These are listed in the corresponding EC Declaration of Conformity along with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

C-Tick symbol

The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".

Ex approval

The devices are certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.

Sanitary compatibility

- 3A approval and EHEDG-certified
- Seals → in conformity with FDA (apart from Kalrez seals)

Certification PROFIBUS

PROFIBUS interface

The measuring device is certified and registered by the PROFIBUS User Organization (PNO). The measuring system meets all the requirements of the following specifications:

- Certified in accordance with PROFIBUS PA Profile 3.02
- The device can also be operated with certified devices of other manufacturers (interoperability)

Other standards and guidelines

- EN 60529
Degrees of protection provided by enclosures (IP code)
- EN 61010-1
Safety requirements for electrical equipment for measurement, control and laboratory use
- IEC/EN 61326
Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC requirements).
- ANSI/ISA-61010-1 (82.02.01): 2004
Safety Requirements for Electrical Equipment for Measurement, Control and Laboratory Use - Part 1 General Requirements
- CAN/CSA-C22.2 No. 61010-1-04
Safety Requirements for Electrical Equipment for Measurement, Control and Laboratory Use - Part 1 General Requirements
- NAMUR NE 21
Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment
- NAMUR NE 32
Data retention in the event of a power failure in field and control instruments with microprocessors
- NAMUR NE 43
Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.
- NAMUR NE 53
Software of field devices and signal-processing devices with digital electronics
- NAMUR NE 105
Specifications for integrating fieldbus devices in engineering tools for field devices
- NAMUR NE 107
Self-monitoring and diagnosis of field devices
- NAMUR NE 131
Requirements for field devices for standard applications

16.13 Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

Diagnostics functions

Package	Description
HistoROM extended function	Comprises extended functions concerning the event log and the activation of the measured value memory. Event log: Memory volume is extended from 20 message entries (basic version) to up to 100 entries. Data logging (line recorder): - Memory capacity for up to 1000 measured values is activated. 250 measured values can be output via each of the 4 memory channels. The recording interval can be defined and configured by the user. - Data logging is visualized via the local display or FieldCare.

Heartbeat Technology

Package	Description
Heartbeat Verification	Heartbeat Verification: Makes it possible to check the device functionality on demand when the device is installed, without having to interrupt the process. - Access via local operation or other operating interfaces, such as FieldCare for instance. - Documentation of device functionality within the framework of manufacturer specifications, for proof testing for instance. - End-to-end, traceable documentation of the verification results, including report. - Makes it possible to extend calibration intervals in accordance with operator's risk assessment.

16.14 Accessories

 Overview of accessories available for order →  132

16.15 Documentation

-  For an overview of the scope of the associated Technical Documentation, refer to the following:
- The CD-ROM provided for the device (depending on the device version, the CD-ROM might not be part of the delivery!)
 - The *W@M Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
 - The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

Standard documentation

Brief Operating Instructions

Measuring device	Documentation code
Promag H 200	KA01120D

Device Parameters

Measuring device	Documentation code		
	HART	FOUNDATION Fieldbus	PROFIBUS PA
Promag 200	GP01026D	GP01028D	GP01027D

Technical Information

Measuring device	Documentation code
Promag H 200	TI01061D

Supplementary device-
dependent documentation

Safety Instructions

Contents	Documentation code
ATEX/IECEX Ex d[ia], Ex tb	XA01015D
ATEX/IECEX Ex ia, Ex tb	XA01016D
ATEX/IECEX Ex nA, Ex ic	XA01017D
cCSAus XP (Ex d)	XA01018D
cCSAus IS (Ex i)	XA01019D
NEPSI Ex d	XA01179D
NEPSI Ex i	XA01178D
NEPSI Ex nA, Ex ic	XA01180D
INMETRO Ex d	XA01309D
INMETRO Ex i	XA01310D
INMETRO Ex nA	XA01311D

Special Documentation

Contents	Documentation code
Heartbeat Technology	SD01452D

Installation Instructions

Contents	Documentation code
Installation Instructions for spare part sets	 Overview of accessories available for order →  132

Index

A

Access authorization to parameters	
Read access	54
Write access	54
Access code	54
Incorrect input	54
Adapters	22
Adapting the device status	106
Adapting the diagnostic behavior	107
Adapting the measured value status	106
Ambient temperature	
Influence	140
Ambient temperature range	21
Application	9, 134
Applicator	134
Approvals	148

C

C-Tick symbol	148
Cable entries	
Technical data	139
Cable entry	
Degree of protection	39
CE mark	10, 148
Certificates	148
Certification PROFIBUS	149
Checklist	
Post-connection check	40
Post-installation check	27
Cleaning	
Exterior cleaning	128
Interior cleaning	128
Commissioning	66
Advanced settings	76
Configuring the measuring device	67
Compatibility with earlier model	59
Conductivity	142
Connecting cable	28
Connecting the measuring device	33
Connection	
see Electrical connection	
Connection examples, potential equalization	35
Connection preparations	33
Connection tools	28
Context menu	
Closing	49
Explanation	49
Opening	49
Current consumption	138
Cyclic data transmission	60

D

Declaration of Conformity	10
Define access code	92
Degree of protection	39, 141
Designated use	9

Device components	12
Device description files	59
Device documentation	
Supplementary documentation	8
Device locking, status	95
Device master file	
GSD	59
Device name	
Sensor	15
Transmitter	14
Device repair	129
Device revision	59
Device type ID	59
Diagnostic behavior	
Explanation	103
Symbols	103
Diagnostic information	
Design, description	103, 105
FieldCare	104
Local display	102
Overview	109
Remedy information	109
Diagnostic list	122
Diagnostic message	102
Diagnostics	
Symbols	102
DIP switches	
see Write protection switch	
Direct access	51
Direct access code	46
Disabling write protection	92
Display	
Current diagnostic event	121
Previous diagnostic event	121
see Local display	
Display area	
For operational display	44
In the navigation view	46
Display values	
For locking status	95
Disposal	130
Document	
Function	6
Symbols used	6
Document function	6
Documentation	150
Down pipe	19

E

Electrical connection	
Commubox FXA291	56, 148
Degree of protection	39
Measuring device	28
Operating tools	
Via PROFIBUS PA network	55, 147
Via service interface (CDI)	56, 148

Electromagnetic compatibility	141
Enabling write protection	92
Endress+Hauser services	
Maintenance	128
Repair	130
Environment	
Ambient temperature	21
Mechanical load	141
Shock resistance	141
Storage temperature	140
Vibration resistance	141
Error messages	
see Diagnostic messages	
Event history	123
Events list	123
Ex approval	148
Extended order code	
Sensor	15
Transmitter	14
Exterior cleaning	128

F

Field of application	
Residual risks	10
FieldCare	57
Device description file	59
Establishing a connection	57
Function	57
User interface	58
Filtering the event logbook	123
Firmware	
Release date	59
Version	59
Firmware history	127
Fitted electrodes	145
Flow direction	20
Flow limit	142
Function check	66
Function scope	
SIMATIC PDM	58
Functions	
see Parameter	

G

Galvanic isolation	137
------------------------------	-----

H

Hardware write protection	93
Help text	
Calling up	52
Close	52
Explanation	52
HistoROM	89

I

I/O electronics module	12, 33
Identifying the measuring device	13
Incoming acceptance	13
Influence	
Ambient temperature	140

Information on the document	6
Inlet runs	20
Input	134
Input mask	47
Inspection	
Installation	27
Received goods	13
Inspection check	
Connection	40
Installation	19
Installation conditions	
Adapters	22
Down pipe	19
Inlet and outlet runs	20
Mounting location	19
Orientation	20
Partially filled pipe	19
System pressure	21
Vibrations	22
Installation dimensions	21
Interior cleaning	128

K

Keypad lock	
Disabling	54
Enabling	54

L

Languages, operation options	148
Line recorder	98
Local display	146
Editing view	47
Navigation view	45
see Diagnostic message	
see In alarm condition	
see Operational display	
Low flow cut off	137

M

Main electronics module	12
Maintenance tasks	128
Replacing seals	128
Managing the device configuration	89
Manufacturer ID	59
Manufacturing date	14, 15
Materials	143
Maximum measured error	139
Measured variables	
Calculated	134
Measured	134
see Process variables	
Measuring and test equipment	128
Measuring device	
Configuration	67
Conversion	129
Disposal	131
Integrating via communication protocol	59
Mounting the sensor	23
Cleaning with pigs	24

Mounting grounding rings	25
Mounting the seals	24
Welding nipples	24
Preparing for electrical connection	33
Preparing for mounting	23
Removing	130
Repair	129
Structure	12
Switch-on	66
Measuring principle	134
Measuring range	134
Measuring system	134
Measuring tube specification	143
Mechanical load	141
Media	9
Medium temperature range	141
Menu	
Diagnostics	121
Operation	95
Setup	67, 68
Menus	
For measuring device configuration	67
For specific settings	76
Mounting dimensions	
see Installation dimensions	
Mounting location	19
Mounting preparations	23
Mounting requirements	
Installation dimensions	21
Mounting tools	23
N	
Nameplate	
Sensor	15
Transmitter	14
Navigation path (navigation view)	45
Navigation view	
In the submenu	45
In the wizard	45
Numeric editor	47
O	
Operable flow range	135
Operating elements	49, 103
Operating keys	
see Operating elements	
Operating menu	
Menus, submenus	42
Structure	42
Submenus and user roles	43
Operating options	41
Operating philosophy	43
Operation	95
Operational display	44
Operational safety	10
Order code	14, 15
Orientation (vertical, horizontal)	20
Outlet runs	20
Output	135

Output signal	135
-------------------------	-----

P

Packaging disposal	18
Parameter	
Changing	53
Enter a value	53
Parameter settings	
Administration (Submenu)	88, 124
Analog inputs (Submenu)	71
Communication (Submenu)	70
Configuration backup display (Submenu)	89
Data logging (Submenu)	98
Device information (Submenu)	125
Diagnostics (Menu)	121
Display (Submenu)	86
Display (Wizard)	71
Empty pipe detection (Wizard)	75
Low flow cut off (Wizard)	73
Operation (Submenu)	97
Process variables (Submenu)	95
Pulse/frequency/switch output (Wizard)	78, 80, 82
Sensor adjustment (Submenu)	77
Setup (Menu)	68
Simulation (Submenu)	90
System units (Submenu)	68
Totalizer 1 to 3 (Submenu)	84, 96
Partially filled pipe	19
Performance characteristics	139
Post-connection check (checklist)	40
Post-installation check	66
Post-installation check (checklist)	27
Potential equalization	35
Power consumption	138
Power supply failure	138
Pressure loss	142
Pressure tightness	142
Pressure-temperature ratings	142
Process conditions	
Conductivity	142
Flow limit	142
Medium temperature	141
Pressure loss	142
Pressure tightness	142
Process connections	145
Product safety	10
Protecting parameter settings	92

R

Read access	54
Reading measured values	95
Recalibration	128
Reference operating conditions	139
Registered trademarks	8
Remedial measures	
Calling up	104
Closing	104
Remote operation	147

- Repair 129
 - Notes 129
- Repair of a device 129
- Repeatability 140
- Replacement
 - Device components 129
- Replacing seals 128
- Requirements for personnel 9
- Return 130
- S**
- Safety 9
- Sanitary compatibility 148
- Sensor
 - Mounting 23
- Serial number 14, 15
- Setting the operating language 66
- Settings
 - Adapting the measuring device to the process conditions 97
 - Administration 88
 - Advanced display configurations 86
 - Analog input 71
 - Communication interface 70
 - Device reset 124
 - Device tag 68
 - Empty pipe detection (EPD) 75
 - Local display 71
 - Low flow cut off 73
 - Managing the device configuration 89
 - Operating language 66
 - Pulse output 78
 - Pulse/frequency/switch output 77, 80
 - Resetting the totalizer 97
 - Sensor adjustment 77
 - Simulation 90
 - Switch output 82
 - System units 68
 - Totalizer 84
 - Totalizer reset 97
- Shock resistance 141
- Showing data logging 98
- Signal on alarm 136
- SIMATIC PDM 58
 - Function 58
- Software release 59
- Spare part 129
- Spare parts 129
- Special connection instructions 37
- Standards and guidelines 149
- Status area
 - For operational display 44
 - In the navigation view 46
- Status signals 102
- Storage conditions 17
- Storage temperature 17
- Storage temperature range 140
- Structure
 - Measuring device 12
 - Operating menu 42
- Submenu
 - Administration 88, 124
 - Advanced setup 76
 - Analog inputs 71
 - Communication 66, 70
 - Configuration backup display 89
 - Data logging 98
 - Device information 125
 - Display 86
 - Events list 123
 - Operation 97
 - Overview 43
 - Process variables 95
 - Sensor adjustment 77
 - Simulation 90
 - System units 68
 - Totalizer 1 to 3 84, 96
- Supply unit
 - Requirements 33
- Supply voltage 33, 138
- Surface roughness 145
- Symbols
 - For communication 44
 - For correction 47
 - For diagnostic behavior 44
 - For locking 44
 - For measured variable 44
 - For measurement channel number 44
 - For menus 46
 - For parameters 46
 - For status signal 44
 - For submenu 46
 - For wizard 46
 - In the status area of the local display 44
 - In the text and numeric editor 47
- System design
 - Measuring system 134
 - see Measuring device design
- System integration 59
- System pressure 21
- T**
- Technical data, overview 134
- Temperature range
 - Ambient temperature range for display 146
 - Storage temperature 17
- Terminal assignment 31, 33
- Terminals 138
- Text editor 47
- Tool tip
 - see Help text
- Tools
 - Electrical connection 28
 - For mounting 23
 - Transport 17
- Transmitter
 - Connecting the signal cables 33
 - Turning the display module 27

Turning the housing	26
Transporting the measuring device	17
Troubleshooting	
General	100
Turning the display module	27
Turning the electronics housing	
see Turning the transmitter housing	
Turning the transmitter housing	26
U	
Use of the measuring device	
Borderline cases	9
Incorrect use	9
see Designated use	
User roles	43
V	
Version data for the device	59
Vibration resistance	141
Vibrations	22
W	
W@M	128, 129
W@M Device Viewer	13, 129
Weight	
Transport (notes)	17
Wizard	
Define access code	92
Display	71
Empty pipe detection	75
Low flow cut off	73
Pulse/frequency/switch output	78, 80, 82
Workplace safety	10
Write access	54
Write protection	
Via access code	92
Via write protection switch	93
Write protection switch	93

www.addresses.endress.com

For more Endress+Hauser product please visit: www.ainstru.com
Mail: Sales@ainstru.com