

Description of Device Functions

Proline Promass 84

Coriolis Mass Flow Measuring System
for Custody Transfer

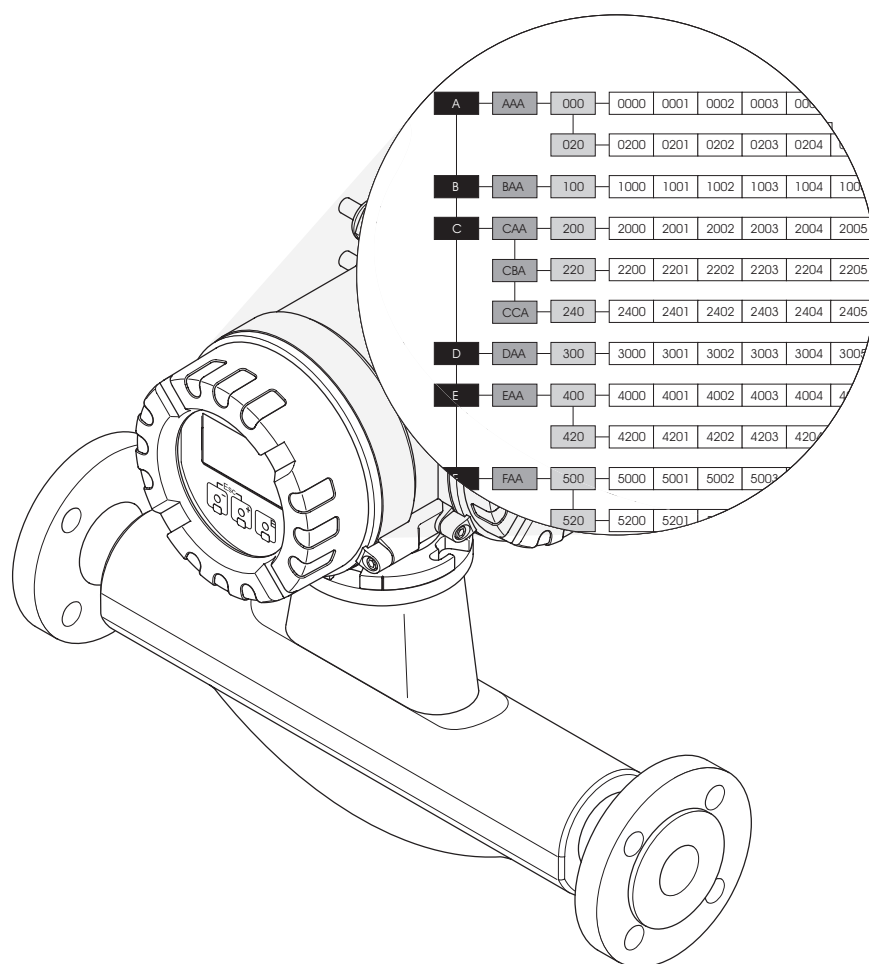


Table of contents

1	Notes on using this Manual	7
1.1	Using the table of contents to locate a function description	7
1.2	Using the graphic of the function matrix to locate a function description	7
1.3	Using the index of the function matrix to locate a function description	7
2	Function matrix	8
2.1	General layout of the function matrix	8
2.1.1	Blocks (A, B, C, etc.)	8
2.1.2	Groups (AAA, AEA, CAA, etc.)	8
2.1.3	Function groups (000, 020, 060, etc.)	8
2.1.4	Functions (0000, 0001, 0002, etc.)	8
2.1.5	Codes identifying cells	9
2.2	Function matrix Promass 84	10
3	Block CUSTODY TRANSFER	11
4	Block MEASURED VARIABLES	13
4.1	Group MEASURING VALUES	14
4.1.1	Function group MAIN VALUES	14
4.2	Group SYSTEM UNITS	15
4.2.1	Function group CONFIGURATION	15
4.2.2	Function group ADDITIONAL CONFIGURATION	18
4.3	Group SPECIAL-UNITS	20
4.3.1	Function group ARBITRARY UNIT	20
5	Block QUICK SETUP	22
5.1	Quick Setup	24
5.1.1	Quick Setup Commissioning	24
5.1.2	Quick Setup Pulsating Flow	26
5.1.3	Quick Setup Gas Measurement	28
5.2	Data back-up/transfer	29
6	Block DISPLAY	30
6.1	Group CONTROL	31
6.1.1	Function group BASIC CONFIG.	31
6.1.2	Function group UNLOCKING/LOCKING	33
6.1.3	Function group OPERATION	34
6.2	Group MAIN LINE	35
6.2.1	Function group CONFIGURATION	35
6.2.2	Function group MULTIPLEX	37
6.3	Group ADDITION LINE	38
6.3.1	Function group CONFIGURATION	38
6.3.2	Function group MULTIPLEX	40
6.4	Group INFORMATION LINE	42
6.4.1	Function group CONFIGURATION	42
6.4.2	Function group MULTIPLEX	44
7	Block TOTALIZER	46
7.1	Group TOTALIZER (1 to 3)	47
7.1.1	Function group CONFIGURATION	47
7.1.2	Function group OPERATION	49
7.2	Group HANDLING TOTAL.	50

8	Block OUTPUTS	51
8.1	Group CURRENT OUTPUT 1 to 2	52
8.1.1	Function group CONFIGURATION	52
8.1.2	Function group OPERATION	61
8.1.3	Function group INFORMATION	62
8.2	Group PULSE/FREQUENCY OUTPUT (1 to 2)	63
8.2.1	Function group CONFIGURATION	63
8.2.2	Function group OPERATION	83
8.2.3	Function group INFORMATION	88
8.3	Group RELAY OUTPUT	89
8.3.1	Function group CONFIGURATION	89
8.3.2	Function group OPERATION	93
8.3.3	Function group INFORMATION	95
8.4	Behavior of status output	96
8.5	Status output switching behavior	97
9	Block INPUTS	99
9.1	Group STATUS INPUT	100
9.1.1	Function group CONFIGURATION	100
9.1.2	Function group OPERATION	101
9.1.3	Function group INFORMATION	102
10	Block BASIC FUNCTION	103
10.1	Group HART	104
10.1.1	Function group CONFIGURATION	104
10.1.2	Function group INFORMATION	105
10.2	Group PROCESSPARAMETER	106
10.2.1	Function group CONFIGURATION	106
10.2.2	Function group EPD PARAMETER	108
10.2.3	Function group REFERENCE PARAMETER	110
10.2.4	Function group ADJUSTMENT	112
10.2.5	Function group PRESSURE CORRECTION	114
10.3	Group SYSTEM PARAMETERS	115
10.3.1	Function group CONFIGURATION	115
10.4	Group SENSOR DATA	116
10.4.1	Function group CONFIGURATION	116
10.4.2	Function group FLOW COEFFICIENT	117
10.4.3	Function group DENSITY COEFFICIENT	118
10.4.4	Function group ADDITIONAL COEFFICIENT	119
11	Block SUPERVISION	120
11.1	Group SYSTEM	121
11.1.1	Functions group CONFIGURATION	121
11.1.2	Function group OPERATION	123
11.2	Group VERSION-INFO	125
11.2.1	Function group DEVICE	125
11.2.2	Function group SENSOR	125
11.2.3	Function group AMPLIFIER	126
11.2.4	Function group F-CHIP	127
11.2.5	Function group I/O MODULE	127
11.2.6	Function groups INPUT/OUTPUT 1 to 4	128

12 Factory settings 129

12.1 SI units (not for USA and Canada) 129

12.1.1 Low flow cut off, full scale value, pulse value – Liquid 129

12.1.2 Low flow cut off, full scale value, pulse value – Gas 129

12.1.3 Language 130

12.1.4 Density, length, temperature 130

12.2 US units (only for USA and Canada) 131

12.2.1 Low flow cut off, full scale value, pulse value – Liquid 131

12.2.2 Low flow cut off, full scale value, pulse value – Gas 131

12.2.3 Language, density, length, temperature 131

Index of function matrix 133

Index 137

1 Notes on using this Manual

There are various ways of locating the description of a function of your choice in the manual:

1.1 Using the table of contents to locate a function description

The designations of all the cells in the function matrix are listed in the table of contents. You can use these unambiguous designations (such as USER INTERFACE, INPUTS, OUTPUTS, etc.) to choose whichever functions are applicable to a particular set of conditions. The page references show you exactly where to find the detailed descriptions of the functions in question.

The table of contents is on page 3.

1.2 Using the graphic of the function matrix to locate a function description



This step-by-step, top-down approach starts with the blocks, the highest level, and factory down through the matrix to the description of the function you need:

1. All blocks available, and their related groups, are illustrated on Page 10. Select the block (or the group within the block) which you need for your application and use the page reference to locate the information corresponding to the next level.
2. The page in question contains a graphic showing of the block with all its subordinate groups, function groups and functions. Select the function which you need for your application and use the page reference to locate the detailed function description.

1.3 Using the index of the function matrix to locate a function description

Each "cell" in the function matrix (blocks, groups, function groups, functions) has a unique identifier in the form of a code consisting of one or three letters or a three- or four-digit number. The code identifying a selected "cell" appears at the top right on the local display.

Example:

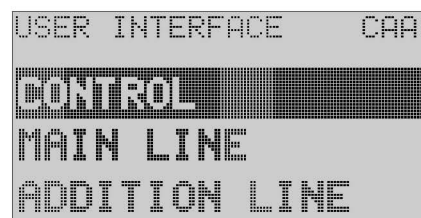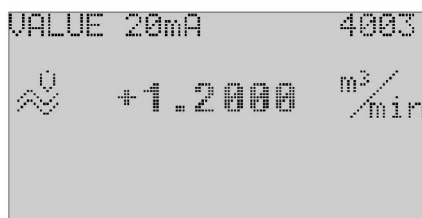

A0001653-EN

The function matrix index lists the codes for all the available "cells" in alphabetic and consecutive order, complete with the page references for the corresponding functions.


The index to the function matrix is on Page 133.

2 Function matrix

2.1 General layout of the function matrix

The function matrix consists of four levels:

Blocks → Groups → Function groups → Functions

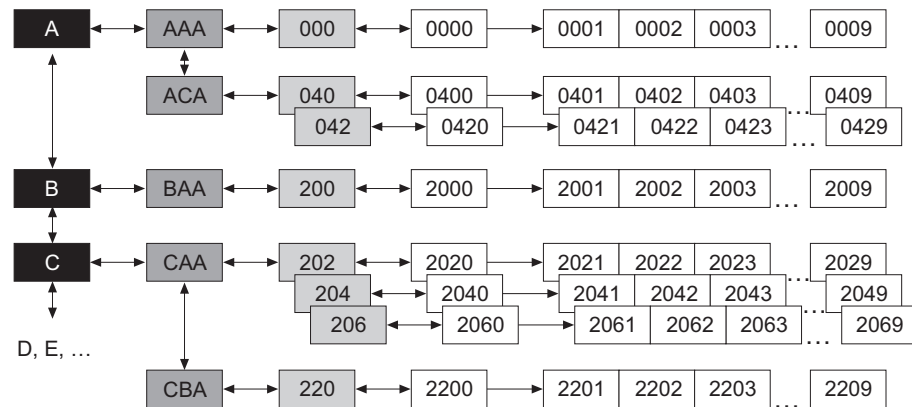

A0000961

2.1.1 Blocks (A, B, C, etc.)

The blocks are the highest-level grouping of the operation options for the device.

The blocks include, for example: MEASURED VARIABLES, QUICK SETUP, USER INTERFACE, TOTALIZER, etc.

2.1.2 Groups (AAA, AEA, CAA, etc.)

A block consists of one or more groups.

Each group represents a more detailed selection of the operation options in the higher-order block.

The groups in the "USER INTERFACE" block, for example, include: CONTROL, MAIN LINE, ADDITION LINE, etc.

2.1.3 Function groups (000, 020, 060, etc.)

A group consists of one or more function groups.

Each function group represents a more detailed selection of the operation options in the higher-order group. The function groups in the "CONTROL" group, for example, include: BASIC CONFIG., UNLOCKING/LOCKING, CONTROL, etc.

2.1.4 Functions (0000, 0001, 0002, etc.)

Each function group consists of one or more functions. The functions are used to operate and parameterize the measuring instrument. Numerical values can be entered or parameters selected and saved.

Available functions of the function group "BASIC CONFIG." are: LANGUAGE, DISPLAY DAMPING, CONTRAST LCD, etc.

The procedure for changing the language of the user interface, for example, is as follows:

1. Select the block "USER INTERFACE".
2. Select the group "CONTROL".
3. Select the function group "BASIC CONFIG.".
4. Select the function "LANGUAGE" (here you can set the language required).

2.1.5 Codes identifying cells

Each cell (block, group, function group and function) in the function matrix has an individual, unique code.

Blocks:

The code is a letter (A, B, C, etc.)

Groups:

The code consists of three letters (AAA, ABA, BAA, etc.).

The first letter matches the block code (i.e. each group in block A has a code starting with an A __; the codes of the groups in block B start with a B __, etc.). The other two letters are for identifying the group within the respective block.

Function groups:


The code consists of three digits (000, 001, 100, etc.).

Functions:

The code consists of four digits (0000, 0001, 0201, etc.).


The first three digits are the same as the code for the function group.

The last digit counts the functions in the function group, counting up from 0 to 9 (for example, function 0005 is the sixth function in the group 000).

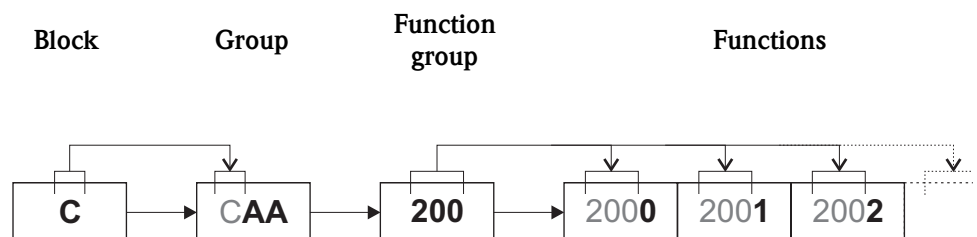

A0001251

2.2 Function matrix Promass 84

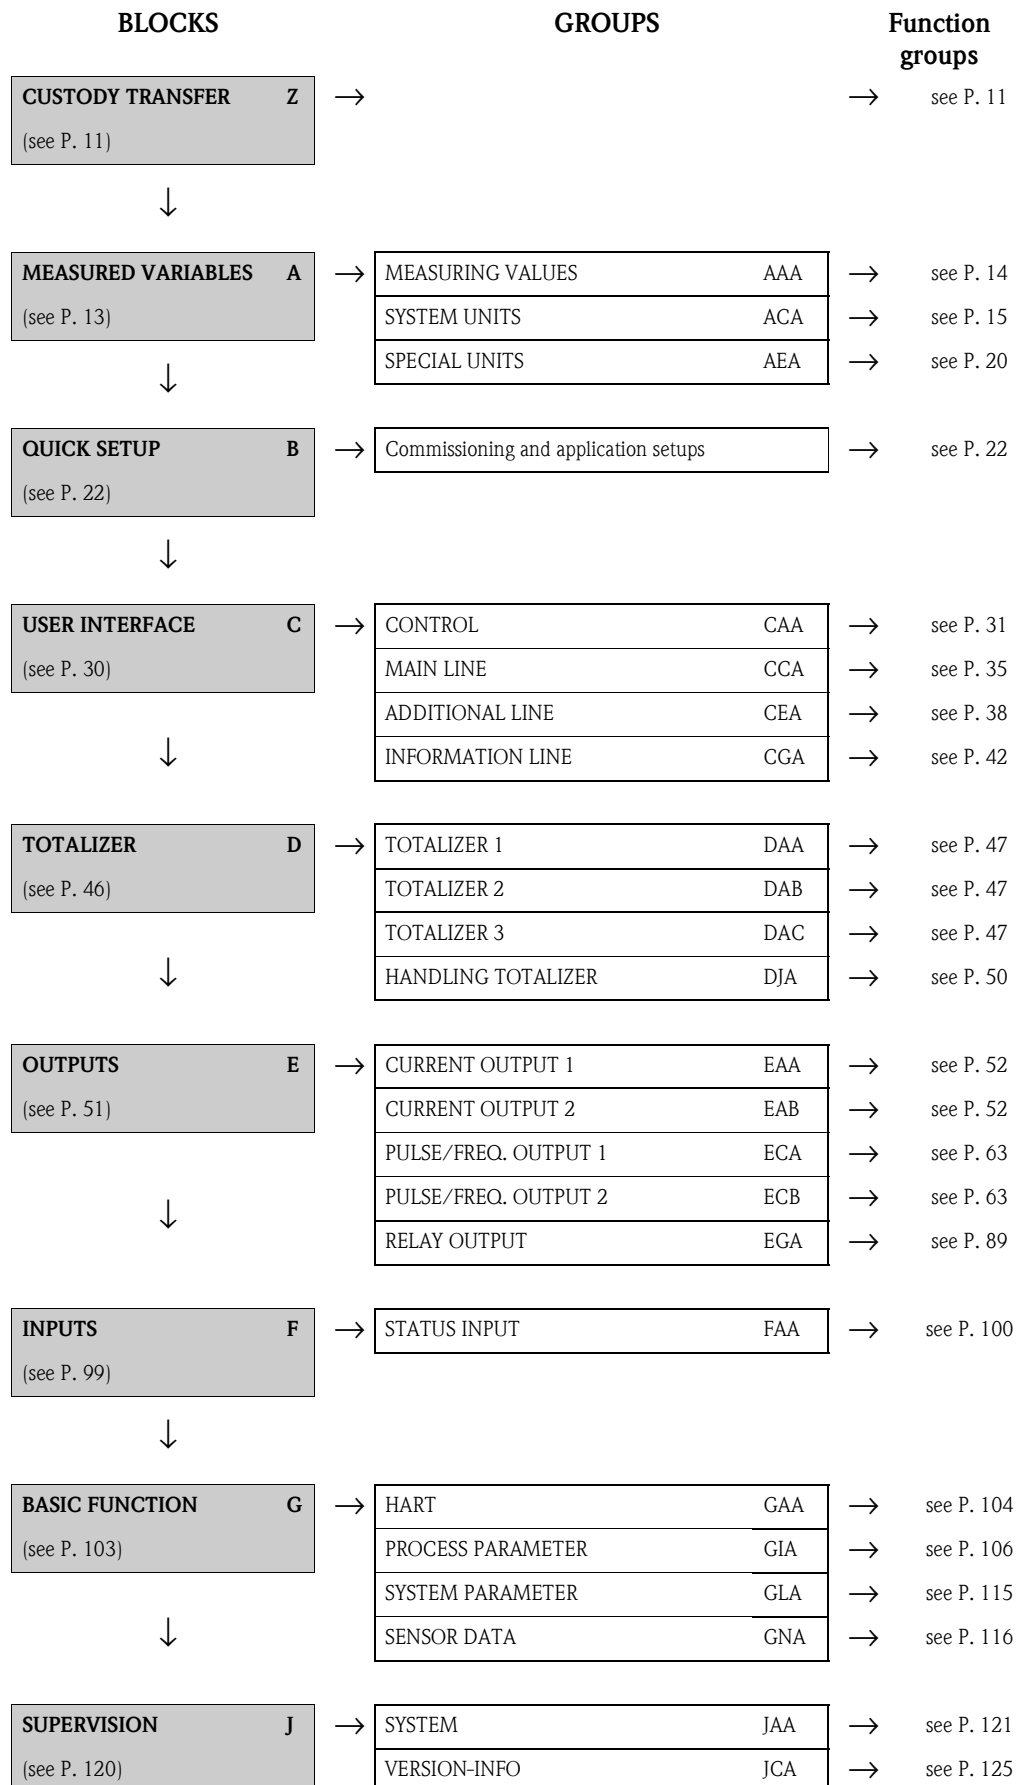

3 Block CUSTODY TRANSFER

Block	Group	Function groups	Functions			
CUSTODY TRANSFER (Z)	⇒	⇒	CUSTODY TRANSFER (Z000) P. 11	PULSE OUT.1 C.T. (Z001) P. 11	PULSE OUT.2 C.T. (Z002) P. 11	CURR. OUT. 1 C.T. (Z003) P. 11
			TOTALIZER 1 C.T. (Z006) P. 11	TOTALIZER 2 C.T. (Z007) P. 11	TOTALIZER 3 C.T. (Z008) P. 11	

Function description CUSTODY TRANSFER

 Note!

- If the measuring device is configured in accordance with the NTEP or MC approvals, this block (CUSTODY TRANSFER) is not available.
- If the measuring system is set to custody transfer and the hardware is sealed, then all the measuring instrument functions marked with a lock symbol  are protected against access. For additional information on this topic, refer to the Operating Instructions for the Promass 84 (BA109D) in Chapter 7.3.1, "Setting up custody transfer measurement".
- These functions are not available to be used again until you disable custody transfer mode of the measuring system. For additional information on this topic, refer to the Operating Instructions for the Promass 84 (BA109D) in Chapter 7.3.2, "Disabling custody transfer measurement".

CUSTODY TRANSFER (Z000)

Use this function to check whether the measuring point is set to custody transfer.

Display:

C.T. NO
C.T. YES

Factory setting:

C.T. NO

PULSE OUTPUT 1 CUSTODY TRANSFER (Z001)



 Note!

This function is available only if the measuring instrument has a pulse output 1.

Selection of the pulse output 1 for transferring the calibrated signal.

Options:

NO
YES

Factory setting:

NO

PULSE OUTPUT 2 CUSTODY TRANSFER (Z002)



 Note!

This function is available only if the measuring instrument has a pulse output 2.

Selection of the pulse output 2 for transferring the calibrated signal.

Options:

NO
YES

Factory setting:

NO

Function description CUSTODY TRANSFER	
CURRENT OUTPUT 1 CUSTODY TRANSFER (Z003) 	 Note! This function is available only if the measuring instrument has a current output 1. Selection of the current output 1 for transferring the calibrated signal. Options: NO YES Factory setting: NO
TOTALIZER 1 CUSTODY TRANSFER (Z006) 	Selection of the totalizer 1 for transferring the calibrated signal. Options: NO YES Factory setting: NO
TOTALIZER 2 CUSTODY TRANSFER (Z007) 	Selection of the totalizer 2 for transferring the calibrated signal. Options: NO YES Factory setting: NO
TOTALIZER 3 CUSTODY TRANSFER (Z008) 	Selection of the totalizer 3 for transferring the calibrated signal. Options: NO YES Factory setting: NO

4 Block MEASURED VARIABLES

Block	Groups	Function groups	Functions									
MEASURED VARIABLES (A)	MEASURING VALUES	⇐	MAIN VALUES (000) P. 14	⇐	MASS FLOW (0000) P. 14	⇐	VOLUME FLOW (0001) P. 14	CORRECTED VOL. FLOW (0004) P. 14	DENSITY (0005) P. 14	REFERENCE DENSITY (0006) P. 14	TEMPERATURE (0008) P. 14	
	⇐	SYSTEM UNITS (ACA) P. 15	⇐	CONFIGURATION (040) P. 15	⇐	UNIT MASS FLOW (0400) P. 15	⇐	UNIT MASS (0401) P. 15	UNIT VOL. FLOW (0402) P. 16	UNIT VOLUME (0403) P. 16	UNIT CORR. FLOW (0404) P. 17	UNIT CORR. VOLUME (0405) P. 17
	⇐	⇐	ADDITIONAL CONFIGURATION (042) P. 18	⇐	UNIT DENSITY (0420) P. 18	⇐	UNIT REFERENCE DENSITY (0421) P. 18	UNIT TEMPERATURE (0422) P. 19	UNIT LENGTH (0424) P. 19	UNIT PRESSURE (0426) P. 19		
	⇐	SPECIAL UNITS (AEA) P. 20	⇐	ARBITRARY UNIT (060) P. 20	⇐	TEXT MASS UNIT (0600) P. 20	⇐	FACTOR MASS UNIT (0601) P. 20	TEXT ARB. VOLUME (0602) P. 20	FACTOR ARB. VOLUME (0603) P. 21	TEXT DENSITY UNIT (0604) P. 21	FACTOR DENSITY UNIT (0605) P. 21

4.1 Group MEASURING VALUES


4.1.1 Function group MAIN VALUES

MEAS. VARIABLES	A	⇒	MEASURING VALUES	AAA	⇒	MAIN VALUES	000
-----------------	---	---	------------------	-----	---	-------------	-----

Function description	
MEASURED VARIABLES → MEASURING VALUES → MAIN VALUES	
 Note! ■ The units of all the measured variables shown here can be set in the SYSTEM UNITS group. ■ If the fluid in the pipe flows backwards, a negative sign prefixes the flow reading on the display.	
MASS FLOW (0000)	The currently measured mass flow appears on the display. Display: 5-digit floating-point number, including unit and sign (e.g. 462.87 kg/h; -731.63 lb/min; etc.)
VOLUME FLOW (0001)	The calculated volume flow appears on the display. The volume flow is derived from the measured mass flow and the measured density of the fluid. Display: 5-digit floating-point number, including unit and sign (e.g. 5.5445 dm³/min; 1.4359 m³/h; -731.63 gal/d; etc.)
CORRECTED VOLUME FLOW (0004)	The calculated corrected volume flow appears on the display. The calculated corrected volume flow is derived from the measured mass flow and the reference density of the fluid (density at reference temperature, measured or fixed entry). Display: 5-digit floating-point number, including unit and sign (e.g. 1.3549 Nm³/h; 7.9846 scm/day; etc.)
DENSITY (0005)	The currently measured density or its specific gravity appears on the display. Display: 5-digit floating-point number, including unit (e.g. 1.2345 kg/dm³; 993.5 kg/m³; 1.0015 SG_20 °C; etc.)
REFERENCE DENSITY (0006)	The density of the fluid, at reference temperature, appears on the display. The reference density can be calculated using the measured density or specified using the FIXED REFERENCE DENSITY function (see Page 110). Display: 5-digit floating-point number, including unit (e.g. 1.2345 kg/dm³; 993.5 kg/m³; 1.0015 SG_20 °C; etc.)
TEMPERATURE (0008)	The currently measured temperature appears on the display. Display: max. 4-digit fixed-point number, including unit and sign (e.g. -23.4 °C; 160.0 °F; 295.4 K; etc.)

4.2 Group SYSTEM UNITS

 4.2.1 Function group CONFIGURATION




Function description MEASURED VARIABLES → SYSTEM UNITS → CONFIGURATION	
You can select the units for measured variables in this function group.	
UNIT MASS FLOW (0400) 	For selecting the unit for displaying the mass flow. The unit you select here is also valid for: ■ Current outputs ■ Frequency outputs ■ Status output switch point (limit value for mass flow, flow direction) ■ Low flow cut off  Note! You can select the following time units: s = seconds, m = minutes, h = hours, d = day Options: Metric: Gram → g/time unit Kilogram → kg/time unit Ton → t/time unit US: ounce → oz/time unit pound → lb/time unit ton → ton/time unit For arbitrary units (see function TEXT ARBITRARY MASS on Page 20) _ _ _ _ → _ _ _ _/time unit Factory setting: Country-dependent (kg/h or US-lb/min)  Note! If you defined a unit of mass in the function group ARBITRARY UNIT 060 (see Page 20), the unit in question is shown here.
UNIT MASS (0401) 	For selecting the unit for displaying the mass. The unit you select here is also valid for: ■ Pulse value (e.g. kg/p) Options: Metric → g; kg; t US → oz; lb; ton For free selectable units → _ _ _ _ (see function TEXT ARBITRARY MASS on Page 20) Factory setting: Country-dependent (kg or US-lb)  Note! ■ If you defined a unit of mass in the function group ARBITRARY UNIT 060 (see Page 20), the unit in question is shown here. ■ The unit for the totalizers is independent of the selection made here and is selected separately for each totalizer.

Function description MEASURED VARIABLES → SYSTEM UNITS → CONFIGURATION	
UNIT VOLUME FLOW (0402) 	For selecting the unit for displaying the volume flow. The unit you select here is also valid for: ■ Current outputs ■ Frequency outputs ■ Status output switch point (limit value for volume flow, flow direction) ■ Low flow cut off  Note! You can select the following time units: s = seconds, m = minutes, h = hours, d = day Options: Metric: Cubic centimeter → cm³/time unit Cubic decimeter → dm³/time unit Cubic meter → m³/time unit Milliliter → ml/time unit Liter → l/time unit Hectoliter → hl/time unit Megaliter → Ml/time unit US: Cubic centimeter → cc/time unit Acre foot → af/time unit Cubic foot → ft³/time unit Fluid ounce → fl oz/time unit Gallon → gal/time unit Kilogallon → Kgal/time unit Million gallon → Mgal/time unit Barrel (normal fluids: 31.5 gal/bbl) → bbl/time unit Barrel (beer: 31.0 gal/bbl) → bbl/time unit Barrel (petrochemicals: 42.0 gal/bbl) → bbl/time unit Barrel (filling tanks: 55.0 gal/bbl) → bbl/time unit Imperial Gallon → gal/time unit Mega gallon → Mgal/time unit Barrel (beer: 36.0 gal/bbl) → bbl/time unit Barrel (petrochemicals: 34.97 gal/bbl) → bbl/time unit Arbitrary unit (see function TEXT ARBITRARY VOLUME on Page 20) ____ → ____/time unit Factory setting: Country-dependent (m³/h or US-Mgal/day)  Note! If you defined a unit of volume in the function group ARBITRARY UNIT 4060 (see Page 20), the unit in question is shown here.
UNIT VOLUME (0403) 	For selecting the unit for displaying the volume. The unit you select here is also valid for: Pulse value (e.g. m³/p) Options: Metric → cm³; dm³; m³; ml; l; hl; Ml Mega US → cc; af; ft³; oz f; gal; Kgal; Mgal; bbl (normal fluids); bbl (beer); bbl (petrochemicals) → bbl (filling tanks) Imperial → gal; Mgal; bbl (beer); bbl (petrochemicals) Arbitrary unit → ____ (see function TEXT ARBITRARY VOLUME on Page 20) Factory setting: m³  Note! ■ If you defined a unit of volume in the function group ARBITRARY UNIT 4060 (see Page 20), the unit in question is shown here. ■ The unit of the totalizers is independent of the selection made here and is selected separately for each totalizer.

Function description MEASURED VARIABLES → SYSTEM UNITS → CONFIGURATION	
UNIT CORRECTED VOLUME FLOW (0404) 	For selecting the unit for displaying the corrected volume flow. The unit you select here is also valid for: ■ Current outputs ■ Frequency outputs ■ Status output switch point (limit value for corrected volume flow, flow direction) ■ Low flow cut off  Note! You can select the following time units: s = seconds, m = minutes, h = hours, d = day Options: Metric: NI/time unit Nm³/time unit US: Sm³/time unit Scf/time unit Factory setting: Nm³/h
UNIT CORRECTED VOLUME (0405) 	For selecting the unit for displaying the corrected volume. The unit you select here is also valid for: ■ Pulse value (e.g. Nm³/p) Options: Metric: Nm³ NI US: Sm³ Scf Factory setting: Nm³  Note! The unit of the totalizers is independent of the selection made here and is selected separately for each totalizer.

4.2.2 Function group ADDITIONAL CONFIGURATION

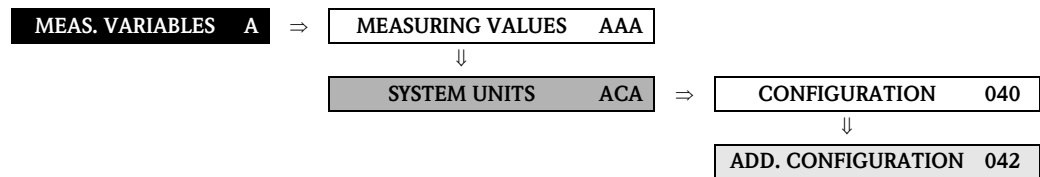


Function description	
MEASURED VARIABLES → SYSTEM UNITS → ADDITIONAL CONFIGURATION	
UNIT DENSITY (0420) 	For selecting the unit for displaying the density. The unit you select here is also valid for: ■ Current outputs ■ Frequency outputs ■ Status output switch point (limit value for density) ■ Density response value for EPD ■ Density adjustment value Options: Metric: g/cm³; g/cc; kg/dm³; kg/l; kg/m³; SD 4 °C, SD 15 °C, SD 20 °C; SG 4 °C, SG 15 °C, SG 20 °C US: lb/ft³; lb/gal; lb/bbl (normal fluids); lb/bbl (beer); lb/bbl (petrochemicals); lb/bbl (filling tanks) Imperial: lb/gal; lb/bbl (beer); lb/bbl (petrochemicals) Factory setting: kg/l SD = Specific Density, SG = Specific Gravity The specific density is the ratio of fluid density to water density (at water temperature = 4, 15, 20 °C).
UNIT REFERENCE DENSITY (0421) 	For selecting the unit for displaying the reference density. The unit you select here is also valid for: ■ Current outputs ■ Frequency outputs ■ Status output switch point (limit value for standard density) ■ Fixed reference density (for calculation of corrected volume flow) Options: Metric: kg/Nm³ kg/Nl US: g/Scf kg/Sm³ lb/Scf Factory setting: kg/Nl

Function description MEASURED VARIABLES → SYSTEM UNITS → ADDITIONAL CONFIGURATION	
UNIT TEMPERATURE (0422) 	For selecting the unit for displaying the temperature. The unit you select here is also valid for: ■ Current outputs ■ Frequency outputs ■ Status output switch point (limit value for temperature) ■ Reference temperature (for corrected volume measurement with measured reference density) Options: °C (Celsius) K (Kelvin) °F (Fahrenheit) °R (Rankine) Factory setting: °C
UNIT LENGTH (0424) 	For selecting the unit for displaying the length of the nominal diameter. The unit you select here is valid for: ■ Nominal diameter of sensor (function NOMINAL DIAMETER (6804) on Page 116) Options: MILLIMETER INCH Factory setting: MILLIMETER
UNIT PRESSURE (0426) 	For selecting the unit for displaying the pressure. The unit you select here is valid for: ■ Specified pressure (see function PRESSURE (6501) on Page 114) Options: bar a bar g psi a psi g Factory setting: bar g

4.3 Group SPECIAL-UNITS

4.3.1 Function group ARBITRARY UNIT

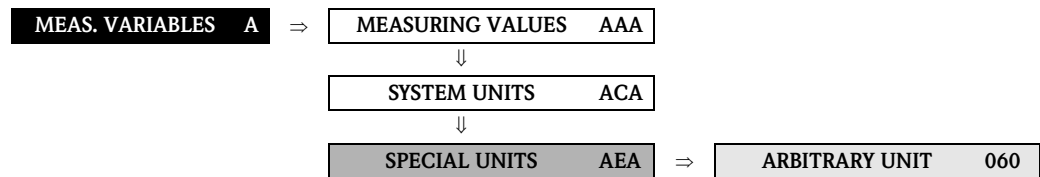

Function description MEASURED VARIABLES → SPECIAL-UNITS → ARBITRARY UNIT	
Use this function group to define a selectable unit for mass, mass flow, volume, volume flow and density (optional).	
TEXT ARBITRARY MASS (0600) 	Use this function to enter a text for the selectable mass unit / mass flow unit. You define only the text, the unit of time is provided from a choice of options (s, min, h, day). User input: xxxx (max. 4 characters) Valid characters are A-Z, 0-9, +, -, decimal point, white space or underscore Factory setting: " _ _ _ _ " (No text) Example: If your text entry is "CENT" (for centner), this text string appears on the display complete with the unit of time, e.g. "CENT/min": CENT = Mass (text input) CENT / min = Mass flow as shown (on the display)
FACTOR ARBITRARY MASS (0601) 	Use this function to define a quantity factor (without time) for the selectable mass-/ mass flow unit. The mass unit on which this factor is based is one kilogram. User input: 7-digit floating-point number Factory setting: 1 Reference quantity: kg Example: One centner is equivalent to 50 kg → 0.02 centner = 1 kg User input: 0.02
TEXT ARBITRARY VOLUME (0602) 	Use this function to enter a text for the selectable volume unit / volume flow unit. You define only the text, the unit of time is provided from a choice of options (s, min, h, day). User input: xxxx (max. 4 characters) Valid characters are A-Z, 0-9, +, -, decimal point, white space or underscore Factory setting: " _ _ _ _ " (No text) Example: If your text entry is "GLAS", this text string appears on the display complete with the unit of time, e.g. "GLAS/min": GLAS = Volume (text input) GLAS / min = Volume flow as shown (on the display)

Function description MEASURED VARIABLES → SPECIAL-UNITS → ARBITRARY UNIT	
FACTOR ARBITRARY VOLUME (0603) 	Use this function to define a quantity factor (without time) for the selectable unit. The volume unit on which this factor is based is one liter. User input: 7-digit floating-point number Factory setting: 1 Reference quantity: Liter Example: The volume of a glass is 0.5 l → 2 glasses = 1 liter User input: 2
TEXT ARBITRARY DENSITY (0604) 	Use this function to enter a text for the selectable density unit. User input: xxxx (max. 4 characters) Valid characters are A-Z, 0-9, +, -, decimal point, white space or underscore Factory setting: " _ _ _ _ " (No text) Example: Enter text "CE_L" (for centner per liter).
FACTOR ARBITRARY DENSITY (0605) 	Use this function to define a quantity factor for the selectable density unit. The density unit on which this factor is based is one kg/l. User input: 7-digit floating-point number Factory setting: 1 Reference quantity: kg/l Example: One centner per liter is equivalent to 50 kg/l → 0.02 centner/l = 1 kg/l User input: 0.02

5 Block QUICK SETUP

Block	Group	Function groups	Functions
QUICK SETUP (B)	⇒	⇒	OS COMMISS. (1002) P. 22 ⇒ OS PULS. FLOW (1003) P. 22 SETUP GAS MEASUREMENT (1004) P. 22 T-DAT SAVE/LOAD (1009) P. 23

Function description QUICK SETUP	
QUICK SETUP COMMISSIONING (1002) 	Start the setup for commissioning. Options: YES NO Factory setting: NO  Note! ■ You will find the flowchart of the Setup menu on Page 24. ■ For additional information on Setups, refer to the Operating Instructions for the Promass 84 (BA109D).
QUICK SETUP PULSATING FLOW (1003) 	Start the application-specific Setup menu for pulsating flow. Options: YES NO Factory setting: NO  Note! ■ You will find the flowchart of the Setup menu on Page 26. ■ For additional information on Setups, refer to the Operating Instructions for the Promass 84 (BA109D).
QUICK SETUP GAS MEASUREMENT (1004) 	Start the application-specific Setup menu for gas measurement. Options: YES NO Factory setting: NO  Note! ■ You will find the flowchart of the Setup menu on Page 28. ■ For additional information on Setups, refer to the Operating Instructions for the Promass 84 (BA109D).

Function description	
QUICK SETUP	
T-DAT SAVE/LOAD (1009) 	Use this function to save the parameter settings / configuration of the transmitter in a transmitter DAT (T-DAT), or to load the parameter settings from the T-DAT into the EEPROM (manual backup function). Application examples: ■ After commissioning, the current measuring point parameters can be saved to the T-DAT as a backup. ■ If the transmitter is replaced for some reason, the data from the T-DAT can be loaded into the new transmitter (EEPROM). Options: CANCEL SAVE (from EEPROM to T-DAT) LOAD (from the T-DAT into EEPROM) Factory setting: CANCEL  Note! ■ If the target device has an older software version, the message "TRANSM. SW-DAT" is displayed during startup. Then only the SAVE function is available. ■ LOAD This function is only possible if the target device has the same software version as, or a more recent software version than, the source device. ■ SAVE This function is always available.

5.1 Quick Setup

In the case of measuring devices without a local display, the individual parameters and functions must be configured via the configuration program, e.g. FieldCare.

If the measuring device is equipped with a local display, all the important device parameters for standard operation can be configured quickly and easily by means of the "Commissioning" Quick Setup menu.

- Quick Setup Commissioning, see below
- Quick Setup Pulsating Flow → Page 26
- Quick Setup Gas Measurement → Page 28


5.1.1 Quick Setup Commissioning

- ① The DELIVERY SETTING option sets every selected unit to the factory setting.
The ACTUAL SETTING option accepts the units you previously configured.
- ② Only units not yet configured in the current Setup are offered for selection in each cycle. The unit for mass, volume and corrected volume is derived from the corresponding flow unit.
- ③ The YES option remains visible until all the units have been configured. NO is the only option displayed when no further units are available.
- ④ Only the outputs not yet configured in the current Setup are offered for selection in each cycle.
- ⑤ The YES option remains visible until all the outputs have been configured. NO is the only option displayed when no further outputs are available.
- ⑥ The "automatic parameterization of the display" option contains the following basic settings/factory settings:
YES: Main line = Mass flow; Additional line = Totalizer 1; Information line = Operating/system conditions
NO: The existing (selected) settings remain.
- ⑦ The DOUBLE PULS 90° or DOUBLE PULS 180° can only be selected for frequency/pulse output 2 and only if the PULSE operating mode was selected for frequency/pulse output 1.
The frequency/pulse output 2 then works with the parameters selected by frequency/pulse output 1, but phase-shifted by 90° or 180°.



Note!


The display returns to the function QUICK SETUP COMMISSIONING (1002) if you press the  key combination during parameter interrogation. The stored parameters remain valid.

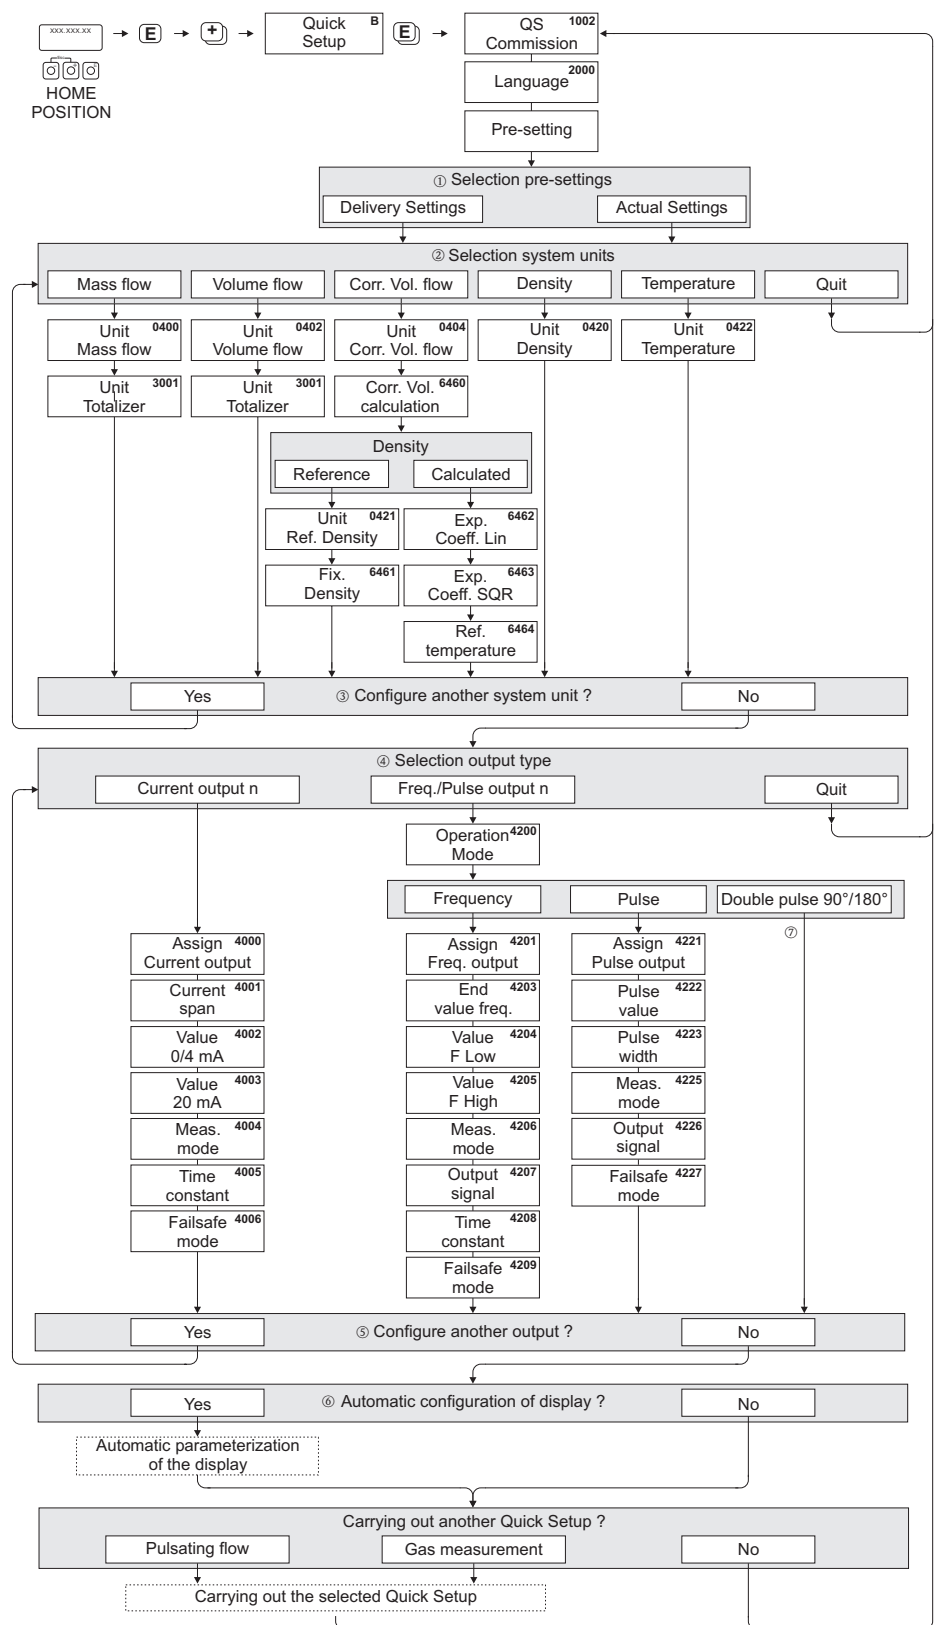

a0001786-en

Fig. 1: QUICK SETUP COMMISSIONING menu for straightforward configuration of the major device functions

5.1.2 Quick Setup Pulsating Flow

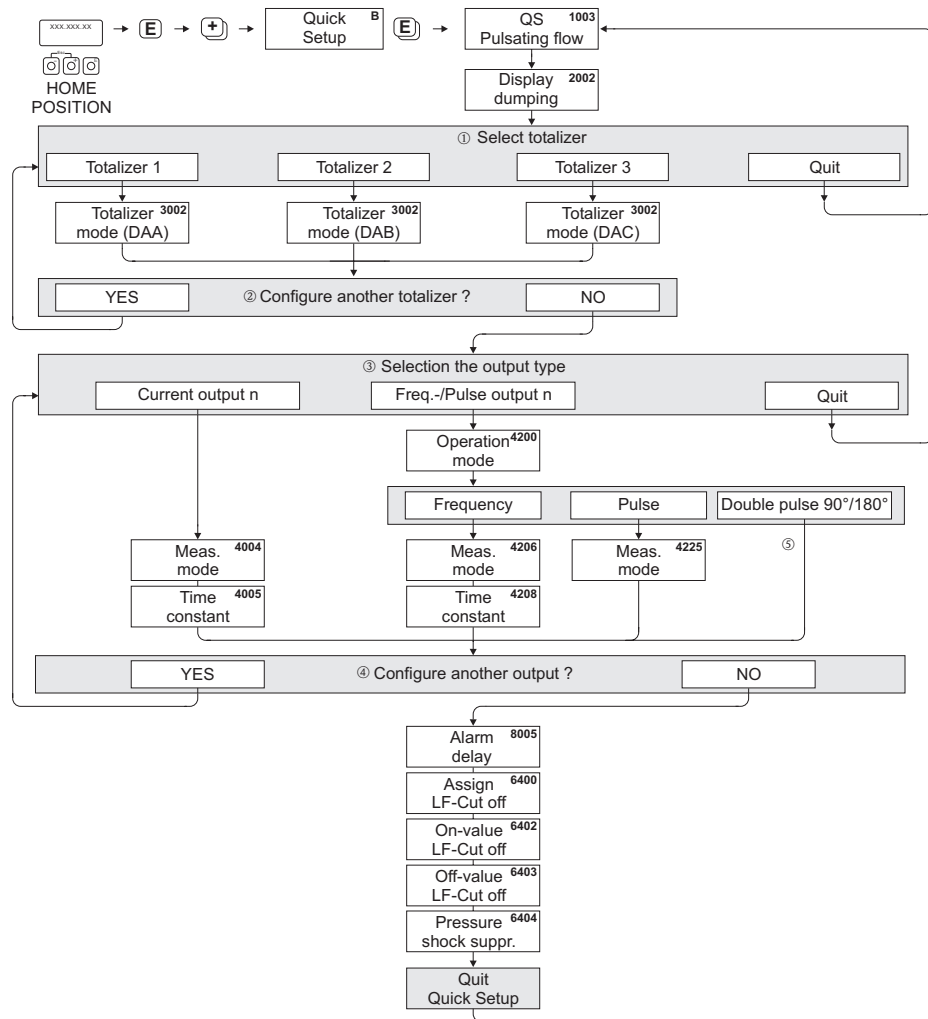

a0002131-en

Fig. 2: QUICK SETUP PULSATING FLOW menu for operation with severely pulsating flow. Recommended settings are found on the following page.

- ① Only totalizers not yet configured in the current Setup are offered for selection in each cycle.
- ② The YES option remains visible until all the totalizers have been configured. NO is the only option displayed when no further totalizers are available.
- ③ Only the outputs not yet configured in the current Quick Setup are offered for selection in each cycle.
- ④ The YES option remains visible until all the outputs have been configured. NO is the only option displayed when no further outputs are available.
- ⑤ The DOUBLE PULS 90° or DOUBLE PULS 180° can only be selected for frequency/pulse output 2 and only if the PULSE operating mode was selected for frequency/pulse output 1. The frequency/pulse output 2 then works with the parameters selected by frequency/pulse output 1, but phase-shifted by 90° or 180°.




Note!

- The display returns to the function QUICK SETUP PULSATING FLOW (1003) if you press the key combination during parameter interrogation. The stored parameters remain valid.
- You can call up this Setup menu either directly from the COMMISSIONING Setup menu or manually by means of the function QUICK SETUP PULSATING FLOW (1003).

Quick Setup Pulsating Flow		
HOME position →  → MEASURED VARIABLE (A) MEASURED VARIABLE →  → QUICK SETUP (B) QUICK SETUP →  → QS PULS. FLOW (1003)		
Function No.	Function name	Selection with ()
1003	QS PULS. FLOW	YES After  is pressed by way of confirmation, the Quick Setup menu calls up all the subsequent functions in succession.
▼		
Basic configuration		
2002	DISPLAY DAMPING	1 s
3002	TOTALIZER MODE (DAA)	BALANCE (Totalizer 1)
3002	TOTALIZER MODE (DAB)	BALANCE (Totalizer 2)
3002	TOTALIZER MODE (DAC)	BALANCE (Totalizer 3)
Signal type for CURRENT OUTPUT 1 to n		
4004	MEASURING MODE	PULS. FLOW
4005	TIME CONSTANT	1 s
Signal type for FREQ./PULSE OUTPUT 1 to n (for FREQUENCY mode of operation)		
4206	MEASURING MODE	PULS. FLOW
4208	TIME CONSTANT	0 s
Signal type for FREQ./PULSE OUTPUT 1 to n (for PULSE mode of operation)		
4225	MEASURING MODE	PULS. FLOW
Other settings		
8005	ALARM DELAY	0 s
6400	ASSIGN LOW FLOW CUTOFF	MASS FLOW
6402	ON-VALUE LOW FLOW CUT OFF	Setting depends on diameter: DN 1 = 0.02 [kg/h] or [l/h] DN 2 = 0.10 [kg/h] or [l/h] DN 4 = 0.45 [kg/h] or [l/h] DN 8 = 2.0 [kg/h] or [l/h] DN 15 = 6.5 [kg/h] or [l/h] DN 25 = 18 [kg/h] or [l/h] DN 40 = 45 [kg/h] or [l/h] DN 50 = 70 [kg/h] or [l/h] DN 80 = 180 [kg/h] or [l/h] DN 100 = 350 [kg/h] or [l/h] DN 150 = 650 [kg/h] or [l/h] DN 250 = 1800 [kg/h] or [l/h]
6403	OFF-VALUE LOW FLOW CUTOFF	50%
6404	PRESSURE SHOCK SUPPRESSION	0 s
▼		
Back to the HOME position: → Press and hold down Esc key  for longer than three seconds or → Repeatedly press and release Esc key  → Exit the function matrix step by step		

5.1.3 Quick Setup Gas Measurement

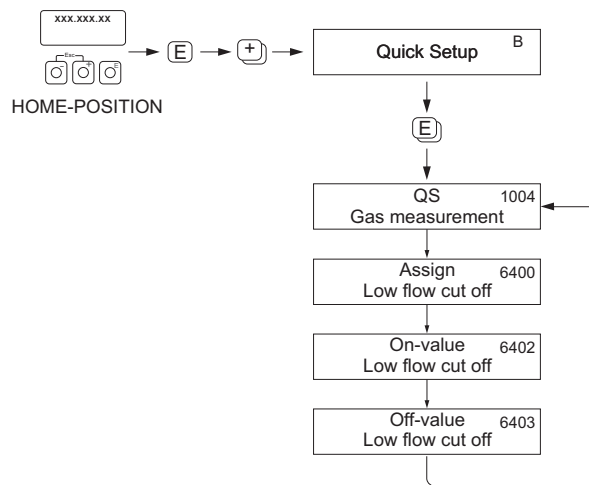

a0002502-en

Fig. 3: QUICK SETUP GAS MEASUREMENT menu

Quick Setup Gas Measurement		
HOME position → → MEASURED VARIABLE (A)		
MEASURED VARIABLE → → QUICK SETUP (B)		
QUICK SETUP → → QS-GAS MEASUREMENT (1004)		
Function No.	Function name	Setting to be selected () (to next function with)
1004	QS GAS MEASUREMENT	YES After is pressed by way of confirmation, the Quick Setup menu calls up all the subsequent functions in succession.
▼		
6400	ASSIGN LOW FLOW CUTOFF	On account of the low mass flow involved when gas flows are measured, it is advisable not use a low flow cutoff. Setting: OFF
6402	ON-VALUE LOW FLOW CUT OFF	If the ASSIGNMENT LOW FLOW CUTOFF function was not set to OFF, the following applies: Setting: 0.0000 [unit] User input: Flow rates for gas measurements are low, so the value for the switch-on point (= low flow cutoff) must be correspondingly low.
6403	OFF-VALUE LOW FLOW CUTOFF	If the ASSIGNMENT LOW FLOW CUTOFF function was not set to OFF, the following applies: Setting: 50% User input: Enter the switch-off point as a positive hysteresis in %, referenced to the switch-on point.
▼		
Back to the HOME position: → Press and hold down Esc key for longer than three seconds or → Repeatedly press and release Esc key → Exit the function matrix step by step		



Note!

Quick Setup automatically deactivates the function EMPTY PIPE DETECTION (6420) is automatically switched off by the Quick Setup.

5.2 Data back-up/transfer

You can use the T-DAT SAVE/LOAD function to transfer data (device parameters and settings) between the T-DAT (removable memory) and the EEPROM (device memory).


This is required for the following applications:

- Creating a backup: current data are transmitted from an EEPROM to the T-DAT.
- Replacing a transmitter: current data are copied from an EEPROM to the T-DAT, then transmitted to the EEPROM of the new transmitter.
- Duplicating data: current data are copied from an EEPROM to the T-DAT, then transmitted to EEPROMs of identical measuring points.



Note!

Installing and removing the T-DAT → Operating Instructions of the Promass 84 (BA109D)

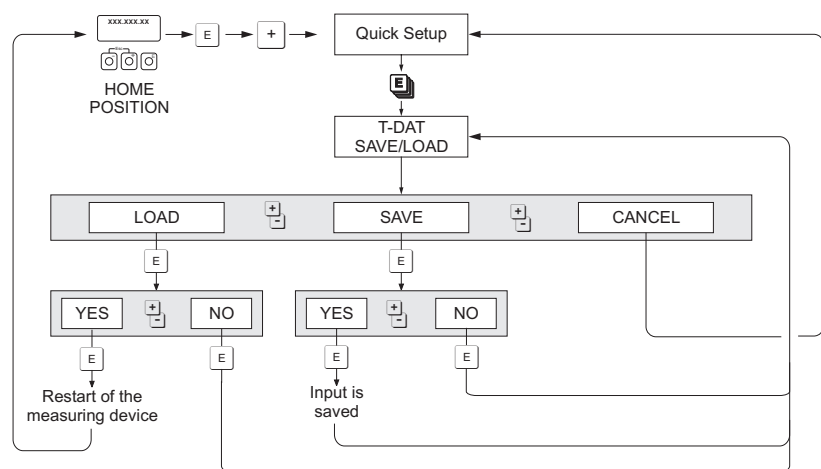

Data storage/transmission with T-DAT SAVE/LOAD

a0001221-en

Notes on the LOAD and SAVE options:

LOAD:

Data are transmitted from the T-DAT to the EEPROM.



Note!

- Previously saved settings on the EEPROM are deleted.
- This selection is available only if the T-DAT contains valid data.
- This selection can be made only if the software version of the T-DAT is the same or newer than that of the EEPROM. Otherwise, the error message "TRANSM. SW-DAT" appears after the restart and the LOAD function is subsequently no longer available.

SAVE:

Data are transmitted from the EEPROM to the T-DAT.

6 Block DISPLAY

Block	Groups	Function groups	Functions
USER INTERFACE (C)	OPERATION (CAA) P. 31	⇒	BASIC CONFIG. (200) P. 31 ⇒ LANGUAGE (2000) P. 31 ⇒ DISPLAY DAMPING (2002) P. 31 ⇒ CONTRAST LCD (2003) P. 31 ⇒ BACKLIGHT (2004) P. 32
			⇕
		⇕	UNLOCKING/LOCKING (202) P. 33 ⇒ ACCESS CODE (2020) P. 33 ⇒ DEFINE PRIVATE CODE (2021) P. 33 ⇒ STATUS ACCESS (2022) P. 33 ⇒ ACCESS CODE COUNTER (2023) P. 33
			⇕
	MAIN LINE (CCA) P. 35	⇒	OPERATION (204) P. 34 ⇒ TEST DISPLAY (2040) P. 34
			⇕
		⇕	CONFIGURATION (220) P. 35 ⇒ ASSIGN (2200) P. 35 ⇒ 100% VALUE (2201) P. 35 ⇒ FORMAT (2202) P. 36
			⇕
	ADDITIONAL LINE (CEA) P. 38	⇒	MULTIPLY (222) P. 37 ⇒ ASSIGN (2220) P. 37 ⇒ 100% VALUE (2221) P. 37 ⇒ FORMAT (2222) P. 37
			⇕
		⇕	CONFIGURATION (240) P. 38 ⇒ ASSIGN (2400) P. 38 ⇒ 100% VALUE (2401) P. 38 ⇒ FORMAT (2402) P. 39 ⇒ DISPLAY MODE (2403) P. 39
			⇕
	INFORMATION LINE (CGA) P. 42	⇒	MULTIPLY (242) P. 40 ⇒ ASSIGN (2420) P. 40 ⇒ 100% VALUE (2421) P. 41 ⇒ FORMAT (2422) P. 41 ⇒ DISPLAY MODE (2423) P. 41
			⇕
		⇕	CONFIGURATION (260) P. 42 ⇒ ASSIGN (2600) P. 42 ⇒ 100% VALUE (2601) P. 43 ⇒ FORMAT (2602) P. 43 ⇒ DISPLAY MODE (2603) P. 43
			⇕
		⇒	MULTIPLY (262) P. 44 ⇒ ASSIGN (2620) P. 44 ⇒ 100% VALUE (2621) P. 45 ⇒ FORMAT (2622) P. 45 ⇒ DISPLAY MODE (2623) P. 45
			⇕
		⇕	

6.1 Group CONTROL

6.1.1 Function group BASIC CONFIG.

USER INTERFACE C



CONTROL

CAA




BASIC CONFIGURATION 200

Function description DISPLAY → CONTROL → BASIC CONFIG.	
LANGUAGE (2000)  (only for NTEP, MC)	For selecting the language for all texts, parameters and messages shown on the local display.  Note! The displayed options depend on the available language group shown in the LANGUAGE GROUP ((8226) → Page 126) function. Options: Language group WEST EU / USA: ENGLISH DEUTSCH FRANCAIS ESPANOL ITALIANO NEDERLANDS PORTUGUESE Language group EAST EU / SCAND: ENGLISH NORSK SVENSKA SUOMI POLISH RUSSIAN CZECH Language group ASIA: ENGLISH BAHASA INDONESIA JAPANESE (syllabary) Language group CHINA: ENGLISH CHINESE Factory setting: Country-dependent (Page 130)  Note! ■ If you press the  keys simultaneously at startup, the language defaults to ENGLISH. ■ You can change the language group via the configuration software FieldCare. Please do not hesitate to contact your Endress+Hauser sales office if you have any questions.
DISPLAY DAMPING (2002)  (only for NTEP, MC)	For entering a time constant which defines how the display reacts to severely fluctuating flow variables, either very quickly (enter a low time constant) or with damping (enter a high time constant). User input: 0 to 100 seconds Factory setting: 1 s  Note! Setting the time constant to zero seconds switches off damping.
CONTRAST LCD (2003)  (only for NTEP, MC)	For adjusting the display contrast to suit local operating conditions. User input: 10 to 100% Factory setting: 50%


Function description DISPLAY → CONTROL → BASIC CONFIG.	
BACKLIGHT (2004) 🕒 (only for NTEP, MC)	For adjusting the backlight to suit local operating conditions. User input: 0 to 100%  Note! Entering the value 0 means that the backlight is switched off. The display then no longer emits any light, i.e. the display texts can no longer be read in the dark. Factory setting: 50%

 6.1.2 Function group UNLOCKING/LOCKING



Function description	
USER INTERFACE → CONTROL → UNLOCKING/LOCKING	
ACCESS CODE (2020)	All data of the measuring system are protected against inadvertent change. Programming is disabled and the settings cannot be changed until a code is entered in this function. If you press the  or  keys in any function, the measuring system automatically goes to this function and the prompt to enter the code appears on the display (when programming is disabled). You can enable programming by entering your personal code (Factory setting = 84, see function DEFINE PRIVATE CODE (2021)). To set the measuring instrument to access-protection mode, enter the custody code 8400 here. This locks all the functions that are marked with a keyhole symbol (). User input: max. 4-digit number: 0 to 9999  Note! ■ Programming is disabled if you do not press a key within 60 seconds following automatic return to the HOME position. ■ You can also disable programming in this function by entering any number (other than the defined private code). ■ The Endress+Hauser service organization can be of assistance if you mislay your personal code.
DEFINE PRIVATE CODE (2021)  (only for NTEP, MC)	For specifying a personal code for enabling programming in the function ACCESS CODE. User input: 0 to 9999 (max. 4-digit number) Factory setting: 84  Note! ■ Programming is always enabled with the code 0. ■ Programming has to be enabled before this code can be changed. When programming is disabled this function is not available, thus preventing others from accessing your personal code.
STATUS ACCESS (2022)	Indicates whether access to the function matrix is currently possible (ACCESS CUSTOMER) or whether configuration is locked (LOCKED). Display: ACCESS CUSTOMER (parameterization possible) LOCKED (parameterization disabled)
ACCESS CODE COUNTER (2023)	Displays how often the customer code, service code or the digit "0" (code-free) has been entered to gain access to the function matrix. Display: max. 7-digit number: 0 to 9999999 Factory setting: 0


6.1.3 Function group OPERATION

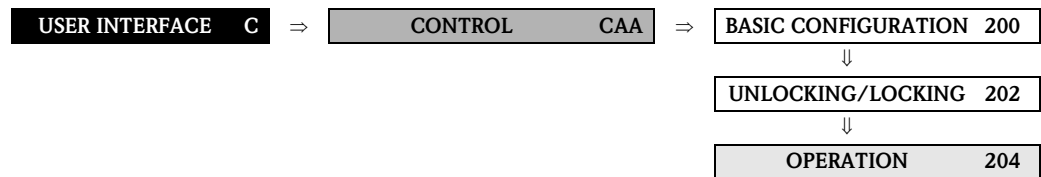


Function description USER INTERFACE → CONTROL → OPERATION	
TEST DISPLAY (2040)	For testing the operability of the local display and its pixels. Options: OFF ON Factory setting: OFF Test sequence: 1. Start the test by selecting ON. 2. All pixels of the main line, additional line and information line are darkened for minimum 0.75 second. 3. Main line, additional line and information line show an "8" in each field for minimum 0.75 seconds. 4. Main line, additional line and information line show a "0" in each field for minimum 0.75 seconds. 5. Main line, additional line and information line show nothing (blank display) for minimum 0.75 second. When the test is completed, the local display returns to its initial state and the setting changes to OFF.

6.2 Group MAIN LINE

 
6.2.1 Function group CONFIGURATION



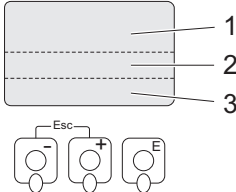Function description	
USER INTERFACE → MAIN LINE → CONFIGURATION	
1 = Main line 2 = Addition line 3 = Information line 	A0001253
ASSIGN (2200) 	For assigning a value to be displayed to the main line (top line in the local display). This value is displayed during normal operation. Options: OFF MASS FLOW MASS FLOW IN % VOLUME FLOW VOLUME FLOW IN % CORRECTED VOLUME FLOW CORRECTED VOLUME FLOW IN % DENSITY REFERENCE DENSITY TEMPERATURE ACTUAL CURRENT ACTUAL VALUE FREQUENCY (1 to 2) TOTALIZER (1 to 3) CUSTODY TRANSFER Factory setting: MASS FLOW
100% VALUE (2201) 	 Note! This function is not available unless one of the following was selected in the ASSIGN function (2200): ■ MASS FLOW IN % ■ VOLUME FLOW IN % ■ CORRECTED VOLUME FLOW IN % For specifying the value to be shown on the display as the 100% value. User input: 5-digit floating-point number Factory setting: depends on nominal diameter and country → Page 129 ff.

Function description USER INTERFACE → MAIN LINE → CONFIGURATION	
FORMAT (2202) 	Select the number of places after the decimal point displayed for the reading in the main line. Options: XXXXX, - XXXX.X - XXX.XX - XX.XXX -X.XXXX Factory setting: X.XXXX  Note! ■ Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations. ■ The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → kg/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.


6.2.2 Function group MULTIPLEX

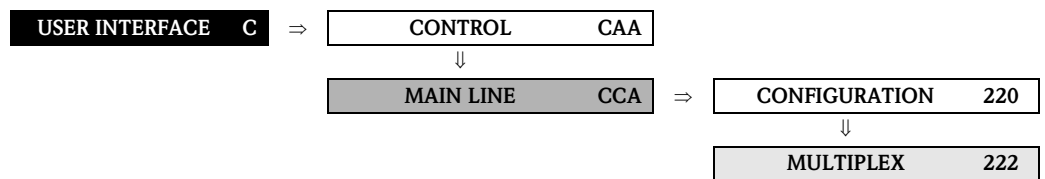


Function description USER INTERFACE → MAIN LINE → MULTIPLEX	
ASSIGN (2220) 	For assigning a second reading to the main line, to be displayed in the main line alternately (every 10 seconds) with the value defined in the ASSIGN function (2200). Options: OFF MASS FLOW MASS FLOW IN % VOLUME FLOW VOLUME FLOW IN % CORRECTED VOLUME FLOW CORRECTED VOLUME FLOW IN % DENSITY REFERENCE DENSITY TEMPERATURE ACTUAL CURRENT ACTUAL VALUE FREQUENCY (1 to 2) TOTALIZER (1 to 3) CUSTODY TRANSFER Factory setting: OFF
100% VALUE (2221) 	Note! This function is not available unless one of the following was selected in the ASSIGN function (2220): ■ MASS FLOW IN % ■ VOLUME FLOW IN % ■ CORRECTED VOLUME FLOW IN % For specifying the value to be shown on the display as the 100% value. User input: 5-digit floating-point number Factory setting: depends on nominal diameter and country → Page 129 ff.
FORMAT (2222) 	Select the number of places after the decimal point displayed for the second reading in the main line. Options: XXXXX. - XXXX.X - XXX.XX - XX.XXX -X.XXXX Factory setting: X.XXXX Note! ■ Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations. ■ The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → kg/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.

6.3 Group ADDITION LINE


6.3.1 Function group CONFIGURATION

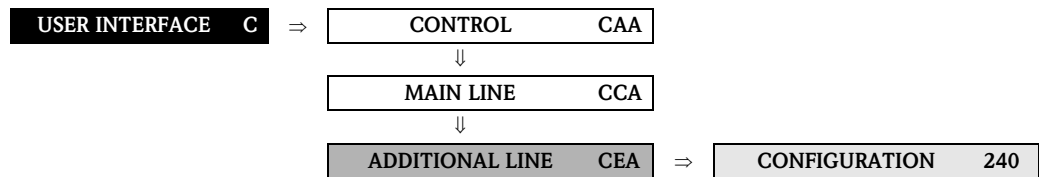

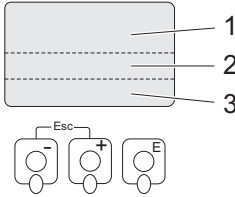Function description	
USER INTERFACE → ADDITION LINE → CONFIGURATION	
1 = Main line 2 = Addition line 3 = Information line  A0001253	
ASSIGN (2400) ①	For assigning a value to be displayed to the additional line (middle line in the local display). This value is displayed during normal operation. Options: OFF MASS FLOW MASS FLOW IN % VOLUME FLOW VOLUME FLOW IN % CORRECTED VOLUME FLOW CORRECTED VOLUME FLOW IN % DENSITY REFERENCE DENSITY TEMPERATURE MASS FLOW BARGRAPH IN % VOLUME FLOW BARGRAPH IN % CORRECTED VOLUME FLOW BARGRAPH IN % ACTUAL CURRENT ACTUAL VALUE FREQUENCY (1 to 2) TOTALIZER (1 to 3) TAG NAME CUSTODY TRANSFER Factory setting: TOTALIZER 1
100% VALUE (2401) ①	 Note! This function is not available unless one of the following was selected in the ASSIGN function (2400): ■ MASS FLOW IN % ■ VOLUME FLOW IN % ■ CORRECTED VOLUME FLOW IN % ■ MASS FLOW BARGRAPH IN % ■ VOLUME FLOW BARGRAPH IN % ■ CORRECTED VOLUME FLOW BARGRAPH IN % For specifying the value to be shown on the display as the 100% value. User input: 5-digit floating-point number Factory setting: depends on nominal diameter and country → Page 129 ff.

Function description	
USER INTERFACE → ADDITION LINE → CONFIGURATION	
FORMAT (2402)	Note! This function is not available unless a number was selected in the ASSIGN function (2400). Select the number of places after the decimal point displayed for the reading in the addition line. Options: XXXXX. - XXXX.X - XXX.XX - XX.XXX -X.XXXX Factory setting: X.XXXX Note! ■ Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations. ■ The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → kg/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.

6.3.2 Function group MULTIPLEX

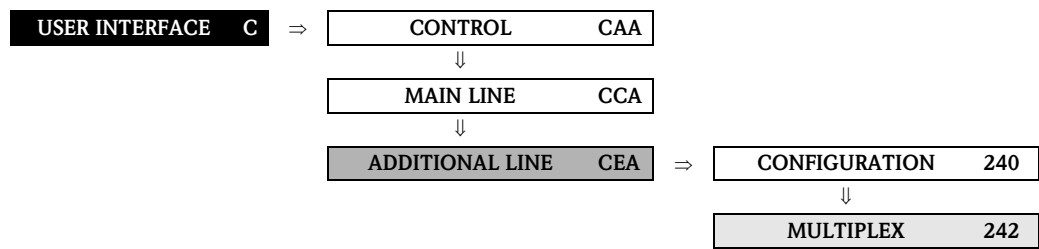



Function description	
USER INTERFACE → ADDITION LINE → MULTIPLEX	
ASSIGN (2420) 	For assigning a second reading to the addition line, to be displayed in the addition line alternately (every 10 seconds) with the value defined in the ASSIGN function (2400). Options: OFF MASS FLOW MASS FLOW IN % VOLUME FLOW VOLUME FLOW IN % CORRECTED VOLUME FLOW CORRECTED VOLUME FLOW IN % DENSITY REFERENCE DENSITY TEMPERATURE MASS FLOW BARGRAPH IN % VOLUME FLOW BARGRAPH IN % CORRECTED VOLUME FLOW BARGRAPH IN % ACTUAL CURRENT ACTUAL VALUE FREQUENCY (1 to 2) TOTALIZER (1 to 3) TAG NAME CUSTODY TRANSFER Factory setting: OFF Note! Multiplex mode is suspended as soon as a fault / notice message is generated. The message in question appears on the display. ■ Fault message (identified by a lightning icon): – If ON was selected in the ACKNOWLEDGE FAULTS (8004) function, multiplex mode is continued as soon as the fault has been acknowledged and is no longer active. – If OFF has been selected in the ACKNOWLEDGE FAULTS (8004) function, multiplex mode is continued as soon as the fault is no longer active. ■ Notice message (identified by an exclamation mark): – Multiplex mode is continued as soon as the notice message is no longer active.

Function description	
USER INTERFACE → ADDITION LINE → MULTIPLEX	
100% VALUE (2421) 	 Note! This function is not available unless one of the following was selected in the ASSIGN function (2420): ■ MASS FLOW IN % ■ VOLUME FLOW IN % ■ CORRECTED VOLUME FLOW IN % ■ MASS FLOW BARGRAPH IN % ■ VOLUME FLOW BARGRAPH IN % ■ CORRECTED VOLUME FLOW BARGRAPH IN % For specifying the value to be shown on the display as the 100% value. User input: 5-digit floating-point number Factory setting: depends on nominal diameter and country → Page 129 ff.
FORMAT (2422) 	 Note! This function is not available unless a number was selected in the ASSIGN function (2420). Select the number of places after the decimal point displayed for the second reading in the addition line. Options: XXXXX. - XXXX.X - XXX.XX - XX.XXX -X.XXXX Factory setting: X.XXXX  Note! ■ Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations. ■ The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → kg/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.
DISPLAY MODE (2423) 	 Note! This function is not available unless one of the following was selected in the ASSIGN function (2420): ■ MASS FLOW BARGRAPH IN % ■ VOLUME FLOW BARGRAPH IN % ■ CORRECTED VOLUME FLOW BARGRAPH IN % Use this function to define the format of the bar graph. Options: STANDARD Simple bar graph with 25 / 50 / 75% gradations and integrated sign.  A0001258 SYMMETRY Symmetrical bar graph for positive and negative directions of flow, with -50 / 0 / +50% gradations and integrated sign..  A0001259 Factory setting: STANDARD

6.4 Group INFORMATION LINE


6.4.1 Function group CONFIGURATION

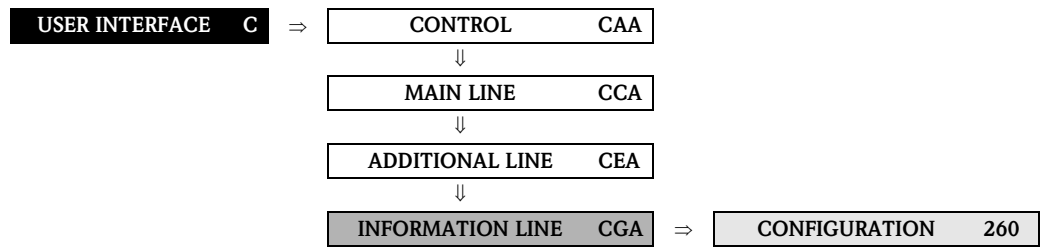

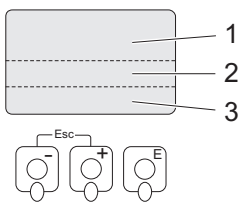Function description	
USER INTERFACE → INFORMATION LINE → CONFIGURATION	
1 = Main line 2 = Addition line 3 = Information line 	A0001253
ASSIGN (2600) ①	For assigning a value to be displayed to the information line (bottom line in the local display). This value is displayed during normal operation. Options: OFF MASS FLOW MASS FLOW IN % VOLUME FLOW VOLUME FLOW IN % CORRECTED VOLUME FLOW CORRECTED VOLUME FLOW IN % DENSITY REFERENCE DENSITY TEMPERATURE MASS FLOW BARGRAPH IN % VOLUME FLOW BARGRAPH IN % CORRECTED VOLUME FLOW BARGRAPH IN % ACTUAL CURRENT ACTUAL VALUE FREQUENCY (1 to 2) TOTALIZER (1 to 3) TAG NAME OPERATING/SYSTEM CONDITIONS FLOW DIRECTION READING CUSTODY TRANSFER Factory setting: OPERATING/SYSTEM CONDITIONS

Function description	
USER INTERFACE → INFORMATION LINE → CONFIGURATION	
100% VALUE (2601) 	 Note! This function is not available unless one of the following was selected in the ASSIGN function (2600): ■ MASS FLOW IN % ■ VOLUME FLOW IN % ■ CORRECTED VOLUME FLOW IN % ■ MASS FLOW BARGRAPH IN % ■ VOLUME FLOW BARGRAPH IN % ■ CORRECTED VOLUME FLOW BARGRAPH IN % For specifying the value to be shown on the display as the 100% value. User input: 5-digit floating-point number Factory setting: depends on nominal diameter and country → Page 129 ff.
FORMAT (2602) 	 Note! This function is not available unless a number was selected in the ASSIGN function (2600). Select the number of places after the decimal point displayed for the reading in the information line. Options: XXXXX. - XXXX.X - XXX.XX - XX.XXX -X.XXXX Factory setting: X.XXXX  Note! ■ Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations. ■ The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → kg/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.
DISPLAY MODE (2603) 	 Note! This function is not available unless one of the following was selected in the ASSIGN (2600) function: ■ MASS FLOW BARGRAPH IN % ■ VOLUME FLOW BARGRAPH IN % ■ CORRECTED VOLUME FLOW BARGRAPH IN % Use this function to define the format of the bar graph. Options: STANDARD Simple bar graph with 25 / 50 / 75% gradations and integrated sign.  SYMMETRY Symmetrical bar graph for positive and negative directions of flow, with -50 / 0 / +50% gradations and integrated sign..  Factory setting: STANDARD A0001258 A0001259


6.4.2 Function group MULTIPLEX

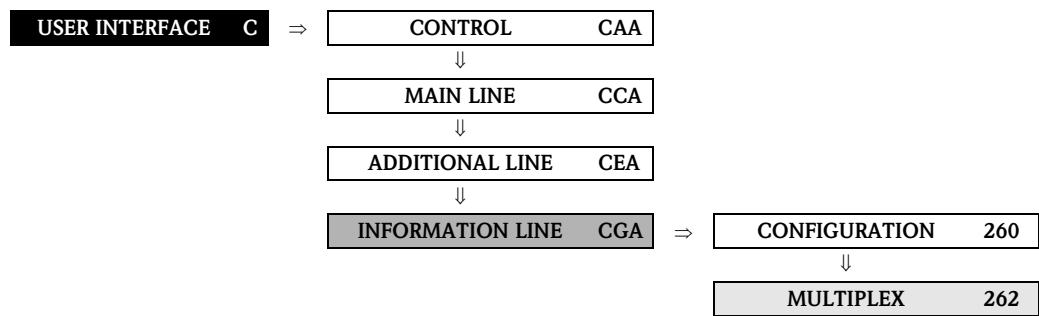

Function description	
USER INTERFACE → INFORMATION LINE → MULTIPLEX	
ASSIGN (2620) 	For assigning a second reading to the information line, to be displayed in the information line alternately (every 10 seconds) with the value defined in the ASSIGN function (2600). Options: OFF MASS FLOW MASS FLOW IN % VOLUME FLOW VOLUME FLOW IN % CORRECTED VOLUME FLOW CORRECTED VOLUME FLOW IN % DENSITY REFERENCE DENSITY TEMPERATURE MASS FLOW BARGRAPH IN % VOLUME FLOW BARGRAPH IN % CORRECTED VOLUME FLOW BARGRAPH IN % ACTUAL CURRENT ACTUAL VALUE FREQUENCY (1 to 2) TOTALIZER (1 to 3) TAG NAME OPERATING/SYSTEM CONDITIONS FLOW DIRECTION READING CUSTODY TRANSFER Factory setting: OFF Note! Multiplex mode is suspended as soon as a fault / notice message is generated. The message in question appears on the display. ■ Fault message (identified by a lightning icon): – If ON was selected in the ACKNOWLEDGE FAULTS (8004) function, multiplex mode is continued as soon as the fault has been acknowledged and is no longer active. – If OFF has been selected in the ACKNOWLEDGE FAULTS (8004) function, multiplex mode is continued as soon as the fault is no longer active. ■ Notice message (identified by an exclamation mark): – Multiplex mode is continued as soon as the notice message is no longer active.


Function description	
USER INTERFACE → INFORMATION LINE → MULTIPLEX	
100% VALUE (2621) 	 Note! This function is not available unless one of the following was selected in the ASSIGN function (2620): ■ MASS FLOW IN % ■ VOLUME FLOW IN % ■ CORRECTED VOLUME FLOW IN % ■ MASS FLOW BARGRAPH IN % ■ VOLUME FLOW BARGRAPH IN % ■ CORRECTED VOLUME FLOW BARGRAPH IN % For specifying the value to be shown on the display as the 100% value. User input: 5-digit floating-point number Factory setting: depends on nominal diameter and country → Page 129 ff.
FORMAT (2622) 	 Note! This function is not available unless a number was selected in the ASSIGN function (2620). Select the number of places after the decimal point displayed for the second reading in the information line. Options: XXXXX. - XXXX.X - XXX.XX - XX.XXX -X.XXXX Factory setting: X.XXXX  Note! ■ Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations. ■ The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → kg/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.
DISPLAY MODE (2623) 	 Note! This function is not available unless one of the following was selected in the ASSIGN function (2620): ■ MASS FLOW BARGRAPH IN % ■ VOLUME FLOW BARGRAPH IN % ■ CORRECTED VOLUME FLOW BARGRAPH IN % Use this function to define the format of the bar graph. Options: STANDARD Simple bar graph with 25 / 50 / 75% gradations and integrated sign.  A0001258 SYMMETRY Symmetrical bar graph for positive and negative directions of flow, with -50 / 0 / +50% gradations and integrated sign..  A0001259 Factory setting: STANDARD

7 Block TOTALIZER

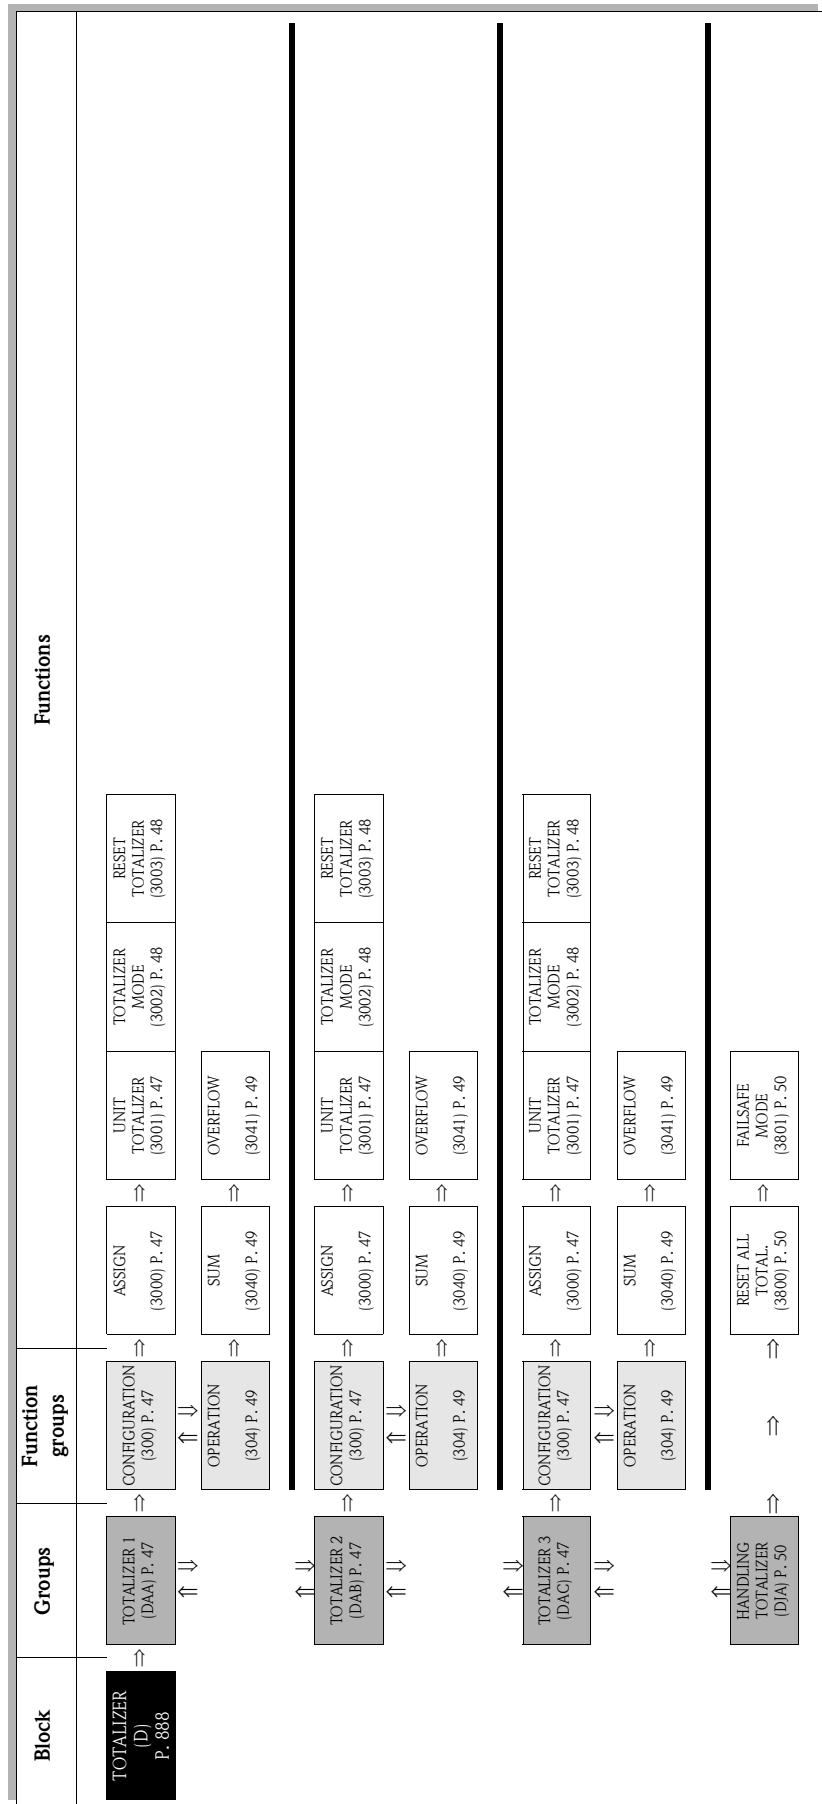

7.1 Group TOTALIZER (1 to 3)


7.1.1 Function group CONFIGURATION

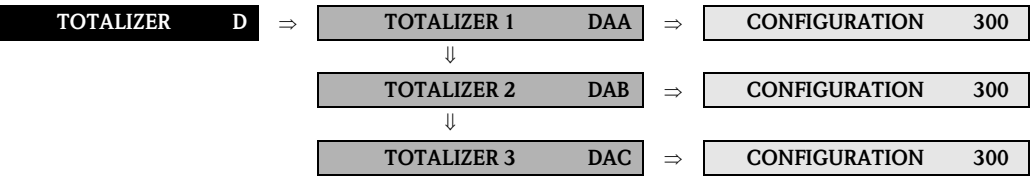

Function description	
TOTALIZER → TOTALIZER (1 to 3) → CONFIGURATION	
The function descriptions below apply to totalizers 1 to 3; the totalizers are independently configurable.	
ASSIGN (3000) 	For assigning a measured variable to the totalizer in question. Options (standard): OFF MASS FLOW VOLUME FLOW CORRECTED VOLUME FLOW Factory setting: MASS FLOW  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z006 to Z008 in the CUSTODY TRANSFER block. ■ The totalizer is reset to 0 as soon as the selection is changed. ■ If you select OFF in the function group of the totalizer in question, only the ASSIGN (ASSIGN(3000)) function remains visible.
UNIT TOTALIZER (3001) 	For selecting the unit for the measured variable assigned in the function ASSIGN (3000). Options: for the MASS FLOW assignment Metric → g; kg; t US → oz; lb; ton Arbitrary unit → _ _ _ _ Factory setting: kg Options: for the VOLUME FLOW assignment Metric → cm³; dm³; m³; ml; l; hl; Ml Mega US → cc; af; ft³; oz f; gal; Kgal; Mgal; bbl (normal fluids); bbl (beer); bbl (petrochemicals); bbl (filling tanks) Imperial → gal; Mgal; bbl (beer); bbl (petrochemicals) Arbitrary unit → _ _ _ _ Factory setting: m³ (continued on next page)


Function description	
TOTALIZER → TOTALIZER (1 to 3) → CONFIGURATION	
UNIT TOTALIZER (continued)	Options: for the CORRECTED VOLUME FLOW assignment Metric → Nl; Nm³ US → Sm³; Scf Factory setting: Nm³  Note! This function cannot be changed if: ■ The measuring device has been configured in accordance with NTEP or MC approval. ■ The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for the available functions Z006 to Z008 in the CUSTODY TRANSFER block.
TOTALIZER MODE (3002) 	For selecting how the totalizer should operate. Options: BALANCE Positive and negative flow components. The positive and negative flow components are balanced. In other words, net flow in the flow direction is registered. FORWARD Only positive flow components REVERSE Only negative flow components Factory setting: Totalizer 1 = BALANCE Totalizer 2 = FORWARD Totalizer 3 = REVERSE  Note! This function cannot be changed if: ■ The measuring device has been configured in accordance with NTEP or MC approval. ■ The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for the available functions Z006 to Z008 in the CUSTODY TRANSFER block.
RESET TOTALIZER (3003) 	Resets the total and the overflow of the totalizer to zero. Options: NO YES Factory setting: NO  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for the available functions Z006 to Z008 in the CUSTODY TRANSFER block. ■ If the measuring instrument is equipped with a status input, with the appropriate configuration a reset for each individual totalizer can also be triggered by a pulse (see the function ASSIGN STATUS INPUT (5000) on Page 100).

7.1.2 Function group OPERATION

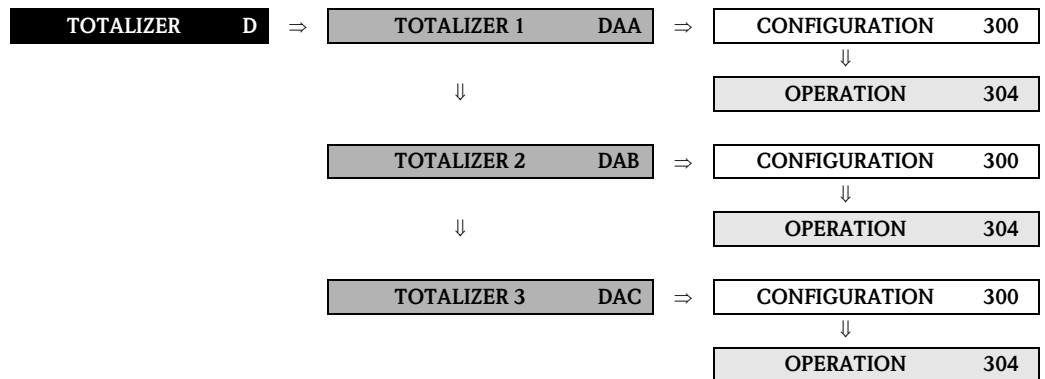

Function description	
TOTALIZER → TOTALIZER (1 to 3) → OPERATION	
The function descriptions below apply to totalizers 1 to 3; the totalizers are independently configurable.	
SUM (3040)	Displays the total for the totalizer's measured variable aggregated since measuring began. The value can be positive or negative, depending on the setting selected in the function TOTALIZER MODE (3002), and the direction of flow. Display: max. 7-digit floating-point number, including sign and unit (e.g. 15467.04 m³; -4925.631 kg)  Note! ■ The effect of the setting in the TOTALIZER MODE function (see Page 48) is as follows: – If the setting is BALANCE, the totalizer balances flow in the positive and negative directions. – If the setting is FORWARD, the totalizer registers only flow in the positive direction. – If the setting is REVERSE, the totalizer registers only flow in the negative direction. ■ The totalizer's response to faults is defined in the FAILSAFE MODE (3801) function (see Page 50).
OVERFLOW (3041)	Displays the total for the totalizer's overflow aggregated since measuring began. Total flow quantity is represented by a floating-point number consisting of max. 7 digits. You can use this function to view higher numerical values (>9,999,999) as overflows. The effective quantity is thus the total of OVERFLOW plus the value returned by the SUM function. Example: Reading for 2 overflows: $2 \cdot 10^7$ kg (= 20,000,000 kg) The value displayed in the function SUM = 196,845.7 kg Effective total quantity = 20,196,845.7 kg Display: integer with exponent, including sign and unit, e.g. $2 \cdot 10^7$ kg

7.2 Group HANDLING TOTAL.

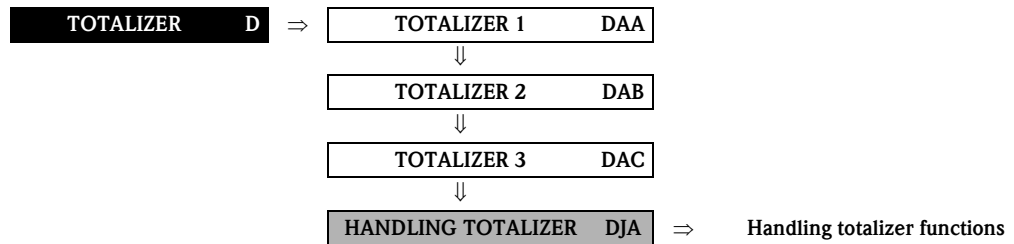


Function description TOTALIZER → HANDLING TOTAL. → Handling totalizer functions	
RESET ALL TOTALIZERS (3800) 	Resets the totals and the overflows of all totalizers to zero. Options: NO YES Factory setting: NO Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z006 to Z008 in the CUSTODY TRANSFER block. ■ If the measuring instrument has a status input and if it is appropriately configured, a reset for the totalizer (1 to 3) can also be triggered by a pulse (see the ASSIGN STATUS INPUT function ((5000) on → Page 100).
FAILSAFE MODE (3801) 	Use this function to define the common response of all totalizers (1 to 3) in case of error. Options: STOP The totalizer is paused until the fault is rectified. ACTUAL VALUE The totalizer continues to count based on the current flow measuring value. The fault is ignored. HOLD VALUE The totalizer continues to count the flow that based on the last valid flow value (before the fault occurred). Factory setting: STOP Note! This function cannot be changed if: ■ The measuring device has been configured in accordance with NTEP or MC approval. ■ The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z006 to Z008 in the CUSTODY TRANSFER block.

8 Block OUTPUTS


Block	Groups	Function groups	Functions									
OUTPUTS (E)	CURRENT OUTPUT 1 to 2 (EAA, EAB) P. 52	⇒	CONFIGURATION (400) P. 52	⇒	ASSIGN CURRENT (4000) P. 52	⇒	CURRENT SPAN (4001) P. 53	VALUE 0...4 mA (4002) P. 54	VALUE 20 mA (4003) P. 56	MEASURING MODE (4004) P. 56	TIME CONSTANT (4005) P. 59	FAILSAFE MODE (4006) P. 60
			↑ ↓	↑ ↓	↑ ↓	↑ ↓	SIMULATION CURRENT (4041) P. 61	VALUE SIMUL. CURRENT (4042) P. 61				
		⇒	OPERATION (404) P. 61	⇒	ACTUAL CURRENT (4040) P. 61	⇒						
			↑ ↓	↑ ↓	↑ ↓	↑ ↓	TERMINAL NUMBER (4080) P. 62					
	PUL./FREQ. 1 to 2 (ECA, ECB) P. 63	⇒	CONFIGURATION (420) P. 63	⇒	MODE OF OPERATION (4200) P. 63	⇒	ASSIGN FREQUENCY (4201) P. 64	START VALUE FREQUENCY (4202) P. 64	END VALUE FREQUENCY (4203) P. 65	VALUE f MIN (4204) P. 65	VALUE f HIGH (4205) P. 66	MEASURING MODE (4206) P. 67
			↑ ↓	↑ ↓	↑ ↓	↑ ↓						TIME CONSTANT (4208) P. 71
		⇒		⇒		⇒	FAILSAFE VALUE (4211) P. 72					OUTPUT SIGNAL (4207) P. 69
												FAILSAFE MODE (4209) P. 72
	RELAY OUTPUT (EGA) P. 89	⇒	CONFIGURATION (470) P. 89	⇒	ASSIGN RELAY (4700) P. 89	⇒	ASSIGN PULSE (4221) P. 73	PULSE VALUE (4222) P. 73	PULSE WIDTH (4223) P. 74	MEASURING MODE (4225) P. 75	OUTPUT SIGNAL (4226) P. 76	FAILSAFE MODE (4227) P. 78
			↑ ↓	↑ ↓	↑ ↓	↑ ↓	ASSIGN STATUS (4241) P. 79	ON-VALUE (4242) P. 79	SWITCH-ON DELAY (4243) P. 80	OFF VALUE (4244) P. 80	SWITCH-OFF DELAY (4245) P. 81	MEASURING MODE (4246) P. 81
		⇒	OPERATION (474) P. 93	⇒	ACTUAL STATUS RELAY (4740) P. 93	⇒	ACTUAL FREQ. (4301) P. 83	SIMULATION FREQ. (4302) P. 83	VALUE SIMUL. FREQ. (4303) P. 84		TIME CONSTANT (4247) P. 82	
			↑ ↓	↑ ↓	↑ ↓	↑ ↓	SIMULATION PULSE (4322) P. 85	VALUE SIM. PULSE (4323) P. 86				
	RELAY OUTPUT (EGB) P. 90	⇒	CONFIGURATION (470) P. 89	⇒	ASSIGN RELAY (4700) P. 89	⇒	ASSIGN PULSE (4221) P. 73	PULSE VALUE (4222) P. 73	PULSE WIDTH (4223) P. 74	MEASURING MODE (4225) P. 75	OUTPUT SIGNAL (4226) P. 76	FAILSAFE MODE (4227) P. 78
			↑ ↓	↑ ↓	↑ ↓	↑ ↓	ASSIGN STATUS (4241) P. 79	ON-VALUE (4242) P. 79	SWITCH-ON DELAY (4243) P. 80	OFF VALUE (4244) P. 80	SWITCH-OFF DELAY (4245) P. 81	MEASURING MODE (4246) P. 81
		⇒	OPERATION (474) P. 93	⇒	ACTUAL STATUS RELAY (4740) P. 93	⇒	ACTUAL FREQ. (4301) P. 83	SIMULATION FREQ. (4302) P. 83	VALUE SIMUL. FREQ. (4303) P. 84		TIME CONSTANT (4247) P. 82	
			↑ ↓	↑ ↓	↑ ↓	↑ ↓	SIMULATION PULSE (4322) P. 85	VALUE SIM. PULSE (4323) P. 86				
	RELAY OUTPUT (EGC) P. 91	⇒	CONFIGURATION (470) P. 89	⇒	ASSIGN RELAY (4700) P. 89	⇒	ASSIGN PULSE (4221) P. 73	PULSE VALUE (4222) P. 73	PULSE WIDTH (4223) P. 74	MEASURING MODE (4225) P. 75	OUTPUT SIGNAL (4226) P. 76	FAILSAFE MODE (4227) P. 78
			↑ ↓	↑ ↓	↑ ↓	↑ ↓	ASSIGN STATUS (4241) P. 79	ON-VALUE (4242) P. 79	SWITCH-ON DELAY (4243) P. 80	OFF VALUE (4244) P. 80	SWITCH-OFF DELAY (4245) P. 81	MEASURING MODE (4246) P. 81
		⇒	OPERATION (474) P. 93	⇒	ACTUAL STATUS RELAY (4740) P. 93	⇒	ACTUAL FREQ. (4301) P. 83	SIMULATION FREQ. (4302) P. 83	VALUE SIMUL. FREQ. (4303) P. 84		TIME CONSTANT (4247) P. 82	
			↑ ↓	↑ ↓	↑ ↓	↑ ↓	SIMULATION PULSE (4322) P. 85	VALUE SIM. PULSE (4323) P. 86				

8.1 Group CURRENT OUTPUT 1 to 2

 
8.1.1 Function group CONFIGURATION



Function description	
OUTPUTS → CURRENT OUTPUT 1 to 2 → CONFIGURATION	
ASSIGN CURRENT OUTPUT (4000) 	For assigning a measured variable to the current output. Options: OFF MASS FLOW VOLUME FLOW CORRECTED VOLUME FLOW DENSITY REFERENCE DENSITY TEMPERATURE Factory setting: MASS FLOW  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for function Z003 in the CUSTODY TRANSFER block. ■ If you select OFF, the only function shown in the CONFIGURATION function group is this function, in other words ASSIGN CURRENT OUTPUT (4000).


 
Function description																																													
OUTPUTS → CURRENT OUTPUT 1 to 2 → CONFIGURATION																																													
CURRENT SPAN (4001) 	For selecting the current span. The selection specifies the operational range and the lower and upper signal on alarm. For the current output 1 the option HART can be defined additionally. Options: 0–20 mA 4–20 mA 4–20 mA HART 4–20 mA NAMUR 4–20 mA HART NAMUR 4–20 mA US 4–20 mA HART US 0–20 mA (25 mA) 4–20 mA (25 mA) 4–20 mA (25 mA) HART Factory setting: Country-specific 4–20 mA HART NAMUR or 4–20 mA HART US (for current output 1) 4–20 mA NAMUR or 4–20 mA US (for all other current outputs)  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for function Z003 in the CUSTODY TRANSFER block. ■ The option HART is only supported by the current output designated as current output 1 in the device software (terminals 26 and 27, see function (4080) (→ Page 62) on TERMINAL NUMBER). ■ When switching the hardware from an active (factory setting) to a passive output signal select a current span of 4–20 mA. Current span, operational range and signal on alarm level  <table><tr><th>a</th><th>1</th><th>2</th><th>3</th></tr><tr><td>0-20 mA</td><td>0 - 20.5 mA</td><td>0</td><td>22</td></tr><tr><td>4-20 mA</td><td>4 - 20.5 mA</td><td>2</td><td>22</td></tr><tr><td>4-20 mA HART</td><td>4 - 20.5 mA</td><td>2</td><td>22</td></tr><tr><td>4-20 mA NAMUR</td><td>3.8 - 20.5 mA</td><td>3.5</td><td>22.6</td></tr><tr><td>4-20 mA HART NAMUR</td><td>3.8 - 20.5 mA</td><td>3.5</td><td>22.6</td></tr><tr><td>4-20 mA US</td><td>3.9 - 20.8 mA</td><td>3.75</td><td>22.6</td></tr><tr><td>4-20 mA HART US</td><td>3.9 - 20.8 mA</td><td>3.75</td><td>22.6</td></tr><tr><td>0-20 mA (25 mA)</td><td>0 - 24 mA</td><td>0</td><td>25</td></tr><tr><td>4-20 mA (25 mA)</td><td>4 - 24 mA</td><td>2</td><td>25</td></tr><tr><td>4-20 mA (25 mA) HART</td><td>4 - 24 mA</td><td>2</td><td>25</td></tr></table> A0001222 a = Current span 1 = Operational range (measuring information) 2 = Lower signal on alarm level 3 = Upper signal on alarm level  Note! ■ If the measured value is outside the measuring range (defined in the functions VALUE 0_4 mA (4002) and VALUE 20 mA (4003)), a notice message is displayed. ■ In case of a fault the behavior of the current output is according to the selected option in the function FAILSAFE MODE (4006). Change the error category in the function ASSIGN SYSTEM ERROR ((8000) → Page 121) to generate a fault message instead of a notice message.	a	1	2	3	0-20 mA	0 - 20.5 mA	0	22	4-20 mA	4 - 20.5 mA	2	22	4-20 mA HART	4 - 20.5 mA	2	22	4-20 mA NAMUR	3.8 - 20.5 mA	3.5	22.6	4-20 mA HART NAMUR	3.8 - 20.5 mA	3.5	22.6	4-20 mA US	3.9 - 20.8 mA	3.75	22.6	4-20 mA HART US	3.9 - 20.8 mA	3.75	22.6	0-20 mA (25 mA)	0 - 24 mA	0	25	4-20 mA (25 mA)	4 - 24 mA	2	25	4-20 mA (25 mA) HART	4 - 24 mA	2	25
a	1	2	3																																										
0-20 mA	0 - 20.5 mA	0	22																																										
4-20 mA	4 - 20.5 mA	2	22																																										
4-20 mA HART	4 - 20.5 mA	2	22																																										
4-20 mA NAMUR	3.8 - 20.5 mA	3.5	22.6																																										
4-20 mA HART NAMUR	3.8 - 20.5 mA	3.5	22.6																																										
4-20 mA US	3.9 - 20.8 mA	3.75	22.6																																										
4-20 mA HART US	3.9 - 20.8 mA	3.75	22.6																																										
0-20 mA (25 mA)	0 - 24 mA	0	25																																										
4-20 mA (25 mA)	4 - 24 mA	2	25																																										
4-20 mA (25 mA) HART	4 - 24 mA	2	25																																										








A0001222


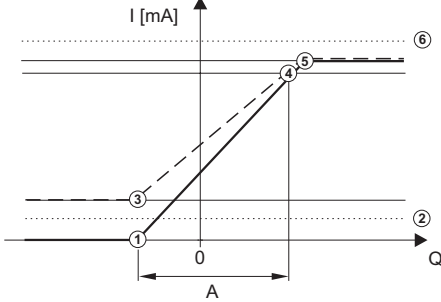
Function description	
OUTPUTS → CURRENT OUTPUT 1 to 2 → CONFIGURATION	
VALUE 0_4 mA (4002) 	Use this function to assign the 0/4 mA current a value. The value can be higher or lower than the value assigned to 20 mA (function VALUE 20 mA (4003) → Page 56). Positive and negative values are permissible, depending on the measured variable in question (e.g. mass flow). Example: 4 mA assigned value = - 250 kg/h 20 mA assigned value = +750 kg/h Calculated current value = 8 mA (at zero flow)  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for function Z003 in the CUSTODY TRANSFER block. ■ Note that values with different signs cannot be entered for 0/4 mA and 20 mA if SYMMETRY is the setting selected for the MEASURING MODE function (4004). In this case, the message "INPUT RANGE EXCEEDED" appears on the display. Example for STANDARD measuring mode:  A0001223 ① = Lower range-value (0 to 20 mA) ② = Lower signal on alarm level: depends on the setting in the function CURRENT SPAN ③ = Lower range-value (4 to 20 mA): depends on the setting in the function CURRENT SPAN ④ = Full scale value (0/4 to 20 mA): depends on the setting in the function CURRENT SPAN ⑤ = Maximum current value: depends on the setting in the function CURRENT SPAN ⑥ = Failsafe mode (upper signal on alarm level): depends on the setting in the functions CURRENT SPAN (see Page 53) and FAILSAFE MODE (see Page 50) A = Measuring range User input: 5-digit floating-point number, with sign Factory setting: 0 [kg/h] or 0.5 [kg/l] or -50 [°C]  Note! ■ The appropriate unit is taken from the following functions: – UNIT MASS FLOW (0400) – UNIT VOLUME FLOW (0402) – UNIT CORRECTED VOLUME FLOW (0404) – UNIT DENSITY (0420) – UNIT REFERENCE DENSITY (0421) – UNIT TEMPERATURE (0422) (see Page 15 to Page 19).  Caution! The current output responds differently, depending on the parameters set in the various functions. Some examples of parameter settings and their effect on the current output are given in the following section. (continued on next page)

Function description	
OUTPUTS → CURRENT OUTPUT 1 to 2 → CONFIGURATION	
VALUE 0_4 mA (continued)	Parameter setting example A: - VALUE 0_4 mA (4002) = not equal to zero flow (e.g. -5 kg/h) VALUE 20 mA (4003) = not equal to zero flow (e.g. 10 kg/h) or - VALUE 0_4 mA (4002) = not equal to zero flow (e.g. 100 kg/h) VALUE 20 mA (4003) = not equal to zero flow (e.g. -40 kg/h) and MEASURING MODE (4004) = STANDARD When you enter the values for 0/4 mA and 20 mA, the working range of the measuring device is defined. If the effective flow drops below or exceeds this working range (see ①), a fault/notice message is generated (#351 to 354, current range) and the current output responds in accordance with the parameter settings in the function FAILSAFE MODE (4006). 1) 2) A0001262 Parameter setting example B: - VALUE 0_4 mA (4002) = equal to zero flow (e.g. 0 kg/h) VALUE 20 mA (4003) = not equal to zero flow (e.g. 10 kg/h) or - VALUE 0_4 mA (4002) = not equal to zero flow (e.g. 100 kg/h) VALUE 20 mA (4003) = equal to zero flow (e.g. 0 kg/h) and MEASURING MODE (4004) = STANDARD When you enter the values for 0/4 mA and 20 mA, the working range of the measuring device is defined. In doing so, one of the two values is parameterized as zero flow (e.g. 0 kg/h). If the effective flow drops below or exceeds the value parameterized as the zero flow, no fault/notice message is generated and the current output retains its value. If the effective flow drops below or exceeds the other value, a fault/notice message is generated (#351 to 354, current range) and the current output responds in accordance with the parameter settings in the function FAILSAFE MODE (4006). 1) 2) A0001264 Deliberately only one flow direction is output with this setting and flow values in the other flow direction are suppressed. Parameter setting example C: MEASURING MODE (4004)= SYMMETRY The current output signal is independent of the direction of flow (absolute amount of the measured variable). The 0_4 mA value ① and the 20 mA value ② must have the same sign (+ or -). The 20 mA VALUE ③ (e.g. backflow) corresponds to the mirrored 20 mA VALUE ② (e.g. flow). A0001249 ASSIGN STATUS (4241) = FLOW DIRECTION With this setting e.g. the flow direction output via a switching contact can be made. Parameter setting example D: MEASURING MODE (4004)= PULSATING FLOW → Page 56 ff.

Function description OUTPUTS → CURRENT OUTPUT 1 to 2 → CONFIGURATION	
VALUE 20 mA (4003) 	Use this function to assign the 20 mA current a value. The value can be higher or lower than the value assigned to 0/4 mA (function VALUE 0_4 mA (4002) → Page 54). Positive and negative values are permissible, depending on the measured variable in question (e.g. mass flow). Example: 4 mA assigned value = - 250 kg/h 20 mA assigned value = +750 kg/h Calculated current value = 8 mA (at zero flow) Note that values with different signs cannot be entered for 0/4 mA and 20 mA, if SYMMETRY is the setting selected in the function MEASURING MODE (4004). In this case, the message "INPUT RANGE EXCEEDED" appears. User input: 5-digit floating-point number, with sign Factory setting: Depends on nominal diameter [kg/h] or 2 [kg/l] or 200 [°C]  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for function Z003 in the CUSTODY TRANSFER block. ■ The appropriate unit is taken from the following functions: – UNIT MASS FLOW (0400) – UNIT VOLUME FLOW (0402) – UNIT CORRECTED VOLUME FLOW (0404) – UNIT DENSITY (0420) – UNIT REFERENCE DENSITY (0421) – UNIT TEMPERATURE (0422) (see Page 15 to Page 19). ■ Example for selection STANDARD in the function MEASURING MODE (4004) → Page 56.  Caution! It is very important to read and comply with the information in the function VALUE 0_4 mA (4002) (under "⚠ Caution", examples of parameter settings) on Page 54.
MEASURING MODE (4004) 	Use this function to define the measuring mode for the current output. Options: STANDARD SYMMETRY PULSATING FLOW Factory setting: STANDARD  Note! This function cannot be changed if: ■ The measuring device has been configured in accordance with NTEP or MC approval. ■ The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for function Z003 in the CUSTODY TRANSFER block. (continued on next page)

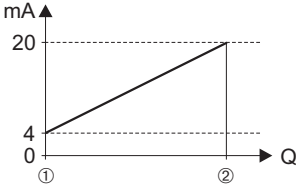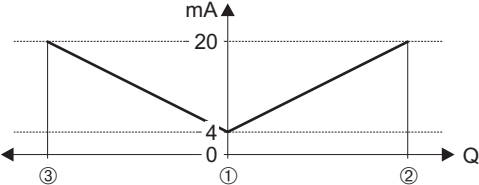
Function description	
OUTPUTS → CURRENT OUTPUT 1 to 2 → CONFIGURATION	
MEASURING MODE (continued)	Description of the individual options: STANDARD The current output signal is proportional to the measured variable. The flow components outside the scaled measuring range (defined by the 0_4 mA VALUE ① and the 20 mA VALUE ②) are taken into account as follows for signal output. ■ If one of the values is defined as equal to the zero flow (e.g. VALUE 0_4 mA = 0 kg/h), no message is given if this value is exceeded or not achieved and the current output retains its value (in example 4 mA). If the other value is exceeded or not achieved, the message "CURRENT OUTPUT AT FULL SCALE VALUE" appears and the current output responds in accordance with the parameter setting in the function FAILSAFE MODE (4006). ■ If both values defined are not equal to the zero flow (for example VALUE 0_4 mA = -5 kg/h, VALUE 20 mA = 10 kg/h), the message "CURRENT OUTPUT AT FULL SCALE VALUE" appears if the measuring range is exceeded or not achieved and the current output responds in accordance with the parameter settings in the function FAILSAFE MODE (4006).  A0001248 SYMMETRY The current output signal is independent of the direction of flow (absolute amount of the measured variable). The 0_4 mA value ① and the 20 mA value ② must have the same sign (+ or -). The 20 mA VALUE ③ (e.g. backflow) corresponds to the mirrored 20 mA VALUE ② (e.g. flow).  A0001249  Note! ■ The direction of flow can be output via the configurable status outputs. ■ SYMMETRY cannot be selected unless the values in the VALUE 0_4 mA (4002) and VALUE 20 mA (4003) functions have the same sign or one of the values is zero. If the values have different signs, SYMMETRY cannot be selected and an "ASSIGNMENT NOT POSSIBLE" message is displayed. PULSATING FLOW If flow is characterized by severe fluctuations as is the case, for example, with reciprocating pumps, flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 seconds. If the buffered data cannot be processed within approx. 60 seconds, a fault/notice message appears. Under certain plant conditions, flow values can aggregate in the buffer, for example in the case of prolonged and unwanted fluid backflow. However, this buffer is reset in all relevant programming adjustments which affect the current output.

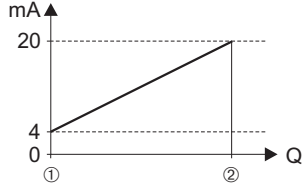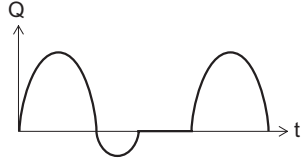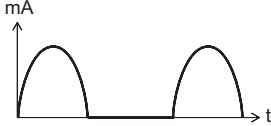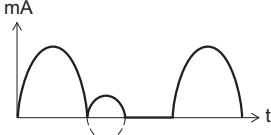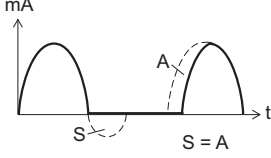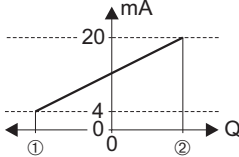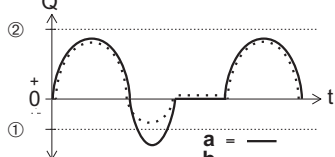Function description OUTPUTS → CURRENT OUTPUT 1 to 2 → CONFIGURATION	
Detailed explanations and information	How the current output responds under the following postulated conditions: 1. Defined measuring range (①–②): ① and ② have the same sign  A0001248 and the following flow behavior:  A0001265 ■ STANDARD The current output signal is proportional to the measured variable. The flow components outside the scaled measuring range are not taken into account for signal output.  A0001267 ■ SYMMETRY The current output signal is independent of the direction of flow.  A0001268 ■ PULSATING FLOW Flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 seconds.  A0001269
	2. Defined measuring range (①–②): ① and ② do not have the same sign .  A0001272 Flow a (—) outside, b (---) within the measuring range.  A0001273
	(continued on next page)

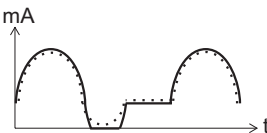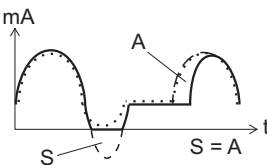Function description	
OUTPUTS → CURRENT OUTPUT 1 to 2 → CONFIGURATION	
Detailed explanations and information (continued)	■ STANDARD a (—): The flow components outside the scaled measuring range cannot be taken into account for signal output. A fault message is generated (# 351 to 354, current range) and the current output responds in accordance with the parameter settings in the function FAILSAFE MODE (4006). b (—): The current output signal is proportional to the measured variable assigned.  A0001274 ■ SYMMETRY This option is not available under these circumstances, because the 0_4 mA value and the 20 mA value have different signs. ■ PULSATING FLOW Flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 seconds.  A0001275
TIME CONSTANT (4005) 	Entering a time constant defines how the current output signal reacts to severely fluctuating measured variables, either very quickly (enter a low time constant) or with damping (enter a high time constant). User input: Fixed-point number 0.01 to 100.00 s Factory setting: 1.00 s  Note! This function cannot be changed if: ■ The measuring device has been configured in accordance with NTEP or MC approval. ■ The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for function Z003 in the CUSTODY TRANSFER block.


Function description OUTPUTS → CURRENT OUTPUT 1 to 2 → CONFIGURATION	
FAILSAFE MODE (4006) 	For safety reasons it is advisable to ensure that the current output assumes a predefined state in the event of a fault. The setting you select here affects only the current output. It has no effect on other outputs and the display (e.g. totalizers). Options: MIN. CURRENT The current output adopts the value of the lower signal on alarm level (as defined in the function (4001) (→ Page 53), see CURRENT SPAN. MAX. CURRENT The current output adopts the value of the upper signal on alarm level (as defined in the function CURRENT SPAN (4001), → Page 53). HOLD VALUE (not recommended) Measuring value output is based on the last measuring value saved before the error occurred. ACTUAL VALUE Measured value output is based on the current flow measurement. The fault is ignored. Factory setting: MIN. CURRENT  Note! This function cannot be changed if: ■ The measuring device has been configured in accordance with NTEP or MC approval. ■ The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for function Z003 in the CUSTODY TRANSFER block.

8.1.2 Function group OPERATION

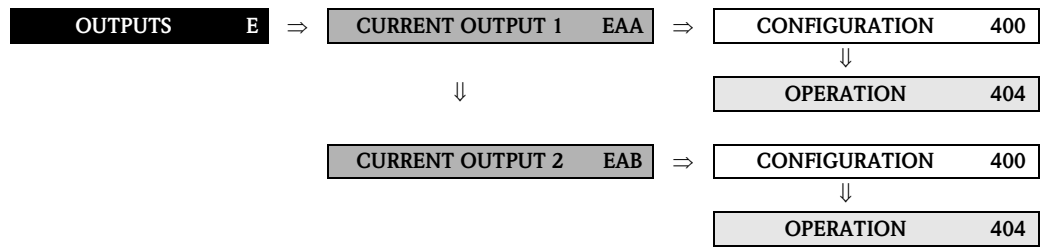

Function description	
OUTPUTS → CURRENT OUTPUT → OPERATION	
ACTUAL CURRENT (4040)	Use this function to view the computed actual value of the output current. Display: 0.00 to 25.00 mA Note! This function is not locked unless the YES was selected under Block Z (custody transfer measurement) in the function CURRENT OUTPUT 1 CUSTODY TRANSFER (Z003).
SIMULATION CURRENT (4041) 	Activates simulation of the current output. Options: OFF ON Factory setting: OFF Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for function Z003 in the CUSTODY TRANSFER block. ■ The "SIMULATION CURRENT OUTPUT" message indicates that simulation is active. ■ The measuring device continues to measure while simulation is in progress, i.e. the current measured values are output correctly via the other outputs. Caution! The setting is not saved in the event of a power failure.
VALUE SIMULATION CURRENT (4042) 	Use this function to define a freely selectable value (e.g. 12 mA) to be output at the current output. This value is used to test downstream devices and the measuring device itself. User input: 0.00 to 25.00 mA Factory setting: 0.00 mA Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for function Z003 in the CUSTODY TRANSFER block. ■ This function is displayed only if the function SIMULATION CURR. (4041) is active (= ON). Caution! The setting is not saved in the event of a power failure.


8.1.3 Function group INFORMATION

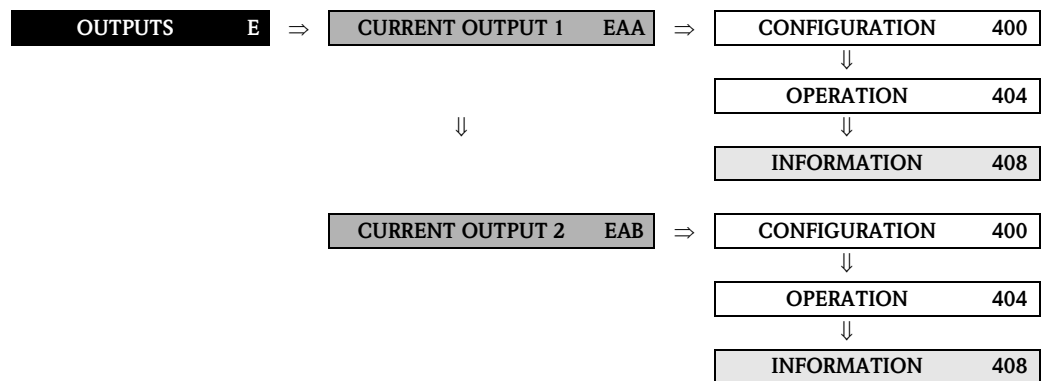

Function description	
OUTPUTS → CURRENT OUTPUT 1 → INFORMATION	
TERMINAL NUMBER (4080)	Use this function to view the numbers of the terminals (in the connection compartment) and the polarity used by the current output.

8.2 Group PULSE/FREQUENCY OUTPUT (1 to 2)

8.2.1 Function group CONFIGURATION


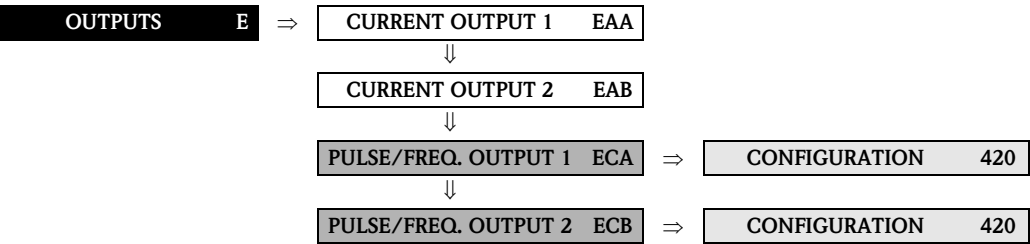




Function description	
OUTPUTS → PULSE/FREQ. OUTPUT (1 to 2) → CONFIGURATION (GENERAL)	
MODE OF OPERATION (4200) 	Configuration of the output as a pulse, frequency or status output. The functions available in this function group vary, depending on which option you select here. Options: PULSE FREQUENCY STATUS DOUBLE PULS 90° (only with pulse output 2) DOUBLE PULS 180° (only with pulse output 2) Factory setting: PULSE  Note! The selection DOUBLE PULS 90° and DOUBLE PULS 180° can be changed only if: ■ Two pulse/frequency outputs are available ■ The operating mode of the first pulse/frequency output is set to PULSE With this setting, the two pulse/frequency outputs are operated with the configuration of the first but the second lags behind the first as follows: – For DOUBLE PULS 90°, half a pulse width – For DOUBLE PULS 180°, half a pulse width


Function description OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (FREQUENCY)	
ASSIGN FREQUENCY (4201) 	For assigning a measured variable to the frequency output. Options: OFF MASS FLOW VOLUME FLOW CORRECTED VOLUME FLOW DENSITY REFERENCE DENSITY TEMPERATURE Factory setting: MASS FLOW  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block. ■ This function cannot be changed unless the FREQUENCY setting was selected in the OPERATION MODE (4200) function. ■ If you select OFF, the only function shown in the CONFIGURATION function group is ASSIGN FREQUENCY (4201).
START VALUE FREQUENCY (4202) 	For defining an initial frequency for the frequency output. You define the associated measured value of the measuring range in the function VALUE f MIN (4204) → Page 65. User input: 5-digit fixed-point number: 0 to 10000 Hz Factory setting: 0 Hz Example: ■ VALUE f LOW= 0 kg/h, start value frequency = 0 Hz This means that at a flow rate of 0 kg/h, a frequency of 0 Hz is output. ■ VALUE F MIN. = 1 kg/h, start value frequency = 10 Hz This means that at a flow rate of 1 kg/h, a frequency of 10 Hz is output.  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block. ■ This function is not available unless the PULSE option was selected in the MODE OF OPERATION(4200) function.





Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (FREQUENCY)	
END VALUE FREQUENCY (4203) 	For defining a full scale frequency for the frequency output. You define the associated measured value of the measuring range in the function VALUE f HIGH (4205) → Page 66. User input: 5-digit fixed-point number: 2 to 10000 Hz Factory setting: 10000 Hz Example: ■ VALUE f HIGH = 10000 kg/h, full scale value = 10000 Hz This means that at a flow rate of 10000 kg/h, a freq. of 10000 Hz is output. ■ VALUE f HIGH = 3600 kg/h, full scale value = 10000 Hz This means that at a flow rate of 3600 kg/h, a frequency of 10000 Hz is output.  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block. ■ This function is not available unless the PULSE option was selected in the MODE OF OPERATION(4200) function. ■ In the FREQUENCY operating mode the output signal is symmetrical (on/off ratio = 1:1). At low frequencies the pulse duration is limited to a maximum of 2 seconds, i.e. the on/off ratio is no longer symmetrical.
VALUE f MIN (4204) 	Use this function to assign a variable to the start value frequency ((4202) → Page 64). The value can be higher or lower than the value assigned to the VALUE f HIGH. Positive and negative values are permissible, depending on the measured variable in question (e.g. mass flow). You define a measuring range by defining the VALUE f LOW and VALUE f HIGH values. User input: 5-digit floating-point number Factory setting: 0 [kg/h] or 0 [kg/l] or -50 [°C]  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block. ■ This function is not available unless the PULSE option was selected in the MODE OF OPERATION(4200) function. ■ For a graphic illustration of the VALUE f LOW, see the VALUE f HIGH (4205) function. ■ Note that values with different signs cannot be entered for VALUE f LOW and VALUE f HIGH, if SYMMETRY is the setting selected for the MEASURING MODE function (4206). In this case, the message "INPUT RANGE EXCEEDED" appears on the display. ■ The appropriate unit is taken from the following functions: – UNIT MASS FLOW (0400) – UNIT VOLUME FLOW (0402) – UNIT CORRECTED VOLUME FLOW (0404) – UNIT DENSITY (0420) – UNIT REFERENCE DENSITY (0421) – UNIT TEMPERATURE (0422) (see P. 15 to P. 19).

Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (FREQUENCY)	
VALUE f HIGH (4205) 	Use this function to assign a variable to the end value frequency ((4203) → Page 65). The value can be higher or lower than the value assigned to the VALUE F LOW. Positive and negative values are permissible, depending on the measured variable in question (e.g. mass flow). You define a measuring range by defining the VALUE f LOW and VALUE f HIGH values. User input: 5-digit floating-point number Factory setting: Depends on nominal diameter [kg/h] or 2 [kg/l] or 200 [°C]  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block. ■ This function is not available unless the FREQUENCY option was selected in the MODE OF OPERATION(4200) function. ■ Note that values with different signs cannot be entered for VALUE f LOW and VALUE f HIGH, if SYMMETRY is the setting selected for the MEASURING MODE function (4206). In this case, the message "INPUT RANGE EXCEEDED" appears on the display. A0001279 ① = Value f min ② = Value f max Parameter setting example 1: 1. VALUE f MIN (4204) = not equal to zero flow (e.g. -5 kg/h) VALUE f HIGH (4205) = not equal to zero flow (e.g. 10 kg/h) or 2. VALUE f MIN (4204) = not equal to zero flow (e.g. 100 kg/h) VALUE f HIGH (4205) = not equal to zero flow (e.g. -40 kg/h) and MEASURING MODE (4206) = STANDARD When you enter the values for VALUE f LOW and VALUE f HIGH the working range of the measuring device is defined. If the effective flow drops below or exceeds this working range (see ①), a fault or notice message is generated (#355 to 358, frequency area) and the frequency output responds in accordance with the parameter settings in the function FAILSAFE MODE (4209). A0001276 (continued on next page)

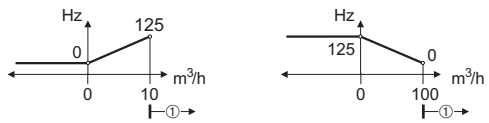 Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (FREQUENCY)	
VALUE f HIGH (continued)	Parameter setting example 2: - VALUE f MIN (4204) = not equal to zero flow (e.g. 0 kg/h) VALUE f HIGH (4205) = not equal to zero flow (e.g. 10 kg/h) or - VALUE f MIN (4204) = not equal to zero flow (e.g. 100 kg/h) VALUE f HIGH (4205) = not equal to zero flow (e.g. 0 kg/h) and MEASURING MODE (4206) = STANDARD When you enter the values for VALUE f LOW and VALUE f HIGH the working range of the measuring device is defined. In doing so, one of the two values is parameterized as zero flow (e.g. 0 kg/h). If the effective flow drops below or exceeds the value parameterized as the zero flow, no fault/notice message is generated and the frequency output retains its value. If the effective flow drops below or exceeds the other value, a fault/notice message is generated (#355 to 358, frequency area) and the frequency output responds in accordance with the FAILSAFE MODE (4209) function.  A0001277 Deliberately only one flow direction is output with this setting and flow values in the other flow direction are suppressed. Parameter setting example 3: MEASURING MODE (4206) = SYMMETRY The frequency output signal is independent of the direction of flow (absolute amount of the measured variable). The VALUE f LOW ① and VALUE f HIGH ② must have the same sign (+ or -). The VALUE f HIGH ③ (e.g. backflow) corresponds to the mirrored VALUE f MAX ② (e.g. flow).  A0001278 ASSIGN STATUS (4241) = FLOW DIRECTION With this setting e.g. the flow direction output via a switching contact can be made. Parameter setting example 4: MEASURING MODE (4206) = PULSATING FLOW → Page 67 ff.
MEASURING MODE (4206) ⓘ	Use this function to define the measuring mode for the frequency output. Options: STANDARD SYMMETRY PULSATING FLOW Factory setting: STANDARD  Note! This function cannot be changed if: - The measuring device has been configured in accordance with NTEP or MC approval. - The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block. (continued on next page)

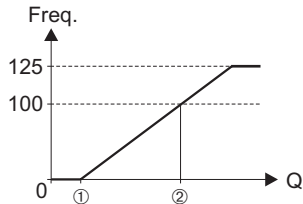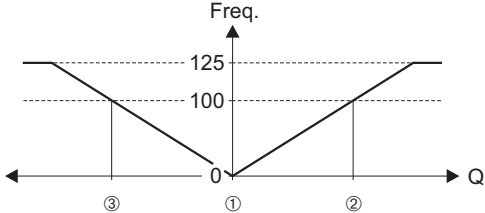Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (FREQUENCY)	
MEASURING MODE (continued)	Description of the individual options: STANDARD The frequency output signal is proportional to the measured variable. The flow components outside the scaled measuring range (defined by the VALUE f LOW ① and the VALUE f HIGH ②) are not taken into account for signal output. ■ If one of the values is defined as equal to the zero flow (e.g. VALUE f LOW = 0 kg/h), no message is given if this value is exceeded or not achieved and the frequency output retains its value (0 Hz in the example). If the other value is exceeded or not achieved, the message "FREQUENCY OUTPUT AT FULL SCALE VALUE" appears and the frequency output responds in accordance with the parameter setting in the function FAILSAFE MODE (4209). ■ If both values defined are not equal to the zero flow (for example VALUE f LOW = -5 kg/h; VALUE f MAX = 10kg/h) the message "FREQUENCY OUTPUT AT FULL SCALE VALUE" appears if the measuring range is exceeded or not achieved and the frequency output responds in accordance with the parameter settings in the function FAILSAFE MODE (4209).  A0001279
	SYMMETRY The frequency output signal is independent of the direction of flow (absolute amount of the measured variable). The VALUE f LOW ① and VALUE f HIGH ② must have the same sign (+ or -). The VALUE f HIGH ③ (e.g. backflow) corresponds to the mirrored VALUE f HIGH ② (e.g. flow).  A0001280  Note! ■ This function is not available unless the PULSE option was selected in the MODE OF OPERATION(4200) function. ■ The direction of flow can be output via the configurable status outputs. ■ SYMMETRY cannot be selected unless the values in the VALUE f MIN (4204) and VALUE f HIGH (4205) functions have the same sign or one of the values is zero. If the values have different signs, SYMMETRY cannot be selected and an "ASSIGNMENT NOT POSSIBLE" message is displayed. PULSATING FLOW If flow is characterized by severe fluctuations as is the case, for example, with reciprocating pumps, flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 seconds. If the buffered data cannot be processed within approx. 60 seconds, a fault/notice message appears. Under certain plant conditions, flow values can aggregate in the buffer, for example in the case of prolonged and unwanted fluid backflow. However, this buffer is reset in all relevant programming adjustments which affect the frequency output.

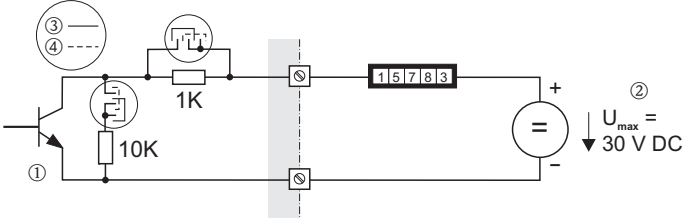Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (FREQUENCY)	
OUTPUT SIGNAL (4207) 	For selecting the output configuration of the frequency output. Options: 0 = PASSIVE - POSITIVE 1 = PASSIVE - NEGATIVE 2 = ACTIVE - POSITIVE (this selection is not supported) 3 = ACTIVE - NEGATIVE (this selection is not supported) Factory setting: PASSIVE - POSITIVE Explanation PASSIVE = power is supplied to the frequency output by means of an external power supply. Configuring the output signal level (POSITIVE or NEGATIVE) determines the quiescent behavior (at zero flow) of the frequency output. The internal transistor is activated as follows: ■ If POSITIVE is selected, the internal transistor is activated with a positive signal level. ■ If NEGATIVE is selected, the internal transistor is activated with a negative signal level (0 V).  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block. ■ Function is not available unless the FREQUENCY setting was selected in the MODE OF OPERATION function. ■ With the passive output configuration, the output signal levels of the frequency output depend on the external circuit (see examples). Example for passive output circuit (PASSIVE) If PASSIVE is selected, the frequency output is configured as an open collector.  ① = Open collector ② = External power supply ③ = Line monitoring off ④ = Line monitoring on (default)  Note! For continuous currents up to 25 mA ($I_{\text{max}} = 250 \text{ mA} / 20 \text{ ms}$). (continued on next page)

 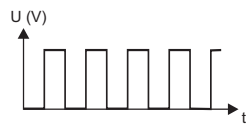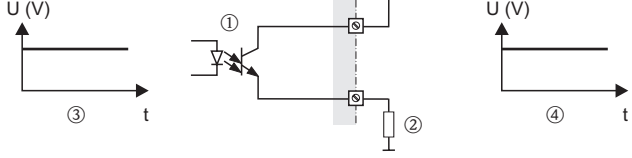
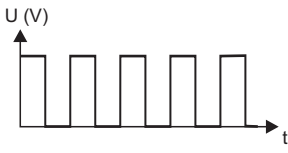
Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (FREQUENCY)	
OUTPUT SIGNAL (continued)	Example for output configuration PASSIVE-POSITIVE: Output configuration with an external pull-up resistance. In the quiescent state (at zero flow), the output signal level at the terminals is 0 V. $+ U_{\max} = 30 \text{ V DC}$  ① = Open collector ② = Pull-Up-Resistance ③ = Transistor activation in POSITIVE quiescent state (at zero flow) ④ = Output signal level in quiescent state (at zero flow) In the operating status (flow present), the output signal level changes from 0 V to a positive voltage level  a0004687
	Example for output configuration PASSIVE-POSITIVE: Output configuration with an external pull-down resistance. In the quiescent state (at zero flow), a positive voltage level is measured via the pull-down resistance. $+ U_{\max} = 30 \text{ V DC}$  ① = Open collector ② = Pull-Down-Resistance ③ = Transistor activation in POSITIVE quiescent state (at zero flow) ④ = Output signal level in quiescent state (at zero flow) In the operating status (flow present), the output signal level changes from a positive voltage level to 0 V.  a0004689 A0001981

(continued on next page)


Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (FREQUENCY)	
OUTPUT SIGNAL (continued)	Example for output configuration PASSIVE-NEGATIVE: Output configuration with an external pull-up resistance. In the quiescent state (at zero flow), the output signal level at the terminals is at a positive voltage level. ① = Open collector ② = Pull-Up-Resistance ③ = Transistor activation in <i>NEGATIVE</i> quiescent state (at zero flow) ④ = Output signal level in quiescent state (at zero flow) In the operating status (flow present), the output signal level changes from a positive voltage level to 0 V.
TIME CONSTANT (4208) 	Entering a time constant defines how the frequency output signal reacts to severely fluctuating measured variables, either very quickly (enter a low time constant) or with damping (enter a high time constant). User input: Fixed-point number 0.00 to 100.00 s Factory setting: 0.00 s Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block. ■ This function is not available unless the PULSE option was selected in the MODE OF OPERATION (4200) function.





Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (FREQUENCY)	
FAILSAFE MODE (4209) 	For safety reasons it is advisable to ensure that the frequency output assumes a predefined state in the event of a fault. The setting you select here affects only the frequency output. It has no effect on other outputs and the display (e.g. totalizers). Options: FALLBACK VALUE Output is 0 Hz. FAILSAFE VALUE Output is the frequency specified in the FAILSAFE VALUE function (4211). HOLD VALUE Measured value output is based on the last measured value saved before the error occurred. ACTUAL VALUE Measured value output is based on the current flow measurement. The fault is ignored. Factory setting: FALLBACK VALUE  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block. ■ This function is not available unless the FREQUENCY option was selected in the MODE OF OPERATION (4200) function.
FAILSAFE VALUE (4211) 	For specifying the frequency that the measuring device outputs in the event of an error. User input: max. 5-digit number: 0 to 12500 Hz Factory setting: 12500 Hz  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block. ■ This function is not available unless FREQUENCY was selected in the MODE OF OPERATION function (4200) and FAILSAFE LEVEL was selected in the FAILSAFE MODE function (4209).


Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (FREQUENCY)	
ASSIGN PULSE (4221) 	Use this function to assign a measured variable to the pulse output. Options: OFF MASS FLOW VOLUME FLOW CORRECTED VOLUME FLOW Factory setting: MASS FLOW  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block. ■ This function is not available unless the PULSE option was selected in the MODE OF OPERATION(4200) function. ■ If you select OFF, the only function shown in the CONFIGURATION function group is this function, in other words ASSIGN PULSE (4221).
PULSE VALUE (4222) 	Use this function to define the flow at which a pulse is triggered. These pulses can be totaled by an external totalizer, and the total flow quantity since measuring started can be registered in this way. User input: 5-digit floating-point number [unit] Factory setting: depends on nominal diameter and country, [value] [kg or lb] / pulse; corresponds to the factory setting for the pulse value (see Page 129 ff.).  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block. ■ This function is not available unless the PULSE option was selected in the MODE OF OPERATION(4200) function. ■ The appropriate unit is taken from the following functions: – UNIT MASS (0401) – UNIT VOLUME (0403) – UNIT STANDARD VOLUME (0405) (see Page 15 or Page 17).

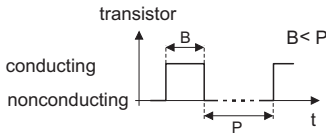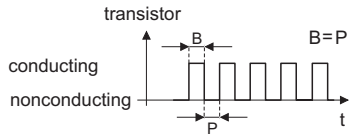Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (PULSE)	
PULSE WIDTH (4223) 	Use this function to enter the pulse width of the output pulse. User input: 0.05 to 2000 ms Factory setting: 100 ms Pulse output is always with the pulse width (B) entered in this function. The pauses (P) between the individual pulses are automatically configured. However, they must at least correspond to the pulse width ($B = P$).  $B < P$  $B = P$ A0001233-en B = Pulse width entered (the illustration applies to positive pulses) P = Pauses between the individual pulses  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block. ■ This function is not available unless the PULSE option was selected in the MODE OF OPERATION(4200) function. ■ When entering the pulse width, select a value that can still be processed by an external totalizer (e.g. mechanical totalizer, PLC, etc.).  Caution! If the pulse number or frequency resulting from the pulse value entered (see function PULSE VALUE (4222) → Page 73) and from the current flow is too large to maintain the pulse width selected (the time interval is smaller than the pulse width B entered), a system error message is generated (# 359 to 362, pulse buffer) after approx. 5 seconds buffer/balance time.

Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (PULSE)	
MEASURING MODE (4225) 	Use this function to define the measuring mode for the pulse output. Options: STANDARD Only positive flow components are totaled. Negative components are not taken into account. SYMMETRY Positive and negative flow components are taken into account.  Note! The direction of flow can be output via the status outputs. PULSATING FLOW If flow is characterized by severe fluctuations, as is the case, for example, with reciprocating pumps, the positive and negative flow components are totaled, with the signs taken into account (e.g. -10 l and $+25\text{ l} = 15\text{ l}$). Flow components outside the maximum pulse number per second (value/width) are buffered, balanced and output after a maximum delay of 60 seconds. If the buffered data cannot be processed within approx. 60 seconds, a fault/notice message appears. Under certain plant conditions, flow values can aggregate in the buffer, for example in the case of prolonged and unwanted fluid backflow. However, this buffer is reset in all relevant programming adjustments which affect the pulse output. STANDARD REVERSE Only negative flow components are totaled. Positive components are not taken into account. Factory setting: STANDARD  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block. ■ This function is not available unless the PULSE option was selected in the MODE OF OPERATION (4200) function.

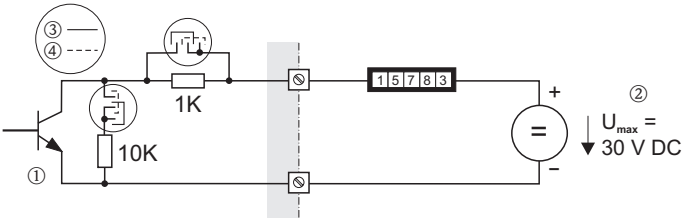
Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (PULSE)	
OUTPUT SIGNAL (4226) 	For selecting the output configuration of the pulse output. Options: 0 = PASSIVE - POSITIVE 1 = PASSIVE - NEGATIVE 2 = ACTIVE - POSITIVE (this selection is not supported) 3 = ACTIVE - NEGATIVE (this selection is not supported) Factory setting: PASSIVE - POSITIVE Explanation PASSIVE = power is supplied to the pulse output by means of an external power supply. Configuring the output signal level (POSITIVE or NEGATIVE) determines the quiescent behavior (at zero flow) of the pulse output. The internal transistor is activated as follows: ■ If POSITIVE is selected, the internal transistor is activated with a positive signal level. ■ If NEGATIVE is selected, the internal transistor is activated with a negative signal level (0 V).  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block. ■ Function is not available unless the PULSE setting was selected in the MODE OF OPERATION(4200) function. ■ With the passive output configuration, the output signal levels of the pulse output depend on the external circuit (see examples). Example for passive output circuit (PASSIVE) If PASSIVE is selected, the pulse output is configured as an open collector.  A0002147 ① = Open collector ② = External power supply ③ = Line monitoring off ④ = Line monitoring on (default)  Note! For continuous currents up to 25 mA ($I_{\max} = 250 \text{ mA} / 20 \text{ ms}$). (continued on next page)

 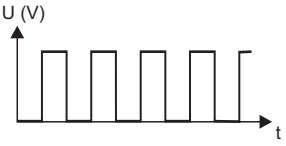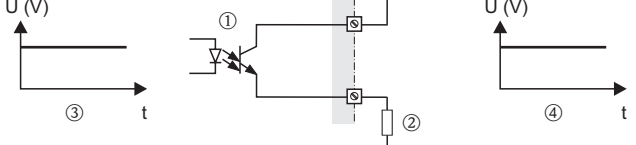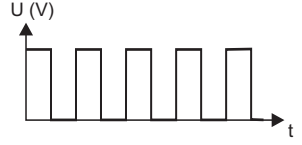Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (PULSE)	
OUTPUT SIGNAL (continued)	Example for output configuration PASSIVE-POSITIVE: Output configuration with an external pull-up resistance. In the quiescent state (at zero flow), the output signal level at the terminals is 0 V. + U_{max} = 30 V DC  The diagram shows an open collector transistor (1) connected to a pull-up resistor (2) leading to +U_{max} = 30 V DC. The output voltage U(V) is shown in two graphs: (3) during transistor activation, the voltage drops from 30V to 0V; (4) in the quiescent state, the voltage is at 30V. ① = Open collector ② = Pull-Up-Resistance ③ = Transistor activation in POSITIVE quiescent state (at zero flow) ④ = Output signal level in quiescent state (at zero flow) In the operating status (flow present), the output signal level changes from 0 V to a positive voltage level.  The waveform shows a series of pulses where the voltage transitions from 0 V to a positive level during flow. Example for output configuration PASSIVE-POSITIVE: Output configuration with an external pull-down resistance. In the quiescent state (at zero flow), a positive voltage level is measured via the pull-down resistance. + U_{max} = 30 V DC  The diagram shows an open collector transistor (1) connected to a pull-down resistor (2) leading to ground. The output voltage U(V) is shown in two graphs: (3) during transistor activation, the voltage drops from 30V to 0V; (4) in the quiescent state, the voltage is at 30V. ① = Open collector ② = Pull-Down-Resistance ③ = Transistor activation in POSITIVE quiescent state (at zero flow) ④ = Output signal level in quiescent state (at zero flow) In the operating status (flow present), the output signal level changes from a positive voltage level to 0 V.  The waveform shows a series of pulses where the voltage transitions from a positive level to 0 V during flow. (continued on next page)

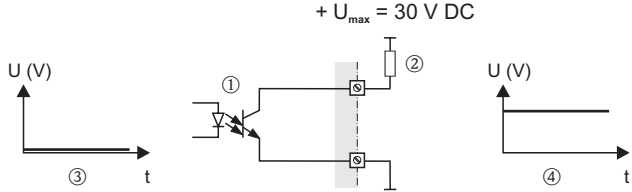Function description OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (PULSE)	
OUTPUT SIGNAL (continued)	Example for output configuration PASSIVE-NEGATIVE: Output configuration with an external pull-up resistance. In the quiescent state (at zero flow), the output signal level at the terminals is at a positive voltage level.  ① = Open collector ② = Pull-Up-Resistance ③ = Transistor activation in <i>NEGATIVE</i> quiescent state (at zero flow) ④ = Output signal level in quiescent state (at zero flow) In the operating status (flow present), the output signal level changes from a positive voltage level to 0 V.  a0004690
FAILSAFE MODE (4227) ⓘ	For safety reasons it is advisable to ensure that the pulse output assumes a predefined state in the event of a fault. The setting you select here affects only the pulse output. It has no effect on other outputs and the display (e.g. totalizers). Options: FALLBACK VALUE Output is 0 pulse. ACTUAL VALUE Measured value output is based on the current flow measurement. The fault is ignored. MAX. PULSE RATE Outputs the maximum pulse rate $f = 1/(2 \times T)$ Factory setting: FALLBACK VALUE  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block. ■ This function is not available unless the PULSE option was selected in the MODE OF OPERATION(4200) function. ■ If the selection MAX. PULSE RATE is made under pulse output 1 and the OPERATION MODE of pulse output 2 is set to DOUBLE PULS 90° or DOUBLE PULS 180°, the failsafe mode of pulse output 2 is automatically FALLBACK VALUE. A0001981

Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (STATUS)	
ASSIGN STATUS (4241) 	Use this function to assign a switching function to the status output. Options: OFF ON (operation) FAULT MESSAGE NOTICE MESSAGE FAULT MESSAGE or NOTICE MESSAGE EMPTY PIPE DETECTION (only with active function) FLOW DIRECTION LIMIT MASS FLOW LIMIT VOLUME FLOW CORRECTED VOLUME FLOW LIMIT VALUE DENSITY LIMIT VALUE REFERENCE DENSITY LIMIT VALUE TEMPERATURE LIMIT VALUE TOTALIZER 1 LIMIT VALUE TOTALIZER 2 LIMIT VALUE TOTALIZER 3 LIMIT VALUE Factory setting: FAULT MESSAGE  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block. ■ This function is not available unless the STATUS option was selected in the MODE OF OPERATION(4200) function. ■ The behavior of the status output is a normally closed behavior, in other words the output is closed (transistor conductive) when normal, error-free measuring is in progress. "normal, error-free" operation: Flow direction = forwards; limit values = not exceeded; no empty or partially filled measuring tube (EPD/OED); no fault or notice message present. ■ If you select OFF, the only function shown in the CONFIGURATION function group is this function, in other words ASSIGN STATUS (4241). ■ Switching response like status output, s. Page 97
ON-VALUE (4242) 	Use this function to assign a value to the switch-on point (activation of the status output). The value can be higher or lower than the switch-off point. Positive or negative values are permissible, depending on the measured variable in question (e.g. mass flow, totalizer reading). User input: 5-digit floating-point number [unit] Factory setting: 0 [kg/h] or 2 [kg/l] or 200 [°C]  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block. ■ This function is not available unless STATUS was selected in the MODE OF OPERATION function (4200) and LIMIT VALUE or FLOW DIRECTION was selected in the ASSIGN STATUS function (4241). ■ If SYMMETRY is selected in the function MEASURING MODE (4246) and values with different signs are entered for the switch-on and switch-off points, the notice message "INPUT RANGE EXCEEDED" appears. ■ Only the switch-on point is available for flow direction output (no switch-off point). If you enter a value not equal to the zero flow (e.g. 5), the difference between the zero flow and the value entered corresponds to half the switchover hysteresis.


Function description OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (STATUS)	
SWITCH-ON DELAY (4243) 	Use this function to define a delay (0 to 100 seconds) for the switch-on (i.e. signal changes from "not conductive" to "conductive") of the status output. The delay starts when the limit value is reached. The status output does switch when the delay has timed out and the switch on condition has been valid over the delay time. User input: Fixed-point number 0.0 to 100.0 s Factory setting: 0.0 s  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block. ■ This function is not available unless STATUS was selected in the MODE OF OPERATION function (4200) and LIMIT VALUE or FLOW DIRECTION was selected in the ASSIGN STATUS function (4241).
OFF VALUE (4244) 	Use this function to assign a value to the switch-off point (deactivation of the status output). The value can be higher or lower than the switch-on point. Positive and negative values are permissible, depending on the measured variable in question (e.g. mass flow, totalizer reading). User input: 5-digit floating-point number [unit] Factory setting: 0 [kg/h] or 2 [kg/l] or 200 [°C]  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block. ■ This function is not available unless STATUS was selected in the MODE OF OPERATION function (4200) and a LIMIT VALUE was selected in the ASSIGN STATUS function (4241). ■ The associated unit is taken from the function UNIT VOLUME FLOW (0402) or UNIT MASS FLOW (0400). ■ If SYMMETRY is selected in the function MEASURING MODE (4246) and values with different signs are entered for the switch-on and switch-off points, the notice message "INPUT RANGE EXCEEDED" appears.

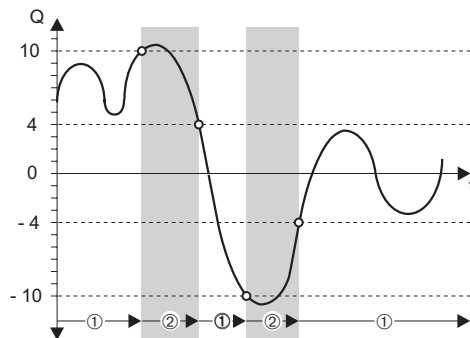Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (STATUS)	
SWITCH-OFF DELAY (4245) 	Use this function to define a delay (0 to 100 seconds) for the switch-off (i.e. signal changes from "conductive" to "not conductive") of the status output. The delay starts when the limit value is reached. The status output does switch when the delay has timed out and the switch off condition has been valid over the delay time. User input: Fixed-point number 0.0 to 100.0 s Factory setting: 0.0 s  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block. ■ This function is not available unless the STATUS option was selected in the MODE OF OPERATION (4200) function.
MEASURING MODE (4246) 	Use this function to define the measuring mode for the status output. Options: STANDARD The status output signal switches at the defined switch points. SYMMETRY The status output signal switches at the defined switch points, irrespective of the sign. If you define a switch point with a positive sign, the status output signal switches as soon as the value is reached in the negative direction (negative sign), (see illustration). Factory setting: STANDARD Example for the SYMMETRY measuring mode: Switch-on point Q = 4, Switch-off point Q = 10 ① = Status output switched on (conductive) ② = Status output switched off (non-conductive)   Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block. ■ This function is not available unless STATUS was selected in the MODE OF OPERATION function (4200) and the status output was assigned a limit value. ■ SYMMETRY cannot be selected unless the values in the ON-VALUE (4242) and OFF VALUE (4244) functions have the same sign or one of the values is zero. ■ If the values have different signs, SYMMETRY cannot be selected and an "ASSIGNMENT NOT POSSIBLE" message is displayed.

A0001247

Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (STATUS)	
TIME CONSTANT (4247) 	Entering a time constant defines how the measuring signal reacts to severely fluctuating measured variables, either very quickly (enter a low time constant) or with damping (enter a high time constant). Damping acts on the measuring signal before the switch status changes, and consequently before switch-on or switch-off delay is activated. The purpose of damping, therefore, is to prevent the status output changing state continuously in response to fluctuations in flow. User input: Fixed-point number 0.00 to 100.00 s Factory setting: 0.00 s  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block. ■ This function is not available unless the STATUS option was selected in the MODE OF OPERATION(4200) function.

8.2.2 Function group OPERATION

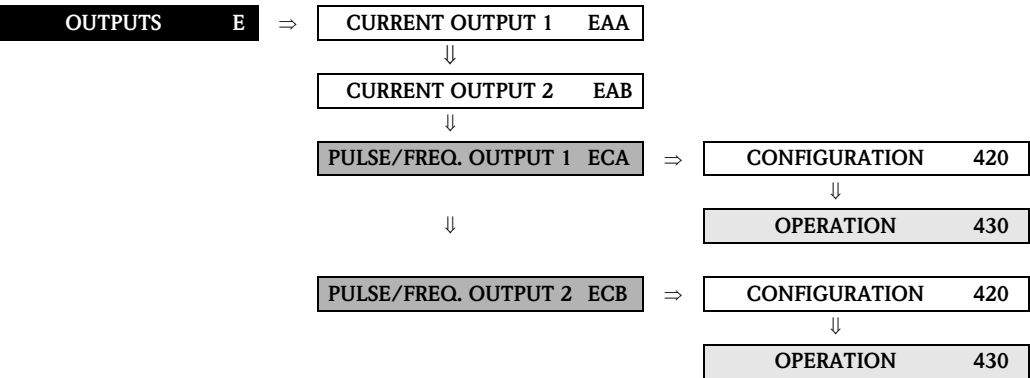

Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → OPERATION (FREQUENCY)	
ACTUAL FREQUENCY (4301)	Use this function to view the computed actual value of the output frequency. Display: 0 to 12500 Hz  Note! This function is not available unless the PULSE option was selected in the MODE OF OPERATION(4200) function.
SIMULATION FREQUENCY (4302) 	Activates simulation of the frequency output. Options: OFF ON Factory setting: OFF  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available function Z001 or Z002 in the CUSTODY TRANSFER block. ■ This function is available only if the FREQUENCY setting was selected in the OPERATION MODE (4200) function. ■ The "SIMULATION FREQUENCY OUTPUT" message indicates that simulation is active. ■ The measuring device continues to measure while simulation is in progress, i.e. the current measured values are output correctly via the other outputs.  Caution! The setting is not saved in the event of a power failure.


Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → OPERATION (FREQUENCY)	
VALUE SIMULATION FREQUENCY (4303) 	Define a selectable frequency value (e.g. 500 Hz) which should be output at the frequency output (with maximum pulse frequency or shortened minimum pulse width). This value is used to test downstream devices and the measuring device itself. User input: 0 to 12500 Hz Factory setting: 0 Hz  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for the available function Z001 or Z002 in the CUSTODY TRANSFER block. ■ This function is not available unless FREQUENCY was selected in the MODE OF OPERATION function (4200) and the SIMULATION FREQUENCY function (4302) is active (= ON).  Caution! The setting is not saved in the event of a power failure.

Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → OPERATION (PULSE)	
SIMULATION PULSE (4322) 	Activates simulation of the pulse output. Options: OFF COUNTDOWN The pulses specified in the VALUE SIMULATION PULSE function are output. CONTINUOUSLY Pulses are continuously output with the pulse width specified in the PULSE WIDTH function. Simulation is started once the CONTINUOUSLY option is confirmed with the  key.  Note! Simulation is started by confirming the CONTINUOUSLY option with the  key. The simulation can be switched off again via the SIMULATION PULSE function. Factory setting: OFF  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available function Z001 or Z002 in the CUSTODY TRANSFER block. ■ This function is not available unless the PULSE option was selected in the MODE OF OPERATION(4200) function. ■ The notice message #631 "SIM. PULSE" indicates that simulation is active. ■ The on/off ratio is 1:1 for both types of simulation. ■ The measuring device continues to measure while simulation is in progress, i.e. the current measured values are output correctly via the other outputs.  Caution! The setting is not saved in the event of a power failure.

Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → OPERATION (PULSE)	
VALUE SIMULATION PULSE (4323) 	Specify the number of pulses (e.g. 50) to be output during the simulation. This value is used to test downstream devices and the measuring device itself. The pulses are output with the pulse width specified in the PULSE WIDTH function. The on/off ratio is 1:1. Simulation is started once the specified value is confirmed with the  key. The display remains at 0 if the specified pulses have been output. User input: 0 to 10,000 Factory setting: 0  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for the available function Z001 or Z002 in the CUSTODY TRANSFER block. ■ This function is not available unless the COUNTDOWN setting was selected in the function SIMULATION PULSE. ■ Simulation is started by confirming the simulation value with the  key. The simulation can be switched off again via the SIMULATION PULSE function.  Caution! The setting is not saved in the event of a power failure.

Function description OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → OPERATION (STATUS)	
ACTUAL STATUS (4341)	Use this function to check the current status of the status output. Display: NOT CONDUCTIVE CONDUCTIVE  Note! This function is not available unless the STATUS option was selected in the MODE OF OPERATION (4200) function.
SIMULATION SWITCH POINT (4342) 	Use this function to activate simulation of the status output. Options: OFF ON Factory setting: OFF  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block. ■ This function is not available unless the STATUS option was selected in the MODE OF OPERATION (4200) function. ■ The "SIMULATION STATUS OUTPUT" message indicates that simulation is active. ■ The measuring device continues to measure while simulation is in progress, i.e. the current measured values are output correctly via the other outputs.  Caution! The setting is not saved in the event of a power failure.
VALUE SIMULATION SWITCH POINT (4343) 	Use this function to define the switching response of the status output during the simulation. This value is used to test downstream devices and the measuring device itself. Options: NOT CONDUCTIVE CONDUCTIVE Factory setting: NOT CONDUCTIVE  Note! ■ This function cannot be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block. ■ This function is not available unless STATUS was selected in the MODE OF OPERATION function (4200) and the SIMULATION SWITCH POINT function (4342) is active (= ON).  Caution! The setting is not saved in the event of a power failure.


8.2.3 Function group INFORMATION

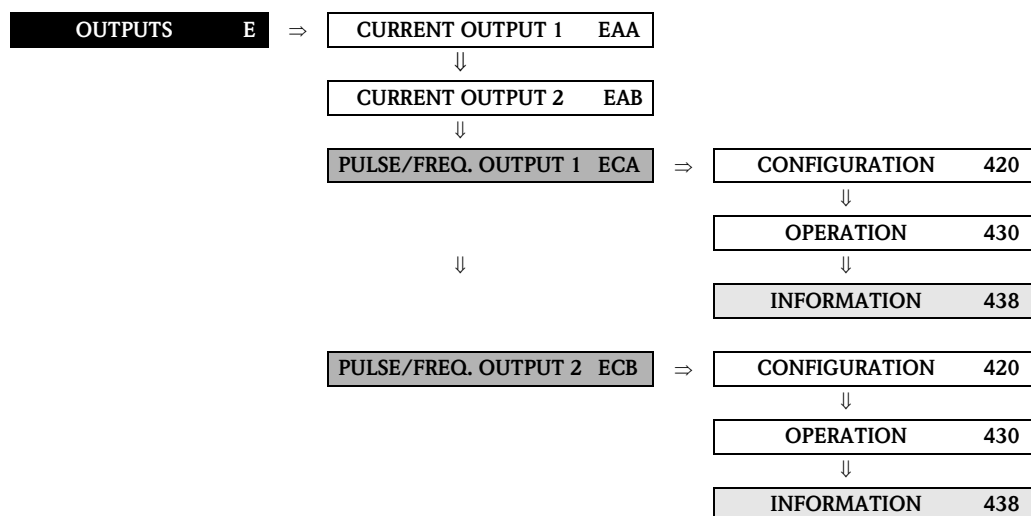

Function description	
OUTPUTS → PULSE/FREQ. OUTPUT(1 to 2) → INFORMATION	
TERMINAL NUMBER (4380)	Use this function to view the numbers of the terminals (in the connection compartment) and the polarity used by the pulse/frequency output.


8.3 Group RELAY OUTPUT

8.3.1 Function group CONFIGURATION

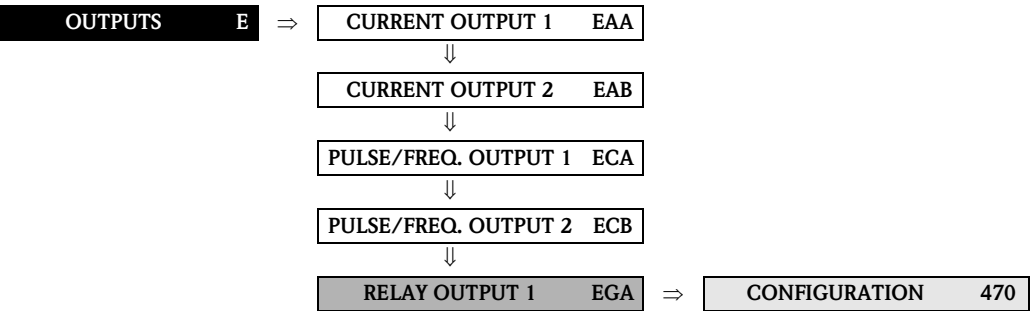

Function description	
OUTPUTS → RELAY OUTPUT → CONFIGURATION	
ASSIGN RELAY (4700) 🕒	Use this function to assign a switching function to the relay output. Options (standard): OFF ON (operation) FAULT MESSAGE NOTICE MESSAGE FAULT MESSAGE or NOTICE MESSAGE EPD (Empty pipe detection, only if active) FLOW DIRECTION LIMIT MASS FLOW LIMIT VOLUME FLOW CORRECTED VOLUME FLOW LIMIT VALUE DENSITY LIMIT VALUE REFERENCE DENSITY LIMIT VALUE TEMPERATURE LIMIT VALUE LIMIT TOTALIZER 1 to 3 Factory setting: FAULT MESSAGE 📝 Note! ■ It is very important to read and comply with the information on the switching characteristics of the relay output, (see Page 96). ■ It is advisable to configure at least one relay output as a fault output and define the outputs' failsafe mode. ■ The relay output is configured as a normally open (NO or make) contact by default. It can be reconfigured as a normally closed (NC or break) contact by means of a jumper on the relay module (see Operating Instructions Proline Promass 84, BA109D). ■ If you select OFF or ON, the only function shown in the CONFIGURATION function group is this function ASSIGN RELAY (4700).


Function description OUTPUTS → RELAY OUTPUT → CONFIGURATION	
ON-VALUE (4701) 	 Note! This function is not available unless LIMIT VALUE or FLOW DIRECTION was selected in the ASSIGN RELAY function (4700). Use this function to assign a value to the switch-on point (relay output pulls up). The value can be higher or lower than the switch-off point. Positive or negative values are permissible, depending on the measured variable in question (e.g. mass flow, totalizer reading). User input: 5-digit floating-point number [unit] Factory setting: 0 [kg/h] or 2 [kg/l] or 200 [°C]  Note! ■ The appropriate unit is taken from the function UNIT MASS FLOW ((0400)) or UNIT VOLUME FLOW (0402). ■ Only the switch-on point is available for flow direction output (no switch-off point). If you enter a value not equal to the zero flow (e.g. 5), the difference between the zero flow and the value entered corresponds to half the switchover hysteresis.
SWITCH-ON DELAY (4702) 	 Note! This function is not available unless LIMIT VALUE or FLOW DIRECTION was selected in the ASSIGN RELAY function (4700). Use this function to define a delay (0 to 100 seconds) for pull-up (i.e. signal changes from 0 to 1) of the relay output. The delay starts when the limit value is reached. The relay output does switch when the delay has timed out and the switch on condition has been valid over the delay time. User input: fixed-point number 0.0 to 100.0 s Factory setting: 0.0 s
OFF VALUE (4703) 	 Note! This function is not available unless a number was selected in the ASSIGN RELAY function (4700). Use this function to assign a value to the switch-off point (relay drops out). The value can be higher or lower than the switch-on point. Positive or negative values are permissible, depending on the measured variable in question (e.g. mass flow, totalizer reading). User input: 5-digit floating-point number [unit] Factory setting: 0 [kg/h] or 2 [kg/l] or 200 [°C]  Note! ■ The appropriate unit is taken from the function UNIT MASS FLOW ((0400)) or UNIT VOLUME FLOW (0402). ■ If SYMMETRY is selected in the function MEASURING MODE (4705) and values with different signs are entered for the switch-on and switch-off points, the notice message "INPUT RANGE EXCEEDED" appears.

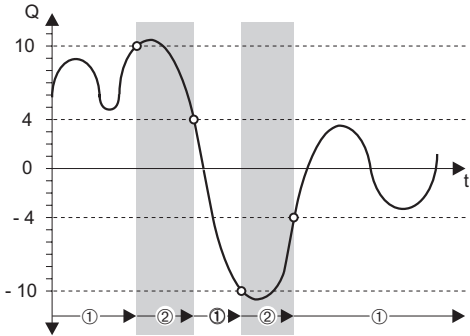Function description	
OUTPUTS → RELAY OUTPUT → CONFIGURATION	
SWITCH-OFF DELAY (4704) 	 Note! This function is not available unless a number was selected in the ASSIGN RELAY function (4700). Use this function to define a delay (0 to 100 seconds) for dropout (i.e. signal changes from 1 to 0) of the relay output. The delay starts when the limit value is reached. The relay output does switch when the delay has timed out and the switch off condition has been valid over the delay time. User input: fixed-point number 0.0 to 100.0 s Factory setting: 0.0 s
MEASURING MODE (4705) 	 Note! This function is not visible unless a limit value was assigned to the relay output. Use this function to define the measuring mode for the relay output. Options: STANDARD The relay output signal switches at the defined switch points. SYMMETRY The relay output signal switches at the defined switch points, irrespective of the sign. If you define a switch point with a positive sign, the relay output switches as soon as the value is reached in the negative direction (negative sign), (see illustration). Factory setting: STANDARD Example for the SYMMETRY measuring mode: Switch-on point Q = 4 Switch-off point Q = 10 ① = Relay energized ② = Relay de-energized   Note! ■ SYMMETRY cannot be selected unless the values in the ON-VALUE (4701) and OFF VALUE (4703) functions have the same sign or one of the values is zero. ■ If the values have different signs, SYMMETRY cannot be selected and an "ASSIGNMENT NOT POSSIBLE" message is displayed.

A0001247

Function description	
OUTPUTS → RELAY OUTPUT → CONFIGURATION	
TIME CONSTANT (4706) 	Entering a time constant defines how the measuring signal reacts to severely fluctuating measured variables, either very quickly (enter a low time constant) or with damping (enter a high time constant). Damping acts on the measuring signal before the switch status changes, and consequently before switch-on or switch-off delay is activated. The purpose of damping, therefore, is to prevent the relay output changing state continuously in response to fluctuations in flow. User input: fixed-point number: 0.00 to 100.00 s Factory setting: 0.00 s


8.3.2 Function group OPERATION

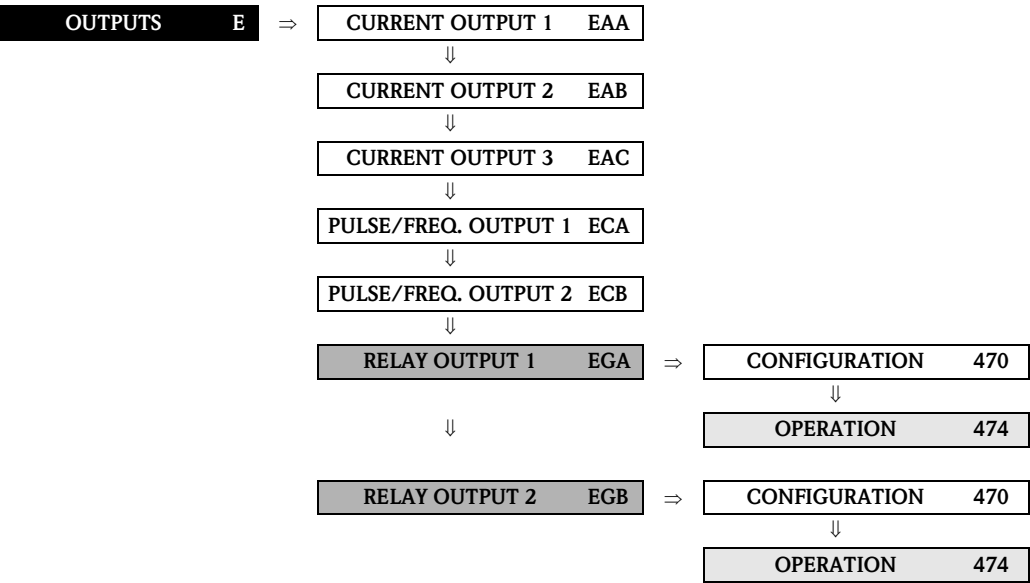

Function description	
OUTPUTS → RELAY OUTPUT (1 to 2) → OPERATION	
ACTUAL STATUS RELAY (4740)	Use this function to check the current status of the relay output. Display: MAKE CONTACT OPEN MAKE CONTACT CLOSED BREAK CONTACT OPEN BREAK CONTACT CLOSED Note! A jumper on the contact side defines the relay output as a normally open (NO or make) or normally closed (NC or break) contact (see Operating Instruction Proline Promass 84, BA109D).
SIMULATION SWITCH POINT (4741) 	Use this function to activate simulation of the relay output. Options: OFF ON Factory setting: OFF Note! ■ The "SIMULATION RELAY" message indicates that simulation is active. ■ The measuring device continues to measure while simulation is in progress, i.e. the current measured values are output correctly via the other outputs. Caution! The setting is not saved in the event of a power failure.

Function description	
OUTPUTS → RELAY OUTPUT (1 to 2) → OPERATION	
VALUE SIMULATION SWITCH POINT (4742) 	 Note! The function is not visible unless the function SIMULATION SWITCH POINT (4741) is active (= ON). Use this function to define the status of the relay output during the simulation. This value is used to test downstream devices and the measuring device itself. Depending on the relay configuration (as make or break contact) the following selections are available. Options: Relay output configured as normally open (make) contact: MAKE CONTACT OPEN MAKE CONTACT CLOSED Relay output configured as normally closed (break) contact: BREAK CONTACT OPEN BREAK CONTACT CLOSED  Caution! The setting is not saved in the event of a power failure.

8.3.3 Function group INFORMATION

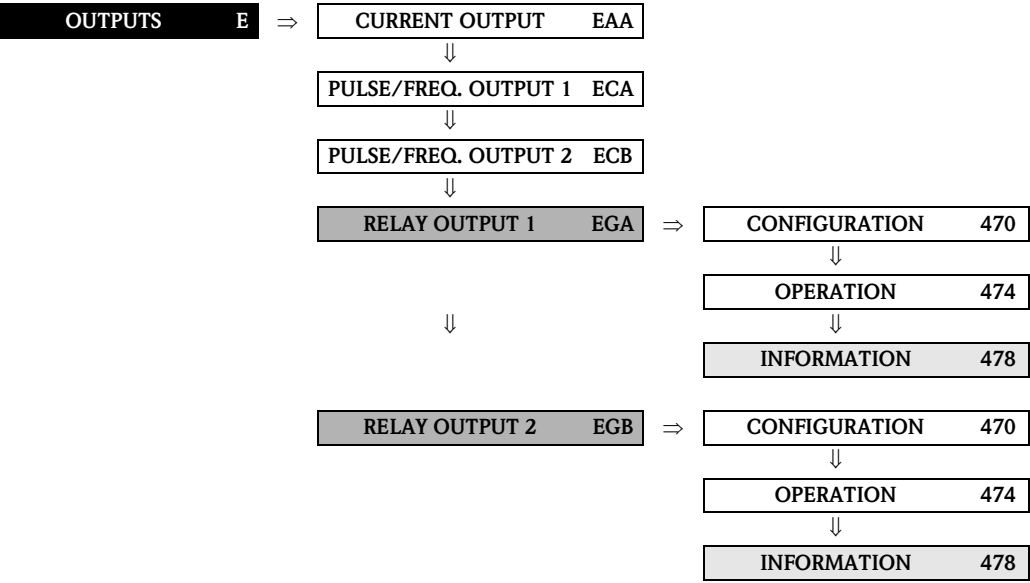

Function description	
OUTPUTS → RELAY OUTPUT (1 to 2) → INFORMATION	
TERMINAL NUMBER (4780)	Use this function to view the numbers of the terminals (in the connection compartment) and the polarity used by the relay output.


8.4 Behavior of status output

General

If you have configured the status output signal for LIMIT VALUE or FLOW DIRECTION, you can define the requisite switch points in the ON-VALUE and OFF-VALUE functions. When the measured variable in question reaches one of these predefined values, the status output switches as shown in the illustrations below.

Status output configured for flow direction (Fig. 4)

The value you entered in the function ON-VALUE defines the switch point for the positive and negative directions of flow. If, for example, the switch point you define is $1 \text{ m}^3/\text{h}$, the status output does not switch off until $-1 \text{ m}^3/\text{h}$ (non-conductive) and switches on again at $+1 \text{ m}^3/\text{h}$. Set the switch point to 0 if your process calls for direct switchover (no switching hysteresis). If low flow cut off is used, it is advisable to set hysteresis to a value higher than or equal to the low flow cut off rate.

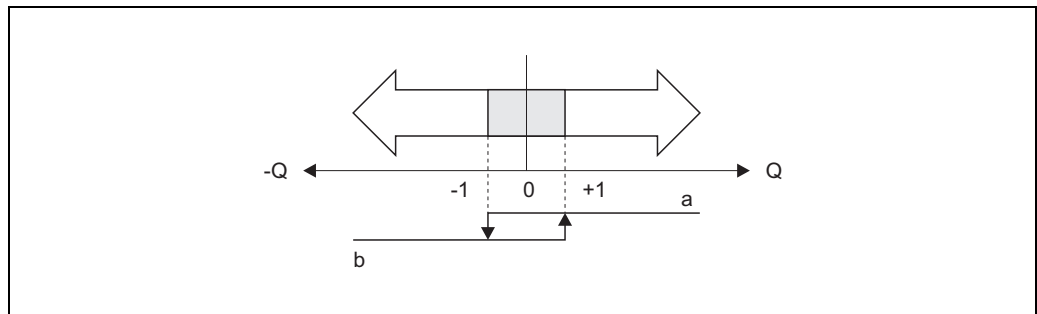


A0001236

Fig. 4: Switching behavior of the status output for flow direction
a = status output conductive, b = status output non-conductive

Status output configured for limit value (Fig. 5)

The status output signal switches as soon as the measured variable undershoots or overshoots a defined switch point.

Application: Monitoring flow or process-related boundary conditions.

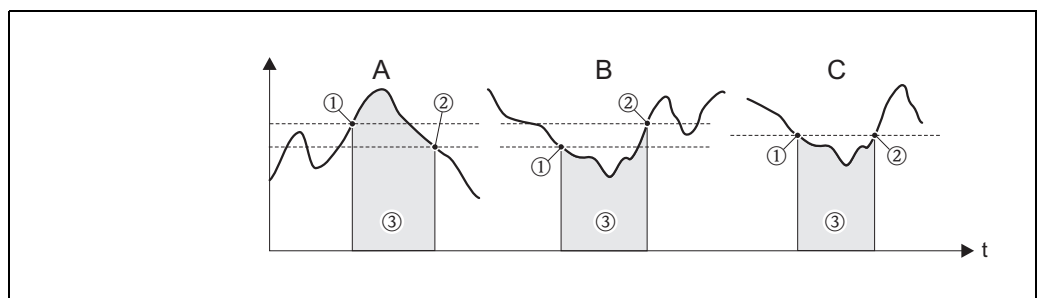

 
 
 
 
 
A0001235

Fig. 5: Switching behavior of the status output for limit value


- ① = $ON < OFF \text{ VALUE}$ (maximum safety)
- ② = $ON \geq OFF \text{ VALUE}$ (minimum safety)
- ③ = Status output switched off (non-conductive)

8.5 Status output switching behavior

Function	State	Open collector behavior (Transistor)
ON (operation)	System in measuring mode  A0001052	Conductive  A0001237
	System not in measuring mode (power supply failed)  A0001291	Non-conductive  A0001238
Fault message	System OK  A0001052	Conductive  A0001237
	(System or process error) Fault → Failsafe mode, outputs/inputs and totalizers  A0001291	Non-conductive  A0001238
Notice message	System OK  A0001052	Conductive  A0001237
	(System or process error) Fault → Continuation of measuring  A0001291	Non-conductive  A0001238
Fault message or Notice message	System OK  A0001052	Conductive  A0001237
	(System or process error) Fault → Response to error or Note → Continuation of measuring  A0001291	Non-conductive  A0001238

Function	State		Open collector behavior (Transistor)
Empty pipe detection (EPD)	Measuring tube full	 A0001292	Conductive  A0001237
	Measuring tube partially filled / empty measuring tube	 A0001293	Non-conductive  A0001238
Flow direction	forward	 A0001241	Conductive  A0001237
	reverse	 A0001242	Non-conductive  A0001238
Limit value – Mass flow – Volume flow – Corrected volume flow – Density – Reference density – Temperature – Totalizer	Limit value not overshoot or undershot	 A0001243	Conductive  A0001237
	Limit value overshoot or undershot	 A0001244	Non-conductive  A0001238
* Terminal numbers in accordance with the function TERMINAL NO. (4380) on Page 88.			

9 Block INPUTS

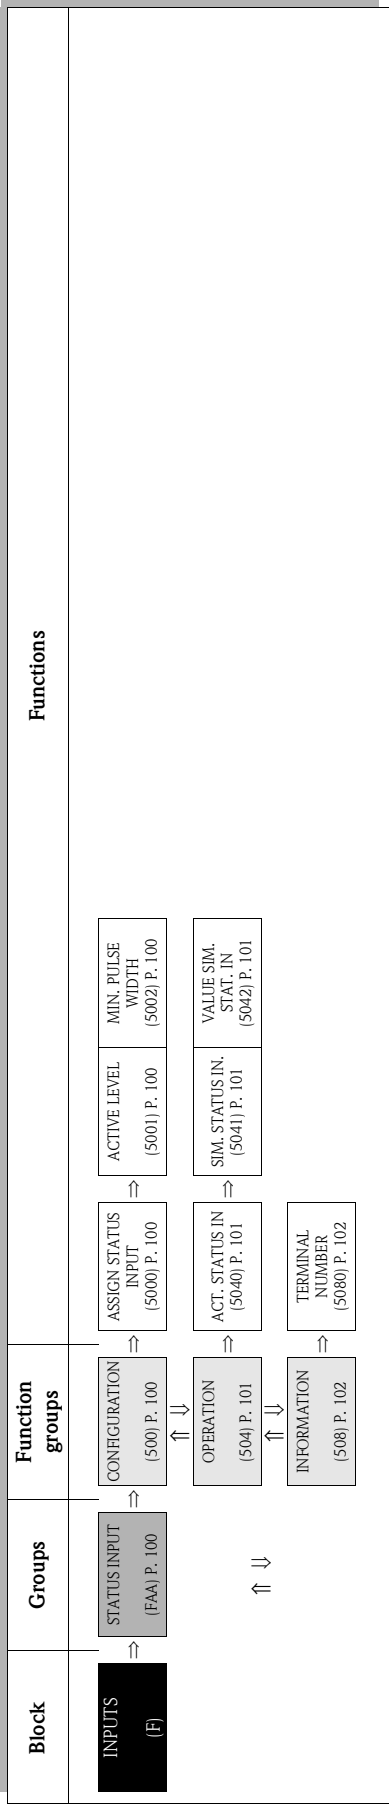


9.1 Group STATUS INPUT

9.1.1 Function group CONFIGURATION

INPUTS	F	⇒	STATUS INPUT	FAA	⇒	CONFIGURATION	500
--------	---	---	--------------	-----	---	---------------	-----


Function description INPUTS → STATUS INPUT → CONFIGURATION	
ASSIGN STATUS INPUT (5000) 	Use this function to assign a switching function to the status input. Options: OFF RESET TOTALIZER 1 RESET TOTALIZER 2 RESET TOTALIZER 3 RESET ALL TOTALIZERS POSITIVE ZERO RETURN RESET FAULT MESSAGE ZERO POINT ADJUSTMENT Factory setting: RESET FAULT MESSAGE  Caution! POSITIVE ZERO RETURN is active as long as the level is available at the status input (continuous signal). All other assignments react to a change in level (pulse) at the status input.
ACTIVE LEVEL (5001) 	Use this function to define whether the assigned function (see function ASSIGN STATUS INPUT(5000)) is released when the signal level is present (HIGH) or not present (LOW). Options: HIGH LOW Factory setting: HIGH
MINIMUM PULSE WIDTH (5002) 	Use this function to define a minimum pulse width which the input pulse must achieve in order to trigger the selected switching function, (see function ASSIGN STATUS INPUT(5000)). User input: 20 to 100 ms Factory setting: 50 ms

 9.1.2 Function group OPERATION



Function description INPUTS → STATUS INPUT → OPERATION	
ACTUAL STATUS INPUT (5040)	Use this function to view the current level of the status input. Display: HIGH LOW
SIMULATION STATUS INPUT (5041) 	Use this function to simulate the status input, in other words to trigger the function assigned to the status input (ASSIGN STATUS INPUT (5000) → Page 100). Options: OFF ON Factory setting: OFF  Note! ■ The "SIMULATION STATUS INPUT" notice message indicates that simulation is active. ■ The measuring device continues to measure while simulation is in progress, i.e. the current measured values are output correctly via the other outputs.  Caution! The setting is not saved in the event of a power failure.
VALUE SIMULATION STATUS INPUT (5042) 	Use this function to define the level to be assumed at the status output during the simulation. This value is used to test downstream devices and the measuring device itself. Options: HIGH LOW Factory setting: LOW  Note! The function is not visible unless the function SIMULATION STATUS INPUT (5041) is active (= ON).  Caution! The setting is not saved in the event of a power failure.

9.1.3 Function group INFORMATION

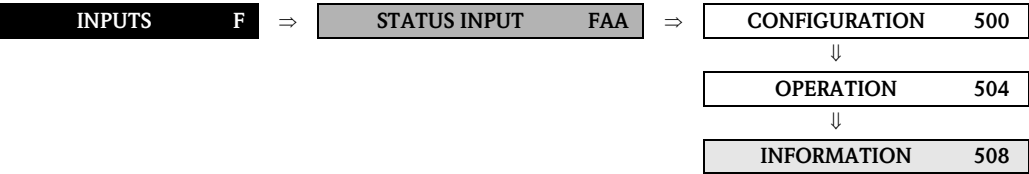

Function description	
INPUTS → STATUS INPUT → INFORMATION	
TERMINAL NUMBER (5080)	Use this function to view the numbers of the terminals (in the connection compartment) and the polarity used by the status input.

10 Block BASIC FUNCTION

Block	Groups	Function groups	Functions									
BASIC FUNCTION (G)	HART (GAA) P. 104 ⇕	CONFIGURATION (600) P. 104	⇐	TAG NAME (6000) P. 104	⇐	TAG DESCRIPTION (6001) P. 104	⇐	BUS ADDRESS (6002) P. 104	⇐	HART PROTOCOL (6003) P. 104	⇐	WRITE PROTECTION (6004) P. 104
		INFORMATION (604) P. 105	⇐	MANUFACTURER ID (6040) P. 105	⇐	DEVICE ID (6041) P. 105	⇐	DEVICE REVISION (6042) P. 105				
	PROCESS PARAMETER (GJA) P. 106 ⇕	CONFIGURATION (640) P. 106	⇐	ASSIGN LF CUT OFF (6400) P. 106	⇐	ON-VALUE LF CUTOFF (6402) P. 106	⇐	OFF-POINT LF CUT OFF (6403) P. 106	⇐	PRESS SHOCK SUPPR. (6404) P. 107		
		EPD PARAMETER (642) P. 108	⇐	EMPTY PIPE DETECT. (6420) P. 108	⇐	EMPTY PIPE DET. LOW (6423) P. 108	⇐	EPD VALUE HIGH (6424) P. 108	⇐	EPD RESP. TIME (6425) P. 108	⇐	EPD EXC. CURR. (6426) P. 109
		REFERENCE PARAMETER (646) P. 110	⇐	CORR. VOL. CALC. (6460) P. 110	⇐	FIXED REF. DENSITY (6461) P. 110	⇐	EXPANS. COEFF. (6462) P. 110	⇐	EXPAN. COEF. SOR. (6463) P. 110	⇐	REFERENCE TEMPERATURE (6464) P. 111
		ADJUSTMENT (648) P. 112	⇐	ZERO POINT ADJUST. (6480) P. 112	⇐	DENSITY ADJUST. MODE (6482) P. 112	⇐	DENSITY SET VALUE 1 (6483) P. 112	⇐	MEASURE FLUID 1 (6484) P. 112	⇐	DENSITY SET VALUE 2 (6485) P. 113
		PRESSURE CORRECTION (650) P. 114	⇐	PRESSURE MODE (6500) P. 114	⇐	PRESSURE (6501) P. 114						
	SYSTEM PARAMETER (GLA) P. 115 ⇕	CONFIGURATION (660) P. 115	⇐	INSTALL. DIR. SENSOR (6600) P. 115	⇐	DENSITY DAMPING (6602) P. 115	⇐	FLOW DAMPING (6603) P. 115	⇐	POS. ZERO RETURN (6605) P. 115		
		SENSOR DATA (GNA) P. 116	⇐	K-FACTOR (6800) P. 116	⇐	ZERO POINT (6803) P. 116	⇐	NOMINAL DIAMETER (6804) P. 116				
		FLOW COEFF. (684) P. 117	⇐	COEFF. KM (6840) P. 117	⇐	COEFF. KM 2 (6841) P. 117	⇐	COEFF. KT (6842) P. 117	⇐	COEFF. KD 1 (6843) P. 117	⇐	COEFF. KD 2 (6844) P. 117
		DENSITY COEFF. (685) P. 118	⇐	COEFF. C0 (6850) P. 118	⇐	COEFF. C1 (6851) P. 118	⇐	COEFF. C2 (6852) P. 118	⇐	COEFF. C3 (6853) P. 118	⇐	COEFF. C4 (6854) P. 118
		ADDITION. COEFF. (686) P. 119	⇐	MIN. FLUID TEMP. (6860) P. 119	⇐	MAX. FLUID TEMP. (6861) P. 119	⇐	MIN. CARRIER TEMP. (6862) P. 119	⇐	MAX. CARRIER TEMP. (6863) P. 119		COEFF. C5 (6855) P. 118


10.1 Group HART

10.1.1 Function group CONFIGURATION


BASIC FUNCTION	G	⇒	HART	GAA	⇒	CONFIGURATION	600
----------------	---	---	------	-----	---	---------------	-----

Function description BASIC FUNCTION → HART → CONFIGURATION	
TAG NAME (6000)  (only for NTEP, MC)	Use this function to enter a tag name for the measuring device. You can edit and read this tag name via the local display or the HART protocol. User input: max. 8-character text, permissible: A-Z, 0-9, +, -, punctuation marks Factory setting: " _ _ _ _ _ " (no text)
TAG DESCRIPTION (6001)  (only for NTEP, MC)	Use this function to enter a tag description for the measuring device. You can edit and read this tag name via the local display or the HART protocol. User input: max. 16-character text, permissible: A-Z, 0-9, +, -, punctuation marks Factory setting: " _ _ _ _ _ " (No text)
BUS ADDRESS (6002)  (only for NTEP, MC)	Use this function to define the address for the exchange of data with the HART protocol. User input: 0 to 15 Factory setting: 0  Note! - Addresses 1 to 15: a constant 4 mA current is applied. - This function is not changeable if the measuring device is configured according to the PTB, NMI, METAS or BEV approval and YES has been selected in the available functions Z001 to Z003 in the block CUSTODY TRANSFER.
HART PROTOCOL (6003)	Use this function to display if the HART protocol is active. Display: OFF = HART protocol not active ON = HART protocol active  Note! The HART protocol can be activated with the selection 4–20 mA HART or 4–20 mA (25 mA) in the function CURRENT SPAN → Page 53.
WRITE PROTECTION (6004)	Use this function to check whether the measuring device can be write-accessed. Display: OFF = Data exchange is possible ON = Data exchange disabled Factory setting: OFF  Note! Write protection is disabled or enabled by means of a jumper on the I/O board. For additional information on write protection, refer to the Operating Instructions for the Promass 84 (BA109D).

 
10.1.2 Function group INFORMATION



Function description	
BASIC FUNCTION → HART → OPERATION	
MANUFACTURER ID (6040)	Use this function to view the manufacturer ID in decimal numerical format. Display: – Endress+Hauser – 17 (≅ 11 hex) for Endress+Hauser
DEVICE ID (6041)	Use this function to view the device ID in hexadecimal numerical format. Display: 52 (≅ 82 dez) for Promass 84
DEVICE REVISION (6042)	Displays the device-specific revision of the HART command interface. Display: e.g.: 5

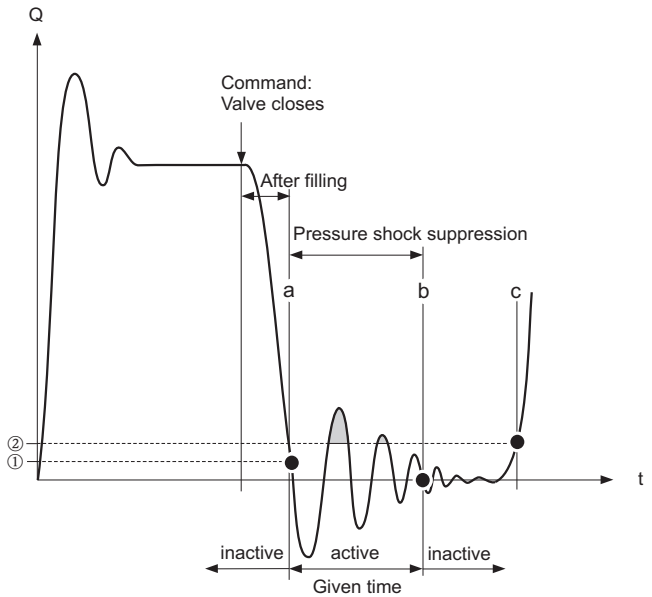Function description	
BASIC FUNCTION → PROCESSPARAMETER → CONFIGURATION	
PRESSURE SHOCK SUPPRESSION (6404) 	The closure of a valve can cause brief but severe movements of the fluid in the piping system, movements which the measuring system registers. The pulses totaled in this way result in a totalizer reading error, particularly in the case of batching processes. For this reason, the measuring device is equipped with pressure shock suppression (= short-term signal suppression) which can eliminate system-related "disruptions".  Note! Note that pressure shock suppression cannot be used unless the low flow cut off is active, (see function ON-VALUE LOW FLOW CUT OFF on Page 106). Use this function to define the time span for active pressure shock suppression. Activation of the pressure shock suppression Pressure shock suppression is activated after the flow falls below the switch-on point of the low flow cut off (see point a in graphic). While pressure shock suppression is active, the following conditions apply: ■ Flow reading on display → 0 ■ Totalizer reading → the totalizers are pegged at the last correct value. Deactivation of the pressure shock suppression The pressure shock suppression is deactivated after the time interval, set in this function, has passed (see point b in graphic).  Note! The actual flow value is displayed and output, when the time interval for the pressure shock suppression has passed and the flow exceeds the switch-off point of the low flow cut off (see point c in graphic).  A0001285-EN ① = Off-value (low flow cut off) ② = On-VALUE (low flow cut off) a Active when value falls below the on-value of the low flow cut off b Deactivated after specified time expires c Flow values are again used to calculate the pulses ■ Suppressed values Q Flow User input: max. 4-digit number, incl. unit: 0.00 to 100.0 s Factory setting: 0.00 s


10.2.2 Function group EPD PARAMETER

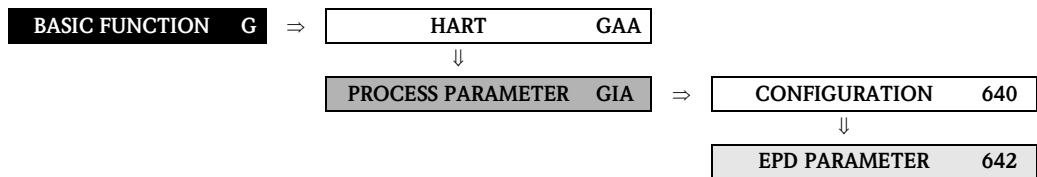

Function description	
BASIC FUNCTION → PROCESSPARAMETER → EPD PARAMETER	
EMPTY PIPE DETECTION (6420) 	Use this function to activate the empty pipe detection (EPD). With empty measuring tubes the density of the fluid falls below the value specified in the function EPD VALUE LOW. Options: OFF ON Factory setting: Liquid: ON Gas: OFF  Caution! ■ Select a correspondingly low EPD response value in the function EPD VALUE LOW, so that the difference to the effective density of the fluid is sufficiently large enough. This ensures that totally empty measuring tubes and not partially filled ones are detected. ■ For gas measurement we strongly recommend to switch off empty pipe detection.
EPD VALUE LOW (6423) 	 Note! This function is not available unless the ON selection was selected in the EMPTY PIPE DETECTION function. Use this function to set a lower threshold for the measured density value, in order to detect possible problems in the process indicated by too low density. User input: 5-digit floating-point number Factory setting: 0.2000 kg/l
EPD VALUE HIGH (6424) 	 Note! This function is not available unless the ON selection was selected in the EMPTY PIPE DETECTION function. Use this function to set an upper threshold for the measured density value. User input: 5-digit floating-point number Factory setting: 6.0000 kg/l
EPD RESPONSE TIME (6425) 	Use this function to enter the time span for which the criteria for an empty pipe have to be satisfied without interruption before a notice message or fault message is generated. User input: Fixed-point number 1.0 to 100 s Factory setting: 1.0 s

Function description	
BASIC FUNCTION → PROCESSPARAMETER → EPD PARAMETER	
EPD EXC.CURR. (6426) 	Use this function to activate the empty pipe detection (EPD). In the event of inhomogeneous fluids or air bubbles, the exciting current of the measuring pipes increases. If the excitation current set in this function is exceeded, error message #700 is output similar to the function EPD VALUE LOW (6423) and EPD VALUE HIGH (6424). User input: 5-digit floating-point number Factory setting: 100 mA (deactivated)  Note! The function is not activated until a value under 100 mA is input. Entering the value 100 mA deactivates the function.


10.2.3 Function group REFERENCE PARAMETER

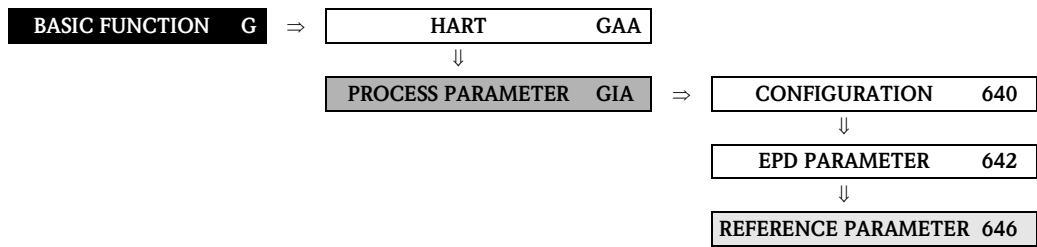

Function description	
BASIC FUNCTION → PROCESSPARAMETER → REFERENCE PARAMETER	
CORRECTED VOLUME CALCULATION (6460) 	This function is used to set the reference density for calculating the corrected volume flow. Options: FIXED REFERENCE DENSITY CALCULATED REFERENCE DENSITY Factory setting: CALCULATED REFERENCE DENSITY
FIXED REFERENCE DENSITY (6461) 	Note! This function is not available unless the FIXED REFERENCE DENSITY setting was selected in the CORRECTED VOLUME CALCULATION (6460) function. In this function, a fixed value for the reference density can be entered, with which the corrected volume flow or corrected volume is calculated. User input: 5-digit floating-point number Factory setting: 1 kg/Nl
EXPANSION COEFFICIENT (6462) 	Note! This function is not available unless the CALCULATED REFERENCE DENSITY setting was selected in the CORRECTED VOLUME CALCULATION function (6460). For temperature-compensated calculations of the reference density an expansion coefficient specific to the fluid is required and can be entered in this function (see (6464) (→ Page 111) function on REFERENCE TEMPERATURE). User input: 5-digit floating-point number Factory setting: $0.5000 \text{ e}^{-3} [1/\text{K}]$
EXPANSION COEFFICIENT SQUARE (6463) 	Use this function to enter a square expansion coefficient if the temperature compensation follows a nonlinear behavior (see REFERENCE TEMPERATURE (6464) function on → Page 111). User input: 5-digit floating-point number Factory setting: $0 \text{ e}^{-6} [1/\text{K}^2]$

Function description	
BASIC FUNCTION → PROCESSPARAMETER → REFERENCE PARAMETER	
REFERENCE TEMPERATURE (6464) 	 Note! This function is not available unless the CALCULATED REFERENCE DENSITY setting was selected in the CORRECTED VOLUME CALCULATION function (6460). Entering the reference temperature for calculating the corrected volume flow, the corrected volume and the reference density. User input: 5-digit floating-point number Factory setting: 20.000 °C The reference density is calculated as follows: $\rho_N = \rho \cdot (1 + \alpha \Delta t + \beta \Delta t^2)$; where $\Delta t = t - t_N$ ρ_N = Reference density ρ = Currently measured fluid density (measuring value of the measuring instrument) t = Actual measured temperature of fluid (measuring value of the measuring instrument) t_N = Reference temperature for calculating the reference density (e.g. 20 °C) α = Volumetric expansion coefficient of the fluid, Unit = [1/K]; K = Kelvin β = Square vol. expansion coefficient of the fluid, unit [1/K²]


10.2.4 Function group ADJUSTMENT

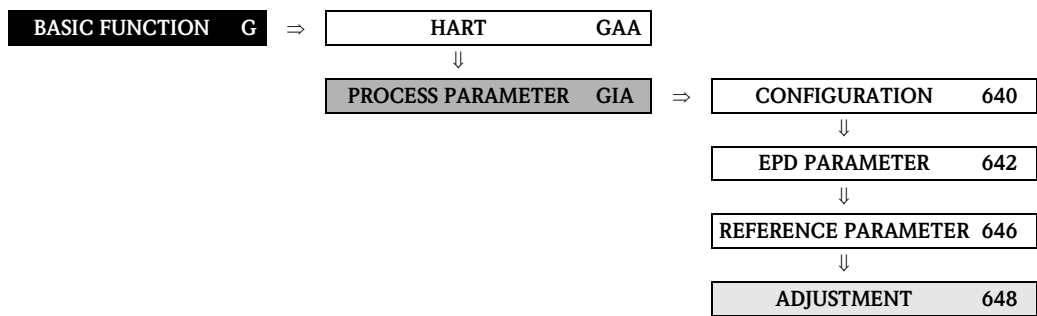

Function description	
BASIC FUNCTION → PROCESSPARAMETER → ADJUSTMENT	
ZERO POINT ADJUSTMENT (6480) 	For starting the zero point adjustment. The new zero point determined by the measuring system is adopted by the function ZERO POINT (6803) → Page 116. Options: CANCEL START Factory setting: CANCEL  Caution! Before carrying this out, please refer to the Operating Instructions of the Promass 84 (BA109D) for a detailed description of the procedure for zero point adjustment.  Note! ■ Programming is locked during zero point adjustment. ■ The message "ZERO ADJUST RUNNING" appears on the display. ■ If the zero point adjustment is not possible (e.g. if $v > 0.1$ m/s) or has been canceled, the alarm message "ZERO ADJUST NOT POSSIBLE" appears on the display. ■ If the Promass 84 measuring electronics are fitted with a status input, then the zero point can also be activated by using this input.
DENSITY ADJUST MODE (6482) 	Select whether a 1-point or 2-point density adjustment should be carried out. Options: CANCEL 1-POINT 2-POINT
DENSITY SET VALUE 1 (6483) 	Use this function to enter the density setpoint value for the first fluid for which you want to carry out a field density adjustment. User input: 5-digit floating-point number, incl. units  Note! ■ The preset density entered here should not vary from the actual fluid density by a more than $\pm 10\%$. ■ The appropriate unit is taken from the function group SYSTEM UNITS (see Page 15).
MEASURE FLUID 1 (6484) 	Measure the actual density of the first fluid for the density adjustment. Options: CANCEL START

Function description BASIC FUNCTION → PROCESSPARAMETER → ADJUSTMENT	
DENSITY SET VALUE 2 (6485) 	Use this function to enter the density setpoint value for the second fluid for which you want to carry out a field density adjustment. User input: 5-digit floating-point number, incl. units  Note! ■ The preset density entered here should not vary from the actual fluid density by a more than $\pm 10\%$. ■ The difference between the density setpoint values must be at least 0.2 kg/l. ■ The appropriate unit is taken from the function group SYSTEM UNITS (see Page 15).
MEASURE FLUID 2 (6486) 	Measure the actual density of the second fluid for the density adjustment. Options: CANCEL START
DENSITY ADJUSTMENT (6487) 	With this function a density adjustment can be carried out on site. The density adjustment values will thus be recalculated and stored. This ensures that the values dependent on density calculations (e.g. volume flow) are as accurate as possible.  Note! Before carrying this out, please refer to the Operating Instructions of the Promass 84 (BA109D) for a detailed description of the procedure for density adjustment. Two types of adjustment are possible: 1-point density adjustment (with one fluid) This type of density adjustment is necessary under the following conditions: ■ The sensor does not accurately measure the density which the operator expects based on laboratory trials. ■ The characteristics of the fluid are outside the measuring points set at the factory or reference conditions under which the flowmeter has been calibrated. ■ The plant is used solely for measuring a fluid whose density is to be determined very accurately under constant conditions. 2-point density adjustment (with two fluids) This type of adjustment must always be carried out when the measuring tubes are changed mechanically, e.g. due to: ■ Deposits ■ Abrasion ■ Corrosion In such cases, the resonant frequency of the measuring tubes has been affected by these factors and is no longer compatible with the calibration data set at the factory. The 2-point density adjustment takes these mechanically-based changes into account and calculates new, adjusted calibration data. Options: CANCEL MEASURE FLUID 1 MEASURE FLUID 2 DENSITY ADJUSTMENT Factory setting: CANCEL
RESTORE ORIGINAL (6488) 	Restore the original density coefficients determined at the factory. Options: NO YES Factory setting: NO


10.2.5 Function group PRESSURE CORRECTION

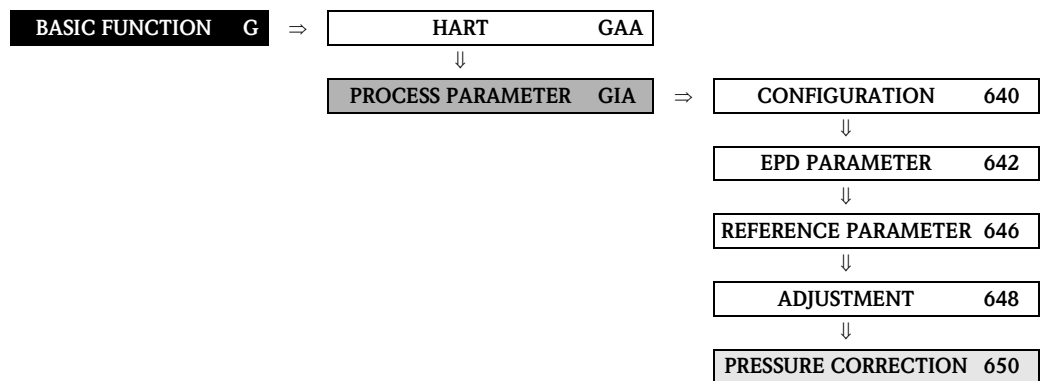

Function description BASIC FUNCTION → PROCESSPARAMETER → PRESSURE CORRECTION	
PRESSURE MODE (6500) 	Use this function to configure an automatic pressure correction. In this way, the effect of a pressure deviation between the calibration and process pressures on the measured error for mass flow can be compensated for. For additional information on this topic, refer to the Operating Instructions for the Promass 84 (BA109D) in the chapter on accuracy. Options: OFF FIX Enter the fixed value for the process pressure which should be used during pressure correction using the PRESSURE function (6501). Factory setting: OFF
PRESSURE (6501) 	Note! This function is not available unless the FIX option was selected in the PRESSURE MODE(6500) function. Use this function to enter the value for the process pressure which should be used during pressure correction. User input: 7-digit floating-point number Factory setting: 0 bar g Note! The appropriate unit is taken from the function group SYSTEM UNITS (see Page 15).

10.3 Group SYSTEM PARAMETERS


10.3.1 Function group CONFIGURATION

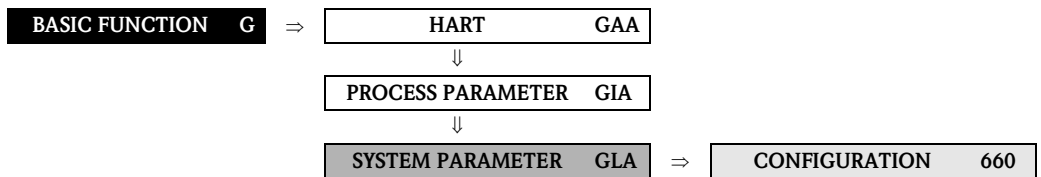

Function description BASIC FUNCTION → SYSTEM PARAMETER → CONFIGURATION	
INSTALLATION DIRECTION SENSOR (6600) 	Use this function to reverse the sign of the flow direction, if necessary.  Note! Ascertain the actual direction of fluid flow with reference to the direction indicated by the arrow on the sensor (nameplate). Options: NORMAL (flow as indicated by the arrow) INVERSE (flow opposite to direction indicated by the arrow) Factory setting: NORMAL
DENSITY DAMPING (6602) 	The density filter allows the sensitivity of the density measuring signal to be lowered with respect to variations in the density of the fluid, e.g. with inhomogeneous liquids. The damping acts on all functions and outputs of the measuring device. User input: max. 5-digit number, incl. unit: 0.00 to 100.00 s Factory setting: 0.00 s
FLOW DAMPING (6603) 	Setting the filter depth of the digital filter. The sensitivity of the flow measurement signal can be reduced with respect to interference peaks (e.g. in the event of a high solid content, gas bubbles in the fluid etc.). The reaction time of the measuring device increases with every increase in the filter setting. The damping acts on all functions and outputs of the measuring device. User input: 0 to 100 s Factory setting: Liquid: 0.00 s Gas: 0.25 s
POSITIVE ZERO RETURN (6605) 	Use this function to interrupt evaluation of measured variables. This is necessary when a piping system is being cleaned, for example. This setting acts on all function and outputs of the measuring device. Options: OFF ON (signal output is set to the ZERO FLOW value, temperature and density are still output) Factory setting: OFF


10.4 Group SENSOR DATA

10.4.1 Function group CONFIGURATION

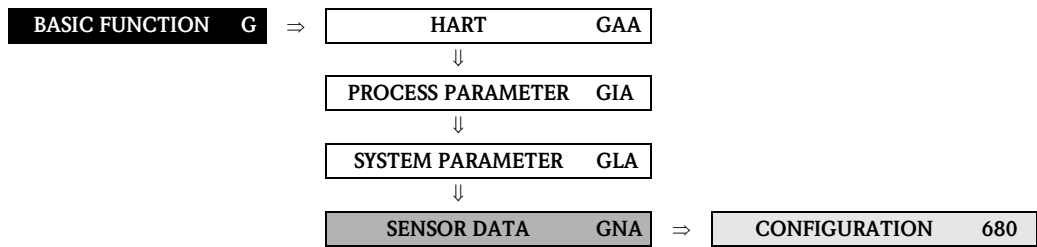


Function description BASIC FUNCTION → SENSOR DATA → CONFIGURATION	
All sensor data (calibration factor, zero point and nominal diameter) are set at the factory and saved on the S-DAT sensor memory chip.  Caution! Under normal circumstances you should not change the following parameter settings, because changes affect numerous functions of the entire measuring facility in general and the accuracy of the measuring system in particular. For this reason, the functions described below cannot be changed even when you enter your personal code. Contact your Endress+Hauser service organization if you have any questions about these functions.  Note! The individual values of the functions are also provided on the sensor nameplate.	
K-FACTOR (6800) 	This function shows the current calibration factor for the sensor. Factory setting: Depends on nominal diameter and calibration
ZERO POINT (6803) 	This function shows the current zero point correction value for the sensor. Display: max. 5-digit number: -99999 to +99999 Factory setting: Depends on calibration
NOMINAL DIAMETER (6804) 	This function shows the nominal diameter for the sensor. Factory setting: Depends on nominal diameter

10.4.2 Function group FLOW COEFFICIENT

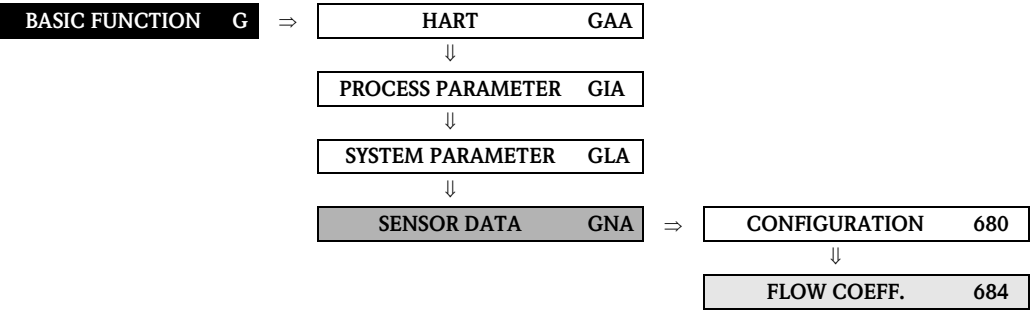


Function description	
BASIC FUNCTION → SENSOR DATA → FLOW COEFFICIENT	
All flow coefficients are set at the factory. All the sensor's parameter settings are saved on the S-DAT memory chip. Contact your Endress+Hauser service organization if you have any questions about these functions.	
TEMPERATURE COEFFICIENT KM (6840) 	This function shows the temperature coefficient KM.
TEMPERATURE COEFFICIENT KM 2 (6841) 	This function shows the temperature coefficient KM 2.
TEMPERATURE COEFFICIENT KT (6842) 	This function shows the temperature coefficient KT.
CALIBRATION COEFFICIENT KD 1 (6843) 	This function shows the calibration coefficient KD 1.
CALIBRATION COEFFICIENT KD 2 (6844) 	This function shows the calibration coefficient KD 2.

10.4.3 Function group DENSITY COEFFICIENT

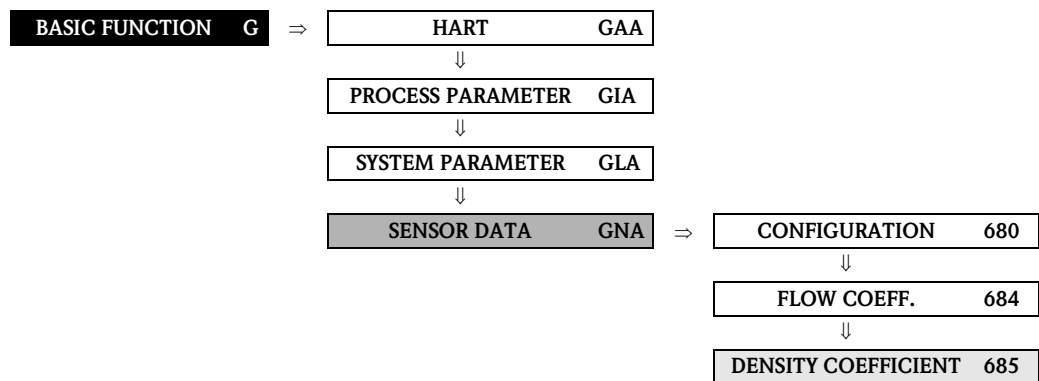


Function description	
BASIC FUNCTION → SENSOR DATA → DENSITY COEFFICIENT	
All density coefficients are set at the factory. All the sensor's parameter settings are saved on the S-DAT memory chip. Contact your Endress+Hauser service organization if you have any questions about these functions.	
DENSITY COEFFICIENT C0 (6850) 	This function shows the actual density coefficient C0.  Caution! A density adjustment can alter the calibration value of this coefficient.
DENSITY COEFFICIENT C1 (6851) 	This function shows the actual density coefficient C1.  Caution! A density adjustment can alter the calibration value of this coefficient.
DENSITY COEFFICIENT C2 (6852) 	This function shows the actual density coefficient C2.  Caution! A density adjustment can alter the calibration value of this coefficient.
DENSITY COEFFICIENT C3 (6853) 	This function shows the actual density coefficient C3.  Caution! A density adjustment can alter the calibration value of this coefficient.
DENSITY COEFFICIENT C4 (6854) 	This function shows the actual density coefficient C4.  Caution! A density adjustment can alter the calibration value of this coefficient.
DENSITY COEFFICIENT C5 (6855) 	This function shows the actual density coefficient C5.  Caution! A density adjustment can alter the calibration value of this coefficient.

10.4.4 Function group ADDITIONAL COEFFICIENT

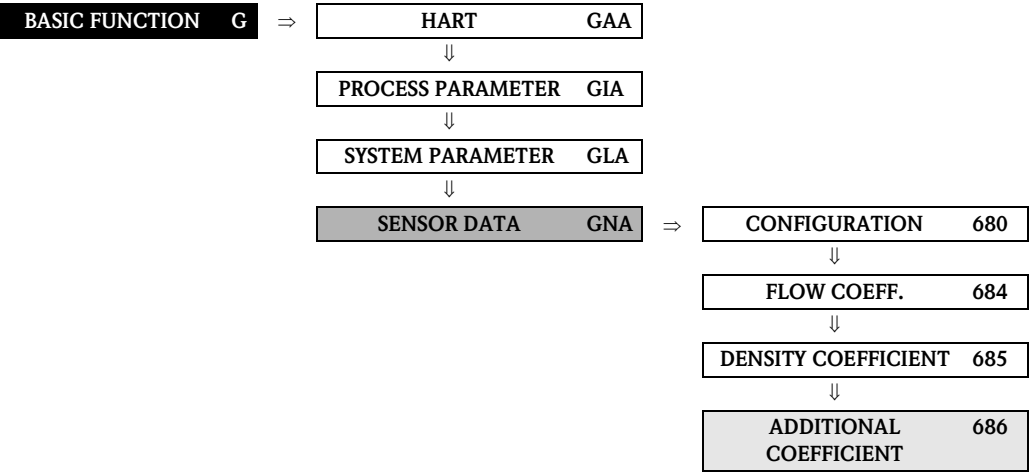

Function description	
BASIC FUNCTION → SENSOR DATA → ADDITIONAL COEFFICIENT	
All sensor data are set at the factory. All the sensor's parameter settings are saved on the S-DAT memory chip.  Caution! These functions are used for displaying device parameters only and consequently cannot be accessed. Contact your Endress+Hauser service organization if you have any questions about these functions.	
MINIMUM FLUID TEMPERATURE (6860)	The lowest fluid temperature measured appears on the display.
MAXIMUM FLUID TEMPERATURE (6861)	The highest fluid temperature measured appears on the display.
MINIMUM TEMP. CARRIER TUBE (6862)	The lowest carrier tube temperature measured appears on the display.
MAXIMUM TEMP. CARRIER TUBE (6863)	The highest carrier tube temperature measured appears on the display.

11 Block SUPERVISION

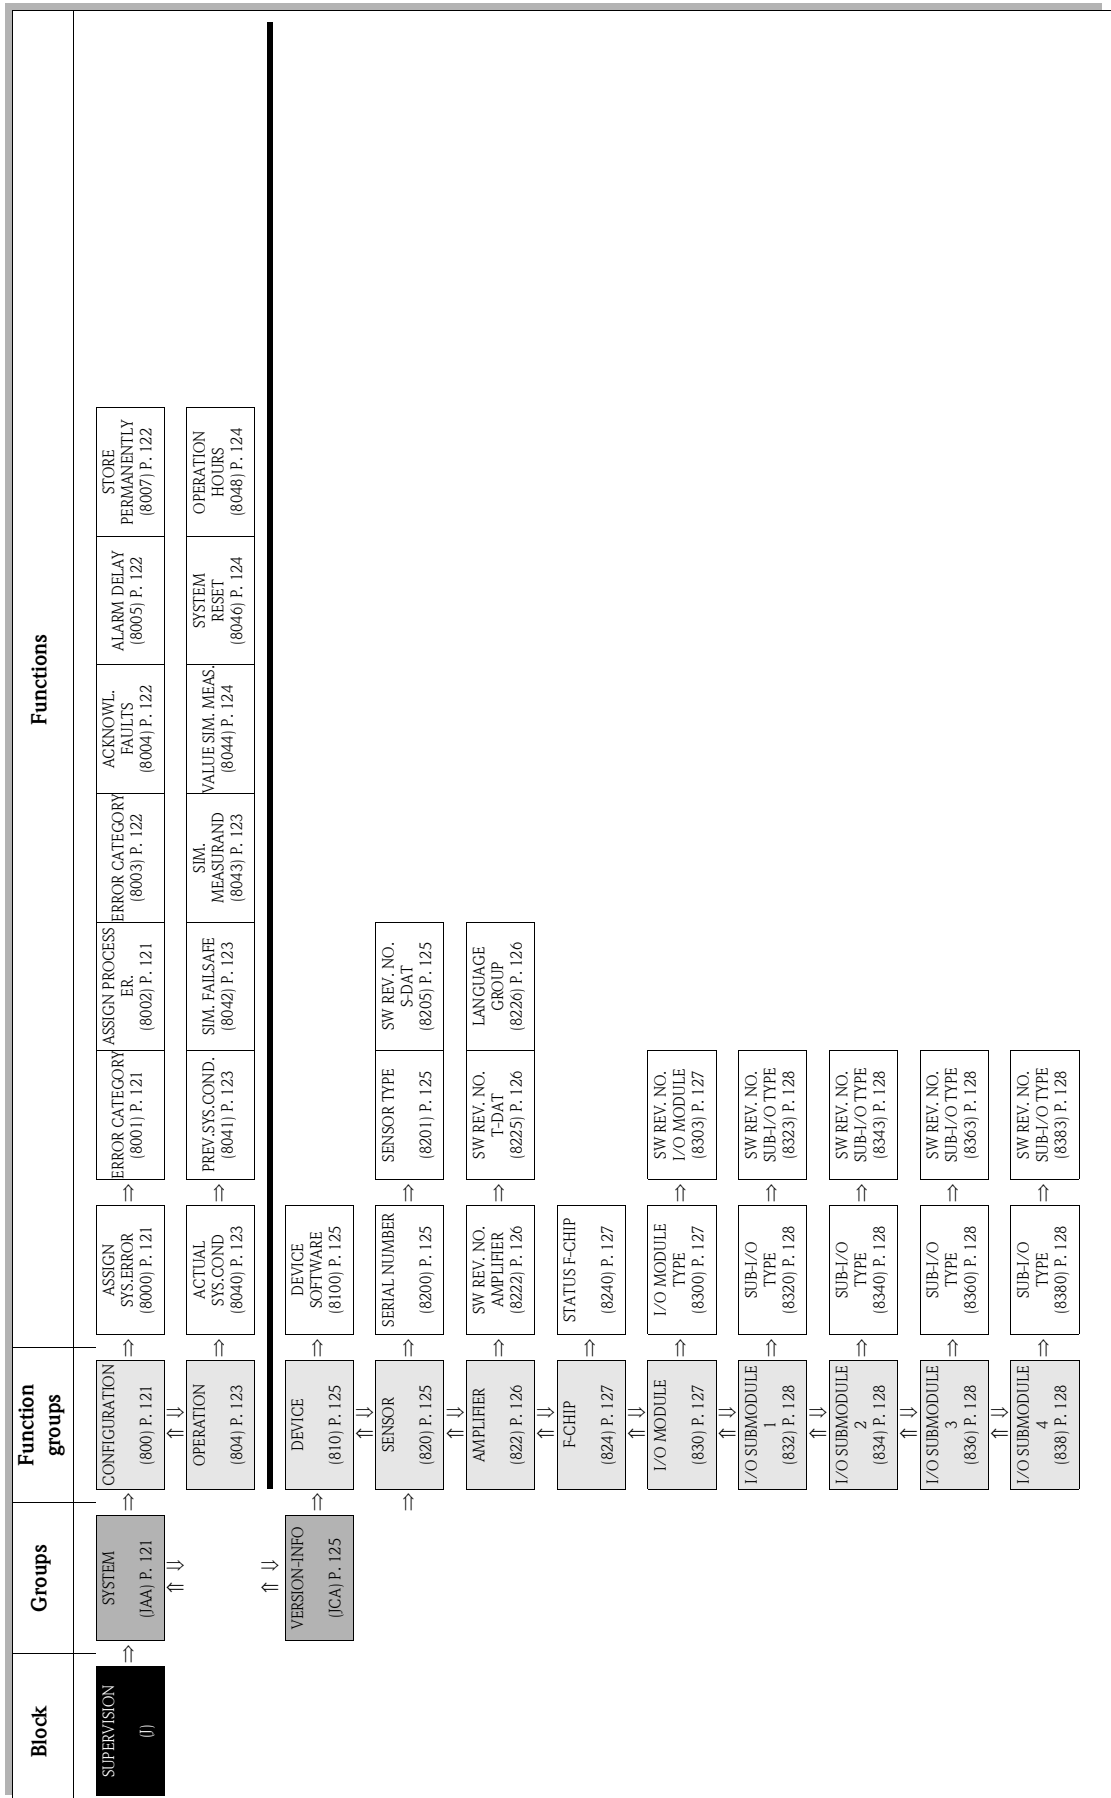

11.1 Group SYSTEM


11.1.1 Functions group CONFIGURATION

SUPERVISION	J	⇒	SYSTEM	JAA	⇒	CONFIGURATION	800
-------------	---	---	--------	-----	---	---------------	-----

Function description MONITORING → SYSTEM → CONFIGURATION	
ASSIGN SYSTEM ERROR (8000) 	Use this function to view all system errors. By selecting a certain system error, its error category can be changed in the subsequent ERROR CATEGORY function (8001). Options: CANCEL List of system errors  Note! ■ You can exit this function as follows: select "CANCEL" and confirm with . ■ For a list of the possible system errors, refer to the Operating Instructions for the Promass 84 (BA109D).
ERROR CATEGORY (8001) 	 Note! This function is only available if a system error has been selected in the function ASSIGN SYSTEM ERROR (8000). Use this function to define whether a system error triggers a notice message or a fault message. If you select FAULT MESSAGES, all outputs respond to an error in accordance with their defined error response patterns. Options: NOTICE MESSAGES (display only) FAULT MESSAGES (outputs and display)  Note! Press the  key twice to call up the function ASSIGN SYSTEM ERROR (8000).
ASSIGN PROCESS ERROR (8002) 	Use this function to view all process errors. By selecting an individual process error, its error category can be changed in the subsequent function ERROR CATEGORY (8003). Options: CANCEL List of process errors  Note! ■ You can exit this function as follows: select "CANCEL" and confirm with . ■ For a list of the possible process errors, refer to the Operating Instructions for the Promass 84 (BA109D).

Function description MONITORING → SYSTEM → CONFIGURATION	
ERROR CATEGORY (8003) 	 Note! This function is only available if a system error has been selected in the function ASSIGN PROCESS ERROR (8002). Use this function to define whether a process error triggers a notice message or a fault message. If you select FAULT MESSAGES, all outputs respond to an error in accordance with their defined error response patterns. Options: NOTICE MESSAGES (display only) FAULT MESSAGES (outputs and display)  Note! Press the  key twice to call up the function ASSIGN PROCESS ERROR (8002).
ACKNOWLEDGE FAULTS (8004) 	Use this function to define the measuring device's response to fault messages. Options: OFF The measuring device resumes normal operation when the fault is rectified. ON The fault message is shown on the local display or via the status input until the message is acknowledged by pressing the  key. Factory setting: ON
ALARM DELAY (8005) 	Enter the time span for which the criteria for an error have to be satisfied without interruption before a fault or notice message is generated. Depending on the setting and type of error, this suppression acts on the display, the current output or the frequency output. User input: 0 to 100 s (in one-second increments) Factory setting: 0 s  Caution! If this function is activated, fault and notice messages are delayed by the time corresponding to the setting before being transmitted to the higher-order controller (process controller, etc.). It is therefore imperative to check in advance in order to make sure whether a delay of this nature could affect the safety requirements of the process. If fault and notice messages may not be suppressed, a value of 0 seconds must be entered here.
STORE PERMANENTLY (8007) 	Displays whether the automatic, permanent storage of parameter changes in the EEPROM is switched on or off. Display: OFF ON Factory setting: ON  Caution! ■ The selection in the function can be changed by the Endress+Hauser service organization. ■ If you select OFF, all parameter changes are not stored permanently in the EEPROM. This means that these parameter changes are no longer available after a power failure. In this case, the measuring instrument starts up with the last parameter configurations saved in the EEPROM.

 11.1.2 Function group OPERATION




Function description SUPERVISION → SYSTEM → OPERATION	
ACTUAL SYSTEM CONDITION (8040)	Use this function to check the present system condition. Display: "SYSTEM OK" or the fault / notice message with the highest priority.
PREVIOUS SYSTEM CONDITION (8041)	Use this function to view the fifteen most recent fault and notice messages since measuring last started. Display: The 15 most recent fault or notice messages.
SIMULATION FAILSAFE MODE (8042) 	Use this function to set all inputs, outputs and totalizers to their defined failsafe modes, in order to check whether they respond correctly. During this time, the message "SIMULATION FAILSAFE MODE" appears on the display. Options: ON OFF Factory setting: OFF
SIMULATION MEASURAND (8043) 	Use this function to set all inputs, outputs and totalizers to their defined flow-response modes, in order to check whether they respond correctly. During this time, the message "SIMULATION MEASURAND" appears on the display. Options: OFF MASS FLOW VOLUME FLOW CORRECTED VOLUME FLOW DENSITY REFERENCE DENSITY TEMPERATURE Factory setting: OFF  Caution! ■ The measuring device cannot be used for measuring while this simulation is in progress. ■ The setting is not saved in the event of a power failure.

Function description SUPERVISION → SYSTEM → OPERATION	
VALUE SIMULATION MEASURAND (8044) 	 Note! The function is not visible unless the function SIMULATION MEASURAND (8043) is active. Use this function to define a freely selectable value (e.g. 12 m ³ /s). This is used to test the associated functions in the device itself and downstream signal loops. User input: 5-digit floating-point number [unit] Factory setting: 0 [unit]  Caution! ■ The setting is not saved in the event of a power failure. ■ The appropriate unit is taken from the function group SYSTEM UNITS (ACA) (see Page 15).
SYSTEM RESET (8046) 	Use this function to perform a reset of the measuring system. Options: NO RESTART SYSTEM (restart without interrupting power supply) Factory setting: NO
OPERATION HOURS (8048)	The hours of operation of the device appear on the display. Display: Depends on the number of hours of operation elapsed: Hours of operation < 10 hours → display format = 0:00:00 (hr:min:sec) Hours of operation 10 to 10,000 hours → display format = 0000:00 (hr:min) Hours of operation > 10,000 hours → display format = 000000 (hr)


11.2 Group VERSION-INFO

 11.2.1 Function group DEVICE




Function description MONITORING → VERSION-INFO → DEVICE	
DEVICE SOFTWARE (8100)	Displays the current device software version.

11.2.2 Function group SENSOR

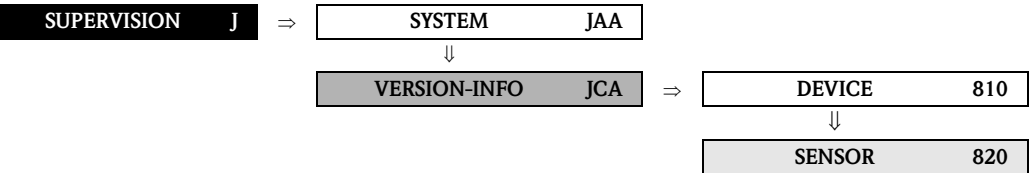


Function description MONITORING → VERSION-INFO → SENSOR	
SERIAL NUMBER (8200)	Use this function to view the serial number of the sensor.
SENSOR TYPE (8201)	Use this function to view the sensor type (e.g. Promass F).
SOFTWARE REVISION NUMBER S-DAT (8205)	Use this function to view the software revision number of the software used to create the content of the S-DAT.

11.2.3 Function group AMPLIFIER

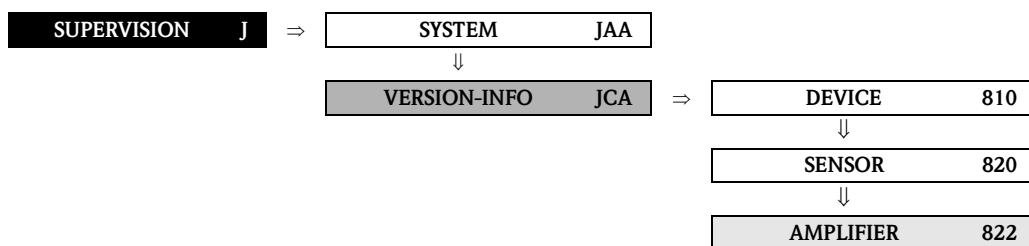


Function description MONITORING → VERSION-INFO → AMPLIFIER	
SOFTWARE REVISION NUMBER AMPLIFIER (8222)	Use this function to view the software revision number of the amplifier.
SOFTWARE REVISION NUMBER T-DAT (8225)	Use this function to view the software revision number of the software used to create the content of the T-DAT.
LANGUAGE GROUP (8226)	Use this function to view the language group. The following language groups can be ordered: WEST EU / USA, EAST EU / SCAND., ASIA , CHINA. Display: available language group Note! ■ The language options of the available language group are displayed in the LANGUAGE (2000) function. ■ You can change the language group via the configuration software FieldCare. Please do not hesitate to contact your Endress+Hauser sales office if you have any questions.

11.2.4 Function group F-CHIP

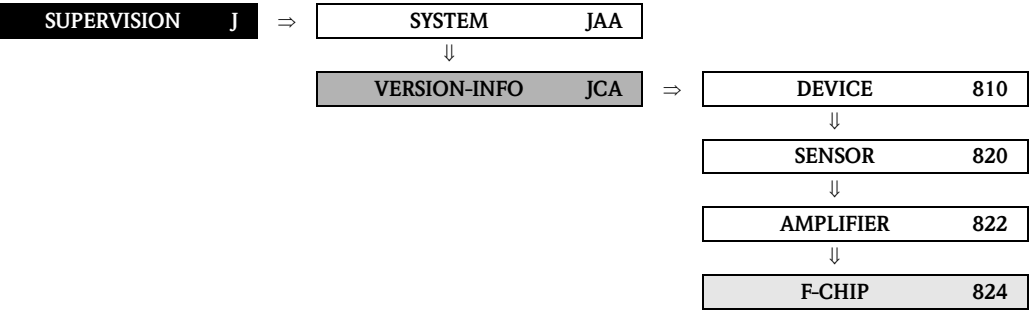


Function description	
SUPERVISION → VERSION-INFO → F-CHIP	
STATUS F-CHIP (8240)	Use this function to check whether an F-CHIP is installed and which software options are available.

11.2.5 Function group I/O MODULE

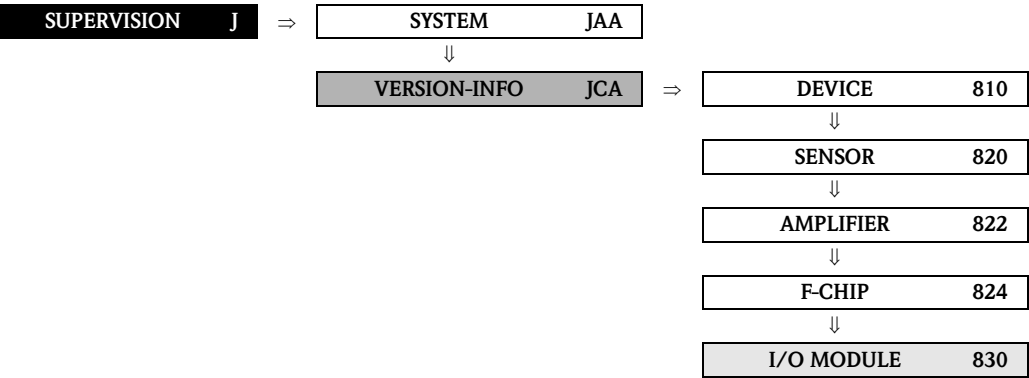

Function description	
SUPERVISION → VERSION-INFO → I/O MODULE	
I/O MODULE TYPE (8300)	Use this function to view the configuration of the I/O module complete with terminal numbers.
SOFTWARE REVISION NUMBER I/O MODULE (8303)	Use this function to view the software revision number of the I/O module.

11.2.6 Function groups INPUT/OUTPUT 1 to 4

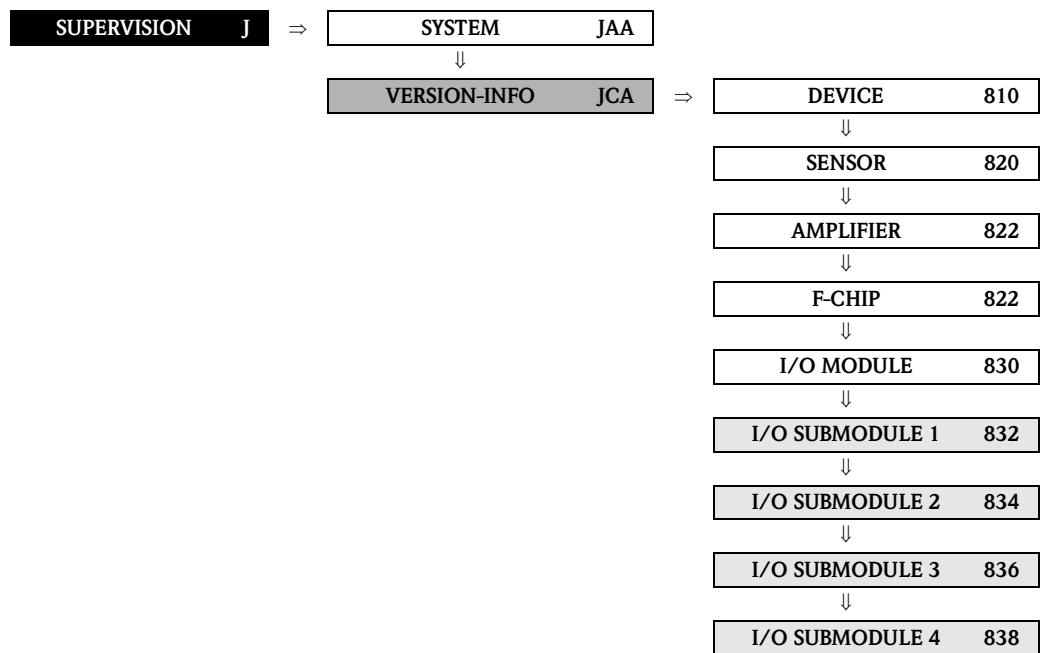

Function description	
SUPERVISION → VERSION-INFO → I/O SUBMODULE 1 to 4	
SUB-I/O TYPE: 1 = (8320), 2 = (8340), 3 = (8360), 4 = (8380)	Use this function to view the configuration complete with terminal numbers.
SOFTWARE REVISION NUMBER SUB-I/O TYPE 1 = (8323) 2 = (8343) 3 = (8363) 4 = (8383)	Use this function to view the software revision number of the corresponding submodule.

12 Factory settings

12.1 SI units (not for USA and Canada)

12.1.1 Low flow cut off, full scale value, pulse value – Liquid

Nom. diameter [mm]	Low flow cut off (approx. v = 0.04 m/s)		Full scale value (approx. v = 2 m/s)		Pulse value (approx. 2 pulse/s at 2 m/s)	
1	0.08	kg/h	4	kg/h	0.001	kg/p
2	0.40	kg/h	20	kg/h	0.010	kg/p
4	1.80	kg/h	90	kg/h	0.010	kg/p
8	8.00	kg/h	400	kg/h	0.100	kg/p
15	26.00	kg/h	1300	kg/h	0.100	kg/p
15 FB	72.00	kg/h	3600	kg/h	1.000	kg/p
25	72.00	kg/h	3600	kg/h	1.000	kg/p
25 FB	180.00	kg/h	9000	kg/h	1.000	kg/p
40	180.00	kg/h	9000	kg/h	1.000	kg/p
40 FB	300.00	kg/h	15000	kg/h	10.000	kg/p
50	300.00	kg/h	15000	kg/h	10.000	kg/p
50 FB	720.00	kg/h	36000	kg/h	10.000	kg/p
80	720.00	kg/h	36000	kg/h	10.000	kg/p
100	1200.00	kg/h	60000	kg/h	10.000	kg/p
150	2600.00	kg/h	130000	kg/h	100.000	kg/p
250	7200.00	kg/h	360000	kg/h	100.000	kg/p
DN 15, 25, 40, 50 "FB" = Full bore versions Promass I						

12.1.2 Low flow cut off, full scale value, pulse value – Gas

Nom. diameter [mm]	Low flow cut off (approx. v = 0.01 m/s)		Full scale value (approx. v = 2 m/s)		Pulse value (approx. 2 pulse/s at 2 m/s)	
1	0.02	kg/h	4	kg/h	0.001	kg/p
2	0.10	kg/h	20	kg/h	0.010	kg/p
4	0.45	kg/h	90	kg/h	0.010	kg/p
8	2.00	kg/h	400	kg/h	0.100	kg/p
15	6.50	kg/h	1300	kg/h	0.100	kg/p
15 FB	18.00	kg/h	3600	kg/h	1.000	kg/p
25	18.00	kg/h	3600	kg/h	1.000	kg/p
25 FB	45.00	kg/h	9000	kg/h	1.000	kg/p
40	45.00	kg/h	9000	kg/h	1.000	kg/p
40 FB	75.00	kg/h	15000	kg/h	10.000	kg/p
50	75.00	kg/h	15000	kg/h	10.000	kg/p
50 FB	180.00	kg/h	36000	kg/h	10.000	kg/p
80	180.00	kg/h	36000	kg/h	10.000	kg/p
100	300.00	kg/h	60000	kg/h	10.000	kg/p
150	650.00	kg/h	130000	kg/h	100.000	kg/p
250	1800.00	kg/h	360000	kg/h	100.000	kg/p
DN 15, 25, 40, 50 "FB" = Full bore versions Promass I						

12.1.3 Language

Country	Language	Country	Language
Australia	English	Malaysia	English
Belgium	English	Norway	Norsk
China	Chinese	Poland	Polish
Denmark	English	Portugal	Portuguese
Germany	Deutsch	Austria	Deutsch
England	English	Russia	Russian
Finland	Suomi	Sweden	Svenska
France	Francais	Switzerland	Deutsch
Netherlands	Nederlands	Singapore	English
Hong Kong	English	Spain	Espanol
India	English	South Africa	English
Indonesia	Bahasa Indonesia	Thailand	English
Instruments International	English	Czech Republic	Czech
Italy	Italiano	Hungary	English
Japan	Japanese		

12.1.4 Density, length, temperature

	Unit
Density	kg/l
Length	mm
Temperature	°C

12.2 US units (only for USA and Canada)

12.2.1 Low flow cut off, full scale value, pulse value – Liquid

Nominal diameter [mm]	Low flow cut off (approx. v = 0.04 m/s)		Full scale value (approx. v = 2 m/s)		Pulse value (approx. 2 pulse/s at 2 m/s)	
1	0.003	lb/min	0.15	lb/min	0.002	lb/p
2	0.015	lb/min	0.75	lb/min	0.020	lb/p
4	0.066	lb/min	3.30	lb/min	0.020	lb/p
8	0.300	lb/min	15.00	lb/min	0.200	lb/p
15	1.000	lb/min	50.00	lb/min	0.200	lb/p
15 FB	2.600	lb/min	130.00	lb/min	2.000	lb/p
25	2.600	lb/min	130.00	lb/min	2.000	lb/p
25 FB	6.600	lb/min	330.00	lb/min	2.000	lb/p
40	6.600	lb/min	330.00	lb/min	2.000	lb/p
40 FB	11.000	lb/min	550.00	lb/min	20.000	lb/p
50	11.000	lb/min	550.00	lb/min	20.000	lb/p
50 FB	26.000	lb/min	1300.00	lb/min	20.000	lb/p
80	26.000	lb/min	1300.00	lb/min	20.000	lb/p
100	44.000	lb/min	2200.00	lb/min	20.000	lb/p
150	95.000	lb/min	4800.00	lb/min	200.000	lb/p
250	260.00	lb/min	13000.00	lb/min	200.000	lb/p
DN 15, 25, 40, 50 "FB" = Full bore versions Promass I						

12.2.2 Low flow cut off, full scale value, pulse value – Gas

Nominal diameter [mm]	Low flow cut off (approx. v = 0.01 m/s)		Full scale value (approx. v = 2 m/s)		Pulse value (approx. 2 pulse/s at 2 m/s)	
1	0.001	lb/min	0.15	lb/min	0.002	lb/p
2	0.004	lb/min	0.75	lb/min	0.020	lb/p
4	0.046	lb/min	3.30	lb/min	0.020	lb/p
8	0.075	lb/min	15.00	lb/min	0.200	lb/p
15	0.250	lb/min	50.00	lb/min	0.200	lb/p
15 FB	0.650	lb/min	130.00	lb/min	2.000	lb/p
25	0.650	lb/min	130.00	lb/min	2.000	lb/p
25 FB	1.650	lb/min	330.00	lb/min	2.000	lb/p
40	1.650	lb/min	330.00	lb/min	2.000	lb/p
40 FB	2.750	lb/min	550.00	lb/min	20.000	lb/p
50	2.750	lb/min	550.00	lb/min	20.000	lb/p
50 FB	6.500	lb/min	1300.00	lb/min	20.000	lb/p
80	6.500	lb/min	1300.00	lb/min	20.000	lb/p
100	11.000	lb/min	2200.00	lb/min	20.000	lb/p
150	23.750	lb/min	4800.00	lb/min	200.000	lb/p
250	65.000	lb/min	13000.00	lb/min	200.000	lb/p
DN 15, 25, 40, 50 "FB" = Full bore versions Promass I						

12.2.3 Language, density, length, temperature

	Unit
Language	English
Density	g/cc
Length	INCH
Temperature	°F

Index of function matrix

Blocks

A = MEASURED VARIABLES	13
B = QUICK SETUP	22
C = USER INTERFACE	30
D = TOTALIZER	46
E = OUTPUT	51
F = INPUT	99
G = BASIC FUNCTION	103
J = SUPERVISION	120
Z = CUSTODY TRANSFER	11

Groups

AAA = MEASURING VALUES	14
ACA = SYSTEM UNITS	15
AEA = SPECIAL UNITS	20
CAA = CONTROL	31
CCA = MAIN LINE	35
CEA = ADDITIONAL LINE	38
CGA = INFORMATION LINE	42
DAA = TOTALIZER 1	47
DAB = TOTALIZER 2	47
DAC = TOTALIZER 3	47
DJA = HANDLING TOTALIZER	50
EAA = CURRENT OUTPUT 1	52
ECA = PULSE/FREQUENCY OUTPUT 1	63
ECB = PULSE/FREQUENCY OUTPUT 2	63
EGA = RELAY OUTPUT	89
FAA = STATUS INPUT	100
GAA = HART	104
GIA = PROCESS PARAMETER	106
GLA = SYSTEM PARAMETER	115
GNA = SENSOR DATA	116
JAA = SYSTEM	121
JCA = VERSION INFO	125

Function groups

000 = MAIN VALUES	14
040 = CONFIGURATION	15
042 = ADDITIONAL CONFIGURATION	18
060 = ARBITRARY UNIT	20
200 = BASIC CONFIGURATION	31
202 = UNLOCKING/LOCKING	33
204 = OPERATION	34
220 = CONFIGURATION	35
222 = MULTIPLEX	37
240 = CONFIGURATION	38
242 = MULTIPLEX	40
260 = CONFIGURATION	42
262 = MULTIPLEX	44
300 = CONFIGURATION	47
304 = OPERATION	49
400 = CONFIGURATION	52
404 = OPERATION	61
408 = INFORMATION	62
420 = CONFIGURATION	63
430 = OPERATION	83

438 = INFORMATION	88
470 = CONFIGURATION	89
474 = OPERATION	93
478 = INFORMATION	95
500 = CONFIGURATION	100
504 = OPERATION	101
508 = INFORMATION	102
600 = CONFIGURATION	104
604 = INFORMATION	105
640 = CONFIGURATION	106
642 = EPD PARAMETER	108
646 = REFERENCE PARAMETER	110
648 = ADJUSTMENT	112
650 = PRESSURE CORRECTION	114
660 = CONFIGURATION	115
680 = CONFIGURATION	116
684 = FLOW COEFFICIENT	117
685 = DENSITY COEFFICIENT	118
686 = ADDITIONAL COEFFICIENT	119
800 = CONFIGURATION	121
804 = OPERATION	123
810 = DEVICE	125
820 = SENSOR	125
822 = AMPLIFIER	126
824 = F-CHIP	127
830 = I/O MODULE	127
832 = INPUT/OUTPUT 1	128
834 = INPUT/OUTPUT 2	128
836 = INPUT/OUTPUT 3	128
838 = INPUT/OUTPUT 4	128

Functions Z...

Z000 = CUSTODY TRANSFER	11
Z001 = PULS. OUT. 1 C.T.	11
Z002 = PULS. OUT. 2 C.T.	11
Z003 = CURR. OUT. 1 C.T.	12
Z006 = TOTALIZER 1 C.T.	12
Z007 = TOTALIZER 2 C.T.	12
Z008 = TOTALIZER 3 C.T.	12

0...

0000 = MASS FLOW	14
0001 = VOLUME FLOW	14
0004 = CORRECTED VOLUME FLOW	14
0005 = DENSITY	14
0006 = REFERENCE DENSITY	14
0008 = TEMPERATURE	14
0400 = UNIT MASS FLOW	15
0401 = UNIT MASS	15
0402 = UNIT VOLUME FLOW	16
0403 = UNIT VOLUME	16
0404 = UNIT CORRECTED VOLUME FLOW	17
0405 = UNIT CORRECTED VOLUME	17
0420 = UNIT DENSITY	18
0421 = UNIT REFERENCE DENSITY	18
0422 = UNIT TEMPERATURE	19

0424 = UNIT LENGTH.....	19
0426 = UNIT PRESSURE	19
0600 = TEXT ARBITRARY MASS.....	20
0601 = FACTOR ARBITRARY MASS	20
0602 = TEXT ARBITRARY VOLUME	20
0603 = FACTOR ARBITRARY VOLUME.....	21
0604 = TEXT ARBITRARY DENSITY	21
0605 = FACTOR ARBITRARY DENSITY	21

1...

1002 = QUICK SETUP COMMISSIONING.....	22
1003 = QUICK SETUP PULSATING FLOW	22
1004 = QUICK SETUP GAS MEASUREMENT.....	22
1009 = T DAT SAVE/LOAD	23

2...

2000 = LANGUAGE.....	31
2002 = DISPLAY DAMPING.....	31
2003 = CONTRAST LCD	31
2004 = BACKLIGHT	32
2020 = ACCESS CODE.....	33
2021 = DEFINE PRIVATE CODE.....	33
2022 = STATUS ACCESS	33
2023 = ACCESS CODE.....	33
2040 = TEST DISPLAY.....	34
2200 = ASSIGN	35
2201 = 100% VALUE.....	35
2202 = FORMAT	36
2220 = ASSIGN	37
2221 = 100% VALUE.....	37
2222 = FORMAT	37
2400 = ASSIGN	38
2401 = 100% VALUE.....	38
2402 = FORMAT	39
2403 = DISPLAY MODE.....	39
2420 = ASSIGN	40
2421 = 100% VALUE.....	41
2422 = FORMAT	41
2423 = DISPLAY MODE.....	41
2600 = ASSIGN	42
2601 = 100% VALUE.....	43
2602 = FORMAT	43
2603 = DISPLAY MODE.....	43
2620 = ASSIGN	44
2621 = 100% VALUE.....	45
2622 = FORMAT	45
2623 = DISPLAY MODE.....	45

3...

3000 = ASSIGN	47
3001 = UNIT TOTALIZER.....	47
3002 = TOTALIZER MODE	48
3003 = RESET TOTALIZER.....	48
3040 = SUM	49
3041 = OVERFLOW.....	49
3800 = RESET ALL TOTALIZERS.....	50
3801 = FAILSAFE MODE	50

4...

4000 = ASSIGN CURRENT OUTPUT.....	52
-----------------------------------	----

4001 = CURRENT SPAN	53
4002 = VALUE 0_4 mA.....	54
4003 = VALUE 20 mA.....	56
4004 = MEASURING MODE	56
4005 = TIME CONSTANT.....	59
4006 = FAILSAFE MODE.....	60
4040 = ACTUAL CURRENT.....	61
4041 = SIMULATION CURRENT	61
4042 = VALUE SIMULATION CURRENT	61
4080 = TERMINAL NUMBER	62
4200 = OPERATION MODE	63
4201 = ASSIGN FREQUENCY	64
4202 = START VALUE FREQUENCY	64
4203 = END VALUE FREQUENCY	65
4204 = VALUE f LOW	65
4205 = VALUE f HIGH	66
4206 = MEASURING MODE	67
4207 = OUTPUT SIGNAL	69
4208 = TIME CONSTANT.....	71
4209 = FAILSAFE MODE.....	72
4211 = FAILSAFE VALUE	72
4221 = ASSIGN PULSE	73
4222 = PULSE VALUE.....	73
4223 = PULSE WIDTH	74
4225 = MEASURING MODE	75
4226 = OUTPUT SIGNAL	76
4227 = FAILSAFE MODE.....	78
4241 = ASSIGN STATUS	79
4242 = ON-VALUE	79
4243 = SWITCH-ON DELAY	80
4244 = OFF-VALUE	80
4245 = SWITCH-OFF DELAY.....	81
4246 = MEASURING MODE	81
4247 = TIME CONSTANT.....	82
4301 = ACTUAL FREQUENCY.....	83
4302 = SIMULATION FREQUENCY.....	83
4303 = VALUE SIMULATION FREQUENCY	84
4322 = SIMULATION PULSE.....	85
4323 = VALUE SIMULATION PULSE	86
4341 = ACTUAL STATUS	87
4342 = SIMULATION SWITCH POINT.....	87
4343 = VALUE SIMULATION SWITCH POINT	87
4380 = TERMINAL NUMBER	88
4700 = ASSIGN RELAY	89
4701 = ON-VALUE	90
4702 = SWITCH-ON DELAY	90
4703 = OFF-VALUE	90
4704 = SWITCH-OFF DELAY.....	91
4705 = MEASURING MODE	91
4706 = TIME CONSTANT.....	92
4740 = ACTUAL STATUS RELAY	93
4741 = SIMULATION SWITCH POINT.....	93
4742 = VALUE SIMULATION SWITCH POINT	94
4780 = TERMINAL NUMBER	95

5...

5000 = ASSIGN STATUS INPUT.....	100
5001 = ACTIVE LEVEL	100
5002 = MINIMUM PULSE WIDTH.....	100

5040 = ACTUAL STATUS INPUT	101
5041 = SIMULATION STATUS INPUT	101
5042 = VALUE SIMULATION STATUS INPUT	101
5080 = TERMINAL NUMBER	102

6...

6000 = TAG NAME	104
6001 = TAG DESCRIPTION	104
6002 = BUS ADDRESS	104
6003 = HART PROTOCOL	104
6004 = WRITE PROTECTION	104
6040 = MANUFACTURER ID	105
6041 = DEVICE ID	105
6042 = DEVICE REVISION	105
6400 = ASSIGN LOW FLOW CUT OFF	106
6402 = ON-VALUE LOW FLOW CUT OFF	106
6403 = OFF-VALUE LOW FLOW CUT OFF	106
6404 = PRESSURE SHOCK SUPPRESSION	107
6420 = EMPTY PIPE DETECTION	108
6423 = EPD VALUE LOW	108
6424 = EPD VALUE HIGH	108
6425 = EPD RESPONSE TIME	108
6426 = EPD EXC.CURR.	109
6460 = CORRECTED VOLUME CALCULATION	110
6461 = FIXED REFERENCE DENSITY	110
6462 = EXPANSION COEFFICIENT	110
6463 = EXPANSION COEFF. SQR.	110
6464 = REFERENCE TEMPERATURE	111
6480 = ZEROPOINT ADJUST	112
6482 = DENSITY ADJUST MODE	112
6483 = DENSITY SETPOINT 1	112
6484 = MEASURE FLUID 1	112
6485 = DENSITY SETPOINT 2	113
6486 = MEASURE FLUID 2	113
6487 = DENSITY ADJUST	113
6488 = RESTORE ORIGINAL	113
6500 = PRESSURE MODE	114
6501 = PRESSURE	114
6600 = INSTALLATION DIRECTION SENSOR	115
6602 = DENSITY DAMPING	115
6603 = SYSTEM DAMPING	115
6605 = POSITIVE ZERO RETURN	115
6800 = K-FACTOR	116
6803 = ZERO POINT	116
6804 = NOMINAL DIAMETER	116
6840 = TEMPERATURE COEFFICIENT KM	117
6841 = TEMPERATURE COEFFICIENT KM 2	117
6842 = TEMPERATURE COEFFICIENT KT	117
6843 = CALIBRATION COEFFICIENT KD 1	117
6844 = CALIBRATION COEFFICIENT KD 2	117
6850 = DENSITY COEFFICIENT C0	118
6851 = DENSITY COEFFICIENT C1	118
6852 = DENSITY COEFFICIENT C2	118
6853 = DENSITY COEFFICIENT C3	118
6854 = DENSITY COEFFICIENT C4	118
6855 = DENSITY COEFFICIENT C5	118
6860 = MINIMAL TEMP. MEASURED	119
6861 = MAXIMAL TEMP. MEASURED	119
6862 = MINIMAL TEMP. CARRIER TUBE	119

6863 = MAXIMAL TEMP. CARRIER TUBE	119
---	-----

8...

8000 = ASSIGN SYSTEM ERROR	121
8001 = ERROR CATEGORY	121
8002 = ASSIGN PROCESS ERROR	121
8003 = ERROR CATEGORY	122
8004 = ACKNOWLEDGE FAULTS	122
8005 = ALARM DELAY	122
8007 = STORE PERMANENTLY	122
8040 = ACTUAL SYSTEM CONDITION	123
8041 = PREVIOUS SYSTEM CONDITION	123
8042 = SIMULATION FAILSAFE MODE	123
8043 = SIMULATION MEASURAND	123
8044 = VALUE SIMULATION MEASURAND	124
8046 = SYSTEM RESET	124
8048 = OPERATION HOURS	124
8100 = DEVICE SOFTWARE	125
8200 = SERIAL NUMBER	125
8201 = SENSOR TYPE	125
8205 = SW REV. NO. S-DAT	125
8222 = SW REV. NO. AMPLIFIER	126
8225 = SOFTWARE REV. NO. T-DAT	126
8226 = LANGUAGE GROUP	126
8240 = STATUS F-CHIP	127
8300 = I/O MODULE TYPE	127
8303 = SW REV. NO. I/O MODULE	127
8320 = SUB-I/O TYPE	128
8323 = SW Rev. No. SUB-I/O TYPE	128
8340 = SUB-I/O TYPE	128
8343 = SW Rev. No. SUB-I/O TYPE	128
8360 = SUB-I/O TYPE	128
8363 = SW Rev. No. SUB-I/O TYPE	128
8380 = SUB-I/O TYPE	128
8383 = SW Rev. No. SUB-I/O TYPE	128

Index

A

Access code	33
Acknowledge faults	122
Active level	100
Actual	
Current (current output)	61
Frequency	83
Actual status	
Relay output	93
Status input	101
Switch point (pulse/frequency output)	87
Actual System condition	123
Additional configuration	18
Additional line	
Configuration	38
Multiplex	40
Adjustment	
Density	113
Zero point	112
Alarm delay	122
Amplifier (Version Info)	126
Arbitrary unit	20
Assign	
Additional line	38
Additional line (Multiplex)	40
Current output	52
Frequency (Pulse/Freq. output)	64
Information line	42
Information line (Multiplex)	44
Low flow cut off	106
Main line	35
Main line (Multiplex)	37
Process error	121
Pulse	73
Relay (relay output)	89
Status input	100
Status (Pulse/Freq. output)	79
System error	121
Totalizer	47

B

Backlight (user interface)	32
Basic Configuration (user interface)	31
Basic functions	103
Block	
Basic functions	103
Custody transfer	11
Display	30
Inputs	99
Measured variables	13
Outputs	51
Quick Setup	22
Supervision	120
Totalizer	46
Bus address	104

C

Calibrate	
Coefficient	
KD 1	117
KD 2	117
Coefficient	
Calibration	
KD 1	117
KD 2	117
Density	
C0 to C5	118
Expansion	110
Expansion Square	110
Temperature	
KM	117
KM 2	117
KT	117
Commissioning	22
Configuration	
Additional line	38
Current output	52
HART	104
Information line	42
Main line	35
Process parameter	106
Pulse/frequency output	63
Relay output	89
Sensor data	116
Status input	100
System	121
System parameter	115
System units	15
Totalizer	47
Contrast LCD	31
Corrected Volume calculation	110
Corrected volume flow	14
Current output	
Configuration	52
Information	62
Operation	61
Current span	
Current output	53
Curr. out. 1 C.T.	12
Custody transfer	11

D

Damping	
Density	115
System	115
Define private code	33
Density	14
Adjustment	113
Coefficient C0 to C5	118
Damping	115
Density Adjust mode	112
Device ID	105

Device revision	105
Device (version-info)	125
Display	30
Display damping	31
Display lighting	32
Display mode	
Additional line	39
Additional line (Multiplex)	41
Information line	43
Information line (Multiplex)	45
E	
Empty pipe detection (EPD)	108
End value frequency	65
EPD	
Empty pipe detection	108
Parameter	108
Response time	108
Value high	108
Value low	108
Error category	
Process error	122
System error	121
Excitation current (EPD)	109
Expansion coefficient	110
Expansion coefficient Square	110
F	
Factor	
Arbitrary density	21
Arbitrary mass	20
Arbitrary volume	21
Factory settings	
Full scale value	129
Low flow cut off	129
Pulse value	129
Failsafe mode	
All totalizers	50
Current output	60
Frequency output	72
Pulse output	78
Failsafe value	72
F-CHIP (Version Info)	127
Fixed Reference density	110
Flow direction, see installation direction	115
Format	
Additional line	39
Additional line (Multiplex)	41
Information line	43
Information line (Multiplex)	45
Main line	36
Main line (Multiplex)	37
Function group	
Additional coefficient	119
Additional configuration	18
Adjustment	112
Amplifier	126
Arbitrary unit	20
Basic Configuration (user interface)	31

Configuration	
Additional line	38
Current output	52
HART	104
Information line	42
Main line	35
Process parameter	106
Pulse/Freq. output	63
Relay output	89
Sensor data	116
Status input	100
System	121
System parameter	115
System units	15
Totalizer	47
Density coefficient	118
Device	125
EPD parameter	108
F-CHIP	127
Flow coefficient	117
Information	
Current output	62
HART	105
Pulse/Frequency output	88
Relay output	95
Status input	102
Input/Output	128
I/O Module	127
Main values	14
Multiplex	
Additional line	40
Information line	44
Main line	37
Operation	
Current output	61
Pulse/frequency output	83
Relay output	93
Status input	101
System	123
Totalizer	49
Operation (user interface)	34
Pressure correction	114
Reference parameter	110
Sensor	125
Unlocking/Locking (user interface)	33
Function matrix	
Codes identifying	9
General layout	8
Overview	10
G	
Gas measurement	22
Group	
Additional line	38
Current output	52
Handling Totalizer	50
HART	104

Information line	42	Measure Fluid 2	113
Main line	35	Measured variables	11,13
Measuring values	14	Measuring mode	
Operation (user interface)	31	Current output	56
Process parameter	106	Frequency (Pulse/Freq. output)	67
Pulse/frequency output	63	Pulse output	75
Relay output	89	Relay output	91
Sensor data	116	Status (Pulse/Freq. output)	81
Special units	20	Measuring values	14
Status input	100	Minimal	
System	121	Temperature carrier tube	119
System parameter	115	Temperature measured	119
System units	15	Minimum Pulse width	100
Version Info	125	Multiplex	
H		Additional line	40
Handling Totalizer	50	Information line	44
HART		Main line	37
Configuration	104	N	
Information	105	Nominal diameter	116
HART Protocol	104	O	
I		Off value	
Information		Low flow cut off	106
Current output	62	Relay output	90
Pulse/Frequency output	88	Status (Pulse/Freq. output)	80
Relay output	95	On value	
Status input	102	Low flow cut off	106
Information line		Relay output	90
Configuration	42	Status (Pulse/Freq. output)	79
Multiplex	44	Operation	
Inputs	99	Basic configuration	31
Input/output 1 to 4	128	Current output	61
Installation direction sensor	115	Operation	34
I/O Module	127	Pulse/frequency output	63,83
K		Relay output	93
K-Factor	116	Status input	101
L		System	123
Language		Totalizer	49
Factory setting (country)	130	Unlocking/Locking	33
Language group (display)	126	User interface	34
Options	31	Operation hours	124
LCD contrast	31	Output signal	
Low flow cut off		Frequency output	69
Assign	106	Pulse output	76,77,78
Off value	106	Outputs	51
On value	106	Overflow	
M		Totalizer	49
Main line		P	
Configuration	35	Positive zero return	115
Multiplex	37	Pressure	114
Manufacturer ID	105	Pressure correction	114
Mass flow	14	Pressure Mode	114
Maximal		Pressure Shock suppression	107
Temperature carrier tube	119	Previous system condition	123
Temperature measured	119	Process parameter	
Measure Fluid 1	112	Adjustment	112
		Configuration	106
		EPD parameter	108

Pressure correction	114
Reference parameter	110
Pulsating flow	22
Pulse out. 1 C.T.	11
Pulse out. 2 C.T.	11
Pulse value	73
Pulse Width	74
Pulse/frequency output	
Configuration	63
Information	88
Operation	83
Q	
Quick Setup	22
Commissioning	22
Gas measurement	22
Pulsating flow	22
R	
Reference density	14
Reference density (fixed)	110
Reference Temperature	111
Relay output	
Configuration	89
Information	95
Operation	93
Reset	
All totalizers	50
System	124
Totalizer	48
Restore original	113
S	
Sensor data	
Additional coefficient	119
Configuration	116
Density coefficient	118
Flow coefficient	117
Sensor type	125
Sensor (Version info)	125
Serial number sensor	125
Setpoint	
Density 1	112
Density 2	113
Simulation	
Current (current output)	61
Failsafe mode	123
Frequency	83
Measured variable	123
Status input	101
Switch point (Relay output)	93
Simulation Pulse	85
Software revision number	
Amplifier	126
I/O Module	127
S-DAT	125
T-DAT	126
Special units	
Arbitrary unit	20
Start value frequency	64

Status access	33
Status F-CHIP	127
Status input	
Configuration	100
Information	102
Operation	101
Store permanently	122
Sum	
Totalizer	49
Supervision	120
Switch-off delay	
Relay output	91
Status (Pulse/Freq. output)	81
Switch-on delay	
Relay output	90
Status (Pulse/Freq. output)	80
System	
Configuration	121
Damping	115
Operation	123
Operation hours	124
Reset	124
System condition	
Actual	123
Previous	123
System parameter	
Configuration	115
System units	
Additional configuration	18
Configuration	15
T	
Tag Description	104
Tag Name	104
T-DAT Save/Load	23
Temperature	14
Coefficient	
KM	117
KM 2	117
KT	117
Terminal number	
Current output	62
Pulse/Frequency output	88
Relay output	95
Status input	102
Test display	34
Text	
Arbitrary density	21
Arbitrary mass	20
Arbitrary volume	20
Time constant	
Current output	59
Frequency output	71
Relay output	92
Status (Pulse/Freq. output)	82
Totalizer	46
Configuration	47
Operation	49
Totalizer Mode	48

Totalizer Reset	48
Totalizers 1 to 3, custody transfer measurement.	12
Type	
Input/output 1 to 4.	128
I/O Module	127
Sub-input/output 1 to 4.	128
U	
Unit	
Corrected volume	17
Corrected volume flow	17
Density	18
Length	19
Mass	15
Mass flow.	15
Pressure	19
Reference density	18
Temperature.	19
Totalizer.	47
Volume	16
Volume flow.	16
Unlocking/Locking (user interface).	33
V	
VALUE f HIGH	66
Value F Low	65
Value simulation	
Current (current output)	61
Frequency	84
Measured variable	124
Status input	101
Switch point (pulse/freq. output)	87
Switch point (Relay output)	94
Value Simulation Pulse	86
Value 0_4 mA	54
Value 20 mA	56
Version Info	
Amplifier	126
F-CHIP	127
Input/output 1 to 4.	128
I/O Module	127
Sensor	125
Volume flow	14
W	
Write protection.	104
Z	
Zero point	116
Zero point adjustment.	112
Numbers	
100% Value	
Additional line	38
Additional line (Multiplex)	41
Information line	43
Information line (Multiplex)	45
Main line	35
Main line (Multiplex).	37

www.endress.com/worldwide

For more Endress+Hauser product please visit: www.ainstru.com
Mail: Sales@ainstru.com

Endress+Hauser 
People for Process Automation