



Level



Pressure



Flow



Temperature



Liquid
Analysis



Registration



Systems
Components



Services




Solutions

Description of Device Functions

Proline Prosonic Flow 93

Ultrasonic Flow Measuring System

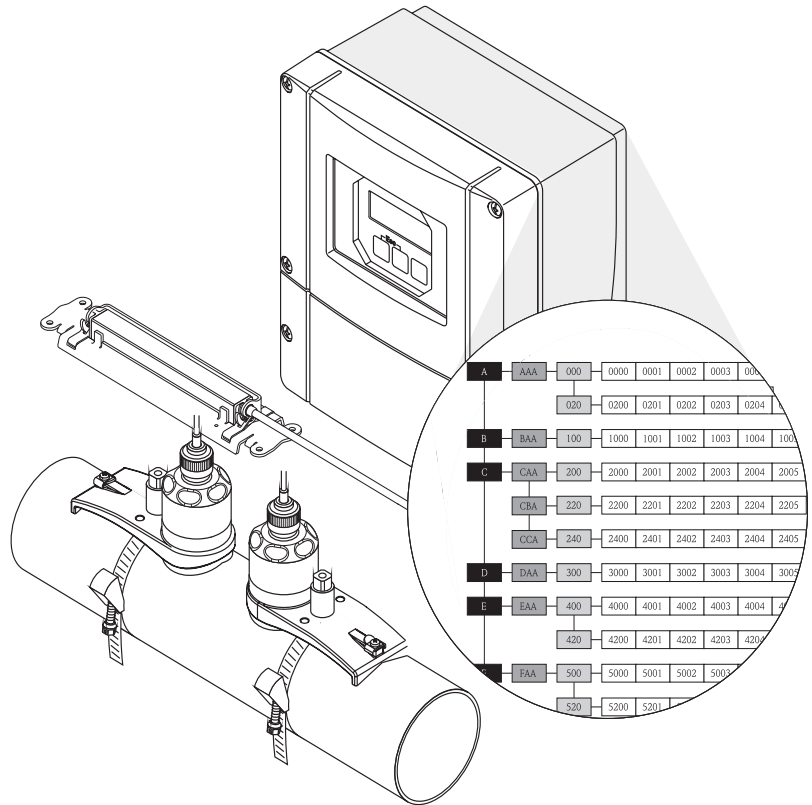

Registered trademarks

HART®

Registered trademark of the HART Communication Foundation, Austin, USA

HistoROM™, T-DAT™, F-CHIP®, FieldCare®

Registered trademarks of Endress+Hauser Flowtec AG

Table of Contents

1	Notes on using this manual	5
1.1	Using the table of contents to locate a function description	5
1.2	Using the graphic of the function matrix to locate a function description	5
1.3	Using the index of the function matrix to locate a function description	5
2	Function matrix	6
2.1	General layout of the function matrix	6
2.1.1	Blocks (A, B, C, etc.)	6
2.1.2	Groups (AAA, AEA, CAA, etc.)	6
2.1.3	Function groups (000, 020, 060, etc.)	6
2.1.4	Functions (0000, 0001, 0002, etc.)	6
2.1.5	Codes identifying cells	7
2.2	Function matrix Proline Prosonic Flow 93	8
3	Block MEASURED VARIABLES	9
3.1	Group MEASURING VALUES	10
3.1.1	Function group MAIN VALUES CH1	10
3.1.2	Function group MAIN VALUES CH2	11
3.1.3	Function group CALCULATED MAIN VALUES	12
3.2	Group SYSTEM UNITS	13
3.2.1	Function group CONFIGURATION	13
3.2.2	Function group ADDITIONAL CONFIGURATION	15
3.3	Group SPECIAL UNITS	16
3.3.1	Function group ARBITRARY UNIT	16
4	Block QUICK SETUP	17
4.1	Quick Setup "Sensor Installation"	19
4.2	Quick Setup "Commissioning"	21
4.3	Quick Setup "Pulsating flow"	23
5	Block USER INTERFACE	25
5.1	Group CONTROL	26
5.1.1	Function group BASIC CONFIGURATION	26
5.1.2	Function group UNLOCKING/LOCKING	28
5.1.3	Function group OPERATION	29
5.2	Group MAIN LINE	30
5.2.1	Function group CONFIGURATION	30
5.2.2	Function group MULTIPLEX	32
5.3	Group ADDITIONAL LINE	34
5.3.1	Function group CONFIGURATION	34
5.3.2	Function group MULTIPLEX	36
5.4	Group INFORMATION LINE	38
5.4.1	Function group CONFIGURATION	38
5.4.2	Function group MULTIPLEX	40
6	Block TOTALIZER	42
6.1	Group TOTALIZER (1...3)	43
6.1.1	Function group CONFIGURATION	43
6.1.2	Function group OPERATION	45
6.2	Group HANDLING TOTALIZER	46
7	Block OUTPUTS	47
7.1	Group CURRENT OUTPUT (1...3)	48
7.1.1	Function group CONFIGURATION	48
7.1.2	Function group OPERATION	57
7.1.3	Function group INFORMATION	58
7.2	Group PULSE/FREQUENCY OUTPUT (1...2)	59
7.2.1	Function group CONFIGURATION	59
7.2.2	Function group OPERATION	80
7.2.3	Function group INFORMATION	84

7.3	Group RELAY OUTPUT (1...2)	85
7.3.1	Function group CONFIGURATION	85
7.3.2	Function group OPERATION	89
7.3.3	Function group INFORMATION	91
7.3.4	Information on the response of the relay output	92
7.3.5	Switching action of the relay output	92
8	Block INPUTS	94
8.1	Group STATUS INPUT	95
8.1.1	Function group CONFIGURATION	95
8.1.2	Function group OPERATION	96
8.1.3	Function group INFORMATION	96
9	Block BASIC FUNCTION	97
9.1	Group HART	98
9.1.1	Function group CONFIGURATION	98
9.1.2	Function group INFORMATION	99
9.2	Group PROCESS PARAMETER (CH1...CH2)	100
9.2.1	Function group CONFIGURATION	100
9.2.2	Function group ADJUSTMENT	102
9.2.3	Function group PIPE DATA	103
9.2.4	Function group LIQUID DATA	107
9.3	Group SYSTEM PARAMETER (CH1...CH2)	110
9.3.1	Function group CONFIGURATION	110
9.4	Group SENSOR DATA (CH1...CH2)	111
9.4.1	Function group CONFIGURATION	111
9.4.2	Function group SENSOR PARAMETER	112
9.4.3	Function group CALIBRATION DATA	115
9.4.4	Function group ORIG. CALIBRATION	117
10	Block SPECIAL FUNCTION	118
10.1	Group ADVANCED DIAGNOSTICS (CH1,CH2,AVG)	119
10.1.1	Function group CONFIGURATION	119
10.1.2	Function group ACQUISITION	121
10.1.3	Function group VOLUME FLOW	122
10.1.4	Function group FLOW VELOCITY	123
10.1.5	Function group SIGNAL STRENGTH	124
10.1.6	Function group SOUND VELOCITY	125
10.1.7	Function group ACTUAL TRANSIT TIME	127
10.1.8	Function group ACCEPTANCE RATE	129
11	Block SUPERVISION	131
11.1	Group SYSTEM (SYSTEM CH2)	132
11.1.1	Function group CONFIGURATION	132
11.1.2	Function group OPERATION	134
11.2	Group VERSION INFO	136
11.2.1	Function group DEVICE	136
11.2.2	Function group SENSOR	136
11.2.3	Function group AMPLIFIER	136
11.2.4	Function group F-CHIP	137
11.2.5	Function group I/O MODULE	137
11.2.6	Function groups INPUT /OUTPUT 1...4	138
12	Factory settings	139
12.1	SI units	139
12.2	US units (for USA and Canada only)	139
12.3	Language	139
13	Index function matrix	141
14	Index key words	145

1 Notes on using this manual

There are various ways of locating the description of a function of your choice in the manual:

1.1 Using the table of contents to locate a function description

The designations of all the cells in the function matrix are listed in the table of contents. You can use these unambiguous designations (such as USER INTERFACE, INPUTS, OUTPUTS, etc.) to choose whichever functions are applicable to a particular set of conditions. The page references show you exactly where to find the detailed descriptions of the functions in question. The table of contents is on Page 3.

1.2 Using the graphic of the function matrix to locate a function description


This step-by-step, top-down approach starts with the blocks, the highest level, and works down through the matrix to the description of the function you need:

1. All blocks available, and their related groups, are illustrated on Page 8. Select the block (or the group within the block) which you need for your application and use the page reference to locate the information corresponding to the next level.
2. The page in question contains a graphic showing of the block with all its subordinate groups, function groups and functions.
Select the function which you need for your application and use the page reference to locate the detailed function description.

1.3 Using the index of the function matrix to locate a function description

Each "cell" in the function matrix (blocks, groups, function groups, functions) has a unique identifier in the form of a code consisting of one or three letters or a three- or four-digit number. The code identifying a selected "cell" appears at the top right on the local display.

Example:

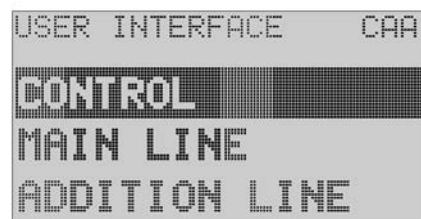

A0001653-EN


The function-matrix index lists the codes for all the available "cells" in alphabetic and consecutive order, complete with the page references for the corresponding functions. The index to the function matrix is on Page 141.

2 Function matrix

2.1 General layout of the function matrix

The function matrix consists of four levels:

Blocks -> Groups -> Function groups -> Functions

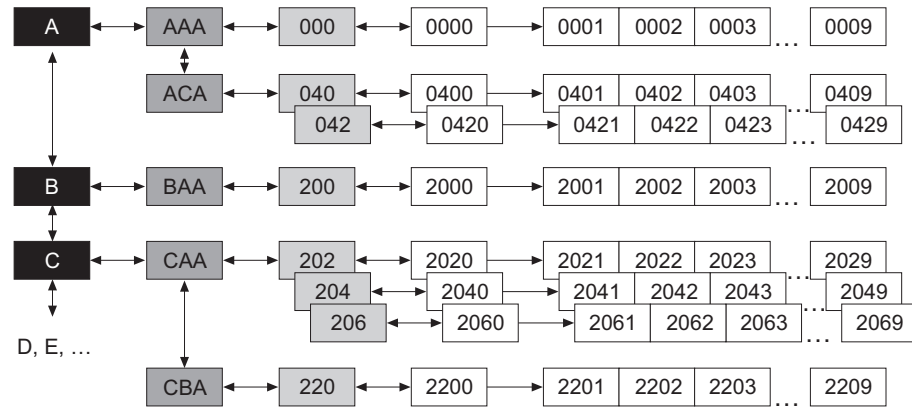

A0000961

2.1.1 Blocks (A, B, C, etc.)

The blocks are the highest-level grouping of the operation options for the device. Examples of blocks available are MEASURED VARIABLES, QUICK SETUP, USER INTERFACE, TOTALIZERS, etc.

2.1.2 Groups (AAA, AEA, CAA, etc.)

A block consists of one or more groups. Each group represents a more detailed selection of the operation options in the higher-order block. Examples of groups available in the "USER INTERFACE" block are CONTROL, MAIN LINE, ADDITIONAL LINE, etc.

2.1.3 Function groups (000, 020, 060, etc.)

A group consists of one or more function groups. Each function group represents a more detailed selection of the operation options in the higher-order group. Function groups available of group "CONTROL" are for example: BASIC CONFIGURATION, UNLOCKING/LOCKING, OPERATION, etc.

2.1.4 Functions (0000, 0001, 0002, etc.)

Each function group consists of one or more functions. The functions are used to operate and parameterize the device. Numerical values can be entered or parameters selected and saved. The functions in the "BASIC CONFIGURATION" function group include LANGUAGE, DISPLAY DAMPING, CONTRAST LCD, etc. The procedure for changing the language of the user interface, for example, is as follows:

1. Select the block "USER INTERFACE".
2. Select the group "CONTROL".
3. Select the function group "BASIC CONFIGURATION".
4. Select the function "LANGUAGE" (here you can set the language required).

2.1.5 Codes identifying cells

Each cell (block, group, function group and function) in the function matrix has an individual, unique code.

Blocks:

The code is a letter (A, B, C, etc.)

Groups:


The code consists of three letters (AAA, ABA, BAA, etc.).
The first letter matches the block code (i.e. each group in block A has a code starting with an A_ _; the codes of the groups in block B start with a B _ _, and so on). The other two letters are for identifying the group within the respective block.

Function groups:

The code consists of three digits (000, 001, 100, etc.)

Functions:

The code consists of four digits (0000, 0001, 0201, etc.).
The first three digits are the same as the code for the function group.
The last digit in the code is a counter for the functions in the function group, incrementing from 0 to 9 (e.g. function 0005 is the sixth function in group 000).

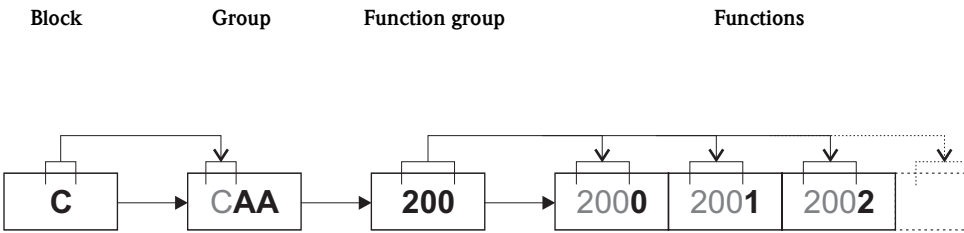


A0001251

2.2 Function matrix Proline Prosonic Flow 93

BLOCKS		GROUPS		FUNCTION GROUPS
MEASURED VARIABLES A (see P. 9)	→	MEASURING VALUES	AAA	→ see P. 10
		SYSTEM UNITS	ACA	→ see P. 13
		SPECIAL UNITS	AEA	→ see P. 16
↓				
QUICK SETUP B (see P. 17)	→	Sensor and commissioning setups		→ see P. 17
↓				
USER INTERFACE C (see P. 25)	→	CONTROL	CAA	→ see P. 26
		MAIN LINE	CCA	→ see P. 30
		ADDITIONAL LINE	CEA	→ see P. 34
		INFORMATION LINE	CGA	→ see P. 38
↓				
TOTALIZER D (see P. 42)	→	TOTALIZER (1...3)	DAA,B,C	→ see P. 43
		HANDLING TOTALIZER	DJA	→ see P. 46
↓				
OUTPUTS E (see P. 47)	→	CURRENT OUTPUT (1...3)	EAA,B,C	→ see P. 48
		PULSE/FREQUENCY OUTPUT (1...2)	ECA,B	→ see P. 59
		RELAY OUTPUT (1...2)	EGA,B	→ see P. 85
↓				
INPUTS F (see P. 94)	→	STATUS INPUT	FAA	→ see P. 95
↓				
BASIC FUNCTION G (see P. 97)	→	HART	GAA	→ see P. 98
		PROCESS PARAMETER (CH1...CH2)	GIA,B	→ see P. 100
		SYSTEM PARAMETER (CH1...CH2)	GLA,B	→ see P. 110
		SENSOR DATA (CH1...CH2)	GNA,B	→ see P. 111
↓				
SPECIAL FUNCTION H (see P. 118)	→	ADVANCED DIAGNOSTICS (CH1,CH2, AVG)	HEA,B,C	→ see P. 119
↓				
SUPERVISION J (see P. 131)	→	SYSTEM	JAA	→ see P. 132
		SYSTEM CH2	JAB	→ see P. 132
		VERSION INFO	JCA	→ see P. 136

3 Block MEASURED VARIABLES

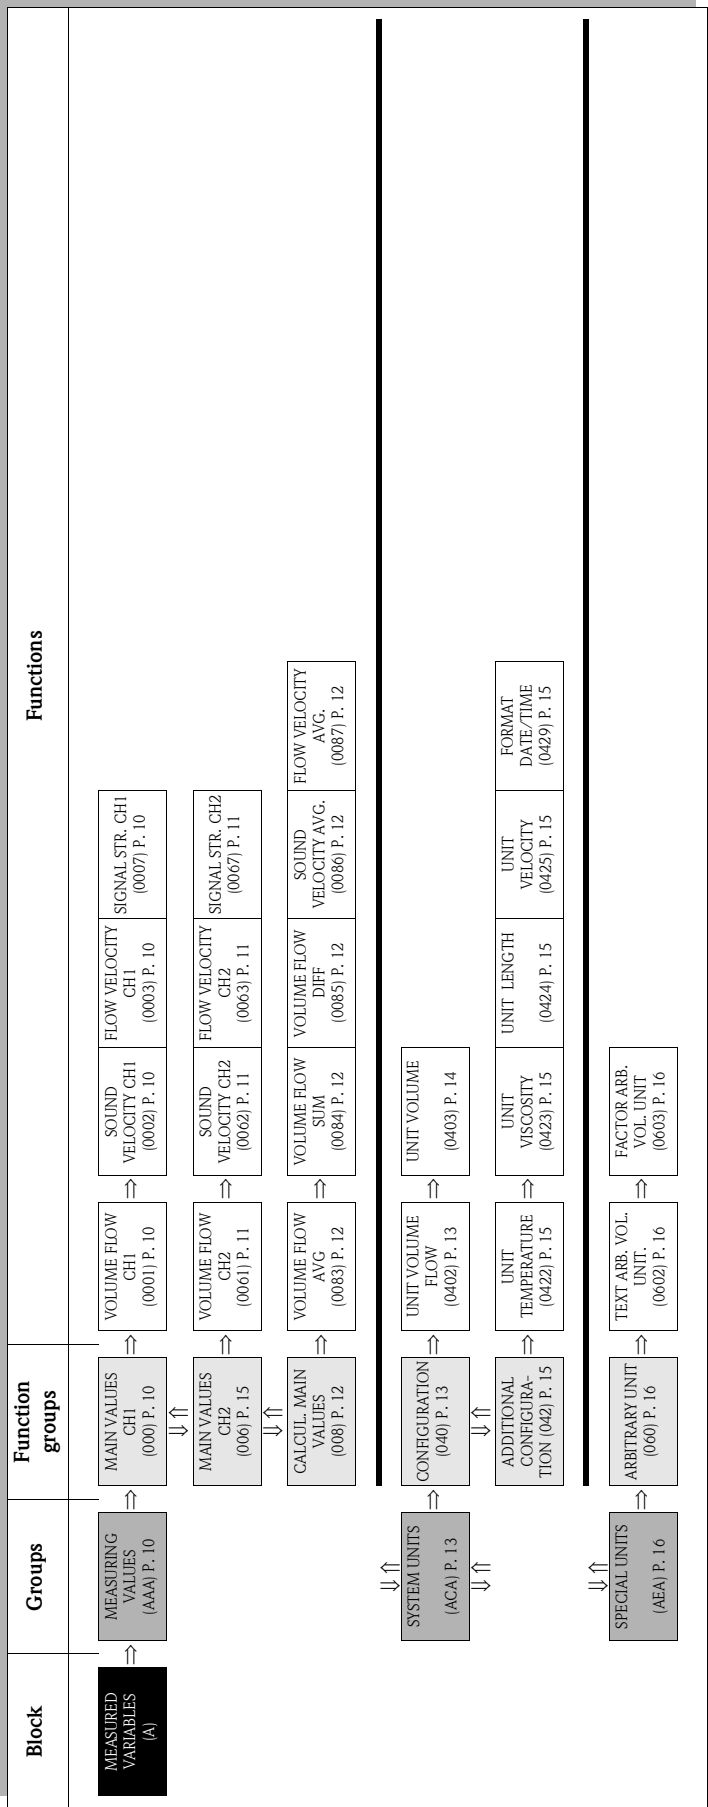

3.1 Group MEASURING VALUES

3.1.1 Function group MAIN VALUES CH1

MEASURED VARIABLES A ⇒ MEASURING VALUES AAA ⇒ MAIN VALUES CH1 000

Functional description	
MEASURED VARIABLES → MEASURING VALUES → MAIN VALUES CH1	
The measuring values of channel 1 currently being measured are displayed in this function group.  Note! ■ The engineering units of all the measured variables shown here can be set in the "SYSTEM UNITS" group. ■ If the liquid in the pipe flows backwards, a negative sign prefixes the flow reading on the display.	
VOLUME FLOW CH1 (0001)	The volume flow currently measured appears on the display (channel 1). User interface: 5-digit floating-point number, including unit and sign (e.g. 5.5445 dm³/min; 1.4359 m³/h; -731.63 gal/d; etc.)
SOUND VELOCITY CH1 (0002)	The sound velocity currently measured in the liquid appears on the display (channel 1). User interface: 5-digit fixed-point number, incl. units (e.g. 1400.0 m/s, 5249.3 ft/s)
FLOW VELOCITY CH1 (0003)	The flow velocity currently measured appears on the display (channel 1). User interface: 5-digit floating-point number, including unit and sign (e.g. 8.0000 m/s, 26.247 ft/s)
SIGNAL STRENGTH CH1 (0007)	The signal strength appears on the display (channel 1). User interface: 4-digit fixed-point number (e.g. 80.0)  Note! To ensure reliable measurement takes place, Prosonic Flow requires a signal strength of > 30.

3.1.2 Function group MAIN VALUES CH2

MEASURED VARIABLES A ⇒ MEASURING VALUES AAA ⇒ MAIN VALUES CH2 006

Functional description	
MEASURED VARIABLES → MEASURING VALUES → MAIN VALUES CH2	
The measuring values of channel 2 currently being measured are displayed in this function group.  Note! ■ The engineering units of all the measured variables shown here can be set in the "SYSTEM UNITS" group. ■ If the fluid in the pipe flows backwards, a negative sign prefixes the flow reading on the display.	
VOLUME FLOW CH2 (0061)	The volume flow currently measured appears on the display (channel 2). User interface: 5-digit floating-point number, including unit and sign (e.g. 5.5445 dm³/min; 1.4359 m³/h; -731.63 gal/d; etc.)
SOUND VELOCITY CH2 (0062)	The sound velocity currently measured in the liquid appears on the display (channel 2). User interface: 5-digit fixed-point number, incl. units (e.g. 1400.0 m/s, 5249.3 ft/s)
FLOW VELOCITY CH2 (0063)	The flow velocity currently measured appears on the display (channel 2). User interface: 5-digit floating-point number, including unit and sign (e.g. 8.0000 m/s, 26.247 ft/s)
SIGNAL STRENGTH CH2 (0067)	The signal strength appears on the display (channel 2). User interface: 4-digit fixed-point number (e.g. 80.0)  Note! To ensure reliable measurement takes place, Prosonic Flow requires a signal strength of > 30.


3.1.3 Function group CALCULATED MAIN VALUES

MEASURED VARIABLES A ⇒ MEASURING VALUES AAA ⇒ CALCUL. MAIN VALUES 008

Functional description	
MEASURED VARIABLES → MEASURING VALUES → CALCULATED MAIN VALUES	
The calculated measured values appear on the display. The measured values of both channels are used when calculating the values.  Note! ■ The units of measure of all the measured variables shown here can be set in the "SYSTEM UNITS" group. ■ If the fluid in the pipe flows backwards, a negative sign prefixes the flow reading on the display.	
VOLUME FLOW AVERAGE (0083)	The average volume flow appears on the display. Calculated from the measured values: (VOLUME FLOW CH1 + VOLUME FLOW CH2)/2 User interface: 5-digit floating-point number, including unit and sign (e.g. 5.5445 dm³/min; 1.4359 m³/h; -731.63 gal/d; etc.)
VOLUME FLOW SUM. (0084)	The total volume flow appears on the display. Calculated from the measured values: VOLUME FLOW CH1 + VOLUME FLOW CH2 User interface: 5-digit floating-point number, including unit and sign (e.g. 5.5445 dm³/min; 1.4359 m³/h; -731.63 gal/d; etc.)
VOLUME FLOW DIFFERENCE (0085)	The difference between the volume flows appears on the display. Calculated from the measured values: VOLUME FLOW CH1 - VOLUME FLOW CH2 User interface: 5-digit floating-point number, including unit and sign (e.g. 5.5445 dm³/min; 1.4359 m³/h; -731.63 gal/d; etc.)
SOUND VELOCITY AVERAGE (0086)	The average sound velocity appears on the display. Calculated from the measured values: (SOUND VELOCITY CH1 + SOUND VELOCITY CH2)/2 User interface: 5-digit fixed-point number, incl. units (e.g. 1400.0 m/s, 5249.3 ft/s)
FLOW VELOCITY AVERAGE (0087)	The average flow velocity appears on the display. Calculated from the measured values: (FLOW VELOCITY CH1 + FLOW VELOCITY CH2)/2 User interface: 5-digit floating-point number, including unit and sign (e.g. 8.0000 m/s, 26.247 ft/s)

3.2 Group SYSTEM UNITS

 
3.2.1 Function group CONFIGURATION



Functional description	
MEASURED VARIABLES → SYSTEM UNITS → CONFIGURATION	
You can select the units for measured variables in this function group.	
UNIT VOLUME FLOW (0402)	Use this function to select the unit for displaying the volume flow. The unit you select here is also valid for: ■ Current output ■ Frequency output ■ Relay switch points (limit value, flow direction) ■ Creepage Options: Metric: Cubic centimeter → cm³/s; cm³/min; cm³/h; cm³/day Cubic decimeter → dm³/s; dm³/min; dm³/h; dm³/day Cubic meter → m³/s; m³/min; m³/h; m³/day Milliliter → ml/s; ml/min; ml/h; ml/day Liter → l/s; l/min; l/h; l/day Hectoliter → hl/s; hl/min; hl/h; hl/day Megaliter → Ml/s; Ml/min; Ml/h; Ml/day US: Cubic centimeter → cc/s; cc/min; cc/h; cc/day Acre foot → af/s; af/min; af/h; af/day Cubic foot → ft³/s; ft³/min; ft³/h; ft³/day Fluid ounce → oz f/s; oz f/min; oz f/h; oz f/day Gallon → gal/s; gal/min; gal/h; gal/day, US kgal/s; US kgal/min; US kgal/h; US kgal/day Million gallon → Mgal/s; Mgal/min; Mgal/h; Mgal/day Barrel (normal fluids: 31.5 gal/bbl) → bbl/s; bbl/min; bbl/h; bbl/day Barrel (beer: 31.0 gal/bbl) → bbl/s; bbl/min; bbl/h; bbl/day Barrel (petrochemicals: 42.0 gal/bbl) → bbl/s; bbl/min; bbl/h; bbl/day Barrel (filling tanks: 55.0 gal/bbl) → bbl/s; bbl/min; bbl/h; bbl/day Imperial Gallon → gal/s; gal/min; gal/h; gal/day Mega gallon → Mgal/s; Mgal/min; Mgal/h; Mgal/day Barrel (beer: 36.0 gal/bbl) → bbl/s; bbl/min; bbl/h; bbl/day Barrel (petrochemicals: 34.97 gal/bbl) → bbl/s; bbl/min; bbl/h; bbl/day Arbitrary unit, (see function group ARBITRARY UNIT on Page 16) ____ → ____/s; ____/min; ____/h; ____/day Factory setting: l/s  Note! If you defined a unit of volume in the ARBITRARY UNIT (060) function group (see Page 16) the unit in question is shown here.

Functional description	
MEASURED VARIABLES → SYSTEM UNITS → CONFIGURATION	
UNIT VOLUME (0403)	Use this function to select the unit for displaying the volume. The unit you select here is also valid for: ■ Pulse weighting (e.g. m³/p) Options: Metric: cm³; dm³; m³; ml; l; hl; Ml MEGA US: cc; af; ft³; oz f; gal; kgal; Mgal; bbl (NORMAL FLUIDS); bbl (BEER); bbl (PETROCHEMICALS); bbl (FILLING TANKS) Imperial: gal; Mgal; bbl (BEER); bbl (PETROCHEMICALS) Arbitrary unit: _ _ _ _ (see function group ARBITRARY UNIT on Page 16) Factory setting: liter  Note! ■ If you defined a unit of volume in the ARBITRARY UNIT (060) function group (see Page 16) the unit in question is shown here. ■ The unit of the totalizers is independent of your choice here. The unit for each totalizer is selected separately for the totalizer in question.


3.2.2 Function group ADDITIONAL CONFIGURATION

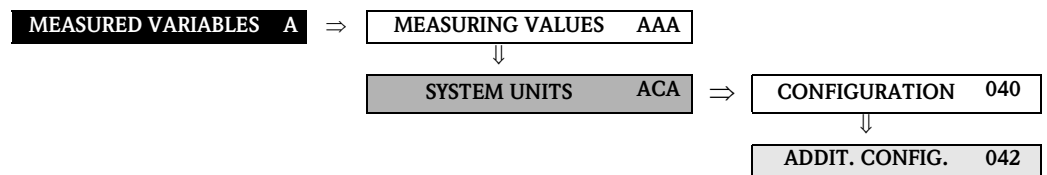

Functional description	
MEASURED VARIABLES → SYSTEM UNITS → ADDITIONAL CONFIGURATION	
UNIT TEMPERATURE (0422)	Use this function to select the unit for displaying the liquid temperature.  Note! The liquid temperature is entered in the function TEMPERATURE (see P. 107). Options: °C (Celsius) K (Kelvin) °F (Fahrenheit) R (Rankine) Factory setting: °C
UNIT VISCOSITY (0423)	Use this function to select the unit for liquid viscosity. Options: mm²/s cSt St Factory setting: mm²/s
UNIT LENGTH (0424)	Use this function to select the unit for the measure of length. The unit you select here is valid for: ■ Nominal diameter ■ Diameter ■ Wall thickness ■ Liner thickness ■ Path length ■ Wire length ■ Sensor spacing Options: MILLIMETER INCH Factory setting: MILLIMETER
UNIT VELOCITY (0425)	Use this function to select the unit for displaying the velocity. The unit you select here is valid for: ■ Sound velocity ■ Flow velocity Options: m/s ft/s Factory setting: m/s
FORMAT DATE/TIME (0429)	Use this function to select the date and time format of the calibration history. Options: DD.MM.YY 24 H MM/DD/YY 12 H A/P DD.MM.YY 12 H A/P MM/DD/YY 24 H Factory setting: DD.MM.YY 24 H

3.3 Group SPECIAL UNITS

3.3.1 Function group ARBITRARY UNIT

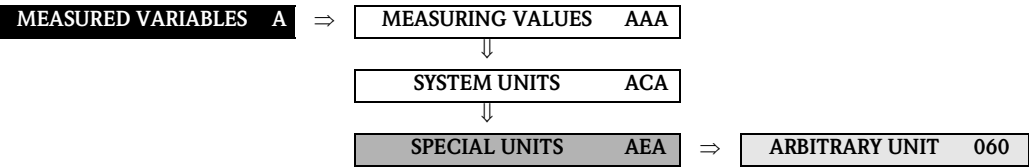

Functional description	
MEASURED VARIABLES → SPECIAL UNITS → ARBITRARY UNIT	
Use this function group to define an arbitrary unit for the flow rate variable.	
TEXT ARBITRARY VOLUME (0602)	Use this function to enter a text for the selectable volume (flow) unit. You define only the text, the unit of time is provided from a choice of options (s, min, h, day). User input: xxxxxxx (max. 4 characters) Valid characters are A–Z, 0–9, +, –, decimal point, white space or underscore Factory setting: _ _ _ _ (No text) Example: If your text entry is "GLAS", this text string appears on the display complete with the unit of time, e.g. "GLAS/min": GLAS = Volume (text input) GLAS / min = Volume flow as shown (on the display)
FACTOR ARBITRARY VOLUME (0603)	Use this function to define a quantity factor (without time) for the free selectable unit. The volume unit on which this factor is based is one liter. User input: 7-digit floating-point number Factory setting: 1 Reference quantity: Liter Example: The volume of a glass is 0.5 l → 2 glasses = 1 liter User input: 2

4 Block QUICK SETUP

Block	Group	Function groups	Functions
QUICK SETUP (B)	⇒	⇒	SETUP SENSOR (1001) P. 17 ⇒ OS COMMISSION. (1002) P. 17 OS PULSATING FLOW (1003) P. 17 T-DAT SAVE/LOAD (1009) P. 18


Functional description QUICK SETUP	
QUICK SETUP SENSOR (1001)	Use this function to start the Quick Setup menu for assembling the ultrasonic sensors. Options: YES NO Factory setting: NO  Note! You will find a flowchart of the Quick Setup SENSOR menu on Page 19. Please refer to the Operating Instructions Proline Prosonic Flow 93 (BA070D/06/en/....) for more information on Quick Setup menus.
QUICK SETUP COMMISSIONING (1002)	Use this function to start the Quick Setup menu for commissioning. Options: YES NO Factory setting: NO  Note! You will find a flowchart of the COMMISSIONING Quick Setup menu on Page 21. Please refer to the Operating Instructions Proline Prosonic Flow 93 (BA070D/06/en/....) for more information on Quick Setup menus.
QUICK SETUP PULSATING FLOW (1003)	Use this function to start the application-specific Quick Setup menu for pulsating flow. Options: YES NO Factory setting: NO  Note! You will find a flowchart of the PULSATING FLOW Quick Setup menu on Page 23. Please refer to the Operating Instructions Proline Prosonic Flow 93 (BA070D/06/en/....) for more information on Quick Setup menus.

Functional description	
QUICK SETUP	
T-DAT SAVE/LOAD (1009)	Use this function to save the parameter settings / configuration of the transmitter in a transmitter DAT (T-DAT), or to load the parameter settings from the T-DAT into the EEPROM (manual security function). Application examples: ■ After commissioning, the current measuring point parameters can be saved to the T-DAT as a backup. ■ If the transmitter is replaced for some reason, the data from the T-DAT can be loaded into the new transmitter (EEPROM). Options: CANCEL SAVE (from EEPROM to T-DAT) LOAD (from the T-DAT into EEPROM) Factory setting: CANCEL  Note! ■ If the power supply fails, the totalizer readings are automatically saved to the EEPROM. ■ The option "LOAD" couldn't be executed, if the T-DAT is empty or faultily. ■ The option "LOAD" and "SAVE" couldn't be executed, if no T-DAT be present.

4.1 Quick Setup "Sensor Installation"

The installation distances needed to install the sensors can be determined using the "Sensor Installation" Quick Setup menu.

In the case of measuring devices without a local display, the installation distances can be determined via the FieldCare operating program or with the Applicator online tool.

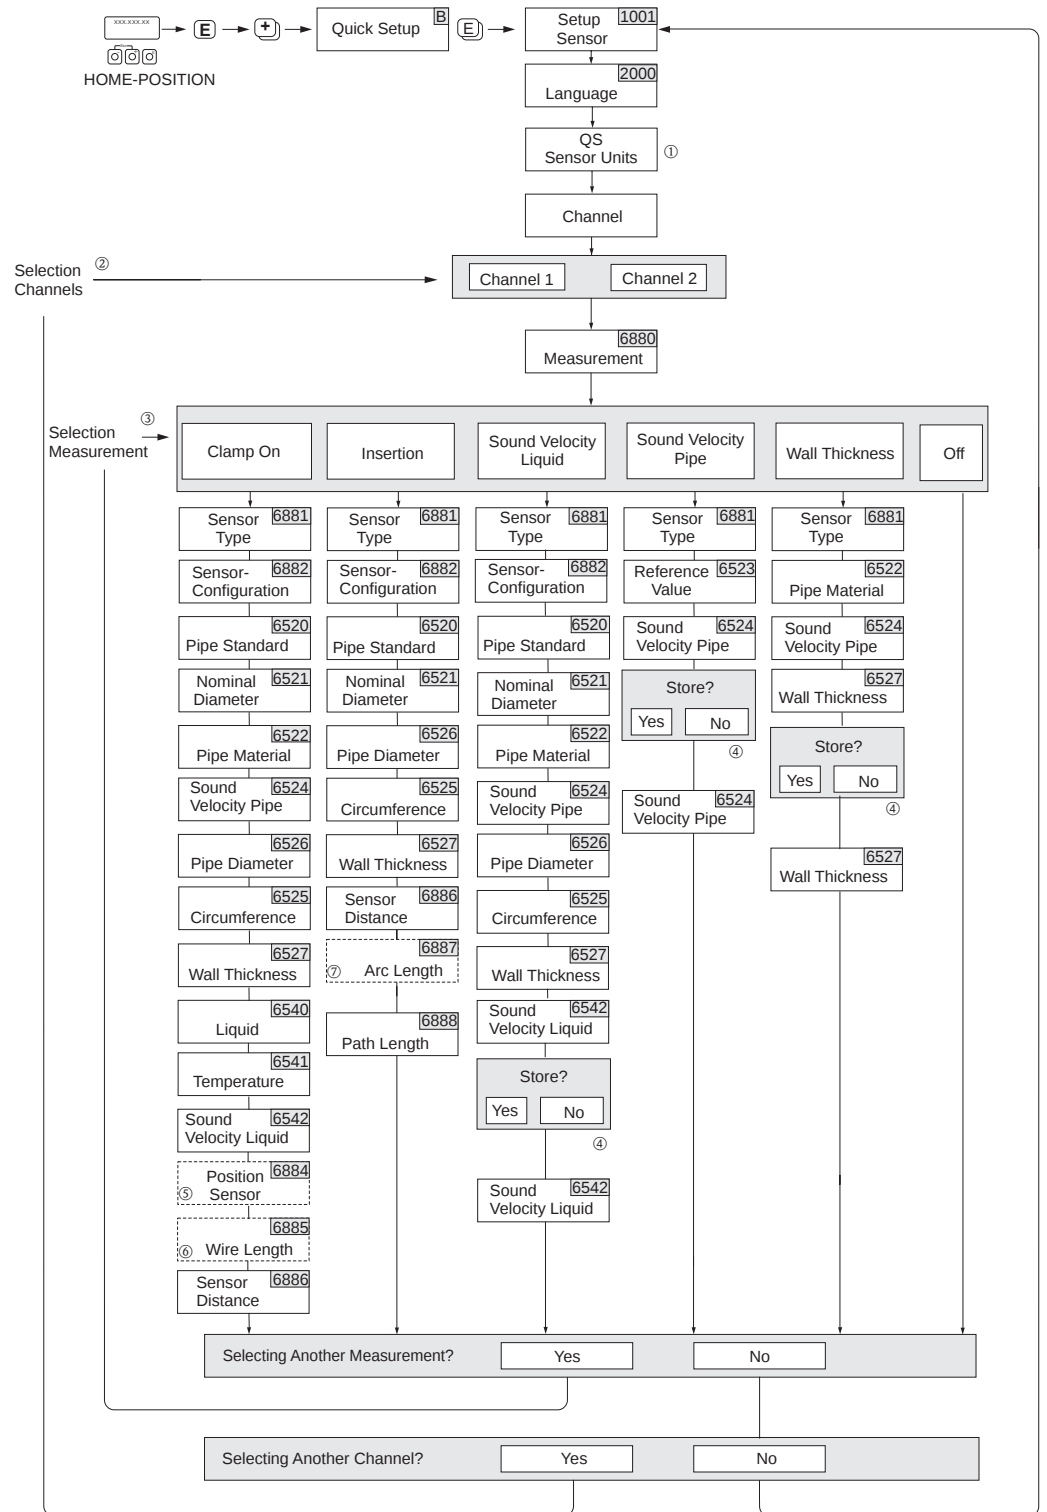

**Note!**


The display returns to the cell SETUP SENSOR (1001) if you press the ESC key combination during interrogation.

- ① Selection of the system units only influences the functions:
 - UNIT TEMPERATURE (0422)
 - UNIT LENGTH (0424)
 - UNIT VELOCITY (0425)
- ② If a channel is selected for which a Quick Setup has already been executed, the previous values are overwritten.
- ③ During each run, all the options can be selected. If settings were made during a previous run, these are overwritten.
- ④ "Save?" prompt for pipe sound velocity:
 - YES = The value measured during Quick Setup is accepted in the appropriate function.
 - NO = The measurement is discarded and the original value remains.
- ⑤ The POSITION SENSOR function (6884) only appears if:
 - The CLAMP ON option is selected in the MEASUREMENT function (6880)
 - and**
 - Two traverses are selected in the SENSOR CONFIGURATION function (6882)
- ⑥ The WIRE LENGTH function (6885) only appears if:
 - The CLAMP ON option is selected in the MEASUREMENT function (6880)
 - and**
 - One traverse is selected in the SENSOR CONFIGURATION function (6882)
- ⑦ The ARC LENGTH function (6887) only appears if:
 - The INSERTION option is selected in the MEASUREMENT function (6880)
 - and**
 - The DUAL-PATH option is selected in the SENSOR CONFIGURATION function (6882)

4.2 Quick Setup "Commissioning"

In the case of measuring devices without a local display, the individual parameters and functions must be configured via the operating program, e.g. FieldCare.

If the measuring device is equipped with a local display, all the important device parameters for standard operation, as well as additional functions, can be configured quickly and easily by means of the following Quick Setup menus.

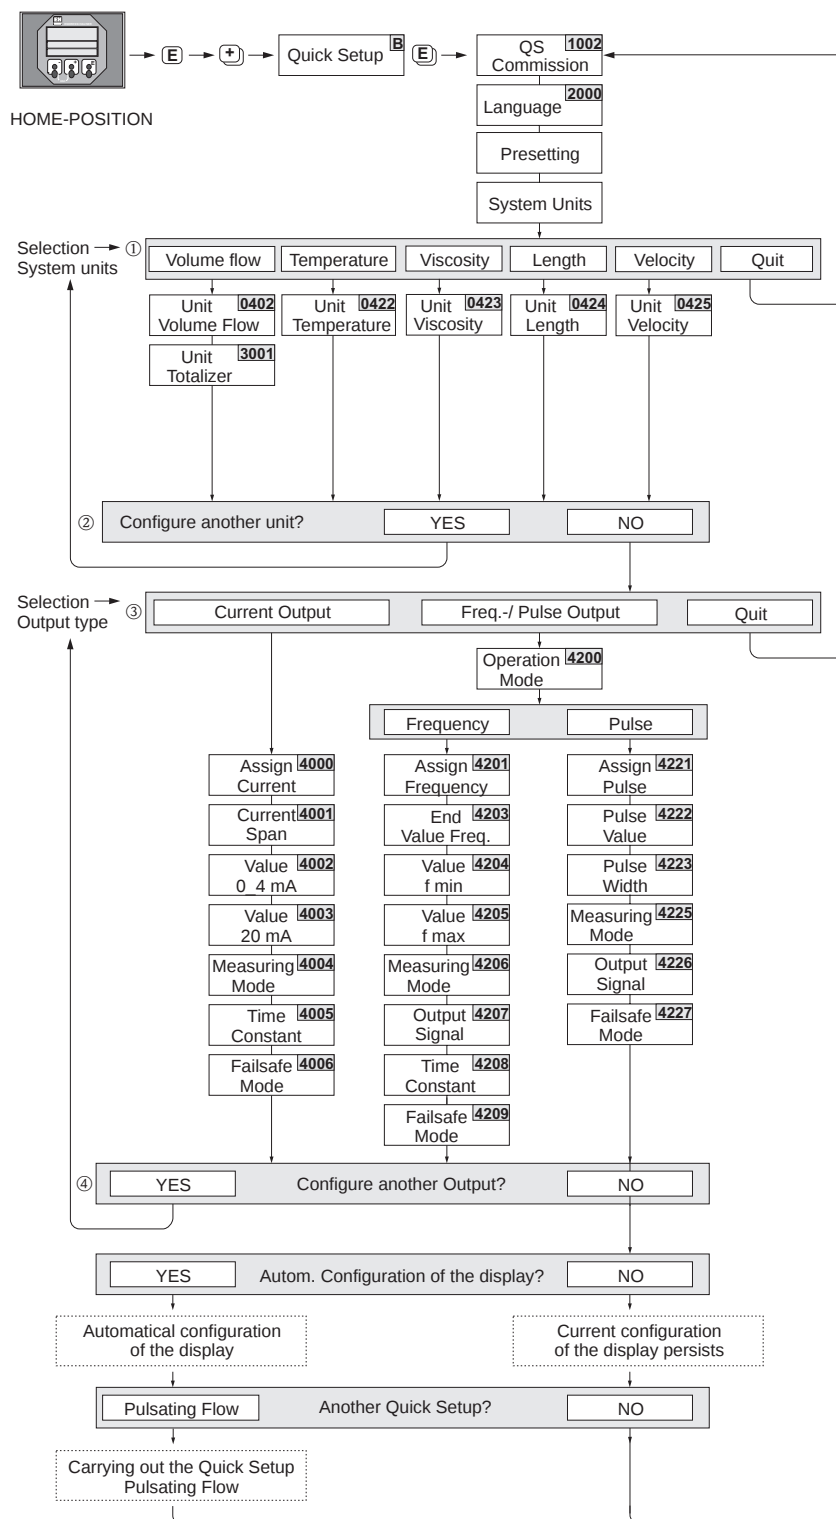


A0009881-EN

Note!

- The display returns to the function SETUP COMMISSIONING (1002) if you press the ESC key combination during parameter interrogation.
 - If you answer YES to the question regarding the "Automatic configuration of the display", the display lines are assigned as follows:
 - Main line = volume flow
 - Additional line = totalizer 1
 - Information line = operating/system condition
-
- ① Only units not yet configured in the current Quick Setup are offered for selection in each cycle. The volume unit is derived from the volume flow unit.
 - ② The "YES" option remains visible until all the units have been configured.
"NO" is the only option displayed when no further units are available.
 - ③ Only outputs not yet configured in the current Quick Setup are offered for selection in each cycle.
 - ④ The "YES" option appears as long as a free output is still available.
"NO" is the only option displayed when no further outputs are available.

4.3 Quick Setup "Pulsating flow"

With the aid of this Quick Setup, the user is systematically guided through all the device functions that have to be adjusted and configured for measuring operation with pulsating flow. Values that are already configured, such as the measuring range, current range or full scale value, are not changed in the process!

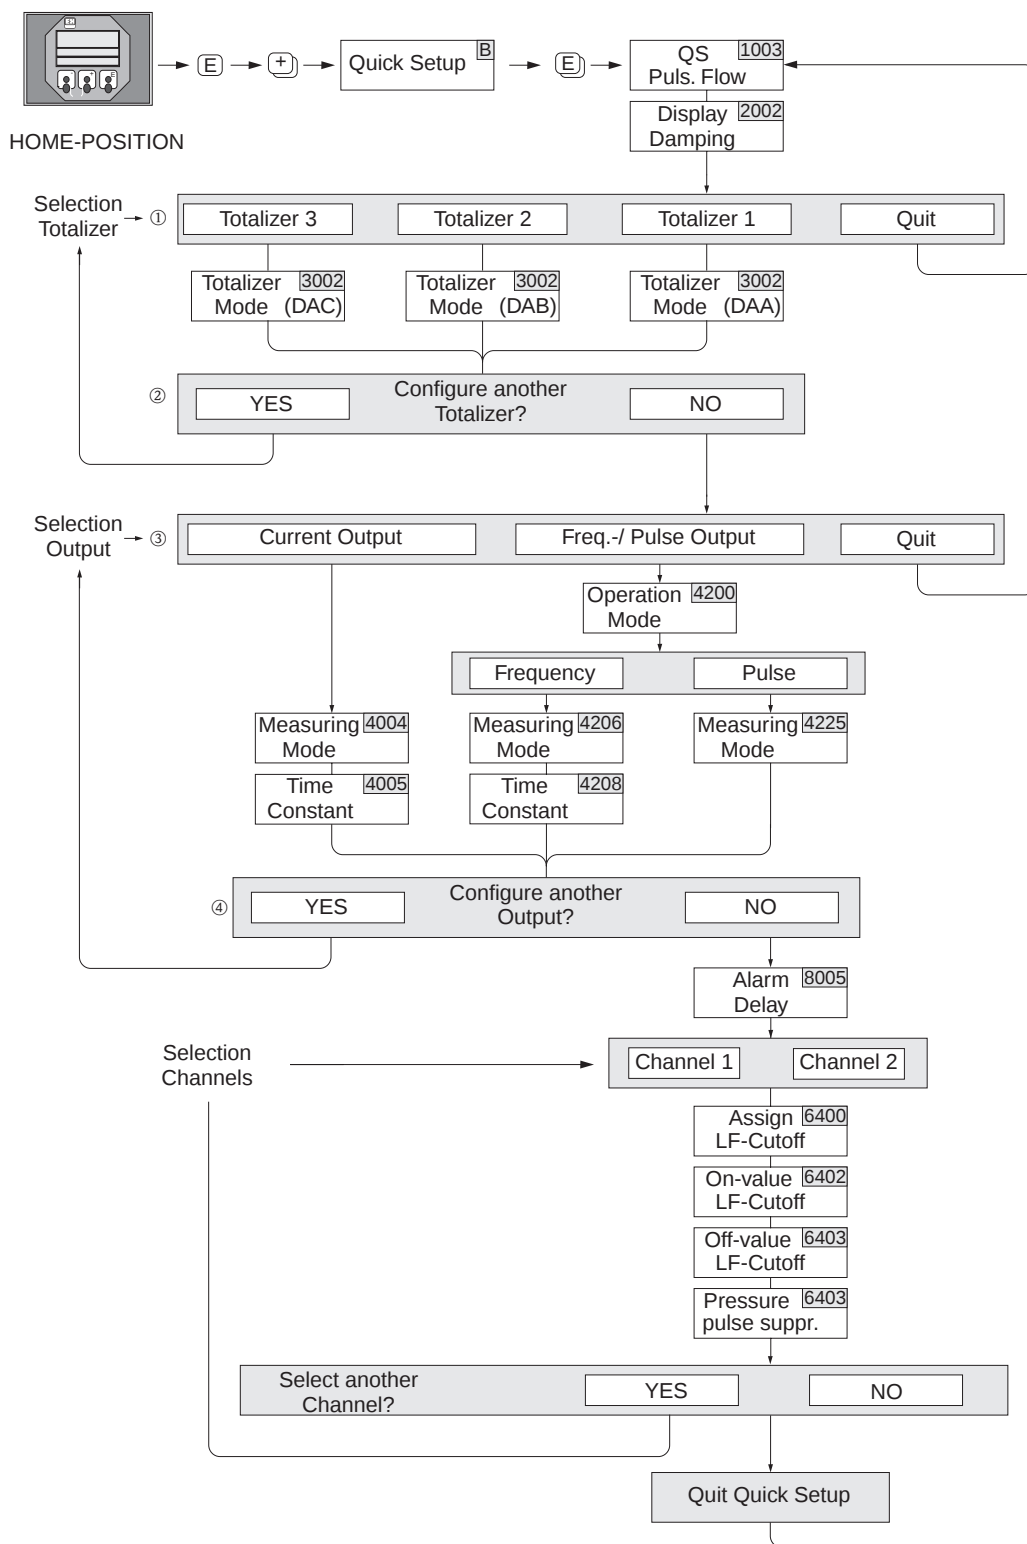

A0009839-EN

**Note!**


- The display returns to the function SETUP PULSATING FLOW (1003) if you press the ESC key combination during parameter interrogation.
- This Quick Setup can either be called up directly after the "COMMISSIONING" Quick Setup, or it can be called up manually via the SETUP PULSATING FLOW function (1003).

- ① Only counters not yet configured in the current Quick Setup are offered for selection in each cycle.
- ② The "YES" option remains visible until all the counters have been configured.
"NO" is the only option displayed when no further counters are available.
- ③ Only outputs not yet configured in the current Quick Setup are offered for selection in each cycle.
- ④ The "YES" option remains visible until all the outputs have been configured.
"NO" is the only option displayed when no further outputs are available.

Settings for the Pulsating Flow menu in Quick Setup:

Fctn. des.	Function name	Suggested settings	Description
Call up through the function matrix:			
B	QUICK SETUP	QS PULSATING FLOW	see P. 17
1003	QS PULSATING FLOW	YES	see P. 17
Basic configuration:			
2002	DISPLAY DAMPING	1 s	see P. 26
3002	TOTALIZER MODE (DAA)	BALANCE	see P. 44
3002	TOTALIZER MODE (DAB)	BALANCE	see P. 44
3002	TOTALIZER MODE (DAC)	BALANCE	see P. 44
Select the signal type: CURRENT OUTPUT (1...2)			
4004	MEASURING MODE	PULSATING FLOW	see P. 53
4005	TIME CONSTANT	1 s	see P. 55
Select the signal type: FREQ./PULSE OUTPUT (1...n) / operation mode: FREQUENCY			
4206	MEASURING MODE	PULSATING FLOW	see P. 63
4208	TIME CONSTANT	0 s	see P. 67
Select the signal type: FREQ./PULSE OUTPUT (1...n) / operation mode: PULSE			
4225	MEASURING MODE	PULSATING FLOW	see P. 71
Other settings:			
8005	ALARM DELAY	0 s	see P. 133
6400	ASSIGN LOW FLOW CUT OFF	VOLUME FLOW	see P. 100
6402	ON-VALUE LOW FLOW CUT OFF	3.0 dm ³ /min resp. 0.8 US-gal/min	see P. 100
6403	OFF-VALUE LOW FLOW CUT OFF	50%	see P. 100
6404	PRESSURE SHOCK SUPPRESSION	0 s	see P. 101

5 Block USER INTERFACE

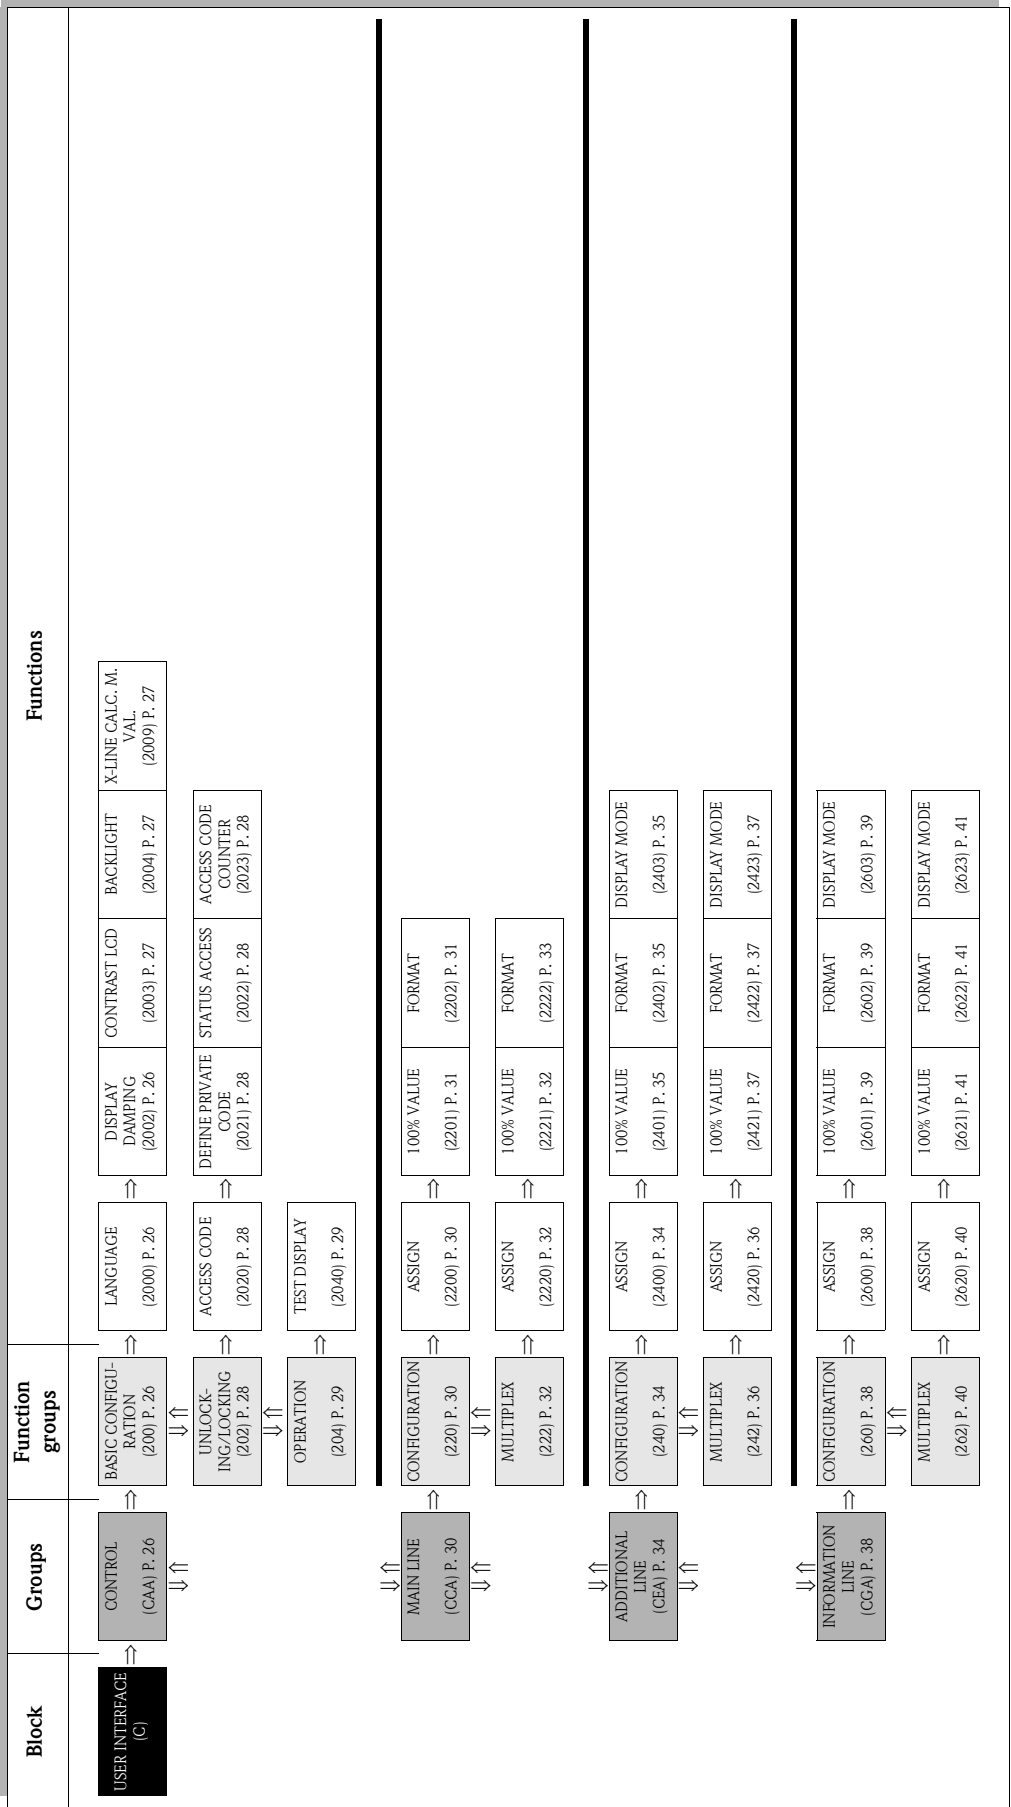

5.1 Group CONTROL


5.1.1 Function group BASIC CONFIGURATION

USER INTERFACE	C	⇒	CONTROL	CAA	⇒	BASIC CONFIGURATION	200
----------------	---	---	---------	-----	---	---------------------	-----

Functional description																																							
USER INTERFACE → CONTROL → BASIC CONFIGURATION																																							
LANGUAGE (2000)	Use this function to select the language for all texts, parameters and messages shown on the local display.  Note! The displayed options depend on the available language group shown in the LANGUAGE GROUP (8226) function. Options: <table> <tr> <td>Language group</td><td>ENGLISH</td></tr> <tr> <td>WEST EU / USA</td><td>DEUTSCH</td></tr> <tr> <td></td><td>FRANCAIS</td></tr> <tr> <td></td><td>ESPANOL</td></tr> <tr> <td></td><td>ITALIANO</td></tr> <tr> <td></td><td>NEDERLANDS</td></tr> <tr> <td></td><td>PORTUGUESE</td></tr> <tr> <td>Language group</td><td>ENGLISH</td></tr> <tr> <td>EAST EU / SCAND.</td><td>NORSK</td></tr> <tr> <td></td><td>SVENSKA</td></tr> <tr> <td></td><td>SUOMI</td></tr> <tr> <td></td><td>POLISH</td></tr> <tr> <td></td><td>CZECH</td></tr> <tr> <td></td><td>RUSSIAN</td></tr> <tr> <td>Language group ASIA</td><td>ENGLISH</td></tr> <tr> <td></td><td>BAHASA INDONESIA</td></tr> <tr> <td></td><td>JAPANESE (syllabary)</td></tr> <tr> <td>Language group</td><td>CHINESE</td></tr> <tr> <td>CHINESE</td><td>ENGLISH</td></tr> </table> Factory setting: Country-dependent, see Page 139  Note! ■ If you press the  keys simultaneously during startup, the language defaults to "ENGLISH". ■ You can change the language group via the configuration software FieldCare. Please do not hesitate to contact your Endress+Hauser sales office if you have any questions.	Language group	ENGLISH	WEST EU / USA	DEUTSCH		FRANCAIS		ESPANOL		ITALIANO		NEDERLANDS		PORTUGUESE	Language group	ENGLISH	EAST EU / SCAND.	NORSK		SVENSKA		SUOMI		POLISH		CZECH		RUSSIAN	Language group ASIA	ENGLISH		BAHASA INDONESIA		JAPANESE (syllabary)	Language group	CHINESE	CHINESE	ENGLISH
Language group	ENGLISH																																						
WEST EU / USA	DEUTSCH																																						
	FRANCAIS																																						
	ESPANOL																																						
	ITALIANO																																						
	NEDERLANDS																																						
	PORTUGUESE																																						
Language group	ENGLISH																																						
EAST EU / SCAND.	NORSK																																						
	SVENSKA																																						
	SUOMI																																						
	POLISH																																						
	CZECH																																						
	RUSSIAN																																						
Language group ASIA	ENGLISH																																						
	BAHASA INDONESIA																																						
	JAPANESE (syllabary)																																						
Language group	CHINESE																																						
CHINESE	ENGLISH																																						
DISPLAY DAMPING (2002)	Use this function to enter a time constant defining how the display reacts to severely fluctuating flow variables, either very quickly (enter a low time constant) or with damping (enter a high time constant). User input: 0...100 seconds Factory setting: 1 s  Note! Setting the time constant to zero seconds switches off damping.																																						


Functional description USER INTERFACE → CONTROL → BASIC CONFIGURATION	
CONTRAST LCD (2003)	Use this function to optimize display contrast to suit local operating conditions. User input: 10...100% Factory setting: 50%
BACKLIGHT (2004)	Use this function to optimize the backlight to suit local operating conditions. User input: 10...100% Factory setting: 50%
X-LINE CALCULATED MAIN VALUES (2009)	Use this function to indicate which "calculated main value" from the measured values of both channels is displayed. The option CALCULATED VOLUME FLOW must be selected in the function ASSIGN (2200, main line), (2400, additional line), (2600, information line) so that the value appears in the line desired.  Note! This function does not appear if OFF was selected on at least one channel in the function MEASUREMENT (6880). Options: (CH1 + CH2)/2 CH1 + CH2 CH1 - CH2 Factory setting: (CH1 + CH2)/2

 5.1.2 Function group UNLOCKING/LOCKING



Functional description	
USER INTERFACE → CONTROL → UNLOCKING/LOCKING	
ACCESS CODE (2020)	All data of the measuring system are protected against inadvertent change. Programming is disabled and the settings cannot be changed until a code is entered in this function. If you press the  keys in any function, the measuring system automatically goes to this function and the prompt to enter the code appears on the display (when programming is disabled). You can enable programming by entering your personal code (factory setting = 93, see function). User input: max. 4-digit number: 0...9999  Note! ■ The programming levels are disabled if you do not press a key within 60 seconds following automatic return to the HOME position. ■ You can also disable programming in this function by entering any number (other than the defined private code). ■ The Endress+Hauser service organization can be of assistance if you mislay your personal code.
DEFINE PRIVATE CODE (2021)	Use this function to enter a personal code number for enabling programming. User input: 0...9999 (max. 4-digit number) Factory setting: 93  Note! ■ Programming is always enabled with the code "0". ■ Programming has to be enabled before this code can be changed. When programming is disabled this function is not available, thus preventing others from accessing your personal code.
STATUS ACCESS (2022)	Use this function to check the access status for the function matrix. User interface: ACCESS CUSTOMER (parameterization possible) LOCKED (parameterization disabled)
ACCESS CODE COUNTER (2023)	The number of times the private or service code was entered to access the device appears on the display. Display: Integer (delivery status: 0)


5.1.3 Function group OPERATION

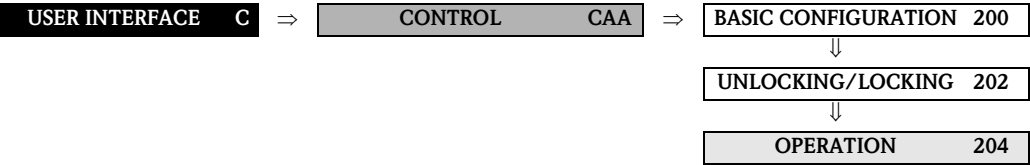

Functional description	
USER INTERFACE → CONTROL → OPERATION	
TEST DISPLAY (2040)	Use this function to test the operability of the local display and its pixels. Options: OFF ON Factory setting: OFF Test sequence: 1. Start the test by selecting ON. 2. All pixels of the main line, additional line and information line are darkened for minimum 0.75 seconds. 3. Main line, additional line and information line show an "8" in each field for minimum 0.75 seconds. 4. Main line, additional line and information line show a "0" in each field for minimum 0.75 seconds. 5. Main line, additional line and information line show nothing (blank display) for minimum 0.75 seconds. When the test completes the local display returns to its initial state and the setting changes to OFF.

5.2 Group MAIN LINE

 
5.2.1 Function group CONFIGURATION



Functional description	
USER INTERFACE → MAIN LINE → CONFIGURATION	
1 = Main line 2 = Additional line 3 = Information line	
ASSIGN (2200)	Use this function to define the display value assigned to the main line (the top line of the local display) during normal measuring operation. Options: OFF VOLUME FLOW (CH1...CH2) CALCULATED VOLUME FLOW VOLUME FLOW % (CH1...CH2) CALCULATED VOLUME FLOW % SOUND VELOCITY (CH1...CH2) SOUND VELOCITY AVERAGE SIGNAL STRENGTH (CH1...CH2) FLOW VELOCITY (CH1...CH2) FLOW VELOCITY AVERAGE ACTUAL CURRENT (1...3) ACTUAL FREQUENCY (1...2) TOTALIZER (1...3) Note! If a channel is not visible, it does not appear in the options. Channels can be displayed or hidden by means of the function MEASUREMENT (6880). Factory setting: VOLUME FLOW CH1 Advanced options with optional software package ADVANCED DIAGNOSTICS: DEVIATION VOLUME FLOW (CH1...CH2) DEVIATION VOLUME FLOW AVERAGE DEVIATION FLOW VELOCITY (CH1...CH2) DEVIATION FLOW VELOCITY AVERAGE DEVIATION SIGNAL STRENGTH (CH1...CH2) DEVIATION SOUND VELOCITY (CH1...CH2) DEVIATION SOUND VELOCITY AVERAGE DEVIATION ACTUAL TRANSIT TIME (CH1...CH2) DEVIATION ACCEPTANCE RATE (CH1...CH2)

Functional description	
USER INTERFACE → MAIN LINE → CONFIGURATION	
100% VALUE (2201)	 Note! This function is only available if VOLUME FLOW IN % or CALCULATED VOLUME FLOW IN % is selected in the function ASSIGN (2200). Use this function to define the flow value to be shown on the display as the 100% value. User input: 5-digit floating-point number Factory setting: 10l/s

5.2.2 Function group MULTIPLEX

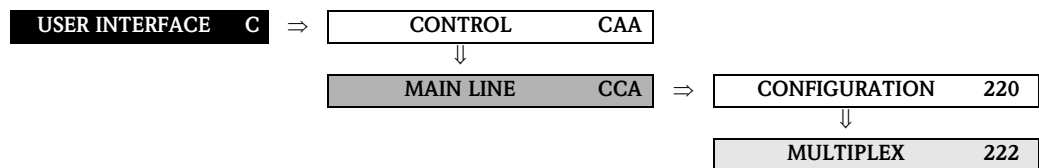



Functional description USER INTERFACE → MAIN LINE → MULTIPLEX	
ASSIGN (2220)	Use this function to define a second reading to be displayed in the main line alternatively (every 10 seconds) with the reading defined in the function ASSIGN (2200). Options: OFF VOLUME FLOW (CH1...CH2) CALCULATED VOLUME FLOW VOLUME FLOW % (CH1...CH2) CALCULATED VOLUME FLOW % SOUND VELOCITY (CH1...CH2) SOUND VELOCITY AVERAGE SIGNAL STRENGTH (CH1...CH2) FLOW VELOCITY (CH1...CH2) FLOW VELOCITY AVERAGE ACTUAL CURRENT (1...3) ACTUAL FREQUENCY (1...2) TOTALIZER (1...3) Note! If a channel is not visible, it does not appear in the options. Channels can be displayed or hidden by means of the function MEASUREMENT (6880). Factory setting: OFF Advanced options with optional software package ADVANCED DIAGNOSTICS: DEVIATION VOLUME FLOW (CH1...CH2) DEVIATION VOLUME FLOW AVERAGE DEVIATION FLOW VELOCITY (CH1...CH2) DEVIATION FLOW VELOCITY AVERAGE DEVIATION SIGNAL STRENGTH (CH1...CH2) DEVIATION SOUND VELOCITY (CH1...CH2) DEVIATION SOUND VELOCITY AVERAGE DEVIATION ACTUAL TRANSIT TIME (CH1...CH2) DEVIATION ACCEPTANCE RATE (CH1...CH2)
100% VALUE (2221)	Note! This function is only available if VOLUME FLOW % or CALCULATED VOLUME FLOW % is selected in the function ASSIGN (2200). Use this function to define the flow value to be shown on the display as the 100% value. User input: 5-digit floating-point number Factory setting: Depends on nominal diameter and country, [value] / [dm³...m³ or US-gal...US-Mgal] Corresponds to the factory setting for the full scale value (see Page 139 ff.).

Functional description	
USER INTERFACE → MAIN LINE → MULTIPLEX	
FORMAT (2222)	Use this function to define the maximum number of places after the decimal point for the second value displayed in the main line. Options: XXXXX. - XXXX.X - XXX.XX - XX.XXX -X.XXXX Factory setting: X.XXXX  Note! ■ Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations. ■ The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → m³/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.

5.3 Group ADDITIONAL LINE


5.3.1 Function group CONFIGURATION

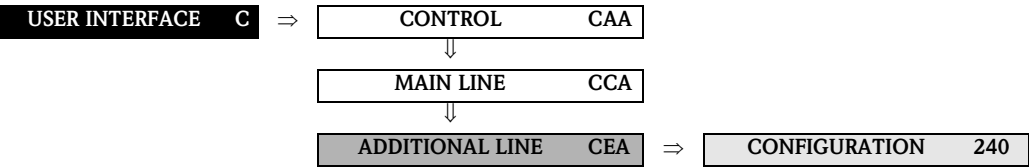

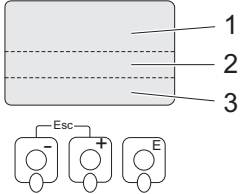Functional description	
USER INTERFACE → ADDITIONAL LINE → CONFIGURATION	
1 = Main line 2 = Additional line 3 = Information line  A0001253	
ASSIGN (2400)	Use this function to define the display value assigned to the additional line (the middle line of the local display) during normal measuring operation. Options: OFF VOLUME FLOW (CH1...CH2) CALCULATED VOLUME FLOW VOLUME FLOW % (CH1...CH2) CALCULATED VOLUME FLOW % SOUND VELOCITY (CH1...CH2) SOUND VELOCITY AVERAGE SIGNAL STRENGTH (CH1...CH2) FLOW VELOCITY (CH1...CH2) FLOW VELOCITY AVERAGE VOLUME FLOW BARGRAPH IN % (CH1...CH2) CALCULATED VOLUME FLOW BARGRAPH % (CH1...CH2) SIGNAL STRENGTH BARGRAPH % (CH1...CH2) ACTUAL CURRENT (1...3) ACTUAL FREQUENCY (1...2) TOTALIZER (1...3) TAG NAME FLOW DIRECTION (CH1...CH2) CALCULATED FLOW DIRECTION Factory setting: TOTALIZER 1  Note! If a channel is not visible, it does not appear in the options. Channels can be displayed or hidden by means of the function MEASUREMENT (6880). Advanced options with optional software package ADVANCED DIAGNOSTICS: DEVIATION VOLUME FLOW (CH1...CH2) DEVIATION VOLUME FLOW AVERAGE DEVIATION FLOW VELOCITY (CH1...CH2) DEVIATION FLOW VELOCITY AVERAGE DEVIATION SIGNAL STRENGTH (CH1...CH2) DEVIATION SOUND VELOCITY (CH1...CH2) DEVIATION SOUND VELOCITY AVERAGE DEVIATION ACTUAL TRANSIT TIME (CH1...CH2) DEVIATION ACCEPTANCE RATE (CH1...CH2)

Functional description	
USER INTERFACE → ADDITIONAL LINE → CONFIGURATION	
100% VALUE (2401)	 Note! This function is not available unless one of the following was selected in the function ASSIGN (2400): ■ VOLUME FLOW % ■ VOLUME FLOW BARGRAPH % ■ CALCULATED VOLUME FLOW % ■ CALCULATED VOLUME FLOW BARGRAPH % Use this function to define the flow value to be shown on the display as the 100% value. User input: 5-digit floating-point number Factory setting: Depends on nominal diameter and country, [value] / [dm³...m³ or US-gal...US-Mgal] Corresponds to the factory setting for the full scale value (see Page 139 ff.).
FORMAT (2402)	 Note! This function is not available unless a number was selected in the function ASSIGN (2400). Use this function to define the maximum number of places after the decimal point displayed for the reading in the additional line. Options: XXXXX. - XXXX.X - XXX.XX - XX.XXX -X.XXXX Factory setting: X.XXXX  Note! ■ Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations. ■ The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → m³/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.
DISPLAY MODE (2403)	 Note! This function is only available if VOLUME FLOW BARGRAPH IN % or CALCULATED VOLUME FLOW BARGRAPH IN % was selected in the function ASSIGN (2420). Use this function to define the format of the bar graph. Options: STANDARD (Simple bar graph with 25 / 50 / 75% gradations and integrated sign).  A0001258 SYMMETRY (Symmetrical bar graph for positive and negative directions of flow, with -50 / 0 / +50% gradations and integrated sign).  A0001259 Factory setting: STANDARD

5.3.2 Function group MULTIPLEX

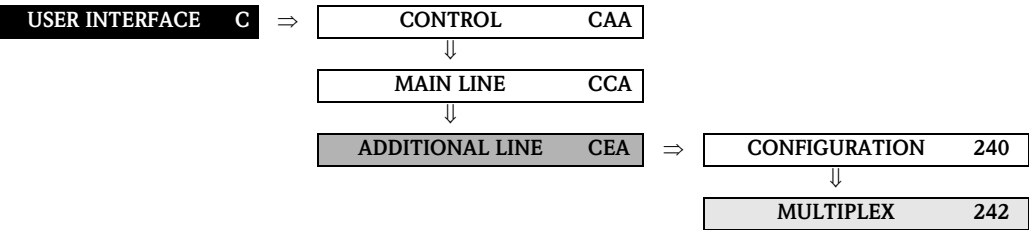



Functional description	
USER INTERFACE → ADDITIONAL LINE → MULTIPLEX	
ASSIGN (2420)	Use this function to define the second reading to be displayed in the additional line alternately (every 10 seconds) with the value defined in the function ASSIGN (2400). Options: OFF VOLUME FLOW (CH1...CH2) CALCULATED VOLUME FLOW VOLUME FLOW % (CH1...CH2) CALCULATED VOLUME FLOW % SOUND VELOCITY (CH1...CH2) SOUND VELOCITY AVERAGE SIGNAL STRENGTH (CH1...CH2) FLOW VELOCITY (CH1...CH2) FLOW VELOCITY AVERAGE VOLUME FLOW BARGRAPH IN % (CH1...CH2) CALCULATED VOLUME FLOW BARGRAPH % (CH1...CH2) SIGNAL STRENGTH BARGRAPH % (CH1...CH2) ACTUAL CURRENT (1...3) ACTUAL FREQUENCY (1...2) TOTALIZER (1...3) TAG NAME FLOW DIRECTION (CH1...CH2) CALCULATED FLOW DIRECTION Factory setting: OFF  Note! Multiplex mode is suspended as soon as a fault / notice message is generated. The message in question appears on the display. ■ Fault message (identified by a lightning icon): – If ON was selected in the function ACKNOWLEDGE FAULTS (8004), multiplex mode is resumed as soon as the fault has been acknowledged and is no longer active. – If OFF was selected in the function ACKNOWLEDGE FAULTS (8004), multiplex mode is resumed as soon as the fault is no longer active. ■ Notice message (identified by an exclamation mark): – Multiplex mode is resumed as soon as the notice message is no longer active. If a channel is not visible, it does not appear in the options. Channels can be displayed or hidden by means of the function MEASUREMENT (6880). Advanced options with optional software package ADVANCED DIAGNOSTICS: DEVIATION VOLUME FLOW (CH1...CH2) DEVIATION VOLUME FLOW AVERAGE DEVIATION FLOW VELOCITY (CH1...CH2) DEVIATION FLOW VELOCITY AVERAGE DEVIATION SIGNAL STRENGTH (CH1...CH2) DEVIATION SOUND VELOCITY (CH1...CH2) DEVIATION SOUND VELOCITY AVERAGE DEVIATION ACTUAL TRANSIT TIME (CH1...CH2) DEVIATION ACCEPTANCE RATE (CH1...CH2)

Functional description	
USER INTERFACE → ADDITIONAL LINE → MULTIPLEX	
100% VALUE (2421)	 Note! This function is not available unless one of the following was selected in the function ASSIGN (2420): ■ VOLUME FLOW % ■ VOLUME FLOW BARGRAPH % ■ CALCULATED VOLUME FLOW % ■ CALCULATED VOLUME FLOW BARGRAPH % Use this function to define the flow value to be shown on the display as the 100% value. User input: 5-digit floating-point number Factory setting: Depends on nominal diameter and country, [value] / [dm³...m³ or US-gal...US-Mgal] Corresponds to the factory setting for the full scale value (see Page 139 ff.).
FORMAT (2422)	 Note! This function is not available unless a number was selected in the function ASSIGN (2420). Use this function to define the maximum number of places after the decimal point for the second value displayed in the additional line. Options: XXXXX. - XXXX.X - XXX.XX - XX.XXX -X.XXXX Factory setting: X.XXXX  Note! ■ Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations. ■ The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → m³/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.
DISPLAY MODE (2423)	 Note! This function is only available if VOLUME FLOW BARGRAPH IN % or CALCULATED VOLUME FLOW BARGRAPH IN % was selected in the function ASSIGN (2420). Use this function to define the format of the bar graph. Options: STANDARD (Simple bar graph with 25 / 50 / 75% gradations and integrated sign).  A0001258 SYMMETRY (Symmetrical bar graph for positive and negative directions of flow, with -50 / 0 / +50% gradations and integrated sign).  A0001259 Factory setting: STANDARD

5.4 Group INFORMATION LINE


5.4.1 Function group CONFIGURATION

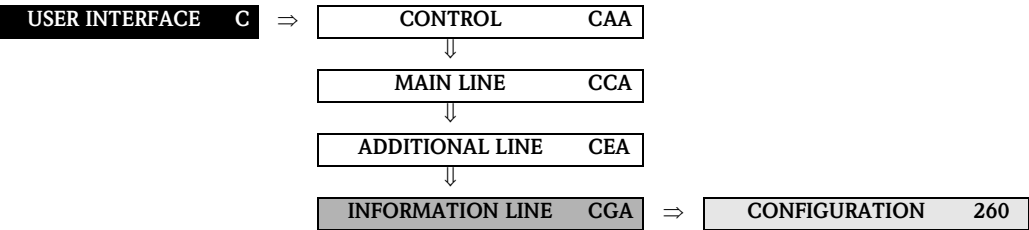

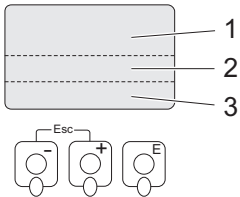Functional description	
USER INTERFACE → INFORMATION LINE → CONFIGURATION	
1 = Main line 2 = Additional line 3 = Information line 	
ASSIGN (2600)	Use this function to define the display value assigned to the information line (the bottom line of the local display) during normal measuring operation. Options: OFF VOLUME FLOW (CH1...CH2) CALCULATED VOLUME FLOW VOLUME FLOW % (CH1...CH2) CALCULATED VOLUME FLOW IN % SOUND VELOCITY (CH1...CH2) SOUND VELOCITY AVERAGE SIGNAL STRENGTH (CH1...CH2) FLOW VELOCITY (CH1...CH2) FLOW VELOCITY AVERAGE VOLUME FLOW BARGRAPH % (CH1...CH2) CALCULATED VOLUME FLOW BARGRAPH % (CH1...CH2) SIGNAL STRENGTH BARGRAPH % (CH1...CH2) ACTUAL CURRENT (1...3) ACTUAL FREQUENCY (1...2) TOTALIZER (1...3) TAG NAME OPERATING/SYSTEM CONDITIONS FLOW DIRECTION (CH1...CH2) CALCULATED FLOW DIRECTION Factory setting: OPERATING/SYSTEM CONDITIONS  Note! If a channel is not visible, it does not appear in the options. Channels can be displayed or hidden by means of the function MEASUREMENT (6880). Advanced options with optional software package ADVANCED DIAGNOSTICS: DEVIATION VOLUME FLOW (CH1...CH2) DEVIATION VOLUME FLOW AVERAGE DEVIATION FLOW VELOCITY (CH1...CH2) DEVIATION FLOW VELOCITY AVERAGE DEVIATION SIGNAL STRENGTH (CH1...CH2) DEVIATION SOUND VELOCITY (CH1...CH2) DEVIATION SOUND VELOCITY AVERAGE DEVIATION ACTUAL TRANSIT TIME (CH1...CH2) DEVIATION ACCEPTANCE RATE (CH1...CH2)

Functional description	
USER INTERFACE → INFORMATION LINE → CONFIGURATION	
100% VALUE (2601)	 Note! This function is not available unless one of the following was selected in the function ASSIGN (2400): ■ VOLUME FLOW % ■ VOLUME FLOW BARGRAPH % ■ CALCULATED VOLUME FLOW % ■ CALCULATED VOLUME FLOW BARGRAPH % Use this function to define the flow value to be shown on the display as the 100% value. User input: 5-digit floating-point number Factory setting: Depends on nominal diameter and country, [value] / [dm³...m³ or US-gal...US-Mgal] Corresponds to the factory setting for the full scale value (see Page 139 ff.).
FORMAT (2602)	 Note! This function is not available unless a number was selected in the function ASSIGN (2600). Use this function to define the maximum number of places after the decimal point displayed for the reading in the information line. Options: XXXXX. - XXXX.X - XXX.XX - XX.XXX -X.XXXX Factory setting: X.XXXX  Note! ■ Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations. ■ The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → m³/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.
DISPLAY MODE (2603)	 Note! This function is only available if VOLUME FLOW BARGRAPH IN % or CALCULATED VOLUME FLOW BARGRAPH IN % was selected in the function ASSIGN (2600). Use this function to define the format of the bar graph. Options: STANDARD (Simple bar graph with 25 / 50 / 75% gradations and integrated sign).  A0001258 SYMMETRY (Symmetrical bar graph for positive and negative directions of flow, with -50 / 0 / +50% gradations and integrated sign).  A0001259 Factory setting: STANDARD


5.4.2 Function group MULTIPLEX

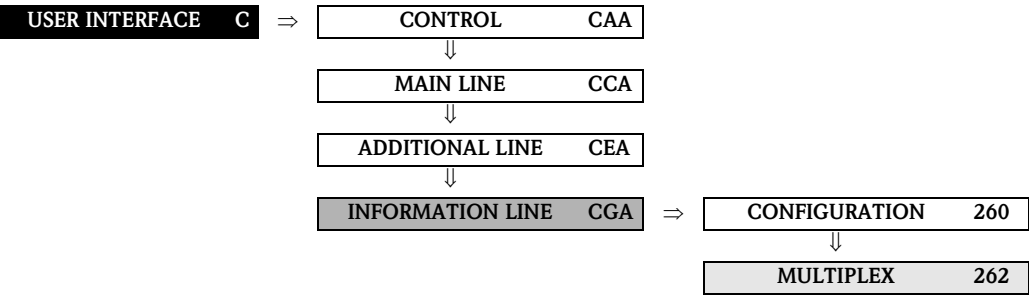

Functional description	
USER INTERFACE → INFORMATION LINE → MULTIPLEX	
ASSIGN (2620)	Use this function to define the second reading to be displayed in the information line alternately (every 10 seconds) with the value defined in the function ASSIGN (2600). Options: OFF VOLUME FLOW (CH1...CH2) CALCULATED VOLUME FLOW VOLUME FLOW % (CH1...CH2) CALCULATED VOLUME FLOW IN % SOUND VELOCITY (CH1...CH2) SOUND VELOCITY AVERAGE SIGNAL STRENGTH (CH1...CH2) FLOW VELOCITY (CH1...CH2) FLOW VELOCITY AVERAGE VOLUME FLOW BARGRAPH % (CH1...CH2) CALCULATED VOLUME FLOW BARGRAPH % (CH1...CH2) SIGNAL STRENGTH BARGRAPH % (CH1...CH2) ACTUAL CURRENT (1...3) ACTUAL FREQUENCY (1...2) TOTALIZER (1...3) TAG NAME OPERATING/SYSTEM CONDITIONS FLOW DIRECTION (CH1...CH2) CALCULATED FLOW DIRECTION Factory setting: OFF Note! Multiplex mode is suspended as soon as a fault / notice message is generated. The message in question appears on the display. ■ Fault message (identified by a lightning icon): - If ON was selected in the function ACKNOWLEDGE FAULTS (8004), multiplex mode is resumed as soon as the fault has been acknowledged and is no longer active. - If OFF was selected in the function ACKNOWLEDGE FAULTS (8004), multiplex mode is resumed as soon as the fault is no longer active. ■ Notice message (identified by an exclamation mark): - Multiplex mode is resumed as soon as the notice message is no longer active. Advanced options with optional software package ADVANCED DIAGNOSTICS: DEVIATION VOLUME FLOW (CH1...CH2) DEVIATION VOLUME FLOW AVERAGE DEVIATION FLOW VELOCITY (CH1...CH2) DEVIATION FLOW VELOCITY AVERAGE DEVIATION SIGNAL STRENGTH (CH1...CH2) DEVIATION SOUND VELOCITY (CH1...CH2) DEVIATION SOUND VELOCITY AVERAGE DEVIATION ACTUAL TRANSIT TIME (CH1...CH2) DEVIATION ACCEPTANCE RATE (CH1...CH2)


Functional description	
USER INTERFACE → INFORMATION LINE → MULTIPLEX	
100% VALUE (2621)	 Note! This function is not available unless one of the following was selected in the function ASSIGN (2400): ■ VOLUME FLOW % ■ VOLUME FLOW BARGRAPH % ■ CALCULATED VOLUME FLOW % ■ CALCULATED VOLUME FLOW BARGRAPH % Use this function to define the flow value to be shown on the display as the 100% value. User input: 5-digit floating-point number Factory setting: Depends on nominal diameter and country, [value] / [dm³...m³ or US-gal...US-Mgal] Corresponds to the factory setting for the full scale value (see Page 139 ff.).
FORMAT (2622)	 Note! This function is not available unless a number was selected in the function ASSIGN (2600). Use this function to define the maximum number of places after the decimal point for the second value displayed in the information line. Options: XXXXX. - XXXX.X - XXX.XX - XX.XXX -X.XXXX Factory setting: X.XXXX  Note! ■ Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations. ■ The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → m³/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.
DISPLAY MODE (2623)	 Note! This function is only available if VOLUME FLOW BARGRAPH IN % or CALCULATED VOLUME FLOW BARGRAPH IN % was selected in the function ASSIGN (2620). Use this function to define the format of the bar graph. Options: STANDARD (Simple bar graph with 25 / 50 / 75% gradations and integrated sign). +25 +50 +75 % A0001258 SYMMETRY (Symmetrical bar graph for positive and negative directions of flow, with -50 / 0 / +50% gradations and integrated sign). -50 - +50 % A0001259 Factory setting: STANDARD

6 Block TOTALIZER

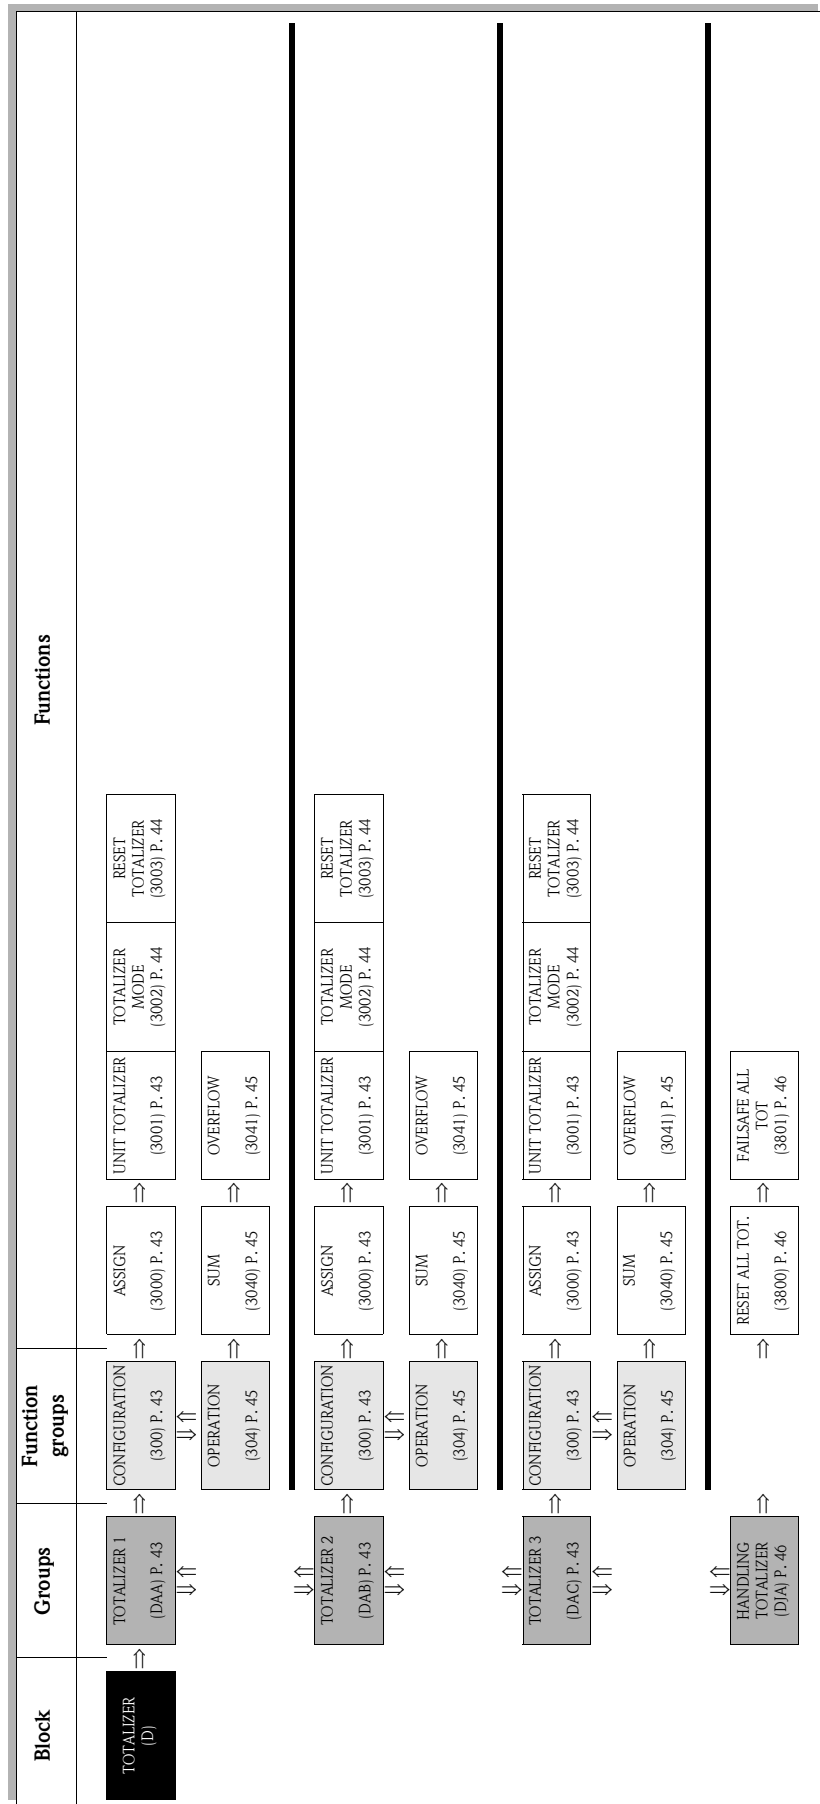

6.1 Group TOTALIZER (1...3)


6.1.1 Function group CONFIGURATION

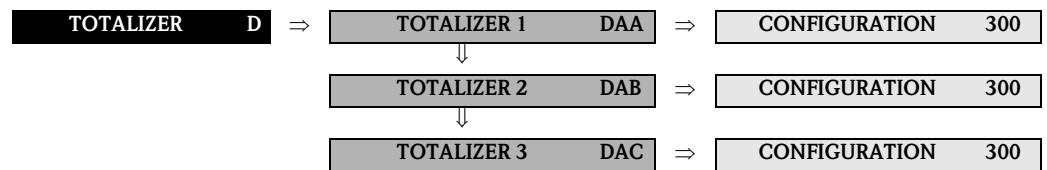

Functional description	
TOTALIZER → TOTALIZER (1...3) → CONFIGURATION	
The function descriptions below apply to totalizers 1...3; the totalizers are independently configurable.	
ASSIGN (3000)	Use this function to assign a measured variable to the totalizer in question. Options: OFF VOLUME FLOW (CH1...CH2) VOLUME FLOW AVERAGE VOLUME FLOW SUM (CH1+CH2) VOLUME FLOW DIFFERENCE (CH1-CH2) Factory setting: CH1 VOLUME FLOW Note! ■ The totalizer is reset to "0" as soon as the selection is changed. ■ If you select OFF in the function group CONFIGURATION of the totalizer in question, only the ASSIGN (3000) function remains visible.
UNIT TOTALIZER (3001)	Use this function to define the unit for the totalizer's measured variable, as selected beforehand. Options: Metric cm³; dm³; m³; ml; l; hl; Ml US cc; af; ft³; oz f; gal; Mgal; bbl (normal fluids); bbl (beer); bbl (petrochemicals); bbl (filling tanks); US Kgal Imperial gal; Mgal; bbl (beer); bbl (petrochemicals) Arbitrary unit ____ (see function group ARBITRARY UNIT on Page 16) Factory setting: m³


Functional description TOTALIZER → TOTALIZER (1...3) → CONFIGURATION	
TOTALIZER MODE (3002)	Use this function to define how the flow components are to be totaled by the totalizer in question. Options: BALANCE Positive and negative flow components. The positive and negative flow components are balanced. In other words, net flow in the flow direction is registered. FORWARD Positive flow components only REVERSE Negative flow components only Factory setting: Totalizer 1 = BALANCE Totalizer 2 = FORWARD Totalizer 3 = REVERSE
RESET TOTALIZER (3003)	Use this function to reset the sum and the overflow of the totalizer in question (1...3) to zero. Options: NO YES Factory setting: NO  Note! If the device is equipped with a status input, with the appropriate configuration a reset for each individual totalizer can also be triggered by a pulse (see function ASSIGN STATUS INPUT (5000) on page 95).

6.1.2 Function group OPERATION

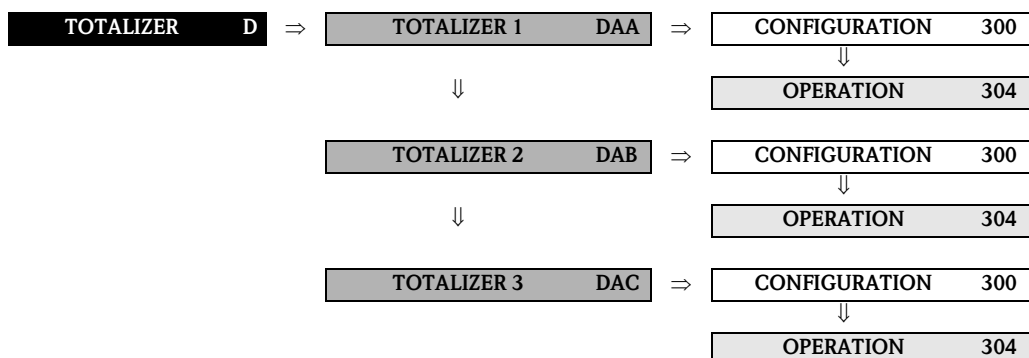

Functional description	
TOTALIZER → TOTALIZER (1...3) → OPERATION	
The function descriptions below apply to totalizers 1...3; the totalizers are independently configurable.	
SUM (3040)	Use this function to view the total for the particular totalizer's measured variable aggregated since measuring commenced. The value can be positive or negative, depending on the setting selected in the "TOTALIZER MODE" function (3002), and the direction of flow. User interface: max. 7-digit floating-point number, including sign and unit (e.g. 15467.04 m³;  Note! ■ The effect of the setting in the "TOTALIZER MODE" function (see Page 44) is as follows: – If the setting is "BALANCE", the totalizer balances flow in the positive and negative directions. – If the setting is "POSITIVE", the totalizer registers only flow in the positive direction. – If the setting is "NEGATIVE", the totalizer registers only flow in the negative direction. ■ The totalizer's response to faults is defined in the "FAILSAFE ALL TOTALIZERS" function (3801) (see Page 46).
OVERFLOW (3041)	Use this function to view the totaled overflow for the particular totalizer aggregated since measuring commenced. Total flow quantity is represented by a floating-point number consisting of max. 7 digits. You can use this function to view higher numerical values (>9,999,999) as overflows. The effective quantity is thus the total of OVERFLOW plus the value returned by the SUM function. Example: Reading for 2 overflows: 2 10⁷ dm³ (= 20,000,000 dm³) The value displayed in the function SUM = 196 dm³ Effective total quantity = 20,196,845.7 dm³ User interface: Integer with exponent, including sign and unit, e.g. 2 10⁷ dm³

6.2 Group HANDLING TOTALIZER

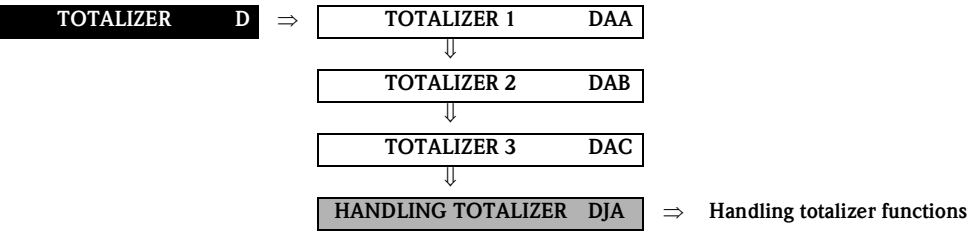


Functional description	
TOTALIZER → HANDLING TOTALIZER → Handling totalizer functions	
RESET ALL TOTALIZERS (3800)	Use this function to reset the totals (including all overflows) of the totalizers (1...3) to "zero" (= RESET). Options: NO YES Factory setting: NO  Note! If the device is equipped with a status input and if it is appropriately configured, a reset for the totalizer (1...3) can also be triggered by a pulse (see function ASSIGN STATUS INPUT (5000) on page 95).
FAILSAFE ALL TOTALIZERS (3801)	Use this function to define the common response of all totalizers (1...3) in case of error. Options: STOP The totalizer is paused until the fault is rectified. ACTUAL VALUE The totalizer continues to count based on the current flow measuring value. The fault is ignored. HOLD VALUE The totalizer continues to count the flow is based on the last valid flow value (before the fault occurred). Factory setting: STOP

7 Block OUTPUTS


Block	Groups	Function groups	Functions													
OUTPUTS (E)	CURRENT OUTPUT (1...3) (EAA,B,C) P. 48	CONFIGURATION (400) P. 48	⇒	ASSIGN CURRENT (4000) P. 48	⇔	CURRENT SPAN (4001) P. 49	VALUE 0.4 mA (4002) P. 50	VALUE 20 mA (4003) P. 52	MEASURING MODE (4004) P. 53	TIME CONSTANT (4005) P. 55	FAILSAFE MODE (4006) P. 56					
			⇕	⇕												
		OPERATION (404) P. 57	⇔	ACTUAL CURRENT (4040) P. 57	⇔	SIMULATION CURRENT (4041) P. 57	VALUE SIMUL. CURRENT (4042) P. 57									
			⇕	⇕												
	PUL./FREQ. OUTP. (1...2) (ECA,B) P. 59	CONFIGURATION (420) P. 59	⇕	TERMINAL NUMBER (4080) P. 58	⇔	OPERATION MODE (4200) P. 59	⇔	ASSIGN FREQUENCY (4201) P. 59	START VALUE FREQUENCY (4202) P. 60	END VALUE FREQUENCY (4203) P. 60	VALUE f LOW (4204) P. 61	VALUE f HIGH (4205) P. 61	MEASURING MODE (4206) P. 63	OUTPUT SIGNAL (4207) P. 65	TIME CONSTANT (4208) P. 67	FAILSAFE MODE (4209) P. 68
			⇕	⇕												
		OPERATION (430) P. 80	⇕													
			⇕													
	RELAY OUTPUT (1...2) (ECA) P. 85	INFORMATION (438) P. 84	⇕	TERMINAL NUMBER (4380) P. 84	⇔	ACTUAL FREQ. (4301) P. 80	SIMULATION FREQ. (4302) P. 80	VALUE SIM. FREQ. (4303) P. 81								
			⇕	⇕												
			ASSIGN STATUS (4241) P. 76	ON-VALUE (4242) P. 77	SWITCH-ON DELAY (4243) P. 77	OFF-VALUE (4244) P. 77	SWITCH-OFF DELAY (4245) P. 78	MEASURING MODE (4246) P. 78	TIME CONSTANT (4247) P. 79							
		CONFIGURATION (470) P. 85	⇕	ASSIGN RELAY (4700) P. 85	⇔	ON-VALUE (4701) P. 86	SWITCH-ON DELAY (4702) P. 87	OFF-VALUE (4703) P. 87	SWITCH-OFF DELAY (4704) P. 87	MEASURING MODE (4705) P. 88	TIME CONSTANT (4706) P. 88					
			⇕	⇕												
		OPERATION (474) P. 89	⇕	ACTUAL STATUS/REL. SWITCH PT (4741) P. 89	⇔	SIMUL. SWITCH POINT (4742) P. 90										
			⇕	⇕												
INFORMATION (478) P. 91		⇕	TERMINAL NUMBER (4780) P. 91	⇔												
		⇕	⇕													


7.1 Group CURRENT OUTPUT (1...3)

7.1.1 Function group CONFIGURATION

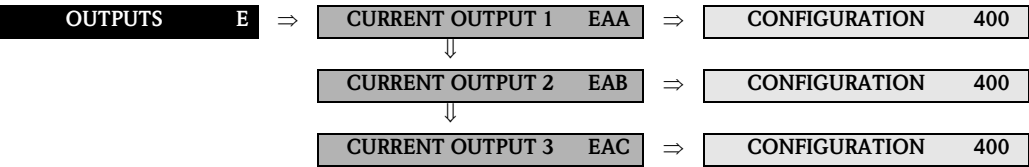



Functional description	
OUTPUTS → CURRENT OUTPUT (1...3) → CONFIGURATION	
ASSIGN CURRENT OUTPUT (4000)	Use this function to assign a measured variable to the current output. Options: OFF VOLUME FLOW (CH1...CH2) VOLUME FLOW AVERAGE VOLUME FLOW SUM (CH1+CH2) VOLUME FLOW DIFFERENCE (CH1-CH2) SOUND VELOCITY (CH1...CH2) SOUND VELOCITY AVERAGE SIGNAL STRENGTH (CH1...CH2) FLOW VELOCITY (CH1...CH2) FLOW VELOCITY AVERAGE Factory setting: VOLUME FLOW CH1  Note! If you select OFF, the only function shown in the function group CONFIGURATION (400) is this function, in other words, ASSIGN CURRENT OUTPUT (4000). Advanced options with optional software package ADVANCED DIAGNOSTICS: DEVIATION VOLUME FLOW (CH1...CH2) DEVIATION VOLUME FLOW AVERAGE DEVIATION FLOW VELOCITY (CH1...CH2) DEVIATION FLOW VELOCITY AVERAGE DEVIATION SIGNAL STRENGTH (CH1...CH2) DEVIATION SOUND VELOCITY (CH1...CH2) DEVIATION SOUND VELOCITY AVERAGE DEVIATION ACTUAL TRANSIT TIME (CH1...CH2) DEVIATION ACCEPTANCE RATE (CH1...CH2)

 Functional description																																													
OUTPUTS → CURRENT OUTPUT (1...3) → CONFIGURATION																																													
CURRENT SPAN (4001)	Use this function to define the current span. The selection specifies the operational range and the lower and upper signal on alarm. For the current output 1 the option HART can be defined additionally. Options: 0–20 mA 4–20 mA 4–20 mA HART (only current output1) 4–20 mA NAMUR 4–20 mA HART NAMUR (only current output1) 4–20 mA US 4–20 mA HART US (only current output1) 0–20 mA (25 mA) 4–20 mA (25 mA) 4–20 mA (25 mA) HART (only current output1) Factory setting: 4–20 mA HART NAMUR (für current output 1) 4–20 mA NAMUR (für current output 2)  Note! ■ The option HART is only supported by the current output designated as current output 1 in the device software, (terminals 26 and 27, see function TERMINAL NUMBER (4080) on Page 58). ■ When switching the hardware from an active (factory setting) to a passive output signal select a current span of 4–20 mA, (Operating Instructions Proline Prosonic Flow 93, BA070D/06/en/.) Current span, operational range and signal on alarm level  <table><tr><th>a</th><th>1</th><th>2</th><th>3</th></tr><tr><td>0-20 mA</td><td>0 - 20.5 mA</td><td>0</td><td>22</td></tr><tr><td>4-20 mA</td><td>4 - 20.5 mA</td><td>2</td><td>22</td></tr><tr><td>4-20 mA HART</td><td>4 - 20.5 mA</td><td>2</td><td>22</td></tr><tr><td>4-20 mA NAMUR</td><td>3.8 - 20.5 mA</td><td>3.5</td><td>22.6</td></tr><tr><td>4-20 mA HART NAMUR</td><td>3.8 - 20.5 mA</td><td>3.5</td><td>22.6</td></tr><tr><td>4-20 mA US</td><td>3.9 - 20.8 mA</td><td>3.75</td><td>22.6</td></tr><tr><td>4-20 mA HART US</td><td>3.9 - 20.8 mA</td><td>3.75</td><td>22.6</td></tr><tr><td>0-20 mA (25 mA)</td><td>0 - 24 mA</td><td>0</td><td>25</td></tr><tr><td>4-20 mA (25 mA)</td><td>4 - 24 mA</td><td>2</td><td>25</td></tr><tr><td>4-20 mA (25 mA) HART</td><td>4 - 24 mA</td><td>2</td><td>25</td></tr></table> A0001222 <i>A = Current span</i> <i>1 = Operational range (measuring information)</i> <i>2 = Lower signal on alarm level</i> <i>3 = Upper signal on alarm level</i>  Note! ■ If the measured value exceeds the measuring range (as defined in the functions VALUE 0_4 mA (4002) and VALUE 20 mA (4003)) a notice message is generated (#351–354, current span). ■ In case of a fault the behaviour of the current output is according to the selected option in the function FAILSAFE MODE (4006.) Change the error category in the function ASSIGN SYSTEM ERROR (8000) to generate a fault message instead of a notice message.	a	1	2	3	0-20 mA	0 - 20.5 mA	0	22	4-20 mA	4 - 20.5 mA	2	22	4-20 mA HART	4 - 20.5 mA	2	22	4-20 mA NAMUR	3.8 - 20.5 mA	3.5	22.6	4-20 mA HART NAMUR	3.8 - 20.5 mA	3.5	22.6	4-20 mA US	3.9 - 20.8 mA	3.75	22.6	4-20 mA HART US	3.9 - 20.8 mA	3.75	22.6	0-20 mA (25 mA)	0 - 24 mA	0	25	4-20 mA (25 mA)	4 - 24 mA	2	25	4-20 mA (25 mA) HART	4 - 24 mA	2	25
a	1	2	3																																										
0-20 mA	0 - 20.5 mA	0	22																																										
4-20 mA	4 - 20.5 mA	2	22																																										
4-20 mA HART	4 - 20.5 mA	2	22																																										
4-20 mA NAMUR	3.8 - 20.5 mA	3.5	22.6																																										
4-20 mA HART NAMUR	3.8 - 20.5 mA	3.5	22.6																																										
4-20 mA US	3.9 - 20.8 mA	3.75	22.6																																										
4-20 mA HART US	3.9 - 20.8 mA	3.75	22.6																																										
0-20 mA (25 mA)	0 - 24 mA	0	25																																										
4-20 mA (25 mA)	4 - 24 mA	2	25																																										
4-20 mA (25 mA) HART	4 - 24 mA	2	25																																										

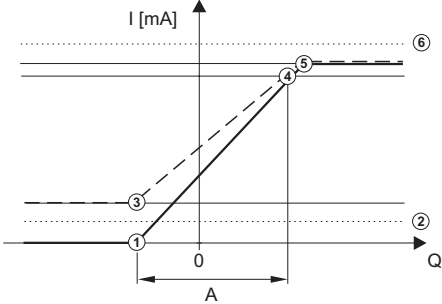Functional description	
OUTPUTS → CURRENT OUTPUT (1...3) → CONFIGURATION	
VALUE 0_4 mA (4002)	Use this function to assign the 0/4 mA current a value. The value can be greater or less than the value assigned to 20 mA (function VALUE 20 mA (4003)). Positive and negative values are permissible, depending on the measured variable in question (e.g. CH1 volume flow). Example: 4 mA assigned value = – 250 l/h 20 mA assigned value = +750 l/h Calculated current value = 8 mA (at zero flow) Note that values with different signs cannot be entered for 0/4 mA and 20 mA (function 4003) if SYMMETRY is the setting selected for the MEASURING MODE function (4004). In this case the message "INPUT RANGE EXCEEDED" appears on the display. Example for STANDARD measuring mode:  ① = Initial value (0...20 mA) ② = Lower signal on alarm level:: depends on the setting in the function CURRENT SPAN ③ = Initial value (4...20 mA); depends on the setting in the function CURRENT SPAN ④ = Full scale value (0/4...20 mA); depends on the setting in the function CURRENT SPAN ⑤ = Maximum current value: depends on the setting in the function CURRENT SPAN ⑥ = Failsafe mode (upper signal on alarm level); depends on the setting in the functions CURRENT SPAN (see Page 49) and FAILSAFE MODE, (see Page 56) A = Measuring range (the minimum measuring range has to exceed the value that correlates with a flow velocity of 0.3 m/s) User input: 5-digit floating-point number, with sign Factory setting: 0 [unit]  Note! ■ The appropriate unit is taken from the function UNIT VOLUME FLOW (0402) (see Page 13). ■ For details on current span, operational range and signal on alarm level see Page 49.  Caution! The current output responds differently, depending on the parameters set in the various functions. Some examples of parameter settings and their effect on the current output are given in the following section. (Continued on next page)

Functional description	
OUTPUTS → CURRENT OUTPUT (1...3) → CONFIGURATION	
VALUE 0_4 mA (Continued)	Parameter setting example A: - VALUE 0_4 mA (4002) = not equal to zero flow (e.g. -5 m³/h) VALUE 20 mA (4003) = not equal to zero flow (e.g. 10 m³/h) or - VALUE 0_4 mA (4002) = not equal to zero flow (e.g. 100 m³/h) VALUE 20 mA (4003) = not equal to zero flow (e.g. -40 m³/h) and MEASURING MODE (4004) = STANDARD When you enter the values for 0/4 mA and 20 mA, the working range of the measuring device is defined. If the effective flow drops below or exceeds this working range (see ①), a fault/notice message is generated (#351-354, current range) and the current output responds in accordance with the parameter settings in the function FAILSAFE MODE (4006). 1) 2) Parameter setting example B: - VALUE 0_4 mA (4002) = equal to zero flow (e.g. 0 m³/h) VALUE 20 mA (4003) = not equal to zero flow (e.g. 10 m³/h) or - VALUE 0_4 mA (4002) = not equal to zero flow (e.g. 100 m³/h) VALUE 20 mA (4003) = equal to zero flow (e.g. 0 m³/h) and MEASURING MODE (4004) = STANDARD When you enter the values for 0/4 mA and 20 mA, the working range of the measuring device is defined. In doing so, one of the two values is parameterised as zero flow (e.g. 0 m³/h). If the effective flow drops below or exceeds the value parameterised as the zero flow, no fault/notice message is generated and the current output retains its value. If the effective flow drops below or exceeds the other value, a fault/notice message is generated (#351-354, current range) and the current output responds in accordance with the parameter settings in the function FAILSAFE MODE (4006). 1) 2) Deliberately only one flow direction is output with this setting and flow values in the other flow direction are suppressed. Parameter setting example C: MEASURING MODE (4004) = SYMMETRY The current output signal is independent of the direction of flow (absolute amount of the measured variable). The 0_4 mA value ① and the 20 mA value ② must have the same sign (+ or -). The "20 mA VALUE" ③ (e.g. backflow) corresponds to the mirrored 20 mA VALUE ② (e.g. flow). ASSIGN RELAY (4700) = FLOW DIRECTION With this setting e.g. the flow direction output via a switching contact can be made. Parameter setting example D: MEASURING MODE (4004) = PULSATING FLOW

Functional description	
OUTPUTS → CURRENT OUTPUT (1...3) → CONFIGURATION	
VALUE 20 mA (4003)	Use this function to assign the 20 mA current a value. The value can be greater or less than the value assigned to 0/4 mA, (function VALUE 0_4 mA (4002)). Positive and negative values are permissible, depending on the measured variable in question (e.g. volume flow). The assignment applies for both flow directions for measuring mode SYMMETRY (see Page 53) and only for the selected flow direction for measuring mode STANDARD. Example: 4 mA assigned value = – 250 l/h 20 mA assigned value = +750 l/h Calculated current value = 8 mA (at zero flow) Note that values with different signs cannot be entered for 0/4 mA (function 4002) and 20 mA if SYMMETRY is the setting selected in the function MEASURING MODE (4004). In this case the message "INPUT AREA EXCEEDED" appears. User input: 5-digit floating-point number, with sign Factory setting: depends on the setting in the function ASSIGN CURRENT OUTPUT (4000): volume flow: 20 l/s sound velocity: 1800 m/s flow velocity: 10 m/s corresponds to the factory setting for the final value.  Note! ■ The appropriate unit is taken from the function UNIT VOLUME FLOW (0402) (see Page 13). ■ For an example for STANDARD measuring mode see Page 50. ■ If a channel is not visible, it does not appear in the options. Channels can be displayed or hidden by means of the function MEASUREMENT (6880).  Caution! It is very important to read and comply with the information in the function VALUE 0_4 mA (under "⚠ Caution"; Examples of parameterization) on Page 50.

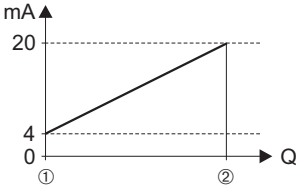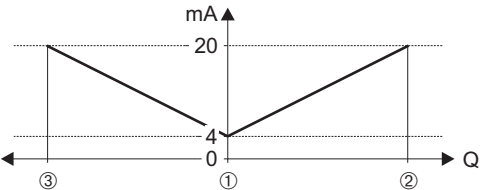
Functional description	
OUTPUTS → CURRENT OUTPUT (1...3) → CONFIGURATION	
MEASURING MODE (4004)	Use this function to define the measuring mode for the current output. Options: STANDARD SYMMETRY PULSATING FLOW The current output signal is proportional to the measured variable. The flow components outside the scaled measuring range (defined by the 0_4 mA VALUE ① and the 20 mA VALUE ②) are taken into account as follows for signal output: ■ If one of the values is defined as equal to the zero flow (e.g. VALUE 0_4 mA = 0 m³/h), no message is given if this value is exceeded or not achieved and the current output retains its value (4 mA in the example). If the other value is exceeded or not achieved, the message "CURRENT OUTPUT AT FULL SCALE VALUE" appears and the current output responds in accordance with the parameter setting in the function FAILSAFE MODE (4006). ■ If both values are defined as not equal to the zero flow (e.g. VALUE 0_4 mA = -5 m³/h, VALUE 20 mA = 10 m³/h) the message "CURRENT OUTPUT AT FULL SCALE VALUE" appears if the measuring range is exceeded or not achieved and the current output responds in accordance with the parameter setting in the function FAILSAFE MODE (4006).  A0001248 SYMMETRY The current output signal is independent of the direction of flow (absolute amount of the measured variable). The 0_4 mA VALUE ① and the 20 mA VALUE ② must have the same sign (+ or -). The "20 mA VALUE" ③ (e.g. backflow) corresponds to the mirrored 20 mA VALUE ② (e.g. flow).  A0001249  Note! ■ The direction of flow can be output via the configurable relay or status outputs. ■ SYMMETRY cannot be selected unless the values in the VALUE 0_4 mA (4002) and VALUE 20 mA (4003) functions have the same sign or one of the values is zero. If the signs of the two values differ, SYMMETRY cannot be selected and an "ASSIGNMENT NOT POSSIBLE" message is issued. (Continued on next page)

Functional description	
OUTPUTS → CURRENT OUTPUT (1...3) → CONFIGURATION	
MEASURING MODE (Continued)	PULSATING FLOW If flow is characterized by severe fluctuations as is the case, for example, with reciprocating pumps, flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 seconds. If the data cannot be buffered within approx. 60 seconds, a fault or notice message appears. Under certain plant conditions, flow values can aggregate in the buffer, for example in the case of prolonged and unwanted fluid backflow. However, this buffer is reset in all relevant programming adjustments which affect the current output. Factory setting: STANDARD
Detailed explanations and information	How the current output responds under the following postulated conditions: 1. Defined measuring range (①–②): ① and ② have the same sign A0001248 and the following flow behaviour: A0001265 ■ STANDARD The current output signal is proportional to the measured variable. The flow components outside the scaled measuring range are not taken into account for signal output. A0001267 ■ SYMMETRY The current output signal is independent of the direction of flow. A0001268 ■ PULSATING FLOW Flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 seconds. A0001269 (Continued on next page)

Functional description	
OUTPUTS → CURRENT OUTPUT (1...3) → CONFIGURATION	
Detailed explanations and information (Continued)	2. Defined measuring range (①–②): ① and ② do not have the same sign. A0001272 3. Flow a (—) outside, b (---) within the measuring range. A0001273 ■ STANDARD a (—): The flow components outside the scaled measuring range cannot be taken into account for signal output. A fault message is generated (# 351...354, current range) and the current output responds in accordance with the parameter settings in the function FAILSAFE MODE (4006). b (---): The current output signal is proportional to the measured variable assigned. A0001274 ■ SYMMETRY This option is not available under these circumstances, because the 0_4 mA value and the 20 mA value have different signs. ■ PULSATING FLOW Flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 seconds. A0001275
TIME CONSTANT (4005)	Use this function to enter a time constant defining how the current output signal reacts to severely fluctuating measured variables, either very quickly (enter a low time constant) or with damping (enter a high time constant). User input: fixed-point number 0.01...100.00 s Factory setting: 1.00 s


Functional description	
OUTPUTS → CURRENT OUTPUT (1...3) → CONFIGURATION	
FAILSAFE MODE (4006)	For safety reasons it is advisable to ensure that the current output assumes a predefined state in the event of a fault. The setting you select here affects only the current output. It has no effect on other outputs and the display (e.g. totalizers). Options: MIN. CURRENT The current output adopts the value of the lower signal on alarm level (as defined in the function CURRENT SPAN (4001) MAX. CURRENT The current output adopts the value of the upper signal on alarm level (as defined in the function CURRENT SPAN (4001) HOLD VALUE (not recommended) Measuring value output is based on the last measuring value saved before the error occurred . ACTUAL VALUE Measured value output is based on the current flow measurement. The fault is ignored . Factory setting: MIN. CURRENT

7.1.2 Function group OPERATION

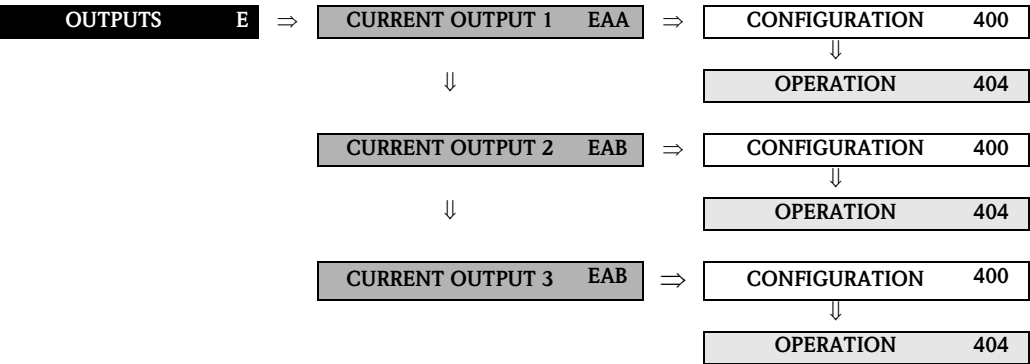

Functional description	
OUTPUTS → CURRENT OUTPUT (1...3) → OPERATION	
ACTUAL CURRENT (4040)	Use this function to view the computed actual value of the output current. User interface: 0.00...25.00 mA
SIMULATION CURRENT (4041)	Use this function to activate simulation of the current output. Options: OFF ON Factory setting: OFF  Note! ■ The "SIMULATION CURRENT OUTPUT" message indicates that simulation is active. ■ The measuring device continues to measure while simulation is in progress, i.e. the current measuring values are output correctly via the other outputs.  Caution! The setting is not saved if the power supply fails.
VALUE SIMULATION CURRENT (4042)	 Note! The function is not visible unless the function SIMULATION CURRENT (4041) is active (= ON). Use this function to define a freely selectable value (e.g. 12 mA) to be output at the current output. This value is used to test downstream devices and the measuring device itself. User input: Floating-point number: 0.00...25.00 mA Factory setting: 0.00 mA  Caution! The setting is not saved if the power supply fails.


7.1.3 Function group INFORMATION

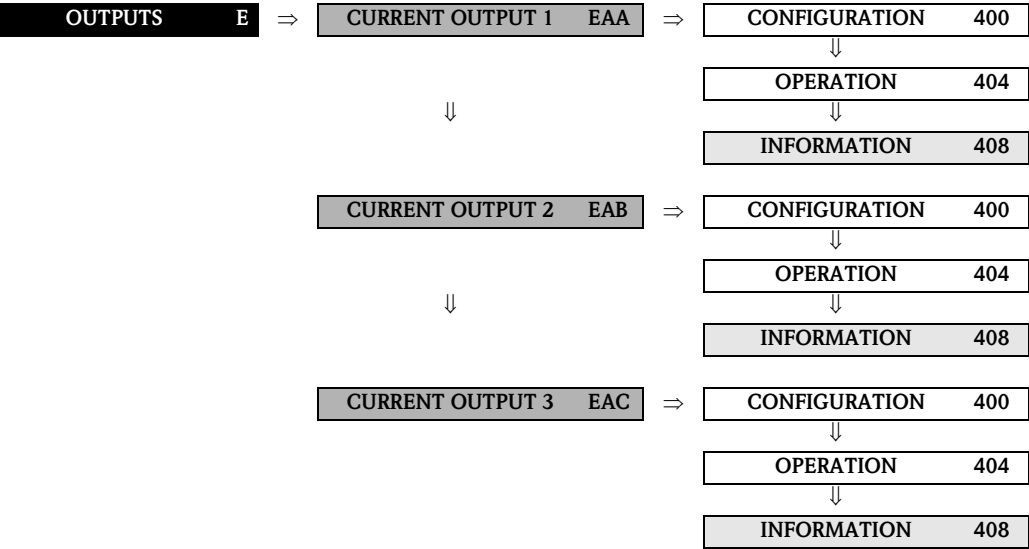

Functional description	
OUTPUTS → CURRENT OUTPUT (1...3) → INFORMATION	
TERMINAL NUMBER (4080)	Use this function to display the numbers of the terminals (in the connection compartment) which are used by the current output.


7.2
Group PULSE/FREQUENCY OUTPUT (1...2)

7.2.1
Function group CONFIGURATION

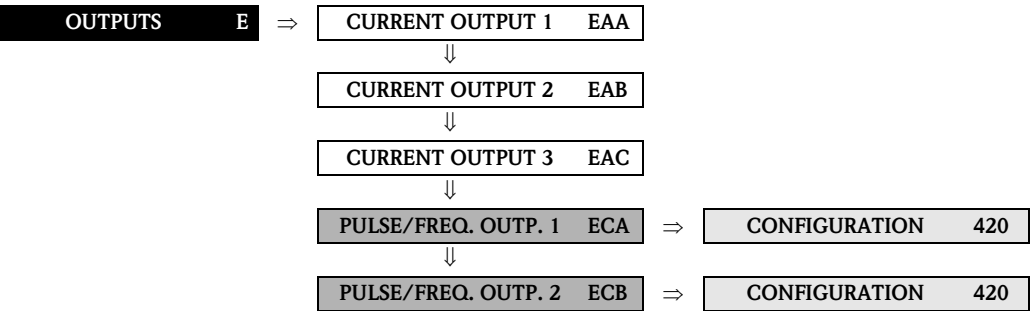


Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (GENERAL/FREQUENCY)	
OPERATION MODE (4200)	Use this function to configure the output as a pulse output, frequency output or status output. The functions available in this function group vary, depending on which option you select here. Options: ↓ PULSE FREQUENCY STATUS Factory setting: PULSE
ASSIGN FREQUENCY (4201)	🔧 Note! This function is not available unless the FREQUENCY setting was selected in the function OPERATION MODE (4200). Use this function to assign a measured variable to the frequency output. Options: VOLUME FLOW (CH1...CH2) VOLUME FLOW AVERAGE VOLUME FLOW SUM (CH1+CH2) VOLUME FLOW DIFFERENCE (CH1-CH2) SOUND VELOCITY (CH1...CH2) SOUND VELOCITY AVERAGE SIGNAL STRENGTH (CH1...CH2) FLOW VELOCITY (CH1...CH2) FLOW VELOCITY AVERAGE Factory setting: CH1 VOLUME FLOW 🔧 Note! If you select OFF, the only function shown in the CONFIGURATION function group is this function, in other words ASSIGN FREQUENCY (4201). Advanced options with optional software package ADVANCED DIAGNOSTICS: DEVIATION VOLUME FLOW (CH1...CH2) DEVIATION VOLUME FLOW AVERAGE DEVIATION FLOW VELOCITY (CH1...CH2) DEVIATION FLOW VELOCITY AVERAGE DEVIATION SIGNAL STRENGTH (CH1...CH2) DEVIATION SOUND VELOCITY (CH1...CH2) DEVIATION SOUND VELOCITY AVERAGE DEVIATION ACTUAL TRANSIT TIME (CH1...CH2) DEVIATION ACCEPTANCE RATE (CH1...CH2)

Functional description OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (GENERAL/FREQUENCY)	
START VALUE FREQUENCY (4202)	 Note! This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200). Use this function to define an initial frequency for the frequency output. You define the associated measuring value of the measuring range in the functionVALUE f LOW (4204) described on Page 61. User input: 5-digit fixed-point number 0...10000 Hz Factory setting: 0 Hz Example: ■ VALUE f LOW. = 0 l/h, initial frequency = 0 Hz: i.e. for a flow of 0 l/h, the frequency output is 0 Hz. ■ VALUE f LOW = 1 l/h, initial frequency = 10 Hz: i.e. for a flow of 1 l/h, the frequency output is 10 Hz.
END VALUE FREQUENCY (4203)	 Note! This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200). Use this function to define an end frequency for the frequency output. You define the associated measuring value of the measuring range in the functionVALUE f HIGH (4205) described on Page 61. User input: 5-digit fixed-point number 2...10000 Hz Factory setting: 10000 Hz Example: ■ VALUE f HIGH = 1000 l/h, full scale frequency = 1000 Hz: i.e. at a flow of 1000 l/h, a frequency of 1000 Hz is output. ■ VALUE f HIGH = 3600 l/h, full scale frequency = 1000 Hz: i.e. at a flow of 3600 l/h, a frequency of 1000 Hz is output.  Note! In the FREQUENCY operating mode the output signal is symmetrical (on/off ratio = 1:1). At low frequencies the pulse duration is limited to a maximum of 2 seconds, i.e. the on/off ratio is no longer symmetrical.


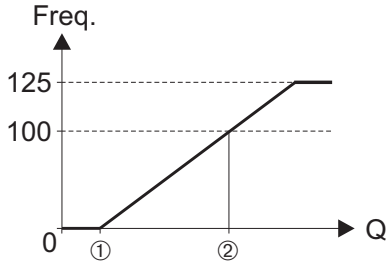
Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (GENERAL/FREQUENCY)	
VALUE f LOW (4204)	 Note! This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200). Use this function to assign a variable to the start value frequency (4202). The value can be greater or less than the value assigned to the VALUE f HIGH. Positive and negative values are permissible, depending on the measured variable in question (e.g. volume flow). You define a measuring range by defining the VALUE f LOW and VALUE f HIGH values. User input: 5-digit floating-point number Factory setting: 0 [unit]  Note! ■ Graphic illustration of VALUE f LOW see function VALUE f HIGH (4205) on page 61. ■ The appropriate unit is taken from the group SYSTEM UNITS (ACA) (see Page 13).
VALUE f HIGH (4205)	 Note! This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200). Use this function to assign a variable to the end value frequency (4203). The value can be greater or less than the value assigned to the VALUE f LOW. Positive and negative values are permissible, depending on the measured variable in question (e.g. volume flow). You define a measuring range by defining the VALUE f LOW and VALUE f HIGH values. The assignment applies for both flow directions for measuring mode SYMMETRY (see Page 53) and only for the selected flow direction for measuring mode STANDARD. User input: 5-digit floating-point number Factory setting: depends on the setting in the function ASSIGN FREQUENCY (4201): volume flow: 20 l/s sound velocity: 1800 m/s flow velocity: 10 m/s corresponds to the factory setting for the final value.  ① = Value f min ② = Value f max  Caution! The frequency output responds differently, depending on the parameters set in the various functions. Some examples of parameter settings and their effect on the frequency output are given in the following section.  Note! The appropriate unit is taken from the group SYSTEM UNITS (ACA) (see Page 13). (Continued on next page)

Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (GENERAL/FREQUENCY)	
VALUE f HIGH (Continued)	Parameter setting example A: - VALUE f LOW (4204) = not equal to zero flow (e.g. -5 m³/h) VALUE f HIGH (4205) = not equal to zero flow (e.g. 10 m³/h) or - VALUE f LOW (4204) = not equal to zero flow (e.g. 100 m³/h) VALUE f HIGH (4205) = not equal to zero flow s (e.g. -40 m³/h) and MEASURING MODE (4206) = STANDARD When you enter the values for VALUE f LOW and VALUE f HIGH the working range of the measuring device is defined. If the effective flow drops below or exceeds this working range (see ①), a fault or notice message is generated (#351-354, frequency area) and the frequency output responds in accordance with the parameter settings in the function FAILSAFE MODE (4209). 1) 2) A0001262 Parameter setting example B: - VALUE f LOW (4204) = equal to zero flow (e.g. 0 m³/h) VALUE f HIGH (4205) = not equal to zero flow (e.g. 10 m³/h) or - VALUE f LOW (4204) = not equal to zero flow (e.g. 100 m³/h) VALUE f HIGH (4205) = equal to zero flow s (e.g. 0 m³/h) and MEASURING MODE (4206) = STANDARD When you enter the values for VALUE f LOW and VALUE f HIGH the working range of the measuring device is defined. In doing so, one of the two values is parameterised as zero flow (e.g. 0 m³/h). If the effective flow drops below or exceeds the value parameterised as the zero flow, no fault/notice message is generated and the frequency output retains its value. If the effective flow drops below or exceeds the other value, a fault/notice message is generated (#351-354, frequency area) and the frequency output responds in accordance with the parameters set in the function FAILSAFE MODE (4209). 1) 2) A0001264 Deliberately only one flow direction is output with this setting and flow values in the other flow direction are suppressed. Parameter setting example C: MEASURING MODE (4206) = SYMMETRY The frequency output signal is independent of the direction of flow (absolute amount of the measured variable). The VALUE f LOW ① and VALUE f HIGH ② must have the same sign (+ or -). The "VALUE f HIGH" ③ (e.g. backflow) corresponds to the mirrored VALUE f HIGH ② (e.g. flow). A0001249 ASSIGN RELAY (4700) = FLOW DIRECTION Flow direction output via a switching contact. Parameter setting example D: MEASURING MODE (4206) = PULSATING FLOW

Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (GENERAL/FREQUENCY)	
MEASURING MODE (4206)	Note! This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200). Use this function to define the measuring mode for the frequency output. Options: STANDARD SYMMETRY PULSATING FLOW Factory setting STANDARD Description of the individual options: ■ STANDARD The frequency output signal is proportional to the measured variable. The flow components outside the scaled measuring range (defined by the VALUE f LOW. ① and VALUE f HIGH. ②) are not taken into account for signal output. – If one of the values is defined as equal to the zero flow (e.g. = VALUE f LOW 0 m³/h), no message is given if this value is exceeded or not achieved and the frequency output retains its value (0 Hz in the example). If the other value is exceeded or not achieved, the message "FREQUENCY OUTPUT AT FULL SCALE VALUE" appears and the frequency output responds in accordance with the parameter setting in the function FAILSAFE MODE (4209). – If both values are defined as not equal to the zero flow (e.g. VALUE f LOW = –5 m³/h; VALUE f HIGH = 10 m³/h), the message "FREQUENCY OUTPUT AT FULL SCALE VALUE" appears if the measuring range is exceeded or not achieved and the frequency output responds in accordance with the parameter setting in the function FAILSAFE MODE (4209). Freq. 125 100 0 ① ② Q A0001279 SYMMETRY The frequency output signal is independent of the direction of flow (absolute amount of the measured variable). The VALUE f LOW ① and VALUE f HIGH ② must have the same sign (+ or –). The VALUE f HIGH ③ (e.g. backflow) corresponds to the mirrored VALUE f HIGH ② (e.g. forward flow). Freq. 125 100 0 ③ ① ② Q A0001280 Note! ■ The direction of flow can be output via the configurable relay or status outputs. ■ SYMMETRY cannot be selected unless the values in the VALUE f LOW (4204) and VALUE f HIGH (4205) functions have the same sign or one of the values is zero. If the values have different signs, SYMMETRY cannot be selected and an "ASSIGNMENT NOT POSSIBLE" message is displayed. (Continued on next page)

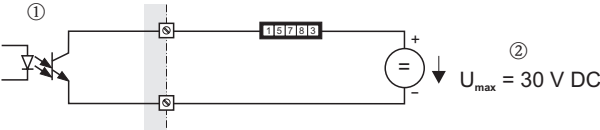Functional description OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (GENERAL/FREQUENCY)	
MEASURING MODE (Continued)	■ PULSATING FLOW If flow is characterized by severe fluctuations as is the case, for example, with reciprocating pumps, flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 seconds. If the buffered data cannot be processed within approx. 60 seconds, a fault/notice message appears. Hinweismeldung. Under certain plant conditions, flow values can aggregate in the buffer, for example in the case of prolonged and unwanted fluid backflow. However, this buffer is reset in all relevant programming adjustments which affect the frequency output.
OUTPUT SIGNAL (4207)	Note! Function is not available unless the FREQUENCY setting was selected in the OPERATING MODE (4200) function. For selecting the output configuration of the frequency output. Options: 0 = PASSIVE - POSITIVE 1 = PASSIVE - NEGATIVE 2 = ACTIVE - POSITIVE 3 = ACTIVE - NEGATIVE Factory setting: PASSIVE - POSITIVE Explanation ■ PASSIVE = power is supplied to the frequency output by means of an external power supply. ■ ACTIVE = power is supplied to the frequency output by means of the device-internal power supply. Configuring the output signal level (POSITIVE or NEGATIVE) determines the quiescent behaviour (at zero flow) of the frequency output. The internal transistor is activated as follows: ■ If POSITIVE is selected, the internal transistor is activated with a positive signal level. ■ If NEGATIVE is selected, the internal transistor is activated with a negative signal level (0 V). Note! With the passive output configuration, the output signal levels of the frequency output depend on the external circuit (see examples). Example for passive output circuit (PASSIVE) If PASSIVE is selected, the frequency output is configured as an open collector.  ① = Open Collector, ② = External power supply Note! For continuous currents up to 25 mA ($I_{\text{max}} = 250 \text{ mA} / 20 \text{ ms}$).
(continued on next page)	

Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (GENERAL/FREQUENCY)	
OUTPUT SIGNAL (4207)	Example for output configuration PASSIVE-POSITIVE: Output configuration with an external pull-up resistance. In the quiescent state (at zero flow), the output signal level at the terminals is 0 V. + U_{max} = 30 V DC ① ② ③ ④ U (V) t U (V) t ① = Open Collector, ② = Pull-Up-Resistance ③ = Transistor activation in "POSITIVE" quiescent state (at zero flow) ④ = Output signal level in quiescent state (at zero flow) In the operating status (flow present), the output signal level changes from 0 V to a positive voltage level. U (V) t A0004690 Example for output configuration PASSIVE-POSITIVE: Output configuration with an external pull-down resistance. In the quiescent state (at zero flow), a positive voltage level is measured via the pull-down resistance. ① ② ③ ④ 115733 ① = Open Collector ② = Pull-Down-Resistance ③ = Transistor activation in "POSITIVE" quiescent state (at zero flow) ④ = Output signal level in quiescent state (at zero flow) In the operating status (flow present), the output signal level changes from a positive voltage level to 0 V. U 24 V 0 V t A0004961 A0004694 (continued on next page)

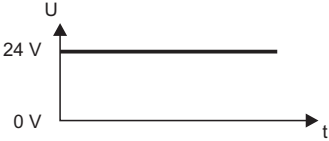
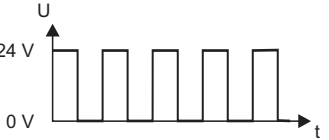
Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (GENERAL/FREQUENCY)	
OUTPUT SIGNAL (Continued)	In the operating status (flow present), the output signal level changes from 0 V to a positive voltage level.  A0004692 The following applies for the output configuration ACTIVE-NEGATIVE: In the quiescent state (at zero flow), the output signal level at the terminals is at a positive voltage level.  A0004693 In the operating status (flow present), the output signal level changes from a positive voltage level to 0 V.  A0004710
TIME CONSTANT (4208)	 Note! This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200). Use this function to enter a time constant defining how the frequency output signal reacts to severely fluctuating measured variables, either very quickly (enter a low time constant) or with damping (enter a high time constant). User input: fixed-point number 0.00...100.00 s Factory setting: 1.00 s





Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (GENERAL/FREQUENCY)	
FAILSAFE MODE (4209)	 Note! This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200). For safety reasons it is advisable to ensure that the frequency output assumes a predefined state in the event of a fault. The setting you select here affects only the frequency output. It has no effect on other outputs and the display (e.g. totalizers). Options: FALLBACK VALUE Output is 0 Hz. FAILSAFE LEVEL Output is the frequency specified in the FAILSAFE VALUE function (4211). HOLD VALUE Measuring value output is based on the last measuring value saved before the error occurred. ACTUAL VALUE Measuring value output is based on the current flow measurement (fault is ignored). Factory setting: FALLBACK VALUE
FAILSAFE VALUE (4211)	 Note! This function is not available unless FREQUENCY was selected in the function OPERATION MODE (4200) and FAILSAFE LEVEL was selected in the function FAILSAFE MODE (4209). Use this function to define the frequency that the measuring device outputs in the event of an error. User input: max. 5-digit number: 0...12500 Hz Factory setting: 12500 Hz

Functional description OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (PULSE)	
ASSIGN PULSE (4221)	 Note! This function is not available unless the PULSE setting was selected in the function OPERATION MODE (4200). Use this function to assign a measured variable to the pulse output. Options: OFF VOLUME FLOW (CH1...CH2) VOLUME FLOW AVERAGE VOLUME FLOW SUM (CH1+CH2) VOLUME FLOW DIFFERENCE (CH1-CH2) Factory setting: CH1 VOLUME FLOW  Note! If you select OFF, the only function shown in the CONFIGURATION function group is this function, in other words ASSIGN PULSE (4221).
PULSE VALUE (4222)	 Note! This function is not available unless the PULSE setting was selected in the function OPERATION MODE (4200). Use this function to define the flow at which a pulse is triggered. These pulses can be totalled by an external totalizer and in this way the total flow since measuring commenced can be registered. User input: 5-digit floating-point number, [unit] Factory setting: 1 l/pulse  Note! The appropriate unit is taken from the function UNIT VOLUME (0403), (see Page 14)

Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (PULSE)	
PULSE WIDTH (4223)	Note! This function is not available unless the PULSE setting was selected in the function OPERATION MODE (4200). Use this function to enter the pulse width of the output pulse. User input: 0.05...2000 ms Factory setting: 100 ms Pulse output is always with the pulse width (B) entered in this function. The pauses (P) between the individual pulses are automatically configured. However, they must at least correspond to the pulse width (B = P). transistor conducting nonconducting B P B < P t transistor conducting nonconducting B P B = P t A0001233 B = Pulse width entered (the illustration applies to positive pulses) P= Intervals between the individual pulses Note! When entering the pulse width, select a value that can still be processed by an external totalizer (e.g. mechanical totalizer, PLC, etc.) . Caution! If the pulse number or frequency resulting from the pulse value entered, (see function PULSE VALUE (4222) onPage 69) and from the current flow is too large to maintain the pulse width selected (the interval P is smaller than the pulse width B entered), a system error message (# 359...362, pulse memory) is generated after buffering/balancing has occurred.

Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (PULSE)	
MEASURING MODE (4225)	 Note! This function is not available unless the PULSE setting was selected in the function OPERATION MODE (4200). Use this function to define the measuring mode for the pulse output. Options: STANDARD Only positive flow components are totalled. Negative components are not taken into account. STANDARD REVERSE Only negative flow components are totalled. Positive components are not taken into account. SYMMETRY Positive and negative flow components are taken into account.  Note! The direction of flow can be output via the relay output. PULSATING FLOW If flow is characterized by severe fluctuations as is the case, for example, with reciprocating pumps, the positive and negative flow components are totalled, with the signs taken into account (e.g. -10 l and +25 l = 15 l). Flow components outside the maximum pulse number per second (value/width) are buffered, balanced and output after a maximum delay of 60 seconds. If the buffered data cannot be processed within approx. 60 seconds, a fault/notice message appears. Under certain plant conditions, flow values can aggregate in the buffer, for example in the case of prolonged and unwanted fluid backflow. However, this buffer is reset in all relevant programming adjustments which affect the pulse output. Factory setting: STANDARD

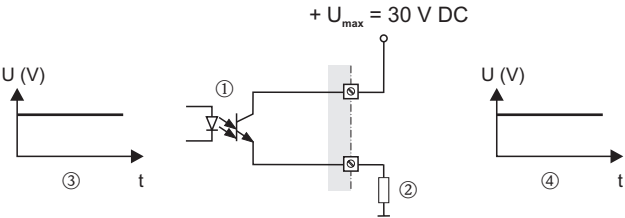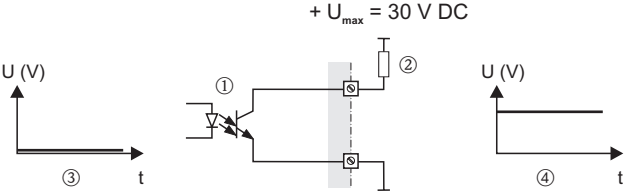
Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (PULSE)	
OUTPUT SIGNAL (Continued)	Example for output configuration PASSIVE-POSITIVE: Output configuration with an external pull-down resistance. In the quiescent state (at zero flow), a positive voltage level is measured via the pull-down resistance.  ① = Open Collector ② = Pull-Down-Resistance ③ = Transistor activation in "POSITIVE" quiescent state (at zero flow) ④ = Output signal level in quiescent state (at zero flow) In the operating status (flow present), the output signal level changes from a positive voltage level to 0 V.  Example for output configuration PASSIVE-NEGATIVE: Output configuration with an external pull-up resistance. In the quiescent state (at zero flow), the output signal level at the terminals is at a positive voltage level.  ① = Open Collector ② = Pull-Up-Resistance ③ = Transistor activation in "NEGATIVE" quiescent state (at zero flow) ④ = Output signal level in quiescent state (at zero flow) In the operating status (flow present), the output signal level changes from a positive voltage level to 0 V.  (continued on next page)

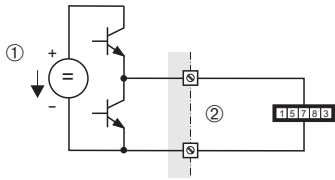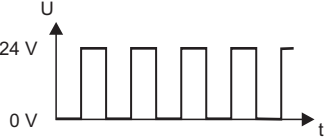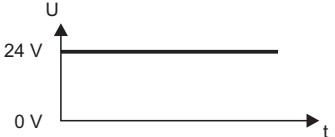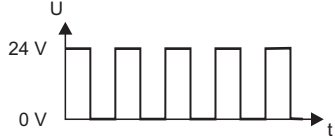Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (PULSE)	
OUTPUT SIGNAL (Continued)	Example for active output circuit (ACTIVE): With an active circuit, the internal power supply is 24 V. The pulse output is short-circuit proof.  A0004691 ① = 24 V DC internal power supply ② = Short-circuit proof output The signal levels are to be seen as analogous to the passive circuit. The following applies for the output configuration ACTIVE-POSITIVE: In the quiescent state (at zero flow), the output signal level at the terminals is 0 V.  A0004694 In the operating status (flow present), the output signal level changes from 0 V to a positive voltage level.  A0004692 The following applies for the output configuration ACTIVE-NEGATIVE: In the quiescent state (at zero flow), the output signal level at the terminals is at a positive voltage level.  A0004693 In the operating status (flow present), the output signal level changes from a positive voltage level to 0 V.  A0004710

Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (PULSE)	
FAILSAFE MODE (4227)	 Note! This function is not available unless the PULSE setting was selected in the function OPERATION MODE (4200). For safety reasons it is advisable to ensure that the pulse output assumes a predefined state in the event of a fault. The setting you select here affects only the pulse output. It has no effect on other outputs and the display (e.g. totalizers). Options: FALLBACK VALUE Output is 0 pulse. HOLD VALUE Measuring value output is based on the last measuring value saved before the error occurred. ACTUAL VALUE Measuring value output is based on the current flow measurement The fault is ignored. Factory setting: FALL BACK VALUE


Functional description OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (STATUS)	
ASSIGN STATUS (4241)	 Note! This function is not available unless the STATUS setting was selected in the function OPERATION MODE (4200). Use this function to assign a switching function to the status output. Options: OFF ON (operation) FAULT MESSAGE FAILURE (CH1...CH2) NOTICE MESSAGE FAULT MESSAGE & NOTICE MESSAGE LIMIT TOTALIZER (1...3) FLOW DIRECTION (CH1...CH2) AVERAGE FLOW DIRECTION FLOW DIRECTION SUM FLOW DIRECTION DIFFERENCE VOLUME FLOW LIMIT VALUE (CH1...CH2) LIMIT AVERAGE VOLUME FLOW LIMIT VOLUME FLOW SUM LIMIT VOLUME FLOW DIFFERENCE LIMIT SOUND VELOCITY (CH1...CH2) LIMIT SOUND VELOCITY AVERAGE LIMIT SIGNAL STRENGTH (CH1..CH2) LIMIT FLOW VELOCITY (CH1...CH2) LIMIT AVERAGE FLOW VELOCITY  Note! ■ The following settings/entries must be made to ensure correct and immediate signal output: – Function SWITCH-ON DELAY (4243) = 0 ms (see Page 77) – Function SWITCH-OFF DELAY (4245) = 0 ms (see Page 78) – Function TIME CONSTANT (4247) = 0 ms (see Page 79) ■ The ASSIGN operating mode contains a channel-specific option for the fault messages: – FAULT MESSAGE – all faults are displayed (gen. faults, channel-specific faults for CH1 and channel-specific faults for CH2) – FAULT CH1 – faults affecting channel 2 are not displayed (only gen. faults and channel-specifics faults for CH1) – FAULT CH2 – faults affecting channel 1 are not displayed (only gen. faults and channel-specifics faults for CH2) Factory setting: FAULT MESSAGE  Note! ■ The behaviour of the status output is a normally closed behaviour, in other words the output is closed (transistor conductive) when normal, error-free measuring is in progress. ■ If you select OFF, the only function shown in the CONFIGURATION function group is the function (4241ASSIGN STATUS). Advanced options with optional software package ADVANCED DIAGNOSTICS: DEVIATION VOLUME FLOW (CH1...CH2) DEVIATION VOLUME FLOW AVERAGE DEVIATION FLOW VELOCITY (CH1...CH2) DEVIATION FLOW VELOCITY AVERAGE DEVIATION SIGNAL STRENGTH (CH1...CH2) DEVIATION SOUND VELOCITY (CH1...CH2) DEVIATION SOUND VELOCITY AVERAGE DEVIATION ACTUAL TRANSIT TIME (CH1...CH2) DEVIATION ACCEPTANCE RATE (CH1...CH2)

Functional description OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (STATUS)	
ON-VALUE (4242)	 Note! This function is not available unless STATUS was selected in the function OPERATION MODE (4200) and LIMIT VALUE or FLOW DIRECTION was selected in the function ASSIGN STATUS (4241). Use this function to assign a value to the switch-on point (activation of the status output). The value can be equal to, greater than or less than the switch-off point. Positive or negative values are permissible, depending on the measured variable in question (e.g. volume flow, totalizer reading). User input: 5-digit floating-point number, [unit] Factory setting: 0 [unit]  Note! ■ The appropriate unit is taken from the function UNIT VOLUME FLOW (0402). ■ Only the switch-on point is available for flow direction output (no switch-off point). If you enter a value not equal to the zero flow (e.g. 5), the difference between the zero flow and the value entered corresponds to half the switchover hysteresis.
SWITCH-ON DELAY (4243)	 Note! This function is not available unless STATUS was selected in the function OPERATION MODE (4200) and LIMIT VALUE or FLOW DIRECTION was selected in the function ASSIGN STATUS (4241). Use this function to specify a delay (0...100 seconds) for switching on the status output (i.e. signal changes from 0 to 1). The delay starts when the limit value is reached. The status output does switch when the delay has timed out and the switch condition has been valid over the delay time. User input: fixed-point number 0.0...100.0 s Factory setting: 0.0 s
OFF-VALUE (4244)	 Note! This function is not available unless STATUS was selected in the function OPERATION MODE (4200) and a LIMIT VALUE was selected in the function ASSIGN STATUS (4241). Use this function to assign a value to the switch-off point (deactivation of the status output). The value can be equal to, greater than or less than the switch-on point. Positive and negative values are permissible, depending on the measured variable in question (e.g. volume flow, totalizer reading). User input: 5-digit floating-point number, [unit] Factory setting: 0 [unit]  Note! ■ The appropriate unit is taken from the function UNIT VOLUME FLOW (0402). ■ If SYMMETRY is the setting selected in the MEASURING MODE function (4246) and values with different signs are entered for the switch-on and switch-off points, an "INPUT RANGE EXCEEDED" message is issued.

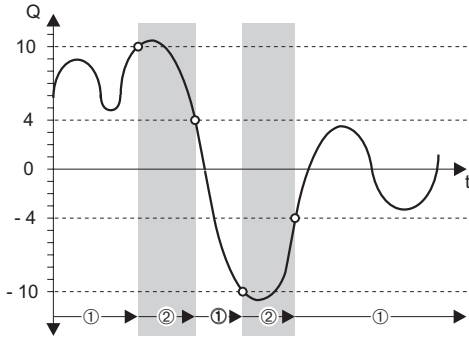Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (STATUS)	
SWITCH-OFF DELAY (4245)	 Note! This function is not available unless the STATUS setting was selected in the function OPERATION MODE (4200). Use this function to define a delay (0...100 seconds) for switching off the status output (i.e. signal changes from 1 to 0). The delay starts when the limit value is reached. The status output does switch when the delay has timed out and the switch condition has been valid over the delay time. User input: fixed-point number 0.0...100.0 s Factory setting: 0.0 s
MEASURING MODE (4246)	 Note! ■ This function is not available unless the STATUS setting was selected in the function OPERATION MODE (4200). ■ This function is not visible unless a limit value was assigned to the status output. Use this function to define the measuring mode for the status output. Options: STANDARD The status output signal switches at the defined switch points. SYMMETRY The status output signal switches at the defined switch points, irrespective of the sign. If you define a switch point with a positive sign, the status output signal switches as soon as the value is reached in the negative direction (negative sign), see illustration. Factory setting: STANDARD Example for the SYMMETRY measuring mode: Switch-on point: Q = 4 Switch-off point: Q = 10 ① = Status output switched on (conductive) ② = Status output switched off (not conductive)  A0001247  Note! ■ SYMMETRY cannot be selected unless the values in the ON-VALUE (4242) and OFF-VALUE (4244) functions have the same sign or one of the values is zero. ■ If the signs of the two values differ, SYMMETRY cannot be selected and an "ASSIGNMENT NOT POSSIBLE" message is issued.

Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (STATUS)	
TIME CONSTANT (4247)	 Note! This function is not available unless the STATUS setting was selected in the function OPERATION MODE (4200). Use this function to enter a time constant defining how the measuring signal reacts to severely fluctuating measured variables, either very quickly (enter a low time constant) or with damping (enter a high time constant). Damping acts on the measuring signal before the switch status changes, and consequently before switch-on or switch-off delay is activated. The purpose of damping, therefore, is to prevent the status output changing state continuously in response to fluctuations in flow. User input: fixed-point number 0.00...100.00 s Factory setting: 0.00 s

7.2.2 Function group OPERATION

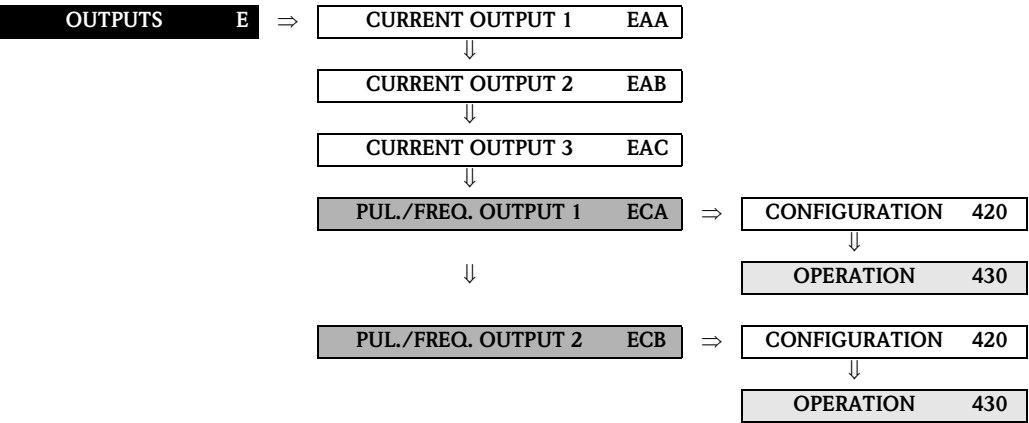


Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → OPERATION (FREQUENCY)	
ACTUAL FREQUENCY (4301)	Note! This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200). Use this function to view the computed value of the output frequency. User interface: 0...12500 Hz
SIMULATION FREQUENCY (4302)	Note! This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200). Use this function to activate simulation of the frequency output. Options: OFF ON Factory setting: OFF Note! ■ The "SIMULATION FREQUENCY OUTPUT" message indicates that simulation is active. ■ The measuring device continues to measure while simulation is in progress, i.e. the current measuring values are output correctly via the other outputs. Caution! The setting is not saved if the power supply fails

Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → OPERATION (FREQUENCY)	
VALUE SIMULATION FREQUENCY (4303)	 Note! This function is not available unless FREQUENCY was selected in the function OPERATION MODE (4200) and the function SIMULATION FREQUENCY (4302) is active (= ON). Use this function to define a selectable frequency value (e.g. 500 Hz) to be output at the frequency output. This value is used to test downstream devices and the measuring device itself. User input: 0...12500 Hz Factory setting: 0 Hz  Caution! The setting is not saved if the power supply fails.

Functional description OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → OPERATION (PULSE)	
SIMULATION PULSE (4322)	 Note! This function is not available unless the PULSE option was selected in the OPERATING MODE function. Use this function to activate simulation of the pulse output. Options: OFF COUNTDOWN The pulses specified in the VALUE SIMULATION PULSE function are output. CONTINUOUSLY Pulses are continuously output with the pulse width specified in the PULSE WIDTH function. Simulation is started once the CONTINUOUSLY option is confirmed with the  key.  Note! Simulation is started by confirming the CONTINUOUSLY option with the  key. The simulation can be switched off again via the SIMULATION PULSE function. Factory setting: OFF  Note! ■ The notice message #631 "SIM. PULSE" indicates that simulation is active. ■ The on/off ratio is 1:1 for both types of simulation. ■ The measuring device continues to measure while simulation is in progress, i.e. the current measured values are output correctly via the other outputs.  Caution! The setting is not saved if the power supply fails.
VALUE SIMULATION PULSE (4323)	 Note! This function is not available unless the COUNTDOWN option was selected in the SIMULATION PULSE function. Use this function to specify the number of pulses (e.g. 50) which are output during the simulation. This value is used to test downstream devices and the measuring device itself. The pulses are output with the pulse width specified in the PULSE WIDTH function. The on/off ratio is 1:1. Simulation is started once the specified value is confirmed with the  key. The display remains at 0 if the specified pulses have been output. User input: 0...10,000 Factory setting: 0  Note! Simulation is started by confirming the simulation value with the  key. The simulation can be switched off again via the SIMULATION PULSE function.  Caution! The setting is not saved if the power supply fails.

Functional description OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → OPERATION (STATUS)	
ACTUAL STATUS (4341)	 Note! This function is not available unless the STATUS setting was selected in the function OPERATION MODE (4200). Use this function to check the current status of the status output. User interface: NOT CONDUCTIVE CONDUCTIVE
SIMULATION SWITCH POINT (4342)	 Note! This function is not available unless the STATUS setting was selected in the function OPERATION MODE (4200). Use this function to activate simulation of the status output. Options: OFF ON Factory setting: OFF  Note! ■ The "SIMULATION SWITCH POINT" message indicates that simulation is active. ■ The measuring device continues to measure while simulation is in progress, i.e. the current measuring values are output correctly via the other outputs.  Caution! The setting is not saved if the power supply fails
VALUE SIMULATION SWITCH POINT (4343)	 Note! This function is not available unless STATUS was selected in the function OPERATION MODE (4200) and the function SIMULATION SWITCH POINT (4342) is active (= ON). Use this function to define the switching response of the status output during the simulation. This value is used to test downstream devices and the measuring device itself. Options: NOT CONDUCTIVE CONDUCTIVE Factory setting: NOT CONDUCTIVE  Caution! The setting is not saved if the power supply fails.


7.2.3 Function group INFORMATION

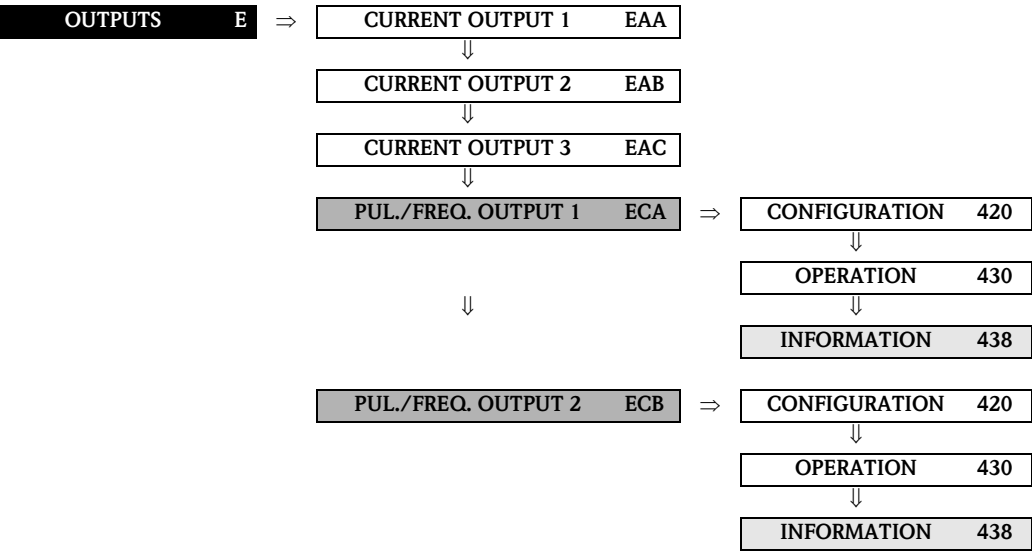

Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → INFORMATION	
TERMINAL NUMBER (4380)	Use this function to display the numbers of the terminals (in the connection compartment) which are used by the pulse/frequency output.

7.3 Group RELAY OUTPUT (1...2)


7.3.1 Function group CONFIGURATION

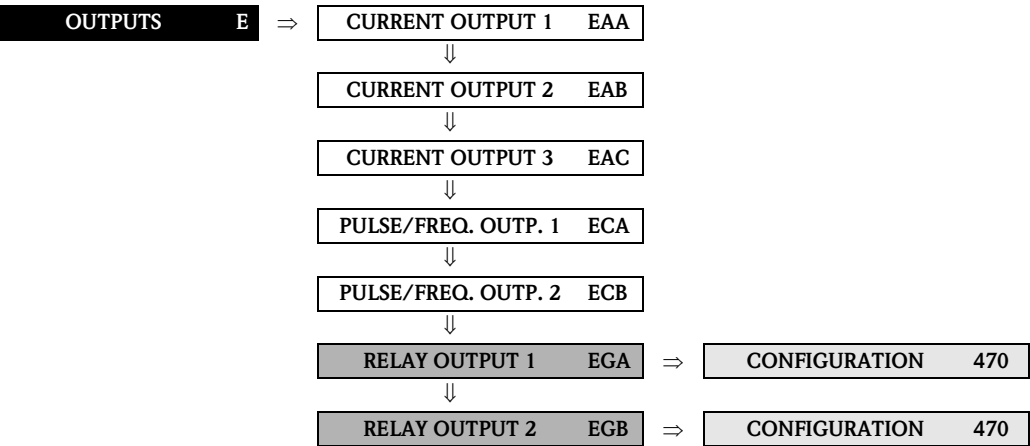


Functional description	
OUTPUTS → RELAY OUTPUT (1...2) → CONFIGURATION	
ASSIGN RELAY (4700)	Use this function to assign a switching function to the relay output. Options: OFF ON (operation) FAULT MESSAGE NOTICE MESSAGE FAULT MESSAGE & NOTICE MESSAGE LIMIT TOTALIZER (1...3) FAILURE (CH1...CH2) FLOW DIRECTION (CH1...CH2) FLOW DIRECTION AVERAGE FLOW DIRECTION SUM FLOW DIRECTION DIFFERENCE LIMIT VOLUME FLOW (CH1...CH2) LIMIT VOLUME FLOW AVERAGE LIMIT VOLUME FLOW SUM LIMIT VOLUME FLOW DIFFERENCE LIMIT SOUND VELOCITY (CH1...CH2) LIMIT SOUND VELOCITY AVERAGE LIMIT FLOW VELOCITY (CH1..CH2) LIMIT AVERAGE FLOW VELOCITY Factory setting: FAULT MESSAGE (Continued on next page)

Functional description OUTPUTS → RELAY OUTPUT (1...2) → CONFIGURATION	
ASSIGN RELAY (Continued)	 Note! ■ It is very important to read and comply with the information on the switching characteristics of the relay output (see Page 92). ■ It is advisable to configure at least one relay output as a fault output and define the outputs' response to error. ■ The relay output is configured as a normally open (NO or make) contact by default. It can be reconfigured as a normally closed (NC or break) contact by means of a jumper on the relay module, (Operating Instructions Proline Prosonic Flow 93, BA070D/06/en/.). ■ If you select OFF, the only function shown in the CONFIGURATION function group is this function, ASSIGN RELAY (4700). ■ The following settings/entries must be made to ensure correct and immediate signal output: – Function SWITCH-ON DELAY (4243) = 0 ms, (see Page 77) – Function SWITCH-OFF DELAY (4245) = 0 ms, (see Page 78) – Function TIME CONSTANT (4247) = 0 ms, (see Page 79) ■ The ASSIGN operating mode contains a channel-specific option for the fault messages: – FAULT MESSAGE - all faults are displayed (gen. faults, channel-specific faults for CH1 and channel-specific faults for CH2) – FAULT CH1 - faults affecting channel 2 are not displayed (only gen. faults and channel-specific faults for CH1) – FAULT CH2 - faults affecting channel 1 are not displayed (only gen. faults and channel-specific faults for CH2) Advanced options with optional software package ADVANCED DIAGNOSTICS: DEVIATION VOLUME FLOW (CH1...CH2) DEVIATION VOLUME FLOW AVERAGE DEVIATION FLOW VELOCITY (CH1...CH2) DEVIATION FLOW VELOCITY AVERAGE DEVIATION SIGNAL STRENGTH (CH1...CH2) DEVIATION SOUND VELOCITY (CH1...CH2) DEVIATION SOUND VELOCITY AVERAGE DEVIATION ACTUAL TRANSIT TIME (CH1...CH2) DEVIATION ACCEPTANCE RATE (CH1...CH2)
ON-VALUE (4701)	 Note! This function is not available unless LIMIT VALUE or FLOW DIRECTION was selected in the function ASSIGN RELAY (4700). Use this function to assign a value to the switch-on point (relay output pulls up). The value can be equal to, greater than or less than the switch-off point. Positive or negative values are permissible, depending on the measured variable in question (e.g. volume flow, totalizer reading). User input: 5-digit floating-point number, [unit] Factory setting: 0 [unit]  Note! ■ The appropriate unit is taken from the function UNIT VOLUME FLOW (0402). ■ Only the switch-on point is available for flow direction output (no switch-off point). If you enter a value not equal to the zero flow (e.g. 5), the difference between the zero flow and the value entered corresponds to half the switching hysteresis.

Functional description OUTPUTS → RELAY OUTPUT (1...2) → CONFIGURATION	
SWITCH-ON DELAY (4702)	 Note! This function is not available unless LIMIT VALUE or FLOW DIRECTION was selected in the function ASSIGN RELAY (4700). Use this function to define a delay (0...100 seconds) for pull-up (i.e. signal changes from 0 to 1) of the relay output. The delay starts when the limit value is reached. The relay output does switch when the delay has timed out and the switch condition has been valid throughout the delay time. User input: fixed-point number 0.0...100.0 s Factory setting: 0.0 s
OFF-VALUE (4703)	 Note! This function is not available unless LIMIT VALUE was selected in the function ASSIGN RELAY (4700). Use this function to assign a value to the switch-off point (relay drops out). The value can be equal to, greater than or less than the switch-on point. Positive or negative values are permissible, depending on the measured variable in question (e.g. volume flow, totalizer reading). User input: 5-digit floating-point number, [unit] Factory setting: 0 [unit]  Note! ■ The appropriate unit is taken from the function UNIT VOLUME FLOW (0402). ■ If SYMMETRY is the setting selected in the MEASURING MODE function (4705) and values with different signs are entered for the switch-on and switch-off points, an "INPUT RANGE EXCEEDED" message is issued.
SWITCH-OFF DELAY (4704)	 Note! This function is not available unless LIMIT VALUE was selected in the function ASSIGN RELAY (4700). Use this function to define a delay (0...100 seconds) for drop-out (i.e. signal changes from 1 to 0) of the relay output. The delay starts when the limit value is reached. The relay output does switch when the delay has timed out and the switch condition has been valid throughout the delay time. User input: fixed-point number 0.0...100.0 s Factory setting: 0.0 s

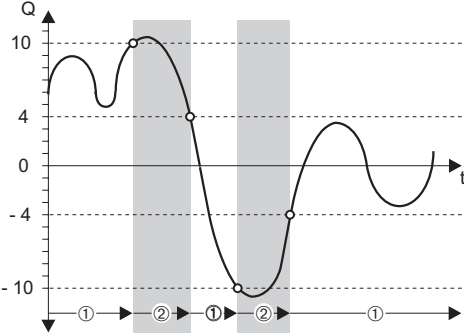Functional description OUTPUTS → RELAY OUTPUT (1...2) → CONFIGURATION	
MEASURING MODE (4705)	 Note! This function is not visible unless a limit value was assigned to the relay output. Use this function to define the measuring mode for the relay output. Options: STANDARD The relay output signal switches at the defined switch points. SYMMETRY The relay output signal switches at the defined switching points, irrespective of the sign. If you define a switch point with a positive sign, the relay output switches as soon as the value is reached in the negative direction (negative sign), (see illustration). Factory setting: STANDARD Example for the SYMMETRY measuring mode: Switch-on point Q = 4 Switch-off point Q = 10 ① = Relay energised ② = Relay de-energised  A0001247  Note! SYMMETRY cannot be selected unless the values in the ON-VALUE (4701) and OFF-VALUE (4703) functions have the same sign or one of the values is zero. If the signs of the two values differ, SYMMETRY cannot be selected and an "ASSIGNMENT NOT POSSIBLE" message is issued.
TIME CONSTANT (4706)	Use this function to enter a time constant defining how the measuring signal reacts to severely fluctuating measured variables, either very quickly (enter a low time constant) or with damping (enter a high time constant). Damping acts on the measuring signal before the switch status changes, and consequently before switch-on or switch-off delay is activated. The purpose of damping, therefore, is to prevent the relay output changing state continuously in response to fluctuations in flow. User input: fixed-point number 0.00...100.00 s Factory setting: 0.00 s


7.3.2 Function group OPERATION

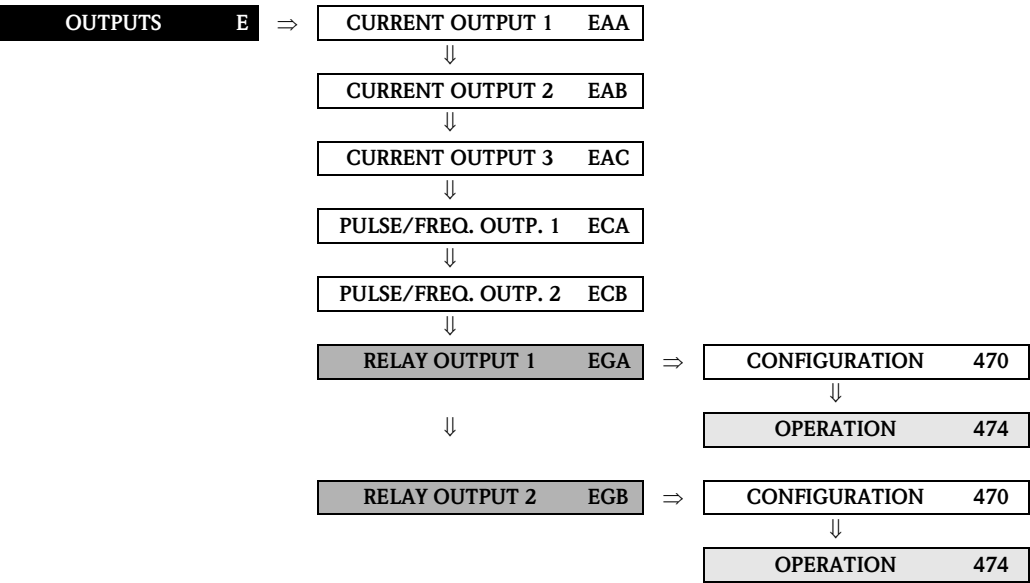

Functional description	
OUTPUTS → RELAY OUTPUT (1...2) → OPERATION	
ACTUAL STATUS RELAY (4740)	Use this function to check the current status of the relay output. A jumper on the contact side defines the relay output as a normally open (NO or make) or normally closed (NC or break) contact Operating Instructions Proline Prosonic Flow 93, BA070D/06/en/. User interface: BREAK CONTACT OPEN BREAK CONTACT CLOSED MAKE CONTACT OPEN MAKE CONTACT CLOSED
SIMULATION SWITCH POINT (4741)	Use this function to activate simulation of the relay output. Options: OFF ON Factory setting: OFF  Note! ■ The "SIMULATION RELAY" message indicates that simulation is active. ■ The measuring device continues to measure while simulation is in progress, i.e. the current measuring values are output correctly via the other outputs.  Caution! The setting is not saved if the power supply fails.

Functional description	
OUTPUTS → RELAY OUTPUT (1...2) → OPERATION	
VALUE SIMULATION SWITCH POINT (4742)	 Note! The function is not visible unless the function SIMULATION SWITCH POINT (4741) is active (= ON). Use this function to define the status of the relay output during the simulation. This value is used to test downstream devices and the measuring device itself. Depending on the relay configuration (as make or break contact) the following selections are available. Options: Relay output configured as normally open (make) contact: NO OPEN NO CLOSED Relay output configured as normally closed (break) contact: NC OPEN NC CLOSED  Caution! The setting is not saved if the power supply fails.

7.3.3 Function group INFORMATION

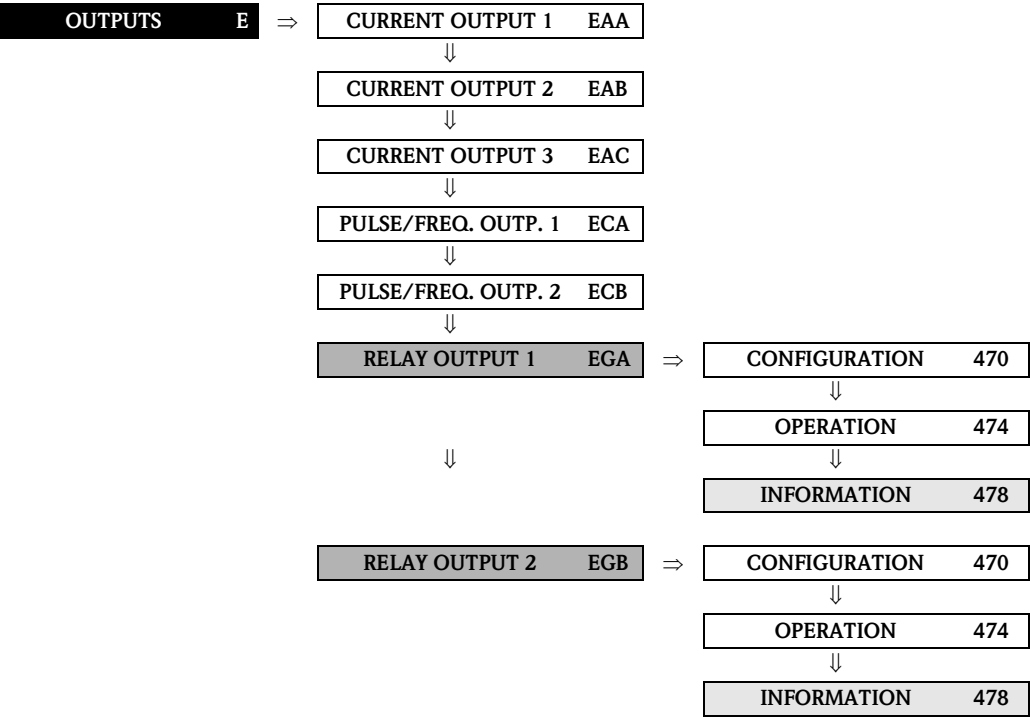


7.3.4 Information on the response of the relay output

General

If you have configured the relay output signal for "LIMIT-VALUE" or "FLOW DIRECTION", you can define the requisite switching points in the ON-VALUE and OFF-VALUE functions. When the measured variable in question reaches one of these predefined values, the relay output switches as shown in the illustrations below.

Relay output configured for "flow direction"

The value you entered in the function ON-VALUE defines the switching point for the positive and negative directions of flow.
If, for example, the switch point you define is = 1 m³/h, the relay drops out at -1 m³/h and pulls up at +1 m³/h. Set the switch point to 0 if your process calls for direct switchover (no switching hysteresis). If low flow cut off is used, it is advisable to set hysteresis to a value greater than or equal to the low flow cut off rate.

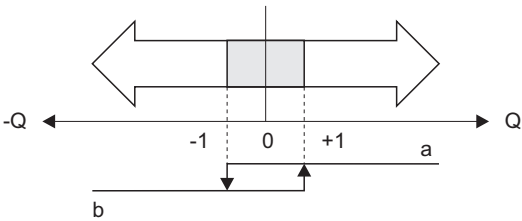


- a Relay energized
- b Relay de-energized

A0001236

Relay output configured for limit value




The relay output signal switches as soon as the measured variable undershoots or overshoots a defined switch point.
Application: Monitoring flow or process-related boundary conditions.


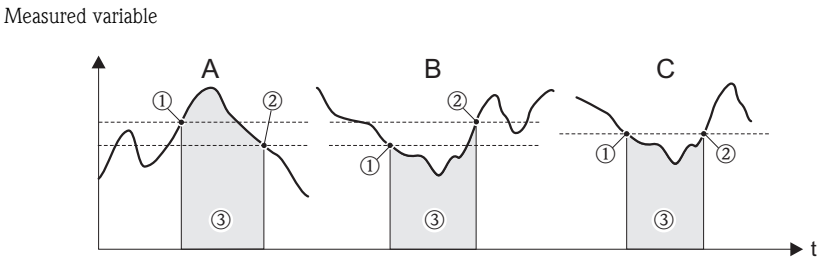


- ① = ON > SWITCH-OFF POINT (maximum safety)
- ② = ON > SWITCH-OFF POINT (minimum safety)
- ③ = Relay de-energised


A0001235

   7.3.5 Switching action of the relay output

Function	Status	Relais coil	Contact*	
			NC	NO
ON (operation)	System in measuring mode	energized		
	System not in measuring mode (power supply failed)	de-energized		

  Function	Status	Relais coil	Contact*		
			NC	NO	
Fault message	System OK	energized	 A0001239	 A0001237	
	(System or process error) Fault → Response to error Outputs /inputs and totalizers	de-energized	 A0001240	 A0001238	
Notice message	System OK	energized	 A0001239	 A0001237	
	(System or process error) Fault → Continuation of measuring	de-energized	 A0001240	 A0001238	
Fault message or notice message	System OK	energized	 A0001239	 A0001237	
	(System or process error) Fault → Response to error or Note → Continuation of measuring	de-energized	 A0001240	 A0001238	
Flow direction (CH1, CH2 AVG. SUM DIFFERENCE)	forward	 A0001241	energized	 A0001239	 A0001237
	reverse	 A0001242	de-energized	 A0001240	 A0001238
Limit value – Volume flow – Totalizer – Sound velocity – Flow velocity (CH1, CH2 AVG. SUM DIFFERENCE)	Limit value not overshoot or undershot	 A0001243	energized	 A0001239	 A0001237
	Limit value overshoot or undershot	 A0001244	de-energized	 A0001240	 A0001238
* Terminal numbers in accordance with the TERMINAL NUMBER function (4780) on Page 91.  Note! If the measuring device has two relays, the factory setting is: ■ Relay 1 → normally open contact ■ Relay 2 → normally closed contact					

8 Block INPUTS

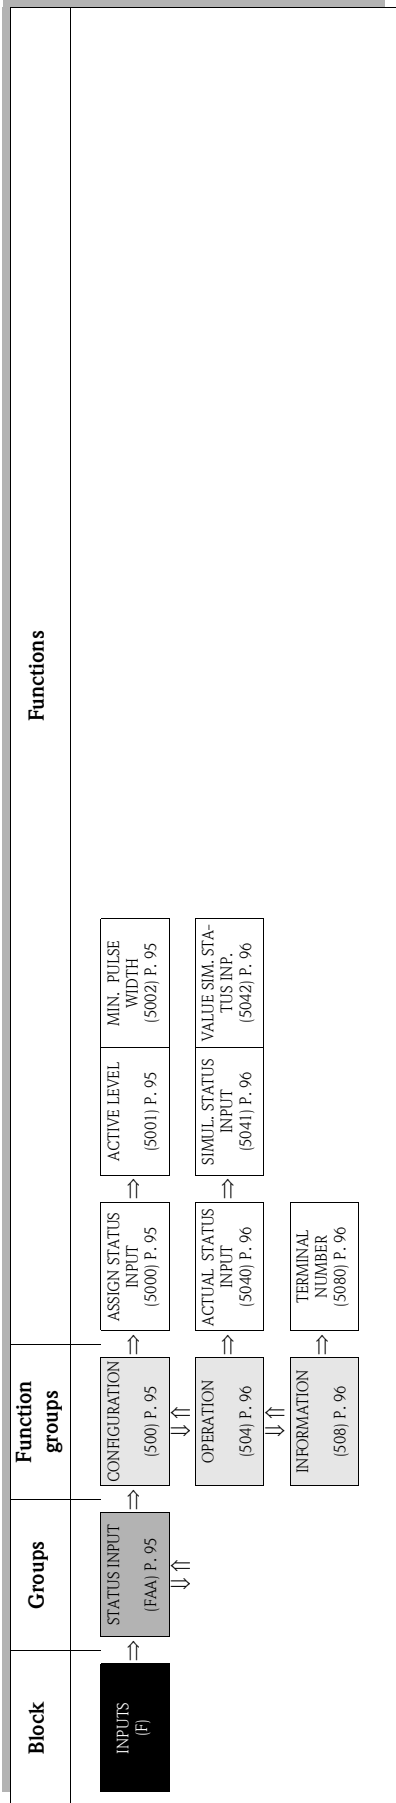


8.1 Group STATUS INPUT

8.1.1 Function group CONFIGURATION


INPUTS	F	⇒	STATUS INPUT	FAA	⇒	CONFIGURATION	500
Functional description							
INPUTS → STATUS INPUT → CONFIGURATION							
ASSIGN STATUS INPUT (5000)		Use this function to assign a switching function to the status input. Options: OFF RESET TOTALIZER (1...3) RESET ALL TOTALIZERS POSITIVE ZERO RETURN (CH1...CH2) POSITIVE ZERO RETURN CH1&CH2 RESET FAULT MESSAGE ZERO ADJUST (CH1...CH2) ACQUISITION (CH1...CH2) ACQUISITION AVG Factory setting: OFF  Caution! Positive zero return is active as long as the level is available at the status input (continuous signal). All other assignments react to a change in level (pulse) at the status input. You can configure the status input for the record of process and device parameters in the "Advanced Diagnostics" group via the options ACQUISITION CH1, ACQUISITION CH2 and ACQUISITION AVG. With each change of the level state, an additional value for each diagnosis parameter will be recorded. ■ ACQUISITION CH1: record of process and device parameters for channel 1 ■ ACQUISITION CH2: record of process and device parameters for channel 2 ■ ACQUISITION AVG: record of the average process and device parameters of channel 1 and channel 2  Note! The options ACQUISITION CH1, ACQUISITION CH2 and ACQUISITION AVG are not available unless the SINGLE SHOT setting was selected in the ACQUISITION MODE function.					
ACTIVE LEVEL (5001)		Use this function to define whether the assigned switch function is released or sustained when the signal level is present (HIGH) or not present (LOW). Options: HIGH LOW Factory setting: HIGH					
MINIMUM PULSE WIDTH (5002)		Use this function to define a minimum pulse width which the input pulse must achieve in order to trigger the selected switching function (see function ASSIGN STATUS INPUT (5000) on page 95). User input: 20...100 ms Factory setting: 50 ms					

 8.1.2 Function group OPERATION




Functional description	
INPUTS → STATUS INPUT → OPERATION	
ACTUAL STATUS INPUT (5040)	Use this function to view the current level of the status input. User interface: HIGH LOW
SIMULATION STATUS INPUT (5041)	Use this function to simulate the status input, i.e. to trigger the function (see function ASSIGN STATUS INPUT (5000) on page 95) assigned to the status input. Options: OFF ON Factory setting: OFF  Note! ■ The "SIMULATION STATUS INPUT" message indicates that simulation is active. ■ The measuring device continues to measure while simulation is in progress, i.e. the current measuring values are output correctly via the other outputs.  Caution! The setting is not saved if the power supply fails.
VALUE SIMULATION STATUS INPUT (5042)	 Note! The function is not visible unless the function SIMULATION STATUS INPUT (5041) is active (= ON). Use this function to define the level to be assumed at the status output during the simulation. This value is used to test downstream devices and the measuring device itself. Options: HIGH LOW Factory setting: LOW  Caution! The setting is not saved if the power supply fails.

8.1.3 Function group INFORMATION

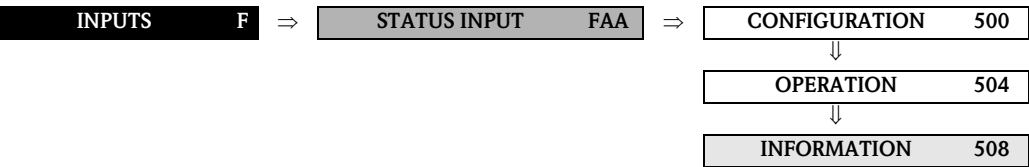

Functional description	
INPUTS → STATUS INPUT → INFORMATION	
TERMINAL NUMBER (5080)	Use this function to display the numbers of the terminals (in the connection compartment) which are used by the status input.

9 Block BASIC FUNCTION

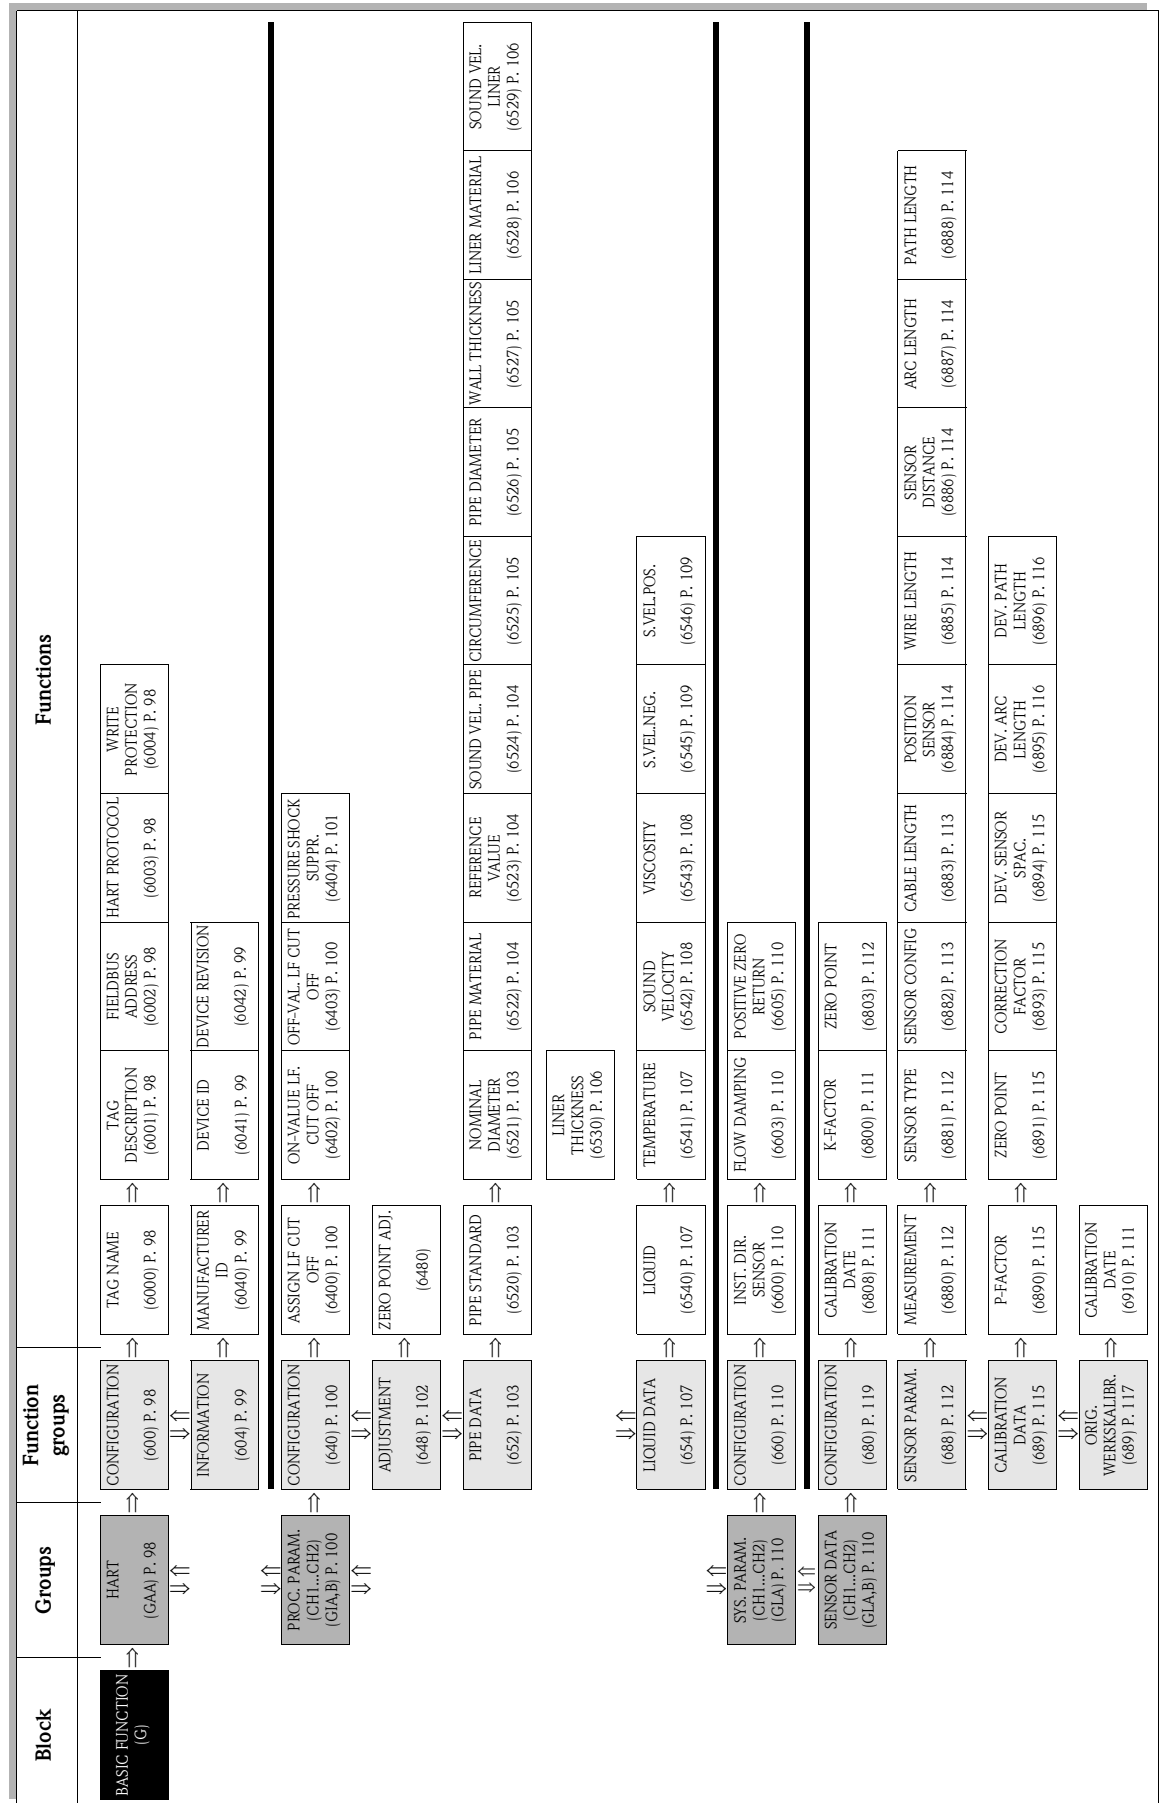


9.1 Group HART

9.1.1 Function group CONFIGURATION

BASIC FUNCTION	G	⇒	HART	GAA	⇒	CONFIGURATION	600
----------------	---	---	------	-----	---	---------------	-----

Functional description	
BASIC FUNCTION → HART → CONFIGURATION	
TAG NAME (6000)	Use this function to enter a tag name for the measuring device. You can edit and read this tag name at the local display or via the HART protocol. User input: max. 8-character text, permitted characters are: A–Z, 0–9, +, –, punctuation marks Factory setting: " _____ " (without text)
TAG DESCRIPTION (6001)	Use this function to enter a tag description for the measuring device. You can edit and read this tag description at the local display or via the HART protocol. User input: max. 16-character text, permitted characters are: A–Z, 0–9, +, –, punctuation marks Factory setting: " _____ " (without text)
FIELD BUS ADDRESS (6002)	Use this function to define the address for the exchange of data with the HART protocol. User input: 0...15 Factory setting: 0  Note! Addresses 1...15: a constant 4 mA current is applied.
HART PROTOCOL (6003)	Use this function to display if the HART protocol is active. User interface: OFF = HART protocol not active ON = HART protocol active  Note! The HART protocol is activated by selecting 4–20 mA HART or 4–20 mA (25 mA) HART in the function CURRENT SPAN, (see Page 49).
WRITE PROTECTION (6004)	Use this function to check whether the measuring device can be write-accessed. User interface: OFF (Data exchange is possible) ON (Data exchange is disabled) Factory setting: OFF  Note! Write protection is activated and deactivated by means of a jumper on the I/O module Operating Instructions Proline Prosonic Flow 93, BA070D/06/en/.


9.1.2 Function group INFORMATION

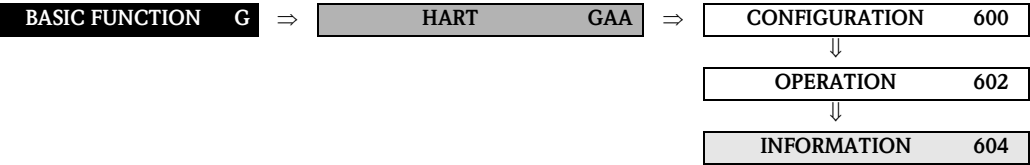



Functional description	
BASIC FUNCTION → HART → OPERATION	
MANUFACTURER ID (6040)	Use this function to view the manufacturer number in decimal numerical format. User interface: 17 (≡ 11 hex) for Endress+Hauser
DEVICE ID (6041)	Use this function to view the device ID in hexadecimal numerical format. User interface: 59 (≡ 89 dez) for Prosonic Flow 93
DEVICE REVISION (6042)	Use this function to view the device-specific revision of the HART-command-interface. Display: e.g.: 7

9.2 Group PROCESS PARAMETER (CH1...CH2)


9.2.1 Function group CONFIGURATION

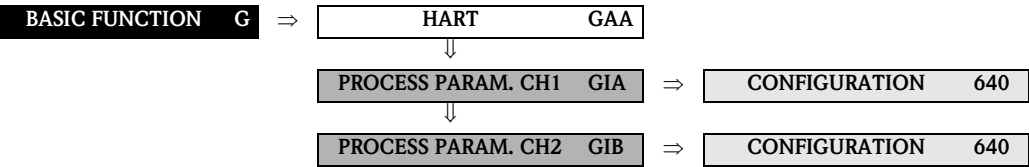

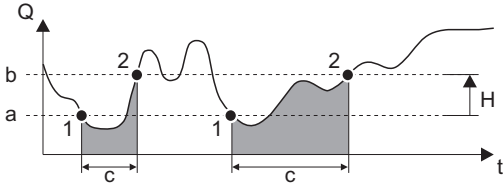Functional description	
BASIC FUNCTION → PROCESS PARAMETER (CH1...CH2) → CONFIGURATION	
ASSIGN LOW FLOW CUT OFF (6400)	Use this function to assign the switch point for low flow cut off rate suppression. Options: OFF VOLUME FLOW Factory setting: VOLUME FLOW
ON-VALUE LOW FLOW CUT OFF (6402)	Use this function to assign a value to the switch-on point for low flow cut off. Low flow cut off is active if the value entered is not equal to 0. The sign of the flow value is highlighted on the display to indicate that low flow cut off is active. User input: 5-digit floating-point number Factory setting: 0 l/s  Note! The appropriate unit is taken from the function UNIT VOLUME FLOW (0402) (see Page 13)
OFF-VALUE LOW FLOW CUT OFF (6403)	Use this function to enter the switch-off (b) point for low flow cut off. Enter the switch-off point as a positive hysteresis (H) from the switch-on point (a). User input: Integer 0...100% Factory setting: 50% Example:  Q = Flow [volume/time] t = Time a = ON-VALUE LOW FLOW CUT OFF (6402) = 200 dm³/h b = OFF-VALUE LOW FLOW CUT OFF (6403) = 10% c = Low flow cut off active 1 = Low flow cut off is switched on at 200 dm³/h 2 = Low flow cut off is switched off at 220 dm³/h

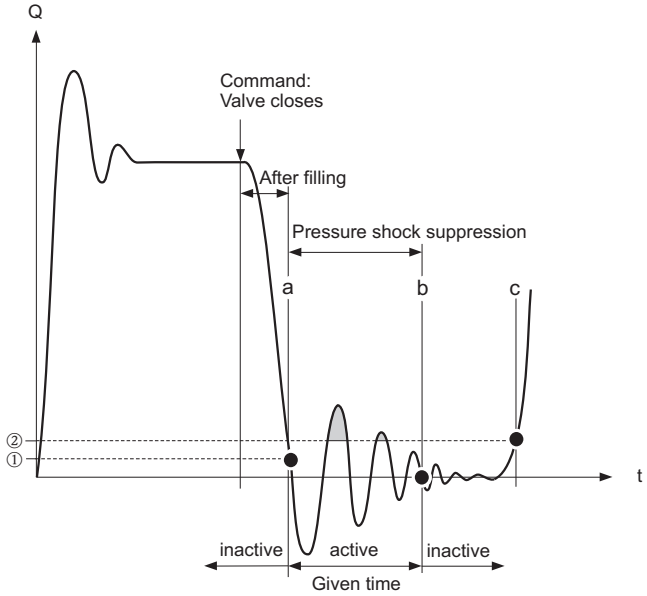
Functional description	
BASIC FUNCTION → PROCESS PARAMETER (CH1...CH2) → CONFIGURATION	
PRESSURE SHOCK SUPPRESSION (6404)	The closure of a valve can cause brief but severe movements of the fluid in the piping system, movements which the measuring system registers. The pulses totalled in this way result in a totalizer reading error, particularly in the case of batching processes. For this reason, the measuring device is equipped with pressure shock suppression (= short-term signal suppression) which can eliminate system-related "disruptions".  Note! Note that pressure shock suppression cannot be used unless the low flow cut off is active, (see function ON-VALUE LOW FLOW CUT OFF on Page 100). Use this function to define the time span for active pressure shock suppression. Activation of the pressure shock suppression Pressure shock suppression is activated after the flow falls below the switch-on point of the low flow cut off (see point 1 in graphic). While pressure shock suppression is active, the following conditions apply: ■ Current output → outputs the current corresponding to zero flow. ■ Pulse/Freq.-output → outputs the frequency corresponding to zero flow. ■ Flow reading on display = → 0. ■ Totalizer reading → the totalizers are pegged at the last correct value. Deactivation of the pressure shock suppression The pressure shock suppression is deactivated after the time interval, set in this function, has passed (see point 2 in graphic).  Note! The actual flow value is displayed and output, when the time interval for the pressure shock suppression has passed and the flow exceeds the switch-off point of the low flow cut off (see point 3 in graphic).  User input: max. 4-digit number, incl. unit: 0.00...100.0 s Factory setting: 0.00 s

9.2.2 Function group ADJUSTMENT

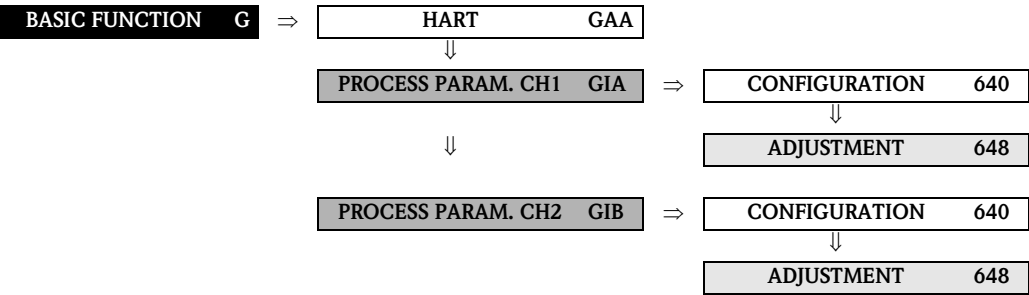

Functional description	
BASIC FUNCTION → PROCESS PARAMETER (CH1...CH2) → ADJUSTMENT	
ZERO POINT ADJUSTMENT (6480)	This function enables a zero point adjustment to be automatically carried out. The new zero point determined by the measuring system is adopted by the ZERO POINT function (see Page 115). Options: CANCEL START Factory setting: CANCEL Caution! Before carrying this out, please refer to the Operating Instructions Proline Prosonic Flow 93 (BA 070D/06/en/....), for a detailed description of the procedure for zero point adjustment. Note! ■ Programming is locked during zero point adjustment The message "ZERO ADJUST RUNNING" appears on the display. ■ If the zero point adjustment is not possible, e.g. with a flow velocity > 0.1 m/s, or has been canceled, then the alarm message "ZERO ADJUST NOT POSSIBLE" is shown on the display. ■ If the Prosonic Flow 93 measuring electronics are fitted with a status input, then the zero point can also be activated by using this input.

9.2.3 Function group PIPE DATA

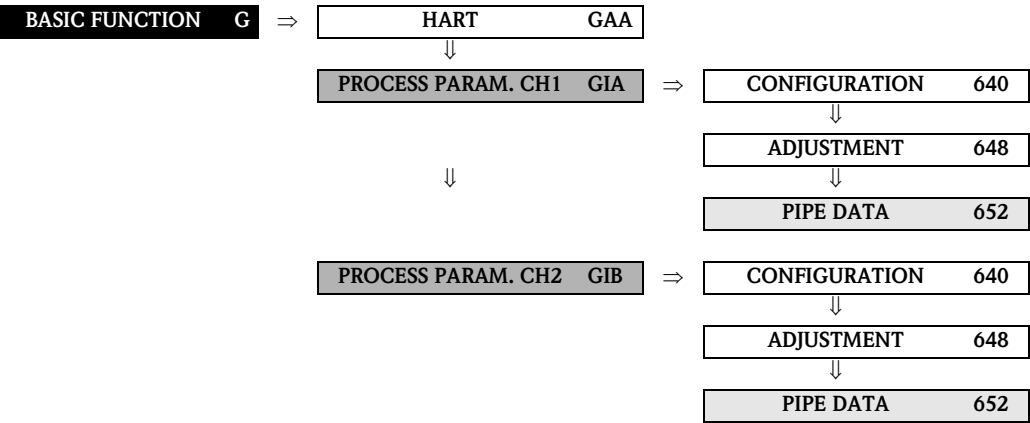


Functional description	
BASIC FUNCTION → PROCESS PARAMETER (CH1...CH2) → PIPE DATA	
PIPE STANDARD (6520)	Use this function to select a pipe standard. Options: OTHERS DIN: PN10, PN16, 28610, 28614, 28615, 28619 ANSI: SCHEDULE 40, SCHEDULE 80 AWWA: CLASS 50, CLASS 53, CLASS 55 Note! The selection specifies the values for the following functions: ■ PIPE MATERIAL (6522) ■ SOUND VELOCITY PIPE (6524) ■ LINER MATERIAL (6528) If you edit these functions the pipe standard will be reset to the option OTHERS. Factory setting: DIN PN10
NOMINAL DIAMETER (6521)	Note! This function does not appear if the option OTHERS was selected in the function PIPE STANDARD (6520). Use this function to select the nominal diameter of the pipe. Options: OTHERS DN: 15/½", 25/1", 40/1½", 50/2", 80/3", 100/4", 150/6", 200/8", 250/10", 300/12", 400/16", 450/18", 500/20", 600/24", 700/28", 750/30", 800/32", 900/36", 1000/40", 1200/48", 1400/54", 1500/60", 1600/64", 1800/72", 2000/80" Note! The selection specifies the values for the following functions: ■ CIRCUMFERENCE (6525) ■ PIPE DIAMETER (6526) ■ WALL THICKNESS (6527) If you edit these functions the pipe standard will be reset to the option OTHERS and the function NOMINAL DIAMETER (6521) does not appear. Factory setting: 80/3"

Functional description BASIC FUNCTION → PROCESS PARAMETER (CH1...CH2) → PIPE DATA	
PIPE MATERIAL (6522)	This function displays the pipe material determined via the value entered in the function PIPE STANDARD (6520). If you edit the predetermined value the pipe standard will be reset to the option OTHERS and the function NOMINAL DIAMETER (6521) does not appear. If a pipe standard was not available for selection and the selection OTHER was made in the function PIPE STANDARD (6520) the pipe material must be entered here. Options: CARBON STEEL, DUCTILE IRON, STAINLESS STEEL, SS ANSI 304, SS ANSI 316, SS ANSI 347, SS ANSI 410, SS ANSI 430, ALLOY C, PVC, PE, LDPE, HDPE, GRP, PVDF, PA, PP, PTFE, GLASS PYREX, ASBESTOS CEMENT, OTHER Factory setting: STAINLESS STEEL
REFERENCE VALUE (6523)	Use this function to enter the thickness of the reference component (e.g. flange) as the basis for measuring the sound velocity of the pipe.  Note! This function does not appear unless the option SOUND VELOCITY PIPE was selected in the function MEASUREMENT (6880, Page 112). User input: 5-digit floating-point number, [unit] Factory setting: 5 mm
SOUND VELOCITY PIPE (6524)	This function displays the sound velocity in the pipe determined via the value entered in the function PIPE STANDARD (6520). If you edit the predetermined value the pipe standard will be reset to the option OTHERS and the function NOMINAL DIAMETER (6521) does not appear. If a pipe standard was not available for selection and the selection OTHER was made in the function PIPE STANDARD (6520) the sound velocity must be entered here. Measuring the sound velocity in the pipe If the sound velocity in the pipe is unknown, it can be measured. To do so, select the option SOUND VELOCITY PIPE in the function MEASUREMENT (6880, Page 112). The sound velocity in the pipe is measured by calling up the function SOUND VELOCITY PIPE (6524). The measured sound velocity, the signal strength and a bar graph appear on the local display. The measurement is valid if 100% is achieved in the bar graph. If you confirm the function with the  key, the SAVE prompt appears. To accept the measured sound velocity, select the option YES by means of the  or  key.  Note! ■ To measure the sound velocity, you require the ultrasonic sensors "DDU18" which you can order as an accessory from Endress+Hauser. ■ A reference value is used as a basis for measuring the sound velocity. This reference value can be edited. (see function REFERENCE VALUE (6523), page 104) User input: Fixed-point number 800...6500 m/s Factory setting: 3120 m/s


Functional description BASIC FUNCTION → PROCESS PARAMETER (CH1...CH2) → PIPE DATA	
CIRCUMFERENCE (6525)	This function displays the outer circumference of the pipe determined via the value entered in the function NOMINAL DIAMETER (6521). If you edit the predetermined value the pipe standard will be reset to the option OTHERS and the function NOMINAL DIAMETER (6521) does not appear. If a nominal diameter was not available for selection and the selection OTHER was made in the function NOMINAL DIAMETER (6521) the outer circumference must be entered here. User input: Fixed-point number 31.4...15708.0 mm Factory setting: 279.3 mm
PIPE DIAMETER (6526)	This function displays the outer diameter of the pipe determined via the value entered in the function NOMINAL DIAMETER (6521). If you edit the predetermined value the pipe standard will be reset to the option OTHERS and the function NOMINAL DIAMETER (6521) does not appear. If a nominal diameter was not available for selection and the selection OTHER was made in the function NOMINAL DIAMETER (6521) the outer diameter must be entered here. User input: Fixed-point number 10.0...5000.0 mm Factory setting: 88.9 mm
WALL THICKNESS (6527)	This function displays the thickness of the pipe walls determined via the value entered in the function NOMINAL DIAMETER (6521). If you edit the predetermined value the pipe standard will be reset to the option OTHERS and the function NOMINAL DIAMETER (6521) does not appear. If a nominal diameter was not available for selection and the selection OTHER was made in the function NOMINAL DIAMETER (6521) the thickness of the pipe wall must be entered here. Measuring the wall thickness If the wall thickness is unknown, it can be measured. To do so, select the option WALL THICKNESS in the function MEASUREMENT (6880, Page 112). The wall thickness is measured by calling up the function WALL THICKNESS (6527). The measured wall thickness, the signal strength and a bar graph appear on the local display. The measurement is valid if 100% is achieved in the bar graph. If you confirm the function with the  key, the SAVE prompt appears. To accept the measured wall thickness, select the option YES by means of the  or  key.  Note! To measure the wall thickness, you require the ultrasonic sensors "DDU19" which you can order as an accessory from Endress+Hauser. User input: Fixed-point number 0.1...100.0 mm Factory setting: 3.2 mm

Functional description BASIC FUNCTION → PROCESS PARAMETER (CH1...CH2) → PIPE DATA	
LINER MATERIAL (6528)	This function displays the liner material of the pipe determined via the value entered in the function PIPE STANDARD (6520). the pipe standard will be reset to the option OTHERS and the function NOMINAL DIAMETER (6521) does not appear. If a pipe standard was not available for selection and the selection OTHER was made in the function PIPE STANDARD (6520) the liner material must be entered here. Options: LINER NONE MORTAR RUBBER TAR EPOXY OTHERS Factory setting: LINER NONE
SOUND VELOCITY LINER (6529)	 Note! This function does not appear if the option LINER NONE was selected in the function LINER MATERIAL (6528). This function displays the sound velocity of the liner determined via the value entered in the function LINER MATERIAL (6520). If you edit the predetermined value the liner material will be reset to the option OTHERS. If a liner material was not available for selection and the selection OTHER was made in the function LINER MATERIAL (6528) the sound velocity of the liner must be entered here. User input: Fixed-point number 800...6500 m/s Factory setting: Depending on the selection in the function LINER MATERIAL (6528)
LINER THICKNESS (6530)	 Note! This function does not appear if the option LINER NONE was selected in the function LINER MATERIAL (6528). Use this function to enter the thickness of the liner. User input: Fixed-point number 0.1...100.0 mm Factory setting: 0 mm

9.2.4 Function group LIQUID DATA

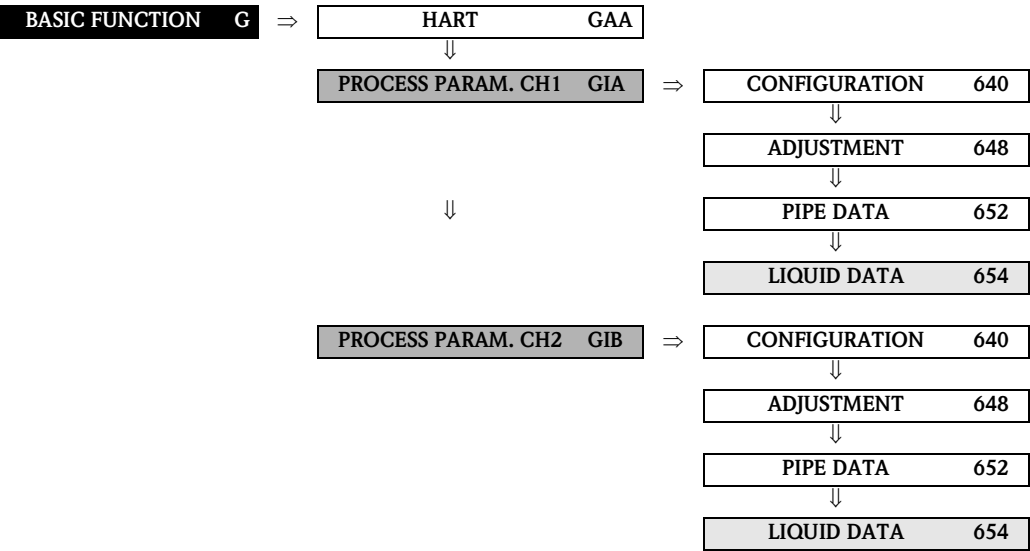


Functional description	
BASIC FUNCTION → PROCESS PARAMETER (CH1...CH2) → LIQUID DATA	
LIQUID (6540)	Use this function to select the liquid in the pipe. Note! The selection specifies the values for the sound velocity and viscosity. If OTHER is selected, these must be entered via the SOUND VELOCITY LIQUID (6542) and VISCOSITY (6543) functions. Options: WATER, SEAWATER, DISTILLED WATER, AMMONIA, ALCOHOL, BENZENE, BROMIDE, ETHANOL, GLYCOL, KEROSENE, MILK, METHANOL, TOLUOL, LUBRICATING OIL, FUEL OIL, PETROL, OTHER Factory setting: WATER
TEMPERATURE (6541)	Use this function to enter the process temperature of the liquid. Via the sound velocity, the value influences the determination of the sensor distance. Enter the process temperature at normal operating conditions to achieve an optimum configuration of the measuring system. User input: Fixed-point number -273.15...726.85 °C (0...1000 K) Factory setting: 20 °C

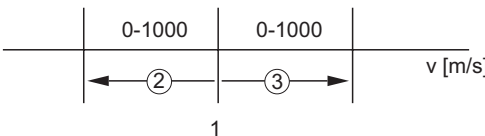Functional description	
BASIC FUNCTION → PROCESS PARAMETER (CH1...CH2) → LIQUID DATA	
SOUND VELOCITY LIQUID (6542)	This function displays the sound velocity of the liquid determined via the values entered in the functions LIQUID (6540) and TEMPERATURE (6541). If you edit the predetermined value the function LIQUID (6540) will be reset to the option OTHERS. If a liquid was not available for selection and the selection OTHER was made in the function LIQUID (6540) the sound velocity must be entered here. Measuring the sound velocity of the liquid If the sound velocity of the liquid is unknown, it can be measured. To do so, select the option SOUND VELOCITY LIQUID in the function MEASUREMENT (6880, Page 112). The sound velocity in the liquid is measured by calling up the function SOUND VELOCITY LIQUID (6542). The result of the measurement appears on the local display. If you confirm the function with the  key, the SAVE prompt appears. To accept the measured sound velocity, select the option YES by means of the  or  key.  Note! To measure the sound velocity, you require the ultrasonic sensors "DDU18" which you can order as an accessory from Endress+Hauser. Transmitter search range: The measuring device searches for the measuring signal within a defined sound velocity range. You specify the search range in the SOUND VELOCITY NEGATIVE (6545) and SOUND VELOCITY POSITIVE (6546) functions. An error message is displayed if the sound velocity of the liquid exceeds the search range.  Note! We recommend you select a smaller search range by unfavourable signal conditions (signal strength < 50%).  1 = Sound velocity of the liquid ② = Lower search range: is specified in the SOUND VELOCITY NEGATIVE (6545) function ③ = Upper search range: is specified in the SOUND VELOCITY POSITIVE (6546) function User input: Fixed-point number 400...3000 m/s Factory setting: 1485 m/s
VISCOSITY (6543)	This function displays the viscosity of the liquid. This is determined via the values entered in the LIQUID (6540) and TEMPERATURE (6541) functions. If you edit the predetermined value the function LIQUID (6540) will be reset to the option OTHERS. If the liquid is not available for selection in the LIQUID (6540) function and the OTHER option was selected the viscosity must be entered here. User input: Fixed-point number 0.0...5000.0 cSt Factory setting: 1 mm²/s

Functional description BASIC FUNCTION → PROCESS PARAMETER (CH1...CH2) → LIQUID DATA	
SOUND VELOCITY NEGATIVE (6545)	Use this function to specify the lower search range for the sound velocity of the liquid. User input: Fixed-point number 0...1000 m/s Factory setting: 500 m/s  Note! Pay particular attention to the information in the SOUND VELOCITY LIQUID (6542) function.
SOUND VELOCITY POSITIVE (6546)	Use this function to specify the upper search range for the sound velocity of the liquid. User input: Fixed-point number 0...1000 m/s Factory setting: 300 m/s  Note! Pay particular attention to the information in the SOUND VELOCITY LIQUID (6542) function.

9.3 Group SYSTEM PARAMETER (CH1...CH2)


9.3.1 Function group CONFIGURATION

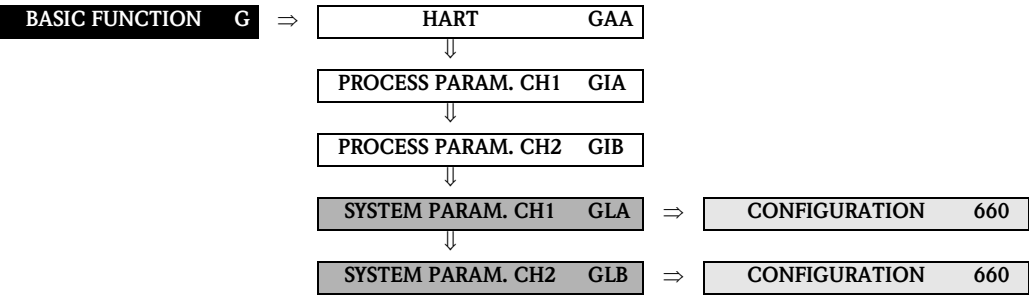

Functional description	
BASIC FUNCTION → SYSTEM PARAMETER CH1 → CONFIGURATION	
INSTALLATION DIRECTION SENSOR (6600)	Use this function to reverse the sign of the flow quantity, if necessary. Options: NORMAL INVERSE Factory setting: NORMAL
FLOW DAMPING (6603)	 Note! The system damping acts on all functions and outputs of the measuring device. Use this function to set the filter depth of the digital filter. This reduces the sensitivity of the measuring signal to interference peaks (e.g. high solids content, gas bubbles in the fluid, etc.). The system reaction time increases with the filter setting. User input: 0...100 s Factory setting: 0
POSITIVE ZERO RETURN (6605)	Use this function to interrupt evaluation of measured variables. This is necessary when a piping system is being cleaned, for example. This setting acts on all function and outputs of the measuring device. Options: OFF ON → Signal output is set to the "ZERO FLOW" value. Factory setting: OFF


9.4 Group SENSOR DATA (CH1...CH2)

9.4.1 Function group CONFIGURATION

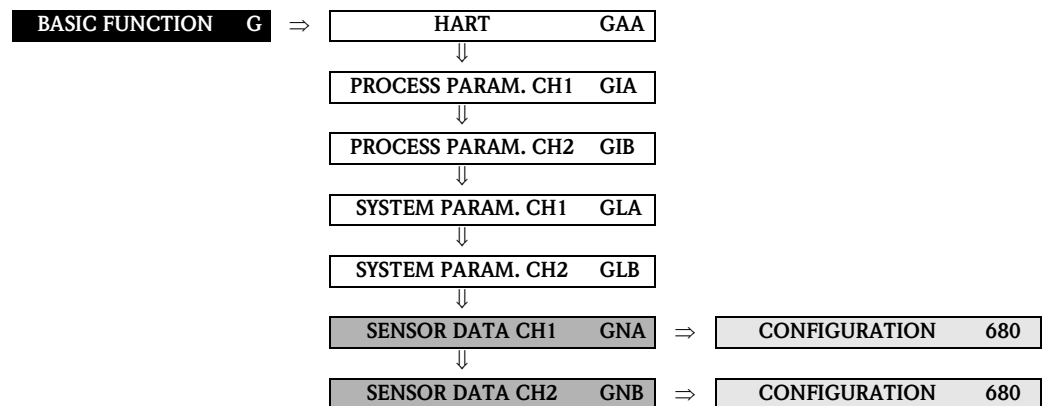

Functional description	
BASIC FUNCTION → SENSOR DATA (CH1...CH2) → CONFIGURATION	
Note! The function group is only available for measuring devices in "Clamp on" version..	
CALIBRATION DATE (6808)	Use this function to view the calibration date (last calibration). Note! ■ If the measuring device is delivered without calibration, the display shows the value 1.0. ■ If the calibration is reset via the function CALIBRATION DATE (6910), the date is overwritten. Factory setting: Format depends on the selection in function FORMAT DATE/TIME (0429)
K-FACTOR (6800)	Use this function to view the current calibration factor for the measuring tube and the measuring sensors. Display: 5-digit floating-point number, (including sign) Factory setting: depends on the nominal diameter and the calibration
ZERO POINT (6803)	Use this function to view the zero-point correction value for the measuring tube and the measuring sensors The calibration at the factory determines the zero-point correction value. Note! If the measuring device is delivered without calibration, the display shows the value 0 Display: 5-digit floating-point number, (including sign) Factory setting: depends on the nominal diameter and the calibration

9.4.2 Function group SENSOR PARAMETER

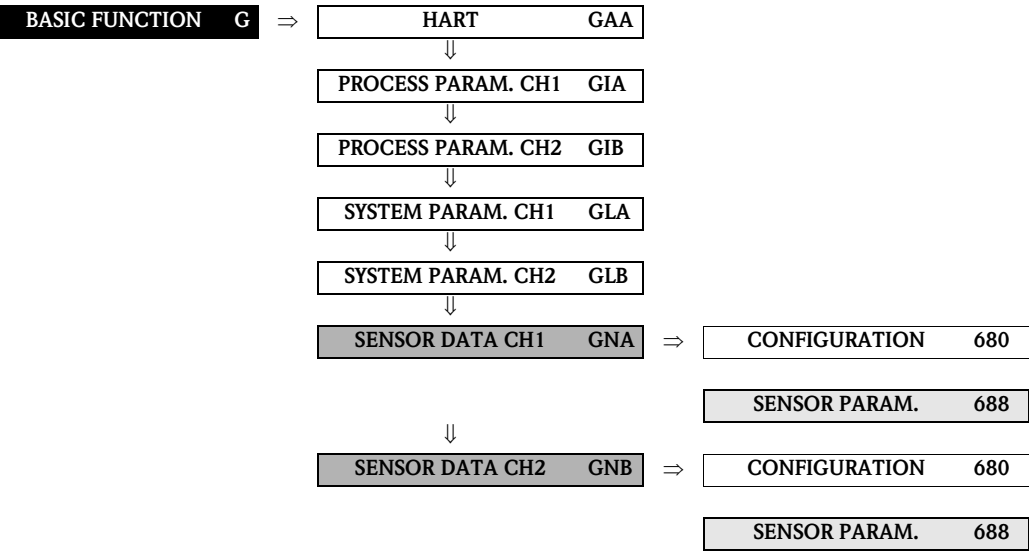


Functional description	
BASIC FUNCTION → SENSOR DATA (CH1...CH2) → SENSOR PARAMETER	
MEASUREMENT (6880)	Options: OFF CLAMP ON INSERTION SOUND VELOCITY LIQUID SOUND VELOCITY PIPE WALL THICKNESS Factory setting: CLAMP ON for channel 1 OFF for channel 2
SENSOR TYPE (6881)	 Note! This function is only available if the OFF setting was not selected in the function MEASUREMENT. Select the appropriate type of measuring sensor. As a rule, a selection is not necessary as the type of measuring sensor has already been set according to the order data (order code). Options: (CLAMP ON in the funtion MEASUREMENT) W-CL-05F-L-B W-CL-1F-L-B W-CL-1F-L-C W-CL-2F-L-B P-CL-05F-L-B P-CL-05F-M-B P-CL-1F-L-B P-CL-1F-M-B P-CL-2F-L-B P-CL-2F-M-B P-CL-6F-L-C P-CL-6F-M-C U-CL-2F-L-A Options: (INSERTION in the function MEASUREMENT) W-IN-1F-L-B Options: (SOUND VELOCITY LIQUID in the function MEASUREMENT) P-CL-1S-L-B P-CL-1S-M-B Options: (SOUND VELOCITY PIPE / WALL THICKNESS in function MEASUREMENT) P-CL-4W-L-B Factory setting: depends on the order code

Functional description BASIC FUNCTION → SENSOR DATA (CH1...CH2) → SENSOR PARAMETER	
SENSOR CONFIGURATION (6882)	Use this function to select the configuration for the ultrasonic sensors, e.g. the number of traverses (in the clamp-on design) or whether single-path or dual-path configuration is present (in the insertion design).  Note! This function is not available unless one of the following options was selected in the function MEASUREMENT (6880): ■ CLAMP ON ■ SOUND VELOCITY LIQUID ■ INSERTION Options: NO. TRAVERSE: 1 ¹⁾ NO. TRAVERSE: 2 ²⁾ NO. TRAVERSE: 3 ¹⁾ NO. TRAVERSE: 4 ²⁾ SINGLE PATH ³⁾ DUAL PATH ³⁾ Factory setting: NO. TRAVERSE: 2  Note! ■ In principle, setting "NO. TRAVERSE: 2" is for the P-sensor DN15 ... DN 65 necessary. ■ For sound velocity measurement it is always required to set this function to "NO. TRAVERSE: 1" or "NO. TRAVERSE: 3". ■ For flow measurement it is basically not recommended to set this function to "NO. TRAVERSE: 3". ¹⁾ This option is not available unless CLAMP ON or SOUND VELOCITY LIQUID was selected in the function MEASUREMENT. ²⁾ This option is not available unless CLAMP ON was selected in the function MEASUREMENT. ³⁾ This option is not available unless INSERTION was selected in the function MEASUREMENT.
CABLE LENGTH (6883)	Select the length of the appropriate connecting cable. As a rule, a selection is not necessary as the length has already been set according to the order data (order code). Options: LENGTH 5 m/15 feet LENGTH 10 m/30 feet LENGTH 15 m/45 feet LENGTH 30 m/90 feet LENGTH 60 m/180 feet Factory setting: depends on the order code

Functional description BASIC FUNCTION → SENSOR DATA (CH1...CH2) → SENSOR PARAMETER	
POSITION SENSOR (6884)	Use this function to view the position of both sensors on the rail.  Note! This option is not available unless CLAMP ON is set in the function MEASUREMENT and the number of traverses is 2 or 4 (see function SENSOR CONFIGURATION (6882)). Display: 5-digit number combination
WIRE LENGTH (6885)	The wire length for assembling the sensors at the correct distance apart appears on the display.  Note! This option is not available unless CLAMP ON was set in the function MEASUREMENT and the number of traverses is 1 or 3, (see function SENSOR CONFIGURATION (6882)). Display: max. 5-digit number, including unit (e.g. 200 mm)
SENSOR DISTANCE (6886)	The distance between sensor 1 and sensor 2 as a length measurement appears on the display. Display: max. 5-digit number, including unit (e.g. 200 mm)
ARC LENGTH (6887)	The arc length on the pipe appears on the display.  Note! This function is not available unless INSERTION was set in the function MEASUREMENT (6880) and the DUAL PATH option was selected in the function SENSOR CONFIGURATION (6882). Display: max. 5-digit number, including unit (e.g. 200 mm)
PATH LENGTH (6888)	The path length appears on the display.  Note! This function is not available unless INSERTION was selected in the function MEASUREMENT. Display: max. 5-digit number, including unit (e.g. 200 mm)


9.4.3 Function group CALIBRATION DATA

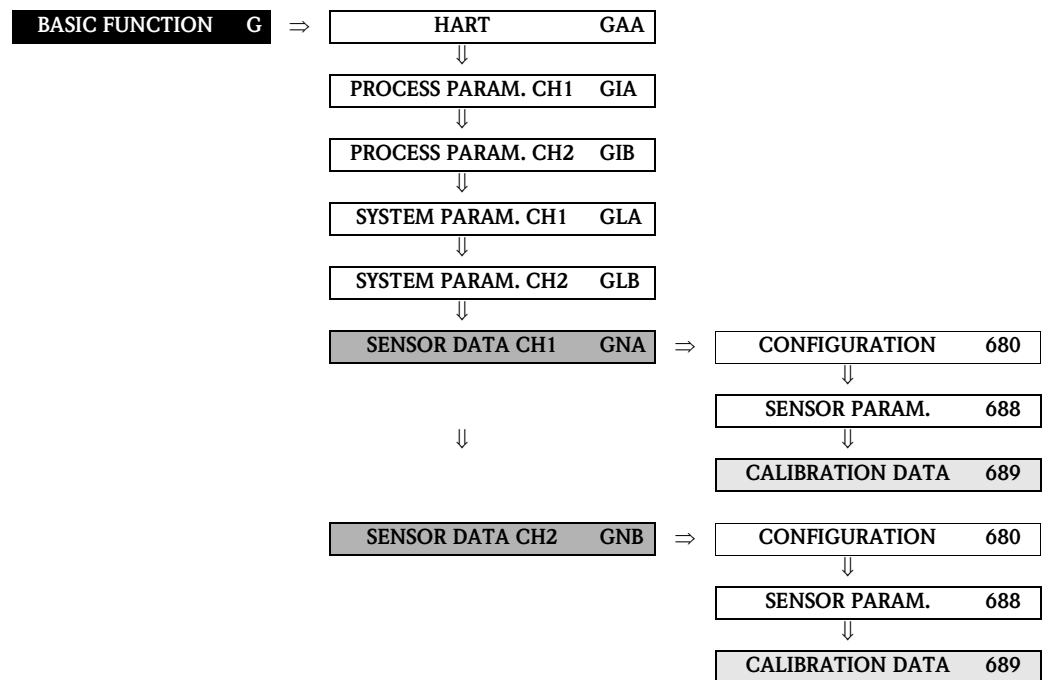

Functional description	
BASIC FUNCTION → SENSOR DATA (CH1...CH2) → CALIBRATION DATA	
P-FACTOR (6890)	This function displays the p-factor. The p-factor indicates the influence of the velocity distribution of the flow profile inside the pipe; it is dependent on the reynolds number. The p-factor varies in the range 0.75...0.95. If the displayed value ranges 0.75...0.94 the measurement will have a reduced linearity.
ZERO POINT (6891)	Use this function to call up or manually change the zero point correction currently being used. User input: 5-digit floating-point number, including unit and sign (e.g. +10.0 ns)
CORRECTION FACTOR (6893)	Use this function to enter a correction factor at the client's site. User input: 1.0000 (= no correction)
DEVIATION SENSOR DISTANCE (6894)	Use this function to enter a deviation value for the sensor distance. Note! This option is not available unless INSERTION was selected in the function MEASUREMENT (6880). User input: 5-digit floating-point number, including unit and sign (e.g. +2.000 mm) Factory setting: 0 mm

Functional description BASIC FUNCTION → SENSOR DATA (CH1...CH2) → CALIBRATION DATA	
DEVIATION ARC LENGTH (6895)	Use this function to enter a deviation value for the arc length.  Note! This function is not available unless INSERTION was set in the function MEASUREMENT (6880) and the DUAL PATH option was selected in the function SENSOR CONFIGURATION (6882). User input: 5-digit floating-point number, including unit and sign (e.g. +2.0000 mm) Factory setting: 0 mm
DEVIATION PATH LENGTH (6896)	Use this function to enter a deviation value for the path length.  Note! This option is not available unless INSERTION was selected in the function MEASUREMENT (6880). User input: 5-digit floating-point number, including unit and sign (e.g. +2.0000 mm) Factory setting: 0 mm

9.4.4 Function group ORIG. CALIBRATION.

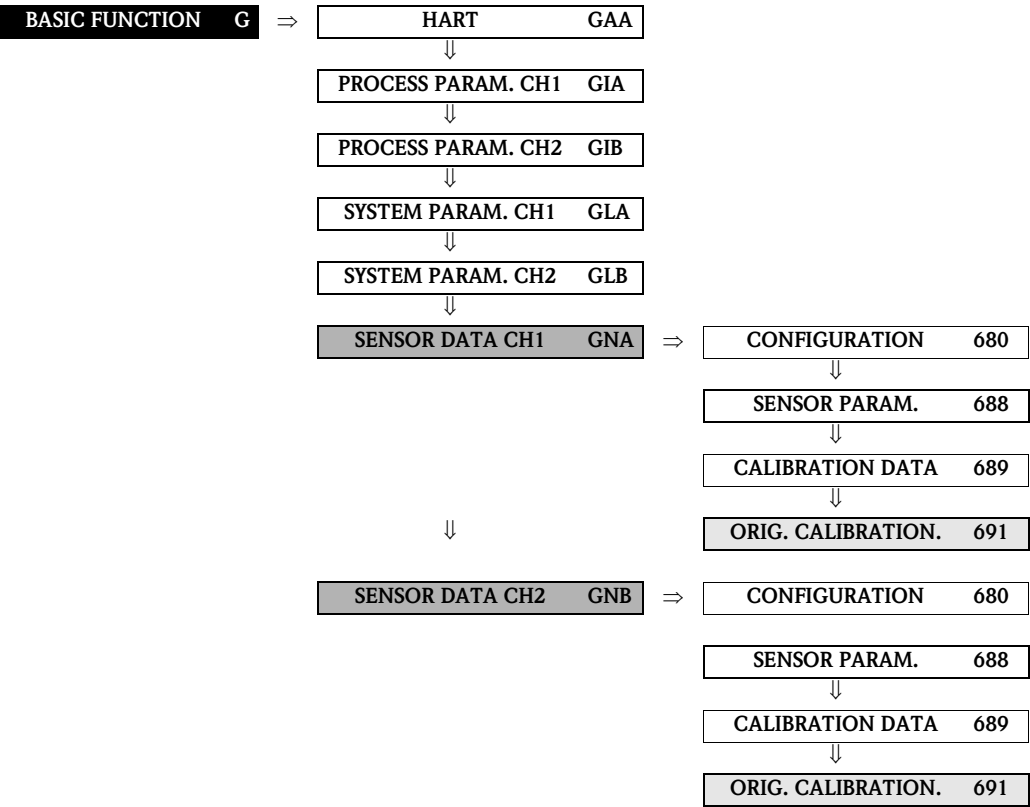


Functional description	
BASIC FUNCTION → SENSOR DATA (CH1...CH2) → ORIG. CALIBRATION.	
CALIBRATION DATE (6910)	This function resets the calibration data of the measuring device to the factory settings. Procedure: 1. Enter current date. 2. Store it. The measuring device resets the calibration data to the factory settings and restarts automatically. Note! ■ The reset of the calibration data is record in the calibration history. ■ The date of the function CALIBRATION DATE (6910) is overwritten. User input: Format depends on the selection in function FORMAT DATE/TIME (0429)

10 Block SPECIAL FUNCTION

Block	Groups	Function groups	Functions															
SPECIAL FUNCTION (F)	ADV. DIAG (CH1,CH2,AVG.) (HEA,B,CIP. 119)	⇒	⇕	CONFIGURATION (760) P. 119	⇕	REF. COND.USER (7601) P. 119	⇕	SELECT. REF.COND (7602) P. 119	⇕	WARNING MODE (7603) P. 120								
		⇕	⇕	ACQUISITION (761) P. 121	⇕	ACQUISITION MOD. (7610) P. 121	⇕	ACQUSI. PERIODE (7611) P. 121	⇕	DO ACQUISITION (7612) P. 121	⇕	RESET HISTORY (7613) P. 121						
		⇕	⇕	VOLUME FLOW (763) P. 122	⇕	REFERENCE VALUE (7630) P. 122	⇕	ACTUAL VALUE (7631) P. 122	⇕	MINIMUM VALUE (7632) P. 122	⇕	MAXIMUM VALUE (7633) P. 122	⇕	HISTORY X (7634) P. 122	⇕	ACTUAL DEVIATION (7635) P. 122	⇕	WARNING LEVEL (7636) P. 122
		⇕	⇕	FLOW VELOCITY (766) P. 123	⇕	REFERENCE VALUE (7640) P. 123	⇕	ACTUAL VALUE (7641) P. 123	⇕	MINIMUM VALUE (7642) P. 123	⇕	MAXIMUM VALUE (7643) P. 123	⇕	HISTORY X (7644) P. 123	⇕	ACTUAL DEVIATION (7645) P. 123	⇕	WARNING LEVEL (7646) P. 123
		⇕	⇕	SIGNAL STRENGTH (765) P. 124	⇕	REFERENCE VALUE (7650) P. 124	⇕	ACTUAL VALUE (7651) P. 124	⇕	MINIMUM VALUE (7652) P. 124	⇕	MAXIMUM VALUE (7653) P. 124	⇕	HISTORY X (7654) P. 124	⇕	ACTUAL DEVIATION (7655) P. 124	⇕	WARNING LEVEL (7656) P. 124
		⇕	⇕	SOUND VELOCITY (766) P. 125	⇕	REFERENCE VALUE (7660) P. 125	⇕	ACTUAL VALUE (7661) P. 125	⇕	MINIMUM VALUE (7662) P. 125	⇕	MAXIMUM VALUE (7663) P. 125	⇕	HISTORY X (7664) P. 125	⇕	ACTUAL DEVIATION (7665) P. 125	⇕	WARNING LEVEL (7666) P. 125
		⇕	⇕	ACT. TRANSIT TIME (767) P. 127	⇕	REFERENCE VALUE (7670) P. 127	⇕	ACTUAL VALUE (7671) P. 127	⇕	MINIMUM VALUE (7672) P. 127	⇕	MAXIMUM VALUE (7673) P. 127	⇕	HISTORY 0 (7674) P. 127	⇕	ACTUAL DEVIATION (7675) P. 127	⇕	WARNING LEVEL (7676) P. 128
		⇕	⇕	ACCEPTANCE RATE (768) P. 129	⇕	REFERENCE VALUE (7680) P. 129	⇕	ACTUAL VALUE (7681) P. 129	⇕	MINIMUM VALUE (7682) P. 129	⇕	MAXIMUM VALUE (7683) P. 129	⇕	HISTORY X (7684) P. 129	⇕	ACTUAL DEVIATION (7685) P. 130	⇕	WARNING LEVEL (7686) P. 130

10.1 Group ADVANCED DIAGNOSTICS (CH1,CH2,AVG)


10.1.1 Function group CONFIGURATION

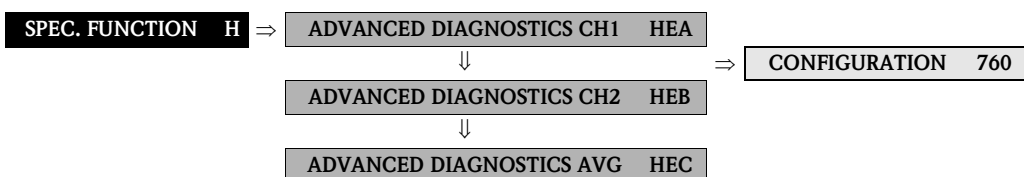

Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS (CH1,CH2,AVG) → CONFIGURATION	
In this function group you define the settings for the additional software functionality "Advanced Diagnostics". The functionality is available for channel 1 (ADVANCED DIAGNOSTICS CH1) and channel 2 (ADVANCED DIAGNOSTICS CH2) as well as for the average values of the parameters volume flow, flow velocity and sound velocity (ADVANCED DIAGNOSTICS AVG).  Note! For further information on the functional concept of the "Advanced Diagnostics" menu please refer to the Operating Instructions Proline Prosonic Flow 93, BA070D/06/en/, chapter "Commissioning"	
REFERENCE CONDITION USER (7601)	Use this function to start determining the user reference status. The following values are determined: ■ VOLUME FLOW ■ FLOW VELOCITY ■ SIGNAL STRENGTH ■ SOUND VELOCITY ■ ACTUAL TRANSIT TIME ■ ACCEPTANCE RATE Option: CANCEL START Factory setting: CANCEL  Note! ■ The values of the user reference status can each be entered manually. These are entered in the REFERENCE VALUE function in the appropriate function group (→ page 122 ff.) ■ We recommend to determine the user reference status in the REFERENCE CONDITION USER (7601) function. If entering the reference values manually, you should have good knowledge of the "Advanced Diagnostics" functionality. ■ If you have entered reference values manually via the REFERENCE VALUE function, these are overwritten if START is selected.
SELECT REFERENCE CONDITION (7602)	Use this function to select the reference status which should be used to compare the advanced diagnostics parameters (see function ACQUISITION MODE (7610) on Page 121). Option: USER Factory setting: USER


Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS (CH1,CH2,AVG) → CONFIGURATION	
WARNING MODE (7603)	Use this function to determine whether a warning should be generated when there is a deviation between the reference status (USER, see function SELECT REFERENCE CONDITION (7602)) and the current measuring values. The values of the following functions are compared to the reference status : ■ ACTUAL VALUE (Volume flow) (7631) ■ ACTUAL VALUE (Flow velocity) (7641) ■ ACTUAL VALUE (Signal strength) (7651) ■ ACTUAL VALUE (Sound velocity) (7661) ■ ACTUAL VALUE (Actual transit time) (7671) ■ ACTUAL VALUE (Acceptance rate) (7681) Option: OFF ON Factory setting: OFF

10.1.2 Function group ACQUISITION

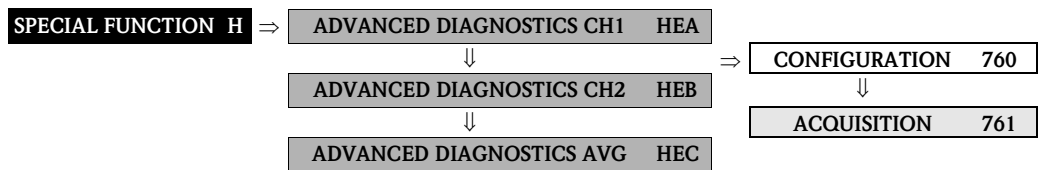


Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS (CH1,CH2,AVG) → ACQUISITION	
ACQUISITION MODE (7610)	Use this function to specify whether the advanced diagnostics parameters should be determined on a periodical or single-shot basis. Option: OFF PERIODICAL SINGLE SHOT Factory setting: OFF Note! ■ The option SINGLE SHOT permits the record of process and device parameters either via the DO ACQUISITION (7612) function or via the status input (see function ASSIGN STATUS INPUT (5000) on page 95). ■ See the Chapter on "Commissioning" in the Operating Instructions Proline Prosonic Flow 93, BA070D/06/en/ for more information on advanced diagnostics.
ACQUISITION PERIODE (7611)	Note! This function is not available unless PERIODICAL was selected in the ACQUISITION MODE function (7610). Use this function to specify the time interval after which the advanced diagnostics parameters should be taken. The time interval starts with the confirmation of the input. User input: 0...99999 s Factory setting: 3600 s Note! A reference status must be defined prior to determining the diagnostics parameters, see function SELECT REFERENCE CONDITION (7602).
DO ACQUISITION (7612)	Note! This function is not available unless SINGLE SHOT was selected in the ACQUISITION MODE (7610) function Use this function to start determining the advanced diagnostics parameters on a single-shot basis. Option: START – CANCEL Factory setting: CANCEL Note! A reference status must be defined prior to determining the diagnostics parameters, see function SELECT REFERENCE CONDITION (7602).
RESET HISTORY (7613)	Use this function to delete all history values. Option: NO – YES Factory setting: NO

10.1.3 Function group VOLUME FLOW

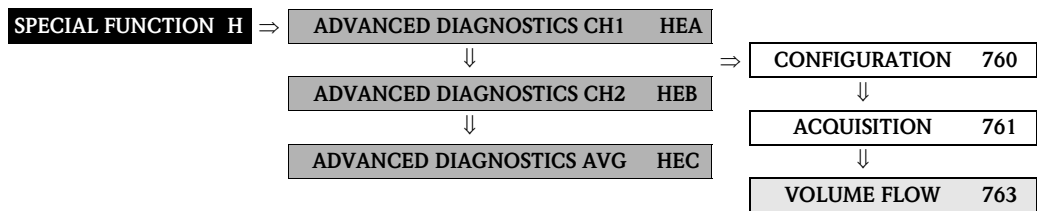


Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS (CH1,CH2,AVG) → VOLUME FLOW	
The volume flow can be monitored in this function group and compared with a reference value. Note! The appropriate unit is taken from the function UNIT VOLUME FLOW (0402) (see Page 13).	
REFERENCE VALUE (7630)	The reference value for the volume flow appears on the display. User Interface: 5-digit floating-point number, including unit and sign Note! The reference value is taken from the REFERENCE CONDITION USER (7601) function. It can also be entered manually here. The reference value entered is overwritten if you select the START option in the REFERENCE CONDITION USER (7601) function.
ACTUAL VALUE (7631)	The measured volume flow appears on the display User Interface: 5-digit floating-point number, including unit and sign
MINIMUM VALUE (7632)	The lowest volume flow value since the saved values were last reset appears on the display. User Interface: 5-digit floating-point number, including unit and sign
MAXIMUM VALUE (7633)	The lowest volume flow value since the saved values were last reset appears on the display User Interface: 5-digit floating-point number, including unit and sign
HISTORY X (7634)	Three of the last ten stored volume flow values appear on the display. Please use the -keys to scroll through the list. 'X' indicates the position. E.g. HISTORY 0 shows the latest value at the first position in the display. To reset the list use the function RESET HISTORY (7613). User Interface: 5-digit floating-point number, including unit and sign
ACTUAL DEVIATION (7635)	This function displays deviation between the measured volume flow and the reference values (USER), see Page 119, selected in the function SELECT REFERENCE CONDITION (7602). User Interface: 5-digit floating-point number, including unit and sign
WARNING LEVEL (7636)	Note! This function is not available unless ON was selected in the WARNING MODE (7603) function. Use this function to specify a limit value for the volume flow. A notice message is generated if the limit value is exceeded. User input: 0...99999% Factory setting: 100%

10.1.4 Function group FLOW VELOCITY

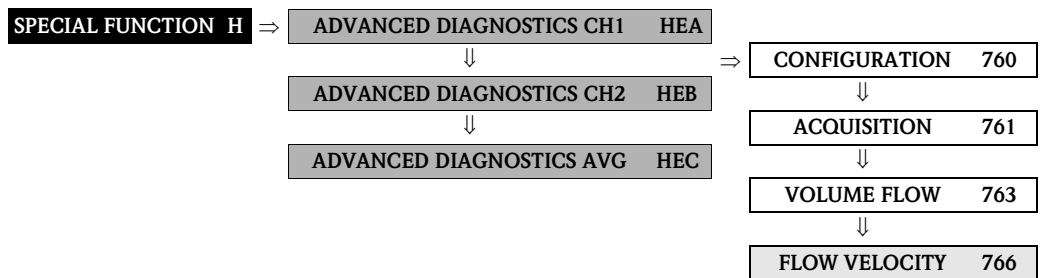


Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS (CH1,CH2,AVG) → FLOW VELOCITY	
The flow velocity can be monitored in this function group and compared with a reference value. Note! The appropriate unit is taken from the function UNIT VELOCITY (0425) (see Page 15).	
REFERENCE VALUE (7640)	The reference value for the flow velocity appears on the display. User Interface: 5-digit floating-point number, including unit and sign Note! The reference value is taken from the REFERENCE CONDITION USER (7601) function. It can also be entered manually here. The reference value entered is overwritten if you select the START option in the REFERENCE CONDITION USER (7601) function.
ACTUAL VALUE (7641)	The measured flow velocity appears on the display User Interface: 5-digit floating-point number, including unit and sign
MINIMUM VALUE (7642)	The lowest flow velocity value since the saved values were last reset appears on the display. User Interface: 5-digit floating-point number, including unit and sign
MAXIMUM VALUE (7643)	The lowest flow velocity value since the saved values were last reset appears on the display User Interface: 5-digit floating-point number, including unit and sign
HISTORY X (7644)	Three of the last ten stored flow velocity values appear on the display. Please use the -keys to scroll through the list. 'X' indicates the position. E.g. HISTORY 0 shows the latest value at the first position in the display. To reset the list use the function RESET HISTORY (7613). User Interface: 5-digit floating-point number, including unit and sign
ACTUAL DEVIATION (7645)	This function displays deviation between the measured flow velocity and the reference values (USER), see Page 119, selected in the function SELECT REFERENCE CONDITION (7602). User Interface: 5-digit floating-point number, including unit and sign
WARNING LEVEL (7646)	Note! This function is not available unless ON was selected in the WARNING MODE (7603) function. Use this function to specify a limit value for the volume flow. A notice message is generated if the limit value is exceeded.. User input: 0...99999% Factory setting: 100%

10.1.5 Function group SIGNAL STRENGTH

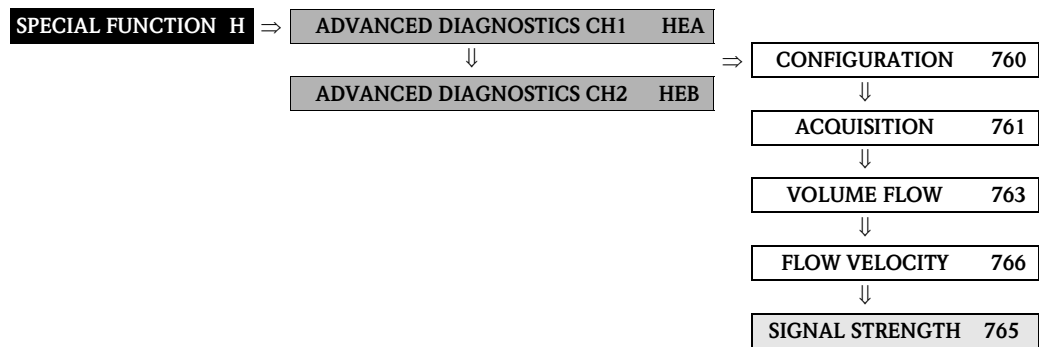

Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS (CH1,CH2,AVG) → SIGNAL STRENGTH	
The signal strength can be monitored in this function group and compared with a reference value.	
REFERENCE VALUE (7650)	The reference value for the signal strength appears on the display. User Interface: 5-digit floating-point number Note! The reference value is taken from the REFERENCE CONDITION USER (7601) function. It can also be entered manually here. The reference value entered is overwritten if you select the START option in the REFERENCE CONDITION USER (7601) function.
ACTUAL VALUE (7651)	The measured signal strength appears on the display User Interface: 5-digit floating-point number
MINIMUM VALUE (7652)	The lowest signal strength value since the saved values were last reset appears on the display. User Interface: 5-digit floating-point number
MAXIMUM VALUE (7653)	The lowest signal strength value since the saved values were last reset appears on the display User Interface: 5-digit floating-point number
HISTORY X (7654)	Three of the last ten stored signal strength values appear on the display. Please use the /-keys to scroll through the list. 'X' indicates the position. E.g. HISTORY 0 shows the latest value at the first position in the display. To reset the list use the function RESET HISTORY (7613). User Interface: 5-digit floating-point number
ACTUAL DEVIATION (7655)	This function displays deviation between the measured signal strength and the reference values (USER), see Page 119, selected in the function SELECT REFERENCE CONDITION (7602). User Interface: 5-digit floating-point number, including unit and sign
WARNING LEVEL (7656)	Note! This function is not available unless ON was selected in the WARNING MODE (7603) function. Use this function to specify a limit value for the volume flow. A notice message is generated if the limit value is exceeded. User input: 0...99999% Factory setting: 100%


10.1.6 Function group SOUND VELOCITY

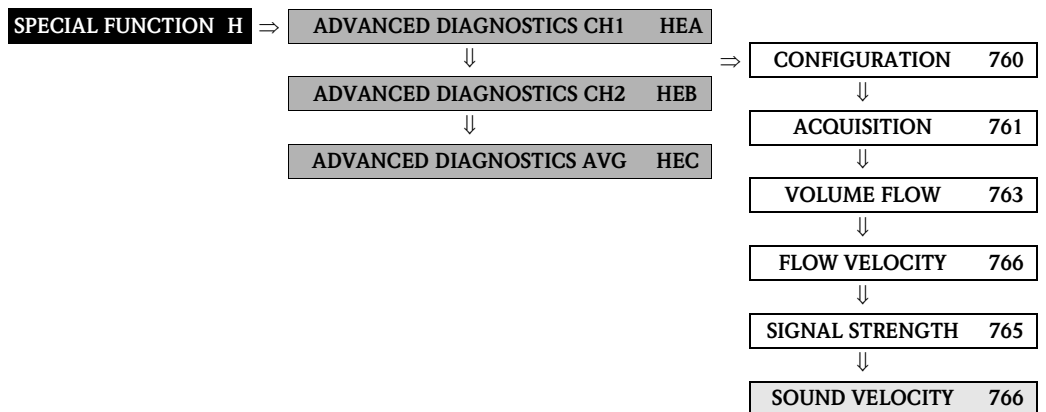

Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS (CH1,CH2,AVG) → SOUND VELOCITY	
The sound velocity can be monitored in this function group and compared with a reference value.  Note! The appropriate unit is taken from the function UNIT VELOCITY (0425) (see Page 15).	
REFERENCE VALUE (7660)	The reference value for the sound velocity appears on the display. User Interface: 5-digit floating-point number, including unit  Note! The reference value is taken from the REFERENCE CONDITION USER (7601) function. It can also be entered manually here. The reference value entered is overwritten if you select the START option in the REFERENCE CONDITION USER (7601) function.
ACTUAL VALUE (7661)	The measured sound velocity appears on the display User Interface: 5-digit floating-point number, including unit
MINIMUM VALUE (7662)	The lowest sound velocity value since the saved values were last reset appears on the display. User Interface: 5-digit floating-point number, including unit
MAXIMUM VALUE (7663)	The lowest sound velocity value since the saved values were last reset appears on the display User Interface: 5-digit floating-point number, including unit
HISTORY X (7664)	Three of the last ten stored sound velocity values appear on the display. Please use the -keys to scroll through the list. 'X' indicates the position. E.g. HISTORY 0 shows the latest value at the first position in the display. To reset the list use the function RESET HISTORY (7613). User Interface: 5-digit floating-point number, including unit
ACTUAL DEVIATION (7665)	This function displays deviation between the measured sound velocity and the reference values (USER), see Page 119, selected in the function SELECT REFERENCE CONDITION (7602). User Interface: 5-digit floating-point number, including unit

Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS (CH1,CH2,AVG) → SOUND VELOCITY	
WARNING LEVEL (7666)	 Note! This function is not available unless ON was selected in the WARNING MODE (7603) function. Use this function to specify a limit value for the volume flow. A notice message is generated if the limit value is exceeded. User input: 0...99999% Factory setting: 100%


10.1.7 Function group ACTUAL TRANSIT TIME

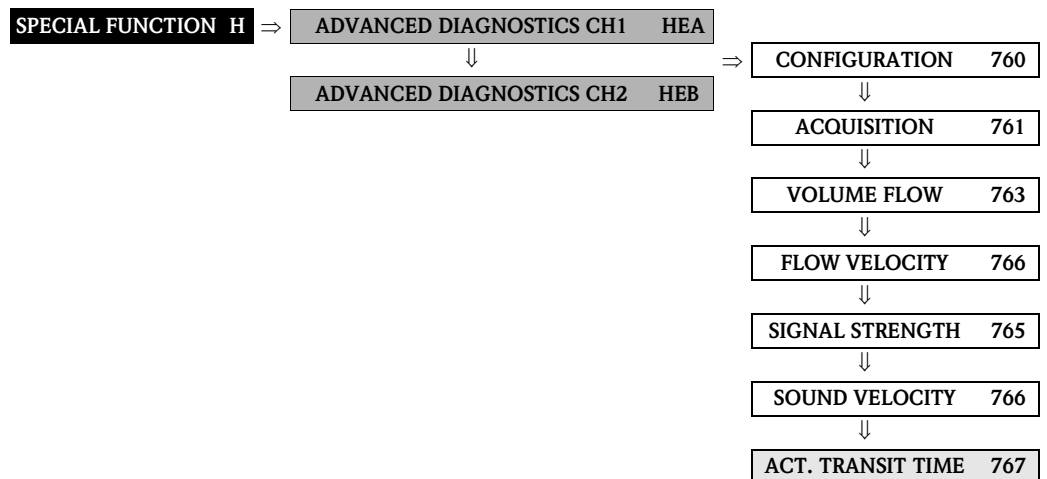

Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS CH1 → ACTUAL TRANSIT TIME	
The actual transit time can be monitored in this function group and compared with a reference value.	
REFERENCE VALUE (7670)	The reference value for the actual transition time appears on the display. User Interface: 5-digit floating-point number, including unit  Note! The reference value is taken from the REFERENCE CONDITION USER (7601) function. It can also be entered manually here. The reference value entered is overwritten if you select the START option in the REFERENCE CONDITION USER (7601) function.
ACTUAL VALUE (7671)	The measured actual transition time appears on the display User Interface: 5-digit floating-point number, including unit
MINIMUM VALUE (7672)	The lowest actual transition time value since the saved values were last reset appears on the display. User Interface: 5-digit floating-point number, including
MAXIMUM VALUE (7673)	The lowest actual transition time value since the saved values were last reset appears on the display User Interface: 5-digit floating-point number, including
HISTORY X (7674)	Three of the last ten stored actual transition time values appear on the display. Please use the -keys to scroll through the list. 'X' indicates the position. E.g. HISTORY 0 shows the latest value at the first position in the display. To reset the list use the function RESET HISTORY (7613). User Interface: 5-digit floating-point number, including unit
ACTUAL DEVIATION (7675)	This function displays deviation between the measured actual transition time and the reference values (USER), see Page 119, selected in the function SELECT REFERENCE CONDITION (7602). User Interface: 5-digit floating-point number, including unit and sign

Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS CH1 → ACTUAL TRANSIT TIME	
WARNING LEVEL (7676)	 Note! This function is not available unless ON was selected in the WARNING MODE (7603) function. Use this function to specify a limit value for the volume flow. A notice message is generated if the limit value is exceeded.. User input: 0...99999% Factory setting: 100%


10.1.8 Function group ACCEPTANCE RATE

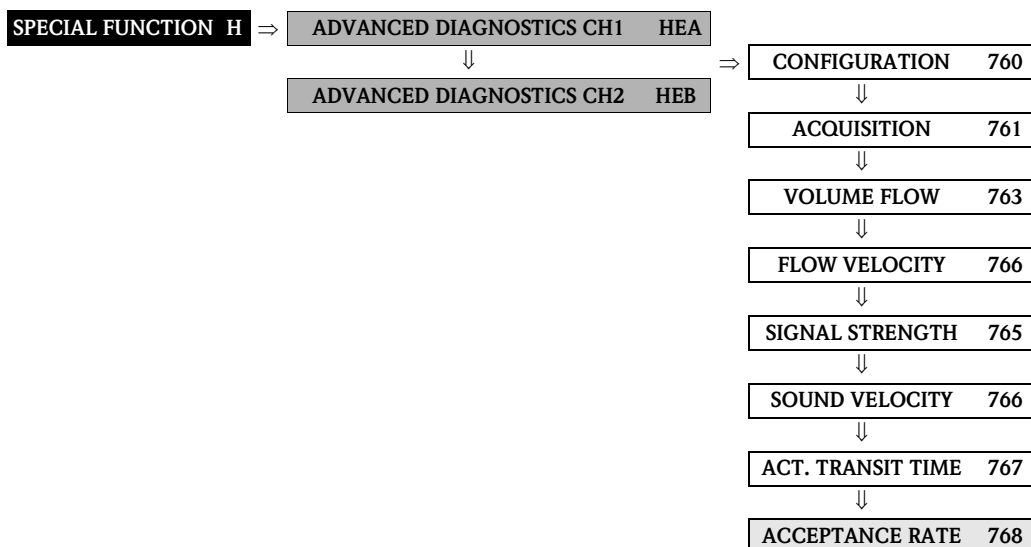

Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS CH1 → ACCEPTANCE RATE	
The acceptance rate can be monitored in this function group and compared with a reference value. The acceptance rate indicates the proportion of measurements which are used in flow calculation.	
REFERENCE VALUE (7680)	The reference value for the acceptance rate appears on the display. User Interface: 5-digit floating-point number  Note! The reference value is taken from the REFERENCE CONDITION USER (7601) function. It can also be entered manually here. The reference value entered is overwritten if you select the START option in the REFERENCE CONDITION USER (7601) function.
ACTUAL VALUE (7681)	The measured acceptance rate appears on the display User Interface: 5-digit floating-point number
MINIMUM VALUE (7682)	The lowest acceptance rate value since the saved values were last reset appears on the display. User Interface: 5-digit floating-point number
MAXIMUM VALUE (7683)	The lowest acceptance rate value since the saved values were last reset appears on the display User Interface: 5-digit floating-point number
HISTORY X (7684)	Three of the last ten stored acceptance rate values appear on the display. Please use the -keys to scroll through the list. 'X' indicates the position. HISTORY 0 shows the latest value at the first position in the display. To reset the list use the function RESET HISTORY (7613). User Interface: 5-digit floating-point number

Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS CH1 → ACCEPTANCE RATE	
ACTUAL DEVIATION (7685)	This function displays deviation between the measured acceptance rate and the reference values (USER), see Page 119, selected in the function SELECT REFERENCE CONDITION (7602). User Interface: 5-digit floating-point number, including unit and sign
WARNING LEVEL (7686)	 Note! This function is not available unless ON was selected in the WARNING MODE (7603) function. Use this function to specify a limit value for the volume flow. A notice message is generated if the limit value is exceeded.. User input: 0...99999% Factory setting: 100%

11 Block SUPERVISION

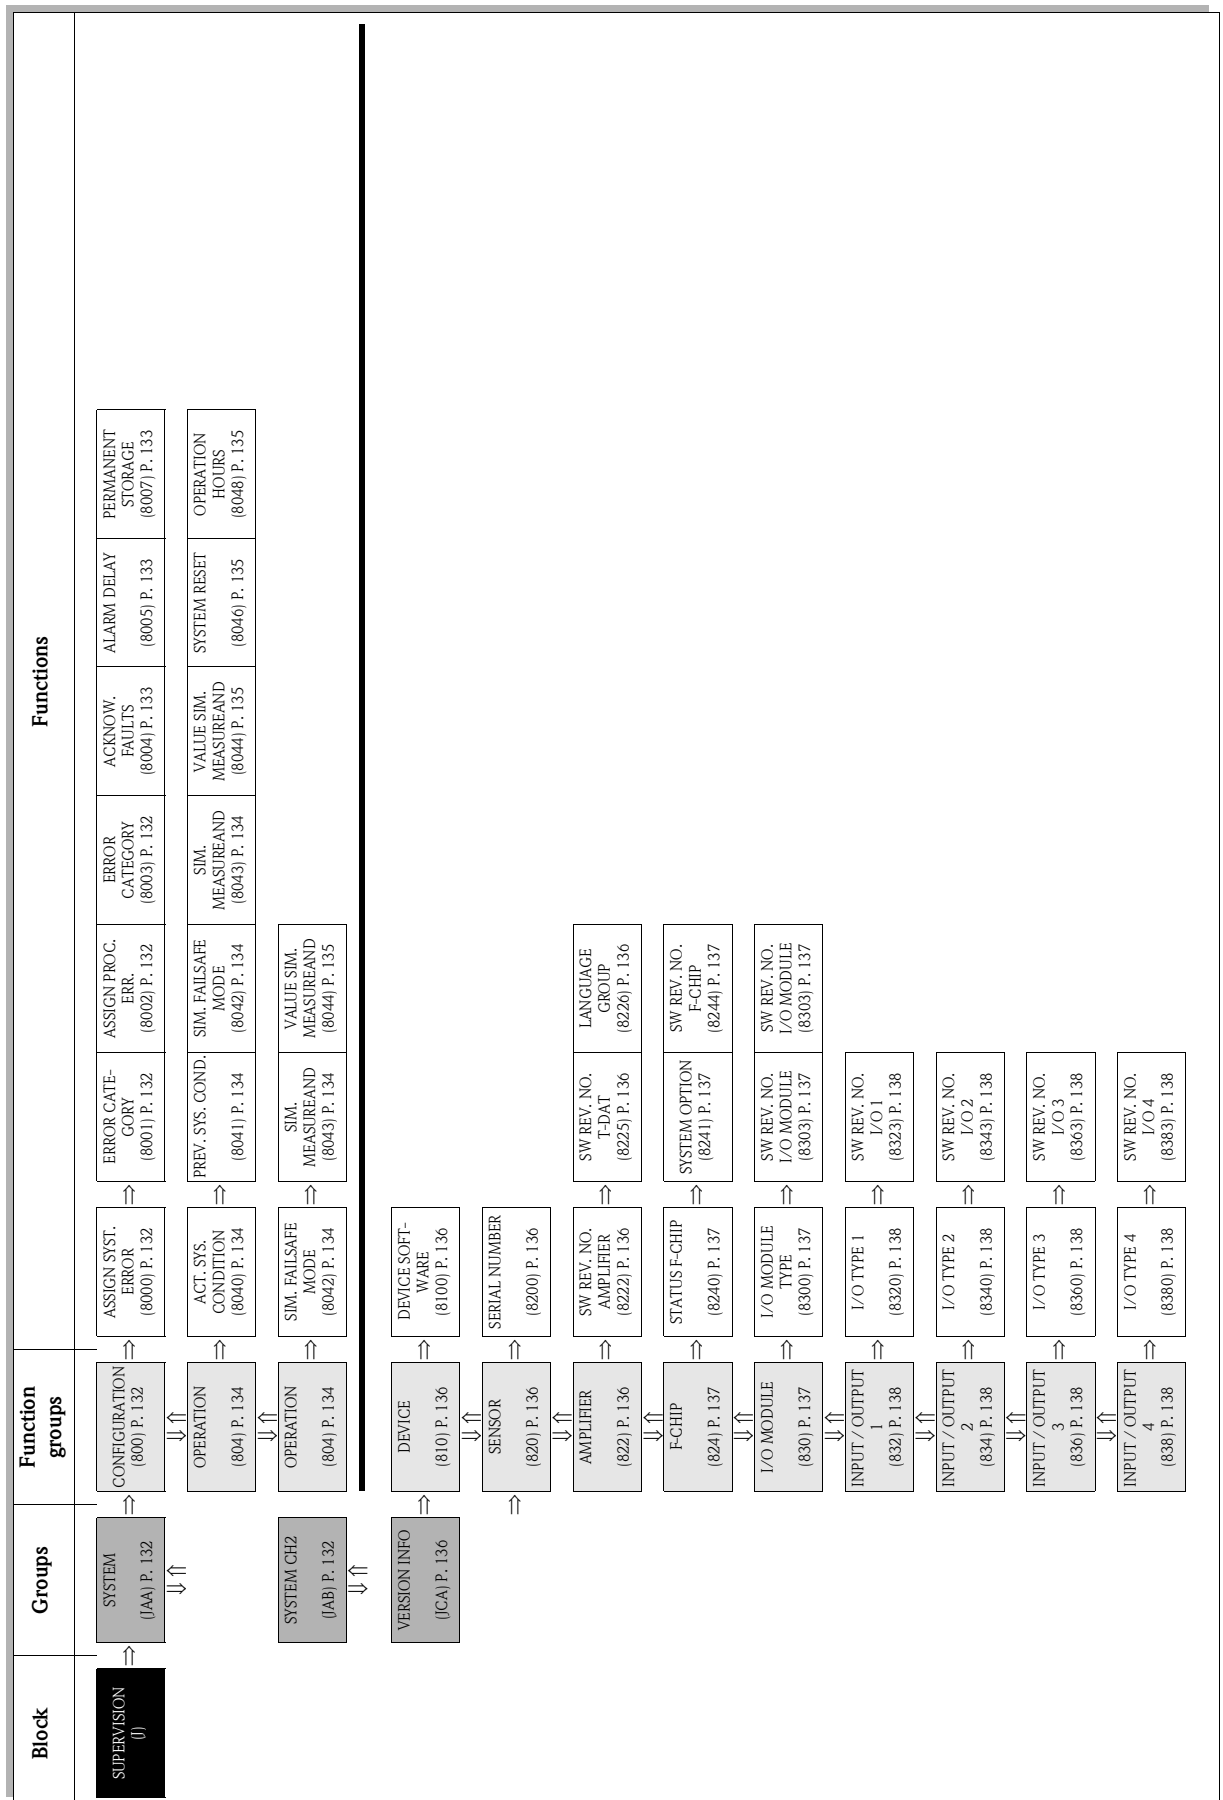

11.1 Group SYSTEM (SYSTEM CH2)


11.1.1 Function group CONFIGURATION

SUPERVISION	J	⇒	SYSTEM	JAA	⇒	CONFIGURATION	800
-------------	---	---	--------	-----	---	---------------	-----

Functional description	
SUPERVISION → SYSTEM → CONFIGURATION	
ASSIGN SYSTEM ERROR (8000)	Use this function to view all system errors and the associated error categories (fault message or notice message). If you select a single system error you can change its error category. User interface: CANCEL List of system errors with an icon preceding each entry.  Note! ■ Press the  key twice to call up the function ERROR CATEGORY (8001). ■ Use the  key combination or select "CANCEL" in the system error list to exit the function. ■ A list of possible system errors is provided in the Operating Instructions Proline Prosonic Flow 93, BA070D/06/en/.
ERROR CATEGORY (8001)	Use this function to define whether a system error triggers a notice message or a fault message. If you select "FAULT MESSAGES", all outputs respond to an error in accordance with their defined error response patterns. Options: NOTICE MESSAGES (display only) FAULT MESSAGES (outputs and display)  Note! Press the  key twice to call up the function ASSIGN SYSTEM ERROR (8000).
ASSIGN PROCESS ERROR (8002)	Use this function to view all process errors and the associated error categories (fault message or notice message). If you select a single process error you can change its error category. User interface: CANCEL List of process errors with an icon preceding each entry.  Note! ■ Press the  key twice to call up the function ERROR CATEGORY (8003). ■ Use the  key combination or select "CANCEL" in the process error list to exit the function. ■ A list of possible process errors is provided in the Operating Instructions Proline Prosonic Flow 93, BA070D/06/en/.
ERROR CATEGORY (8003)	Use this function to define whether a process error triggers a notice message or a fault message. If you select "FAULT MESSAGES", all outputs respond to an error in accordance with their defined error response patterns. Options: NOTICE MESSAGES (display only) FAULT MESSAGES (outputs and display)  Note! Press the  key twice to call up the function ASSIGN PROCESS ERROR (8002).

Functional description SUPERVISION → SYSTEM → CONFIGURATION	
ACKNOWLEDGE FAULTS (8004)	Use this function to define the measuring device's response to fault messages. Options: OFF The measuring device resumes normal operation when the fault is rectified. The fault message disappears automatically. ON The measuring device resumes normal operation when the fault is rectified. The fault message has to be acknowledged by pressing the  key on the local display. Factory setting: OFF
ALARM DELAY (8005)	Use this function to specify a time period for suppressing the appearance of fault or notice messages . Depending on the setting and the type of error, this suppression acts on: ■ Display ■ Relay output ■ Current output ■ Frequency output User input: 0...100 s (in steps of one second) Factory setting: 0 s  Caution! If this function is activated, error and notice messages are delayed by the time corresponding to the setting before being forwarded to the higher-order controller (process controller, etc.). It is therefore imperative to check in advance in order to make sure whether a delay of this nature could affect the safety requirements of the process. If error and notice messages cannot be suppressed, a value of 0 seconds must be entered here.
PERMANENT STORAGE (8007)	This function displays whether permanent storage of all parameters in the EEPROM is switched on or off. Options: OFF ON Factory setting: ON

11.1.2 Function group OPERATION

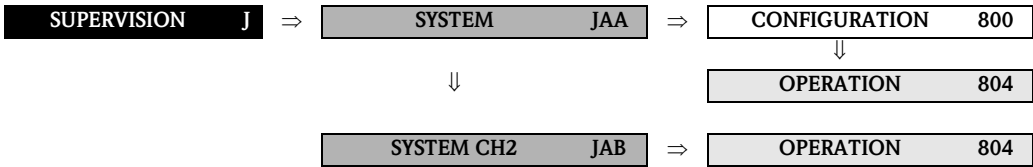

Functional description	
SUPERVISION → [CH2] SYSTEM → OPERATION	
ACTUAL SYSTEM CONDITION (8040)	Use this function to check the present system condition. User interface: "SYSTEM OK" or the fault / notice message with the highest priority.
PREVIOUS SYSTEM CONDITIONS (8041)	Use this function to view the fifteen most recent error and notice messages since measuring last started. User interface: The last 15 fault/notice messages appear on the display.
SIMULATION FAILSAFE MODE (8042)	Note! This function is available in groups SYSTEM+SYSTEM CH2. Use this function to set all inputs, outputs and totalizers to their defined failsafe modes, in order to check whether they respond correctly. During this time, the words "SIMULATION FAILSAFE MODE" appear on the display. Options: ON OFF FAILURE (CH1...CH2) Factory setting: OFF Note! The option FAILURE (CH1...CH2) enables the channel specific simulation of a failure.
SIMULATION MEASURAND (8043)	Note! This function is available in groups SYSTEM+SYSTEM CH2. Use this function to set all inputs, outputs and totalizers to their defined flow-response modes, in order to check whether they respond correctly. During this time, the words "SIMULATION MEASURAND" appear on the display. Options: OFF VOLUME FLOW (CH1...CH2) SOUND VELOCITY (CH1...CH2) SIGNAL STRENGTH (CH1...CH2) Factory setting: OFF Caution! ■ The measuring device cannot be used for measuring while this simulation is in progress. ■ The setting is not saved if the power supply fails.

Functional description SUPERVISION → [CH2] SYSTEM → OPERATION	
VALUE SIMULATION MEASURAND (8044)	 Note! This function is available in groups SYSTEM+SYSTEM CH2.  Note! The function is not visible unless the function SIMULATION MEASURAND (8043) is active. Use this function to specify a selectable value (e.g. 12 m³/s). This is used to test the associated functions in the device itself and downstream signal loops. User input: 5-digit floating-point number, [unit] Factory setting: 0 [unit]  Caution! ■ The setting is not saved if the power supply fails. ■ The appropriate unit is taken from the function group SYSTEM UNITS (ACA), (see Page 13).
SYSTEM RESET (8046)	Use this function to perform a reset of the measuring system. Options: NO RESTART SYSTEM (restart without interrupting power supply) Factory setting: NO
OPERATION HOURS (8048)	The hours of operation of the device appear on the display. Display: Depends on the number of hours of operation elapsed: Hours of operation < 10 hours → display format = 00:00:00 (hr:min:sec) Hours of operation 10...10,000 hours → display format = 0000:00 (hr:min) Hours of operation > 10,000 hours → display format = 000000 (hr)

11.2 Group VERSION INFO

11.2.1 Function group DEVICE

SUPERVISIONJ

⇒

SYSTEMJAA

↓

VERSION INFOJCA

⇒

DEVICE810

Functional description	
SUPERVISION → VERSION INFO → DEVICE	
DEVICE SOFTWARE (8100)	Displays the current device software version.

11.2.2 Function group SENSOR

SUPERVISIONJ

⇒

SYSTEMJAA

↓

VERSION INFOJCA

⇒

DEVICE810

↓

⇒

SENSOR820

Functional description	
SUPERVISION → VERSION INFO → SENSOR	
SERIAL NUMBER (8200)	Use this function to view the serial number of the sensor.

11.2.3 Function group AMPLIFIER

SUPERVISIONJ

⇒

SYSTEMJAA

↓

VERSION INFOJCA

⇒

DEVICE810

↓


SENSOR820

↓

AMPLIFIER822


Functional description	
SUPERVISION → VERSION INFO → AMPLIFIER	
SOFTWARE REVISION NUMBER AMPLIFIER (8222)	Use this function to view the software revision number of the amplifier.
SOFTWARE REVISION NUMBER T-DAT (8225)	Use this function to view the software revision number of the software used to create the content of the T-DAT.
LANGUAGE GROUP (8226)	Use this function to view the language group. The following language groups can be ordered: WEST EU / USA, EAST EU / SCAND., ASIA, CHINESE. Display: available language group  Note! ■ The language options of the available language group are displayed in the LANGUAGE (2000) function. ■ You can change the language group via the configuration software FieldCare. Please do not hesitate to contact your Endress+Hauser sales office if you have any questions.

11.2.4 Function group F-CHIP

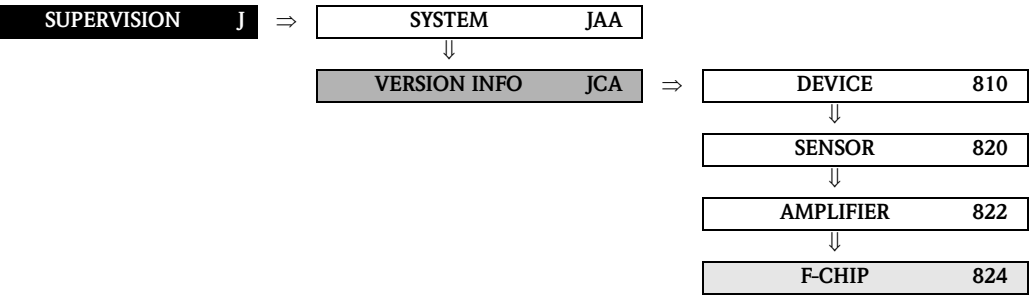


Functional description	
SUPERVISION → VERSION INFO → F-CHIP	
STATUS F-CHIP (8240)	Use this function to check whether an F-CHIP is installed.
SYSTEM OPTION (8241)	Note! This function is not available unless the measuring device is equipped an F-CHIP. Use this function to check which system option is installed.
SOFTWARE REVISION NUMBER F-CHIP (8244)	Note! This function is not available unless the measuring device is equipped an F-CHIP. Use this function to view the software revision number of the F-CHIP.

11.2.5 Function group I/O MODULE

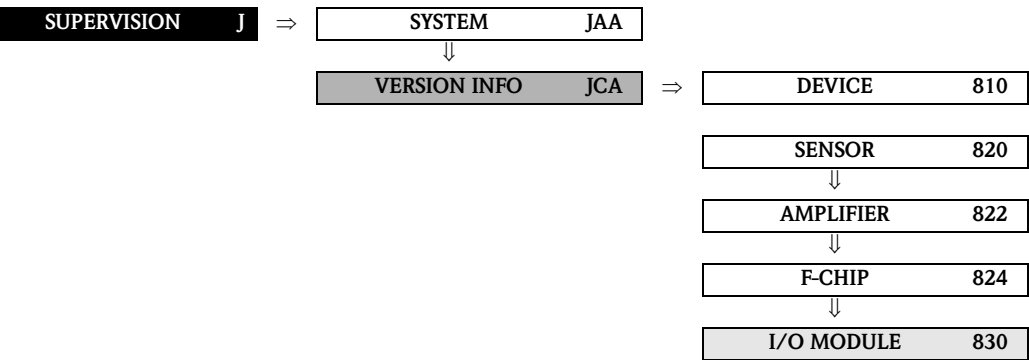

Functional description	
SUPERVISION → VERSION INFO → I/O MODULE	
I/O MODULE TYPE (8300)	Use this function to view the configuration of the I/O module complete with terminal numbers.
SOFTWARE REVISION NUMBER I/O MODULE (8303)	Use this function to view the software revision number of the I/O module.

11.2.6 Function groups INPUT /OUTPUT 1...4

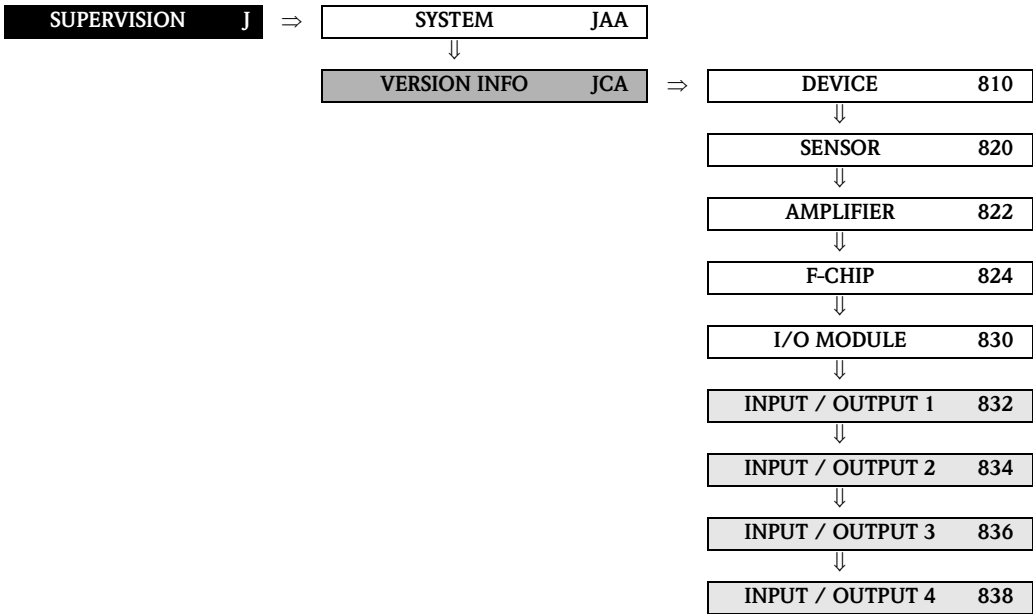

Functional description	
SUPERVISION → VERSION INFO → INPUT / OUTPUT 1...4	
TYPE INPUT/OUTPUT: 1 = (8320) 2 = (8340) 3 = (8360) 4 = (8380)	Use this function to view the assembly of the I/O sub-module.
SOFTWARE REVISION NUMBER I/O SUB-MODULE: 1 = (8323) 2 = (8343) 3 = (8363) 4 = (8383)	Use this function to view the software revision number of the I/O sub-module.

12 Factory settings

12.1 SI units

Parameter	Factory setting
Nominal diameter	80 [mm]
Low flow cut off ($v \approx 0,04$ m/s)	12 [dm ³ /min]
Full scale value ($v \approx 2,5$ m/s)	750 [dm ³ /min]
Pulse value	5.0 [dm ³]
Unit totalizer	dm ³
Unit length	mm
Unit temperature	° C

12.2 US units (for USA and Canada only)

Parameter	Factory setting
Nominal diameter	3"
Low flow cut off ($v \approx 0,04$ m/s)	2.5 [gal/min]
Full scale value ($v \approx 2,5$ m/s)	200 [gal/min]
Pulse value	2.0 [gal]
Unit totalizer	gal
Unit length	mm
Unit temperature	° C

12.3 Language

Country	Language
Australia	English
Austria	Deutsch
Belgium	English
Canada	English
China	Chinese
Czech Republic	Czech
Denmark	English
England	English
Finland	Suomi
France	Francais
Germany	Deutsch
Hong Kong	English
Hungary	English
India	English
Indonesia	Bahasa Indonesia
Instruments International	English
Italy	Italiano
Japan	Japanese
Malaysia	English
Netherlands	Nederlands
Norway	Norsk
Poland	Polish
Portugal	Portuguese
Russia	Russian
Singapore	English
South Africa	English
Spain	Espanol
Sweden	Svenska
Switzerland	Deutsch
Thailand	English
USA	English

13 Index function matrix

Blocks

A = MEASURED VARIABLES	9
B = QUICK SETUP	17
C = USER INTERFACE	25
D = TOTALIZER	42
E = OUTPUT	47
F = INPUT	94
G = BASIC FUNCTION	97
H = SPECIAL FUNCTION	118
J = SUPERVISION	131

Groups

AAA = MEASURING VALUES	10
ACA = SYSTEM UNITS	13
AEA = SPECIAL UNITS	16
CAA = CONTROL	26
CCA = MAIN LINE	30
CEA = ADDITIONAL LINE	34
CGA = INFORMATION LINE	38
DAA, DAB, DAC = TOTALIZER (1...3)	43
DJA = HANDLING TOTALIZER	46
EAA, EAB, EAC = CURRENT OUTPUT (1...3)	48
ECA, ECB = PULSE/FREQ. OUTPUT (1...2)	59
EGA, EGB = STATUS/RELAY OUTPUT (1...2)	85
FAA = STATUS INPUT	95
GAA = HART	98
GIA, GIB = PROCESS PARAMETER (CH1...CH2)	100
GLA, GLB = SYSTEM PARAMETER (CH1...CH2)	110
GNA, GNB = SENSOR DATA (CH1...CH2)	111
HEA, HEB, HEC = ADV. DIAG. (CH1, CH2, AVG)	119
JAA = SYSTEM	132
JAB = SYSTEM CH2	134
JCA = VERSION INFO	136

Function groups

000 = MAIN VALUES CH1	10
006 = MAIN VALUES CH2	11
008 = CALCULATED MAIN VALUES	12
040 = CONFIGURATION	13
042 = ADDITIONAL CONFIGURATION	15
060 = ARBITRARY UNIT	16
200 = BASIC CONFIGURATION	26
202 = UNLOCKING/LOCKING	28
204 = OPERATION	29
220 = CONFIGURATION	30
222 = MULTIPLEX	32
240 = CONFIGURATION	34
242 = MULTIPLEX	36
260 = CONFIGURATION	38
262 = MULTIPLEX	40
300 = CONFIGURATION	43
304 = OPERATION	45
400 = CONFIGURATION	48
404 = OPERATION	57
408 = INFORMATION	58
420 = CONFIGURATION	59

430 = OPERATION	80
438 = INFORMATION	84
470 = CONFIGURATION	85
474 = OPERATION	89
478 = INFORMATION	91
500 = CONFIGURATION	95
504 = OPERATION	96
508 = INFORMATION	96
600 = CONFIGURATION	98
604 = INFORMATION	99
640 = CONFIGURATION	100
648 = ADJUSTMENT	102
652 = PIPE DATA	103
654 = LIQUID DATA	107
660 = CONFIGURATION	110
680 = EINSTELLUNGEN	111
688 = SENSOR PARAMETER	112
689 = CALIBRATION DATA	115
760 = CONFIGURATION	119
761 = ACQUISITION	121
763 = VOLUME FLOW	122
764 = FLOW VELOCITY	123
765 = SIGNAL STRENGTH	124
766 = SOUND VELOCITY	125
767 = ACTUAL TRANSITION TIME	127
768 = ACCEPTANCE RATE	129
800 = CONFIGURATION	132
804 = OPERATION	134
820 = AUFNEHMER	136
820 = SENSOR	136
822 = AMPLIFIER	136
824 = F-CHIP	137
830 = I/O MODULE	137
832 = INPUT/OUTPUT 1	138
834 = INPUT/OUTPUT 2	138
836 = INPUT/OUTPUT 3	138
838 = INPUT/OUTPUT 4	138

Functions 0...

0001 = VOLUME FLOW CH1	10
0002 = SOUND VELOCITY CH1	10
0003 = FLOW VELOCITY CH1	10
0007 = SIGNAL STRENGTH CH1	10
0061 = VOLUME FLOW CH2	11
0062 = SOUND VELOCITY CH2	11
0063 = FLOW VELOCITY CH2	11
0067 = SIGNAL STRENGTH CH2	11
0083 = AVERAGE VOLUME FLOW	12
0084 = VOLUME FLOW SUM	12
0085 = VOLUME FLOW DIFFERENCE	12
0086 = AVERAGE SOUND VELOCITY	12
0087 = AVERAGE FLOW VELOCITY	12
0402 = UNIT VOLUME FLOW	13
0403 = UNIT VOLUME	14
0422 = UNIT TEMPERATURE	15
0423 = UNIT VISCOSITY	15
0424 = UNIT LENGTH	15
0425 = UNIT VELOCITY	15
0602 = TEXT ARBITRARY VOLUME	16
0603 = FACTOR ARBITRARY VOLUME	16

1...

1001 = QUICK SETUP SENSOR	17
1002 = QUICK SETUP COMMISSIONING	17
1003 = QUICK SETUP PULSATING FLOW	17
1009 = T-DAT SAVE/LOAD	18

2...

2000 = LANGUAGE	26
2002 = DISPLAY DAMPING	26
2003 = CONTRAST LCD	27
2004 = X-LINE CALCULATED MAIN VALUES	27
2020 = ACCESS CODE	28
2021 = DEFINE PRIVATE CODE	28
2022 = STATUS ACCESS	28
2040 = TEST DISPLAY	29
2200 = ASSIGN	30
2201 = 100% VALUE	31
2202 = FORMAT	31
2220 = ASSIGN	32
2221 = 100% VALUE	32
2222 = FORMAT	33
2400 = ASSIGN	34
2401 = 100% VALUE	35
2402 = FORMAT	35
2403 = DISPLAY MODE	35
2420 = ASSIGN	36
2421 = 100% VALUE	37
2422 = FORMAT	37
2423 = DISPLAY MODE	37
2600 = ASSIGN	38
2601 = 100% VALUE	39
2602 = FORMAT	39
2603 = DISPLAY MODE	39
2620 = ASSIGN	40
2621 = 100% VALUE	41
2622 = FORMAT	41

2623 = DISPLAY MODE	41
4700 = ASSIGN RELAY	86

3...

3000 = ASSIGN	43
3001 = UNIT TOTALIZER	43
3002 = TOTALIZER MODE	44
3003 = RESET TOTALIZER	44
3040 = SUM	45
3041 = OVERFLOW	45
3800 = RESET ALL TOTALIZERS	46
3801 = FAILSAFE ALL TOTALIZERS	46

4...

4000 = ASSIGN CURRENT OUTPUT	48
4001 = CURRENT SPAN	49
4002 = VALUE 0_4 mA	50,51
4003 = VALUE 20 mA	52
4004 = MEASURING MODE	53,54
4005 = TIME CONSTANT	55
4006 = FAILSAFE MODE	56
4040 = ACTUAL CURRENT	57
4041 = SIMULATION CURRENT	57
4042 = VALUE SIMULATION CURRENT	57
4080 = TERMINAL NUMBER	58
4200 = OPERATION MODE	59
4201 = ASSIGN FREQUENCY	59
4202 = START VALUE FREQUENCY	60
4203 = END VALUE FREQUENCY	60
4204 = VALUE-F LOW	61
4205 = VALUE-F HIGH	61
4206 = MEASURING MODE	63
4207 = OUTPUT SIGNAL	65
4208 = TIME CONSTANT	67
4209 = FAILSAFE MODE	68
4211 = FAILSAFE VALUE	68
4221 = ASSIGN PULSE	69
4222 = PULSE VALUE	69
4223 = PULSE WIDTH	70
4225 = MEASURING MODE	71
4226 = OUTPUT SIGNAL	72
4227 = FAILSAFE MODE	75
4241 = ASSIGN STATUS	76
4242 = ON-VALUE	77
4243 = SWITCH-ON DELAY	77
4244 = OFF-VALUE	77
4245 = SWITCH-OFF DELAY	78
4246 = MEASURING MODE	78
4247 = TIME CONSTANT	79
4301 = ACTUAL FREQUENCY	80
4302 = SIMULATION FREQUENCY	80
4303 = VALUE SIMULATION FREQUENCY	81
4341 = ACTUAL STATUS	83
4342 = SIMULATION SWITCH POINT	83
4343 = VALUE SIMULATION SWITCH POINT	83
4380 = TERMINAL NUMBER	84
4700 = ASSIGN RELAY	85
4701 = ON-VALUE	86
4702 = SWITCH-ON DELAY	87

4703 = OFF-VALUE	87
4704 = SWITCH-OFF DELAY	87
4705 = MEASURING MODE	88
4706 = TIME CONSTANT	88
4740 = ACTUAL STATUS RELAY	89
4741 = SIMULATION SWITCH POINT	89
4742 = VALUE SIMULATION SWITCH POINT	90
4780 = TERMINAL NUMBER	91

5...

5000 = ASSIGN STATUS INPUT	95
5001 = ACTIVE LEVEL	95
5002 = MINIMUM PULSE WIDTH	95
5040 = ACTUAL STATUS INPUT	96
5041 = SIMULATION STATUS INPUT	96
5042 = VALUE SIMULATION STATUS INPUT	96
5080 = TERMINAL NUMBER	96

6...

6000 = TAG NAME	98
6001 = TAG DESCRIPTION	98
6002 = BUS ADDRESS	98
6003 = HART PROTOCOL	98
6004 = WRITE PROTECTION	98
6040 = MANUFACTURER ID.	99
6041 = DEVICE ID.	99
6042 = DEVICE REVISION	99
6400 = ASSIGN LOW FLOW CUT OFF	100
6402 = ON-VALUE LOW FLOW CUT OFF	100
6403 = OFF-VALUE LOW FLOW CUT OFF	100
6404 = PRESSURE SHOCK SUPPRESSION	101
6480 = ZEROPOINT ADJUSTMENT	102
6520 = STANDARD PIPE	103
6521 = NOMINAL DIAMETER	103
6522 = PIPE MATERIAL	104
6523 = REFERENCE VALUE	104
6524 = SOUND VELOCITY PIPE	104
6525 = CIRCUMFERENCE	105
6526 = PIPE DIAMETER	105
6527 = WALL THICKNESS	105
6528 = LINER MATERIAL	106
6529 = SOUND VELOCITY LINER	106
6530 = LINER THICKNESS	106
6540 = LIQUID	107
6541 = TEMPERATURE	107
6542 = SOUND VELOCITY LIQUID	108
6543 = VISCOSITY	108
6545 = SOUND VELOCITY NEGATIVE	109
6546 = SOUND VELOCITY POSITIVE	109
6600 = INSTALLATION DIRECTION SENSOR	110
6603 = FLOW DAMPING	110
6605 = POSITIVE ZERO RETURN	110
6800 = K-FAKTOR	111
6803 = NULLPUNKT	111
6808 = KALIBRIERDATUM	111
6880 = MEASUREMENT	112
6881 = SENSOR TYPE	112
6882 = SENSOR CONFIGURATION	113
6883 = CABLE LENGTH	113

6884 = POSITION SENSOR	114
6885 = WIRE LENGTH	114
6886 = SENSOR DISTANCE	114
6887 = ARC LENGTH	114
6888 = PATH LENGTH	114
6890 = P-FACTOR	115
6891 = ZERO POINT	115
6893 = CORRECTION FACTOR	115
6894 = DEVIATION SENSOR SPACING	115
6895 = DEVIATION ARC LENGTH	116
6896 = DEVIATION PATH LENGTH	116
6910 = KALIBRIERDATUM	117
681 = ORIG. WERKSKALIBRIER.	117

7...

7601 = REFERENCE CONDITION USER	119
7602 = SELECT REFERENCE CONDITION	119
7603 = WARNING MODE	120
7610 = ACQUISITION MODE	121
7611 = ACQUISITION PERIODE	121
7612 = DO ACQUISITION	121
7613 = RESET HISTORY	121
7630 = REFERENCE VALUE (Volume flow)	122
7631 = ACTUAL VALUE (Volume flow)	122
7632 = MINIMUM VALUE (Volume flow)	122
7633 = MAXIMUM VALUE (Volume flow)	122
7634 = HISTORY X (Volume flow)	122
7635 = ACTUAL DEVIATION (Volume flow)	122
7636 = WARNING LEVEL (Volume flow)	122
7640 = REFERENCE VALUE (Flow velocity)	123
7641 = ACTUAL VALUE (Flow velocity)	123
7642 = MINIMUM VALUE (Flow velocity)	123
7643 = MAXIMUM VALUE (Flow velocity)	123
7644 = HISTORY X (Flow velocity)	123
7645 = ACTUAL DEVIATION (Flow velocity)	123
7646 = WARNING LEVEL (Flow velocity)	123
7650 = REFERENCE VALUE (Signal strength)	124
7651 = ACTUAL VALUE (Signal strength)	124
7652 = MINIMUM VALUE (Signal strength)	124
7653 = MAXIMUM VALUE (Signal strength)	124
7654 = HISTORY X (Signal strength)	124
7655 = ACTUAL DEVIATION (Signal strength)	124
7656 = WARNING LEVEL (Signal strength)	124
7660 = REFERENCE VALUE (Sound velocity)	125
7661 = ACTUAL VALUE (Sound velocity)	125
7662 = MINIMUM VALUE (Sound velocity)	125
7663 = MAXIMUM VALUE (Sound velocity)	125
7664 = HISTORY X (Sound velocity)	125
7665 = ACTUAL DEVIATION (Sound velocity)	125
7666 = WARNING LEVEL (Sound velocity)	126
7670 = REFERENCE VALUE (Act. transit time)	127
7671 = ACTUAL VALUE (Act. transit time)	127
7672 = MINIMUM VALUE (Act. transit time)	127
7673 = MAXIMUM VALUE (Act. transit time)	127
7674 = HISTORY X (Act. transit time)	127
7675 = ACTUAL DEVIATION (Act. transit time)	127
7676 = WARNING LEVEL (Act. transit time)	128
7680 = REFERENCE VALUE (Acceptance rate)	129
7681 = ACTUAL VALUE (Acceptance rate)	129

7682 = MINIMUM VALUE (Acceptance rate) 129
7683 = MAXIMUM VALUE (Acceptance rate) 129
7684 = HISTORY X (Acceptance rate) 129
7685 = ACTUAL DEVIATION (Acceptance rate) 130
7686 = WARNING LEVEL (Acceptance rate) 130

8...

8000 = ASSIGN SYSTEM ERROR..... 132
8001 = ERROR CATEGORY..... 132
8002 = ASSIGN PROCESS ERROR..... 132
8003 = ERROR CATEGORY..... 132
8004 = ACKNOWLEDGE FAULTS 133
8005 = ALARM DELAY..... 133
8007 = PERMANENT STORAGE..... 133
8040 = CURRENT SYSTEM CONDITION 134
8041 = PREVIOUS SYSTEM CONDITIONS..... 134
8042 = SIMULATION FAILSAFE MODE 134
8043 = SIMULATION MEASURAND..... 134
8044 = VALUE SIMULATION MEASURAND..... 135
8046 = SYSTEM RESET..... 135
8100 = DEVICE SOFTWARE..... 136
8200 = SERIAL NUMBER 136
8222 = SOFTWARE REVISION NUMBER
AMPLIFIER 136
8225 = SOFTWARE REVISION NUMBER T-DAT 136
8240 = STATUS F-CHIP 137
8244 = SOFTWARE REVISION NUMBER F-CHIP 137
8300 = I/O MODULE TYPE 137
8303 = SOFTWARE REVISION NUMBER
I/O MODULE 137
8320 = TYPE INPUT/OUTPUT 1..... 138
8340 = TYPE INPUT/OUTPUT 2..... 138
8360 = TYPE INPUT/OUTPUT 3..... 138
8380 = TYPE INPUT/OUTPUT 4..... 138

14 Index key words

A

Acceptance rate.....	129
Access code.....	28
Acknowledge faults.....	133
Acquisition	
Function group (Adv. diagnostics)	121
Mode	121
Periode	121
Single shot.....	121
Active level.....	95
Actual	
Current (current output)	57
Frequency	80
Actual deviation	
Acceptance rate (Advanced diagnostics)	130
Actual transit time (Adv. diagnostics)	127
Flow velocity (Advanced diagnostics)	123
Signal strength (Advanced diagnostics)	124
Sound velocity (Advanced diagnostics)	125
Volume flow(Advanced diagnostics)	122
Actual status	
Relay output	89
Status input	96
Status (pulse/frequency output)	83
Actual system condition	134
Actual transit time.....	127
Actual value	
Acceptance rate (Advanced diagnostics)	129
Act. transit time (Advanced diagnostics)	127
Flow velocity (Advanced diagnostics)	123
Signal strength (Advanced diagnostics)	124
Sound velocity (Advanced diagnostics)	125
Volume flow (Advanced diagnostics)	122
Additional configuration (system units)	15
Additional line (group CEA)	
Configuration	34
Additional line (Gruppe CEA)	
Multiplex	36
Adjustment	
Function group	102
Zero point	102
Advanced diagnostics (Group HEA,HEB)	
Acceptance rate.....	129
Actual transit time.....	127
Signal strength.....	124
Advanced diagnostics (Group HEA,HEB,HEC)	
Acquisition (Function group)	121
Configuration	119
Flow velocity.....	123
Sound velocity.....	125
Volume flow	122
Alarm delay.....	133
Amplifier (version info)	136
Arbitrary unit	16

Assign

Additional line	34
Additional line (Multiplex)	36
Current output.....	48
Frequency (Pulse/freq. output).....	59
Information line	38
Information line (Multiplex)	40
Low flow cut off.....	100
Main line	30
Main line (Multiplex)	32
Process error	132
Pulse output.....	69
Relay (relay output)	85
Status input	95
Status (pulse/frequency output)	76
System error.....	132
Totalizer	43
Aufnehmer (Version-Info)	136
Average flow velocity.....	12
Average sound velocity	12
Average volume flow.....	12

B

Basic configuration (user interface).....	26
Basic function (block G).....	97
Block	
Basic functions.....	97
Inputs	94
Measured variables.....	9
Outputs	47
Quick Setup.....	17
Special function	118
Supervision	131
Totalizer	42
User interface.....	25
Bus address	98

C

Calculated main values (displaying)	27
Calibration data	
Arc length deviation.....	116
Correction factor	115
Path length deviation	116
Sensor data	115
Sensor spacing deviation.....	115
Zero Point	115
Circumference (Pipe).....	105
Configuration	
Additional line	34
Advanced diagnostics	119
Current output (1...3)	48
HART	98
Information line	38
Main line	30
Process parameter (CH1...CH2)	100
Pulse/frequency output	59

Configuration (continuation)		
Relay output	85	
Sensor data (CH1...CH2)	111	
Status input	95	
System	132	
System parameter (CH1...CH2)	110	
System units	13	
Totalizer (1...3)	43	
Contrast LCD	27	
Control (group CAA)		
Basic configuration	26	
Operation	29	
Unlocking/locking	28	
Correction factor	115	
Current output 1...3 (Group EAA-EAC)		
Configuration	48	
Information	58	
Operation	57	
Current span	49	
D		
Define private code	28	
Deviation		
Arc length	116	
Path length	116	
Sensor spacing	115	
Device ID	99	
Device Revision	99	
Device software	136	
Diagram		
Quick Setup Commissioning	21	
Quick Setup Pulsating flow	23	
Quick Setup Sensor	19	
Diameter (Pipe)	105	
Difference		
Volume flow	12	
Display		
Calculated main values	27	
Display damping	26	
Display mode		
Additional line	35	
Additional line (Multiplex)	37	
Information Line	39	
Information line (Multiplex)	41	
E		
End value frequency	60	
Error category		
Process error	132	
System error	132	
F		
Factor volume unit	16	
Failsafe mode		
All totalizers	46	
Current output	56	
Frequency output	68	
Pulse output	75	
F-CHIP (version info)	137	
Flow damping	110	
Flow direction		
see Installation direction sensor		
Flow velocity		
Advanced diagnostics	123	
Channel 1	10	
Channel 2	11	
Format		
Additional line	35	
Additional line (Multiplex)	37	
Date/Time	15	
Information line	39	
Information line (Multiplex)	41	
Main line	31	
Main line (Multiplex)	33	
Function group		
Acceptance rate	129	
Acquisition	121	
Actual transit time	127	
Additional configuration (system units)	15	
Adjustment	102	
Amplifier	136	
Arbitrary unit (special units)	16	
Basic configuration (user interface)	26	
Calculated main values	12	
Configuration		
Additional line	34	
Advanced diagnostics	119	
Calibration data	115	
Current output (1...3)	48	
HART	98	
Information line	38	
Main line	30	
Process parameter (CH1...CH2)	100	
Pulse/freq. output	59	
Relay output	85	
Sensor data (CH1...CH2)	111	
Sensor parameter	112	
Status input	95	
System	132	
System parameter (CH1...CH2)	110	
System units	13	
Totalizer (1...3)	43	
F-CHIP	137	
Flow velocity	123	
Information		
Current output	58	
HART	99	
Pulse/Frequency output	84	
Relay output	91	
Status input	96	
Input/output (1...4)	138	
I/O Module	137	
Liquid data	107	
Measuring values		
Main values CH1	10	
Main values CH2	11	
Function group (continuation)		

Multiplex	
Additional line.	36
Information line	40
Main line	32
Operation	
Current output	57
Pulse/frequency output.	80
Relay output	89
Status input.	96
System	134
Totalizer	45
User interface	29
Orig. Werkskalibrierung	
Sensor data (CH1...CH2)	117
Pipe data	103
Sensor	136
Signal strength.	124
Sound velocity.	125
Unlocking/locking (user interface)	28
Volume flow (Adv. diagnostics)	122
Function matrix	
General layout.	6
Identification code.	7
Overview	8
Funktionsgruppe	
Aufnehmer	136
G	
Group	
Additional line.	34
Advanced Diagnostics	119
Control (User interface)	26
Current output	48
Handling Totalizer	46
HART	98
Information line.	38
Main line.	30
Measuring values.	10
Process parameter (CH1...CH2)	100
Pulse/frequency output	59
Relay output	85
Sensor data (CH1...CH2)	111
Special units	16
Status input.	95
System.	132

System parameter (CH1...CH2)	110
System units	13
Totalizer (1...3)	43
Version info	136
H	
Handling Totalizer (group DJA)	46
HART (group GAA)	
Configuration	98
Information	99
History	
Acceptance rate (Advanced Diagnostics)	129
Actual transit time (Advanced Diagnostics)	127
Flow velocity (Advanced Diagnostics)	123
Signal strength (Advanced Diagnostics)	124
Sound velocity (Advanced Diagnostics)	125
Volume flow (Advanced Diagnostics)	122
I	
Information	
Current output	58
Pulse/frequency output	84
Relay output	91
Status input	96
Information line (group CGA)	
Configuration	38
Multiplex	40
Inputs (block F)	94
Input/Output 1...4	138
Installation direction sensor	110
I/O Module	137
K	
Kalibrierdatum	111, 117
K-Faktor	111
L	
Language	26
Liner	
Material	106
Sound velocity	106
Thickness	106
Liquid	
Sound velocity	108
Sound velocity negative	109
Sound velocity positive	109
Liquid data (function group)	107

M

Main line (group CCA)	
Configuration	30
Multiplex	32
Manufacturer number	99
Maximum value	
Acceptance rate (Advanced Diagnostics)	129
Actual transit time (Advanced Diagnostics)	127
Flow velocity (Advanced Diagnostics)	123
Signal strength (Advanced Diagnostics)	124
Sound velocity (Advanced Diagnostics)	125
Volume flow (Advanced Diagnostics)	122
Measured variables (block A)	9
Measurement	112
Measuring mode	
Current output	53
Frequency (Pulse/freq. output)	63,64
Pulse output	71
Relay output	88
Status (pulse/frequency output)	78
Measuring values	
Calculated main values	12
Main values CH1	10
Main values CH2	11
Measuring values (group AAA)	10
Minimum pulse width	95
Minimum value	
Acceptance rate (Advanced Diagnostics)	129
Actual transit time (Advanced Diagnostics)	127
Flow velocity (Advanced Diagnostics)	123
Signal strength (Advanced Diagnostics)	124
Sound velocity (Advanced Diagnostics)	125
Volume flow (Advanced Diagnostics)	122
Multiplex	
Additional line	36
Information line	40
Main line	32

N

Nominal diameter	103
Nullpunkt	111

O

Off-value	
Low flow cut off	100
Relay output	87
Status (pulse/frequency output)	77
On-value	
Relay output	86
Status (pulse/frequency output)	77

Operation

Current output	57
Pulse/frequency output	80
Relay output	89
Status input	96
System	134
Totalizer	45
User interface	29
Operation mode	
Pulse/frequency output	59
Orig. Werkskalibrierung	
Sensor data (CH1...CH2)	117
Output signal	
Frequency output	64,65
Pulse output	72
Outputs (block E)	47
Overflow	
Totalizer	45

P

Path length deviation	116
Permanent storage	133
P-factor	115
Pipe circumference	105
Pipe data	103
Sound velocity liquid	108
Sound velocity negative	109
Sound velocity positive	109
Pipe diameter	105
Pipe material	104
Positive zero return	110
Pressure shock suppression	101
Previous system conditions	134
Process parameter (CH1...CH2), (Group GIA, GIB)	
Adjustment	102
Configuration	100
Fluid	107
Liquid data	107
Pipe data	103
Temperature	107
Pulsating flow	17
Pulse value	69
Pulse width	70
Pulse/Frequency output (group ECA)	
Configuration	59
Information	84
Operation	80

Q

Quick Setup (Block B)	
Commissioning	21
Overview	17
Pulsating flow	23
Sensor	19

R

Reference condition user	119
Reference value	
Acceptance rate (Advanced diagnostics)	129
Actual transit time (Advanced diagnostics)	127
Flow velocity (Advanced diagnostics)	123
Signal strength (Advanced diagnostics)	124
Sound velocity (Advanced diagnostics)	125
Volume flow (Advanced diagnostics)	122
Relay output (group EGA)	
Configuration	85
Flow direction	92
General	92
Information	91
Limit value	92
Operation	89
Reset	
All Totalizers	46
Historie	121
Totalizer	44

S

Select reference condition	119
Sensor configuration	113
Sensor data (group GNA, GNB)	
Configuration	111
Sensor configuration	113
Sensor type	112
Sensor parameter	112
Sensor type	112
Sensor (version info)	136
Serial number sensor	136
Signal strength	124
Channel 1	10
Channel 2	11
Simulation	
Current (current output)	57
Failsafe mode	134
Frequency	80
Measured variable	134
Relay output switch point	89
Status input	96
Status (pulse/frequency output)	83
Software revision number	
Amplifier	136
F-CHIP	137
I/O Module	137
T-DAT	136
Sound velocity	125
Channel 1	10
Channel 2	11
Liner	106
Liquid	108
Negative	109
Pipe	104
Positive	109
Special function(Block H)	118

Special units (group AEA)

Arbitrary unit	16
Standard pipe	103
Start value frequency	60
Status access	28
Status F-CHIP	137
Status input (group FAA)	
Configuration	95
Information	96
Operation	96
Sum	
Totalizer	45
Supervision (Block J)	131
Switching action of the relay output	92
Switch-off delay	
Relay output	87
Status (pulse/frequency output)	78
Switch-on delay	
Relay output	87
Status (pulse/frequency output)	77
System condition	
Actual	134
Previous	134
System parameter (Group GLA, GLB)	
Configuration	110
System units (group ACA)	
Additional configuration	15
Configuration	13
System (group JAA)	
Configuration	132
Operation	134
Reset	135

T

Tag description	98
Tag name	98
T-DAT Save/Load	18
Terminal number	
Current output	58
Pulse/Frequency output	84
Relay output	91
Status input	96
Test display	29
Text volume unit	16
Time constant	
Current output	55
Frequency output	67
Relay output	88
Status (pulse/frequency output)	79
Totalizer Mode	44
Totalizer Reset	44
Totalizer (block D)	42
Totalizer 1...3 (Group DAA-DAC)	
Configuration	43
Operation	45
Type	
Input/Output 1...4	138
I/O Module	137

U

Unit	
Length	15
Temperature	15
Totalizer	43
Velocity	15
Viscosity	15
Volume	14
Volume flow	13
Unlocking/locking (user interface)	28
User interface (block C)	25

V

Value	
Failsafe level	68
Value simulation	
Current (current output)	57
Frequency	81
Measured variable	135
Relay output switch point	90
Status input	96
Status (pulse/frequency output)	83
Value 0_4 mA	50
Value 20 mA	52
Value-f high	61
Value-f low	61
Version-Info (group JCA)	
Amplifier	136
F-CHIP	137
Input/output 1...4	138
I/O Module	137
Sensor	136
Viscosity	108
Volume flow	
Advanced diagnostics	122
Average	12
Channel 1	10
Channel 2	11
Difference	12
Sum	12

W

Wall thickness	105
Warning level	
Acceptance rate (Advanced diagnostics)	130
Actual transit time (Advanced diagnostics)	128
Flow velocity (Advanced diagnostics)	123
Signal strength (Advanced diagnostics)	124
Sound velocity (Advanced diagnostics)	126
Volume flow (Advanced diagnostics)	122
Warning mode	120
Write protection	98

Z

Zero Point	115
Zero point adjustment	102

Numerics

0_4 mA value	50
100% value flow	
Additional line	35
Additional line (Multiplex)	37
Information line	39
Information line (Multiplex)	41
Main line	31
Main line (Multiplex)	32
20 mA value	52

www.endress.com/worldwide

For more Endress+Hauser product please visit: www.ainstru.com
Mail: Sales@ainstru.com

Endress+Hauser 
People for Process Automation