

PROline prosonic flow 93 **Ultrasonic** **Flow Measuring System**

Description of Device Functions

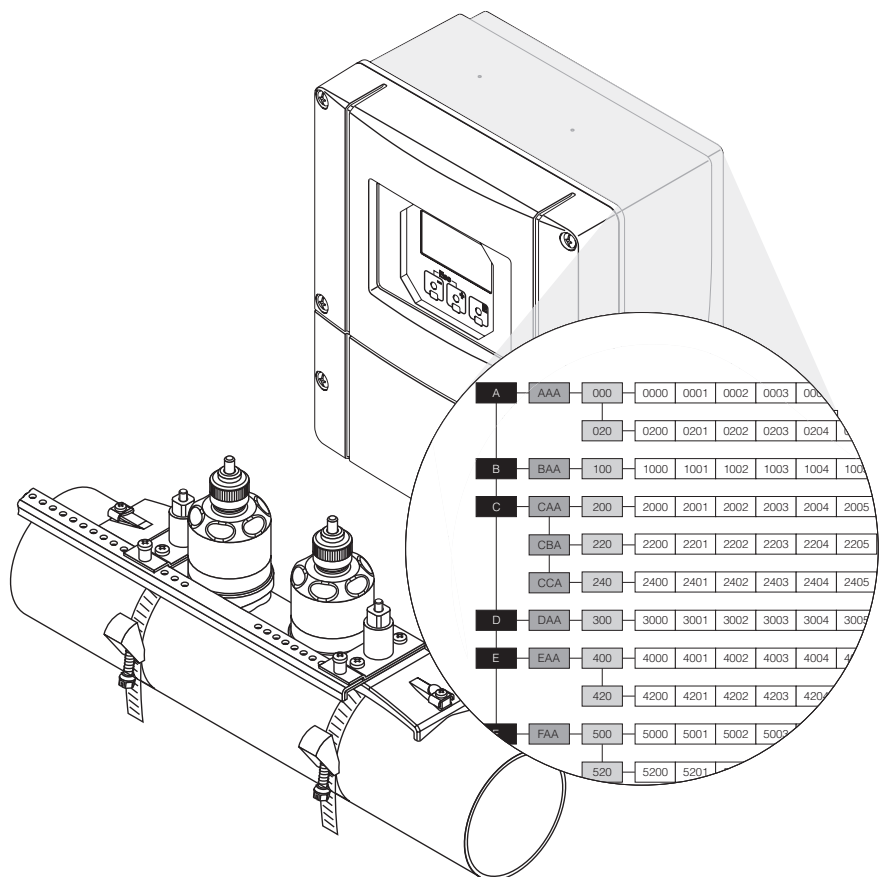


Table of Contents

1	Notes on using this manual	7
1.1	Using the table of contents to locate a function description	7
1.2	Using the graphic of the function matrix to locate a function description	7
1.3	Using the index of the function matrix to locate a function description	7
2	Function matrix	8
2.1	General layout of the function matrix	8
2.1.1	Blocks (A, B, C, etc.)	8
2.1.2	Groups (AAA, AEA, CAA, etc.)	8
2.1.3	Function groups (000, 020, 060, etc.)	8
2.1.4	Functions (0000, 0001, 0002, etc.)	8
2.1.5	Codes identifying cells	9
2.2	Function matrix PROline Prosonic Flow 93	10
3	Block MEASURED VARIABLES	11
3.1	Group MEASURING VALUES	12
3.1.1	Function group MAIN VALUES CH1	12
3.1.2	Function group MAIN VALUES CH2	13
3.1.3	Function group CALCULATED MAIN VALUES	14
3.2	Group SYSTEM UNITS	15
3.2.1	Function group CONFIGURATION	15
3.2.2	Function group ADDITIONAL CONFIGURATION	17
3.3	Group SPECIAL UNITS	18
3.3.1	Function group ARBITRARY UNIT	18
4	Block QUICK SETUP	19
4.0.1	Quick Setup Sensor	21
4.0.2	Quick Setup commissioning	23
4.0.3	Pulsating flow Quick Setup menu	25
5	Block USER INTERFACE	28
5.1	Group CONTROL	29
5.1.1	Function group BASIC CONFIGURATION	29
5.1.2	Function group UNLOCKING/LOCKING	31
5.1.3	Function group OPERATION	32
5.1.4	Group MAIN LINE	33
5.1.5	Function group CONFIGURATION	33
5.1.6	Function group MULTIPLEX	35
5.2	Group ADDITIONAL LINE	37
5.2.1	Function group CONFIGURATION	37
5.2.2	Function group MULTIPLEX	40
5.3	Group INFORMATION LINE	43
5.3.1	Function group CONFIGURATION	43
5.3.2	Function group MULTIPLEX	46

6	Block TOTALIZER	49
6.1	Group TOTALIZER (1...3)	50
6.1.1	Function group CONFIGURATION	50
6.1.2	Function group OPERATION	52
6.2	Group HANDLING TOTALIZER	53
7	Block OUTPUTS	54
7.1	Group CURRENT OUTPUT (1...3)	55
7.1.1	Function group CONFIGURATION	55
7.1.2	Function group OPERATION	64
7.1.3	Function group INFORMATION	65
7.2	Group PULSE/FREQUENCY OUTPUT (1...2)	66
7.2.1	Function group CONFIGURATION	66
7.2.2	Function group OPERATION	82
7.2.3	Function group INFORMATION	84
7.3	Group RELAY OUTPUT (1...2)	85
7.3.1	Function group CONFIGURATION	85
7.3.2	Function group OPERATION	89
7.3.3	Function group INFORMATION	91
7.3.4	Information on the response of the relay output	92
7.3.5	Switching action of the relay output	93
8	Block INPUTS	95
8.1	Group STATUS INPUT	96
8.1.1	Function group CONFIGURATION	96
8.1.2	Function group OPERATION	97
8.1.3	Function group INFORMATION	98
9	Block BASIC FUNCTION	99
9.1	Group HART	100
9.1.1	Function group CONFIGURATION	100
9.1.2	Function group INFORMATION	101
9.2	Group PROCESS PARAMETER (CH1...CH2)	102
9.2.1	Function group CONFIGURATION	102
9.2.2	Function group ADJUSTMENT	104
9.2.3	Function group PIPE DATA	105
9.2.4	Function group LIQUID DATA	109
9.3	Group SYSTEM PARAMETER (CH1...CH2)	112
9.3.1	Function group CONFIGURATION	112
9.4	Group SENSOR DATA (CH1...CH2)	113
9.4.1	Function group SENSOR PARAMETER	113
9.4.2	Function group CALIBRATION DATA	116
10	Block SPECIAL FUNCTION	118
10.1	Group ADVANCED DIAGNOSTICS (CH1,CH2,AVG)	119
10.1.1	Function group CONFIGURATION	119
10.1.2	Function group ACQUISITION	121
10.1.3	Function group VOLUME FLOW	123
10.1.4	Function group FLOW VELOCITY	124

10.1.5 Function group SIGNAL STRENGTH	126
10.1.6 Function group SOUND VELOCITY	128
10.1.7 Function group ACTUAL TRANSIT TIME	130
10.1.8 Function group ACCEPTANCE RATE	132
11 Block SUPERVISION	134
11.1 Group SYSTEM (SYSTEM CH2)	135
11.1.1 Function group CONFIGURATION	135
11.1.2 Function group OPERATION	138
11.2 Group VERSION INFO	140
11.2.1 Function group SENSOR	140
11.2.2 Function group AMPLIFIER	140
11.2.3 Function group F-CHIP™	141
11.2.4 Function group I/O MODULE	141
11.2.5 Function groups INPUT /OUTPUT 1...4	142
12 Factory settings	143
12.1 SI units	143
12.1.1 Language	143
12.1.2 Length, Temperature	143
13 Index function matrix	145

Registered trademarks

HART®

Registered trademark of the HART Communication Foundation, Austin, USA

T-DAT™, F-CHIP™

Registered trademarks of Endress+Hauser Flowtec AG

1 Notes on using this manual

There are various ways of locating the description of a function of your choice in the manual:

1.1 Using the table of contents to locate a function description

The designations of all the cells in the function matrix are listed in the table of contents. You can use these unambiguous designations (such as USER INTERFACE, INPUTS, OUTPUTS, etc.) to choose whichever functions are applicable to a particular set of conditions.

The page references show you exactly where to find the detailed descriptions of the functions in question.

The table of contents is on Page 3.

1.2 Using the graphic of the function matrix to locate a function description

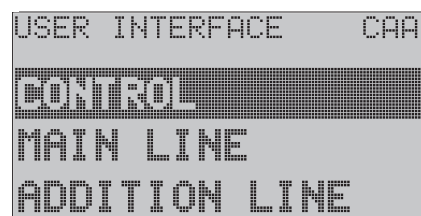
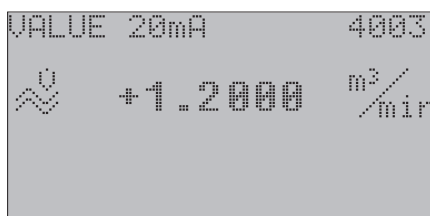
This step-by-step, top-down approach starts with the blocks, the highest level, and works down through the matrix to the description of the function you need:

1. All blocks available, and their related groups, are illustrated on page 10. Select the block (or the group within the block) which you need for your application and use the page reference to locate the information corresponding to the next level.
2. The page in question contains a graphic showing of the block with all its subordinate groups, function groups and functions.
Select the function which you need for your application and use the page reference to locate the detailed function description.

1.3 Using the index of the function matrix to locate a function description

Each "cell" in the function matrix (blocks, groups, function groups, functions) has a unique identifier in the form of a code consisting of one or three letters or a three- or four-digit number. The code identifying a selected "cell" appears at the top right on the local display.

Example:



F-x3xxxx-20-xx-xx-xx-en-000

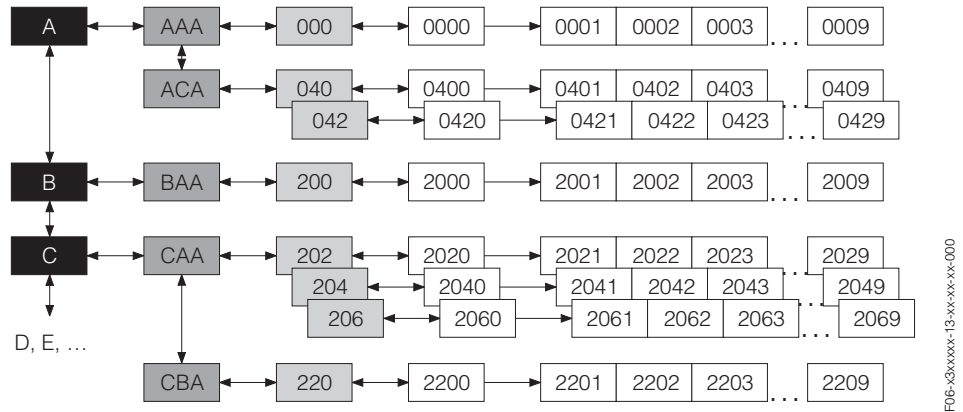
The function-matrix index lists the codes for all the available "cells" in alphabetic and consecutive order, complete with the page references for the corresponding functions. The index to the function matrix is on page 145.

2 Function matrix

2.1 General layout of the function matrix

The function matrix consists of four levels:

Blocks -> Groups -> Function groups -> Functions



2.1.1 Blocks (A, B, C, etc.)

The blocks are the highest-level grouping of the operation options for the device. Examples of blocks available are MEASURED VARIABLES, QUICK SETUP, USER INTERFACE, TOTALIZERS, etc.

2.1.2 Groups (AAA, AEA, CAA, etc.)

A block consists of one or more groups. Each group represents a more detailed selection of the operation options in the higher-order block. Examples of groups available in the "USER INTERFACE" block are CONTROL, MAIN LINE, ADDITIONAL LINE, etc.

2.1.3 Function groups (000, 020, 060, etc.)

A group consists of one or more function groups. Each function group represents a more detailed selection of the operation options in the higher-order group. Function groups available of group "CONTROL" are for example: BASIC CONFIGURATION, UNLOCKING/LOCKING, OPERATION, etc.

2.1.4 Functions (0000, 0001, 0002, etc.)

Each function group consists of one or more functions. The functions are used to operate and parameterize the device. Numerical values can be entered or parameters selected and saved.

The functions in the "BASIC CONFIGURATION" function group include LANGUAGE, DISPLAY DAMPING, CONTRAST LCD, etc. The procedure for changing the language of the user interface, for example, is as follows:

1. Select the block "USER INTERFACE".
2. Select the group "CONTROL".
3. Select the function group "BASIC CONFIGURATION".
4. Select the function "LANGUAGE" (here you can set the language required).

2.1.5 Codes identifying cells

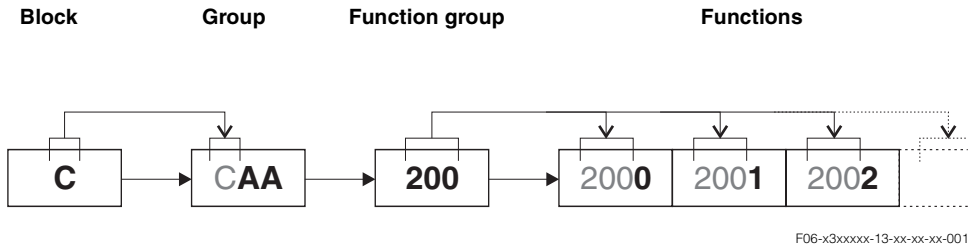
Each cell (block, group, function group and function) in the function matrix has an individual, unique code.

Blocks:
The code is a letter (A, B, C, etc.)

Groups:
The code consists of three letters (AAA, ABA, BAA, etc.).
The first letter matches the block code (i.e. each group in block A has a code starting with an A_ _; the codes of the groups in block B start with a B_ _, and so on). The other two letters are for identifying the group within the respective block.

Function groups:
The code consists of three digits (000, 001, 100, etc.)

Functions:
The code consists of four digits (0000, 0001, 0201, etc.).
The first three digits are the same as the code for the function group.
The last digit in the code is a counter for the functions in the function group, incrementing from 0 to 9 (e.g. function 0005 is the sixth function in group 000).



2.2 Function matrix PROline Prosonic Flow 93

BLOCKS		GROUPS		FUNCTION GROUPS
MEASURED VARIABLES A (see p. 11)	→	MEASURING VALUES AAA SYSTEM UNITS ACA SPECIAL UNITS AEA	→ → →	see p. 12 see p. 15 see p. 18
QUICK SETUP B (see p. 19)	→	Sensor and commissioning setups	→	see p. 19
USER INTERFACE C (see p. 28)	→	CONTROL CAA MAIN LINE CCA ADDITIONAL LINE CEA INFORMATION LINE CGA	→ → → →	see p. 29 see p. 33 see p. 37 see p. 43
TOTALIZER D (see p. 49)	→	TOTALIZER (1...3) DAA, DAB, DAC HANDLING TOTALIZER DJA	→ →	see p. 50 see p. 53
OUTPUTS E (see p. 54)	→	CURRENT OUTPUT (1...3) EAA, EAB, EAC PULSE/FREQUENCY OUTPUT (1...2) ECA, ECB RELAY OUTPUT (1...2) EGA, EGB	→ → →	see p. 55 see p. 66 see p. 85
INPUTS F (see p. 95)	→	STATUS INPUT FAA	→	see p. 96
BASIC FUNCTION G (see p. 99)	→	HART GAA PROCESS PARAMETER (CH1...CH2) GIA, GIB SYSTEM PARAMETER (CH1...CH2) GLA, GLB SENSOR DATA (CH1...CH2) GNA, GNB	→ → → →	see p. 100 see p. 102 see p. 112 see p. 113
SPECIAL FUNCTION H (see p. 118)	→	ADVANCED DIAGNOSTICS CH1 HEA	→	see p. 119
SUPERVISION J (see p. 134)	→	SYSTEM JAA SYSTEM CH2 JAB VERSION INFO JCA	→ → →	see p. 135 see p. 135 see p. 140

3 Block MEASURED VARIABLES

Block	Groups	Function groups	Functions
MEASURED VARIABLES (A)	MEASURING VALUES (AAA) p. 12	⇒ MAIN VALUES CH1 (000) p. 12	⇒ VOLUME FLOW CH1 (0001) p. 12 ⇒ SOUND VELOCITY CH1 (0002) p. 12 ⇒ FLOW VELOCITY CH1 (0003) p. 12 ⇒ SIGNAL STR. CH1 (0007) p. 12
		⇕⇕ MAIN VALUES CH2 (006) p. 17	⇕⇕ VOLUME FLOW CH2 (0061) p. 13 ⇒ SOUND VELOCITY CH2 (0062) p. 13 ⇒ FLOW VELOCITY CH2 (0063) p. 13 ⇒ SIGNAL STR. CH2 (0067) p. 13
		⇕⇕ CALCUL. MAIN VALUES (008) p. 14	⇕⇕ VOLUME FLOW AVG (0083) p. 14 ⇒ VOLUME FLOW SUM (0084) p. 14 ⇒ VOLUME FLOW DIFF (0085) p. 14 ⇒ SOUND VELOCITY AVG. (0086) p. 14 ⇒ FLOW VELOCITY AVG. (0087) p. 14
	SYSTEM UNITS (ACA) p. 15	⇒ CONFIGURATION (040) p. 15	⇒ UNIT VOLUME (0403) p. 16
		⇕⇕ ADDITIONAL CONFIGURATION (042) p. 17	⇕⇕ UNIT VISCOSITY (0423) p. 17
			⇒ UNIT TEMPERATURE (0422) p. 17 ⇒ UNIT LENGTH (0424) p. 17 ⇒ UNIT VELOCITY (0425) p. 17
	SPECIAL UNITS (AEA) p. 18	⇒ ARBITRARY UNIT (060) p. 18	⇒ FACTOR ARB. VOL. UNIT (0603) p. 18

3.1 Group MEASURING VALUES

3.1.1 Function group MAIN VALUES CH1

MEASURED VARIABLES A ⇒ MEASURING VALUES AAA ⇒ MAIN VALUES CH1 000

Functional description MEASURED VARIABLES → MEASURING VALUES → MAIN VALUES CH1	
The measuring values of channel 1 currently being measured are displayed in this function group.  Note! - The engineering units of all the measured variables shown here can be set in the "SYSTEM UNITS" group. - If the liquid in the pipe flows backwards, a negative sign prefixes the flow reading on the display.	
VOLUME FLOW CH1 (0001)	The volume flow currently measured appears on the display (channel 1). User interface: 5-digit floating-point number, including unit and sign (e.g. 5.5445 dm³/min; 1.4359 m³/h; -731.63 gal/d; etc.)
SOUND VELOCITY CH1 (0002)	The sound velocity currently measured in the liquid appears on the display (channel 1). User interface: 5-digit fixed-point number, incl. units (e.g. 1400.0 m/s, 5249.3 ft/s)
FLOW VELOCITY CH1 (0003)	The flow velocity currently measured appears on the display (channel 1). User interface: 5-digit floating-point number, including unit and sign (e.g. 8.0000 m/s, 26.247 ft/s)
SIGNAL STRENGTH CH1 (0007)	The signal strength appears on the display (channel 1). User interface: 4-digit fixed-point number (e.g. 80.0)  Note! To ensure reliable measurement takes place, Prosonic Flow requires a signal strength of > 30.

3.1.2 Function group MAIN VALUES CH2

MEASURED VARIABLES A ⇒ MEASURING VALUES AAA ⇒ MAIN VALUES CH2 006

Functional description MEASURED VARIABLES → MEASURING VALUES → MAIN VALUES CH2	
The measuring values of channel 2 currently being measured are displayed in this function group.  Note! - The engineering units of all the measured variables shown here can be set in the "SYSTEM UNITS" group. - If the fluid in the pipe flows backwards, a negative sign prefixes the flow reading on the display.	
VOLUME FLOW CH2 (0061)	The volume flow currently measured appears on the display (channel 2). User interface: 5-digit floating-point number, including unit and sign (e.g. 5.5445 dm³/min; 1.4359 m³/h; -731.63 gal/d; etc.)
SOUND VELOCITY CH2 (0062)	The sound velocity currently measured in the liquid appears on the display (channel 2). User interface: 5-digit fixed-point number, incl. units (e.g. 1400.0 m/s, 5249.3 ft/s)
FLOW VELOCITY CH2 (0063)	The flow velocity currently measured appears on the display (channel 2). User interface: 5-digit floating-point number, including unit and sign (e.g. 8.0000 m/s, 26.247 ft/s)
SIGNAL STRENGTH CH2 (0067)	The signal strength appears on the display (channel 2). User interface: 4-digit fixed-point number (e.g. 80.0)  Note! To ensure reliable measurement takes place, Prosonic Flow requires a signal strength of > 30


3.1.3 Function group CALCULATED MAIN VALUES

MEASURED VARIABLES A ⇒ MEASURING VALUES AAA ⇒ CALCUL. MAIN VALUES 008

Functional description MEASURED VARIABLES → MEASURING VALUES → CALCULATED MAIN VALUES	
The calculated measured values appear on the display. The measured values of both channels are used when calculating the values.  Note! - The units of measure of all the measured variables shown here can be set in the "SYSTEM UNITS" group. - If the fluid in the pipe flows backwards, a negative sign prefixes the flow reading on the display.	
VOLUME FLOW AVERAGE (0083)	The average volume flow appears on the display. Calculated from the measured values: (VOLUME FLOW CH1 + VOLUME FLOW CH2)/2 User interface: 5-digit floating-point number, including unit and sign (e.g. 5.5445 dm³/min; 1.4359 m³/h; -731.63 gal/d; etc.)
VOLUME FLOW SUM. (0084)	The total volume flow appears on the display. Calculated from the measured values: VOLUME FLOW CH1 + VOLUME FLOW CH2 . User interface: 5-digit floating-point number, including unit and sign (e.g. 5.5445 dm³/min; 1.4359 m³/h; -731.63 gal/d; etc.)
VOLUME FLOW DIFFERENCE (0085)	The difference between the volume flows appears on the display. Calculated from the measured values: VOLUME FLOW CH1 - VOLUME FLOW CH2 User interface: 5-digit floating-point number, including unit and sign (e.g. 5.5445 dm³/min; 1.4359 m³/h; -731.63 gal/d; etc.)
SOUND VELOCITY AVERAGE (0086)	The average sound velocity appears on the display. Calculated from the measured values: (SOUND VELOCITY CH1 + SOUND VELOCITY CH2)/2 User interface: 5-digit fixed-point number, incl. units (e.g. 1400.0 m/s, 5249.3 ft/s)
FLOW VELOCITY AVERAGE (0087)	The average flow velocity appears on the display. Calculated from the measured values: (FLOW VELOCITY CH1 + FLOW VELOCITY CH2)/2 User interface: 5-digit floating-point number, including unit and sign (e.g. 8.0000 m/s, 26.247 ft/s)

3.2 Group SYSTEM UNITS

 
3.2.1 Function group CONFIGURATION



Functional description	
MEASURED VARIABLES → SYSTEM UNITS → CONFIGURATION	
You can select the units for measured variables in this function group.	
UNIT VOLUME FLOW (0402)	Use this function to select the unit for displaying the volume flow. The unit you select here is also valid for: • Current output • Frequency output • Relay switch points (limit value, flow direction) • Creepage Options: Metric: Cubic centimeter → cm³/s; cm³/min; cm³/h; cm³/day Cubic decimeter → dm³/s; dm³/min; dm³/h; dm³/day Cubic meter → m³/s; m³/min; m³/h; m³/day Milliliter → ml/s; ml/min; ml/h; ml/day Liter → l/s; l/min; l/h; l/day Hectoliter → hl/s; hl/min; hl/h; hl/day Megaliter → Ml/s; Ml/min; Ml/h; Ml/day US: Cubic centimeter → cc/s; cc/min; cc/h; cc/day Acre foot → af/s; af/min; af/h; af/day Cubic foot → ft³/s; ft³/min; ft³/h; ft³/day Fluid ounce → oz f/s; oz f/min; oz f/h; oz f/day Gallon → gal/s; gal/min; gal/h; gal/day Million gallon → Mgal/s; Mgal/min; Mgal/h; Mgal/day Barrel (normal fluids: 31.5 gal/bbl) → bbl/s; bbl/min; bbl/h; bbl/day Barrel (beer: 31.0 gal/bbl) → bbl/s; bbl/min; bbl/h; bbl/day Barrel (petrochemicals: 42.0 gal/bbl) → bbl/s; bbl/min; bbl/h; bbl/day Barrel (filling tanks: 55.0 gal/bbl) → bbl/s; bbl/min; bbl/h; bbl/day Imperial Gallon → gal/s; gal/min; gal/h; gal/day Mega gallon → Mgal/s; Mgal/min; Mgal/h; Mgal/day Barrel (beer: 36.0 gal/bbl) → bbl/s; bbl/min; bbl/h; bbl/day Barrel (petrochemicals: 34.97 gal/bbl) → bbl/s; bbl/min; bbl/h; bbl/day Arbitrary unit, (see function group ARBITRARY UNIT on page 18) ____ → ____/s; ____/min; ____/h; ____/day Factory setting: l/s  Note! If you defined a unit of volume in the ARBITRARY UNIT (060) function group (see page 18) the unit in question is shown here.

Functional description	
MEASURED VARIABLES → SYSTEM UNITS → CONFIGURATION	
UNIT VOLUME (0403)	Use this function to select the unit for displaying the volume. The unit you select here is also valid for: • Pulse weighting (e.g. m³/p) Options: Metric → cm³; dm³; m³; ml; l; hl; Ml MEGA US → cc; af; ft³; oz f; gal; Mgal; bbl (normal fluids); bbl (beer); bbl (petrochemicals); bbl (filling tanks) Imperial → gal; Mgal; bbl (BEER); bbl (PETROCHEMICALS) Arbitrary unit → _ _ _ _ (see function group ARBITRARY UNIT on page 18) Factory setting: liter  Note! • If you defined a unit of volume in the ARBITRARY UNIT (060) function group (see page 18) the unit in question is shown here. • The unit of the totalizers is independent of your choice here. The unit for each totalizer is selected separately for the totalizer in question.

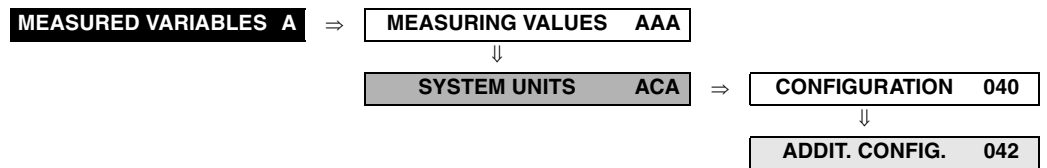
3.2.2 Function group ADDITIONAL CONFIGURATION



Functional description MEASURED VARIABLES → SYSTEM UNITS → ADDITIONAL CONFIGURATION	
UNIT TEMPERATURE (0422)	Use this function to select the unit for displaying the liquid temperature.  Note! The liquid temperature is entered in the function TEMPERATURE (see p. 109). Options: °C (Celsius) K (Kelvin) °F (Fahrenheit) R (Rankine) Factory setting: °C
UNIT VISCOSITY (0423)	Use this function to select the unit for liquid viscosity. Options: mm2/s cSt St Factory setting: mm2/s
UNIT LENGTH (0424)	Use this function to select the unit for the measure of length. The unit you select here is valid for: • Nominal diameter • Diameter • Wall thickness • Liner thickness • Path length • Wire length • Sensor spacing Options: MILLIMETER INCH Factory setting: MILLIMETER
UNIT VELOCITY (0425)	Use this function to select the unit for displaying the velocity. The unit you select here is valid for: • Sound velocity • Flow velocity Options: m/s ft/s Factory setting: m/s

3.3 Group SPECIAL UNITS

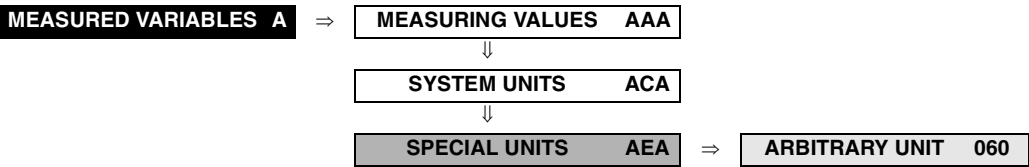3.3.1 Function group ARBITRARY UNIT



Functional description	
MEASURED VARIABLES → SPECIAL UNITS → ARBITRARY UNIT	
Use this function group to define an arbitrary unit for the flow rate variable.	
TEXT ARBITRARY VOLUME (0602)	Use this function to enter a text for the selectable volume (flow) unit. You define only the text, the unit of time is provided from a choice of options (s, min, h, day). User input: xxxxxxx (max. 4 characters) Valid characters are A–Z, 0–9, +, –, decimal point, white space or underscore Factory setting: _ _ _ _ (No text) Example: If your text entry is “GLAS”, this text string appears on the display complete with the unit of time, e.g. “GLAS/min”: GLAS = Volume (text input) GLAS / min = Volume flow as shown (on the display)
FACTOR ARBITRARY VOLUME (0603)	Use this function to define a quantity factor (without time) for the free selectable unit. The volume unit on which this factor is based is one liter. User input: 7-digit floating-point number Factory setting: 1 Reference quantity: Liter Example: The volume of a glass is 0.5 l → 2 glasses = 1 liter User input: 2


4 Block QUICK SETUP

Block	Group	Function groups	Functions
QUICK SETUP (B)	⇒	⇒	SETUP SEN- SOR (1001) p. 19 ⇒ QS COMMIS- SION. (1002) p. 19 QS PULSAT- ING FLOW (1003) p. 19 T-DAT SAVE/ LOAD (1009) p. 20

Functional description QUICK SETUP	
QUICK SETUP SENSOR (1001)	Use this function to start the Quick Setup menu for assembling the ultrasonic sensors. Options: YES NO Factory setting: NO  Note! You will find a flowchart of the Quick Setup SENSOR menu on page 21. Please refer to the Operating Instructions <i>Prosonic Flow 93</i> (BA 070D/06/en/....) for more information on Quick Setup menus.
QUICK SETUP COMMISSIONING (1002)	Use this function to start the Quick Setup menu for commissioning. Options: YES NO Factory setting: NO  Note! You will find a flowchart of the COMMISSIONING Quick Setup menu on page 23. Please refer to the Operating Instructions <i>Prosonic Flow 93</i> (BA 070D/06/en/....) for more information on Quick Setup menus.
QUICK SETUP PULSATING FLOW (1003)	Use this function to start the application-specific Quick Setup menu for pulsating flow. Options: YES NO Factory setting: NO  Note! You will find a flowchart of the PULSATING FLOW Quick Setup menu on page 25. Please refer to the Operating Instructions <i>Prosonic Flow 93</i> (BA 070D/06/en/....) for more information on Quick Setup menus.

Functional description QUICK SETUP	
T-DAT SAVE/LOAD (1009)	Use this function to save the parameter settings / configuration of the transmitter in a transmitter DAT (T-DAT), or to load the parameter settings from the T-DAT into the EEPROM (manual security function). Application examples: • After commissioning, the current measuring point parameters can be saved to the T-DAT as a backup. • If the transmitter is replaced for some reason, the data from the T-DAT can be loaded into the new transmitter (EEPROM). Options: CANCEL SAVE (from EEPROM to T-DAT) LOAD (from the T-DAT into EEPROM) Factory setting: CANCEL  Note! If the power supply fails, the totalizer readings are automatically saved to the EEPROM.

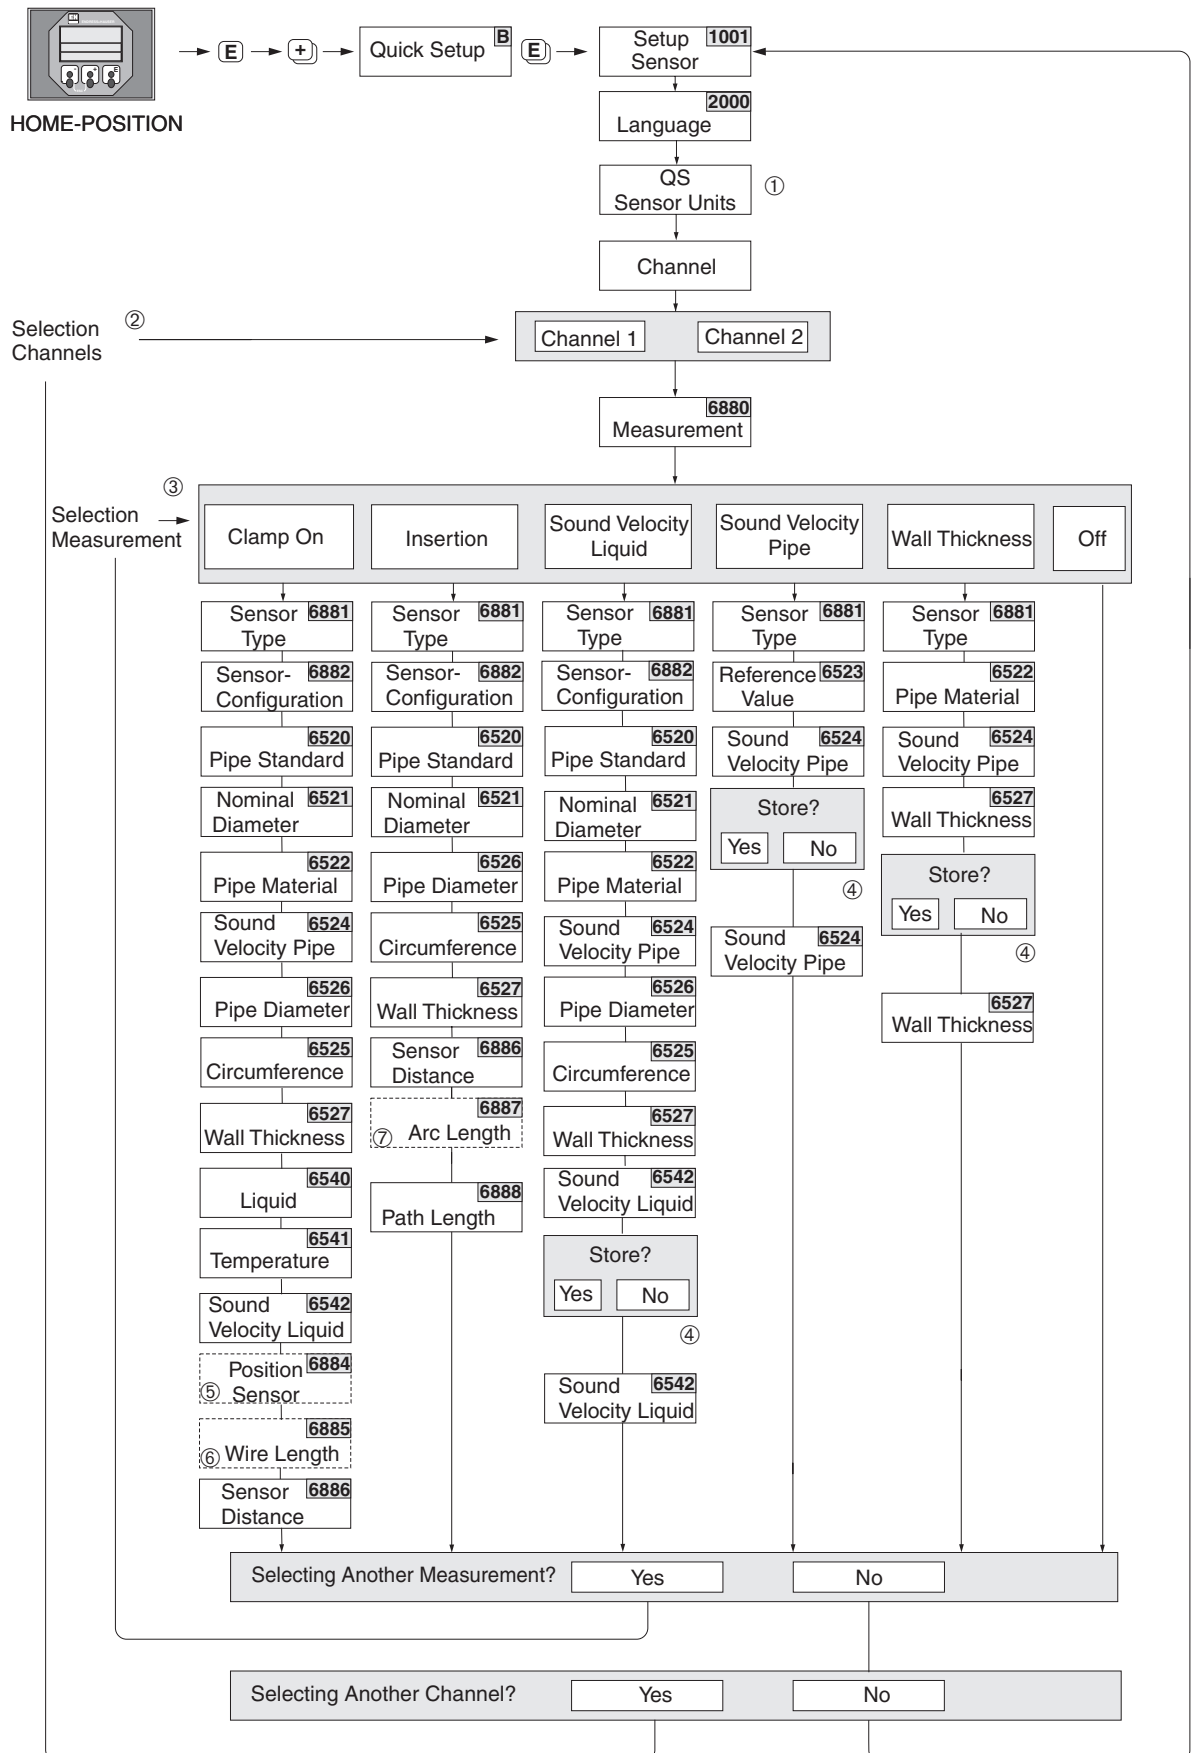
4.0.1 Quick Setup Sensor



**Note!**

- The display returns to the cell SETUP SENSOR (1001) if you press the ESC key combination during interrogation.
- ① The choice of system unit only influences the functions UNIT LENGTH (0424) and UNIT VELOCITY (0425).
- ② If a channel is selected for which a Quick Setup has already been carried out beforehand, the previous values are overwritten.
- ③ All options are offered for selection in each cycle. Any settings which may already have been made in a cycle are overwritten.
- ④ Option "YES": The value measured during the Quick Setup is accepted into the function in question. Option "NO": The measurement is rejected and the original value is retained.
- ⑤ The function POSITION SENSOR (6884) does not appear unless the option CLAMP ON is selected in the function MEASUREMENT and the number of traverses in the function SENSOR CONFIGURATION (6882) is 2 or 4.
- ⑥ The function WIRE LENGTH (6885) does not appear unless the option CLAMP ON is selected in the function MEASUREMENT and the number of traverses in the function SENSOR CONFIGURATION (6882) is 1 or 3.
- ⑦ The function ARC LENGTH (6887) does not appear unless the option INSERTION is selected in the function MEASUREMENT and the option DUAL PATH is selected in the function SENSOR CONFIGURATION (6882).

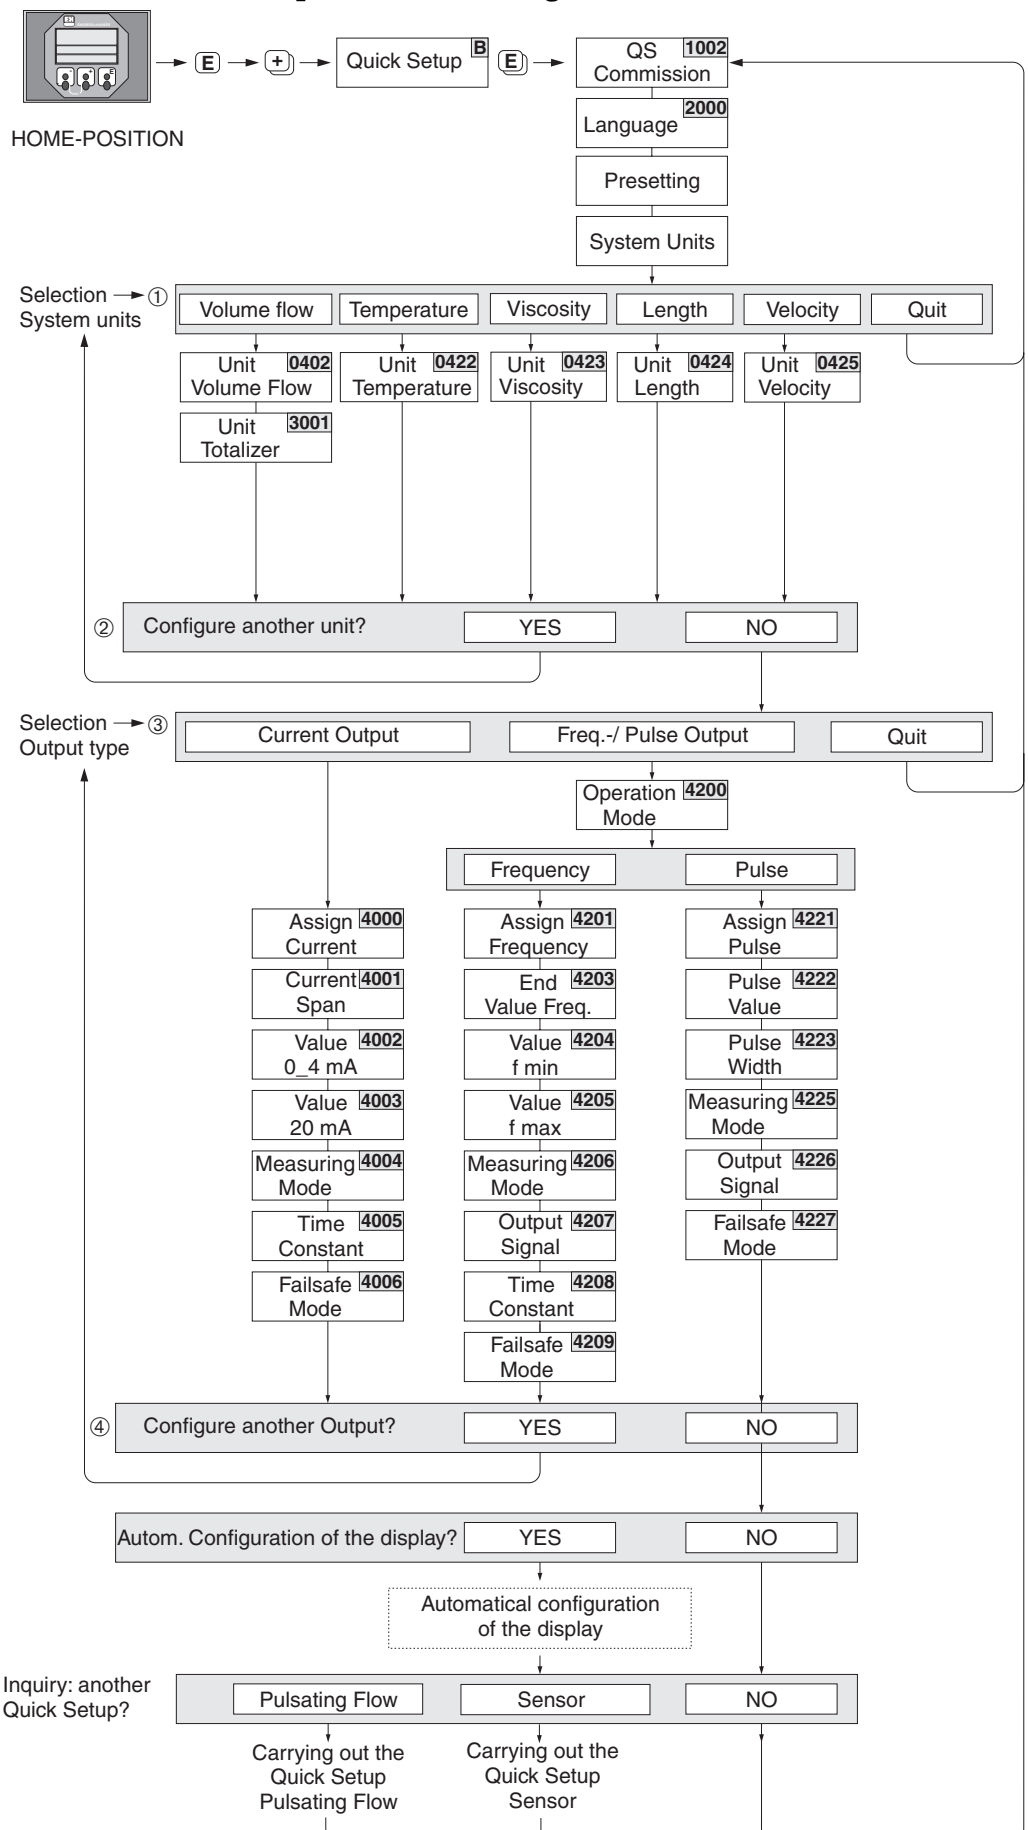4.0.2 Quick Setup commissioning




F06-93xxxx-19-xx-xx-en-000

**Note!**

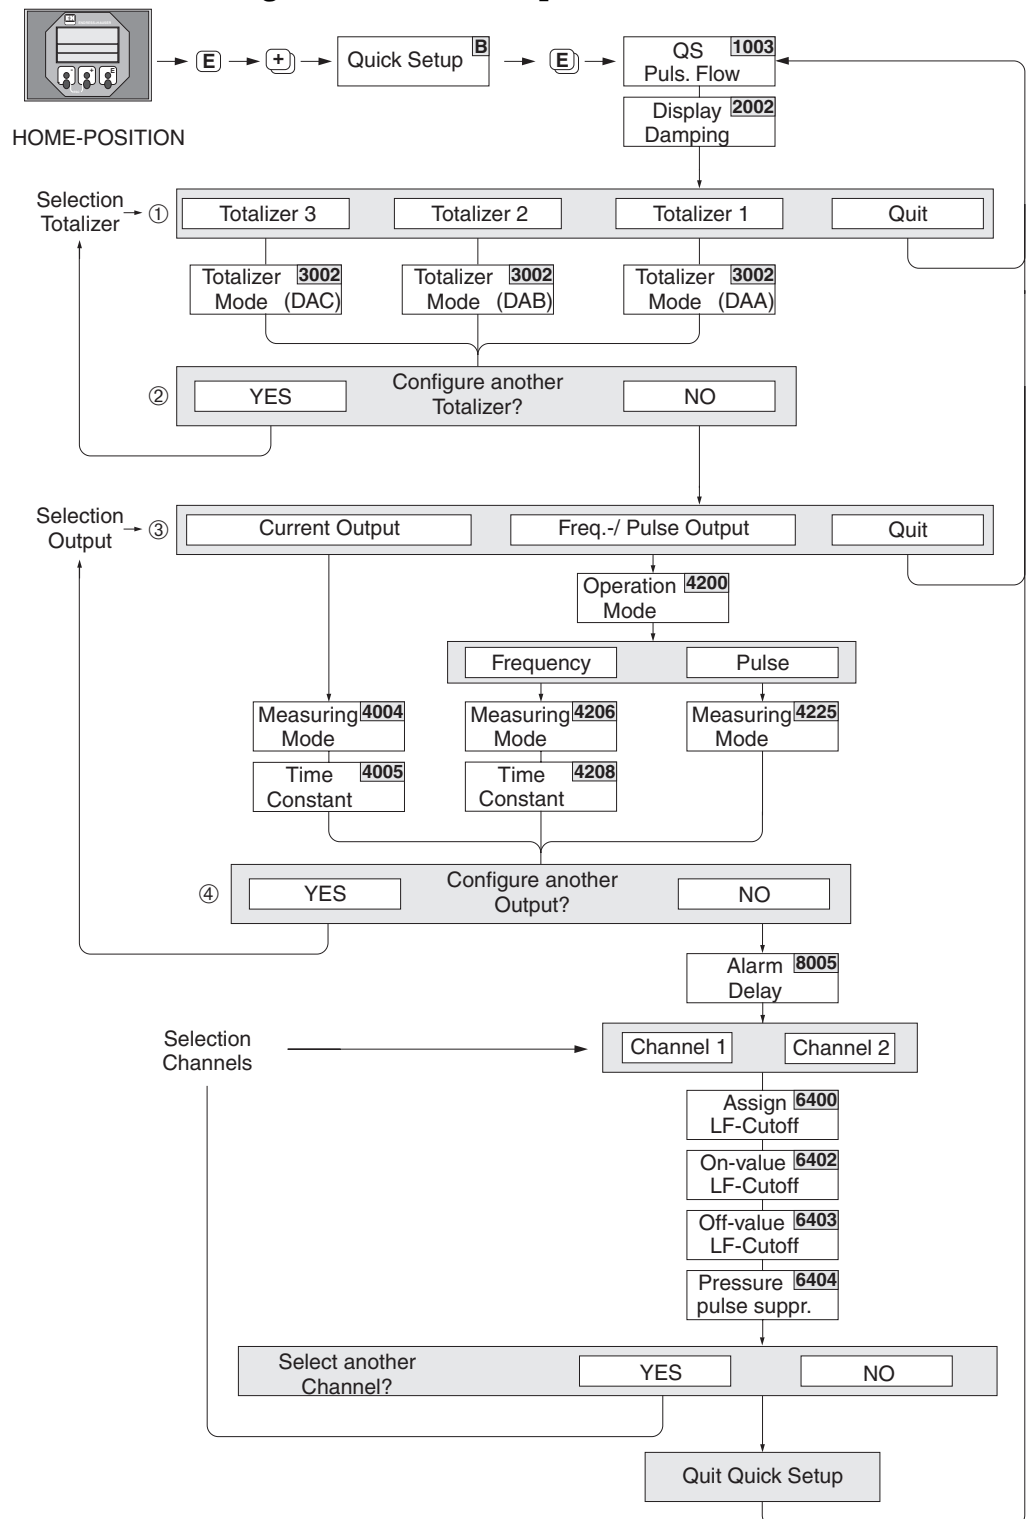- The display returns to the cell QUICK SETUP COMMISSIONING (1002) if you press the ESC key combination during interrogation.
- ① Only the units not yet configured in the current Quick Setup are offered for selection in each cycle. The unit for volume is derived from the volume flow unit.
- ② The “YES” option remains visible until all the units have been configured. “NO” is the only option displayed when no further units are available.
- ③ Only the outputs not yet configured in the current Quick Setup are offered for selection in each cycle.
- ④ The “YES” option remains visible until all the outputs have been configured. “NO” is the only option displayed when no further outputs are available.

4.0.3 Pulsating flow Quick Setup menu



F06-93xxxx-19-xx-xx-en-001



Note!

- The display returns to the cell QUICK SETUP PULSATING FLOW (1003) if you press the ESC key combination during parameter interrogation.
- You can call this Quick Setup menu either directly from the “COMMISSIONING” Quick Setup menu or manually by means of the QUICK SETUP PULSATING FLOW function (1003).

- ① Only the totalizers not yet configured in the current Quick Setup are offered for selection in each cycle.
- ② The “YES” option remains visible until all the totalizers have been parameterized. “NO” is the only option displayed when no further totalizers are available.
- ③ Only the outputs not yet configured in the current Quick Setup are offered for selection in each cycle.
- ④ The “YES” option remains visible until all the outputs have been parameterized. “NO” is the only option displayed when no further outputs are available.

Settings for the Pulsating Flow menu in Quick Setup:			
Fctn. des.	Function name	Suggested settings	Description
Call up through the function matrix:			
B	QUICK SETUP	QS PULSATING FLOW	see p. 19
1003	QS PULSATING FLOW	YES	see p. 19
Basic configuration:			
2002	DISPLAY DAMPING	1 s	see p. 29
3002	TOTALIZER MODE (DAA)	BALANCE	see p. 50
3002	TOTALIZER MODE (DAB)	BALANCE	see p. 50
3002	TOTALIZER MODE (DAC)	BALANCE	see p. 50
Select the signal type: CURRENT OUTPUT (1...2)			
4004	MEASURING MODE	PULSATING FLOW	see p. 60
4005	TIME CONSTANT	1 s	see p. 62
Select the signal type: FREQ.-/PULSE OUTPUT (1...n) / operation mode: FREQUENCY			
4206	MEASURING MODE	PULSATING FLOW	see p. 70
4208	TIME CONSTANT	0 s	see p. 72
Select the signal type: FREQ.-/PULSE OUTPUT (1...n) / operation mode: PULSE			
4225	MEASURING MODE	PULSATING FLOW	see p. 75
Other settings:			
8005	ALARM DELAY	0 s	see p. 137
6400	ASSIGN LOW FLOW CUT OFF	VOLUME FLOW	see p. 102
6402	ON-VALUE LOW FLOW CUT OFF	3.0 dm ³ /min resp. 0.8 US-gal/min	see p. 102
6403	OFF-VALUE LOW FLOW CUT OFF	50%	see p. 102
6404	PRESSURE SHOCK SUPPRESSION	0 s	see p. 103

5 Block USER INTERFACE

Block	Groups	Function groups	Functions							
USER INTERFACE (C)	CONTROL (CAA) p. 29	⇕⇕	⇕	BASIC CONFIGURATION (200) p. 29	⇕	LANGUAGE (2000) p. 29	⇕	DISPLAY DAMPING LCD (2002) p. 29	CONTRAST LCD (2003) p. 29	X-LINE CALC. M. VAL. (2004)p. 30
			⇕⇕	UNLOCKING/LOCKING (202) p. 31	⇕	ACCESS CODE (2020) p. 31	⇕	DEFINE PRIORITY CODE (2021) p. 31	STATUS ACCESS (2022) p. 31	
			OPERATION (204) p. 32	⇕	TEST DISPLAY (2040) p. 32					
	MAIN LINE (CCA) p. 33	⇕⇕	⇕	CONFIGURATION (220) p. 33	⇕	ASSIGN (2200) p. 33	⇕	100% VALUE (2201) p. 34	FORMAT (2202) p. 34	
			⇕⇕	MULTIPLEX (222) p. 35	⇕	ASSIGN (2220) p. 35	⇕	100% VALUE (2221) p. 35	FORMAT (2222) p. 36	
		⇕⇕								
	ADDITIONAL LINE (CEA) p. 37	⇕⇕	⇕	CONFIGURATION (240) p. 37	⇕	ASSIGN (2400) p. 37	⇕	100% VALUE (2401) p. 38	FORMAT (2402) p. 38	DISPLAY MODE (2403) p. 39
			⇕⇕	MULTIPLEX (242) p. 40	⇕	ASSIGN (2420) p. 40	⇕	100% VALUE (2421) p. 41	FORMAT (2422) p. 41	DISPLAY MODE (2423) p. 42
		⇕⇕								
	INFORMATION LINE (CGA) p. 43	⇕⇕	⇕	CONFIGURATION (260) p. 43	⇕	ASSIGN (2600) p. 43	⇕	100% VALUE (2601) p. 44	FORMAT (2602) p. 44	DISPLAY MODE (2603) p. 45
			⇕⇕	MULTIPLEX (262) p. 46	⇕	ASSIGN (2620) p. 46	⇕	100% VALUE (2621) p. 47	FORMAT (2622) p. 47	DISPLAY MODE (2623) p. 48
		⇕⇕								

5.1 Group CONTROL


5.1.1 Function group BASIC CONFIGURATION

USER INTERFACE C ⇒ CONTROL CAA ⇒ BASIC CONFIGURATION 200

Functional description USER INTERFACE → CONTROL → BASIC CONFIGURATION	
LANGUAGE (2000)	Use this function to select the language for all texts, parameters and messages shown on the local display. Options: ENGLISH DEUTSCH FRANCAIS ESPANOL ITALIANO NEDERLANDS DANSK NORSK SVENSKA SUOMI BAHASA INDONESIA JAPANESE (syllabary) Factory setting: Country-dependent, see factory setting page 143 ff  Note! If you press the  keys simultaneously during startup, the language defaults to "ENGLISH".
DISPLAY DAMPING (2002)	Use this function to enter a time constant defining how the display reacts to severely fluctuating flow variables, either very quickly (enter a low time constant) or with damping (enter a high time constant). User input: 0...100 seconds Factory setting: 1 s  Note! Setting the time constant to zero seconds switches off damping.
CONTRAST LCD (2003)	Use this function to optimize display contrast to suit local operating conditions. User input: 10...100% Factory setting: 50%


Functional description	
USER INTERFACE → CONTROL → BASIC CONFIGURATION	
X-LINE CALCULATED MAIN VALUES (2004)	Use this function to indicate which "calculated main value" from the measured values of both channels is displayed. The option CALCULATED VOLUME FLOW must be selected in the function ASSIGN (2200, main line), (2400, additional line), (2600, information line) so that the value appears in the line desired.  Note! This function does not appear if OFF was selected on at least one channel in the function MEASUREMENT (6880). Options: (CH1 + CH2)/2 CH1 + CH2 CH1 - CH2 Factory setting: (CH1 + CH2)/2

 5.1.2 Function group UNLOCKING/LOCKING



Functional description	
USER INTERFACE → CONTROL → UNLOCKING/LOCKING	
ACCESS CODE (2020)	All data of the measuring system are protected against inadvertent change. Programming is disabled and the settings cannot be changed until a code is entered in this function. If you press the  keys in any function, the measuring system automatically goes to this function and the prompt to enter the code appears on the display (when programming is disabled). You can enable programming by entering your personal code (factory setting = 93, see function DEFINE PRIVATE CODE (2021)). User input: max. 4-digit number: 0 ...9999  Note! • The programming levels are disabled if you do not press a key within 60 seconds following automatic return to the HOME position. • You can also disable programming in this function by entering any number (other than the defined private code). • The Endress+Hauser service organization can be of assistance if you mislay your personal code.
DEFINE PRIVATE CODE (2021)	Use this function to enter a personal code number for enabling programming. User input: 0...9999 (max. 4-digit number) Factory setting: 93  Note! • Programming is always enabled with the code "0". • Programming has to be enabled before this code can be changed. When programming is disabled this function is not available, thus preventing others from accessing your personal code.
STATUS ACCESS (2022)	Use this function to check the access status for the function matrix. User interface: ACCESS CUSTOMER (parameterization possible) LOCKED (parameterization disabled)

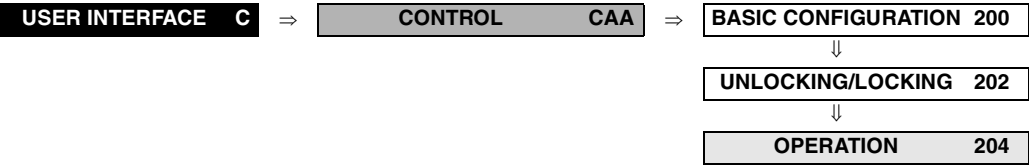
5.1.3 Function group OPERATION




Functional description	
USER INTERFACE → CONTROL → OPERATION	
TEST DISPLAY (2040)	Use this function to test the operability of the local display and its pixels. Options: OFF ON Factory setting: OFF Test sequence: 1. Start the test by selecting ON. 2. All pixels of the main line, additional line and information line are darkened for minimum 0.75 seconds. 3. Main line, additional line and information line show an "8" in each field for minimum 8 second. 4. Main line, additional line and information line show a "0" in each field for minimum 0 second. 5. Main line, additional line and information line show nothing (blank display) for minimum 0.75 seconds. When the test completes the local display returns to its initial state and the setting changes to OFF.

5.1.4 Group MAIN LINE

 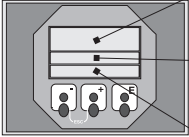
5.1.5 Function group CONFIGURATION



Functional description	
USER INTERFACE → MAIN LINE → CONFIGURATION	
F06-x3xxxx-07-03-xx-xx-000 A B C  A = main line, B = additional line, C = information line	
ASSIGN (2200)	Use this function to define the display value assigned to the main line (the top line of the local display) during normal measuring operation. Options: OFF VOLUME FLOW (CH1...CH2) CALCULATED VOLUME FLOW VOLUME FLOW % (CH1...CH2) CALCULATED VOLUME FLOW % SOUND VELOCITY (CH1...CH2) SOUND VELOCITY AVERAGE SIGNAL STRENGTH (CH1...CH2) FLOW VELOCITY (CH1...CH2) FLOW VELOCITY AVERAGE ACTUAL CURRENT (1...3) ACTUAL FREQUENCY (1...2) TOTALIZER (1...3)  Note! If a channel is not visible, it does not appear in the options. Channels can be displayed or hidden by means of the function MEASUREMENT (6880). Factory setting: VOLUME FLOW CH1 Advanced options with optional software package ADVANCED DIAGNOSTICS: DEVIATION VOLUME FLOW (CH1...CH2) DEVIATION VOLUME FLOW AVERAGE DEVIATION FLOW VELOCITY (CH1...CH2) DEVIATION FLOW VELOCITY AVERAGE DEVIATION SIGNAL STRENGTH (CH1...CH2) DEVIATION SOUND VELOCITY (CH1...CH2) DEVIATION SOUND VELOCITY AVERAGE DEVIATION ACTUAL TRANSIT TIME (CH1...CH2) DEVIATION ACCEPTANCE RATE (CH1...CH2)

Functional description	
USER INTERFACE → MAIN LINE → CONFIGURATION	
100% VALUE (2201)	 Note! This function is only available if VOLUME FLOW IN % or CALCULATED VOLUME FLOW IN % is selected in the function ASSIGN (2200). Use this function to define the flow value to be shown on the display as the 100% value. User input: 5-digit floating-point number Factory setting: 10l/s
FORMAT (2202)	Use this function to define the maximum number of places after the decimal point displayed for the reading in the main line. Options: XXXXX. - XXXX.X - XXX.XX - XX.XXX -X.XXXX Factory setting: X.XXXX  Note! • Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations. • The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → m³/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.

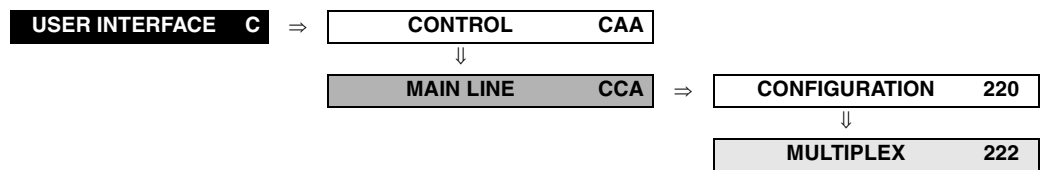5.1.6 Function group MULTIPLEX





Functional description USER INTERFACE → MAIN LINE → MULTIPLEX	
ASSIGN (2220)	Use this function to define a second reading to be displayed in the main line alternatively (every 10 seconds) with the reading defined in the function ASSIGN (2200). Options: OFF VOLUME FLOW (CH1...CH2) CALCULATED VOLUME FLOW VOLUME FLOW % (CH1...CH2) CALCULATED VOLUME FLOW % SOUND VELOCITY (CH1...CH2) SOUND VELOCITY AVERAGE SIGNAL STRENGTH (CH1...CH2) FLOW VELOCITY (CH1...CH2) FLOW VELOCITY AVERAGE ACTUAL CURRENT (1...3) ACTUAL FREQUENCY (1...2) TOTALIZER (1...3) Note! If a channel is not visible, it does not appear in the options. Channels can be displayed or hidden by means of the function MEASUREMENT (6880). Factory setting: OFF Advanced options with optional software package ADVANCED DIAGNOSTICS: DEVIATION VOLUME FLOW (CH1...CH2) DEVIATION VOLUME FLOW AVERAGE DEVIATION FLOW VELOCITY (CH1...CH2) DEVIATION FLOW VELOCITY AVERAGE DEVIATION SIGNAL STRENGTH (CH1...CH2) DEVIATION SOUND VELOCITY (CH1...CH2) DEVIATION SOUND VELOCITY AVERAGE DEVIATION ACTUAL TRANSIT TIME (CH1...CH2) DEVIATION ACCEPTANCE RATE (CH1...CH2)
100% VALUE (2221)	Note! This function is only available if VOLUME FLOW % or CALCULATED VOLUME FLOW % is selected in the function ASSIGN (2200). Use this function to define the flow value to be shown on the display as the 100% value. User input: 5-digit floating-point number Factory setting: Depends on nominal diameter and country, [value] / [dm³...m³ or US-gal...US-Mgal] Corresponds to the factory setting for the full scale value (see page 143 ff.).

Functional description	
USER INTERFACE → MAIN LINE → MULTIPLEX	
FORMAT (2222)	Use this function to define the maximum number of places after the decimal point for the second value displayed in the main line. Options: XXXXX. - XXXX.X - XXX.XX - XX.XXX -X.XXXX Factory setting: X.XXXX  Note! • Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations. • The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → m³/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.

5.2 Group ADDITIONAL LINE

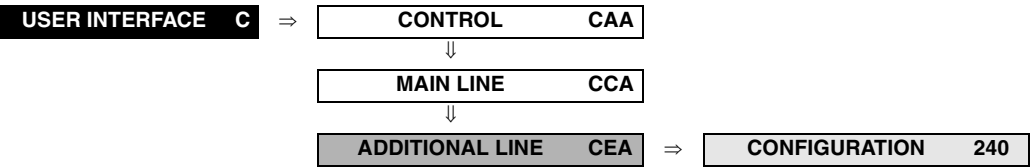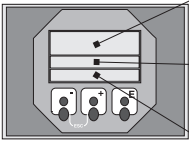5.2.1 Function group CONFIGURATION




Functional description	
USER INTERFACE → ADDITIONAL LINE → CONFIGURATION	
F06-x3xxxx-07-03-xx-xx-000 A B C  A = main line, B = additional line, C = information line	
ASSIGN (2400)	Use this function to define the display value assigned to the additional line (the middle line of the local display) during normal measuring operation. Options: OFF VOLUME FLOW (CH1...CH2) CALCULATED VOLUME FLOW VOLUME FLOW % (CH1...CH2) CALCULATED VOLUME FLOW % SOUND VELOCITY (CH1...CH2) SOUND VELOCITY AVERAGE SIGNAL STRENGTH (CH1...CH2) FLOW VELOCITY (CH1...CH2) FLOW VELOCITY AVERAGE VOLUME FLOW BARGRAPH IN % (CH1...CH2) CALCULATED VOLUME FLOW BARGRAPH % (CH1...CH2) SIGNAL STRENGTH BARGRAPH % (CH1...CH2) ACTUAL CURRENT (1...3) ACTUAL FREQUENCY (1...2) TOTALIZER (1...3) TAG NAME FLOW DIRECTION (CH1...CH2) CALCULATED FLOW DIRECTION Factory setting: TOTALIZER 1  Note! If a channel is not visible, it does not appear in the options. Channels can be displayed or hidden by means of the function MEASUREMENT (6880). (Continued on next page)

Functional description USER INTERFACE → ADDITIONAL LINE → CONFIGURATION	
ASSIGN (continued)	Advanced options with optional software package ADVANCED DIAGNOSTICS: DEVIATION VOLUME FLOW (CH1...CH2) DEVIATION VOLUME FLOW AVERAGE DEVIATION FLOW VELOCITY (CH1...CH2) DEVIATION FLOW VELOCITY AVERAGE DEVIATION SIGNAL STRENGTH (CH1...CH2) DEVIATION SOUND VELOCITY (CH1...CH2) DEVIATION SOUND VELOCITY AVERAGE DEVIATION ACTUAL TRANSIT TIME (CH1...CH2) DEVIATION ACCEPTANCE RATE (CH1...CH2)
100% VALUE (2401)	 Note! This function is not available unless one of the following was selected in the function ASSIGN (2400): • VOLUME FLOW % • VOLUME FLOW BARGRAPH % • CALCULATED VOLUME FLOW % • CALCULATED VOLUME FLOW BARGRAPH % Use this function to define the flow value to be shown on the display as the 100% value. User input: 5-digit floating-point number Factory setting: Depends on nominal diameter and country, [value] / [dm ³ ...m ³ or US-gal...US-Mgal] Corresponds to the factory setting for the full scale value (see page 143 ff.).
FORMAT (2402)	 Note! This function is not available unless a number was selected in the function ASSIGN (2400). Use this function to define the maximum number of places after the decimal point displayed for the reading in the additional line. Options: XXXXX. - XXXX.X - XXX.XX - XX.XXX -X.XXXX Factory setting: X.XXXX  Note! • Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations. • The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → m³/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.

Functional description	
USER INTERFACE → ADDITIONAL LINE → CONFIGURATION	
DISPLAY MODE (2403)	Note! This function is only available if VOLUME FLOW BARGRAPH IN % or CALCULATED VOLUME FLOW BARGRAPH IN % was selected in the function ASSIGN (2420). Use this function to define the format of the bar graph. Options: STANDARD (Simple bar graph with 25 / 50 / 75% gradations and integrated sign). +25+50+75% F-x3xxxx-20-xx-xx-xx-000 SYMMETRY (Symmetrical bar graph for positive and negative directions of flow, with -50 / 0 / +50% gradations and integrated sign). -50+50% F-x3xxxx-20-xx-xx-xx-001 Factory setting: STANDARD

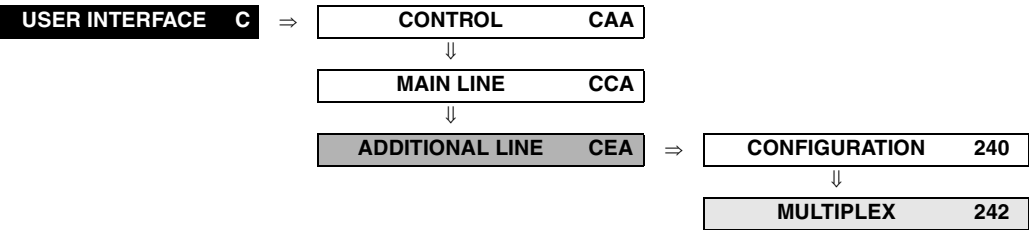5.2.2 **Function group MULTIPLEX**




Functional description	
USER INTERFACE → ADDITIONAL LINE → MULTIPLEX	
ASSIGN (2420)	Use this function to define the second reading to be displayed in the additional line alternately (every 10 seconds) with the value defined in the function ASSIGN (2400). Options: OFF VOLUME FLOW (CH1...CH2) CALCULATED VOLUME FLOW VOLUME FLOW % (CH1...CH2) CALCULATED VOLUME FLOW % SOUND VELOCITY (CH1...CH2) SOUND VELOCITY AVERAGE SIGNAL STRENGTH (CH1...CH2) FLOW VELOCITY (CH1...CH2) FLOW VELOCITY AVERAGE VOLUME FLOW BARGRAPH IN % (CH1...CH2) CALCULATED VOLUME FLOW BARGRAPH % (CH1...CH2) SIGNAL STRENGTH BARGRAPH % (CH1...CH2) ACTUAL CURRENT (1...3) ACTUAL FREQUENCY (1...2) TOTALIZER (1...3) TAG NAME FLOW DIRECTION (CH1...CH2) CALCULATED FLOW DIRECTION Factory setting: OFF Note! Multiplex mode is suspended as soon as a fault / notice message is generated. The message in question appears on the display. • Fault message (identified by a lightning icon): – If ON was selected in the function ACKNOWLEDGE FAULTS (8004), multiplex mode is resumed as soon as the fault has been acknowledged and is no longer active. – If OFF was selected in the function ACKNOWLEDGE FAULTS (8004), multiplex mode is resumed as soon as the fault is no longer active. • Notice message (identified by an exclamation mark): – Multiplex mode is resumed as soon as the notice message is no longer active. If a channel is not visible, it does not appear in the options. Channels can be displayed or hidden by means of the function MEASUREMENT (6880). (Continued on next page)


Functional description USER INTERFACE → ADDITIONAL LINE → MULTIPLEX	
ASSIGN (continued)	Advanced options with optional software package ADVANCED DIAGNOSTICS: DEVIATION VOLUME FLOW (CH1...CH2) DEVIATION VOLUME FLOW AVERAGE DEVIATION FLOW VELOCITY (CH1...CH2) DEVIATION FLOW VELOCITY AVERAGE DEVIATION SIGNAL STRENGTH (CH1...CH2) DEVIATION SOUND VELOCITY (CH1...CH2) DEVIATION SOUND VELOCITY AVERAGE DEVIATION ACTUAL TRANSIT TIME (CH1...CH2) DEVIATION ACCEPTANCE RATE (CH1...CH2)
100% VALUE (2421)	 Note! This function is not available unless one of the following was selected in the function ASSIGN (2420): • VOLUME FLOW % • VOLUME FLOW BARGRAPH % • CALCULATED VOLUME FLOW % • CALCULATED VOLUME FLOW BARGRAPH % Use this function to define the flow value to be shown on the display as the 100% value. User input: 5-digit floating-point number Factory setting: Depends on nominal diameter and country, [value] / [dm ³ ...m ³ or US-gal...US-Mgal] Corresponds to the factory setting for the full scale value (see page 143 ff.).
FORMAT (2422)	 Note! This function is not available unless a number was selected in the function ASSIGN (2420). Use this function to define the maximum number of places after the decimal point for the second value displayed in the additional line. Options: XXXXX. - XXXX.X - XXX.XX - XX.XXX -X.XXXX Factory setting: X.XXXX  Note! • Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations. • The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → m³/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.

Functional description	
USER INTERFACE → ADDITIONAL LINE → MULTIPLEX	
DISPLAY MODE (2423)	Note! This function is only available if VOLUME FLOW BARGRAPH IN % or CALCULATED VOLUME FLOW BARGRAPH IN % was selected in the function ASSIGN (2420). Use this function to define the format of the bar graph. Options: STANDARD (Simple bar graph with 25 / 50 / 75% gradations and integrated sign). +25+50+75% F-x3xxxxx-20-xx-xx-xx-000 SYMMETRY (Symmetrical bar graph for positive and negative directions of flow, with -50 / 0 / +50% gradations and integrated sign). -50+50% F-x3xxxxx-20-xx-xx-xx-001 Factory setting: STANDARD

5.3 Group INFORMATION LINE

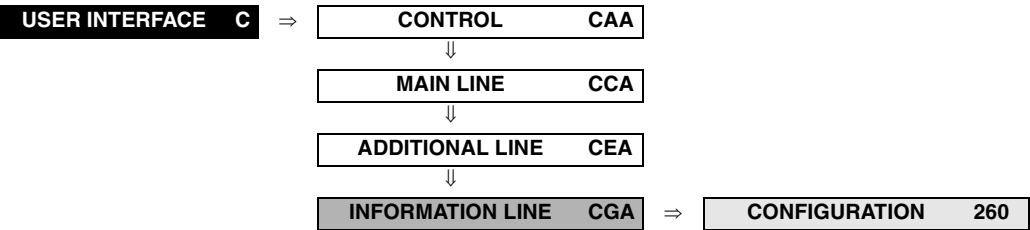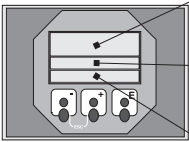5.3.1 Function group CONFIGURATION




Functional description	
USER INTERFACE → INFORMATION LINE → CONFIGURATION	
F06-x3xxxxx-07-03-xx-xx-000 A B C  A = main line, B = additional line, C = information line	
ASSIGN (2600)	Use this function to define the display value assigned to the information line (the bottom line of the local display) during normal measuring operation. Options: OFF VOLUME FLOW (CH1...CH2) CALCULATED VOLUME FLOW VOLUME FLOW % (CH1...CH2) CALCULATED VOLUME FLOW IN % SOUND VELOCITY (CH1...CH2) SOUND VELOCITY AVERAGE SIGNAL STRENGTH (CH1...CH2) FLOW VELOCITY (CH1...CH2) FLOW VELOCITY AVERAGE VOLUME FLOW BARGRAPH % (CH1...CH2) CALCULATED VOLUME FLOW BARGRAPH % (CH1...CH2) SIGNAL STRENGTH BARGRAPH % (CH1...CH2) ACTUAL CURRENT (1...3) ACTUAL FREQUENCY (1...2) TOTALIZER (1...3) TAG NAME OPERATING/SYSTEM CONDITIONS FLOW DIRECTION (CH1...CH2) CALCULATED FLOW DIRECTION Factory setting: OPERATING/SYSTEM CONDITIONS  Note! If a channel is not visible, it does not appear in the options. Channels can be displayed or hidden by means of the function MEASUREMENT (6880). (Continued on next page)

Functional description USER INTERFACE → INFORMATION LINE → CONFIGURATION	
ASSIGN (continued)	Advanced options with optional software package ADVANCED DIAGNOSTICS: DEVIATION VOLUME FLOW (CH1...CH2) DEVIATION VOLUME FLOW AVERAGE DEVIATION FLOW VELOCITY (CH1...CH2) DEVIATION FLOW VELOCITY AVERAGE DEVIATION SIGNAL STRENGTH (CH1...CH2) DEVIATION SOUND VELOCITY (CH1...CH2) DEVIATION SOUND VELOCITY AVERAGE DEVIATION ACTUAL TRANSIT TIME (CH1...CH2) DEVIATION ACCEPTANCE RATE (CH1...CH2)
100% VALUE (2601)	 Note! This function is not available unless one of the following was selected in the function ASSIGN (2400): • VOLUME FLOW % • VOLUME FLOW BARGRAPH % • CALCULATED VOLUME FLOW % • CALCULATED VOLUME FLOW BARGRAPH % Use this function to define the flow value to be shown on the display as the 100% value. User input: 5-digit floating-point number Factory setting: Depends on nominal diameter and country, [value] / [dm ³ ...m ³ or US-gal...US-Mgal] Corresponds to the factory setting for the full scale value (see page 143 ff.).
FORMAT (2602)	 Note! This function is not available unless a number was selected in the function ASSIGN (2600). Use this function to define the maximum number of places after the decimal point displayed for the reading in the information line. Options: XXXXX. - XXXX.X - XXX.XX - XX.XXX -X.XXXX Factory setting: X.XXXX  Note! • Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations. • The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → m³/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.

Functional description	
USER INTERFACE → INFORMATION LINE → CONFIGURATION	
DISPLAY MODE (2603)	Note! This function is only available if VOLUME FLOW BARGRAPH IN % or CALCULATED VOLUME FLOW BARGRAPH IN % was selected in the function ASSIGN (2600). Use this function to define the format of the bar graph. Options: STANDARD (Simple bar graph with 25 / 50 / 75% gradations and integrated sign). +25+50+75% F-x3xxxxx-20-xx-xx-xx-000 SYMMETRY (Symmetrical bar graph for positive and negative directions of flow, with -50 / 0 / +50% gradations and integrated sign). -50+50% F-x3xxxxx-20-xx-xx-xx-001 Factory setting: STANDARD

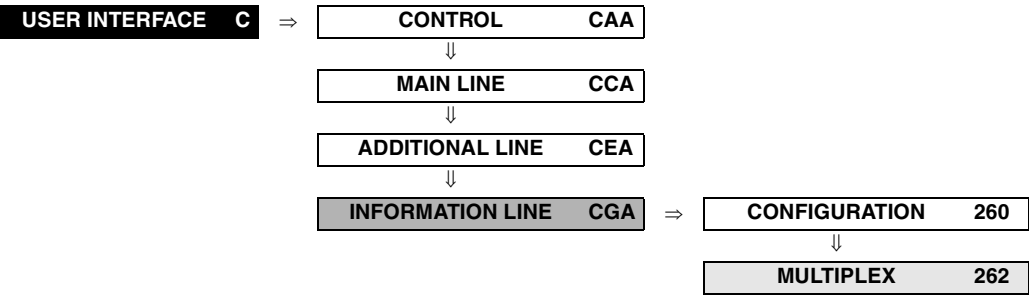5.3.2 **Function group MULTIPLEX**



Functional description	
USER INTERFACE → INFORMATION LINE → MULTIPLEX	
ASSIGN (2620)	Use this function to define the second reading to be displayed in the information line alternately (every 10 seconds) with the value defined in the function ASSIGN (2600). Options: OFF VOLUME FLOW (CH1...CH2) CALCULATED VOLUME FLOW VOLUME FLOW % (CH1...CH2) CALCULATED VOLUME FLOW IN % SOUND VELOCITY (CH1...CH2) SOUND VELOCITY AVERAGE SIGNAL STRENGTH (CH1...CH2) FLOW VELOCITY (CH1...CH2) FLOW VELOCITY AVERAGE VOLUME FLOW BARGRAPH % (CH1...CH2) CALCULATED VOLUME FLOW BARGRAPH % (CH1...CH2) SIGNAL STRENGTH BARGRAPH % (CH1...CH2) ACTUAL CURRENT (1...3) ACTUAL FREQUENCY (1...2) TOTALIZER (1...3) TAG NAME OPERATING/SYSTEM CONDITIONS FLOW DIRECTION (CH1...CH2) CALCULATED FLOW DIRECTION Factory setting: OFF Note! Multiplex mode is suspended as soon as a fault / notice message is generated. The message in question appears on the display. - Fault message (identified by a lightning icon): - If ON was selected in the function ACKNOWLEDGE FAULTS (8004), multiplex mode is resumed as soon as the fault has been acknowledged and is no longer active. - If OFF was selected in the function ACKNOWLEDGE FAULTS (8004), multiplex mode is resumed as soon as the fault is no longer active. - Notice message (identified by an exclamation mark): - Multiplex mode is resumed as soon as the notice message is no longer active. (Continued on next page)

Functional description USER INTERFACE → INFORMATION LINE → MULTIPLEX	
ASSIGN (continued)	Advanced options with optional software package ADVANCED DIAGNOSTICS: DEVIATION VOLUME FLOW (CH1...CH2) DEVIATION VOLUME FLOW AVERAGE DEVIATION FLOW VELOCITY (CH1...CH2) DEVIATION FLOW VELOCITY AVERAGE DEVIATION SIGNAL STRENGTH (CH1...CH2) DEVIATION SOUND VELOCITY (CH1...CH2) DEVIATION SOUND VELOCITY AVERAGE DEVIATION ACTUAL TRANSIT TIME (CH1...CH2) DEVIATION ACCEPTANCE RATE (CH1...CH2)
100% VALUE (2621)	 Note! This function is not available unless one of the following was selected in the function ASSIGN (2400): • VOLUME FLOW % • VOLUME FLOW BARGRAPH % • CALCULATED VOLUME FLOW % • CALCULATED VOLUME FLOW BARGRAPH % Use this function to define the flow value to be shown on the display as the 100% value. User input: 5-digit floating-point number Factory setting: Depends on nominal diameter and country, [value] / [dm ³ ...m ³ or US-gal...US-Mgal] Corresponds to the factory setting for the full scale value (see page 143 ff.).
FORMAT (2622)	 Note! This function is not available unless a number was selected in the function ASSIGN (2600). Use this function to define the maximum number of places after the decimal point for the second value displayed in the information line. Options: XXXXX. - XXXX.X - XXX.XX - XX.XXX -X.XXXX Factory setting: X.XXXX  Note! • Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations. • The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → m³/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.


Functional description	
USER INTERFACE → INFORMATION LINE → MULTIPLEX	
DISPLAY MODE (2623)	Note! This function is only available if VOLUME FLOW BARGRAPH IN % or CALCULATED VOLUME FLOW BARGRAPH IN % was selected in the function ASSIGN (2620). Use this function to define the format of the bar graph. Options: STANDARD (Simple bar graph with 25 / 50 / 75% gradations and integrated sign). +25 +50 +75 % F-x3xxxxx-20-xx-xx-xx-000 SYMMETRY (Symmetrical bar graph for positive and negative directions of flow, with -50 / 0 / +50% gradations and integrated sign). -50 +50 % F-x3xxxxx-20-xx-xx-xx-001 Factory setting: STANDARD

6 Block TOTALIZER

Block	Groups	Function groups	Functions
TOTALIZER (D) p. 888	TOTALIZER 1 (DAA) p. 50	CONFIGURATION (300) p. 50	ASSIGN (3000) p. 50
		OPERATION (304) p. 52	SUM (3040) p. 52
	TOTALIZER 2 (DAB) p. 50	CONFIGURATION (300) p. 50	ASSIGN (3000) p. 50
		OPERATION (304) p. 52	SUM (3040) p. 52
	TOTALIZER 3 (DAC) p. 50	CONFIGURATION (300) p. 50	ASSIGN (3000) p. 50
		OPERATION (304) p. 52	SUM (3040) p. 52
	HANDLING TOTALIZER (DJA) p. 53	RESET ALL TOT. (3800) p. 53	RESET TOTALIZER (3003) p. 51
		FAILSAFE ALL TOT (3801) p. 53	
		UNIT TOTALIZER (3001) p. 50	TOTALIZER MODE (3002) p. 50
		OVERFLOW (3041) p. 52	

6.1 Group TOTALIZER (1...3)

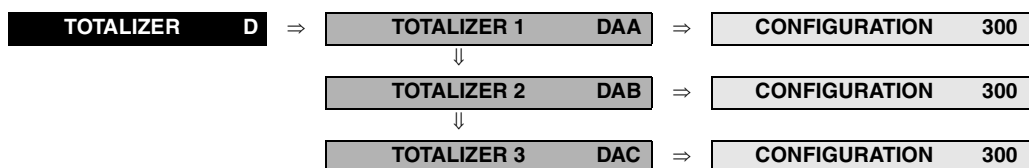
6.1.1 Function group CONFIGURATION



Functional description TOTALIZER → TOTALIZER (1...3) → CONFIGURATION	
The function descriptions below apply to totalizers 1...3; the totalizers are independently configurable.	
ASSIGN (3000)	Use this function to assign a measured variable to the totalizer in question. Options: OFF VOLUME FLOW (CH1...CH2) VOLUME FLOW AVERAGE VOLUME FLOW SUM (CH1+CH2) VOLUME FLOW DIFFERENCE (CH1-CH2) Factory setting: CH1 VOLUME FLOW Note! - The totalizer is reset to "0" as soon as the selection is changed. - If you select OFF in the function group CONFIGURATION of the totalizer in question, only the ASSIGN (3000) function remains visible.
UNIT TOTALIZER (3001)	Use this function to define the unit for the totalizer's measured variable, as selected beforehand. Options: Metric cm→³; dm³; m³; ml; l; hl; Ml US cc→; af; ft³; oz f; gal; Mgal; bbl (normal fluids); bbl (beer); bbl (petrochemicals); bbl (filling tanks) Imperial gal→; Mgal; bbl (beer); bbl (petrochemicals) Arbitrary unit → _ _ _ _ (see function group ARBITRARY UNIT on page 18) Factory setting: m³
TOTALIZER MODE (3002)	Use this function to define how the flow components are to be totaled by the totalizer in question. Options: BALANCE Positive and negative flow components. The positive and negative flow components are balanced. In other words, net flow in the flow direction is registered. FORWARD Positive flow components only REVERSE Negative flow components only Factory setting: Totalizer 1 = BALANCE Totalizer 2 = FORWARD Totalizer 3 = REVERSE


Functional description	
TOTALIZER → TOTALIZER (1...3) → CONFIGURATION	
RESET TOTALIZER (3003)	Use this function to reset the sum and the overflow of the totalizer in question (1...3) to zero. Options: NO YES Factory setting: NO  Note! If the device is equipped with a status input, with the appropriate configuration a reset for each individual totalizer can also be triggered by a pulse (see function ASSIGN STATUS INPUT (5000) on page 96).

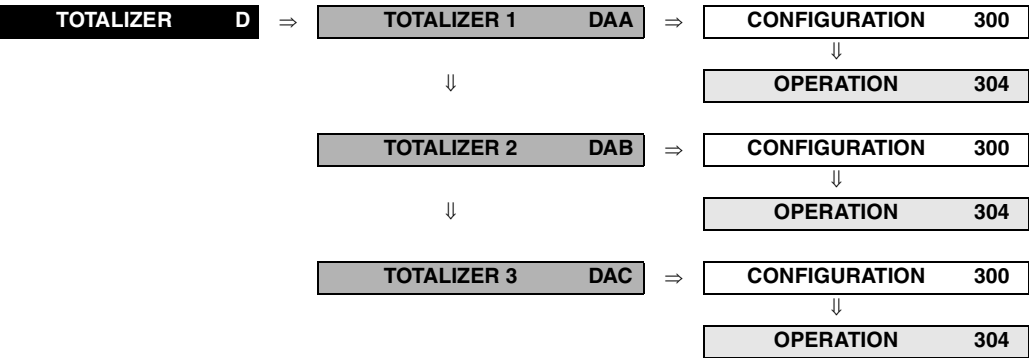6.1.2 **Function group OPERATION**



Functional description	
TOTALIZER → TOTALIZER (1...3) → OPERATION	
The function descriptions below apply to totalizers 1...3; the totalizers are independently configurable.	
SUM (3040)	Use this function to view the total for the particular totalizer's measured variable aggregated since measuring commenced. The value can be positive or negative, depending on the setting selected in the "TOTALIZER MODE" function (3002), and the direction of flow. User interface: max. 7-digit floating-point number, including sign and unit (e.g. 15467.04 m³;  Note! • The effect of the setting in the "TOTALIZER MODE" function (see page 50) is as follows: – If the setting is "BALANCE", the totalizer balances flow in the positive and negative directions. – If the setting is "POSITIVE", the totalizer registers only flow in the positive direction. – If the setting is "NEGATIVE", the totalizer registers only flow in the negative direction. • The totalizer's response to faults is defined in the "FAILSAFE ALL TOTALIZERS" function (3801) (see page 53).
OVERFLOW (3041)	Use this function to view the totaled overflow for the particular totalizer aggregated since measuring commenced. Total flow quantity is represented by a floating-point number consisting of max. 7 digits. You can use this function to view higher numerical values (>9,999,999) as overflows. The effective quantity is thus the total of OVERFLOW plus the value returned by the SUM function. Example: Reading for 2 overflows: 2 10⁷ dm³ (= 20,000,000 dm³) The value displayed in the function SUM = 196 dm³ Effective total quantity = 20,196,845.7 dm³ User interface: Integer with exponent, including sign and unit, e.g. 2 10⁷ dm³

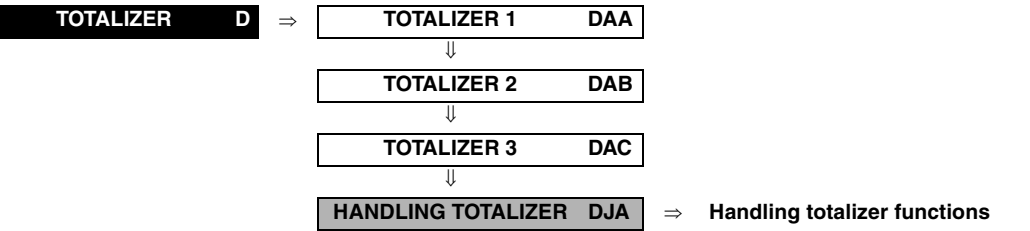6.2 Group HANDLING TOTALIZER




Functional description	
TOTALIZER → HANDLING TOTALIZER → Handling totalizer functions	
RESET ALL TOTALIZERS (3800)	Use this function to reset the totals (including all overflows) of the totalizers (1...3) to "zero" (= RESET). Options: NO YES Factory setting: NO  Note! If the device is equipped with a status input and if it is appropriately configured, a reset for the totalizer (1...3) can also be triggered by a pulse (see function ASSIGN STATUS INPUT (5000) on page 96).
FAILSAFE ALL TOTALIZERS (3801)	Use this function to define the common response of all totalizers (1...3) in case of error. Options: STOP The totalizer is paused until the fault is rectified. ACTUAL VALUE The totalizer continues to count based on the current flow measuring value. The fault is ignored. HOLD VALUE The totalizer continues to count the flow is based on the last valid flow value (before the fault occurred). Factory setting: STOP

7 Block OUTPUTS

Block	Groups	Function groups	Functions												
OUTPUTS (E)	CURRENT OUTPUT (1...3) (EAA, EAB, EAC), ⇕⇕	⇒	CONFIGURA- TION (400) p. 55	⇒	ASSIGN CURRENT (4000) p. 55	⇒	CURRENT SPAN (4001) p. 56	VALUE 0.4 mA (4002) p. 57	VALUE 20 mA (4003) p. 59	MEASURING MODE (4004) p. 60	TIME CONSTANT (4005) p. 62	FAILSAFE MODE (4006) p. 63			
		⇕⇕	OPERATION (404) p. 64	⇒	ACTUAL CURRENT (4040) p. 64	⇒	SIMULATION CURRENT (4041) p. 64	VALUE SIMUL. CURRENT (4042) p. 64							
		⇕⇕	INFORMATION (408) p. 65	⇒	TERMINAL NUMBER (4080) p. 65										
	PUL/FREQ. OUTP (1...2) (ECA, ECB) p. 66 ⇕⇕	⇒	CONFIGURA- TION (420) p. 66	⇒	OPERATION MODE (4200) p. 66	⇒	ASSIGN FREQUENCY (4201) p. 66	START VALUE FREQUENCY (4202) p. 67	END VALUE FREQUENCY (4203) p. 67	VALUE f LOW (4204) p. 68	VALUE f HIGH (4205) p. 68	MEASURING MODE (4206) p. 70	OUTPUT SIGNAL (4207) p. 71	TIME CONSTANT (4208) p. 72	FAILSAFE MODE (4209) p. 72
		⇕⇕				FAILSAFE VALUE (4211) p. 72									
		⇕⇕				⇒	ASSIGN PULSE (4221) p. 73	PULSE VALUE (4222) p. 73	PULSE WIDTH (4223) p. 74	MEASURING MODE (4225) p. 75	OUTPUT SIGNAL (4226) p. 76	FAILSAFE MODE (4227) p. 77			
		⇕⇕	OPERATION (430) p. 82	⇕⇕		⇒	ASSIGN STATUS (4241) p. 78	ON-VALUE (4242) p. 79	SWITCH-ON DELAY (4243) p. 79	OFF-VALUE (4244) p. 79	SWITCH-OFF DELAY (4245) p. 80	MEASURING MODE (4246) p. 80	TIME CONSTANT (4247) p. 81		
		⇕⇕				⇒	ACTUAL FREQ. (4301) p. 82	SIMULATION FREQ. (4302) p. 82	VALUE SIM. FREQ. (4303) p. 82						
		⇕⇕				⇒	ACTUAL STATUS (4341) p. 83	SIMUL SWITCH POINT (4342) p. 83	VALUE SIM. SWITCH POINT (4343) p. 83						
	RELAY OUT- PUT (1...2) (EGA) p. 85 ⇕⇕	⇕⇕	INFORMATION (438) p. 84	⇒	TERMINAL NUMBER (4380) p. 84										
		⇕⇕	CONFIGURA- TION (470) p. 85	⇒	ASSIGN RELAY (4700) p. 85	⇒	ON-VALUE (4701) p. 86	SWITCH-ON DELAY (4702) p. 86	OFF-VALUE (4703) p. 87	SWITCH-OFF DELAY (4704) p. 87	MEASURING MODE (4705) p. 88	TIME CONSTANT (4706) p. 88			
		⇕⇕	OPERATION (474) p. 89	⇒	ACTUAL STATUS/REL. (4740) p. 89	⇒	SIMUL SWITCH POINT (4741) p. 89	VALUE SIM. SWITCH PT (4742) p. 90							
		⇕⇕	INFORMATION (478) p. 91	⇒	TERMINAL NUMBER (4780) p. 91										

7.1 Group CURRENT OUTPUT (1...3)

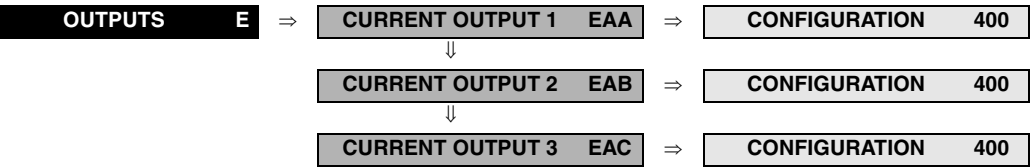7.1.1 Function group CONFIGURATION





Functional description	
OUTPUTS → CURRENT OUTPUT (1...3) → CONFIGURATION	
ASSIGN CURRENT OUTPUT (4000)	Use this function to assign a measured variable to the current output. Options: OFF VOLUME FLOW (CH1...CH2) VOLUME FLOW AVERAGE VOLUME FLOW SUM (CH1+CH2) VOLUME FLOW DIFFERENCE (CH1-CH2) SOUND VELOCITY (CH1...CH2) SOUND VELOCITY AVERAGE FLOW VELOCITY (CH1...CH2) FLOW VELOCITY AVERAGE Factory setting: VOLUME FLOW CH1  Note! If you select OFF, the only function shown in the function group CONFIGURATION (400) is this function, in other words, ASSIGN CURRENT OUTPUT (4000). Advanced options with optional software package ADVANCED DIAGNOSTICS: DEVIATION VOLUME FLOW (CH1...CH2) DEVIATION VOLUME FLOW AVERAGE DEVIATION FLOW VELOCITY (CH1...CH2) DEVIATION FLOW VELOCITY AVERAGE DEVIATION SIGNAL STRENGTH (CH1...CH2) DEVIATION SOUND VELOCITY (CH1...CH2) DEVIATION SOUND VELOCITY AVERAGE DEVIATION ACTUAL TRANSIT TIME (CH1...CH2) DEVIATION ACCEPTANCE RATE (CH1...CH2)

FUNCTIONAL DESCRIPTION																																													
OUTPUTS → CURRENT OUTPUT (1...3) → CONFIGURATION																																													
CURRENT SPAN (4001)	Use this function to define the current span. The selection specifies the operational range and the lower and upper signal on alarm. For the current output 1 the option HART can be defined additionally. Options: 0–20 mA 4–20 mA 4–20 mA HART (only current output1) 4–20 mA NAMUR 4–20 mA HART NAMUR (only current output1) 4–20 mA US 4–20 mA HART US (only current output1) 0–20 mA (25 mA) 4–20 mA (25 mA) 4–20 mA (25 mA) HART (only current output1) Factory setting: 4–20 mA HART NAMUR (für current output 1) 4–20 mA NAMUR (für current output 2) Note! • The option HART is only supported by the current output designated as current output 1 in the device software, (terminals 26 and 27, see function TERMINAL NUMBER (4080) on page 65). • When switching the hardware from an active (factory setting) to a passive output signal select a current span of 4–20 mA, (see <i>Operating Instructions Prosonic Flow 93</i>, BA 070D/06/en/.) Current span, operational range and signal on alarm level <table><thead><tr><th>A</th><th>1</th><th>2</th><th>3</th></tr></thead><tbody><tr><td>0-20 mA</td><td>0 - 20,5 mA</td><td>0</td><td>22</td></tr><tr><td>4-20 mA</td><td>4 - 20,5 mA</td><td>2</td><td>22</td></tr><tr><td>4-20 mA HART</td><td>4 - 20,5 mA</td><td>2</td><td>22</td></tr><tr><td>4-20 mA NAMUR</td><td>3,8 - 20,5 mA</td><td>3,5</td><td>22,6</td></tr><tr><td>4-20 mA HART NAMUR</td><td>3,8 - 20,5 mA</td><td>3,5</td><td>22,6</td></tr><tr><td>4-20 mA US</td><td>3,9 - 20,8 mA</td><td>3,75</td><td>22,6</td></tr><tr><td>4-20 mA HART US</td><td>3,9 - 20,8 mA</td><td>3,75</td><td>22,6</td></tr><tr><td>0-20 mA (25 mA)</td><td>0 - 24 mA</td><td>0</td><td>25</td></tr><tr><td>4-20 mA (25 mA)</td><td>4 - 24 mA</td><td>2</td><td>25</td></tr><tr><td>4-20 mA (25 mA) HART</td><td>4 - 24 mA</td><td>2</td><td>25</td></tr></tbody></table> A = Current span 1 = Operational range (measuring information) 2 = Lower signal on alarm level 3 = Upper signal on alarm level Note! • If the measured value exceeds the measuring range (as defined in the functions VALUE 0_4 mA (4002) and VALUE 20 mA (4003)) a notice message is generated (#351–354, current span). • In case of a fault the behaviour of the current output is according to the selected option in the function FAILSAFE MODE (4006.) Change the error category in the function ASSIGN SYSTEM ERROR (8000) to generate a fault message instead of a notice message.	A	1	2	3	0-20 mA	0 - 20,5 mA	0	22	4-20 mA	4 - 20,5 mA	2	22	4-20 mA HART	4 - 20,5 mA	2	22	4-20 mA NAMUR	3,8 - 20,5 mA	3,5	22,6	4-20 mA HART NAMUR	3,8 - 20,5 mA	3,5	22,6	4-20 mA US	3,9 - 20,8 mA	3,75	22,6	4-20 mA HART US	3,9 - 20,8 mA	3,75	22,6	0-20 mA (25 mA)	0 - 24 mA	0	25	4-20 mA (25 mA)	4 - 24 mA	2	25	4-20 mA (25 mA) HART	4 - 24 mA	2	25
A	1	2	3																																										
0-20 mA	0 - 20,5 mA	0	22																																										
4-20 mA	4 - 20,5 mA	2	22																																										
4-20 mA HART	4 - 20,5 mA	2	22																																										
4-20 mA NAMUR	3,8 - 20,5 mA	3,5	22,6																																										
4-20 mA HART NAMUR	3,8 - 20,5 mA	3,5	22,6																																										
4-20 mA US	3,9 - 20,8 mA	3,75	22,6																																										
4-20 mA HART US	3,9 - 20,8 mA	3,75	22,6																																										
0-20 mA (25 mA)	0 - 24 mA	0	25																																										
4-20 mA (25 mA)	4 - 24 mA	2	25																																										
4-20 mA (25 mA) HART	4 - 24 mA	2	25																																										



F06-x3xxxxxx-05-xx-xx-xx-xx-017





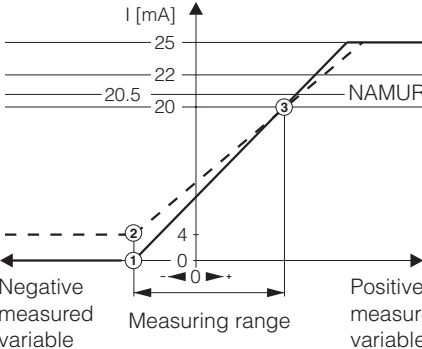
F06-X3xxxxx-05-xx-xx-xx-017





Functional description	
OUTPUTS → CURRENT OUTPUT (1...3) → CONFIGURATION	
VALUE 0_4 mA (4002)	Use this function to assign the 0/4 mA current a value. The value can be greater or less than the value assigned to 20 mA (function VALUE 20 mA (4003)). Positive and negative values are permissible, depending on the measured variable in question (e.g. CH1 volume flow). Example: 4 mA assigned value = – 250 l/h 20 mA assigned value = +750 l/h Calculated current value = 8 mA (at zero flow) Note that values with different signs cannot be entered for 0/4 mA and 20 mA (function 4003) if SYMMETRY is the setting selected for the MEASURING MODE function (4004). In this case the message “INPUT RANGE EXCEEDED” appears on the display. Example for STANDARD measuring mode:  ① = initial value 0...20 mA ② = initial value 4...20 mA ③ = full scale value 0/4...20 mA * = max. current value Minimum span: Q = 0.3 m/s User input: 5-digit floating-point number, with sign Factory setting: 0 [unit]  Note! The appropriate unit is taken from the function UNIT VOLUME FLOW (0402), (see page 15).  Caution! The current output responds differently, depending on the parameters set in the various functions. Some examples of parameter settings and their effect on the current output are given in the following section. Parameter setting, example 1: VALUE 0_4 mA (4002) = not equal to zero flow (e.g. –5 m³/h, 10m³/h) VALUE 20 mA (4003) = not equal to zero flow (e.g. 100 m³/h, –40 m³/h) MEASURING MODE () = STANDARD4004 When you enter the values for 0/4 mA and 20 mA, the working range of the measuring device is defined. If the effective flow drops below or exceeds this working range (see ①), a fault or notice message is generated (#351–354, current range) and the current output responds in accordance with the parameter settings in the function FAILSAFE MODE (4002).  (Continued on next page)

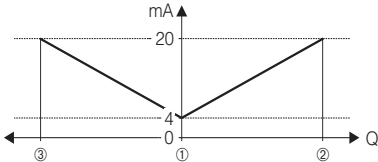Functional description	
OUTPUTS → CURRENT OUTPUT (1...3) → CONFIGURATION	
VALUE 0_4 mA (Continued)	Parameter setting, example 2: VALUE 0_4 mA (4002) = equal to zero flow (e.g. 0 m³/h) VALUE 20 mA (4003) = not equal to zero flow (e.g. 10 m³/h) or VALUE 0_4 mA (4002) = not equal to zero flow (e.g. 100 m³/h) VALUE 20 mA (4003) = equal to zero flow (e.g. 0 m³/h) and MEASURING MODE (4004) = STANDARD When you enter the values for 0/4 mA and 20 mA, the working range of the measuring device is defined. In doing so, one of the two values is parameterised as zero flow (e.g. 0 m³/h). If the effective flow drops below or exceeds the value parameterised as the zero flow, no fault/notice message is generated and the current output retains its value. If the effective flow drops below or exceeds the other value, a fault/notice message is generated (#351–354, current range) and the current output responds in accordance with the parameter settings in the function FAIL-SAFE MODE (4002).  Deliberately only one flow direction is output with this setting and flow values in the other flow direction are suppressed. Parameter setting, example 3: MEASURING MODE (4004) = SYMMETRY The current output signal is independent of the direction of flow (absolute amount of the measured variable). The 0_4 mA value and the ①20 ②mA value must have the same sign (+ or -). The “20 mA value” ③ (e.g. back-flow) corresponds to the mirrored 20 mA value ② (e.g. flow).  ASSIGN RELAY (4700) = FLOW DIRECTION Flow direction output via a switching contact. Parameter setting example 4: MEASURING MODE (4004) = PULSATING FLOW If flow is characterized by severe fluctuations as is the case, for example, with reciprocating pumps, flow components outside the measuring range are buffered, balanced and output after a delay. If the effective flow drops below or exceeds the defined working range, normally no fault/notice message is generated.

Functional description	
OUTPUTS → CURRENT OUTPUT (1...3) → CONFIGURATION	
VALUE 20 mA (4003)	Use this function to assign the 20 mA current a value. The value can be greater or less than the value assigned to 0/4 mA, (function VALUE 0_4 mA (4002)). Positive and negative values are permissible, depending on the measured variable in question (e.g. volume flow). Example: 4 mA assigned value = – 250 l/h 20 mA assigned value = +750 l/h Calculated current value = 8 mA (at zero flow) Note that values with different signs cannot be entered for 0/4 mA (function 4002) and 20 mA if SYMMETRY is the setting selected in the function MEASURING MODE (4004). In this case the message "INPUT AREA EXCEEDED" appears. Example for STANDARD measuring mode: ① = initial value 0...20 mA ② = initial value 4...20 mA ③ = full scale value 0/4...20 mA * = max. current value Minimum span: Q = 0.3 m/s User input: 5-digit floating-point number, with sign Factory setting: depends on the setting in the function assign current input: volume flow: 20 l/s sound velocity: 1800 m/s flow velocity: 10 m/s corresponds to the factory setting for the final value. Note! • The appropriate unit is taken from the function UNIT VOLUME FLOW (0402). • If a channel is not visible, it does not appear in the options. Channels can be displayed or hidden by means of the function MEASUREMENT (6880). Caution! It is very important to read and comply with the information in the function VALUE 0_4 mA (under "⚠ Caution"; Examples of parameterization) on page 57.

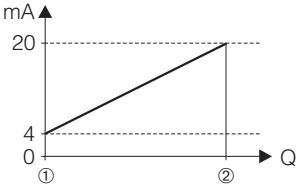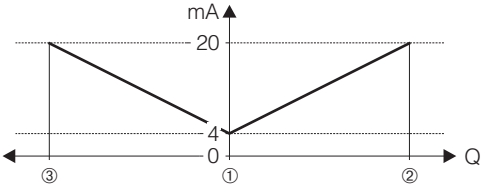
Functional description	
OUTPUTS → CURRENT OUTPUT (1...3) → CONFIGURATION	
MEASURING MODE (4004)	Use this function to define the measuring mode for the current output. Options: STANDARD SYMMETRY PULSATING FLOW The current output signal is proportional to the measured variable. The flow components outside the scaled measuring range (defined by the 0_4 mA VALUE ① and the 20 mA VALUE ②) are taken into account as follows for signal output: - If one of the values is defined as equal to the zero flow (e.g. VALUE 0_4 mA = 0 m³/h), no message is given if this value is exceeded or not achieved and the current output retains its value (4 mA in the example). If the other value is exceeded or not achieved, the message "CURRENT OUTPUT AT FULL SCALE VALUE" appears and the current output responds in accordance with the parameter setting in the function FAILSAFE MODE (4002). - If both values are defined as not equal to the zero flow (e.g. VALUE 0_4 mA = -5 m³/h, VALUE 20 mA = 10m³/h) the message "CURRENT OUTPUT AT FULL SCALE VALUE" appears if the measuring range is exceeded or not achieved and the current output responds in accordance with the parameter setting in the function FAILSAFE MODE (4002).  F-xxxxxx-05-xx-xx-xx-003 SYMMETRY The current output signal is independent of the direction of flow (absolute amount of the measured variable). The 0_4 mA value and the ①20 ②mA value must have the same sign (+ or -). The "20 mA value" ③ (e.g. backflow) corresponds to the mirrored 20 mA value ② (e.g. flow).  F-xxxxxx-05-xx-xx-xx-007  Note! - The direction of flow can be output via the configurable relay or status outputs. - SYMMETRY cannot be selected unless the values in the VALUE 0_4 mA (4002) and VALUE 20 mA (4003) functions have the same sign or one of the values is zero. If the signs of the two values differ, SYMMETRY cannot be selected and an "ASSIGNMENT NOT POSSIBLE" message is issued. (Continued on next page)

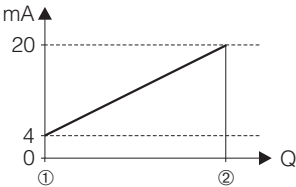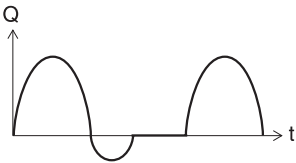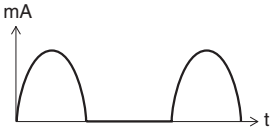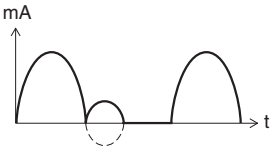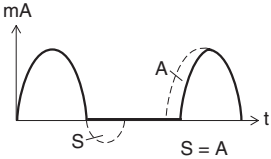Functional description	
OUTPUTS → CURRENT OUTPUT (1...3) → CONFIGURATION	
MEASURING MODE (Contd)	PULSATING FLOW If flow is characterized by severe fluctuations as is the case, for example, with reciprocating pumps, flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 seconds. If the data cannot be buffered within approx. 60 seconds, a fault or notice message appears. Under certain plant conditions, flow values can aggregate in the buffer, for example in the case of prolonged and unwanted fluid backflow. However, this buffer is reset in all relevant programming adjustments which affect the current output. Factory setting: STANDARD
Detailed explanations and information	How the current output responds under the following postulated conditions: 1. Defined measuring range (①–②): ①② and have the same sign  F-xxxxxxx-05-xx-xx-xx-003 and the following flow behaviour:  F-x3xxxxx-05-xx-xx-xx-008 - STANDARD The current output signal is proportional to the measured variable. The flow components outside the scaled measuring range are not taken into account for signal output.  F-x3xxxxx-05-xx-xx-xx-009 - SYMMETRY The current output signal is independent of the direction of flow.  F-x3xxxxx-05-xx-xx-xx-010 - PULSATING FLOW Flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 seconds.  F-x3xxxxx-05-xx-xx-xx-011 (Continued on next page)

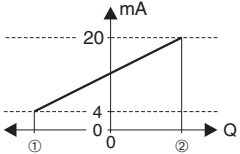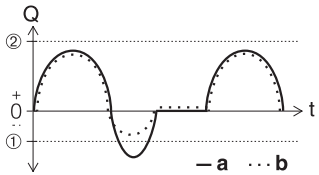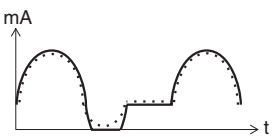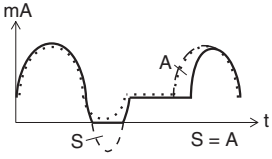Functional description	
OUTPUTS → CURRENT OUTPUT (1...3) → CONFIGURATION	
Detailed explanations and information (Contd)	2. Defined measuring range (①–②): ①② and do not have the same sign.  F-x3xxxxx-05-xx-xx-xx-002 Flow a (—) outside, b (· ·) within the measuring range.  F-x3xxxxx-05-xx-xx-xx-012 • STANDARD a (—): The flow components outside the scaled measuring range cannot be taken into account for signal output. A fault message is generated (# 351...354, current range) and the current output responds in accordance with the parameter settings in the function FAILSAFE MODE (4006). b (· ·): The current output signal is proportional to the measured variable assigned.  F-x3xxxxx-05-xx-xx-xx-013 • SYMMETRY This option is not available under these circumstances, because the 0_4 mA value and the 20 mA value have different signs. • PULSATING FLOW Flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 seconds.  F-x3xxxxx-05-xx-xx-xx-014
TIME CONSTANT (4005)	Use this function to enter a time constant defining how the current output signal reacts to severely fluctuating measured variables, either very quickly (enter a low time constant) or with damping (enter a high time constant). User input: fixed-point number 0.01...100.00 s Factory setting: 1.00 s


Functional description	
OUTPUTS → CURRENT OUTPUT (1...3) → CONFIGURATION	
FAILSAFE MODE (4006)	For safety reasons it is advisable to ensure that the current output assumes a predefined state in the event of a fault. The setting you select here affects only the current output. It has no effect on other outputs and the display (e.g. totalizers). Options: MIN. CURRENT The current output adopts the value of the lower signal on alarm level (as defined in the function CURRENT SPAN (4001) MAX. CURRENT The current output adopts the value of the upper signal on alarm level (as defined in the function CURRENT SPAN (4001) HOLD VALUE (not recommended) Measuring value output is based on the last measuring value saved before the error occurred . ACTUAL VALUE Measured value output is based on the current flow measurement. The fault is ignored . Factory setting: MIN. CURRENT

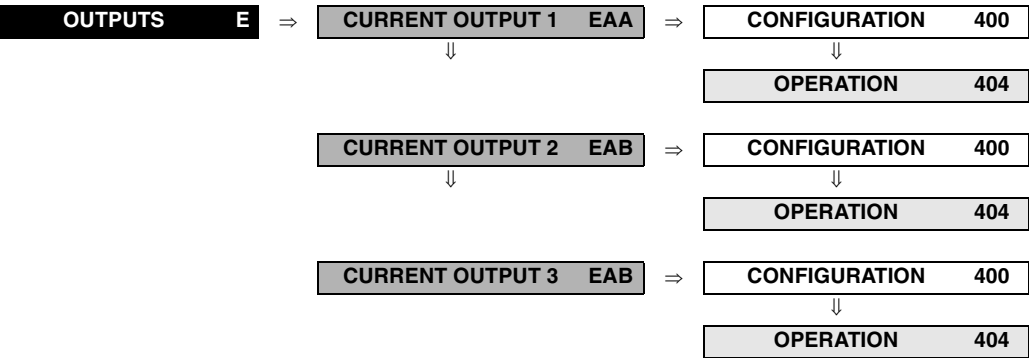7.1.2 Function group OPERATION



Functional description	
OUTPUTS → CURRENT OUTPUT (1...3) → OPERATION	
ACTUAL CURRENT (4040)	Use this function to view the computed actual value of the output current. User interface: 0.00...25.00 mA
SIMULATION CURRENT (4041)	Use this function to activate simulation of the current output. Options: OFF ON Factory setting: OFF Note! • The "SIMULATION CURRENT OUTPUT" message indicates that simulation is active. • The measuring device continues to measure while simulation is in progress, i.e. the current measuring values are output correctly via the other outputs. Caution! The setting is not saved if the power supply fails.
VALUE SIMULATION CURRENT (4042)	Note! The function is not visible unless the function SIMULATION CURRENT (4041) is active (= ON). Use this function to define a freely selectable value (e.g. 12 mA) to be output at the current output. This value is used to test downstream devices and the measuring device itself. User input: Floating-point number: 0.00...25.00 mA Factory setting: 0.00 mA Caution! The setting is not saved if the power supply fails.

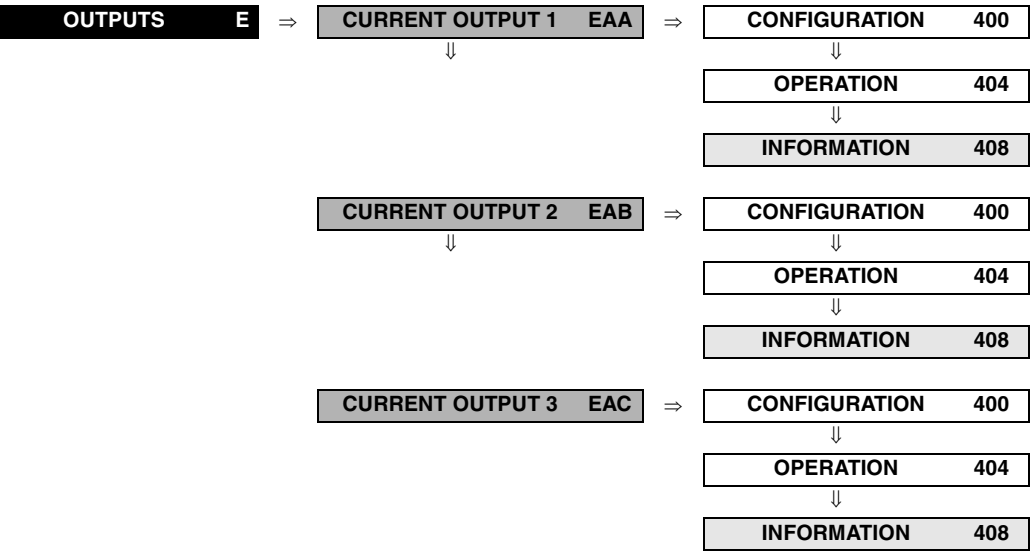
7.1.3 **Function group INFORMATION**



Functional description	
OUTPUTS → CURRENT OUTPUT (1...3) → INFORMATION	
TERMINAL NUMBER (4080)	Use this function to display the numbers of the terminals (in the connection compartment) which are used by the current output.

7.2
Group PULSE/FREQUENCY OUTPUT (1...2)



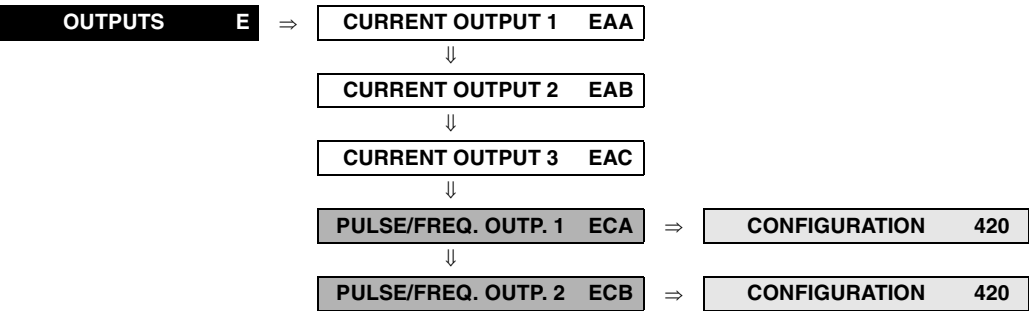
7.2.1
Function group CONFIGURATION









Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (GENERAL/FREQUENCY)	
OPERATION MODE (4200)	Use this function to configure the output as a pulse output, frequency output or status output. The functions available in this function group vary, depending on which option you select here. Options: PULSE FREQUENCY STATUS Factory setting: PULSE
ASSIGN FREQUENCY (4201)	Note! This function is not available unless the FREQUENCY setting was selected in the function OPERATION MODE (4200). Use this function to assign a measured variable to the frequency output. Options: VOLUME FLOW (CH1...CH2) VOLUME FLOW AVERAGE VOLUME FLOW SUM (CH1+CH2) VOLUME FLOW DIFFERENCE (CH1-CH2) SOUND VELOCITY (CH1...CH2) SOUND VELOCITY AVERAGE FLOW VELOCITY (CH1...CH2) FLOW VELOCITY AVERAGE Factory setting: CH1 VOLUME FLOW Note! If you select OFF, the only function shown in the CONFIGURATION function group is this function, in other words ASSIGN FREQUENCY (4201). Advanced options with optional software package ADVANCED DIAGNOSTICS: DEVIATION VOLUME FLOW (CH1...CH2) DEVIATION VOLUME FLOW AVERAGE DEVIATION FLOW VELOCITY (CH1...CH2) DEVIATION FLOW VELOCITY AVERAGE DEVIATION SIGNAL STRENGTH (CH1...CH2) DEVIATION SOUND VELOCITY (CH1...CH2) DEVIATION SOUND VELOCITY AVERAGE DEVIATION ACTUAL TRANSIT TIME (CH1...CH2) DEVIATION ACCEPTANCE RATE (CH1...CH2)

Functional description OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (GENERAL/FREQUENCY)	
START VALUE FREQUENCY (4202)	 Note! This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200). Use this function to define an initial frequency for the frequency output. You define the associated measuring value of the measuring range in the function-VALUE f LOW (4204) described on page 68. User input: 5-digit fixed-point number 0...10000 Hz Factory setting: 0 Hz Example: • VALUE f LOW. = 0 l/h, initial frequency = 0 Hz: i.e. for a flow of 0 l/h, the frequency output is 0 Hz. • VALUE f LOW = 1 l/h, initial frequency = 10 Hz: i.e. for a flow of 1 l/h, the frequency output is 10 Hz.
END VALUE FREQUENCY (4203)	 Note! This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200). Use this function to define an end frequency for the frequency output. You define the associated measuring value of the measuring range in the function-VALUE f HIGH (4205) described on page 68. User input: 5-digit fixed-point number 2...10000 Hz Factory setting: 10000 Hz Example: • VALUE f HIGH = 1000 l/h, full scale frequency = 1000 Hz: i.e. at a flow of 1000 l/h, a frequency of 1000 Hz is output. • VALUE f HIGH = 3600 l/h, full scale frequency = 1000 Hz: i.e. at a flow of 3600 l/h, a frequency of 1000 Hz is output.  Note! In the FREQUENCY operating mode the output signal is symmetrical (on/off ratio = 1:1). At low frequencies the pulse duration is limited to a maximum of 2 seconds, i.e. the on/off ratio is no longer symmetrical.

Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (GENERAL/FREQUENCY)	
VALUE f LOW (4204)	Note! This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200). Use this function to assign a variable to the start value frequency (4202). The value can be greater or less than the value assigned to the VALUE f HIGH. Positive and negative values are permissible, depending on the measured variable in question (e.g. volume flow). You define a measuring range by defining the VALUE f LOW and VALUE f HIGH values. User input: 5-digit floating-point number Factory setting: 0 [unit] Note! - Graphic illustration of VALUE f LOW see function VALUE f HIGH (4205) on page 68. - The appropriate unit is taken from the group SYSTEM UNITS (ACA) (see page 15).
VALUE f HIGH (4205)	Note! This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200). Use this function to assign a variable to the end value frequency (4203). The value can be greater or less than the value assigned to the VALUE f LOW. Positive and negative values are permissible, depending on the measured variable in question (e.g. volume flow). You define a measuring range by defining the VALUE f LOW and VALUE f HIGH values. User input: 5-digit floating-point number Factory setting: depends on the setting in the function assign frequency: volume flow: 20 l/s sound velocity: 1800 m/s flow velocity: 10 m/s corresponds to the factory setting for the final value. Frequency [%] 125 100 0 ① Value f min ② Value f max Measuring range Measured variable (amount) Caution! The frequency output responds differently, depending on the parameters set in the various functions. Some examples of parameter settings and their effect on the frequency output are given in the following section. Note! The appropriate unit is taken from the group SYSTEM UNITS (ACA) (see page 15). (Continued on next page)

   
Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (GENERAL/FREQUENCY)	
VALUE f HIGH (Contd)	Parameter setting, example 1: VALUE f LOW (4204) = not equal to zero flow (e.g. $-5 \text{ m}^3/\text{h}$, $10 \text{ m}^3/\text{h}$) VALUE f HIGH (4205) = not equal to zero flow (e.g. $100 \text{ m}^3/\text{h}$, $-40 \text{ m}^3/\text{h}$) MEASURING MODE (4206) = STANDARD When you enter the values for VALUE f LOW and VALUE f HIGH, the working range of the measuring device is defined. If the effective flow drops below or exceeds this working range (see Fig. ①), a fault or notice message is generated (#351–354, frequency range) and the frequency output responds in accordance with the parameter settings in the function FAILSAFE MODE (4209).  F06-xxxxxxxx-05-xx-xx-xx-009
	Parameter setting, example 2: VALUE f LOW (4204) = equal to zero flow (e.g. $0 \text{ m}^3/\text{h}$) VALUE f HIGH (4205) = not equal to zero flow (e.g. $10 \text{ m}^3/\text{h}$) or VALUE f LOW (4204) = not equal to zero flow (e.g. $100 \text{ m}^3/\text{h}$) VALUE f HIGH (4205) = equal to zero flow (e.g. $0 \text{ m}^3/\text{h}$) and MEASURING MODE (4206) = STANDARD When you enter the values for VALUE f LOW and VALUE f HIGH, the working range of the measuring device is defined. In doing so, one of the two values is parameterised as zero flow (e.g. $0 \text{ m}^3/\text{h}$). If the effective flow drops below or exceeds the value parameterised as the zero flow, no fault/notice message is generated and the frequency output retains its value. If the effective flow drops below or exceeds the other value, a fault/notice message is generated (#351–354, frequency area) and the frequency output responds in accordance with the parameters set in the function FAILSAFE MODE (4209).  F06-xxxxxxxx-05-xx-xx-xx-010
	Deliberately only one flow direction is output with this setting and flow values in the other flow direction are suppressed. Parameter setting, example 3: MEASURING MODE (4206) = SYMMETRY The current output signal is independent of the direction of flow (absolute amount of the measured variable). The VALUE f LOW ① and VALUE f HIGH ② must have the same sign (+ or -). The "VALUE f HIGH" ③ (e.g. backflow) corresponds to the mirrored VALUE f HIGH ② (e.g. flow).  F06-xxxxxxxx-05-xx-xx-xx-011
	ASSIGN RELAY (4700) = FLOW DIRECTION Flow direction output via a switching contact. Parameter setting example 4: MEASURING MODE (4206) = PULSATING FLOW If flow is characterized by severe fluctuations as is the case, for example, with reciprocating pumps, flow components outside the measuring range are buffered, balanced and output after a delay. If the effective flow drops below or exceeds the defined working range, normally no fault/notice message is generated.

Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (GENERAL/FREQUENCY)	
MEASURING MODE (4206)	Note! This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200). Use this function to define the measuring mode for the frequency output. Options: STANDARD SYMMETRY PULSATING FLOW Factory setting STANDARD Description of the individual options: • STANDARD The frequency output signal is proportional to the measured variable. The flow components outside the scaled measuring range (defined by the VALUE f LOW. ① and VALUE f HIGH. ②) are not taken into account for signal output. – If one of the values is defined as equal to the zero flow (e.g. = VALUE f LOW 0 m³/h), no message is given if this value is exceeded or not achieved and the frequency output retains its value (0 Hz in the example). If the other value is exceeded or not achieved, the message “FREQUENCY OUTPUT AT FULL SCALE VALUE” appears and the frequency output responds in accordance with the parameter setting in the function FAILSAFE MODE (4209). – If both values are defined as not equal to the zero flow (e.g. VALUE f LOW = -5 m³/h; VALUE f HIGH = 10m³/h), the message “FREQUENCY OUTPUT AT FULL SCALE VALUE” appears if the measuring range is exceeded or not achieved and the frequency output responds in accordance with the parameter setting in the function FAILSAFE MODE (4209). Freq. 125 100 0 ① ② Q Freq. 125 100 0 ③ ① ② Q Note! • The direction of flow can be output via the configurable relay or status outputs. • SYMMETRY cannot be selected unless the values in the VALUE f LOW (4204) and VALUE f HIGH (4205) functions have the same sign or one of the values is zero. If the values have different signs, SYMMETRY cannot be selected and an “ASSIGNMENT NOT POSSIBLE” message is displayed. (Continued on next page)

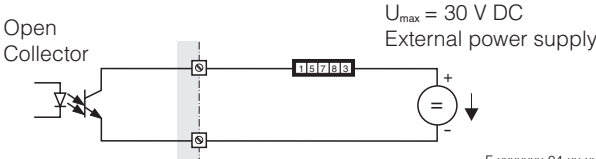
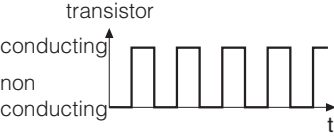
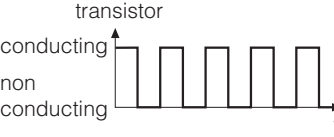
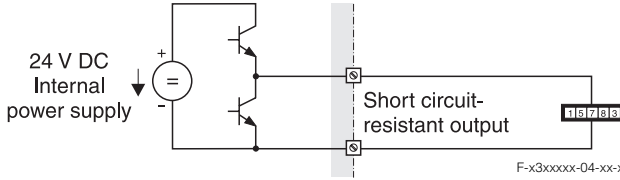
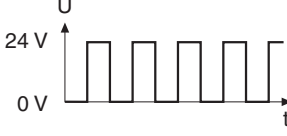
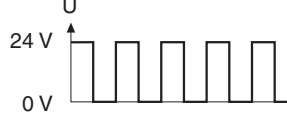
Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (GENERAL/FREQUENCY)	
MEASURING MODE (Contd)	PULSATING FLOW If flow is characterized by severe fluctuations as is the case, for example, with reciprocating pumps, flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 seconds. If the buffered data cannot be processed within approx. 60 seconds, a fault/notice message appears. Hinweismeldung. Under certain plant conditions, flow values can aggregate in the buffer, for example in the case of prolonged and unwanted fluid backflow. However, this buffer is reset in all relevant programming adjustments which affect the frequency output.
OUTPUT SIGNAL (4207)	Note! This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200). Use this function to select whether to use the device's internal power supply (ACTIVE) or an external power supply (PASSIVE), along with the polarity of the frequency. Options: PASSIVE – POSITIVE PASSIVE – NEGATIVE ACTIVE – POSITIVE ACTIVE – NEGATIVE Factory setting: PASSIVE – POSITIVE PASSIVE: Open Collector  U_{max} = 30 V DC External power supply F-xxxxxxx-04-xx-xx-en-000 Note! For continuous currents up to 25 mA (I_{max} = 250 mA / 20 ms) PASSIVE-POSITIVE  F-xxxxxxx-05-xx-xx-en-002 PASSIVE-NEGATIVE  F-xxxxxxx-05-xx-xx-en-002 ACTIVE: 24 V DC Internal power supply  Short circuit- resistant output F-x3xxxxx-04-xx-xx-en-000 ACTIVE-POSITIVE  F06-xxxxxxx-05-xx-xx-en-003 ACTIVE-NEGATIVE  F06-xxxxxxx-05-xx-xx-en-003

Functional description OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (GENERAL/FREQUENCY)	
TIME CONSTANT (4208)	 Note! This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200). Use this function to enter a time constant defining how the frequency output signal reacts to severely fluctuating measured variables, either very quickly (enter a low time constant) or with damping (enter a high time constant). User input: fixed-point number 0.00...100.00 s Factory setting: 1.00 s
FAILSAFE MODE (4209)	 Note! This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200). For safety reasons it is advisable to ensure that the frequency output assumes a predefined state in the event of a fault. The setting you select here affects only the frequency output. It has no effect on other outputs and the display (e.g. totalizers). Options: FALLBACK VALUE Output is 0 Hz. FAILSAFE LEVEL Output is the frequency specified in the FAILSAFE VALUE function (4211). HOLD VALUE Measuring value output is based on the last measuring value saved before the error occurred. ACTUAL VALUE Measuring value output is based on the current flow measurement (fault is ignored). Factory setting: FALLBACK VALUE
FAILSAFE VALUE (4211)	 Note! This function is not available unless FREQUENCY was selected in the function OPERATION MODE (4200) and FAILSAFE LEVEL was selected in the function FAILSAFE MODE (4209). Use this function to define the frequency that the measuring device outputs in the event of an error. User input: max. 5-digit number: 0...12500 Hz Factory setting: 12500 Hz

Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (PULSE)	
ASSIGN PULSE (4221)	 Note! This function is not available unless the PULSE setting was selected in the function OPERATION MODE (4200). Use this function to assign a measured variable to the pulse output. Options: OFF VOLUME FLOW (CH1...CH2) VOLUME FLOW AVERAGE VOLUME FLOW SUM (CH1+CH2) VOLUME FLOW DIFFERENCE (CH1-CH2) Factory setting: CH1 VOLUME FLOW  Note! If you select OFF, the only function shown in the CONFIGURATION function group is this function, in other words ASSIGN PULSE (4221).
PULSE VALUE (4222)	 Note! This function is not available unless the PULSE setting was selected in the function OPERATION MODE (4200). Use this function to define the flow at which a pulse is triggered. These pulses can be totalled by an external totalizer and in this way the total flow since measuring commenced can be registered. User input: 5-digit floating-point number, [unit] Factory setting: 1 l/pulse  Note! The appropriate unit is taken from the function UNIT VOLUME (0403), (see page 16)

 Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (PULSE)	
PULSE WIDTH (4223)	 Note! This function is not available unless the PULSE setting was selected in the function OPERATION MODE (4200). Use this function to enter the pulse width of the output pulse. User input: 0.05...2000 ms Factory setting: 100 ms Pulse output is always with the pulse width (B) entered in this function. The pauses (P) between the individual pulses are automatically configured. However, they must at least correspond to the pulse width (B = P).  B = Pulse width entered (the illustration applies to positive pulses) P= Intervals between the individual pulses  Note! When entering the pulse width, select a value that can still be processed by an external totalizer (e.g. mechanical totalizer, PLC, etc.) .  Caution! If the pulse number or frequency resulting from the pulse value entered, (see function PULSE VALUE (4222) onpage 73) and from the current flow is too large to maintain the pulse width selected (the interval P is smaller than the pulse width B entered), a system error message (# 359...362, pulse memory) is generated after buffering/balancing has occurred.

Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (PULSE)	
MEASURING MODE (4225)	 Note! This function is not available unless the PULSE setting was selected in the function OPERATION MODE (4200). Use this function to define the measuring mode for the pulse output. Options: STANDARD Only positive flow components are totaled. Negative components are not taken into account. SYMMETRY Positive and negative flow components are taken into account.  Note! The direction of flow can be output via the relay output. PULSATING FLOW If flow is characterized by severe fluctuations as is the case, for example, with reciprocating pumps, the positive and negative flow components are totaled, with the signs taken into account (e.g. -10 l and +25 l = 15 l). Flow components outside the maximum pulse number per second (value/width) are buffered, balanced and output after a maximum delay of 60 seconds. If the buffered data cannot be processed within approx. 60 seconds, a fault/notice message appears. Hinweismeldung. Under certain plant conditions, flow values can aggregate in the buffer, for example in the case of prolonged and unwanted fluid backflow. However, this buffer is reset in all relevant programming adjustments which affect the pulse output. Factory setting: STANDARD

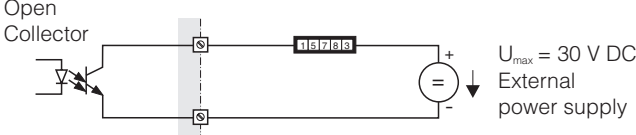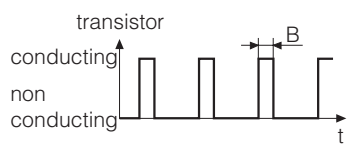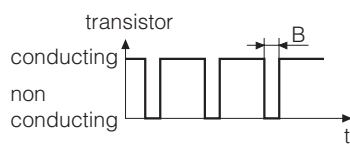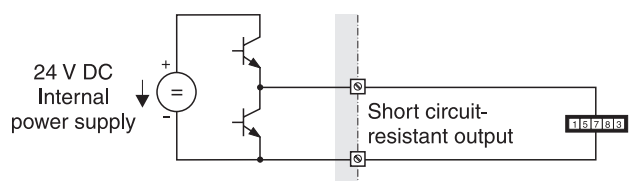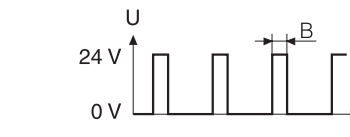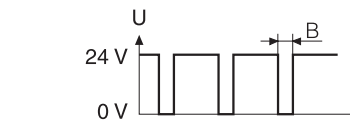Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (PULSE)	
OUTPUT SIGNAL (4226)	Note! This function is not available unless the PULSE setting was selected in the function OPERATION MODE (4200). Use this function to configure the output in such a way that it matches an external counter, for example. Depending on the application you can select whether to use the device's internal power supply (ACTIVE) or an external power supply (PASSIVE), along with the direction of the polarity of the pulses. Options: PASSIVE-POSITIVE PASSIVE-NEGATIVE ACTIVE-POSITIVE ACTIVE-NEGATIVE Factory setting: PASSIVE-POSITIVE PASSIVE: Open Collector  $U_{max} = 30\text{ V DC}$ External power supply Note! For continuous currents up to 25 mA ($I_{max} = 250\text{ mA} / 20\text{ ms}$) PASSIVE-POSITIVE pulses  B = Pulse width PASSIVE-NEGATIVE pulses  B = Pulse width ACTIVE: 24 V DC Internal power supply  Short circuit-resistant output ACTIVE-POSITIVE pulses  B = Pulse width ACTIVE-NEGATIVE pulses  B = Pulse width

Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (PULSE)	
FAILSAFE MODE (4227)	 Note! This function is not available unless the PULSE setting was selected in the function OPERATION MODE (4200). For safety reasons it is advisable to ensure that the pulse output assumes a predefined state in the event of a fault. The setting you select here affects only the pulse output. It has no effect on other outputs and the display (e.g. totalizers). Options: FALLBACK VALUE Output is 0 pulse. HOLD VALUE Measuring value output is based on the last measuring value saved before the error occurred. ACTUAL VALUE Measuring value output is based on the current flow measurement The fault is ignored. Factory setting: FALL BACK VALUE

Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (STATUS)	
ASSIGN STATUS (4241)	 Note! This function is not available unless the STATUS setting was selected in the function OPERATION MODE (4200). Use this function to assign a switching function to the status output. Options: OFF ON (operation) FAULT MESSAGE NOTICE MESSAGE FAULT MESSAGE & NOTICE MESSAGE LIMIT TOTALIZER (1...3) FLOW DIRECTION (CH1...CH2) AVERAGE FLOW DIRECTION FLOW DIRECTION SUM FLOW DIRECTION DIFFERENCE VOLUME FLOW LIMIT VALUE (CH1...CH2) LIMIT AVERAGE VOLUME FLOW LIMIT VOLUME FLOW SUM LIMIT VOLUME FLOW DIFFERENCE LIMIT SOUND VELOCITY (CH1...CH2) LIMIT SOUND VELOCITY AVERAGE LIMIT FLOW VELOCITY (CH1...CH2) LIMIT AVERAGE FLOW VELOCITY  Note! • The following settings/entries must be made to ensure correct and immediate signal output: – Function SWITCH-ON DELAY (4243) = 0 ms, (see page 79) – Function SWITCH-OFF DELAY (4245) = 0 ms, (see page 80) – Function TIME CONSTANT (4247) = 0 ms, (see page 81) Factory setting: FAULT MESSAGE  Note! • The behaviour of the status output is a normally closed behaviour, in other words the output is closed (transistor conductive) when normal, error-free measuring is in progress. • If you select OFF, the only function shown in the CONFIGURATION function group is the function (4241ASSIGN STATUS). Advanced options with optional software package ADVANCED DIAGNOSTICS: DEVIATION VOLUME FLOW (CH1...CH2) DEVIATION VOLUME FLOW AVERAGE DEVIATION FLOW VELOCITY (CH1...CH2) DEVIATION FLOW VELOCITY AVERAGE DEVIATION SIGNAL STRENGTH (CH1...CH2) DEVIATION SOUND VELOCITY (CH1...CH2) DEVIATION SOUND VELOCITY AVERAGE DEVIATION ACTUAL TRANSIT TIME (CH1...CH2) DEVIATION ACCEPTANCE RATE (CH1...CH2)


Functional description OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (STATUS)	
ON-VALUE (4242)	 Note! This function is not available unless STATUS was selected in the function OPERATION MODE (4200) and LIMIT VALUE or FLOW DIRECTION was selected in the function ASSIGN STATUS (4241). Use this function to assign a value to the switch-on point (activation of the status output). The value can be equal to, greater than or less than the switch-off point. Positive or negative values are permissible, depending on the measured variable in question (e.g. volume flow, totalizer reading). User input: 5-digit floating-point number, [unit] Factory setting: 0 [unit]  Note! • The appropriate unit is taken from the function UNIT VOLUME FLOW (0402). • Only the switch-on point is available for flow direction output (no switch-off point). If you enter a value not equal to the zero flow (e.g. 5), the difference between the zero flow and the value entered corresponds to half the switch-over hysteresis.
SWITCH-ON DELAY (4243)	 Note! This function is not available unless STATUS was selected in the function OPERATION MODE (4200) and LIMIT VALUE or FLOW DIRECTION was selected in the function ASSIGN STATUS (4241). Use this function to specify a delay (0...100 seconds) for switching on the status output (i.e. signal changes from 0 to 1). The delay starts when the limit value is reached. The status output does switch when the delay has timed out and the switch condition has been valid over the delay time. User input: fixed-point number 0.0...100.0 s Factory setting: 0.0 s
OFF-VALUE (4244)	 Note! This function is not available unless STATUS was selected in the function OPERATION MODE (4200) and a LIMIT VALUE was selected in the function ASSIGN STATUS (4241). Use this function to assign a value to the switch-off point (deactivation of the status output). The value can be equal to, greater than or less than the switch-on point. Positive and negative values are permissible, depending on the measured variable in question (e.g. volume flow, totalizer reading). User input: 5-digit floating-point number, [unit] Factory setting: 0 [unit]  Note! • The appropriate unit is taken from the function UNIT VOLUME FLOW (0402). • If SYMMETRY is the setting selected in the MEASURING MODE function (4246) and values with different signs are entered for the switch-on and switch-off points, an "INPUT RANGE EXCEEDED" message is issued.

Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (STATUS)	
SWITCH-OFF DELAY (4245)	Note! This function is not available unless the STATUS setting was selected in the function OPERATION MODE (4200). Use this function to define a delay (0...100 seconds) for switching off the status output (i.e. signal changes from 1 to 0). The delay starts when the limit value is reached. The status output does switch when the delay has timed out and the switch condition has been valid over the delay time. User input: fixed-point number 0.0...100.0 s Factory setting: 0.0 s
MEASURING MODE (4246)	Note! This function is not available unless the STATUS setting was selected in the function OPERATION MODE (4200). This function is not visible unless a limit value was assigned to the status output. Use this function to define the measuring mode for the status output. Options: STANDARD The status output signal switches at the defined switch points. SYMMETRY The status output signal switches at the defined switch points, irrespective of the sign. If you define a switch point with a positive sign, the status output signal switches as soon as the value is reached in the negative direction (negative sign), see illustration. Factory setting: STANDARD Example for the SYMMETRY measuring mode: Switch-on point: Q = 4 Switch-off point: Q = 10 ① = Status output switched on (conductive) ② = Status output switched off (not conductive)

F:\3xxxx-05-x-x-x-x-005

Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (STATUS)	
TIME CONSTANT (4247)	 Note! This function is not available unless the STATUS setting was selected in the function OPERATION MODE (4200). Use this function to enter a time constant defining how the measuring signal reacts to severely fluctuating measured variables, either very quickly (enter a low time constant) or with damping (enter a high time constant). Damping acts on the measuring signal before the switch status changes, and consequently before switch-on or switch-off delay is activated. The purpose of damping, therefore, is to prevent the status output changing state continuously in response to fluctuations in flow. User input: fixed-point number 0.00...100.00 s Factory setting: 0.00 s

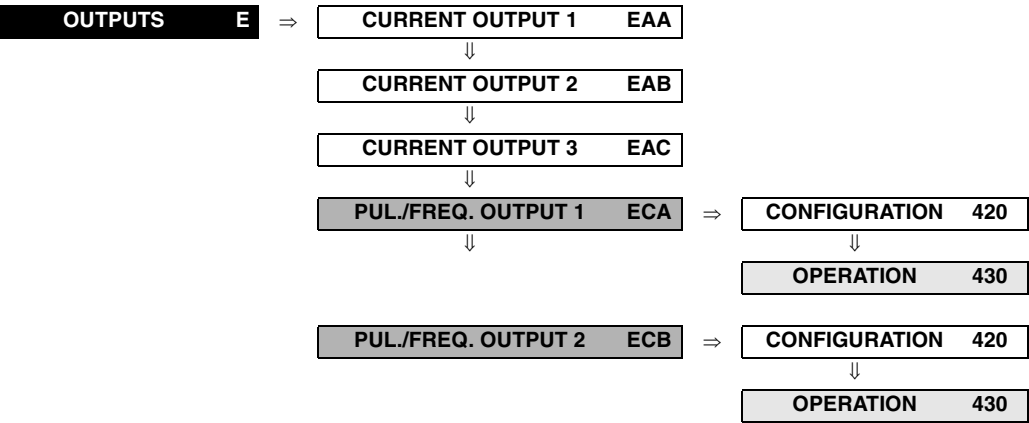
7.2.2 Function group OPERATION



Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → OPERATION (FREQUENCY)	
ACTUAL FREQUENCY (4301)	Note! This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200). Use this function to view the computed value of the output frequency. User interface: 0...12500 Hz
SIMULATION FREQUENCY (4302)	Note! This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200). Use this function to activate simulation of the frequency output. Options: OFF ON Factory setting: OFF Note! - The "SIMULATION FREQUENCY OUTPUT" message indicates that simulation is active. - The measuring device continues to measure while simulation is in progress, i.e. the current measuring values are output correctly via the other outputs. Caution! The setting is not saved if the power supply fails
VALUE SIMULATION FREQUENCY (4303)	Note! This function is not available unless FREQUENCY was selected in the function OPERATION MODE (4200) and the function SIMULATION FREQUENCY (4302) is active (= ON). Use this function to define a selectable frequency value (e.g. 500 Hz) to be output at the frequency output. This value is used to test downstream devices and the measuring device itself. User input: 0...12500 Hz Factory setting: 0 Hz Caution! The setting is not saved if the power supply fails.

Functional description OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → OPERATION (STATUS)	
ACTUAL STATUS (4341)	 Note! This function is not available unless the STATUS setting was selected in the function OPERATION MODE (4200). Use this function to check the current status of the status output. User interface: NOT CONDUCTIVE CONDUCTIVE
SIMULATION SWITCH POINT (4342)	 Note! This function is not available unless the STATUS setting was selected in the function OPERATION MODE (4200). Use this function to activate simulation of the status output. Options: OFF ON Factory setting: OFF  Note! • The "SIMULATION SWITCH POINT" message indicates that simulation is active. • The measuring device continues to measure while simulation is in progress, i.e. the current measuring values are output correctly via the other outputs.  Caution! The setting is not saved if the power supply fails
VALUE SIMULATION SWITCH POINT (4343)	 Note! This function is not available unless STATUS was selected in the function OPERATION MODE (4200) and the function SIMULATION SWITCH POINT (4342) is active (= ON). Use this function to define the switching response of the status output during the simulation. This value is used to test downstream devices and the measuring device itself. Options: NOT CONDUCTIVE CONDUCTIVE Factory setting: NOT CONDUCTIVE  Caution! The setting is not saved if the power supply fails.

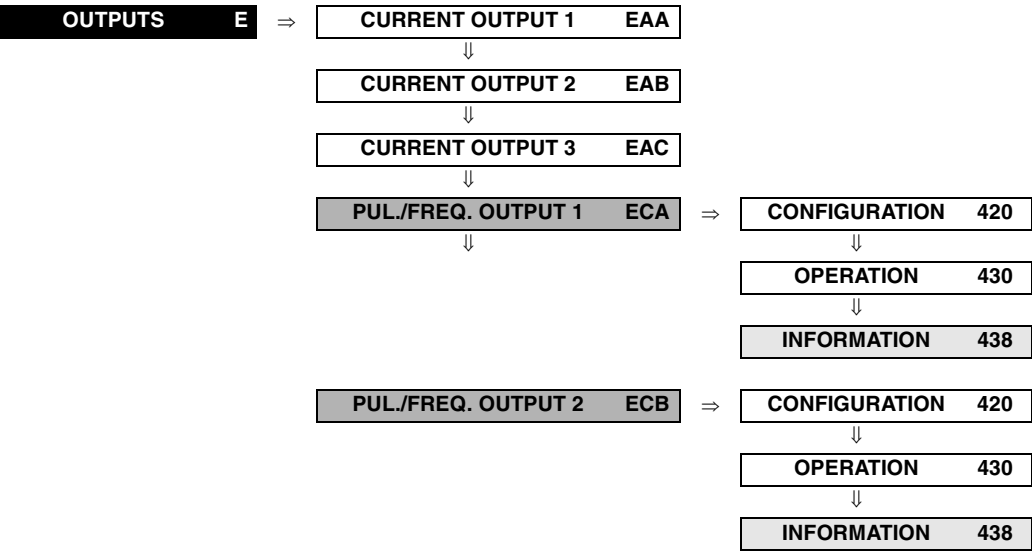
7.2.3 Function group INFORMATION



Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → INFORMATION	
TERMINAL NUMBER (4380)	Use this function to display the numbers of the terminals (in the connection compartment) which are used by the pulse/frequency output.

7.3 Group RELAY OUTPUT (1...2)

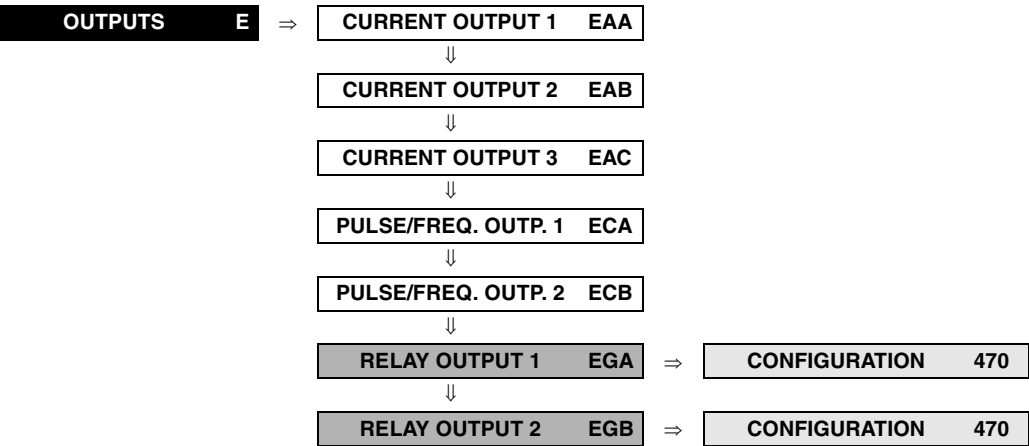
7.3.1 Function group CONFIGURATION




Functional description	
OUTPUTS → RELAY OUTPUT (1...2) → CONFIGURATION	
ASSIGN RELAY (4700)	Use this function to assign a switching function to the relay output. Options: OFF ON (operation) FAULT MESSAGE NOTICE MESSAGE FAULT MESSAGE & NOTICE MESSAGE LIMIT TOTALIZER (1...3) FLOW DIRECTION (CH1...CH2) FLOW DIRECTION AVERAGE FLOW DIRECTION SUM FLOW DIRECTION DIFFERENCE LIMIT VOLUME FLOW (CH1...CH2) LIMIT VOLUME FLOW AVERAGE LIMIT VOLUME FLOW SUM LIMIT VOLUME FLOW DIFFERENCE LIMIT SOUND VELOCITY (CH1...CH2) LIMIT SOUND VELOCITY AVERAGE LIMIT FLOW VELOCITY (CH1...CH2) LIMIT AVERAGE FLOW VELOCITY Factory setting: FAULT MESSAGE  Note! - It is very important to read and comply with the information on the switching characteristics of the relay output (see page 92). - It is advisable to configure at least one relay output as a fault output and define the outputs' response to error. - The relay output is configured as a normally open (NO or make) contact by default. It can be reconfigured as a normally closed (NC or break) contact by means of a jumper on the relay module, (see <i>Operating Instructions Prosonic Flow 93</i>, BA 070D/06/en/.). If you select OFF, the only function shown in the CONFIGURATION function group is this function, ASSIGN RELAY (4700). (Continued on next page)

Functional description OUTPUTS → RELAY OUTPUT (1...2) → CONFIGURATION	
ASSIGN RELAY (continued)	Advanced options with optional software package ADVANCED DIAGNOSTICS: DEVIATION VOLUME FLOW (CH1...CH2) DEVIATION VOLUME FLOW AVERAGE DEVIATION FLOW VELOCITY (CH1...CH2) DEVIATION FLOW VELOCITY AVERAGE DEVIATION SIGNAL STRENGTH (CH1...CH2) DEVIATION SOUND VELOCITY (CH1...CH2) DEVIATION SOUND VELOCITY AVERAGE DEVIATION ACTUAL TRANSIT TIME (CH1...CH2) DEVIATION ACCEPTANCE RATE (CH1...CH2)
ON-VALUE (4701)	 Note! This function is not available unless LIMIT VALUE or FLOW DIRECTION was selected in the function ASSIGN RELAY (4700). Use this function to assign a value to the switch-on point (relay output pulls up). The value can be equal to, greater than or less than the switch-off point. Positive or negative values are permissible, depending on the measured variable in question (e.g. volume flow, totalizer reading). User input: 5-digit floating-point number, [unit] Factory setting: 0 [unit]  Note! • The appropriate unit is taken from the function UNIT VOLUME FLOW (0402). • Only the switch-on point is available for flow direction output (no switch-off point). If you enter a value not equal to the zero flow (e.g. 5), the difference between the zero flow and the value entered corresponds to half the switching hysteresis.
SWITCH-ON DELAY (4702)	 Note! This function is not available unless LIMIT VALUE or FLOW DIRECTION was selected in the function ASSIGN RELAY (4700). Use this function to define a delay (0 ... 100 seconds) for pull-up (i.e. signal changes from 0 to 1) of the relay output. The delay starts when the limit value is reached. The relay output does switch when the delay has timed out and the switch condition has been valid throughout the delay time. User input: fixed-point number 0.0...100.0 s Factory setting: 0.0 s

Functional description OUTPUTS → RELAY OUTPUT (1...2) → CONFIGURATION	
OFF-VALUE (4703)	 Note! This function is not available unless LIMIT VALUE was selected in the function ASSIGN RELAY (4700). Use this function to assign a value to the switch-off point (relay drops out). The value can be equal to, greater than or less than the switch-on point. Positive or negative values are permissible, depending on the measured variable in question (e.g. volume flow, totalizer reading). User input: 5-digit floating-point number, [unit] Factory setting: 0 [unit]  Note! • The appropriate unit is taken from the function UNIT VOLUME FLOW (0402). • If SYMMETRY is the setting selected in the MEASURING MODE function (4705) and values with different signs are entered for the switch-on and switch-off points, an "INPUT RANGE EXCEEDED" message is issued.
SWITCH-OFF DELAY (4704)	 Note! This function is not available unless LIMIT VALUE was selected in the function ASSIGN RELAY (4700). Use this function to define a delay (0 ... 100 seconds) for drop-out (i.e. signal changes from 1 to 0) of the relay output. The delay starts when the limit value is reached. The relay output does switch when the delay has timed out and the switch condition has been valid throughout the delay time. User input: fixed-point number 0.0...100.0 s Factory setting: 0.0 s

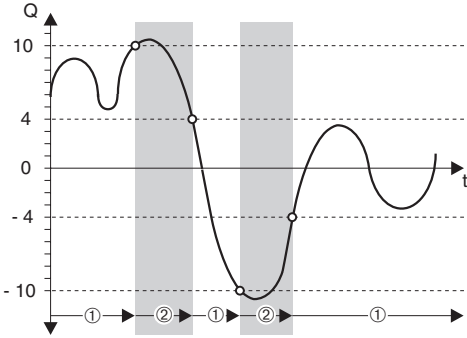Functional description	
OUTPUTS → RELAY OUTPUT (1...2) → CONFIGURATION	
MEASURING MODE (4705)	Note! This function is not visible unless a limit value was assigned to the relay output. Use this function to define the measuring mode for the relay output. Options: STANDARD The relay output signal switches at the defined switch points. SYMMETRY The relay output signal switches at the defined switching points, irrespective of the sign. If you define a switch point with a positive sign, the relay output switches as soon as the value is reached in the negative direction (negative sign), (see illustration). Factory setting: STANDARD Example for the SYMMETRY measuring mode: Switch-on point Q = 4 Switch-off point Q = 10 ① = Relay energised ② = Relay de-energised  Note! - SYMMETRY cannot be selected unless the values in the ON-VALUE (4701) and OFF-VALUE (4703) functions have the same sign or one of the values is zero. - If the signs of the two values differ, SYMMETRY cannot be selected and an "ASSIGNMENT NOT POSSIBLE" message is issued.
TIME CONSTANT (4706)	Use this function to enter a time constant defining how the measuring signal reacts to severely fluctuating measured variables, either very quickly (enter a low time constant) or with damping (enter a high time constant). Damping acts on the measuring signal before the switch status changes, and consequently before switch-on or switch-off delay is activated. The purpose of damping, therefore, is to prevent the relay output changing state continuously in response to fluctuations in flow. User input: fixed-point number 0.00...100.00 s Factory setting: 0.00 s

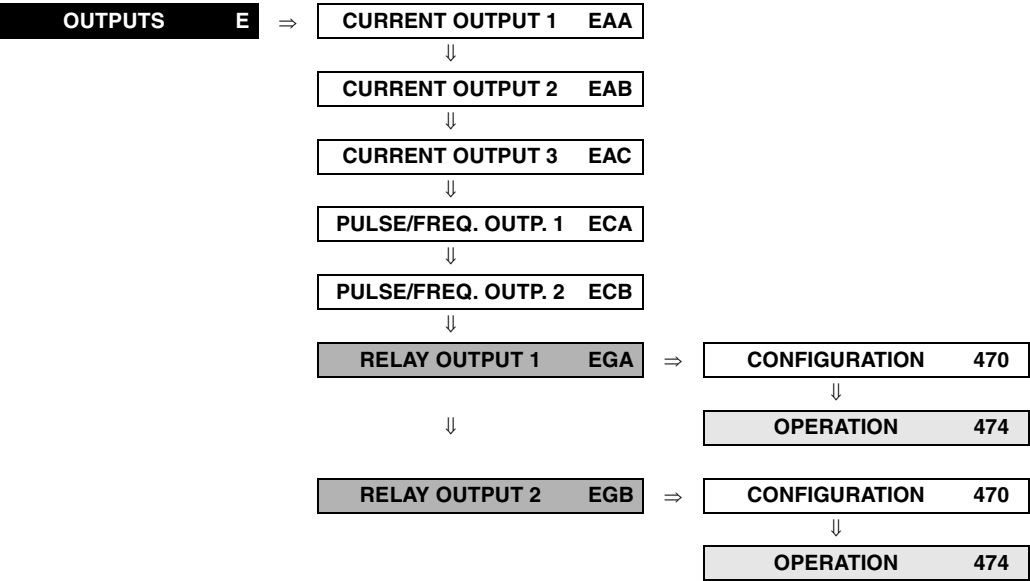
7.3.2 Function group OPERATION



Functional description	
OUTPUTS → RELAY OUTPUT (1...2) → OPERATION	
ACTUAL STATUS RELAY (4740)	Use this function to check the current status of the relay output. A jumper on the contact side defines the relay output as a normally open (NO or make) or normally closed (NC or break) contact see <i>Operating Instructions Prosonic Flow 93</i>, BA 070D/06/en/.. User interface: NC OPEN NC CONTACT CLOSED NO CONTACT OPEN NO CONTACT CLOSED
SIMULATION SWITCH POINT (4741)	Use this function to activate simulation of the relay output. Options: OFF ON Factory setting: OFF  Note! • The “SIMULATION RELAY” message indicates that simulation is active. • The measuring device continues to measure while simulation is in progress, i.e. the current measuring values are output correctly via the other outputs.  Caution! The setting is not saved if the power supply fails.

Functional description	
OUTPUTS → RELAY OUTPUT (1...2) → OPERATION	
VALUE SIMULATION SWITCH POINT (4742)	 Note! The function is not visible unless the function SIMULATION SWITCH POINT (4741) is active (= ON). Use this function to define the status of the relay output during the simulation. This value is used to test downstream devices and the measuring device itself. Depending on the relay configuration (as make or break contact) the following selections are available. Options: Relay output configured as normally open (make) contact: NO OPEN NO CLOSED Relay output configured as normally closed (break) contact: NC OPEN NC CLOSED  Caution! The setting is not saved if the power supply fails.

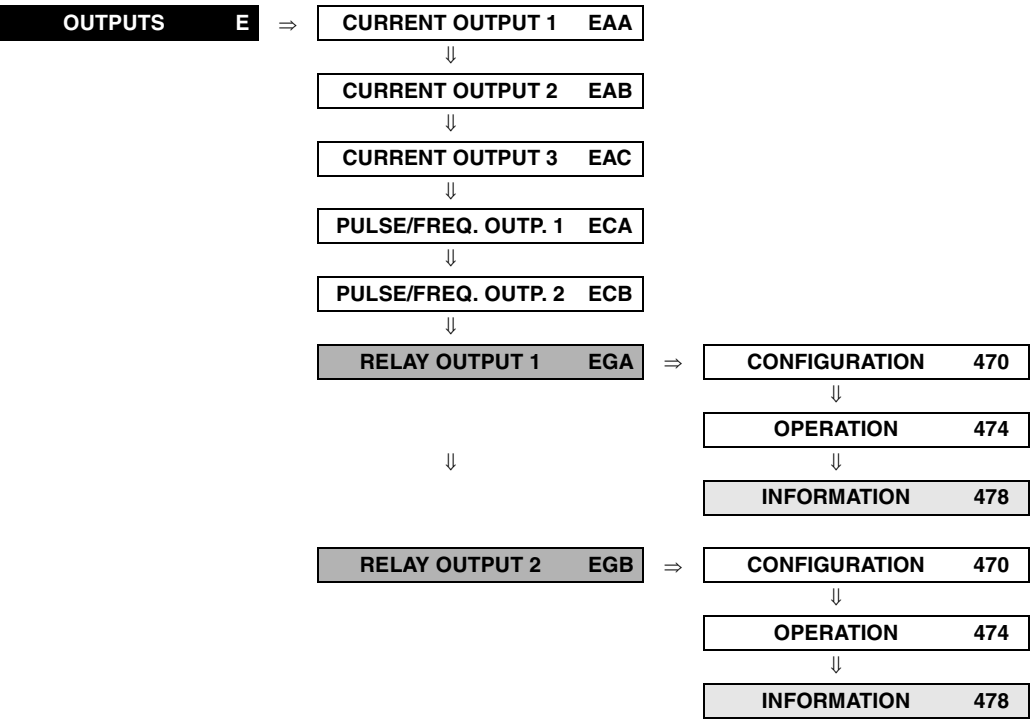7.3.3 **Function group INFORMATION**



7.3.4 Information on the response of the relay output

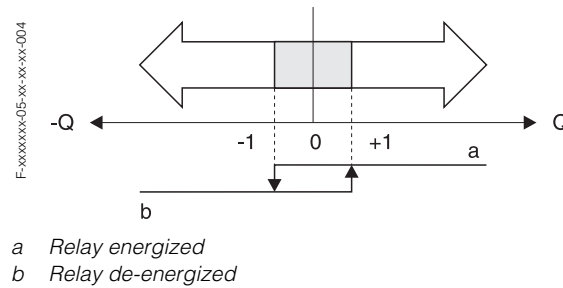
General

If you have configured the relay output signal for "LIMIT-VALUE" or "FLOW DIRECTION", you can define the requisite switching points in the ON-VALUE and OFF-VALUE functions. When the measured variable in question reaches one of these predefined values, the relay output switches as shown in the illustrations below.

Relay output configured for "flow direction"

The value you entered in the function ON-VALUE defines the switching point for the positive and negative directions of flow.

If, for example, the switch point you define is $\pm 1 \text{ m}^3/\text{h}$, the relay drops out at $-1 \text{ m}^3/\text{h}$ and pulls up at $+1 \text{ m}^3/\text{h}$. Set the switch point to 0 if your process calls for direct switchover (no switching hysteresis). If low flow cut off is used, it is advisable to set hysteresis to a value greater than or equal to the low flow cut off rate.




Relay output configured for limit value

The relay output signal switches as soon as the measured variable undershoots or overshoots a defined switch point.



















Application: Monitoring flow or process-related boundary conditions.






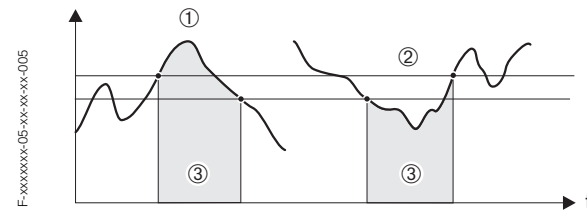
Measured variable




- ① = ON > SWITCH-OFF POINT (maximum safety)
- ② = ON > SWITCH-OFF POINT (minimum safety)
- ③ = Relay de-energised

                  7.3.5 Switching action of the relay output

Function	Status	Relais coil	Contact*	
			NC	NO
ON (operation)	System in measuring mode	energized		
	System not in measuring mode (power supply failed)	de-energized		
Fault message	System OK	energized		
	(System or process error) Fault Response to error Out-puts /Inputs and totalizers	de-energized		
Notice message	System OK	energized		
	(System or process error) Fault Continuation of measuring	de-energized		
Fault message or notice message	System OK	energized		
	(System or process error) Fault Response to error or NoteContinuation of measuring	de-energized		
Flow direction (CH1, CH2 AVG. SUM DIFFERENCE)	forward	 energized		
	reverse	 de-energized		

      Function	Status	Relais coil	Contact*	
			NC	NO
Limit value – Volume flow – Totalizer – Sound velocity – Flow velocity (CH1, CH2 AVG. SUM DIFFERENCE)	Limit value not overshoot or undershot	 energized		
	Limit value overshoot or undershot	 de-ener-gized		
* Terminal numbers in accordance with the TERMINAL NUMBER function (4780) on page 91.  Note! If the measuring device has two relays, the factory setting is: • Relay 1 → normally open contact • Relay 2 → normally closed contact				

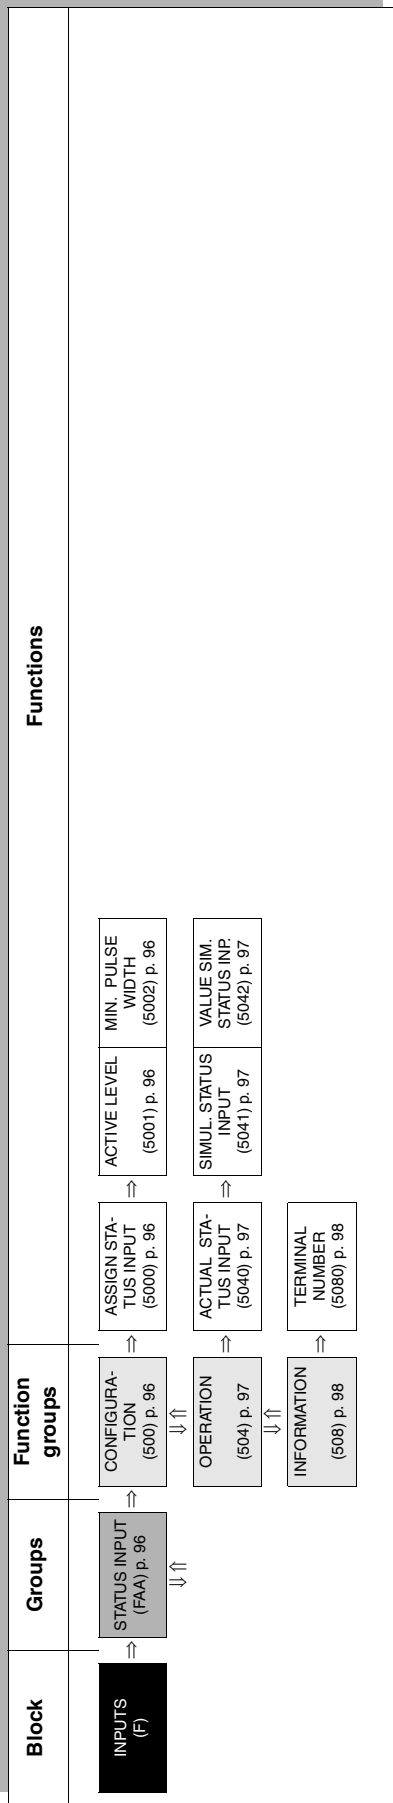8 Block INPUTS




8.1 Group STATUS INPUT

8.1.1 Function group CONFIGURATION


INPUTS	F	⇒	STATUS INPUT	FAA	⇒	CONFIGURATION	500
Functional description INPUTS → STATUS INPUT → CONFIGURATION							
ASSIGN STATUS INPUT (5000)		Use this function to assign a switching function to the status input. Options: OFF RESET TOTALIZER (1...3) RESET ALL TOTALIZERS POSITIVE ZERO RETURN (CH1...CH2) POSITIVE ZERO RETURN CH1&CH2 RESET FAULT MESSAGE ZERO ADJUST (CH1...CH2) Factory setting: OFF  Caution! Positive zero return is active as long as the level is available at the status input (continuous signal). All other assignments react to a change in level (pulse) at the status input.					
ACTIVE LEVEL (5001)		Use this function to define whether the assigned switch function is released or sustained when the signal level is present (HIGH) or not present (LOW). Options: HIGH LOW Factory setting: HIGH					
MINIMUM PULSE WIDTH (5002)		Use this function to define a minimum pulse width which the input pulse must achieve in order to trigger the selected switching function (see function ASSIGN STATUS INPUT (5000) on page 96). User input: 20...100 ms Factory setting: 50 ms					

 8.1.2 **Function group OPERATION**



Functional description	
INPUTS → STATUS INPUT → OPERATION	
ACTUAL STATUS INPUT (5040)	Use this function to view the current level of the status input. User interface: HIGH LOW
SIMULATION STATUS INPUT (5041)	Use this function to simulate the status input, i.e. to trigger the function (see function ASSIGN STATUS INPUT (5000) on page 96) assigned to the status input. Options: OFF ON Factory setting: OFF  Note! • The “SIMULATION STATUS INPUT” message indicates that simulation is active. • The measuring device continues to measure while simulation is in progress, i.e. the current measuring values are output correctly via the other outputs.  Caution! The setting is not saved if the power supply fails.
VALUE SIMULATION STATUS INPUT (5042)	 Note! The function is not visible unless the function SIMULATION STATUS INPUT (5041) is active (= ON). Use this function to define the level to be assumed at the status output during the simulation. This value is used to test downstream devices and the measuring device itself. Options: HIGH LOW Factory setting: LOW  Caution! The setting is not saved if the power supply fails.

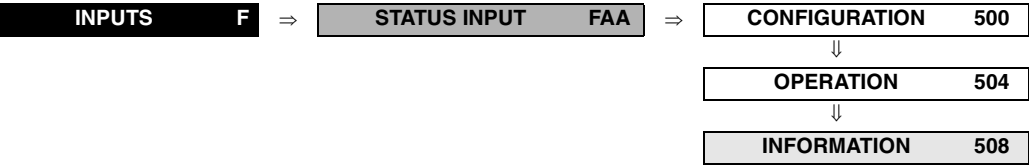8.1.3 Function group INFORMATION



Functional description	
INPUTS → STATUS INPUT → INFORMATION	
TERMINAL NUMBER (5080)	Use this function to display the numbers of the terminals (in the connection compartment) which are used by the status input.

9 Block BASIC FUNCTION


Block	Groups	Function groups	Functions														
BASIC FUNCTION (G)	HART (GAA) p. 100 ⇕⇕	⇕ CONFIGURATION (600) p. 100	⇕ TAG NAME (6000) p. 100	⇕ TAG DESCRIPTION (6001) p. 100	FIELD BUS ADDRESS (6002) p. 100	HART PROTOCOL (6003) p. 100	WRITE PROTECTION (6004) p. 100										
		⇕ INFORMATION (604) p. 101	⇕ MANUFACTURER ID (6040) p. 101	⇕ DEVICE ID (6041) p. 101													
		⇕ PROC. PARAM. (CH1...CH2) (GLA, GLB) p. 102	⇕ ASSIGN LF CUT OFF (6400) p. 102	ON-VALUE LF CUT OFF (6402) p. 102	OFF-VAL. LF CUT OFF (6403) p. 102	PRESSURE SHOCK SUPPR. (6404) p. 103											
	⇕ ADJUSTMENT (648) p. 104	⇕ ZERO POINT ADJ. (6480)															
		⇕ PIPE DATA (652) p. 105	⇕ PIPE STANDARD (6520) p. 105	NOMINAL DIAMETER (6521) p. 105	PIPE MATERIAL (6522) p. 106	REFERENCE VALUE (6523) p. 106	SOUND VEL. PIPE (6524) p. 106	CIRCUM-FERENCE (6525) p. 107	PIPE DIAMETER (6526) p. 107	WALL THICKNESS (6527) p. 107	LINER MATERIAL (6528) p. 108	SOUND VEL. LINER (6529) p. 108					
	LINER THICKNESS (6530) p. 108																
		⇕ LIQUID DATA (654) p. 109	⇕ LIQUID (6540) p. 109	TEMPERATURE (6541) p. 109	SOUND VELOCITY (6542) p. 110	VISCOSITY (6543) p. 110	S.VEL.NEG. (6545) p. 111	S.VEL.POS. (6546) p. 111									
	⇕ CONFIGURATION (660) p. 112	⇕ INST. DIR. SENSOR (6600) p. 112	FLOW DAMPING (6603) p. 112	POSITIVE ZERO RETURN (6605) p. 112													
	⇕ SYS. PARAM. (CH1...CH2) (GLA) p. 112	⇕ SENSOR PARAM. (688) p. 113	⇕ MEASURE-MENT (6880) p. 113	SENSOR TYPE (6881) p. 113	SENSOR CONFIG (6882) p. 114	CABLE LENGTH (6883) p. 114	POSITION SENSOR (6884) p. 114	WIRE LENGTH (6885) p. 114	SENSOR DISTANCE (6886) p. 114	ARC LENGTH (6887) p. 115	PATH LENGTH (6888) p. 115						
	⇕ SENSOR DATA (CH1...CH2) (GLA, GLB)	⇕ CALIBRATION DATA (689) p. 116	⇕ P-Factor (6890) p. 116	ZERO POINT (6891) p. 116	CORRECTION FACTOR (6893) p. 116	DEV. SENSOR SPAC. (6894) p. 116	DEV. ARC LENGTH (6895) p. 116	DEV. PATH LENGTH (6896) p. 117									
	⇕	⇕	⇕	⇕	⇕	⇕	⇕	⇕					⇕	⇕	⇕		
	⇕	⇕	⇕	⇕	⇕	⇕	⇕	⇕					⇕	⇕	⇕		

9.1 Group HART

9.1.1 Function group CONFIGURATION

BASIC FUNCTION G	⇒	HART GAA	⇒	CONFIGURATION 600
Functional description BASIC FUNCTION → HART → CONFIGURATION				
TAG NAME (6000)	Use this function to enter a tag name for the measuring device. You can edit and read this tag name at the local display or via the HART protocol. User input: max. 8-character text, permitted characters are: A–Z, 0–9, +, –, punctuation marks Factory setting: "-----" (without text)			
TAG DESCRIPTION (6001)	Use this function to enter a tag description for the measuring device. You can edit and read this tag description at the local display or via the HART protocol. User input: max. 16-character text, permitted characters are: A–Z, 0–9, +, –, punctuation marks Factory setting: "-----" (without text)			
FIELD BUS ADDRESS (6002)	Use this function to define the address for the exchange of data with the HART protocol. User input: 0...15 Factory setting: 0  Note! Addresses 1...15: a constant 4 mA current is applied.			
HART PROTOCOL (6003)	Use this function to display if the HART protocol is active. User interface: OFF = HART protocol not active ON = HART protocol active  Note! The HART protocol is activated by selecting 4–20 mA HART or 4–20 mA (25 mA) HART in the function CURRENT SPAN, (see page 56).			
WRITE PROTECTION (6004)	Use this function to check whether the measuring device can be write-accessed. User interface: OFF (Data exchange is possible) ON (Data exchange is disabled) Factory setting: OFF  Note! Write protection is activated and deactivated by means of a jumper on the I/O module see <i>Operating Instructions Prosonic Flow 93</i> , BA 070D/06/en/..			

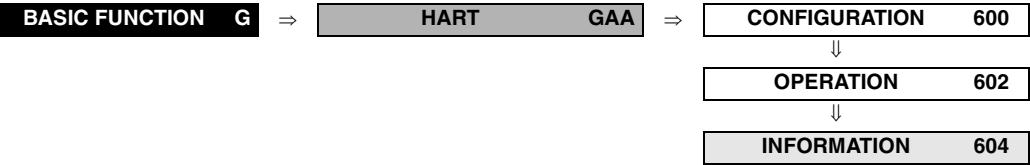
9.1.2 Function group INFORMATION





Functional description	
BASIC FUNCTION → HART → OPERATION	
MANUFACTURER ID (6040)	Use this function to view the manufacturer number in decimal numerical format. User interface: 17 (≅ 11 hex) for Endress+Hauser
DEVICE ID (6041)	Use this function to view the device ID in hexadecimal numerical format. User interface: 59 (≅ 89dez) for Prosonic Flow 93

9.2 Group PROCESS PARAMETER (CH1...CH2)

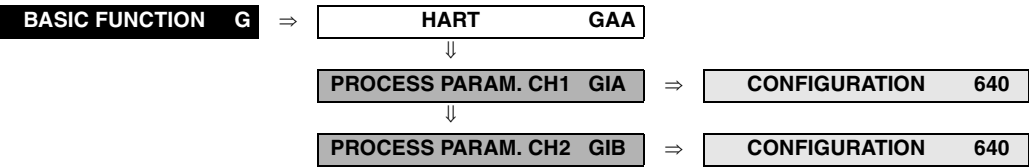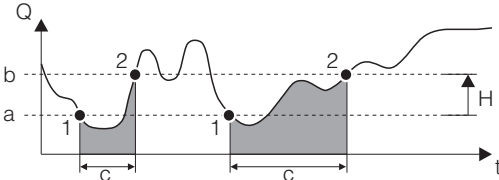
9.2.1 Function group CONFIGURATION



Functional description	
BASIC FUNCTION → PROCESS PARAMETER (CH1...CH2) → CONFIGURATION	
ASSIGN LOW FLOW CUT OFF (6400)	Use this function to assign the switch point for low flow cut off rate suppression. Options: OFF VOLUME FLOW Factory setting: VOLUME FLOW
ON-VALUE LOW FLOW CUT OFF (6402)	Use this function to assign a value to the switch-on point for low flow cut off. Low flow cut off is active if the value entered is not equal to 0. The sign of the flow value is highlighted on the display to indicate that low flow cut off is active. User input: 5-digit floating-point number Factory setting: Depends on nominal diameter and country, [value] / [dm³...m³ or US-gal...US-Mgal] Corresponds to the factory setting for the low flow cut off (see page 143 ff.).  Note! The appropriate unit is taken from the function UNIT VOLUME FLOW (0402), (see page 15)
OFF-VALUE LOW FLOW CUT OFF (6403)	Use this function to enter the switch-off (b) point for low flow cut off. Enter the switch-off point as a positive hysteresis (H) from the switch-on point (a). User input: Integer 0...100% Factory setting: 50% Example:  Q = Flow [volume/time] t = Time a = ON-VALUE LOW FLOW CUT OFF (6402) = 200 dm³/h b = OFF-VALUE LOW FLOW CUT OFF (6403) = 10% c = Low flow cut off active 1 = Low flow cut off is switched on at 200 dm³/h 2 = Low flow cut off is switched off at 220 dm³/h

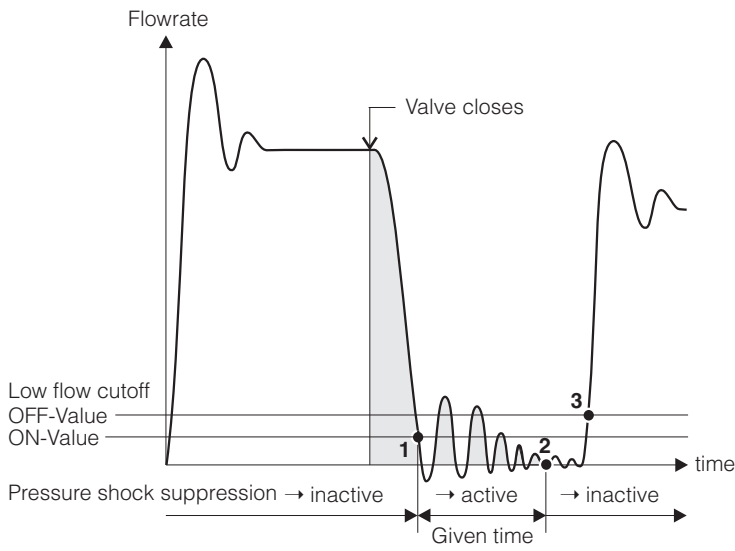
Functional description	
BASIC FUNCTION → PROCESS PARAMETER (CH1...CH2) → CONFIGURATION	
PRESSURE SHOCK SUPPRESSION (6404)	The closure of a valve can cause brief but severe movements of the fluid in the piping system, movements which the measuring system registers. The pulses totalled in this way result in a totalizer reading error, particularly in the case of batching processes. For this reason, the measuring device is equipped with pressure shock suppression (= short-term signal suppression) which can eliminate system-related “disruptions”.  Note! Note that pressure shock suppression cannot be used unless the low flow cut off is active, (see function ON-VALUE LOW FLOW CUT OFF on page 102). Use this function to define the time span for active pressure shock suppression. Activation of the pressure shock suppression Pressure shock suppression is activated after the flow falls below the switch-on point of the low flow cut off, (see point 1 in graphic). While pressure shock suppression is active, the following conditions apply: • Current output → outputs the current corresponding to zero flow. • Pulse/Freq.-output → outputs the frequency corresponding to zero flow. • Flow reading on display = → 0 • Totalizer reading → the totalizers are pegged at the last correct value. Deactivation of the pressure shock suppression The pressure shock suppression is deactivated after the time interval, set in this function, has passed (see point 2 in graphic).  Note! The actual flow value is displayed and output, when the time interval for the pressure shock suppression has passed and the flow exceeds the switch-off point of the low flow cut off (see point 3 in graphic).  Flowrate Valve closes Low flow cutoff OFF-Value ON-Value 1 2 3 Pressure shock suppression → inactive → active → inactive Given time time User input: max. 4-digit number, incl. unit: 0.00...100.0 s Factory setting: 0.00 s

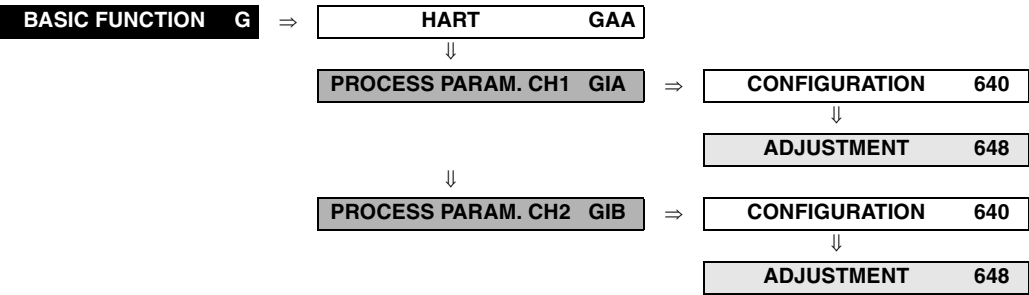9.2.2 Function group ADJUSTMENT



Functional description	
BASIC FUNCTION → PROCESS PARAMETER (CH1...CH2) → ADJUSTMENT	
ZERO POINT ADJUSTMENT (6480)	This function enables a zero point adjustment to be automatically carried out. The new zero point determined by the measuring system is adopted by the ZERO POINT function (see page 116). Options: CANCEL START Factory setting: CANCEL  Caution! Before carrying this out, please refer to the Operating Instructions <i>Prosonic Flow 93</i> (BA 070D/06/en/....), for a detailed description of the procedure for zero point adjustment.  Note! • Programming is locked during zero point adjustment The message "ZERO ADJUST RUNNING" appears on the display. • If the zero point adjustment is not possible, e.g. with a flow velocity > 0.1 m/s, or has been canceled, then the alarm message "ZERO ADJUST NOT POSSIBLE" is shown on the display. • If the Prosonic Flow 93 measuring electronics are fitted with a status input, then the zero point can also be activated by using this input.

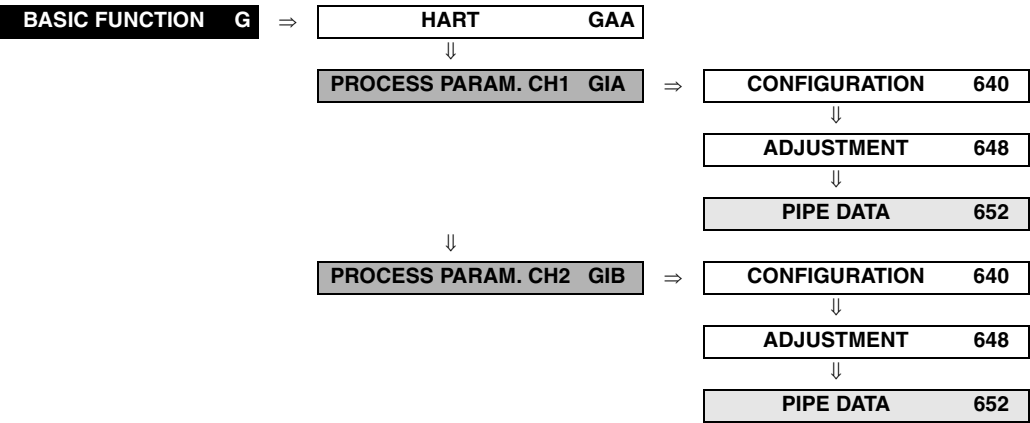9.2.3 Function group PIPE DATA




Functional description	
BASIC FUNCTION → PROCESS PARAMETER (CH1...CH2) → PIPE DATA	
PIPE STANDARD (6520)	Use this function to select a pipe standard. Options: OTHERS DIN: PN10, PN16, 28610, 28614, 28615, 28619 ANSI: SCHEDULE 40, SCHEDULE 80 AWWA: CLASS 50, CLASS 53, CLASS 55 Note! The selection specifies the values for the following functions: • PIPE MATERIAL (6522) • SOUND VELOCITY PIPE (6524) • LINER MATERIAL (6528) If you edit these functions the pipe standard will be reset to the option OTHERS. Factory setting: DIN PN10
NOMINAL DIAMETER (6521)	Note! This function does not appear if the option OTHERS was selected in the function PIPE STANDARD (6520). Use this function to select the nominal diameter of the pipe. Options: OTHERS DN: 25/1", 40/1½", 50/2", 80/3", 100/4", 150/6", 200/8", 250/10", 300/12", 400/16", 450/18", 500/20", 600/24", 700/28", 750/30", 800/32", 900/36", 1000/40", 1200/48", 1400/54", 1500/60", 1600/64", 1800/72", 2000/80" Note! The selection specifies the values for the following functions: • CIRCUMFERENCE (6525) • PIPE DIAMETER (6526) • WALL THICKNESS (6527) If you edit these functions the pipe standard will be reset to the option OTHERS and the function NOMINAL DIAMETER (6521) does not appear. Factory setting: 80/3"

Functional description BASIC FUNCTION → PROCESS PARAMETER (CH1...CH2) → PIPE DATA	
PIPE MATERIAL (6522)	This function displays the pipe material determined via the value entered in the function PIPE STANDARD (6520). If you edit the predetermined value the pipe standard will be reset to the option OTHERS and the function NOMINAL DIAMETER (6521) does not appear. If a pipe standard was not available for selection and the selection OTHER was made in the function PIPE STANDARD (6520) the pipe material must be entered here. Options: CARBON STEEL, DUCTILE IRON, STAINLESS STEEL, SS ANSI 304, SS ANSI 316, SS ANSI 347, SS ANSI 410, SS ANSI 430, HASTELLOY C, PVC, PE, LDPE, HDPE, GRP, PVDF, PA, PP, PTFE, GLASS PYREX, ASBESTOS CEMENT, OTHER Factory setting: STAINLESS STEEL
REFERENCE VALUE (6523)	Use this function to enter the thickness of the reference component (e.g. flange) as the basis for measuring the sound velocity of the pipe.  Note! This function does not appear unless the option SOUND VELOCITY PIPE was selected in the function MEASUREMENT (6880, page 113). User input: 5-digit floating-point number, [unit] Factory setting: 5 mm
SOUND VELOCITY PIPE (6524)	This function displays the sound velocity in the pipe determined via the value entered in the function PIPE STANDARD (6520). If you edit the predetermined value the pipe standard will be reset to the option OTHERS and the function NOMINAL DIAMETER (6521) does not appear. If a pipe standard was not available for selection and the selection OTHER was made in the function PIPE STANDARD (6520) the sound velocity must be entered here. Measuring the sound velocity in the pipe If the sound velocity in the pipe is unknown, it can be measured. To do so, select the option SOUND VELOCITY PIPE in the function MEASUREMENT (6880, page 113). The sound velocity in the pipe is measured by calling up the function SOUND VELOCITY PIPE (6524). The measured sound velocity, the signal strength and a bar graph appear on the local display. The measurement is valid if 100% is achieved in the bar graph. If you confirm the function with the  key, the SAVE prompt appears. To accept the measured sound velocity, select the option YES by means of the  or  key.  Note! • To measure the sound velocity, you require the ultrasonic sensors "DDU18" which you can order as an accessory from Endress+Hauser. • A reference value is used as a basis for measuring the sound velocity. This reference value can be edited. (see function REFERENCE VALUE (6523), page 106) User input: Fixed-point number 800.0...6500.0 m/s Factory setting: 3120 m/s


Functional description BASIC FUNCTION → PROCESS PARAMETER (CH1...CH2) → PIPE DATA	
CIRCUMFERENCE (6525)	This function displays the outer circumference of the pipe determined via the value entered in the function NOMINAL DIAMETER (6521). If you edit the predetermined value the pipe standard will be reset to the option OTHERS and the function NOMINAL DIAMETER (6521) does not appear. If a nominal diameter was not available for selection and the selection OTHER was made in the function NOMINAL DIAMETER (6521) the outer circumference must be entered here. User input: Fixed-point number 31.4...15708.0 mm Factory setting: 279.3 mm
PIPE DIAMETER (6526)	This function displays the outer diameter of the pipe determined via the value entered in the function NOMINAL DIAMETER (6521). If you edit the predetermined value the pipe standard will be reset to the option OTHERS and the function NOMINAL DIAMETER (6521) does not appear. If a nominal diameter was not available for selection and the selection OTHER was made in the function NOMINAL DIAMETER (6521) the outer diameter must be entered here. User input: Fixed-point number 10.0...5000.0 mm Factory setting: 88.9 mm
WALL THICKNESS (6527)	This function displays the thickness of the pipe walls determined via the value entered in the function NOMINAL DIAMETER (6521). If you edit the predetermined value the pipe standard will be reset to the option OTHERS and the function NOMINAL DIAMETER (6521) does not appear. If a nominal diameter was not available for selection and the selection OTHER was made in the function NOMINAL DIAMETER (6521) the thickness of the pipe wall must be entered here. Measuring the wall thickness If the wall thickness is unknown, it can be measured. To do so, select the option WALL THICKNESS in the function MEASUREMENT (6880, page 113). The wall thickness is measured by calling up the function WALL THICKNESS (6527). The measured wall thickness, the signal strength and a bar graph appear on the local display. The measurement is valid if 100% is achieved in the bar graph. If you confirm the function with the  key, the SAVE prompt appears. To accept the measured wall thickness, select the option YES by means of the  or  key.  Note! To measure the wall thickness, you require the ultrasonic sensors "DDU19" which you can order as an accessory from Endress+Hauser. User input: Fixed-point number 0.1...100.0 mm Factory setting: 3.2 mm

Functional description BASIC FUNCTION → PROCESS PARAMETER (CH1...CH2) → PIPE DATA	
LINER MATERIAL (6528)	This function displays the liner material of the pipe determined via the value entered in the function PIPE STANDARD (6520). the pipe standard will be reset to the option OTHERS and the function NOMINAL DIAMETER (6521) does not appear. If a pipe standard was not available for selection and the selection OTHER was made in the function PIPE STANDARD (6520) the liner material must be entered here. Options: LINER NONE MORTAR RUBBER TAR EPOXY OTHERS Factory setting: LINER NONE
SOUND VELOCITY LINER (6529)	 Note! This function does not appear if the option LINER NONE was selected in the function LINER MATERIAL (6528). This function displays the sound velocity of the liner determined via the value entered in the function LINER MATERIAL (6520). If you edit the predetermined value the liner material will be reset to the option OTHERS. If a liner material was not available for selection and the selection OTHER was made in the function LINER MATERIAL (6528) the sound velocity of the liner must be entered here. User input: Fixed-point number 800.0...6500 m/s Factory setting: Depending on the selection in the function LINER MATERIAL (6528)
LINER THICKNESS (6530)	 Note! This function does not appear if the option LINER NONE was selected in the function LINER MATERIAL (6528). Use this function to enter the thickness of the liner. User input: Fixed-point number 0.1...100.0 mm Factory setting: 0 mm

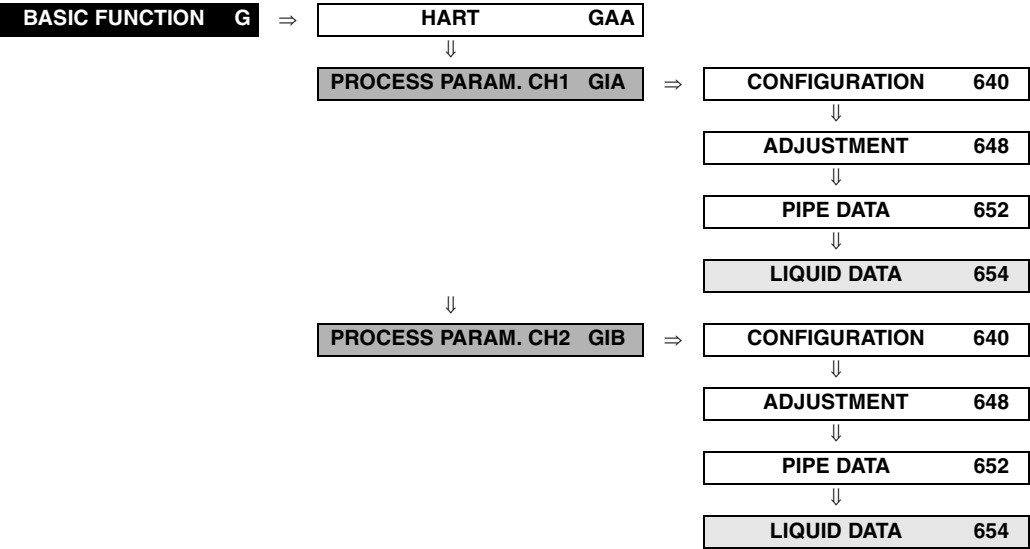9.2.4 **Function group LIQUID DATA**




Functional description	
BASIC FUNCTION → PROCESS PARAMETER (CH1...CH2) → LIQUID DATA	
LIQUID (6540)	Use this function to select the liquid in the pipe.  Note! The selection specifies the values for the sound velocity and viscosity. If OTHER is selected, these must be entered via the SOUND VELOCITY LIQUID (6542) and VISCOSITY (6543) functions. Options: WATER, SEAWATER, DISTILLED WATER, AMMONIA, ALCOHOL, BENZENE, BROMIDE, ETHANOL, GLYCOL, KEROSENE, MILK, METHANOL, TOLUOL, LUBRICATING OIL, FUEL OIL, PETROL, OTHER Factory setting: WATER
TEMPERATURE (6541)	Use this function to enter the process temperature of the liquid. Via the sound velocity, the value influences the determination of the sensor distance. Enter the process temperature at normal operating conditions to achieve an optimum configuration of the measuring system. User input: Fixed-point number -273.15...726.85 °C (0...1000 K) Factory setting: 20 °C

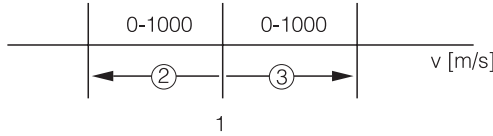Functional description	
BASIC FUNCTION → PROCESS PARAMETER (CH1...CH2) → LIQUID DATA	
SOUND VELOCITY LIQUID (6542)	This function displays the sound velocity of the liquid determined via the values entered in the functions LIQUID (6540) and TEMPERATURE (6541). If you edit the predetermined value the function LIQUID (6540) will be reset to the option OTHERS. If a liquid was not available for selection and the selection OTHER was made in the function LIQUID (6540) the sound velocity must be entered here. Measuring the sound velocity of the liquid If the sound velocity of the liquid is unknown, it can be measured. To do so, select the option SOUND VELOCITY LIQUID in the function MEASUREMENT (6880, page 113). The sound velocity in the liquid is measured by calling up the function SOUND VELOCITY LIQUID (6542). The result of the measurement appears on the local display. If you confirm the function with the  key, the SAVE prompt appears. To accept the measured sound velocity, select the option YES by means of the  or  key.  Note! To measure the sound velocity, you require the ultrasonic sensors “DDU18” which you can order as an accessory from Endress+Hauser. Transmitter search range: The measuring device searches for the measuring signal within a defined sound velocity range. You specify the search range in the SOUND VELOCITY NEGATIVE (6545) and SOUND VELOCITY POSITIVE (6546) functions. An error message is displayed if the sound velocity of the liquid exceeds the search range.  Note! We recommend you select a smaller search range by unfavourable signal conditions (signal strength < 50%).  1 = Sound velocity of the liquid 2 = Lower search range: is specified in the SOUND VELOCITY NEGATIVE (6545) function 3 = Upper search range: is specified in the SOUND VELOCITY POSITIVE (6546) function User input: Fixed-point number 400...3000 m/s Factory setting: 1485 m/s
VISCOSITY (6543)	This function displays the viscosity of the liquid. This is determined via the values entered in the LIQUID (6540) and TEMPERATURE (6541) functions. If you edit the predetermined value the function LIQUID (6540) will be reset to the option OTHERS. If the liquid is not available for selection in the LIQUID (6540) function and the OTHER option was selected the viscosity must be entered here. User input: Fixed-point number 0.0...5000.0 cSt Factory setting: 1 mm²/s

Functional description	
BASIC FUNCTION → PROCESS PARAMETER (CH1...CH2) → LIQUID DATA	
SOUND VELOCITY NEGATIVE (6545)	Use this function to specify the lower search range for the sound velocity of the liquid. User input: Fixed-point number 0...1000 m/s Factory setting: 500 m/s  Note! Pay particular attention to the information in the SOUND VELOCITY LIQUID (6542) function.
SOUND VELOCITY POSITIVE (6546)	Use this function to specify the upper search range for the sound velocity of the liquid. User input: Fixed-point number 0...1000 m/s Factory setting: 300 m/s  Note! Pay particular attention to the information in the SOUND VELOCITY LIQUID (6542) function.

9.3 Group SYSTEM PARAMETER (CH1...CH2)

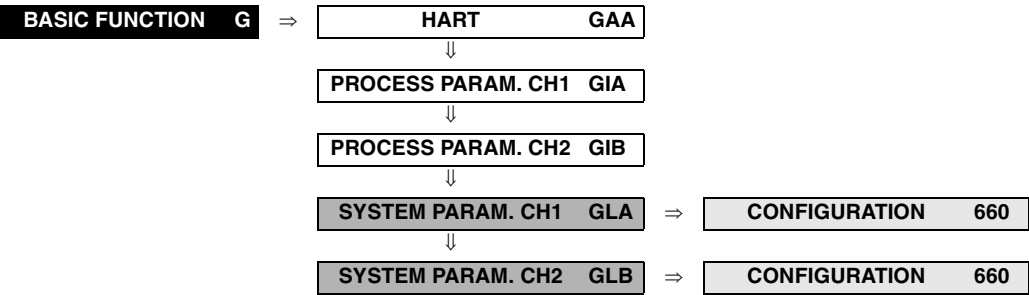
9.3.1 Function group CONFIGURATION



Functional description	
BASIC FUNCTION → SYSTEM PARAMETER CH1 → CONFIGURATION	
INSTALLATION DIRECTION SENSOR (6600)	Use this function to reverse the sign of the flow quantity, if necessary. Options: NORMAL INVERSE Factory setting: NORMAL
FLOW DAMPING (6603)	 Note! The system damping acts on all functions and outputs of the measuring device. Use this function to set the filter depth of the digital filter. This reduces the sensitivity of the measuring signal to interference peaks (e.g. high solids content, gas bubbles in the fluid, etc.). The system reaction time increases with the filter setting. User input: 0 ...15 Factory setting: 0
POSITIVE ZERO RETURN (6605)	Use this function to interrupt evaluation of measured variables. This is necessary when a piping system is being cleaned, for example. This setting acts on all function and outputs of the measuring device. Options: OFF ON Signal output is set to the "ZERO FLOW" value. Factory setting: OFF

9.4 Group SENSOR DATA (CH1...CH2)

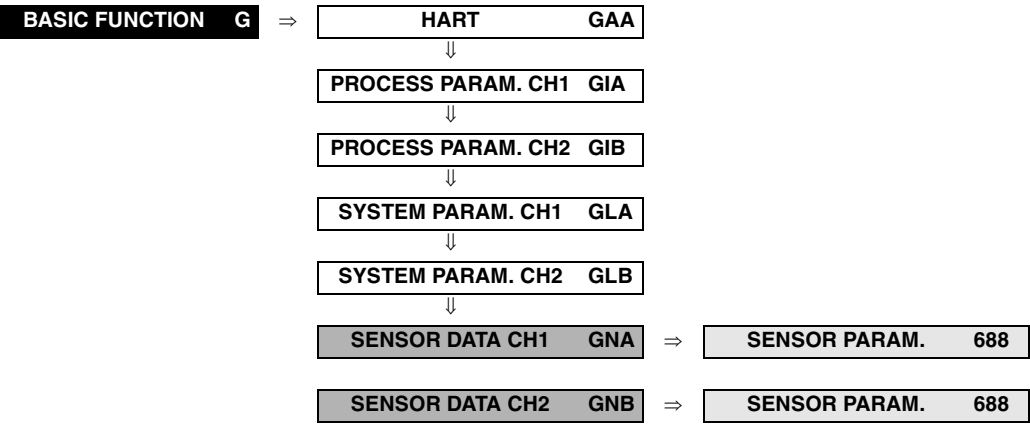9.4.1 Function group SENSOR PARAMETER




Functional description	
BASIC FUNCTION → SENSOR DATA (CH1...CH2) → SENSOR PARAMETER	
MEASUREMENT (6880)	Options: OFF CLAMP ON INSERTION SOUND VELOCITY LIQUID SOUND VELOCITY PIPE WALL THICKNESS Factory setting: CLAMP ON for channel 1 OFF for channel 2
SENSOR TYPE (6881)	 Note! This function is only available if the OFF setting was not selected in the function MEASUREMENT. Options: W-CL-05F-L-B¹⁾ W-CL-1F-L-B¹⁾ W-CL-2F-L-B¹⁾ P-CL-05F-L-B¹⁾ P-CL-1F-L-B¹⁾ P-CL-2F-L-B¹⁾ U-CL-2F-L-A¹⁾ P-CL-05F-M-B¹⁾ P-CL-1F-M-B¹⁾ P-CL-2F-M-B¹⁾ W-IN-1F-L-B²⁾ P-CL-1S-L-B³⁾ P-CL-1S-M-B³⁾ P-CL-4W-L-B⁴⁾ Factory setting: W-CL-2F-L-B ¹⁾ This option is not available unless CLAMP ON was selected in the function MEASUREMENT. ²⁾ This option is not available unless INSERTION was selected in the function MEASUREMENT. ³⁾ This option is not available unless SOUND VELOCITY LIQUID was selected in the function MEASUREMENT. ⁴⁾ This option is not available unless SOUND VELOCITY PIPE or WALL THICKNESS was selected in the function MEASUREMENT.

Functional description BASIC FUNCTION → SENSOR DATA (CH1...CH2) → SENSOR PARAMETER	
SENSOR CONFIGURATION (6882)	Use this function to select the configuration for the ultrasonic sensors, e.g. the number of traverses (in the Clamp On design) or whether single-path or dual-path configuration is present (in the insertion design)  Note! This function is not available unless one of the following options was selected in the function MEASUREMENT (6880): • CLAMP ON • SOUND VELOCITY LIQUID • INSERTION Options: NO. TRAVERSE: 1¹⁾ NO. TRAVERSE: 2²⁾ NO. TRAVERSE: 3¹⁾ NO. TRAVERSE: 4²⁾ SINGLE PATH³⁾ DUAL PATH³⁾ Factory setting: NO. TRAVERSE: 2  Note! When using the U-Sensor it is always required to set this function to "NO. TRAVERSE: 2" 1) This option is not available unless CLAMP ON or SOUND VELOCITY LIQUID was selected in the function MEASUREMENT. 2) This option is not available unless CLAMP ON was selected in the function MEASUREMENT. 3) This option is not available unless INSERTION was selected in the function MEASUREMENT.
CABLE LENGTH (6883)	Use this function to select the length of the sensor cable. Options: LENGTH 5m/15 feet LENGTH 10m/30 feet LENGTH 15m/45 feet LENGTH 30m/90 feet Factory setting: LENGTH 5m/15 feet
POSITION SENSOR (6884)	Use this function to view the position of both sensors on the rail.  Note! This option is not available unless CLAMP ON is set in the function MEASUREMENT and the number of traverses is 2 or 4 (see function SENSOR CONFIGURATION (6882)). Display: 5-digit number combination
WIRE LENGTH (6885)	The wire length for assembling the sensors at the correct distance apart appears on the display.  Note! This option is not available unless CLAMP ON was set in the function MEASUREMENT and the number of traverses is 1 or 3, (see function SENSOR CONFIGURATION (6882)). Display: max. 5-digit number, including unit (e.g. 200 mm)
SENSOR DISTANCE (6886)	The distance between sensor 1 and sensor 2 as a length measurement appears on the display. Display: max. 5-digit number, including unit (e.g. 200 mm)

Functional description	
BASIC FUNCTION → SENSOR DATA (CH1...CH2) → SENSOR PARAMETER	
ARC LENGTH (6887)	The arc length on the pipe appears on the display.  Note! This function is not available unless INSERTION was set in the function MEASUREMENT (6880) and the DUAL PATH option was selected in the function SENSOR CONFIGURATION (6882). Display: max. 5-digit number, including unit (e.g. 200 mm)
PATH LENGTH (6888)	The path length appears on the display.  Note! This function is not available unless INSERTION was selected in the function MEASUREMENT. Display: max. 5-digit number, including unit (e.g. 200 mm)

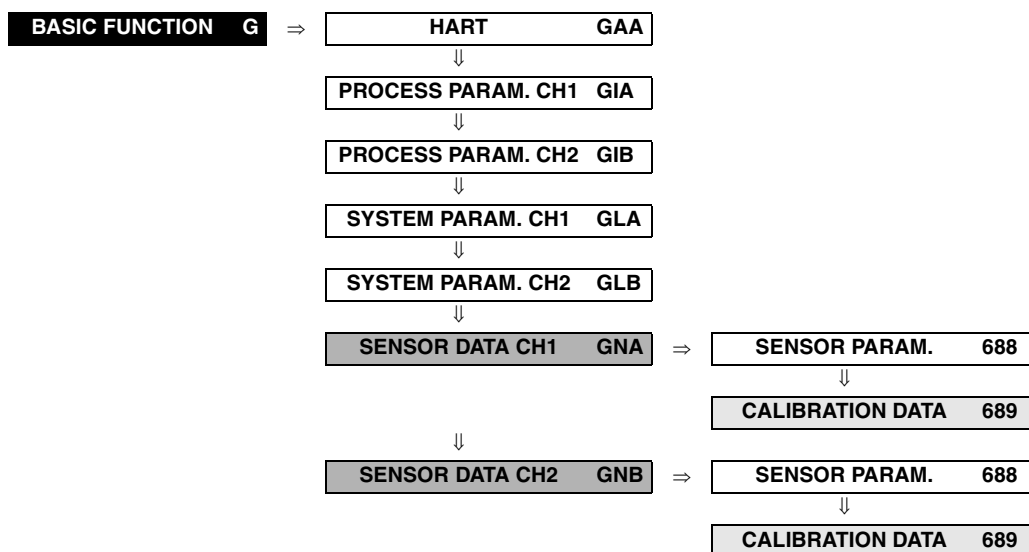9.4.2 Function group CALIBRATION DATA



Functional description	
BASIC FUNCTION → SENSOR DATA (CH1...CH2) → CALIBRATION DATA	
All sensor data (measuring period, overvoltage time etc.) are set at the factory and saved on the S-DAT™ sensor memory chip.	
P-Factor (6890)	This function displays the p-factor. The p-factor indicates the influence of the velocity distribution of the flow profile inside the pipe; it is dependent on the reynolds number. The p-factor varies in the range 0.75 ... 0.95. If the displayed value ranges 0.75 ... 0.94 the measurement will have a reduced linearity..
ZERO POINT (6891)	Use this function to call up or manually change the zero point correction currently being used. User input: 5-digit floating-point number, including unit and sign (e.g. +10.0 ns)
CORRECTION FACTOR (6893)	Use this function to enter a correction factor at the client's site. User input: 5-digit floating-point number
DEVIATION SENSOR DISTANCE (6894)	Use this function to enter a deviation value for the sensor distance. Note! This option is not available unless INSERTION was selected in the function MEASUREMENT (6880). User input: 5-digit floating-point number, including unit and sign (e.g. +2.000 mm) Factory setting: 0 mm
DEVIATION ARC LENGTH (6895)	Use this function to enter a deviation value for the arc length. Note! This function is not available unless INSERTION was set in the function MEASUREMENT (6880) and the DUAL PATH option was selected in the function SENSOR CONFIGURATION (6882). User input: 5-digit floating-point number, including unit and sign (e.g. +2.000 mm) Factory setting: 0 mm


Functional description	
BASIC FUNCTION → SENSOR DATA (CH1...CH2) → CALIBRATION DATA	
DEVIATION PATH LENGTH (6896)	Use this function to enter a deviation value for the path length.  Note! This option is not available unless INSERTION was selected in the function MEASUREMENT (6880). User input: 5-digit floating-point number, including unit and sign (e.g. +2.000 mm) Factory setting: 0 mm

10 Block SPECIAL FUNCTION

Block	Gruppen	Funktions- gruppen	Funktionen														
SPECIAL FUNCTION (F)	ADV. DIAG (K1,K2,MITT.) (HEA,B,C)p. 119	⇒	CONFIGURA- TION (760) p. 119	⇒	REF. COND.USER (7601) p. 119	⇒	SELECT. REF.COND. (7602) p. 119	⇒	WARNING MODE (7603) p. 120								
		⇕ ⇕															
		⇒	ACQUISITION (761) p. 121	⇒	ACQUISITION MOD. (7610) p. 121	⇒	ACQUI- SITION. PERIODE (7611) p. 121	⇒	DO ACQUISITION (7612) p. 122	⇒	RESET HISTORY (7613) p. 122						
		⇕ ⇕															
		⇒	VOLUME FLOW (763) p. 123	⇒	REFERENCE VALUE (7630) p. 123	⇒	ACTUAL VALUE (7631) p. 123	⇒	MINIMUM VALUE (7632) p. 123	⇒	MAXIMUM VALUE (7633) p. 123	⇒	HISTORY X" (7634) p. 123	⇒	ACTUAL DEVIATION (7635) p. 123	⇒	WARNING LEVEL (7636) p. 123
		⇕ ⇕															
		⇒	FLOW VELOCITY (766) p. 124	⇒	REFERENCE VALUE (7640) p. 124	⇒	ACTUAL VALUE (7641) p. 124	⇒	MINIMUM VALUE (7642) p. 124	⇒	MAXIMUM VALUE (7643) p. 124	⇒	HISTORY X (7644) p. 124	⇒	ACTUAL DEVIATION (7645) p. 124	⇒	WARNING LEVEL (7646) p. 124
		⇕ ⇕															
		⇒	SIGNAL STRENGTH (765) p. 126	⇒	REFERENCE VALUE (7650) p. 126	⇒	ACTUAL VALUE (7651) p. 126	⇒	MINIMUM VALUE (7652) p. 126	⇒	MAXIMUM VALUE (7653) p. 126	⇒	HISTORY X (7654) p. 126	⇒	ACTUAL DEVIATION (7655) p. 126	⇒	WARNING LEVEL (7656) p. 126
		⇕ ⇕															
		⇒	SOUND VELOCITY (766) p. 128	⇒	REFERENCE VALUE (7660) p. 128	⇒	ACTUAL VALUE (7661) p. 128	⇒	MINIMUM VALUE (7662) p. 128	⇒	MAXIMUM VALUE (7663) p. 128	⇒	HISTORY X (7664) p. 128	⇒	ACTUAL DEVIATION (7665) p. 128	⇒	WARNING LEVEL (7666) p. 128
⇕ ⇕																	
		⇒	ACT. TRANSIT TIME (767) p. 130	⇒	REFERENCE VALUE (7670) p. 130	⇒	ACTUAL VALUE (7671) p. 130	⇒	MINIMUM VALUE (7672) p. 130	⇒	MAXIMUM VALUE (7673) p. 130	⇒	HISTORY 0 (7674) p. 130	⇒	ACTUAL DEVIATION (7675) p. 130	⇒	WARNING LEVEL (7676) p. 131
		⇕ ⇕															
		⇒	ACCEPTANCE RATE (768) p. 132	⇒	REFERENCE VALUE (7680) p. 132	⇒	ACTUAL VALUE (7681) p. 132	⇒	MINIMUM VALUE (7682) p. 132	⇒	MAXIMUM VALUE (7683) p. 132	⇒	HISTORY X (7684) p. 132	⇒	ACTUAL DEVIATION (7685) p. 132	⇒	WARNING LEVEL (7686) p. 133

10.1 Group ADVANCED DIAGNOSTICS (CH1,CH2,AVG)

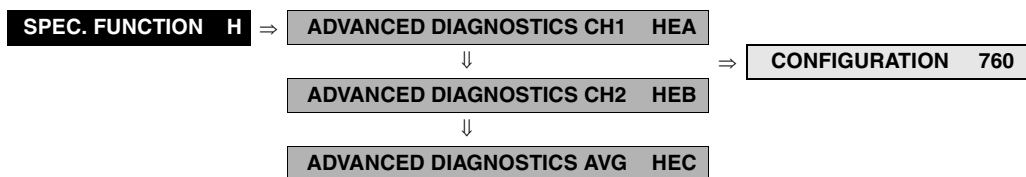
10.1.1 Function group CONFIGURATION



Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS (CH1,CH2,AVG) → CONFIGURATION	
In this function group you define the settings for the additional software functionality “Advanced Diagnostics”. The functionality is available for channel 1 (ADVANCED DIAGNOSTICS CH1) and channel 2 (ADVANCED DIAGNOSTICS CH2) as well as for the average values of the parameters volume flow, flow velocity and sound velocity (ADVANCED DIAGNOSTICS AVG).  Note! For further information on the functional concept of the “Advanced Diagnostics” menu please refer to the Operating Instructions <i>PROline Prosonic Flow 93</i>, BA 070D/06/en/, chapter “Commissioning”	
REFERENCE CONDITION USER (7601)	Use this function to start determining the user reference status. The following values are determined: • VOLUME FLOW • FLOW VELOCITY • SIGNAL STRENGTH • SOUND VELOCITY • ACTUAL TRANSIT TIME • ACCEPTANCE RATE Option: CANCEL START Factory setting: CANCEL  Note! • The values of the user reference status can each be entered manually. These are entered in the REFERENCE VALUE function in the appropriate function group (→ page 123 ff.) • We recommend to determine the user reference status in the REFERENCE CONDITION USER (7601) function. If entering the reference values manually, you should have good knowledge of the “Advanced Diagnostics” functionality. • If you have entered reference values manually via the REFERENCE VALUE function, these are overwritten if START is selected.
SELECT REFERENCE CONDITION (7602)	Use this function to select the reference status which should be used to compare the advanced diagnostics parameters (see function ACQUISITION MODE (7610) on page 121). Option: USER Factory setting: USER

Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS (CH1,CH2,AVG) → CONFIGURATION	
WARNING MODE (7603)	Use this function to determine whether a warning should be generated when there is a deviation between the reference status (USER, see function SELECT REFERENCE CONDITION (7602)) and the current measuring values. The values of the following functions are compared to the reference status : • ACTUAL VALUE (Volume flow) (7631) • ACTUAL VALUE (Flow velocity) (7641) • ACTUAL VALUE (Signal strength) (7651) • ACTUAL VALUE (Sound velocity) (7661) • ACTUAL VALUE (Actual transit time) (7671) • ACTUAL VALUE (Acceptance rate) (7681) Option: OFF ON Factory setting: OFF

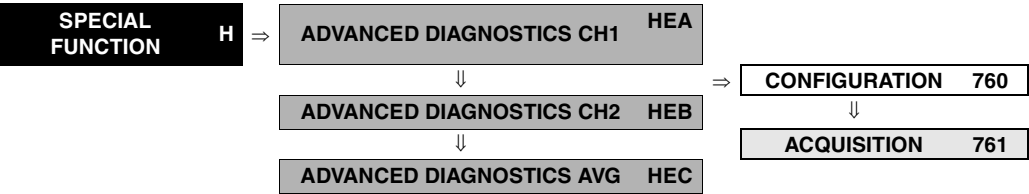
10.1.2 Function group ACQUISITION



Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS (CH1,CH2,AVG) → ACQUISITION	
ACQUISITION MODE (7610)	Use this function to specify whether the advanced diagnostics parameters should be determined on a periodical or single-shot basis.. Option: OFF PERIODICAL SINGLE SHOT Factory setting: OFF  Note! See the Chapter on “Commissioning” in the Operating Instructions <i>PROline Prosonic Flow 93</i>, BA 070D/06/en/,for more information on advanced diagnostics.
ACQUISITION PERIODE (7611)	 Note! This function is not available unless PERIODICAL was selected in the ACQUISITION MODE function (7610). Use this function to specify the time interval after which the advanced diagnostics parameters should be taken. The time intervall starts with the confirmation of the input. User input: 0...99999 s Factory setting: 3600 s  Note! A reference status must be defined prior to determining the diagnostics parameters, see function SELECT REFERENCE CONDITION (7602).


Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS (CH1,CH2,AVG) → ACQUISITION	
DO ACQUISITION (7612)	 Note! This function is not available unless SINGLE SHOT was selected in the ACQUISITION MODE (7610) function Use this function to start determining the advanced diagnostics parameters on a single-shot basis. Option: START – CANCEL Factory setting: CANCEL  Note! A reference status must be defined prior to determining the diagnostics parameters, see function SELECT REFERENCE CONDITION (7602).
RESET HISTORY (7613)	Use this function to delete all history values. Option: NO - YES Factory setting: NO

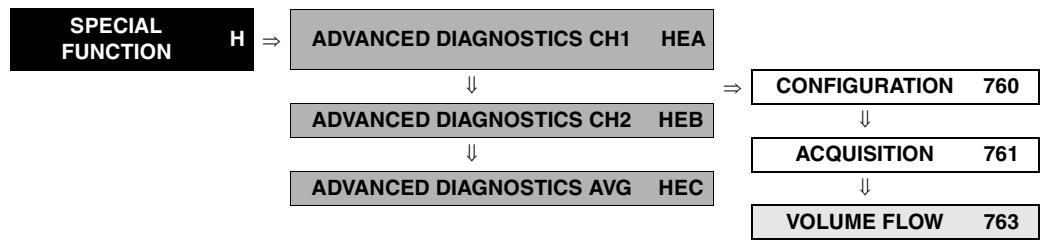10.1.3 Function group VOLUME FLOW



Functional description SPECIAL FUNCTION → ADVANCED DIAGNOSTICS (CH1,CH2,AVG) → VOLUME FLOW	
The volume flow can be monitored in this function group and compared with a reference value. Note! The appropriate unit is taken from the function UNIT VOLUME FLOW (0402) (see page 15).	
REFERENCE VALUE (7630)	The reference value for the volume flow appears on the display. User Interface: 5-digit floating-point number, including unit and sign Note! The reference value is taken from the REFERENCE CONDITION USER (7601) function. It can also be entered manually here. The reference value entered is overwritten if you select the START option in the REFERENCE CONDITION USER (7601) function.
ACTUAL VALUE (7631)	The measured volume flow appears on the display User Interface: 5-digit floating-point number, including unit and sign
MINIMUM VALUE (7632)	The lowest volume flow value since the saved values were last reset appears on the display. User Interface: 5-digit floating-point number, including unit and sign
MAXIMUM VALUE (7633)	The lowest volume flow value since the saved values were last reset appears on the display User Interface: 5-digit floating-point number, including unit and sign
HISTORY X (7634)	Three of the last ten stored volume flow values appear on the display. Please use the -keys to scroll through the list. 'X' indicates the position. E.g. HISTORY 0 shows the latest value at the first position in the display. To reset the list use the function RESET HISTORY (7613). User Interface: 5-digit floating-point number, including unit and sign
ACTUAL DEVIATION (7635)	This function displays deviation between the measured volume flow and the reference values (USER), see page 119, selected in the function SELECT REFERENCE CONDITION (7602). User Interface: 5-digit floating-point number, including unit and sign
WARNING LEVEL (7636)	Note! This function is not available unless ON was selected in the WARNING MODE (7603) function. Use this function to specify a limit value for the volume flow. A notice message is generated if the limit value is exceeded.. User input: 0...99999 % Factory setting: 100 %

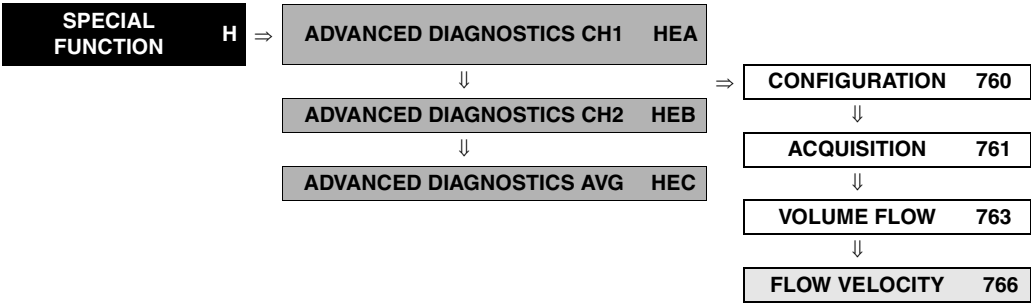
10.1.4 Function group FLOW VELOCITY



Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS (CH1,CH2,AVG) → FLOW VELOCITY	
The flow velocity can be monitored in this function group and compared with a reference value. Note! The appropriate unit is taken from the function UNIT VELOCITY (0425) (see page 17).	
REFERENCE VALUE (7640)	The reference value for the flow velocity appears on the display. User Interface: 5-digit floating-point number, including unit and sign Note! The reference value is taken from the REFERENCE CONDITION USER (7601) function. It can also be entered manually here. The reference value entered is overwritten if you select the START option in the REFERENCE CONDITION USER (7601) function.
ACTUAL VALUE (7641)	The measured flow velocity appears on the display User Interface: 5-digit floating-point number, including unit and sign
MINIMUM VALUE (7642)	The lowest flow velocity value since the saved values were last reset appears on the display. User Interface: 5-digit floating-point number, including unit and sign
MAXIMUM VALUE (7643)	The lowest flow velocity value since the saved values were last reset appears on the display User Interface: 5-digit floating-point number, including unit and sign
HISTORY X (7644)	Three of the last ten stored flow velocity values appear on the display. Please use the -keys to scroll through the list. 'X' indicates the position. E.g. HISTORY 0 shows the latest value at the first position in the display. To reset the list use the function RESET HISTORY (7613). User Interface: 5-digit floating-point number, including unit and sign
ACTUAL DEVIATION (7645)	This function displays deviation between the measured flow velocity and the reference values (USER), see page 119, selected in the function SELECT REFERENCE CONDITION (7602). User Interface: 5-digit floating-point number, including unit and sign

Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS (CH1,CH2,AVG) → FLOW VELOCITY	
WARNING LEVEL (7646)	 Note! This function is not available unless ON was selected in the WARNING MODE (7603) function. Use this function to specify a limit value for the volume flow. A notice message is generated if the limit value is exceeded.. User input: 0...99999 % Factory setting: 100 %

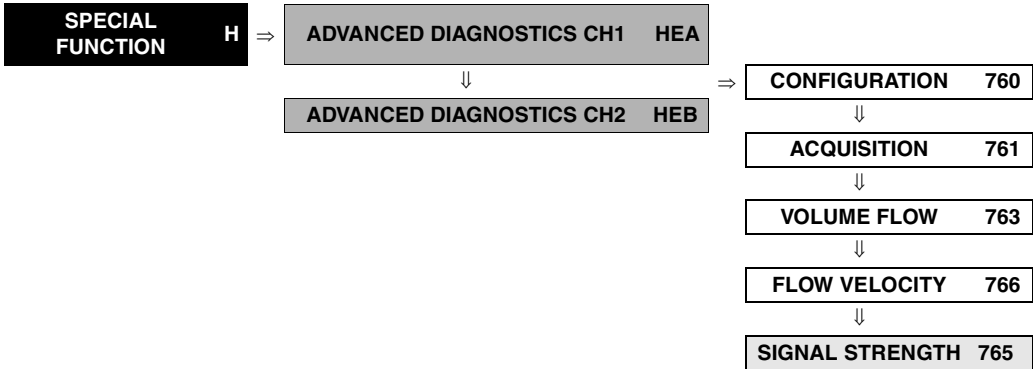
10.1.5 Function group SIGNAL STRENGTH



Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS (CH1,CH2,AVG) → SIGNAL STRENGTH	
The signal strength can be monitored in this function group and compared with a reference value.	
REFERENCE VALUE (7650)	The reference value for the signal strength appears on the display. User Interface: 5-digit floating-point number Note! The reference value is taken from the REFERENCE CONDITION USER (7601) function. It can also be entered manually here. The reference value entered is overwritten if you select the START option in the REFERENCE CONDITION USER (7601) function.
ACTUAL VALUE (7651)	The measured signal strength appears on the display User Interface: 5-digit floating-point number
MINIMUM VALUE (7652)	The lowest signal strength value since the saved values were last reset appears on the display. User Interface: 5-digit floating-point number
MAXIMUM VALUE (7653)	The lowest signal strength value since the saved values were last reset appears on the display User Interface: 5-digit floating-point number
HISTORY X (7654)	Three of the last ten stored signal strength values appear on the display. Please use the -keys to scroll through the list. 'X' indicates the position. E.g. HISTORY 0 shows the latest value at the first position in the display. To reset the list use the function RESET HISTORY (7613). User Interface: 5-digit floating-point number
ACTUAL DEVIATION (7655)	This function displays deviation between the measured signal strength and the reference values (USER), see page 119, selected in the function SELECT REFERENCE CONDITION (7602). User Interface: 5-digit floating-point number, including unit and sign

Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS (CH1,CH2,AVG) → SIGNAL STRENGTH	
WARNING LEVEL (7656)	 Note! This function is not available unless ON was selected in the WARNING MODE (7603) function. Use this function to specify a limit value for the volume flow. A notice message is generated if the limit value is exceeded.. User input: 0...99999 % Factory setting: 100 %

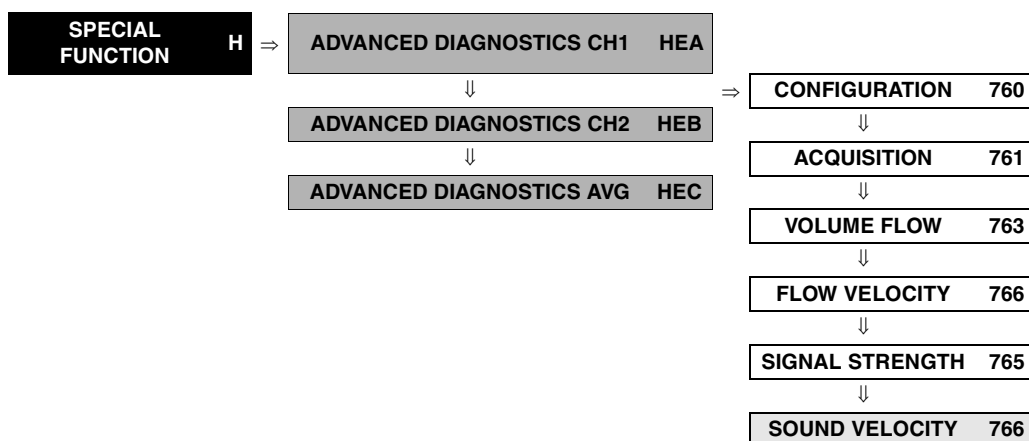
10.1.6 Function group SOUND VELOCITY



Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS (CH1,CH2,AVG) → SOUND VELOCITY	
The sound velocity can be monitored in this function group and compared with a reference value. Note! The appropriate unit is taken from the function UNIT VELOCITY (0425) (see page 17).	
REFERENCE VALUE (7660)	The reference value for the sound velocity appears on the display. User Interface: 5-digit floating-point number, including unit Note! The reference value is taken from the REFERENCE CONDITION USER (7601) function. It can also be entered manually here. The reference value entered is overwritten if you select the START option in the REFERENCE CONDITION USER (7601) function.
ACTUAL VALUE (7661)	The measured sound velocity appears on the display User Interface: 5-digit floating-point number, including unit
MINIMUM VALUE (7662)	The lowest sound velocity value since the saved values were last reset appears on the display. User Interface: 5-digit floating-point number, including unit
MAXIMUM VALUE (7663)	The lowest sound velocity value since the saved values were last reset appears on the display User Interface: 5-digit floating-point number, including unit
HISTORY X (7664)	Three of the last ten stored sound velocity values appear on the display. Please use the -keys to scroll through the list. 'X' indicates the position. E.g. HISTORY 0 shows the latest value at the first position in the display. To reset the list use the function RESET HISTORY (7613). User Interface: 5-digit floating-point number, including unit
ACTUAL DEVIATION (7665)	This function displays deviation between the measured sound velocity and the reference values (USER), see page 119, selected in the function SELECT REFERENCE CONDITION (7602). User Interface: 5-digit floating-point number, including unit

Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS (CH1,CH2,AVG) → SOUND VELOCITY	
WARNING LEVEL (7666)	 Note! This function is not available unless ON was selected in the WARNING MODE (7603) function. Use this function to specify a limit value for the volume flow. A notice message is generated if the limit value is exceeded.. User input: 0...99999 % Factory setting: 100 %

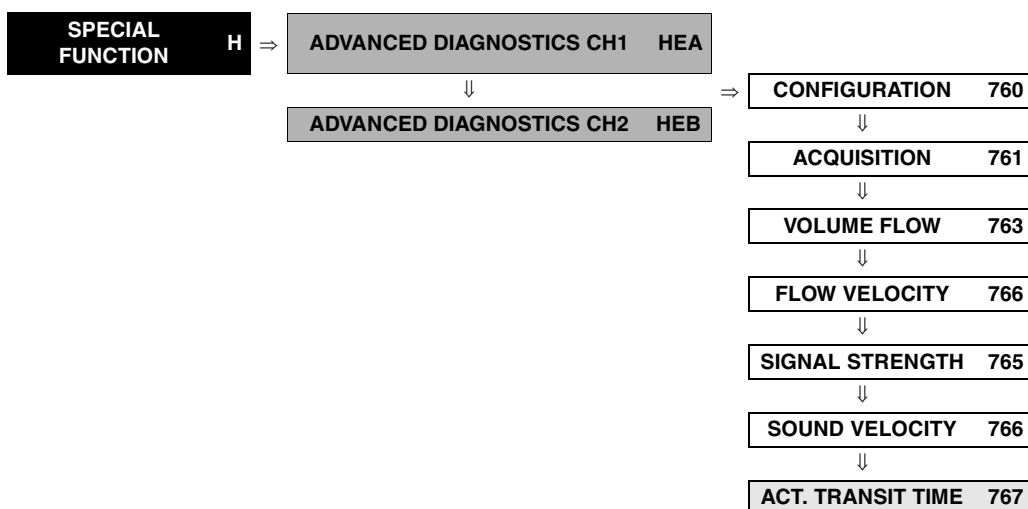
10.1.7 Function group ACTUAL TRANSIT TIME



Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS CH1 → ACTUAL TRANSIT TIME	
The actual transit time can be monitored in this function group and compared with a reference value.	
REFERENCE VALUE (7670)	The reference value for the actual transition time appears on the display. User Interface: 5-digit floating-point number, including unit  Note! The reference value is taken from the REFERENCE CONDITION USER (7601) function. It can also be entered manually here. The reference value entered is overwritten if you select the START option in the REFERENCE CONDITION USER (7601) function.
ACTUAL VALUE (7671)	The measured actual transition time appears on the display User Interface: 5-digit floating-point number, including unit
MINIMUM VALUE (7672)	The lowest actual transition time value since the saved values were last reset appears on the display. User Interface: 5-digit floating-point number, including
MAXIMUM VALUE (7673)	The lowest actual transition time value since the saved values were last reset appears on the display User Interface: 5-digit floating-point number, including
HISTORY X (7674)	Three of the last ten stored actual transition time values appear on the display. Please use the -keys to scroll through the list. 'X' indicates the position. E.g. HISTORY 0 shows the latest value at the first position in the display. To reset the list use the function RESET HISTORY (7613). User Interface: 5-digit floating-point number, including unit
ACTUAL DEVIATION (7675)	This function displays deviation between the measured actual transition time and the reference values (USER), see page 119, selected in the function SELECT REFERENCE CONDITION (7602). User Interface: 5-digit floating-point number, including unit and sign

Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS CH1 → ACTUAL TRANSIT TIME	
WARNING LEVEL (7676)	 Note! This function is not available unless ON was selected in the WARNING MODE (7603) function. Use this function to specify a limit value for the volume flow. A notice message is generated if the limit value is exceeded.. User input: 0...99999 % Factory setting: 100 %

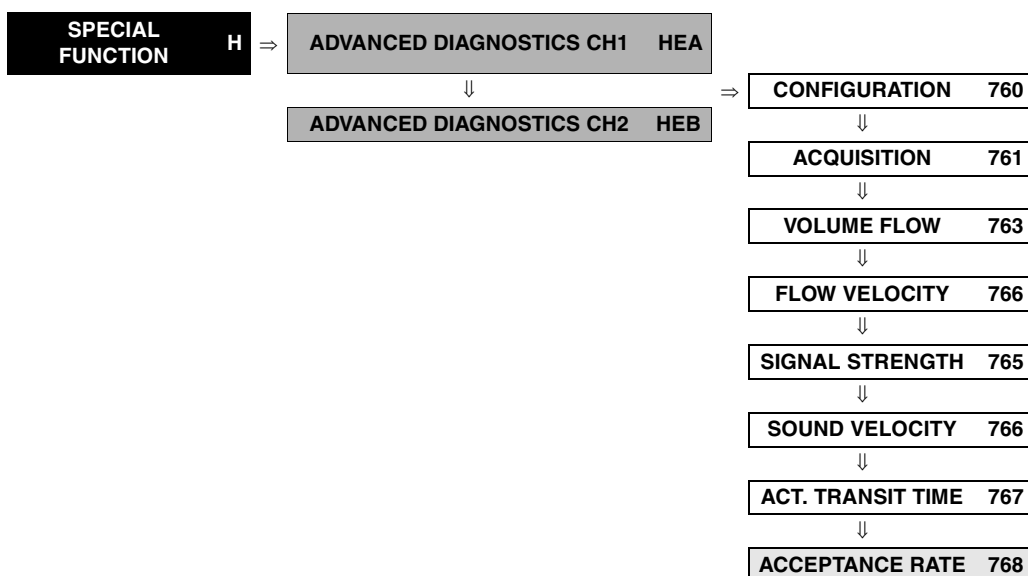10.1.8 Function group ACCEPTANCE RATE



Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS CH1 → ACCEPTANCE RATE	
The acceptance rate can be monitored in this function group and compared with a reference value. The acceptance rate indicates the proportion of measurements which are used in flow calculation.	
REFERENCE VALUE (7680)	The reference value for the acceptance rate appears on the display. User Interface: 5-digit floating-point number Note! The reference value is taken from the REFERENCE CONDITION USER (7601) function. It can also be entered manually here. The reference value entered is overwritten if you select the START option in the REFERENCE CONDITION USER (7601) function.
ACTUAL VALUE (7681)	The measured acceptance rate appears on the display User Interface: 5-digit floating-point number
MINIMUM VALUE (7682)	The lowest acceptance rate value since the saved values were last reset appears on the display. User Interface: 5-digit floating-point number
MAXIMUM VALUE (7683)	The lowest acceptance rate value since the saved values were last reset appears on the display User Interface: 5-digit floating-point number
HISTORY X (7684)	Three of the last ten stored acceptance rate values appear on the display. Please use the -keys to scroll through the list. 'X' indicates the position. HISTORY 0 shows the latest value at the first position in the display. To reset the list use the function RESET HISTORY (7613). User Interface: 5-digit floating-point number
ACTUAL DEVIATION (7685)	This function displays deviation between the measured acceptance rate and the reference values (USER), see page 119, selected in the function SELECT REFERENCE CONDITION (7602). User Interface: 5-digit floating-point number, including unit and sign

Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS CH1 → ACCEPTANCE RATE	
WARNING LEVEL (7686)	 Note! This function is not available unless ON was selected in the WARNING MODE (7603) function. Use this function to specify a limit value for the volume flow. A notice message is generated if the limit value is exceeded.. User input: 0...99999 % Factory setting: 100 %

11 Block SUPERVISION

Block	Groups	Function groups	Functions																			
SUPERVISION (J)	SYSTEM (JAA) p. 135	⇒	CONFIGURA- TION (800) p. 135	⇒	ASSIGN SYST. ERROR (8000) p. 135	⇒	ERROR CATE- GORY (8001) p. 135	⇒	ASSIGN PROC. ERR. (8002) p. 135	⇒	ERROR CATE- GORY (8003) p. 136	⇒	ACKNOW. FAULTS (8004) p. 136	⇒	ALARM DELAY (8005) p. 137							
		⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕							
		OPERATION (804) p. 138	⇒	ACT. SYS. CONDITION (8040) p. 138	⇒	PREV. SYS. COND. (8041) p. 138	⇒	SIM. FAILSAFE MODE (8042) p. 138	⇒	SIM. MEASUREAND (8043) p. 138	⇒	VALUE SIM. MEASUREAND (8044) p. 139										
	SYSTEM CH2 (JAB) p. 135	⇕ ⇕	OPERATION (804) p. 138	⇒	SIM. MEASUREAND (8043) p. 138																	
		VERSION INFO (JCA) p. 140	⇒	SENSOR (820) p. 140	⇒	SERIAL NUMBER (8200) p. 140	⇒	AMP (822) p. 140	⇒	HW REV. NO. AMPLIFIER (8220) p. 140	⇒	SW REV. NO. F-DAT (8225) p. 140	⇒	F-CHIP (824) p. 141	⇒	HW REV. NO. F-CHIP (8242) p. 141	⇒	SW REV. NO. F-CHIP (8244) p. 141	⇒	HW REV. NO. I/O MODULE (8301) p. 141	⇒	SW REV. NO. I/O MODULE (8303) p. 141
		⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕
		I/O MODULE (830) p. 141	⇒	I/O MODULE TYPE (8300) p. 141	⇒	HW REV. NO. I/O MODULE (8301) p. 141	⇒	SW REV. NO. I/O MODULE (8303) p. 141	⇒	HW ID NO. I/O 1 (8322) p. 142	⇒	HW ID NO. I/O 2 (8342) p. 142	⇒	HW ID NO. I/O 3 (8362) p. 142	⇒	HW ID NO. I/O 4 (8382) p. 142						
		INPUT / OUT- PUT 1 (832) p. 142	⇒	I/O TYPE 1 (8320) p. 142	⇒	HW ID NO. I/O 1 (8322) p. 142	⇒	HW ID NO. I/O 2 (8342) p. 142	⇒	HW ID NO. I/O 3 (8362) p. 142	⇒	HW ID NO. I/O 4 (8382) p. 142										
		INPUT / OUT- PUT 2 (834) p. 142	⇒	I/O TYPE 2 (8340) p. 142	⇒	HW ID NO. I/O 2 (8342) p. 142	⇒	HW ID NO. I/O 3 (8362) p. 142	⇒	HW ID NO. I/O 4 (8382) p. 142												
		INPUT / OUT- PUT 3 (836) p. 142	⇒	I/O TYPE 3 (8360) p. 142	⇒	HW ID NO. I/O 3 (8362) p. 142	⇒	HW ID NO. I/O 4 (8382) p. 142														
		INPUT / OUT- PUT 4 (838) p. 142	⇒	I/O TYPE 4 (8380) p. 142	⇒	HW ID NO. I/O 4 (8382) p. 142																
		⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕	⇕ ⇕

11.1 Group SYSTEM (SYSTEM CH2)

11.1.1 Function group CONFIGURATION


SUPERVISION	J	⇒	SYSTEM	JAA	⇒	CONFIGURATION	800
-------------	---	---	--------	-----	---	---------------	-----

Functional description SUPERVISION → SYSTEM → CONFIGURATION	
ASSIGN SYSTEM ERROR (8000)	Use this function to view all system errors and the associated error categories (fault message or notice message). If you select a single system error you can change its error category. User interface: CANCEL List of system errors with an icon preceding each entry.  Note! - Press the  key twice to call up the function ERROR CATEGORY (8001). - Use the  key combination or select "CANCEL" in the system error list to exit the function. - A list of possible system errors is provided in the Operating Instructions <i>PROline Prosonic Flow 93</i>, BA 070D/06/en/
ERROR CATEGORY (8001)	Use this function to define whether a system error triggers a notice message or a fault message. If you select "FAULT MESSAGES", all outputs respond to an error in accordance with their defined error response patterns. Options: NOTICE MESSAGES (display only) FAULT MESSAGES (outputs and display)  Note! Press the  key twice to call up the function ASSIGN SYSTEM ERROR (8000).
ASSIGN PROCESS ERROR (8002)	Use this function to view all process errors and the associated error categories (fault message or notice message). If you select a single process error you can change its error category. User interface: CANCEL List of process errors with an icon preceding each entry.  Note! - Press the  key twice to call up the function ERROR CATEGORY (8003). - Use the  key combination or select "CANCEL" in the process error list to exit the function. - A list of possible process errors is provided in the Operating Instructions <i>PROline Prosonic Flow 93</i>, BA 070D/06/en/

Functional description	
SUPERVISION → SYSTEM → CONFIGURATION	
ERROR CATEGORY (8003)	Use this function to define whether a process error triggers a notice message or a fault message. If you select "FAULT MESSAGES", all outputs respond to an error in accordance with their defined error response patterns. Options: NOTICE MESSAGES (display only) FAULT MESSAGES (outputs and display)  Note! Press the  key twice to call up the function ASSIGN PROCESS ERROR (8002).
ACKNOWLEDGE FAULTS (8004)	Use this function to define the measuring device's response to fault messages. Options: OFF The measuring device resumes normal operation when the fault is rectified. The fault message disappears automatically. ON The measuring device resumes normal operation when the fault is rectified. The fault message has to be acknowledged by pressing the  key on the local display. Factory setting: OFF

Functional description	
SUPERVISION → SYSTEM → CONFIGURATION	
ALARM DELAY (8005)	Use this function to specify a time period for suppressing the appearance of fault or notice messages . Depending on the setting and the type of error, this suppression acts on: • Display • Relay output • Current output • Frequency output User input: 0...100 s (in steps of one second) Factory setting: 0 s  Caution! If this function is activated, error and notice messages are delayed by the time corresponding to the setting before being forwarded to the higher-order controller (process controller, etc.). It is therefore imperative to check in advance in order to make sure whether a delay of this nature could affect the safety requirements of the process. If error and notice messages cannot be suppressed, a value of 0 seconds must be entered here.

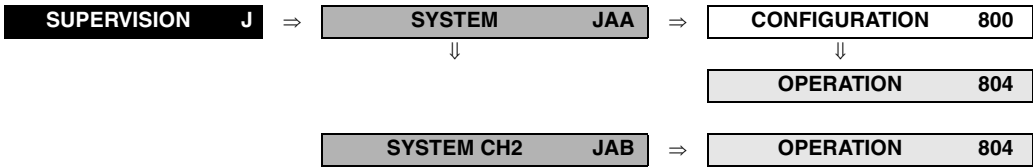11.1.2 Function group OPERATION



Functional description	
SUPERVISION → [CH2] SYSTEM → OPERATION	
ACTUAL SYSTEM CONDITION (8040)	Use this function to check the present system condition. User interface: "SYSTEM OK" or the fault / notice message with the highest priority.
PREVIOUS SYSTEM CONDITIONS (8041)	Use this function to view the fifteen most recent error and notice messages since measuring last started. User interface: The last 15 fault/notice messages appear on the display.
SIMULATION FAILSAFE MODE (8042)	Use this function to set all inputs, outputs and totalizers to their defined failsafe modes, in order to check whether they respond correctly. During this time, the words "SIMULATION FAILSAFE MODE" appear on the display. Options: ON OFF Factory setting: OFF
SIMULATION MEASURAND (8043)	Use this function to set all inputs, outputs and totalizers to their defined flow-response modes, in order to check whether they respond correctly. During this time, the words "SIMULATION MEASURAND" appear on the display. Options: OFF VOLUME FLOW (CH1...CH2) SOUND VELOCITY (CH1...CH2) Factory setting: OFF  Caution! • The measuring device cannot be used for measuring while this simulation is in progress. • The setting is not saved if the power supply fails.

Functional description	
SUPERVISION → [CH2] SYSTEM → OPERATION	
VALUE SIMULATION MEASURAND (8044)	 Note! The function is not visible unless the function SIMULATION MEASURAND (8043) is active. Use this function to specify a selectable value (e.g. 12 m³/s). This is used to test the associated functions in the device itself and downstream signal loops. User input: 5-digit floating-point number, [unit] Factory setting: 0 [unit]  Caution! • The setting is not saved if the power supply fails. • The appropriate unit is taken from the function group SYSTEM UNITS (ACA), (see page 15).
SYSTEM RESET (8046)	Use this function to perform a reset of the measuring system. Options: NO RESTART SYSTEM (restart without interrupting power supply) Factory setting: NO

11.2 Group VERSION INFO

11.2.1 Function group SENSOR

SUPERVISIONJ

⇒

SYSTEMJAA

↓

VERSION INFOJCA

⇒

SENSOR820

Functional description	
SUPERVISION → VERSION INFO → SENSOR	
SERIAL NUMBER (8200)	Use this function to view the serial number of the sensor.

11.2.2 Function group AMPLIFIER

SUPERVISIONJ

⇒

SYSTEMJAA

↓

VERSION INFOJCA

⇒


SENSOR820

↓

AMPLIFIER822


Functional description	
SUPERVISION → VERSION INFO → AMPLIFIER	
HARDWARE REVISION NUMBER AMPLIFIER (8220)	Use this function to view the hardware revision number of the amplifier.
SOFTWARE REVISION NUMBER AMPLIFIER (8222)	Use this function to view the software revision number of the amplifier.
SOFTWARE REVISION NUMBER T-DAT (8225)	Use this function to view the software revision number of the software used to create the content of the T-DAT.

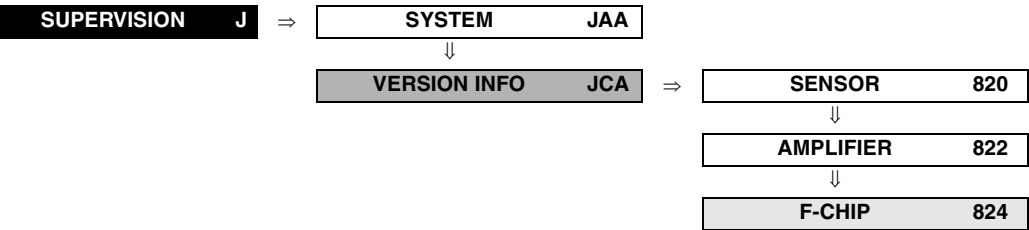11.2.3 Function group F-CHIP™




Functional description	
SUPERVISION → VERSION INFO → F-CHIP	
STATUS F-CHIP (8240)	Use this function to check whether an F-CHIP is installed and which software options are available.
HARDWARE REVISION NUMBER F-CHIP (8242)	Note! This function is not available unless the measuring device is equipped an F-CHIP. Use this function to view the hardware revision number of the F-CHIP.
SOFTWARE REVISION NUMBER F-CHIP (8244)	Note! This function is not available unless the measuring device is equipped an F-CHIP. Use this function to view the software revision number of the F-CHIP.

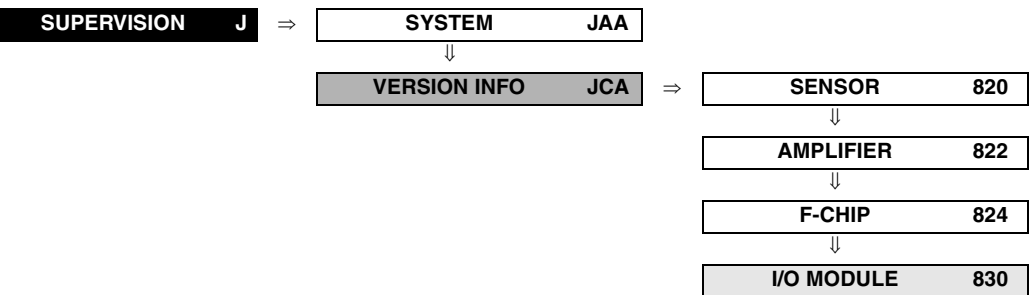11.2.4 Function group I/O MODULE



Functional description	
SUPERVISION → VERSION INFO → I/O MODULE	
I/O MODULE TYPE (8300)	Use this function to view the configuration of the I/O module complete with terminal numbers.
HARDWARE REVISION NUMBER I/O MODULE (8301)	Use this function to view the hardware revision number of the I/O module.
SOFTWARE REVISION NUMBER I/O MODULE (8303)	Use this function to view the software revision number of the I/O module.

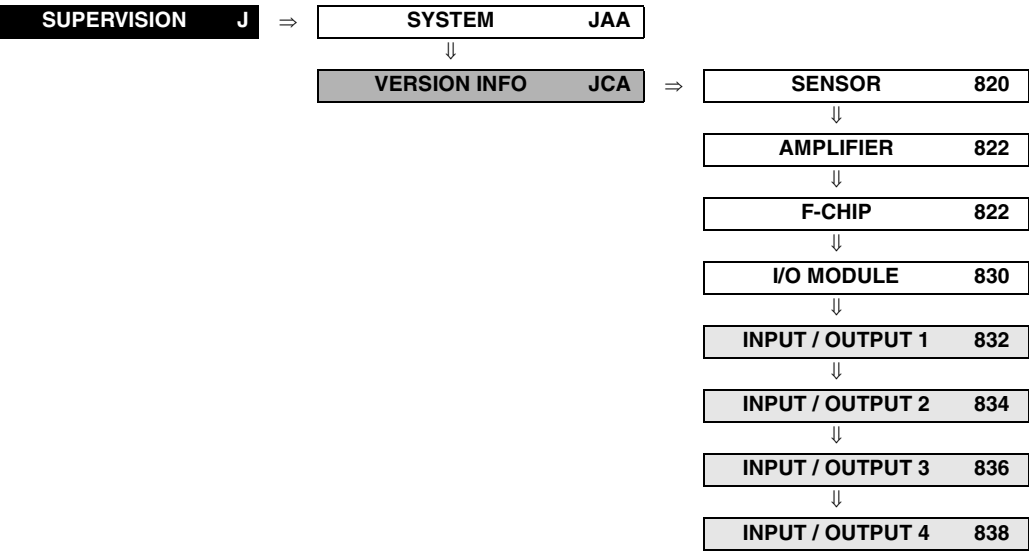11.2.5 Function groups INPUT /OUTPUT 1...4



Functional description	
SUPERVISION → VERSION INFO → INPUT / OUTPUT 1...4	
TYPE INPUT/OUT-PUT: 1 = (8320), 2 = (8340), 3 = (8360), 4 = (8380)	Use this function to view the configuration complete with terminal numbers.
HARDWARE ID NUMBER INPUT / OUTPUT: 1 = (8322), 2 = (8342), 3 = (8362), 4 = (8382)	Use this function to view the hardware ID number.

12 Factory settings

12.1 SI units

12.1.1 Language

Country	Language
Australia	English
Austria	Deutsch
Belgium	Francais
Canada	English
Denmark	Dansk
England	English
Finland	Suomi
France	Francais
Germany	Deutsch
Holland	Nederlands
Hong Kong	English
India	English
International Instruments	English
Italy	Italiano
Japan	Japanese
Malaysia	English
Norway	Norsk
Singapore	English
South Africa	English
Spain	Espanol
Sweden	Svenska
Switzerland	Deutsch
Thailand	English
Hungary	English
USA	English

12.1.2 Length, Temperature

	Unit
Length	mm
Temperature	°C

13 Index function matrix

Blocks

A = MEASURED VARIABLES	11
B = QUICK SETUP	19
C = USER INTERFACE	28
D = TOTALIZER	49
E = OUTPUT	54
F = INPUT	95
G = BASIC FUNCTION	99
H = SPECIAL FUNCTION	118
J = SUPERVISION	134

Groups

AAA = MEASURING VALUES	12
ACA = SYSTEM UNITS	15
AEA = SPECIAL UNITS	18
CAA = CONTROL	29
CCA = MAIN LINE	33
CEA = ADDITIONAL LINE	37
CGA = INFORMATION LINE	43
DAA, DAB, DAC = TOTALIZER (1...3)	50
DJA = HANDLING TOTALIZER	53
EAA, EAB, EAC = CURRENT OUTPUT (1...3)	55
ECA, ECB = PULSE/FREQ. OUTPUT (1...2)	66
EGA, EGB = STATUS/RELAY OUTPUT (1...2)	85
FAA = STATUS INPUT	96
GAA = HART	100
GIA, GIB = PROCESS PARAMETER (CH1...CH2)	102
GLA, GLB = SYSTEM PARAMETER (CH1...CH2)	112
GNA, GNB = SENSOR DATA (CH1...CH2)	113
HEA, HEB, HEC = ADVANCED DIAGNOSTICS (CH1,CH2,AVG)	119
JAA = SYSTEM	135
JAB = SYSTEM CH2	138
JCA = VERSION INFO	140

Function group

000 = MAIN VALUES CH1	12
006 = MAIN VALUES CH2	13
008 = CALCULATED MAIN VALUES	14
040 = CONFIGURATION	15
042 = ADDITIONAL CONFIGURATION	17
060 = ARBITRARY UNIT	18
200 = BASIC CONFIGURATION	29
202 = UNLOCKING/LOCKING	31
204 = OPERATION	32
220 = CONFIGURATION	33

222 = MULTIPLEX	35
240 = CONFIGURATION	37
242 = MULTIPLEX	40
260 = CONFIGURATION	43
262 = MULTIPLEX	46
300 = CONFIGURATION	50
304 = OPERATION	52
400 = CONFIGURATION	55
404 = OPERATION	64
408 = INFORMATION	65
420 = CONFIGURATION	66
430 = OPERATION	82
438 = INFORMATION	84
470 = CONFIGURATION	85
474 = OPERATION	89
478 = INFORMATION	91
500 = CONFIGURATION	96
504 = OPERATION	97
508 = INFORMATION	98
600 = CONFIGURATION	100
604 = INFORMATION	101
640 = CONFIGURATION	102
648 = ADJUSTMENT	104
652 = PIPE DATA	105
654 = LIQUID DATA	109
660 = CONFIGURATION	112
688 = SENSOR PARAMETER	113
689 = CALIBRATION DATA	116
760 = CONFIGURATION	119
761 = ACQUISITION	121
763 = VOLUME FLOW	123
764 = FLOW VELOCITY	124
765 = SIGNAL STRENGTH	126
766 = SOUND VELOCITY	128
767 = ACTUAL TRANSITION TIME	130
768 = ACCEPTANCE RATE	132
800 = CONFIGURATION	135
804 = OPERATION	138
820 = SENSOR	140
822 = AMPLIFIER	140
824 = F-CHIP	141
830 = I/O MODULE	141
832 = INPUT/OUTPUT 1	142
834 = INPUT/OUTPUT 2	142
836 = INPUT/OUTPUT 3	142

838 = INPUT/OUTPUT 4 142

Functions 0...

0001 = VOLUME FLOW CH1 12
 0002 = SOUND VELOCITY CH1 12
 0003 = FLOW VELOCITY CH1 12
 0007 = SIGNAL STRENGTH CH1 12
 0061 = VOLUME FLOW CH2 13
 0062 = SOUND VELOCITY CH2 13
 0063 = FLOW VELOCITY CH2 13
 0067 = SIGNAL STRENGTH CH2 13
 0083 = AVERAGE VOLUME FLOW 14
 0084 = VOLUME FLOW SUM 14
 0085 = VOLUME FLOW DIFFERENCE 14
 0086 = AVERAGE SOUND VELOCITY 14
 0087 = AVERAGE FLOW VELOCITY 14
 0402 = UNIT VOLUME FLOW 15
 0403 = UNIT VOLUME 16
 0422 = UNIT TEMPERATURE 17
 0423 = UNIT VISCOSITY 17
 0424 = UNIT LENGTH 17
 0425 = UNIT VELOCITY 17
 0602 = TEXT ARBITRARY VOLUME 18
 0603 = FACTOR ARBITRARY VOLUME 18

1...

1001 = QUICK SETUP SENSOR 19
 1002 = QUICK SETUP COMMISSIONING 19
 1003 = QUICK SETUP PULSATING FLOW 19
 1009 = T-DAT SAVE/LOAD 20

2...

2000 = LANGUAGE 29
 2002 = DISPLAY DAMPING 29
 2003 = CONTRAST LCD 29
 2004 = X-LINE CALCULATED MAIN VALUES 30
 2020 = ACCESS CODE 31
 2021 = DEFINE PRIVATE CODE 31
 2022 = STATUS ACCESS 31
 2040 = TEST DISPLAY 32
 2200 = ASSIGN 33
 2201 = 100% VALUE 34
 2202 = FORMAT 34
 2220 = ASSIGN 35
 2221 = 100% VALUE 35
 2222 = FORMAT 36
 2400 = ASSIGN 37,38
 2401 = 100% VALUE 38

2402 = FORMAT 38
 2403 = DISPLAY MODE 39
 2420 = ASSIGN 40,41
 2421 = 100% VALUE 41
 2422 = FORMAT 41
 2423 = DISPLAY MODE 42
 2600 = ASSIGN 43,44
 2601 = 100% VALUE 44
 2602 = FORMAT 44
 2603 = DISPLAY MODE 45
 2620 = ASSIGN 46,47
 2621 = 100% VALUE 47
 2622 = FORMAT 47
 2623 = DISPLAY MODE 48
 4700 = ASSIGN RELAY 86

3...

3000 = ASSIGN 50
 3001 = UNIT TOTALIZER 50
 3002 = TOTALIZER MODE 50
 3003 = RESET TOTALIZER 51
 3040 = SUM 52
 3041 = OVERFLOW 52
 3800 = RESET ALL TOTALIZERS 53
 3801 = FAILSAFE ALL TOTALIZERS 53

4...

4000 = ASSIGN CURRENT OUTPUT 55
 4001 = CURRENT SPAN 56
 4002 = VALUE 0_4 mA 57,58
 4003 = VALUE 20 mA 59
 4004 = MEASURING MODE 60,61
 4005 = TIME CONSTANT 62
 4006 = FAILSAFE MODE 63
 4040 = ACTUAL CURRENT 64
 4041 = SIMULATION CURRENT 64
 4042 = VALUE SIMULATION CURRENT 64
 4080 = TERMINAL NUMBER 65
 4200 = OPERATION MODE 66
 4201 = ASSIGN FREQUENCY 66
 4202 = START VALUE FREQUENCY 67
 4203 = END VALUE FREQUENCY 67
 4204 = VALUE-F LOW 68
 4205 = VALUE-F HIGH 68
 4206 = MEASURING MODE 70
 4207 = OUTPUT SIGNAL 71
 4208 = TIME CONSTANT 72
 4209 = FAILSAFE MODE 72

4211 = FAILSAFE VALUE	72	6040 = MANUFACTURER ID.	101
4221 = ASSIGN PULSE	73	6041 = DEVICE ID	101
4222 = PULSE VALUE	73	6400 = ASSIGN LOW FLOW CUT OFF	102
4223 = PULSE WIDTH	74	6402 = ON-VALUE LOW FLOW CUT OFF	102
4225 = MEASURING MODE	75	6403 = OFF-VALUE LOW FLOW CUT OFF	102
4226 = OUTPUT SIGNAL	76	6404 = PRESSURE SHOCK SUPPRESSION	103
4227 = FAILSAFE MODE	77	6480 = ZEROPOINT ADJUSTMENT	104
4241 = ASSIGN STATUS	78	6520 = STANDARD PIPE	105
4242 = ON-VALUE	79	6521 = NOMINAL DIAMETER	105
4243 = SWITCH-ON DELAY	79	6522 = PIPE MATERIAL	106
4244 = OFF-VALUE	79	6523 = REFERENCE VALUE	106
4245 = SWITCH-OFF DELAY	80	6524 = SOUND VELOCITY PIPE	106
4246 = MEASURING MODE	80	6525 = CIRCUMFERENCE	107
4247 = TIME CONSTANT	81	6526 = PIPE DIAMETER	107
4301 = ACTUAL FREQUENCY	82	6527 = WALL THICKNESS	107
4302 = SIMULATION FREQUENCY	82	6528 = LINER MATERIAL	108
4303 = VALUE SIMULATION FREQUENCY	82	6529 = SOUND VELOCITY LINER	108
4341 = ACTUAL STATUS	83	6530 = LINER THICKNESS	108
4342 = SIMULATION SWITCH POINT	83	6540 = LIQUID	109
4343 = VALUE SIMULATION SWITCH POINT	83	6541 = TEMPERATURE	109
4380 = TERMINAL NUMBER	84	6542 = SOUND VELOCITY LIQUID	110
4700 = ASSIGN RELAY	85	6543 = VISCOSITY	110
4701 = ON-VALUE	86	6545 = SOUND VELOCITY NEGATIVE	111
4702 = SWITCH-ON DELAY	86	6546 = SOUND VELOCITY POSITIVE	111
4703 = OFF-VALUE	87	6600 = INSTALLATION DIRECTION SENSOR	112
4704 = SWITCH-OFF DELAY	87	6603 = FLOW DAMPING	112
4705 = MEASURING MODE	88	6605 = POSITIVE ZERO RETURN	112
4706 = TIME CONSTANT	88	6880 = MEASUREMENT	113
4740 = ACTUAL STATUS RELAY	89	6881 = SENSOR TYPE	113
4741 = SIMULATION SWITCH POINT	89	6882 = SENSOR CONFIGURATION	114
4742 = VALUE SIMULATION SWITCH POINT	90	6883 = CABLE LENGTH	114
4780 = TERMINAL NUMBER	91	6884 = POSITION SENSOR	114
5...		6885 = WIRE LENGTH	114
5000 = ASSIGN STATUS INPUT	96	6886 = SENSOR DISTANCE	114
5001 = ACTIVE LEVEL	96	6887 = ARC LENGTH	115
5002 = MINIMUM PULSE WIDTH	96	6888 = PATH LENGTH	115
5040 = ACTUAL STATUS INPUT	97	6890 = P-FACTOR	116
5041 = SIMULATION STATUS INPUT	97	6891 = ZERO POINT	116
5042 = VALUE SIMULATION STATUS INPUT	97	6893 = CORRECTION FACTOR	116
5080 = TERMINAL NUMBER	98	6894 = DEVIATION SENSOR SPACING	116
6...		6895 = DEVIATION ARC LENGTH	116
6000 = TAG NAME	100	6896 = DEVIATION PATH LENGTH	117
6001 = TAG DESCRIPTION	100	7...	
6002 = BUS ADDRESS	100	7601 = REFERENCE CONDITION USER	119
6003 = HART PROTOCOL	100	7602 = SELECT REFERENCE CONDITION	119
6004 = WRITE PROTECTION	100	7603 = WARNING MODE	120
		7610 = ACQUISITION MODE	121

7611 = ACQUISITION PERIODE.	121	8001 = ERROR CATEGORY	135
7612 = DO ACQUISITION.	122	8002 = ASSIGN PROCESS ERROR	135
7613 = RESET HISTORY.	122	8003 = ERROR CATEGORY	136
7630 = REFERENCE VALUE (Volume flow)	123	8004 = ACKNOWLEDGE FAULTS	136
7631 = ACTUAL VALUE (Volume flow)	123	8005 = ALARM DELAY	137
7632 = MINIMUM VALUE (Volume flow)	123	8040 = CURRENT SYSTEM CONDITION	138
7633 = MAXIMUM VALUE (Volume flow)	123	8041 = PREVIOUS SYSTEM CONDITIONS	138
7634 = HISTORY X (Volume flow)	123	8042 = SIMULATION FAILSAFE MODE	138
7635 = ACTUAL DEVIATION (Volume flow)	123	8043 = SIMULATION MEASURAND	138
7636 = WARNING LEVEL (Volume flow)	123	8044 = VALUE SIMULATION MEASURAND	139
7640 = REFERENCE VALUE (Flow velocity)	124	8046 = SYSTEM RESET	139
7641 = ACTUAL VALUE (Flow velocity)	124	8200 = SERIAL NUMBER	140
7642 = MINIMUM VALUE (Flow velocity)	124	8220 = HARDWARE REVISION NUMBER	
7643 = MAXIMUM VALUE (Flow velocity)	124	AMPLIFIER	140
7644 = HISTORY X (Flow velocity)	124	8222 = SOFTWARE REVISION NUMBER	
7645 = ACTUAL DEVIATION (Flow velocity)	124	AMPLIFIER	140
7646 = WARNING LEVEL (Flow velocity)	125	8225 = SOFTWARE REVISION NUMBER T-DAT ..	140
7650 = REFERENCE VALUE (Signal strength)	126	8240 = STATUS F-CHIP	141
7651 = ACTUAL VALUE (Signal strength)	126	8242 = HARDWARE REVISION NUMBER F-CHIP ..	141
7652 = MINIMUM VALUE (Signal strength)	126	8244 = SOFTWARE REVISION NUMBER F-CHIP ..	141
7653 = MAXIMUM VALUE (Signal strength)	126	8300 = I/O MODULE TYPE	141
7654 = HISTORY X (Signal strength)	126	8301 = HARDWARE REVISION NUMBER	
7655 = ACTUAL DEVIATION (Signal strength)	126	I/O MODULE	141
7656 = WARNING LEVEL (Signal strength)	127	8303 = SOFTWARE REVISION NUMBER	
7660 = REFERENCE VALUE (Sound velocity)	128	I/O MODULE	141
7661 = ACTUAL VALUE (Sound velocity)	128	8320 = TYPE INPUT/OUTPUT 1	142
7662 = MINIMUM VALUE (Sound velocity)	128	8322 = HARDWARE ID NUMBER	
7663 = MAXIMUM VALUE (Sound velocity)	128	INPUT/OUTPUT 1	142
7664 = HISTORY X (Sound velocity)	128	8340 = TYPE INPUT/OUTPUT 2	142
7665 = ACTUAL DEVIATION (Sound velocity)	128	8342 = HARDWARE ID NUMBER	
7666 = WARNING LEVEL (Sound velocity)	129	INPUT/ OUTPUT 2	142
7670 = REFERENCE VALUE (Act. transit time) ...	130	8360 = TYPE INPUT/OUTPUT 3	142
7671 = ACTUAL VALUE (Act. transit time)	130	8362 = HARDWARE ID NUMBER	
7672 = MINIMUM VALUE (Act. transit time)	130	INPUT/ OUTPUT 3	142
7673 = MAXIMUM VALUE (Act. transit time)	130	8380 = TYPE INPUT/OUTPUT 4	142
7674 = HISTORY X (Act. transit time)	130	8382 = HARDWARE ID NUMBER	
7675 = ACTUAL DEVIATION (Act. transit time) ...	130	INPUT/ OUTPUT 4	142
7676 = WARNING LEVEL (Act. transit time)	131		
7680 = REFERENCE VALUE (Acceptance rate) ...	132		
7681 = ACTUAL VALUE (Acceptance rate)	132		
7682 = MINIMUM VALUE (Acceptance rate)	132		
7683 = MAXIMUM VALUE (Acceptance rate)	132		
7684 = HISTORY X (Acceptance rate)	132		
7685 = ACTUAL DEVIATION (Acceptance rate) ..	132		
7686 = WARNING LEVEL (Acceptance rate)	133		
8...			
8000 = ASSIGN SYSTEM ERROR	135		

14 Index key words

A

Acceptance rate	132
Access code	31
Acknowledge faults	136
Acquisition	
Function group (Adv. diagnostics)	121
Mode	121
Period	121
Single shot	122
Active level	96
Actual	
Current (current output)	64
Frequency	82
Actual deviation	
Acceptance rate (Advanced diagnostics)	132
Actual transit time (Adv. diagnostics)	130
Flow velocity (Advanced diagnostics)	124
Signal strength (Advanced diagnostics)	126
Sound velocity (Advanced diagnostics)	128
Volume flow (Advanced diagnostics)	123
Actual status	
Relay output	89
Status input	97
Status (pulse/frequency output)	83
Actual system condition	138
Actual transit time	130
Actual value	
Acceptance rate (Advanced diagnostics)	132
Act. transit time (Advanced diagnostics)	130
Flow velocity (Advanced diagnostics)	124
Signal strength (Advanced diagnostics)	126
Sound velocity (Advanced diagnostics)	128
Volume flow (Advanced diagnostics)	123
Additional configuration (system units)	17
Additional line (Gruppe CEA)	
Configuration	37
Multiplex	40
Adjustment	
Function group	104
Zero point	104
Advanced diagnostics (Group HEA,HEB)	
Acceptance rate	132
Actual transit time	130
Signal strength	126
Advanced diagnostics (Group HEA,HEB,HEC)	
Acquisition (Function group)	121
Configuration	119
Flow velocity	124
Sound velocity	128
Volume flow	123

Alarm delay	137
Amplifier (version info)	140
Arbitrary unit	18
Assign	
Additional line	37,38
Additional line (Multiplex)	40
Current output	55
Frequency (Pulse/freq. output)	66
Information line	43,44
Information line (Multiplex)	46
Low flow cut off	102
Main line	33
Main line (Multiplex)	35
Process error	135
Pulse output	73
Relay (relay output)	85
Status input	96
Status (pulse/frequency output)	78
System error	135
Totalizer	50
Average flow velocity	14
Average sound velocity	14
Average volume flow	14

B

Basic configuration (user interface)	29
Basic function (block G)	99
Block	
Basic functions	99
Inputs	95
Measured variables	11
Outputs	54
Quick Setup	19
Special function	118
Supervision	134
Totalizer	49
User interface	28
Bus address	100

C

Calculated main values (displaying)	30
Calibration data	
Arc length deviation	116
Correction factor	116
Path length deviation	117
Sensor data	116
Sensor spacing deviation	116
Zero Point	116
Circumference (Pipe)	107

Configuration	
Additional line	37
Advanced diagnostics	119
Current output (1...3)	55
HART	100
Information line	43
Main line	33
Process parameter (CH1...CH2)	102
Pulse/frequency output	66
Relay output	85
Status input	96
System	135
System parameter (CH1...CH2)	112
System units	15
Totalizer (1...3)	50
Contrast LCD	29
Control (group CAA)	
Basic configuration	29
Operation	32
Unlocking/locking	31
Correction factor	116
Current output 1...3 (Group EAA-EAC)	
Configuration	55
Information	65
Operation	64
Current span	56
D	
Define private code	31
Deviation	
Arc length	116
Path length	117
Sensor spacing	116
Device ID	101
Diagram	
Quick Setup commissioning	23
Quick Setup Pulsating Flow	25
Quick Setup Sensor	21
Diameter (Pipe)	107
Difference	
Volume flow	14
Display	
Calculated main values	30
Display damping	29
Display mode	
Additional line	39
Additional line (Multiplex)	42
Information Line	45
Information line (Multiplex)	48
E	
End value frequency	67
Error category	
Process error	136
System error	135

F	
Factor volume unit	18
Failsafe mode	
All totalizers	53
Current output	63
Frequency output	72
Pulse output	77
F-CHIP (version info)	141
Flow damping	112
Flow velocity	
Advanced diagnostics	124
Channel 1	12
Channel 2	13
Format	
Additional line	38
Additional line (Multiplex)	41
Information line	44
Information line (Multiplex)	47
Main line	34
Main line (Multiplex)	36
Function group	
Acceptance rate	132
Acquisition	121
Actual transit time	130
Additional configuration (system units)	17
Adjustment	104
Amplifier	140
Arbitrary unit (special units)	18
Basic configuration (user interface)	29
Calculated main values	14
Configuration	
Additional line	37
Advanced diagnostics	119
Calibration data	116
Current output (1...3)	55
HART	100
Information line	43
Main line	33
Process parameter (CH1...CH2)	102
Pulse/freq. output	66
Relay output	85
Sensor parameter	113
Status input	96
System	135
System parameter (CH1...CH2)	112
System units	15
Totalizer (1...3)	50
F-CHIP	141
Flow velocity	124
Information	
Current output	65
HART	101
Pulse/Frequency output	84
Relay output	91
Status input	98
Input/output (1...4)	142

Function group (continued)

I/O Module	141
Liquid data	109
Measuring values	
Main values CH1	12
Main values CH2	13
Multiplex	
Additional line	40
Information line	46
Main line	35
Operation	
Current output	64
Pulse/frequency output	82
Relay output	89
Status input	97
System	138
Totalizer	52
User interface	32
Pipe data	105
Sensor	140
Signal strength	126
Sound velocity	128
Unlocking/locking (user interface)	31
Volume flow (Adv. diagnostics)	123

Function matrix

General layout	8
Identification code	9
Overview	10

G

Group

Additional line	37
Advanced Diagnostics	119
Control (User interface)	29
Current output	55
Handling Totalizer	53
HART	100
Information line	43
Main line	33
Measuring values	12
Process parameter (CH1...CH2)	102
Pulse/frequency output	66
Relay output	85
Sensor data (CH1...CH2)	113
Special units	18
Status input	96
System	135
System parameter (CH1...CH2)	112
System units	15
Totalizer (1...3)	50
Version info	140

H

Handling Totalizer (group DJA)	53
Hardware ID number	
Input/Output 1...4	142

Hardware revision number

Amplifier	140
F-CHIP	141
I/O Module	141

HART (group GAA)

Configuration	100
Information	101

History

Acceptance rate (Advanced Diagnostics)	132
Actual transit time (Advanced Diagnostics)	130
Flow velocity (Advanced Diagnostics)	124
Signal strength (Advanced Diagnostics)	126
Sound velocity (Advanced Diagnostics)	128
Volume flow (Advanced Diagnostics)	123

I

Information

Current output	65
Pulse/frequency output	84
Relay output	91
Status input	98

Information line (group CGA)

Configuration	43
Multiplex	46

Inputs (block F)

Input/Output 1...4

Installation direction sensor

I/O Module

L

Language

Liner

Material	108
Sound velocity	108
Thickness	108

Liquid

Sound velocity	110
Sound velocity negative	111
Sound velocity positive	111

Liquid data (function group)

Low flow cut off

M

Main line (group CCA)

Configuration	33
Multiplex	35

Manufacturer number

Maximum value

Acceptance rate (Advanced Diagnostics)	132
Actual transit time (Advanced Diagnostics)	130
Flow velocity (Advanced Diagnostics)	124
Signal strength (Advanced Diagnostics)	126
Sound velocity (Advanced Diagnostics)	128
Volume flow (Advanced Diagnostics)	123

Measured variables (block A)	11
Measurement	113
Measuring mode	
Current output	60,61
Frequency (Pulse/freq. output)	70,71
Pulse output	75
Relay output	88
Status (pulse/frequency output)	80
Measuring values	
Calculated main values	14
Main values CH1	12
Main values CH2	13
Measuring values (group AAA)	12
Minimum pulse width	96
Minimum value	
Acceptance rate (Advanced Diagnostics)	132
Actual transit time (Advanced Diagnostics) ...	130
Flow velocity (Advanced Diagnostics)	124
Signal strength (Advanced Diagnostics)	126
Sound velocity (Advanced Diagnostics)	128
Volume flow (Advanced Diagnostics)	123
Multiplex	
Additional line	40
Information line	46
Main line	35
N	
Nominal diameter	105
O	
Off-value	
Low flow cut off	102
Relay output	87
Status (pulse/frequency output)	79
On-value	
Relay output	86
Status (pulse/frequency output)	79
Operation	
Current output	64
Pulse/frequency output	82
Relay output	89
Status input	97
System	138
Totalizer	52
User interface	32
Operation mode	
Pulse/frequency output	66
Output signal	
Frequency output	71
Pulse output	76
Outputs (block E)	54
Overflow	
Totalizer	52

P

Path length deviation	117
P-factor	116
Pipe circumference	107
Pipe data	105
Sound velocity Liquid	110
Sound velocity negative	111
Sound velocity positive	111
Pipe diameter	107
Pipe material	106
Positive zero return	112
Pressure shock suppression	103
Previous system conditions	138
Process parameter (CH1...CH2), (Group GIA, GIB)	
Adjustment	104
Configuration	102
Fluid	109
Liquid data	109
Pipe data	105
Temperature	109
Pulsating flow	19
Pulse value	73
Pulse width	74
Pulse/Frequency output (group ECA)	
Configuration	66
Information	84
Operation	82

Q

Quick Setup (Block B)	
Commissioning	23
Overview	19
Pulsating flow	25
Sensor	21

R

Reference condition user	119
Reference value	
Acceptance rate (Advanced diagnostics)	132
Actual transit time (Advanced diagnostics) ...	130
Flow velocity (Advanced diagnostics)	124
Signal strength (Advanced diagnostics)	126
Sound velocity (Advanced diagnostics)	128
Volume flow (Advanced diagnostics)	123
Relay output (group EGA)	
Configuration	85
Flow direction	92
General	92
Information	91
Limit value	92
Operation	89
Reset	
All Totalizers	53
Historie	122
Totalizer	51

S

Select reference condition	119
Sensor configuration	114
Sensor data (group GNA, GNB)	
Configuration	113
Sensor configuration	114
Sensor type	113
Sensor parameter	113
Sensor type	113
Sensor (version info)	140
Serial number sensor	140
Signal strength	126
Channel 1	12
Channel 2	13
Simulation	
Current (current output)	64
Failsafe mode	138
Frequency	82
Measured variable	138
Relay output switch point	89
Status input	97
Status (pulse/frequency output)	83
Software revision number	
Amplifier	140
F-CHIP	141
I/O Module	141
T-DAT	140
Sound velocity	128
Channel 1	12
Channel 2	13
Liner	108
Liquid	110
Negative	111
Pipe	106
Positive	111
Special function(Block H)	118
Special units (group AEA)	
Arbitrary unit	18
Standard pipe	105
Start value frequency	67
Status access	31
Status F-CHIP	141
Status input (group FAA)	
Configuration	96
Information	98
Operation	97
Sum	
Totalizer	52
Supervision (Block J)	134
Switching action of the relay output	93
Switch-off delay	
Relay output	87
Status (pulse/frequency output)	80
Switch-on delay	
Relay output	86

Status (pulse/frequency output)	79
System condition	
Actual	138
Previous	138
System parameter (Group GLA, GLB)	
Configuration	112
System units (group ACA)	
Additional configuration	17
Configuration	15
System (group JAA)	
Configuration	135
Operation	138
Reset	139

T

Tag description	100
Tag name	100
T-DAT Save/Load	20
Terminal number	
Current output	65
Pulse/Frequency output	84
Relay output	91
Status input	98
Test display	32
Text volume unit	18
Time constant	
Current output	62
Frequency output	72
Relay output	88
Status (pulse/frequency output)	81
Totalizer Mode	50
Totalizer Reset	51
Totalizer (block D)	49
Totalizer 1...3 (Group DAA-DAC)	
Configuration	50
Operation	52
Type	
Input/Output 1...4	142
I/O Module	141

U

Unit	
Length	17
Temperature	17
Totalizer	50
Velocity	17
Viscosity	17
Volume	16
Volume flow	15
Unlocking/locking (user interface)	31
User interface (block C)	28

V

Value	
Failsafe level	72
Value simulation	
Current (current output)	64
Frequency	82
Measured variable	139
Relay output switch point.	90
Status input	97
Status (pulse/frequency output).	83
Value 0_4 mA	57
Value 20 mA	59
Value-f high	68
Value-f low	68
Version-Info (group JCA)	
Amplifier	140
F-CHIP	141
Input/output 1...4	142
I/O Module	141
Sensor	140
Viscosity	110
Volume flow	
Advanced diagnostics	123
Average	14
Channel 1	12
Channel 2	13
Difference.	14
Sum	14

W

Wall thickness	107
Warning level	
Acceptance rate (Advanced diagnostics).	133
Actual transit time (Advanced diagnostics).	131
Flow velocity (Advanced diagnostics)	125
Signal strength (Advanced diagnostics)	127
Sound velocity (Advanced diagnostics)	129
Volume flow (Advanced diagnostics)	123
Warning mode.	120
Write protection	100

Z

Zero Point	116
Zero point adjustment	104

Numerics

0_4 mA value.	57
100% value flow	
Additional line	38
Additional line (Multiplex).	41
Information line.	44
Information line (Multiplex).	47
Main line.	34
Main line (Multiplex).	35
20 mA value	59

Europe	
Austria – Wien □ Endress+Hauser Ges.m.b.H. Tel. (01) 88 05 60, Fax (01) 88 05 63 35	Romania – Bucharest Romconseng S.R.L. Tel. (01) 4 10 16 34, Fax (01) 4 11 25 01
Belarus – Minsk Belorgsintez Tel. (017) 2 50 84 73, Fax (017) 2 50 85 83	Russia – Moscow □ Endress+Hauser GmbH+Co Tel. (095) 1 58 75 64, Fax (095) 7 84 63 91
Belgium / Luxembourg – Bruxelles □ Endress+Hauser S.A. / N.V. Tel. (02) 2 48 06 00, Fax (02) 2 48 05 53	Slovak Republic – Bratislava Transcom Technik s.r.o. Tel. (2) 44 88 86 90, Fax (2) 44 88 71 12
Bulgaria – Sofia Intertech-Automation Ltd. Tel. (02) 9 62 71 52, Fax (02) 9 62 14 71	Slovenia – Ljubljana □ Endress+Hauser (Slovenija) D.O.O. Tel. (01) 5 19 22 17, Fax (01) 5 19 22 98
Croatia – Zagreb □ Endress+Hauser GmbH+Co. Tel. (01) 6 63 77 85, Fax (01) 6 63 78 23	Spain – Sant Just Desvern □ Endress+Hauser S.A. Tel. (93) 4 80 33 66, Fax (93) 4 73 38 39
Cyprus – Nicosia I+G Electrical Services Co. Ltd. Tel. (02) 48 47 88, Fax (02) 48 46 90	Sweden – Sollentuna □ Endress+Hauser AB Tel. (08) 55 51 16 00, Fax (08) 55 51 16 55
Czech Republic – Praha □ Endress+Hauser Czech s.r.o. Tel. (02) 66 78 42 31, Fax (026) 66 78 41 79	Switzerland – Reinach/BL 1 □ Endress+Hauser Metso AG Tel. (061) 7 15 75 75, Fax (061) 7 11 16 50
Denmark – Søborg □ Endress+Hauser A/S Tel. (70) 13 11 32, Fax (70) 13 21 33	Turkey – Levent/Istanbul Intek Endüstriyel Ölçü ve Kontrol Sistemleri Tel. (0212) 2 75 13 55, Fax (0212) 2 66 27 75
Estonia – Tartu Elvi-Aqua Tel. (7) 30 27 32, Fax (7) 30 27 31	Ukraine – Kiev Photonika GmbH Tel. (44) 2 68 81 02, Fax (44) 2 69 07 05
Finland – Helsinki □ Metso Endress+Hauser Oy Tel. (204) 8 31 60, Fax (204) 8 31 61	Great Britain – Manchester □ Endress+Hauser Ltd. Tel. (0161) 2 86 50 00, Fax (0161) 9 98 18 41
France – Huingue □ Endress+Hauser S.A. Tel. (389) 69 67 68, Fax (389) 69 48 02	Yugoslavia Republic – Beograd Meris d.o.o. Tel. (11) 4 44 29 66, Fax (11) 3 08 57 78
Germany – Weil am Rhein □ Endress+Hauser Messtechnik GmbH+Co. KG Tel. (07621) 9 75 01, Fax (07621) 97 55 55	
Greece – Athens I & G Building Services Automation S.A. Tel. (01) 9 24 15 00, Fax (01) 9 22 17 14	
Hungary – Budapest □ Endress+Hauser Magyarország Tel. (01) 4 12 04 21, Fax (01) 4 12 04 24	
Iceland – Reykjavik Sindra-Stál hf Tel. 5 75 00 00, Fax 5 75 00 10	
Ireland – Clane / County Kildare □ Flomeaco Endress+Hauser Ltd. Tel. (045) 86 86 15, Fax (045) 86 81 82	
Italy – Cernusco s/N, Milano □ Endress+Hauser S.p.A. Tel. (02) 92 19 21, Fax (02) 92 19 23 62	
Latvia – Riga Elekoms Ltd. Tel. (07) 33 64 44, Fax (07) 33 64 48	
Lithuania – Kaunas UAB Agava Ltd. Tel. (03) 7 20 24 10, Fax (03) 7 20 74 14	
Netherlands – Naarden □ Endress+Hauser B.V. Tel. (035) 6 95 86 11, Fax (035) 6 95 88 25	
Norway – Lierskogen □ Endress+Hauser A/S Tel. 32 85 98 50, Fax 32 85 98 51	
Poland – Wrocław □ Endress+Hauser Polska Sp. z o.o. Tel. (071) 7 80 37 00, Fax (071) 7 80 37 60	
Portugal – Cacem □ Endress+Hauser Lda. Tel. (21) 4 26 72 90, Fax (21) 4 26 72 99	

For more Endress+Hauser product please visit: www.ainstru.com
<http://www.endress.com>
 Mail: Sales@ainstru.com

Ecuador – Quito Insetec Cia. Ltda. Tel. (02) 2 26 91 48, Fax (02) 2 46 18 33	El Salvador – San Salvador Automatizacion y Control Industrial de El Salvador, S.A. de C.V. Tel. 2 84 31 51, Fax 2 74 92 48
Guatemala – Ciudad de Guatemala Automatizacion y Control Industrial, S.A. Tel. (03) 34 59 85, Fax (03) 32 74 31	Honduras – San Pedro Sula, Cortes Automatizacion y Control Industrial de Honduras, S.A. de C.V. Tel. 5 57 91 36, Fax 5 57 91 39
Mexico – México, D.F □ Endress+Hauser (México), S.A. de C.V. Tel. (5) 5 55 68 24 07, Fax (5) 5 55 68 74 59	Nicaragua – Managua Automatización y Control Industrial de Nicaragua, S.A. Tel. 2 22 61 90, Fax 2 28 70 24
Peru – Lima Process Control S.A. Tel. (2) 61 05 15, Fax (2) 61 29 78	USA – Greenwood, Indiana □ Endress+Hauser Inc. Tel. (317) 5 35 71 38, Fax (317) 5 35 84 98
USA – Norcross, Atlanta □ Endress+Hauser Systems & Gauging Inc. Tel. (770) 4 47 92 02, Fax (770) 4 47 57 67	Venezuela – Caracas Controval C.A. Tel. (212) 9 44 09 66, Fax (212) 9 44 45 54
Asia	
Azerbaijan – Baku Modcon Systems Tel. (12) 92 98 59, Fax (12) 92 98 59	Brunei – Negara Brunei Darussalam American International Industries (B) Sdn. Bhd. Tel. (3) 22 37 37, Fax (3) 22 54 58
Cambodia – Khan Daun Penh, Phom Penh Comin Khmere Co. Ltd. Tel. (23) 42 60 56, Fax (23) 42 66 22	China – Shanghai □ Endress+Hauser (Shanghai) Instrumentation Co. Ltd. Tel. (021) 54 90 23 00, Fax (021) 54 90 23 03
China – Beijing □ Endress+Hauser (Beijing) Instrumentation Co. Ltd. Tel. (010) 65 88 24 68, Fax (010) 65 88 17 25	Hong Kong – Tsimshatsui / Kowloon □ Endress+Hauser (H.K.) Ltd. Tel. 8 52 25 28 31 20, Fax 8 52 28 65 41 71
India – Mumbai □ Endress+Hauser (India) Pvt. Ltd. Tel. (022) 6 93 83 36, Fax (022) 6 93 83 30	Indonesia – Jakarta PT Grama Bazita Tel. (21) 7 95 50 83, Fax (21) 7 97 50 89
Iran – Tehran Patsa Industry Tel. (021) 8 72 68 69, Fax (021) 8 71 96 66	Israel – Netanya Instrumetrics Industrial Control Ltd. Tel. (09) 8 35 70 90, Fax (09) 8 35 06 19
Japan – Tokyo □ Sakura Endress Co. Ltd. Tel. (0422) 54 06 11, Fax (0422) 55 02 75	

Jordan – Amman A.P. Parpas Engineering S.A. Tel. (06) 5 53 92 83, Fax (06) 5 53 92 05	Kazakhstan – Almaty BEI Electro Tel. (72) 30 00 28, Fax (72) 50 71 30
Saudi Arabia – Jeddah Anasia Industrial Agencies Tel. (02) 6 53 36 61, Fax (02) 6 53 35 04	Kuwait – Safat United Technical Services Est. For General Trading Tel. 2 41 12 63, Fax 2 41 15 93
Lebanon – Jbeil Main Entry Network Engineering Tel. (3) 94 40 80, Fax (9) 54 80 38	Malaysia – Shah Alam, Selangor Darul Ehsan □ Endress+Hauser (M) Sdn. Bhd. Tel. (03) 78 46 48 48, Fax (03) 78 46 88 00
Pakistan – Karachi Speedy Automation Tel. (021) 7 72 29 53, Fax (021) 7 73 68 84	Philippines – Pasig City, Metro Manila □ Endress+Hauser (Philippines) Inc. Tel. (2) 6 38 18 71, Fax (2) 6 38 80 42
Singapore – Singapore □ Endress+Hauser (S.E.A.) Pte. Ltd. Tel. (65) 66 82 22, Fax (65) 66 68 48	Korea, South – Seoul □ Endress+Hauser (Korea) Co. Ltd. Tel. (02) 6 58 72 00, Fax (02) 6 59 28 38
Sultanate of Oman – Ruwi Mustafa & Sultan Sience & Industry Co. L.L.C. Tel. 63 60 00, Fax 60 70 66	Taiwan – Taipei Kingjarl Corporation Tel. (02) 27 18 39 38, Fax (02) 27 13 41 90
Thailand – Bangkok 10210 □ Endress+Hauser (Thailand) Ltd. Tel. (2) 9 96 78 11-20, Fax (2) 9 96 78 10	United Arab Emirates – Dubai Descon Trading L.L.C. Tel. (04) 2 65 36 51, Fax (04) 2 65 32 64
Uzbekistan – Tashkent Im Mexatronika-Tes Tel. (71) 1 91 77 07, Fax (71) 1 91 76 94	Vietnam – Ho Chi Minh City Tan Viet Bao Co. Ltd. Tel. (08) 8 33 52 25, Fax (08) 8 33 52 27

Australia + New Zealand

Australia – Sydney, N.S.W.
 □ Endress+Hauser (Australia) Pty. Ltd.
 Tel. (02) 88 77 70 00, Fax (02) 88 77 70 99

New Zealand – Auckland
 EMC Industrial Group Ltd.
 Tel. (09) 4 15 51 10, Fax (09) 4 15 51 15

All other countries

□ Endress+Hauser GmbH+Co. KG
 Instruments International
 Weil am Rhein, Germany
 Tel. (07621) 9 75 02, Fax (07621) 97 53 45