

Mycom S CLM 153 Conductivity Transmitter

Operating Instructions



Quality made by
Endress+Hauser



ISO 9001

Endress + Hauser

The Power of Know How



First commissioning page 23

Using the menu "Quick Setup" in the chapter "First commissioning" you can configure the transmitter with the most important parameters quickly and easily. Important basic functions such as language, measured variable, temperature compensation and current outputs are configured directly with the help of the on-site display. You carry out further configuration in the corresponding menus as required.

Brief operating instructions



"PARAM": Parameter entry menu
"PARAM" allows you to return to the previous "return field" from any point in the menu.



"DIAG": brings you to the instrument diagnosis menu.



Help page: Press "DIAG" and "PARAM" together



"MEAS": Measuring mode
Press "MEAS" to exit any of the menus ("PARAM", "DIAG", "CAL") without having completed the settings / calibration.



"CAL": Calibration



"E": (Enter): Continue in menu / confirm your selection
LED: "green" = everything OK. "red" = error.



Arrow keys:

- Scroll through items and highlight a selection or
- increment/decrement numbers by one step with "+" / "-".
Next digit: using the "right arrow" (editor type 1) or
- "Activate" with the "right arrow" and scroll through the selection with "+" / "-" (editor type 2).

Table of Contents

1	Safety instructions	4	6.3	Quick Setup	24
1.1	Notes on safety conventions and icons	4	6.4	Description of functions	30
1.2	Designated use	5	7	Maintenance	83
1.3	Installation, Commissioning, Operation	5	7.1	Maintaining the measuring system	83
1.4	Operational safety	5	8	Troubleshooting	87
1.5	Return	6	8.1	Troubleshooting instructions	87
2	Identification	7	8.2	Response of outputs to errors	94
2.1	Device designation	7	8.3	Spare parts	94
2.2	Scope of delivery	8	8.4	Installation and removal of parts	96
2.3	Certificates and approvals	8	8.5	Replacing the device fuses	97
3	Installation	9	8.6	Disposal	97
3.1	Incoming acceptance, transport, storage	9	9	Accessories	98
3.2	Installation conditions	9	10	Technical data	101
3.3	Installation	9	10.1	Input	101
3.4	Post-installation check	11	10.2	Output	102
4	Wiring	12	10.3	Performance characteristics	103
4.1	Quick wiring guide	12	10.4	Environment	104
4.2	Connecting the measuring system	14	10.5	Mechanical construction	104
4.3	Post-connection check	17	11	Appendix	105
5	Operation	18	11.1	Operating matrix	105
5.1	Display and operating elements	18	12	Index	116
5.2	Replaceable memory	22			
6	Commissioning	23			
6.1	Function check	23			
6.2	Switching on the measuring device	23			

1 Safety instructions

1.1 Notes on safety conventions and icons

General safety instructions



Warning!
This symbol alerts you to hazards which could cause serious injuries as well as damage to the instrument if ignored.



Caution!
This symbol alerts you to possible faults which could arise from incorrect operation. They could cause damage to the instrument if ignored.



Note!
This symbol indicates important items of information.

Electrical symbols



DC voltage
A terminal at which DC voltage is applied or through which DC flows.



AC voltage
A terminal at which (sine-form) AC voltage is applied or through which AC flows.



Ground connection
A grounded terminal, which, from the user's point of view, is already grounded using a ground system.



Protective earth terminal
A terminal which must be grounded before other connections may be set up.



Equipotential connection
A connection which must be connected to the grounding system of the equipment. This can be, for example, a potential matching line of a star-shaped grounding system, depending on national or company practice.



 
Double insulation
The equipment is protected with double insulation.



Alarm relay



Input



Output

1.2 Designated use

The transmitter Mycom S CLM 153 is a device for measuring conductivity. The transmitter is designed for measuring or control tasks in applications in the following industries:

- Chemical process systems
- Pharmaceuticals
- Foodstuff industry
- Water treatment and monitoring

The Ex-version of the Mycom S CLM 153 makes operation in hazardous atmospheres also possible (see "Certificates" in the product structure on page 7).

Any other use than the one described here compromises the safety of persons and the entire measuring system and is, therefore, not permitted.

The manufacturer is not liable for damage caused by improper or non-designated use.

1.3 Installation, Commissioning, Operation

Please note the following items:

- Installation, electrical connection, commissioning, operation and maintenance of the measuring system must only be carried out by trained technical personnel. The technical personnel must be authorised for the specified activities by the system operator.
- Technical personnel must have read and understood these Operating Instructions and must adhere to them.
- Before commissioning the entire measuring point, check all the connections for correctness. Ensure that electrical cables and hose connections are not damaged.
- Do not operate damaged products and secure them against unintentional commissioning.
- Measuring point faults may only be rectified by authorised and specially trained personnel.
- If faults can not be rectified, the products must be moved from service and secured against unintentional commissioning.
- Repairs not described in these Operating Instructions may only be carried out at the manufacturer's or by the Endress+Hauser service organisation.

1.4 Operational safety



Warning!

If the device is used for any application other than those described in these Operating Instructions, it may lead to unsafe and improper functioning of the measuring system and is therefore not permitted.

The instrument has been designed and tested according to the state of the art and left the factory in perfect functioning order. The instrument meets all the prevailing regulations and EC directives - see "Technical data".

However, always pay attention to the following points:

- Measuring systems used in Ex areas have a separate document (XA 233C/07/a3) which forms a *component part* of these Operating Instructions. Always follow the installation regulations and the - partly deviating - connection data of the Ex documentation as well. You can find the following symbols on the front page of the additional

Ex documentation (according to approval and test centre
( Europe,  USA,  Canada).

- The measuring device complies with the general safety requirements in accordance with EN 61010, the EMC requirements of EN 61326, and NAMUR Recommendation NE 21, 1998.
- The manufacturer reserves the right to change the technical data in line with technical progress at any time. You can obtain information on the current version of these Operating Instructions and possible additions from your E+H sales centre.

1.4.1 Immunity to interference

This instrument has been tested for electromagnetic compatibility in industrial use according to applicable European standards. It is protected against electromagnetic interference by the following design measures:

- cable screening
- interference suppression filter
- interference suppression capacitors



Warning!

Protection against interference as specified above is valid only for an instrument connected according to the instructions in these Operating Instructions.

1.5 Return

If the transmitter has to be repaired, please return it *cleaned* to the E+H sales centre responsible. You can find the address on the last page of these instructions. For returns please use the original packaging.

With the instrument, please enclose a completed copy of the "Declaration of Contamination" form. You can find this at the end of these Operating Instructions.

2 Identification

2.1 Device designation

2.1.1 Product structure

Conductivity transmitter in aluminium housing for wall mounting with one alarm and two output contacts for NAMUR, ChemoClean and controller functions as well as three binary inputs, logbooks, data loggers, USP limit functions. Plain text operation. 247x167x111 mm (HxWxD). Degree of protection IP 65.

Certificates									
A	Basic equipment: non-Ex								
G	With Atex approval, Atex II (1) 2G EEx em ib[ia] IIC T4								
O	With FM approval; NI Cl. I, Div. 2, Sensor IS Cl. I, Div. 1								
P	With FM approval; NI Cl. I, Div. 2								
S	With CSA approval; NI Cl. I, Div. 2, Sensor IS Cl. I, Div. 1								
T	With TIIS approval								
Measuring input									
1	1 measuring circuit for conductive sensors, conductivity/resistance and temperature								
2	1 measuring circuit for inductive sensors, conductivity/resistance and temperature								
3	2 measuring circuits for conductive sensors, conductivity/resistance and temperature								
4	2 measuring circuits for inductive sensors, conductivity/resistance and temperature								
Measuring output									
A	2 current outputs 0/4 ... 20 mA, passive (Ex and non-Ex)								
B	2 current outputs 0/4 ... 20 mA, active (non-Ex)								
C	HART with 2 current outputs 0/4 ... 20 mA, passive (Ex and non-Ex)								
D	HART with 2 current outputs 0/4 ... 20 mA, active (non-Ex)								
E	PROFIBUS-PA, without current outputs								
Contacts, current input									
0	Without additional contacts								
1	3 additional contacts								
2	2 additional contacts, 1 passive current input (Ex and non-Ex)								
3	2 additional contacts, 1 resistance input (non-Ex)								
4	1 additional contact, 2 passive current inputs (Ex and non-Ex)								
5	1 additional contact, 1 passive current input, 1 active resistance input (non-Ex)								
Power supply									
0	100 ... 230 V AC								
8	24 V AC / DC								
Language versions									
A	E / D								
B	E / F								
C	E / I								
D	E / ES								
E	E / NL								
F	E / J								
Cable connection									
0	Cable glands M 20 x 1.5								
1	Adapter for cable gland NPT ½"								
2	Adapter for cable gland G ½								
Additional equipment									
0	Without additional equipment								
1	Additional equipment: DAT module								
Configuration									
0	Factory settings								
CLM 153-									Complete order code

2.1.2 Nameplate

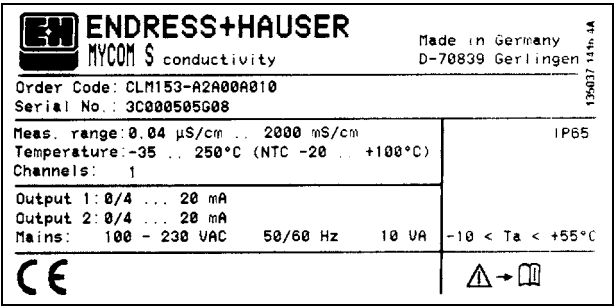


Fig. 1: Example of a nameplate for the transmitter Mycom S CLM 153.

2.2 Scope of delivery

- The scope of delivery comprises:
- Instrument type and version acc. to the nameplate (s. chap. 2.1.2)
 - Operating Instructions BA 234C/07/en (for Ex-system also the XA 233C/07/a3)

2.3 Certificates and approvals

Declaration of conformity

The product meets the legal requirements of the harmonised European standards. Endress+Hauser confirms compliance with the standards by affixing the **CE** symbol.

3 Installation

3.1 Incoming acceptance, transport, storage

- Make sure the packaging is undamaged!
Inform the deliverer about damage to the packaging.
Keep the damaged packaging until the matter has been clarified.
- Make sure the contents are undamaged!
Inform the deliverer about damage to the delivery contents.
Keep the damaged products until the matter has been clarified.
- Use the delivery papers and your order to check that the scope of delivery is complete.
- For storage and transport purposes, pack the instrument so that it is protected against impacts and humidity. The original packaging offers the best protection. Also, keep to the approved ambient conditions (see "Technical data").
- If you have any questions, please contact your supplier or your nearest Endress+Hauser sales centre, (see the back page of these Operating Instructions).

3.2 Installation conditions

3.2.1 Dimensions

You can find the dimensions and lengths of the transmitter in the Technical data on page 101 ff.

3.3 Installation

3.3.1 Installation instructions

- The *standard* use of the Mycom S CLM 153 transmitter is as a field instrument.
- The Mycom S CLM 153 transmitter can be fixed to vertical or horizontal pipes using the round post fixture available from Endress+Hauser (see Accessories). When installing the instrument outdoors, you also require the weather protection cover CYY 101. This cover is compatible with all field instrument installations options.
- Always install the transmitter so that the cable entries point downwards.
- The transmitter can be installed as a panel-mounted unit as well.

3.3.2 Wall mounting



Caution!

- Check that the temperature does not exceed the maximum permitted ambient temperature (–20° ... +60°C). Install the instrument in a shady location. Avoid direct sunlight.
- Mount the wall mounting housing so that the cable entries always point downwards.

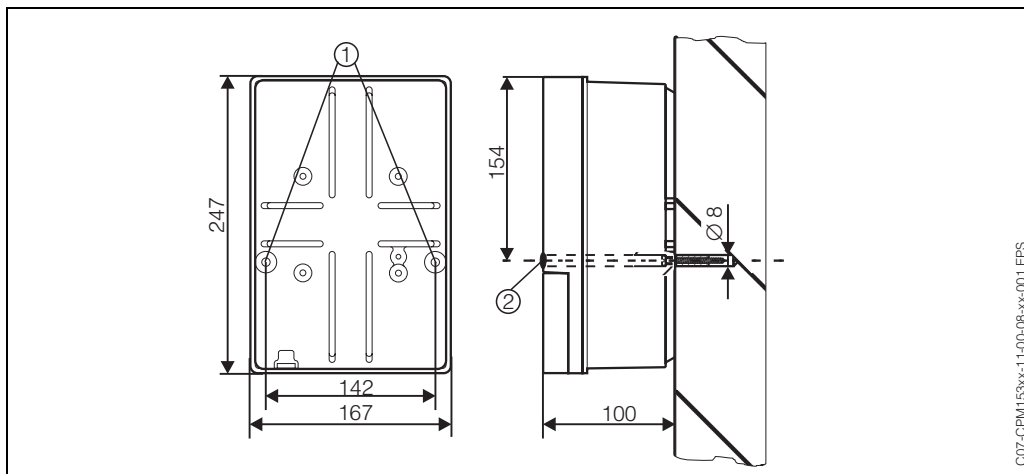


Fig. 2: Dimensions for wall mounting: Fixing screw: dia. 6 mm
Wall plug: dia. 8 mm
1: Fixing drillholes
2: Plastic cover caps

For the wall mounting of the transmitter proceed as follows:

1. Prepare drill holes acc. to fig. 2
2. Push the two fixing screws from the front through the appropriate fixing bores ①.
 - Fixing screws (M6): max. dia. 6.5 mm
 - Screw head: max. dia. 10.5 mm
3. Mount the transmitter housing on the wall as shown.
4. Cover the drill holes with the plastic cover caps ②.

3.3.3 Post mounting and panel mounting

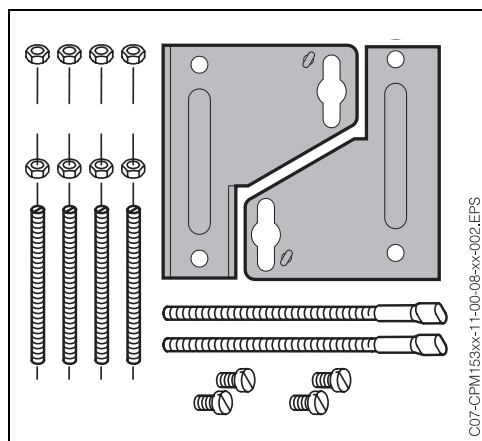


Fig. 3: Mounting kit Mycom S CLM 153

Mount the parts of the mounting kit (see accompanying figure) at the back of the housing as depicted in fig. 4.

Required mounting cutout for panel mounting: 161 x 241 mm
Installation depth: 134 mm
Pipe diameter: max. 70 mm.

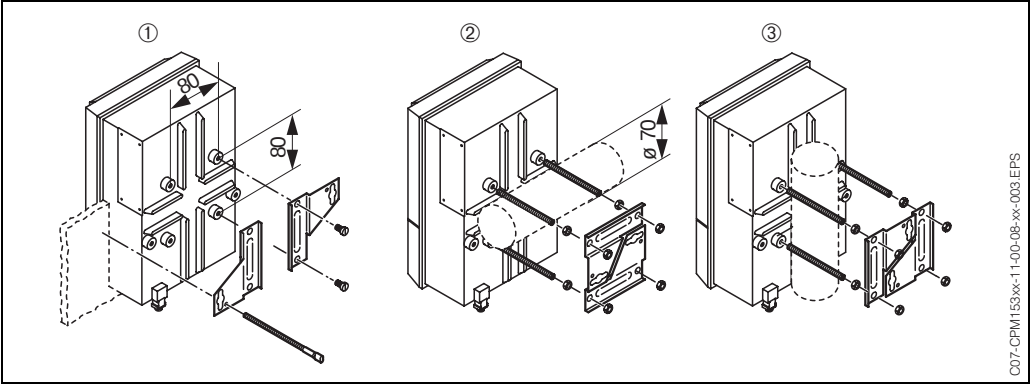


Fig. 4: Panel mounting ① and post mounting for CLM 153, horizontal ② and vertical ③



Caution!
Danger of device failure. For outdoor use, the weather protection cover CYY 101 is required, (see fig. 5 and Accessories).

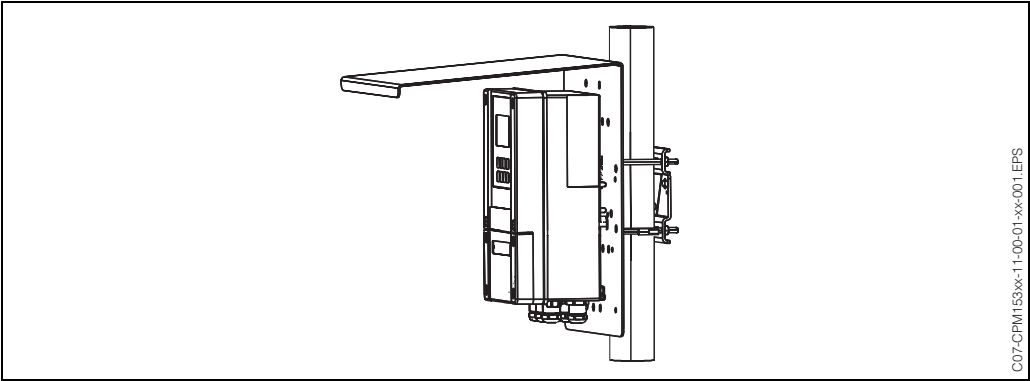


Fig. 5: Post mounting for the transmitter CLM 153 with weather protection cover CYY 101.

3.4 Post-installation check

After installing the transmitter, carry out the following checks:

Instrument status and specifications	Note
Is the transmitter undamaged?	Visual inspection
Installation	Note
Are the measuring point number and the labelling correct?	Visual inspection
Process environment/conditions	Note
Is the transmitter protected against rainfall and direct sunlight?	For outdoor installation, the weather protection cover CYY 101 is required (see Accessories).

4 Wiring

4.1 Quick wiring guide

4.1.1 Wiring diagram

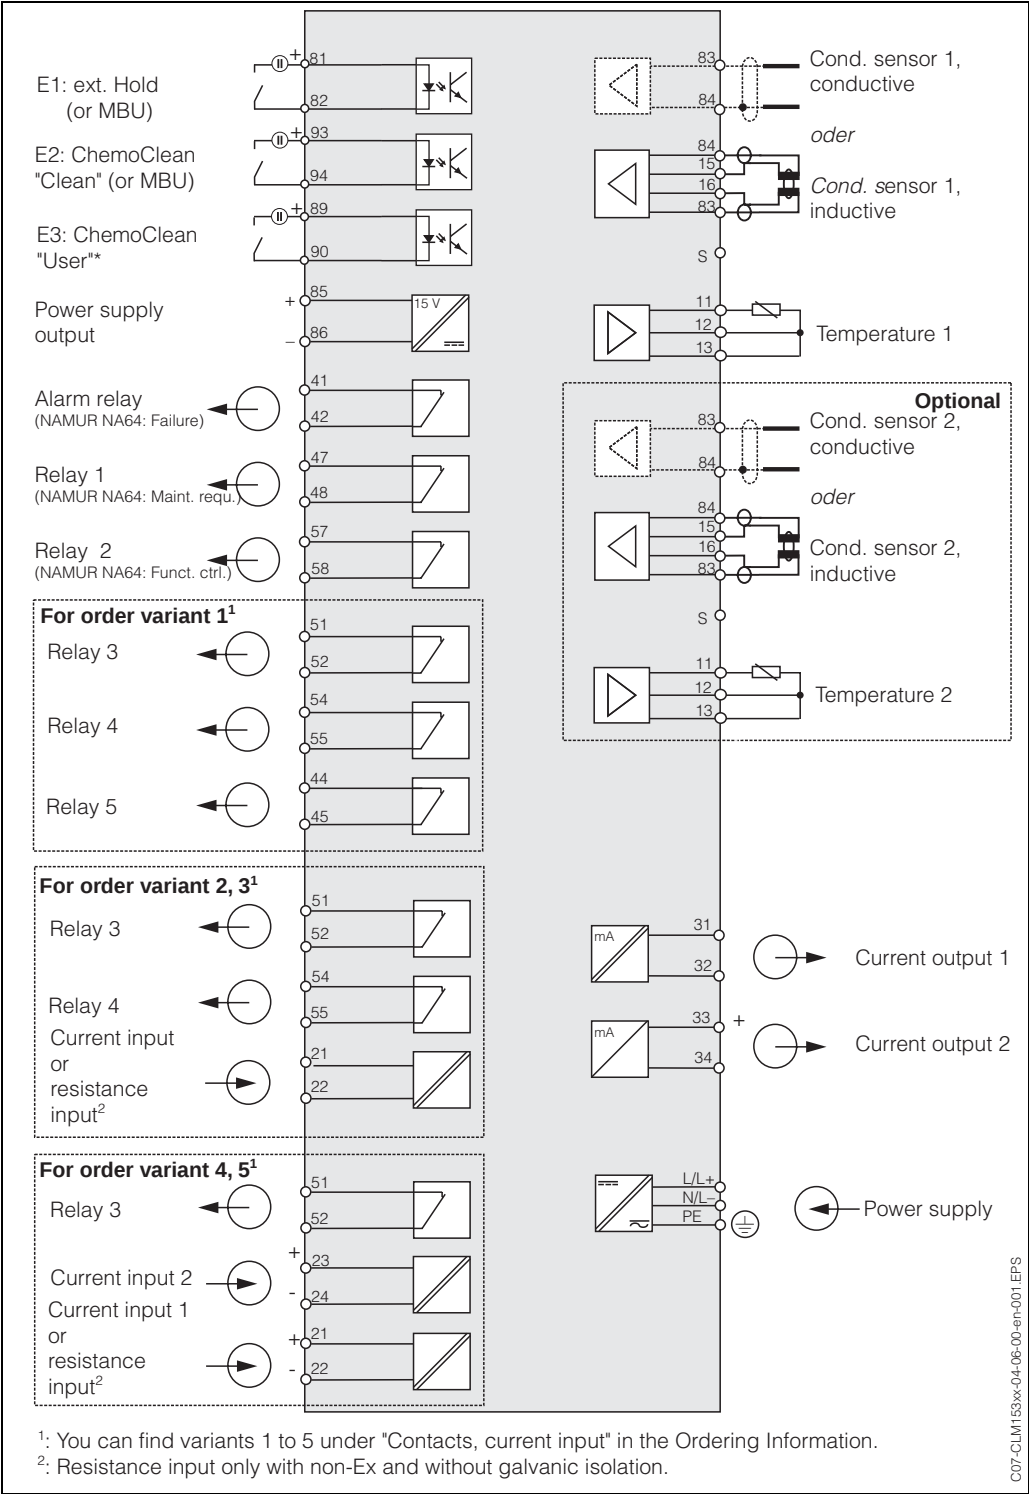


Fig. 6: Electrical connection CLM 153

**Warning!**

A mains disconnecting device must be installed near the instrument and must be identified as the mains disconnection device for the Mycom S CLM 153 (see EN 61010-1).

**Note!**

- Connect unused signal wires from input and output lines to the internal PE rail of the CLM 153.
- The current/resistance input may only be connected using a screened cable, whereby the screen at the transmitter must be applied to the PE rail.

4.1.2 Connection compartment label

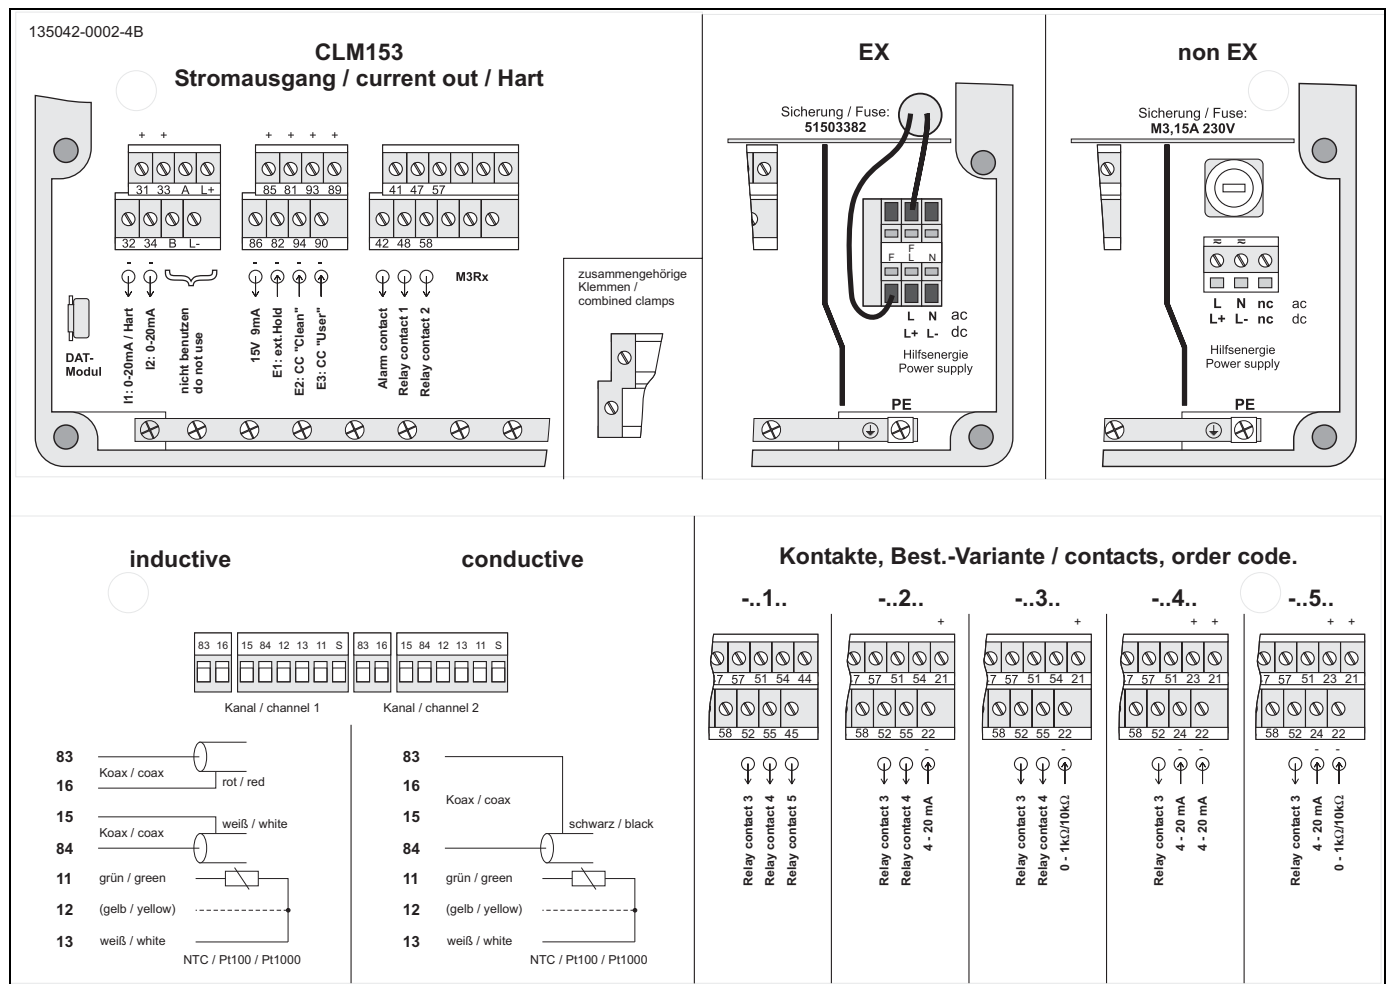


Fig. 7: Connection compartment label (in the connection compartment of the transmitter)

4.2 Connecting the measuring system

Connections in the housing cover

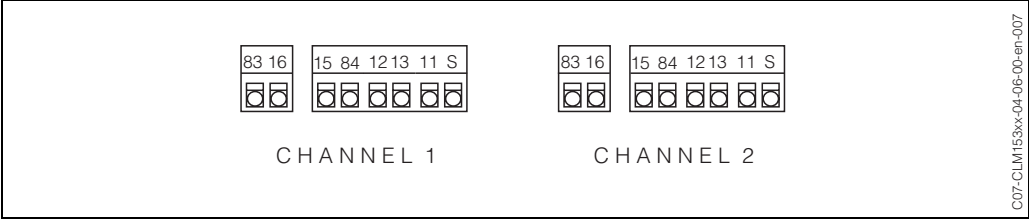


Fig. 8: Terminal arrangement in the housing cover of the transmitter

Connections in the lower housing section

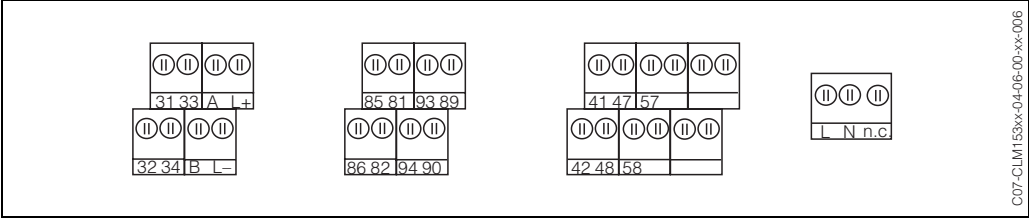


Fig. 9: Terminal arrangement in the lower housing section of the transmitter

4.2.1 Contact assignment

In the basic version, the Mycom S CLM 153 possesses 1 alarm contact and 2 additional contacts. The instrument can be upgraded with the following **additional** equipment:

- 3 contacts
- 2 contacts and 1 current or resistance input (only for non-Ex)
- 1 contact, 2 current inputs or
- 1 contact, 1 current and 1 resistance input (only for non-Ex)

The available contacts can be assigned via the software (see the "PARAM" menu "Set up 1" "Contacts" from page 38).



Note!

- If you use NAMUR contacts acc. to working sheet NA64, the contacts are set to the relays as follows:
 - "Failure" to ALARM
 - "Maintenance required" to RELAY 1 and
 - "Function check" to "RELAY 2".

Selection by software	NAMUR on	NAMUR off
ALARM 	Failure	Alarm
RELAY 1 	Warning when maintenance required	freely selectable
RELAY 2 	Function check	freely selectable

- You can assign up to three relays to the controllers.

4.2.2 Sensor connection and measuring cable

Cable types

You require screened special cables to connect conductivity sensors.

You can use the following multicore and preterminated cable types:

- CYK 71 for conductive conductivity sensors (CYK 71-Ex for Ex applications)
- CPK 9 with TOP68 plug-in head for conductive conductivity sensors with and without integrated temperature sensor (for high-temperature applications, IP 68 / NEMA 6X, also for Ex).
- CLK 5 for inductive conductivity sensors.

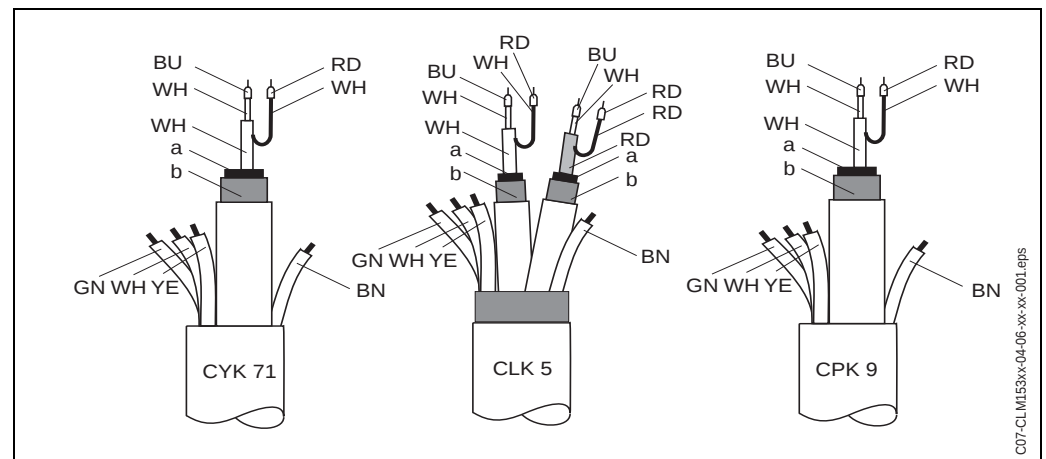


Fig. 10: Preterminated special measuring cables for connecting conductivity sensors.

Cable pin	CYK 71	CLK 5	CPK 9	Terminal
Coax WH: Inner cond. WH	Conductivity	Conductivity	Conductivity	84
Coax WH: Shield WH	Conductivity	Conductivity	Conductivity	15
Coax RD: Inner cond. WH	-	Conductivity	-	83
Coax WH: Shield RD	-	Conductivity	-	16
GN	Temp.	Temp.	Temp.	11
WH	Temp.	Temp.	Temp.	12
YE	Temp.	Temp.	Temp.	13
BN	n.c.	n.c.	n.c.	-
a	Semiconductor	Semiconductor	Semiconductor	-
b	Shield	Shield	Shield	-

Outer screen connection



Caution!
Danger of inaccuracy.
Always protect plugs and terminals against humidity.

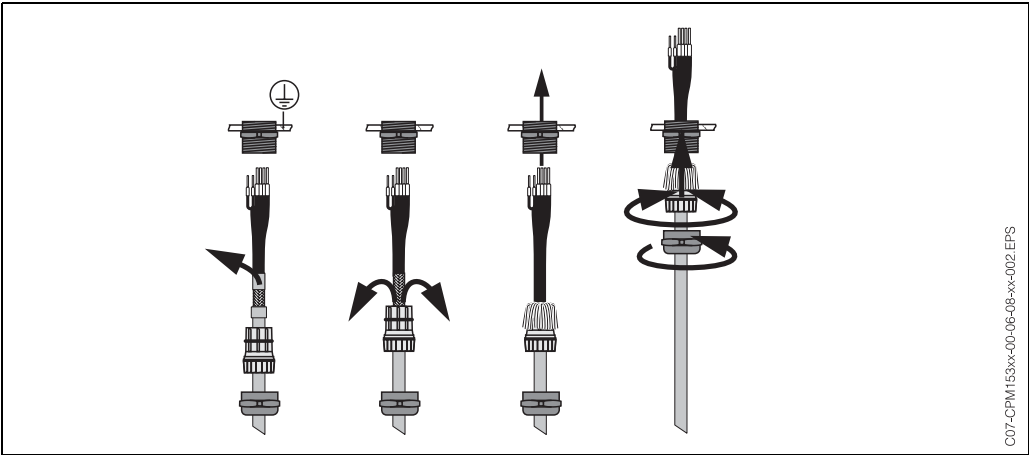


Fig. 11: Outer screen connection for CPK 9 with metal cable gland.
The screen contact is within the cable gland.

Cable extension

If a cable extension is necessary, use

- junction box VBM or VBM-Ex

and the following types of non-terminated measuring cables:

- for CPK 9: cable CYK 71 or CYK 71-Ex
- for CLK 5: cable CLK 5


Maximum cable length

Conductivity measurement, conductive	Conductivity measurement, inductive
max. 100 m with CYK 71 (corresp. 10 nF). When $k=1$, you should reckon with reduced accuracy in the range 200 mS/cm at line resistances $> 5 \Omega$ (5Ω corresponds to approx. 20 m CYK cable). If necessary, use a cable with a larger cross-section.	Max. 55 m (with CLK 5 and sensor cable)
Max. cable length for resistance measurement: 15 m	



Note!

With all cable types, the inner coaxial cable has a black, plastic, semi-conductor layer (arrow), which you must remove.

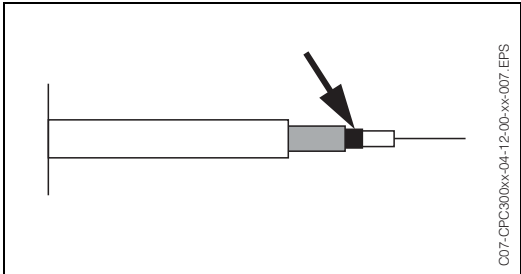

4.3 Post-connection check


After wiring up the electrical connection of the measuring instrument, carry out the following checks:

Instrument status and specifications	Note
Is the measuring instrument or the cable damaged externally?	Visual inspection
Electrical connection	Note
Does the supply voltage match the specifications on the nameplate?	100 V ... 230 V AC long-range 24 V AC / DC
Do the cables used fulfil the required specifications?	Use a genuine E+H cable for sensor and sensor connection, see Accessories chapter.
Are current/resistance inputs connected screened?	
Are the mounted cables strain-relieved?	
Is the cable type route completely isolated?	Along the whole cable length, run the power supply and signal line cables separately to avoid any mutual influence. Cable channels are best.
No loops and cross-overs in the cable run?	
Are the power supply and signal cable correctly connected according to the wiring diagram?	
Are all the screw terminals tightened?	
Are all the cable entries installed, tightened and sealed? Cable run with "water sag"?	"Water sag": cable circuit hanging down so that water can drip off.
Are all the housing covers installed and tightened?	Check seals for damage.

5 Operation

5.1 Display and operating elements

5.1.1 Display reading/symbols

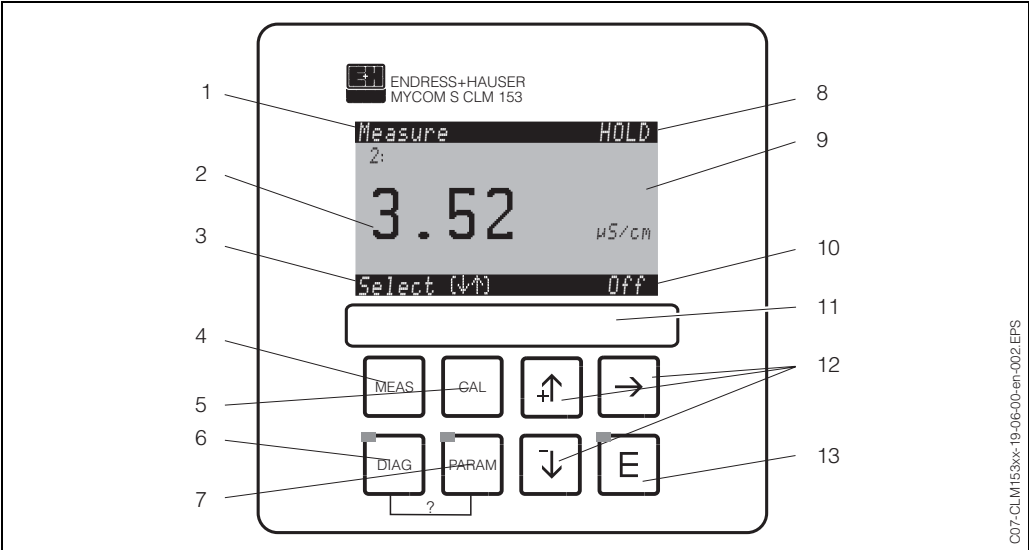

Mycom S CLM 153 user interface

- 1: Current menu
- 2: Current parameter
- 3: Navigation bar: Arrow keys for scrolling, "E" for browsing, note for Cancel
- 4: "Meas" (Measuring mode) key
- 5: "CAL" (Calibration) key
- 6: "DIAG" (Diagnosis menu) key
- 7: "PARAM" (Parameter entry menu) key
- ? = Press DIAG and PARAM simultaneously to open the help pages
- 8: HOLD display, if HOLD active; PS1 = parameter set 1
- 9: Current primary measured value
- 10: "Failure" display, "Warning", if the NAMUR contacts respond
- 11: Labelling strip
- 12: Arrow keys for scrolling and editing
- 13: Enter key

5.1.2 Key assignment



"PARAM" brings you to the menu for configuring the Mycom S CLM 153.


Note!
 "PARAM" allows you to return to the previous "return field" from any point in the menu. These are marked in bold in the menu overview (s. chap. 11.1).

LED: This is the send LED for the service adapter "Optoscope" (see "Accessories").



Brings you to the instrument diagnosis menu.

LED: This is the receive LED for the service adapter "Optoscope" (see "Accessories").

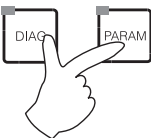

Help:
 Press the "DIAG" and "PARAM" keys simultaneously to open the help page.



"MEAS" switches to Measuring mode. This displays the measured values. Use the arrow keys to scroll through the different measuring menus.



Note!

Press "MEAS" to exit any of the "PARAM", "DIAG", "CAL" menus without terminating the settings / calibration.



"CAL" switches to the calibration menu for calibrating the sensors.

 


"E" (Enter) moves you one step forward in a menu or confirms a selection you made.

LED (status display)

Green: everything OK.

Red: an error has occurred.



- You can scroll through the items with the arrow keys, and then highlight your selection (if there is a choice offered) or
- Increment or decrement numbers by one step with "+" / "-". Move to the next digit with the "right arrow" (editor type 1) or
- "Activate" with the "right arrow" and scroll through the selection with "+" / "-" (editor type 2) (for information on editor types, see page 22).

5.1.3 Measuring menus

You can choose between the different measuring menus. Use the arrow keys to scroll between the different menus.

Two-circuit: Both primary values are displayed.	One-circuit/Two-circuit: The current measured value of circuit 1 is displayed.	Two-circuit: The current measured value of circuit 2 is displayed.	One-circuit/Two-circuit: If you have activated one (both) data logger, you can see the current measured value(s) characteristic here in the record mode (subsequently).
Two-circuit: With a two-circuit device and combined circuits you can display a selected characteristic value and the temperatures of both circuits.	Two-circuit: With a two-circuit device, in this measuring menu you can see both measured values next to each other and their corresponding temperatures.	In this measuring menu, you can see the current and voltage values and the contact states of the relay at a glance (one-circuit device: only primary value 1). Active relay = ☒ (with function) Inactive relay = ☐	One-circuit: With a one-circuit device you can see the primary value (temperature compensated and below non-temperature compensated) with the corresponding temperature.



5.1.4 Data logger

In the CLM 153, you have two data loggers available. With these data loggers you can

- record a parameter with 500 sequential measuring points or
- two parameters each with 250 sequential measuring points.

To be able to use the function, activate the data logger(s) in the "PARAM" menu → "Set up 2" → "Data Logger" (s. page 52). The function is active immediately. You can view the measured values by scrolling through the different measuring menus (see above).

- The current measured values are recorded in Record mode.
- In Scroll mode, you can open saved data by stating the date and time. You can find this under the item "PARAM" → "Set up 2" → "Data logger".

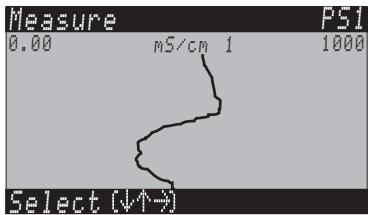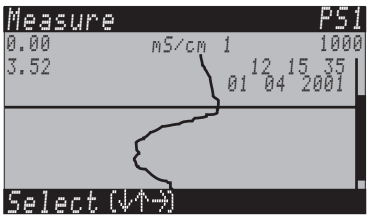	
Record mode	Scroll mode

5.1.5 Operation access authorisation

To protect the transmitter against an unintended or undesired change in the configuration and calibration data, functions can be protected using four-digit access codes.

Access authorisation has the following levels:

Display level (accessible without a code):

The complete menu can be viewed. The configuration cannot be altered. No calibration is possible. On this level, only the control parameters for new processes can be changed in the "DIAG" menu branch.

Maintenance code

Maintenance level (can be protected by the maintenance code):

This code allows access to the calibration menu.
Use this code to operate the temperature compensation item. The factory functions and the internal data can be viewed.
Factory setting Code = 0000, i.e. the levels are not protected.
In case you have mislaid/forgotten the supplied maintenance code, contact your E+H service office.

Specialist code


Specialist level (can be protected by the specialist code):

All menus can be accessed and changed.
Factory setting Code = 0000, i.e. the levels are not protected.
In case you have mislaid/forgotten the supplied specialist code, contact your E+H service.

To activate the codes (= functions locked) see the item "PARAM" → "Set up 1" → "Access codes" (s. page 33). Enter your desired codes here. If the code is activated, you can only edit the protected areas with the rights mentioned above.


**Note!**

- Note down the selected code as well as the universal code and keep it in a place where unauthorised persons do not have access to it.
- If you reset the code to "0000", all the levels are freely accessible again for editing. The code can only be reset by a "specialist".

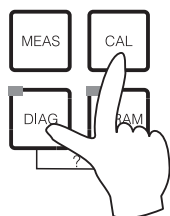Locking the operation

This key combination locks the instrument from in-field configuration operations. To lock it, press "CAL" and "DIAG" simultaneously.

At the code prompt, the code appears as "9999". Only the settings in the "PARAM" menu can be seen.

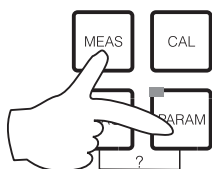Unlocking the operation


Press the "MEAS" and "PARAM" keys simultaneously to unlock the operation.

5.1.6 Description of the menu editor types

At parameter setting, the functions can be selected in two different modes, depending on the setting type.

Editor type E1*Editor type 1 (E1)*


for functions, which can be directly selected from the display. The editing row shows "Edit".

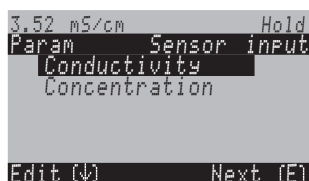

- A selection can be highlighted with the arrow keys.
- Confirm the selection by pressing "E" (=Enter).

Editor type E2*Editor type 2 (E2)*

for settings, which have to be defined more precisely, e.g. day, time. The editing row shows "Select".

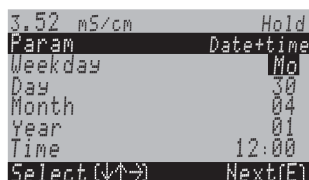

- Use the arrow keys $\uparrow$ and $\downarrow$ to highlight a selection (e.g. "Mo").
- Activate the selected option with the right arrow key $\rightarrow$. *The highlighted option flashes.*
- Scroll through the selection (e.g. the weekdays) with the arrow keys $\uparrow$ and $\downarrow$.
- Confirm the selection by pressing "E" (=Enter).
- If you make your selection and confirm it by pressing "E" (*no flashing display*), you can exit the item by pressing "E".

5.2 Replaceable memory

The DAT module is a memory device (EEPROM) which is plugged into the connection compartment of the transmitter.

Using the DAT module you can

- *save* the complete settings, the logbooks and the data logger of a transmitter and
- *copy* the complete settings to other CLM 153 transmitters with identical hardware functionality.

This considerably reduces the effort to install or service several measuring points.

6 Commissioning

6.1 Function check



Warning!

Before power-up, make sure there is no danger to the measuring point. Uncontrolled actuated pumps, valves or similar could lead to damage to instruments.



Caution!

- Before switching on, check all the connections again for correctness.
- Make sure that the conductivity sensor and, if necessary, the temperature sensor are in the medium or in a calibration solution, as otherwise no plausible measured value can be displayed.
- Make sure also that the post-connection check has been carried out (s. chap. 4.3).

6.2 Switching on the measuring device

Before first start-up, make sure you understand how to operate the transmitter. You should make particular reference to chapters 1 (Safety instructions) and 5 (Operation).

First commissioning

On first switch-on, the instrument starts automatically with the Quick Setup menu. This asks you about the most important instrument settings. After you close the menu, the instrument is ready for use and measurement in its standard configuration.




Note!



- You must completely run through the Quick Setup menu. If you do not, the instrument will not be operational. If you interrupt Quick Setup, it will start again the next time you start it up until **all** the items have been processed and completed.
- For parameter setting, you have to enter the specialist code (default setting 0000).




6.3 Quick Setup





In this menu, configure the most important transmitter functions required for measurement.






The Quick Setup ist started automatically when starting the instrument. You can open the Quick Setup at any time from the menu structure.
To enter the menu, proceed as follows:



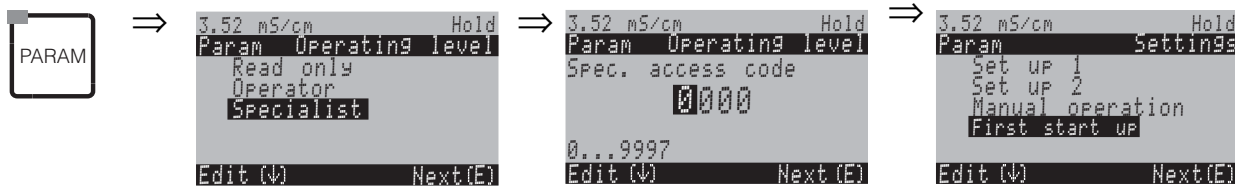


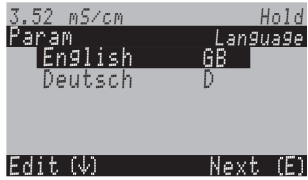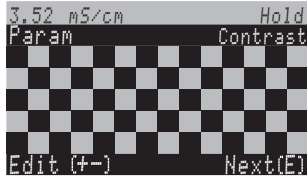
CODE	DISPLAY	CHOICE (default = bold)	INFO
T1		E D	Select language Depending on ordered language version. Language versions: Version -A: E / D Version -B: E / F Version -C: E / I Version -D: E / ES Version -E: E / NL Version -F: E / J
T2			Contrast setting You can increase and reduce the contrast with the +/- keys.
T3		Mo 01 04 01 12:00	Entry of date and time Enter the complete date and time here.

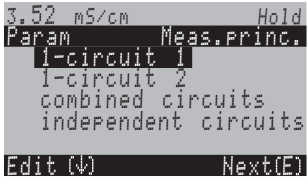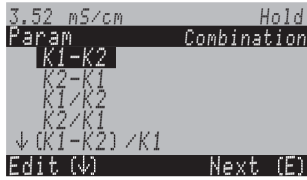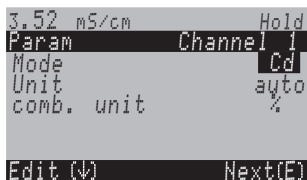CODE	DISPLAY	CHOICE (default = bold)	INFO
T4		One circuit input 1 One circuit input 2 Combined circuits Independent circuits Comb. circuits look-ahead Ind. circuits look-ahead	Select measuring principle (only for two-circuit device) <i>One circuit input 1 / input 2</i> = measurement via sensor input 1 or 2 <i>Combined circuits</i> = measurement via both sensor inputs with the option of creating a characteristic value (see next field) <i>Independent circuits</i> = independent measurement via both sensor inputs <i>Combined / Independent circuits look-ahead</i> = look-ahead control with combined / independent circuits measurement (only for instruments with 2 current outputs)  Note! - If a two-circuit device is configured as such, it keeps these settings even if a transmitter (circuit) is removed or is defective. - If, with a defective transmitter, the error message E006, E007 is not required, then you can switch the device to "one circuit". As each relay is assigned to a circuit (alarm, rel. 1, rel. 2 to input 1; rel. 3, 4, 5 to input 2), you should keep in mind that, in such a case, functions which access the deactivated relay are no longer functionable.
T5		K1 – K2 K2 – K1 K1/K2 K2/K1 (K1 – K2)/K1 (K2 – K1)/K1 (K1 – K2)/K2 (K2 – K1)/K2	Select characteristic value (only combined circuits) Here, you can define a process-related characteristic value as a further output parameter.
T5		Mode: Cd. Unit/ auto medium Comb. unit %	Select operating mode (only combined circuits) If the operating mode changes, the user settings are automatically reset. The settings you make here apply to both measuring circuits. <i>Mode:</i> Cd. (conductivity), resistance (with conductive sensors), concentration (with inductive sensors) <i>Unit</i> (with Cond. operating mode, difference calculation): auto, µS/cm, mS/cm, S/cm, µS/m, mS/m, S/m <i>Unit</i> (with resistance operating mode, difference calculation): auto, kΩ•cm, MΩ•cm, kΩ•m, MΩ•m. <i>Unit</i> with concentration operating mode: %, for customer specific tables. see Chp. 6.4.7 The optimum unit is automatically selected with "auto". <i>Medium</i> (with "concentration" operating mode): NaOH, HNO3, H3PO4, H2SO4, Table 1 to 4 <i>Rel. unit</i> (with ratio calculation): Unit of the characteristic value defined in the previous field (options: none, %)

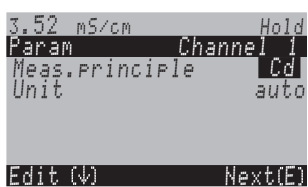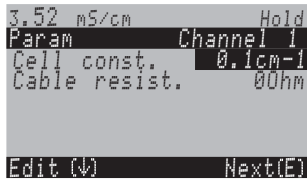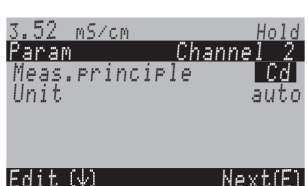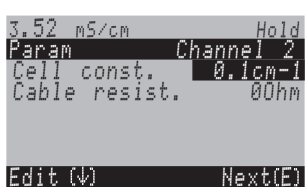CODE	DISPLAY	CHOICE (default = bold)	INFO
T6		Mode Unit/ medium Cond. auto	Select the operating mode measuring circuit 1 (not for combined circuits) If the operating mode changes, the user settings are automatically reset. <i>Mode</i> : Cd. (conductivity), resistance (with conductive sensors), concentration (with inductive sensors) <i>Unit</i> (with cond. / resistance operating mode, difference calculation): auto, mS/cm, μ S/cm / auto, k Ω , M Ω . <i>Unit</i> with concentration operating mode: %, for customer specific tables. see Chp. 6.4.7 The optimum unit is automatically selected with "auto". <i>Medium</i> (with "concentration" operating mode): NaOH, HNO ₃ , H ₃ PO ₄ , H ₂ SO ₄ , Table 1 to 4 <i>Rel. unit</i> (with ratio calculation): Unit of the characteristic value defined in the previous field. Options: none, %
T7		inductive: Cell const.: 1.98cm-1 Install.factor 1 (adaption factor) conductive: Cell const.: 0.1cm-1 Cable resist. 0Ω	Select measuring circuit 1 <i>Cell constant</i> : The exact cell constant is provided in the sensor quality certificate. <i>Cable resistance</i> (for conductive): Enter the cable resistance. <i>Installation factor</i> (adaption factor) (only inductive): Enter the installation factor here.
T8		Mode: Unit/ medium Cond. auto	Select the operating mode for measuring circuit 2 (not for combined circuits; only two circuit) If the operating mode changes, the user settings are automatically reset. <i>Mode</i> : Cd. (conductivity), resistance (with conductive sensors), concentration (with inductive sensors) <i>Unit</i> (with cond. / resistance operating mode): auto, mS/cm, μ S/cm / auto, k Ω , M Ω . <i>Unit</i> with concentration operating mode: %, for customer specific tables. see Chp. 6.4.7 The optimum unit is automatically selected with "auto". <i>Medium</i> (with "concentration" operating mode): NaOH, HNO ₃ , H ₃ PO ₄ , H ₂ SO ₄ , Table 1 to 4
T9		inductive: Cell const.: 1.98cm-1 Install.factor 1 conductive: Cell const.: 0.1cm-1 Cable resist. 0Ω	Select measuring circuit 2 (only two circuit) <i>Cell constant</i> : The exact cell constant is provided in the sensor quality certificate. <i>Cable resistance</i> (for conductive): Enter the cable resistance. <i>Installation factor</i> (adaption factor) (only inductive): Enter the installation factor here.
T10		°C °F	Select temperature unit °C: Degrees Celsius °F: Degrees Fahrenheit

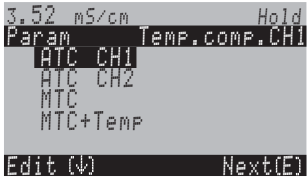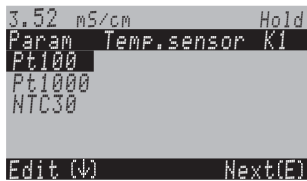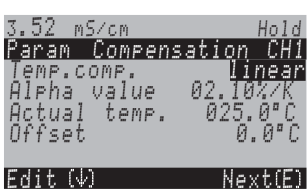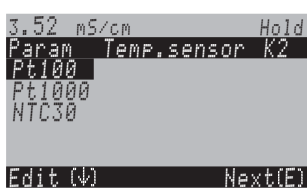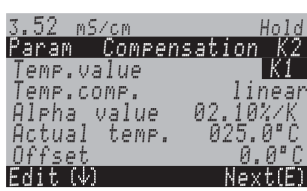CODE	DISPLAY	CHOICE (default = bold)	INFO
T11		ATC CH1 ATC CH2 MTC MTC+Temp	Select temperature compensation channel 1/2 <i>ATC:</i> Automatic temperature compensation via temperature sensor <i>MTC:</i> Temperature compensation via manual value entry <i>MTC+Temp:</i> Temperature compensation via manual temperature entry. The displayed temperature, however, is measured by the temperature sensor.
T12		Pt 100 Pt 1000 NTC 30k	Select temperature sensor channel1
T13		Temp.comp linear Alpha value: 2.1%/K Actual temp.: 25.0°C Offset: 0.0°C	Temperature compensation input 1 <i>Temp. value:</i> Automatic temperature compensation with a temp. sensor input 1 or input 2 <i>Temp. comp.:</i> Selection of the temperature compensation – none, linear, NaCl, Table 1 to 4 <i>Alpha value:</i> Entry of the conductivity coefficient α . <i>Actual temp.:</i> The measured temperature is displayed. <i>Offset:</i> Temperature difference between measured and output temperature (–10 ... +10 °C).
T14		ATC CH1 ATC CH2 MTC MTC+Temp	Select temperature compensation channel 2 (only two circuit)
T15		Pt 100 Pt 1000 NTC 30k	Select temperature sensor input 2 (only two circuit)
T16		Temp.value Input 1 Temp.comp none Alpha value: 2.1%/K Actual temp.: 25.0°C Offset: 0.0°C	Temperature compensation input 2 (only two circuit) <i>Temp. value:</i> Automatic temperature compensation with a temp. sensor input 1 or input 2 <i>Temp. comp.:</i> Selection of the temperature compensation – none, linear, NaCl, Table 1 to 4 <i>Alpha value:</i> Entry of the conductivity coefficient α . <i>Actual temp.:</i> The measured temperature is displayed. <i>Offset:</i> Temperature difference between measured and output temperature (–10 ... +10 °C).

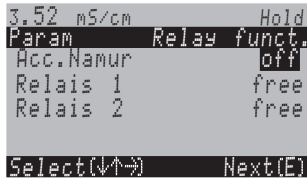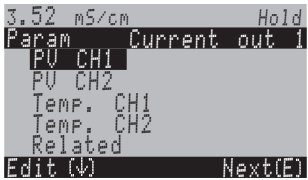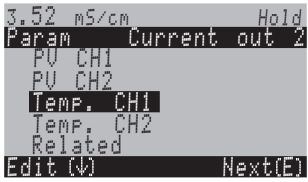CODE	DISPLAY	CHOICE (default = bold)	INFO
T17		NAMUR off Relay 1: free Relay 2: free	Contact functions Depending on the equipment available, you can assign the function of up to 5 relays here. When you switch on the status message acc. to NAMUR NA64, relays 1 and 2 are assigned and are not available for another function, (compare page 14). Selection: Free / Controller / LC / CCW / CCC <i>Controller</i>: Controller control using relay <i>LC</i>: Limit contactor function <i>CCW</i>: ChemoClean water. Water supply for the ChemoClean function. <i>CCC</i>: ChemoClean Cleaner. Cleaner supply for the ChemoClean function. (Together, CCC and CCW form the "ChemoClean" function. You can find information on ChemoClean on page 70)  Note! If you want to use the USP function, select the limit contactor function for a relay and configure this in the limit value menu for USP (p. 68).
T18		Measured value CH1 Measured value CH2 Temperature CH1 Temperature CH2 Related	Select the measured value which should be output at the current output 1. Selection possibilities related to the instrument variant and the selected output. <i>Measured value 1/2</i>: Selection of the primary measured value which you selected, (conduct., conc., resist.) <i>Temperature 1/2</i>: Selection of the temperature to be output to the current output. <i>Related (only for combined circuits)</i>: The characteristic value from Field T5 is output at the current output. <i>Continuous controller (only at current output 2!)</i>: Controller output
T19		Measured value CH1 Measured value CH2 Temperature CH1 Temperature CH2 Related Continuous controller (only at current output 2)	Select measured value which should be output at the current output 2. Selection possibilities see above, <i>Continuous controller (only at current output 2!)</i>: The controller actuating variable is output via the current output (see also Controller menu page 54).  Note! <i>Danger of data loss.</i> If you change the assignment for the current output from "continuous controller" to a different function after you have configured the controllers, the entire controller configuration (s. page 54) is reset to the default values.

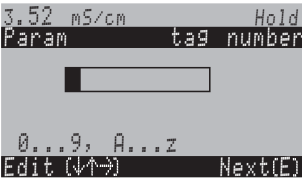CODE	DISPLAY	CHOICE (default = bold)	INFO
T20	 3.52 mS/cm Hold Param tag number 0...9, A...z Edit (↓↑) Next(E)	(0 ... 9; A ... Z)	Enter your customer specific instrument number. 32-digit tag number. This is saved in the DAT module which is obtainable as an option.
T21	 3.52 mS/cm Hold Param Start up restart end Edit (↓) Next(E)	restart end	Exit Quick Setup? <i>restart</i> = Run through settings in Fields T1-T22 again <i>end</i> = Save the settings in Fields T1-T22 and exit Quick Setup.


6.4 Description of functions

6.4.1 Set up 1 – Sensor input

In this menu, you can change the measured value acquisition settings, such as the operating mode, the measuring principle, or the electrode type.

Apart from the measured value attenuation, you have already made all the settings in the menu at the first commissioning in Quick Setup (s. page 23). You can change the selected values in this menu.

For the first entry to the parameter setting, you have to insert your specialist code (s. page 20). To enter the menu, proceed as follows:

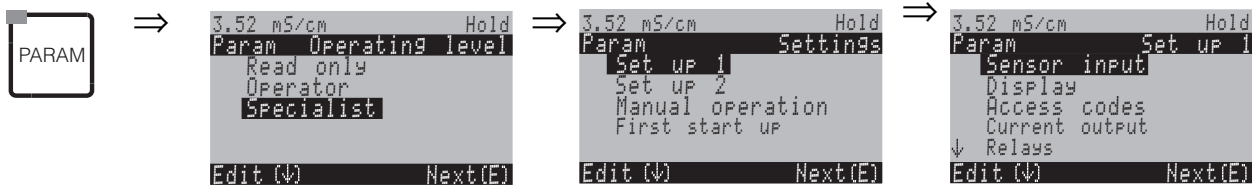



CODE	CHOICE (default = bold)	INFO
A1	One circuit CH1 One circuit CH2 Combined circuits Independent circuits Comb. circuits look-ahead Ind. circuits look-ahead	Select measuring principle (only for two-circuit device) <i>One circuit channel 1 / channel 2</i> = measurement via sensor input 1 or 2 <i>Combined circuits</i> = measurement via both sensor inputs with the option of creating a characteristic value (see next field) <i>Independent circuits</i> = independent measurement via both sensor inputs <i>Combined / Independent circuits look-ahead</i> = look-ahead control with combined / independent circuits measurement (only for instruments with 2 current outputs)  Note! • If a two-circuit device is configured as such, it keeps these settings even if a transmitter (circuit) is removed or is defective. • If, with a defective transmitter, the error message E006, E007 is not required, then you can switch the device to "one circuit". As each relay is assigned to a circuit (alarm, rel. 1, rel. 2 to input 1; rel. 3, 4, 5 to input 2), you should keep in mind that, in such a case, functions which access the deactivated relay are no longer functionable.
A2	CH1 – CH2 CH2 – CH1 CH1/CH2 CH2/CH1 (CH1 – CH2)/CH1 (CH2 – CH1)/CH1 (CH1 – CH2)/CH2 (CH2 – CH1)/CH2	Select characteristic value (only combined circuits) Here, you can define a process-related characteristic value as a further output parameter.

CODE	CHOICE (default = bold)	INFO
A3	Mode: Cd. Unit/ Medium auto Comb. unit %	Select operating mode (only combined circuits) If the operating mode changes, the user settings are automatically reset. The settings you make here apply to both measuring circuits. <i>Mode:</i> Cd. (conductivity), resistance (with conductive sensors), concentration (with inductive sensors) <i>Unit</i> (with Cond. operating mode, difference calculation): auto, $\mu\text{S}/\text{cm}$, mS/cm , S/cm , $\mu\text{S}/\text{m}$, mS/m , S/m <i>Unit</i> (with resistance operating mode, difference calculation): auto, $\text{k}\Omega\cdot\text{cm}$, $\text{M}\Omega\cdot\text{cm}$, $\text{k}\Omega\cdot\text{m}$, $\text{M}\Omega\cdot\text{m}$. <i>Unit</i> with concentration operating mode: %, for customer specific tables. see Chp. 6.4.7 The optimum unit is automatically selected with "auto". <i>Medium</i> (with "concentration" operating mode): NaOH, HNO ₃ , H ₃ PO ₄ , H ₂ SO ₄ , Table 1 to 4 <i>Rel. unit</i> (ratio calculation): Unit of the characteristic value defined in the previous field. Options: none, %
A4	Measuring circuit 1 Measuring circuit 2	Select measuring circuit
Measuring channel 1 (or 2):		
AA1	Mode: Cond. Unit/ medium auto	Select operating mode (not for combined circuits) If the operating mode changes, the user settings are automatically reset. <i>Mode:</i> Cd. (conductivity), resistance (with conductive sensors), concentration (with inductive sensors) <i>Unit</i> (with cond. / resistance operating mode): auto, mS/cm , $\mu\text{S}/\text{cm}$ / auto, $\text{k}\Omega$, $\text{M}\Omega$. <i>Unit</i> with concentration operating mode: %, for customer specific tables. see Chp. 6.4.7 The optimum unit is automatically selected with "auto". <i>Medium</i> (with "concentration" operating mode): NaOH, HNO ₃ , H ₃ PO ₄ , H ₂ SO ₄ , Table 1 to 4
AA2	Cell const.: 1.98cm-1 Cable resist. 00.00 Ω Installation factor 1 (adaption factor)	Select measuring channel 1 or 2 <i>Cell constant:</i> The exact cell constant is provided in the sensor quality certificate. <i>Cable resistance</i> (for conductive): Enter the cable resistance. <i>Installation factor (adaption factor)</i> (only inductive): Enter the installation factor here.
AA3	Measured value: 01 s Temp.: 01 s (01 ... 30 s)	Set measured value damping The mean value over the set time is displayed.

6.4.2 Set up 1 – Display


To enter the menu, proceed as follows:

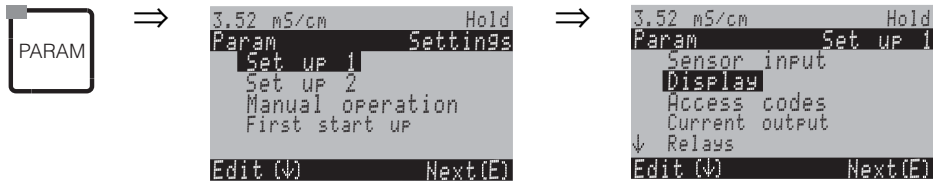

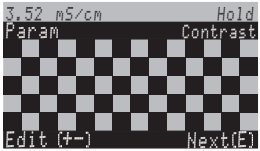CODE	CHOICE (default = bold)	INFO
B1	E D	Select language Depending on ordered language version. Language versions: Version -A: E / D Version -B: E / F Version -C: E / I Version -D: E / ES Version -E: E / NL Version -F: E / J
B2	 Edit (+/-) Next(E)	Contrast setting as necessary You can increase and reduce the contrast of the display with the +/- keys.
B3	Weekday: Su Day: 01 Month: 04 Year: 01 Time: 08:00	Entry of the date and time Enter the complete date and time here.
B5	°C °F	Select temperature unit °C: Degrees Celsius °F: Degrees Fahrenheit
B6	00000000 (0 ... 9; A ... Z)	Enter your customer specific instrument number. 32-digit tag number. This is saved in the DAT module which is obtainable as an option.

6.4.3 Set up 1 – Access codes

To enter the menu, proceed as follows:

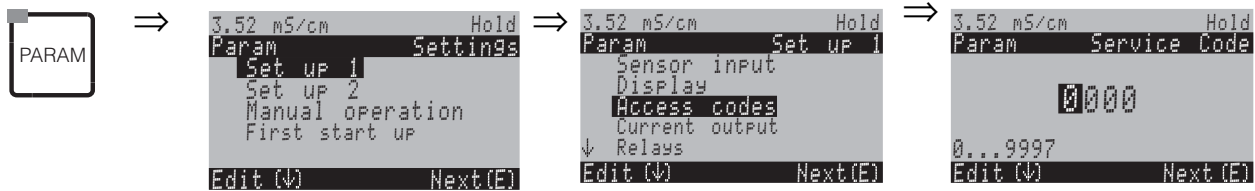

CODE	CHOICE (default = bold)	INFO
D1	0000 (0 ... 9997)	Enter maintenance code In the range 0000 ... 9997, the code can be freely selected. 0000 = no Security Locking.
D2	0000 (0 ... 9997)	Enter specialist code In the range 0000 ... 9997, the code can be freely selected. 0000 = no Security Locking.



Note!
Danger of misuse. Make sure that the codes you enter and the universal code (s. page 20) are protected against misuse by unauthorised persons. Note down the codes and keep the in a place where unauthorised persons do not have access.

6.4.4 Set up 1 – Current outputs

The transmitter is equipped with two current outputs.
To enter the menu, proceed as follows:



CODE	CHOICE (default = bold)	INFO
E1	Current output 1 Current output 2	Select a current output for which the settings apply.
Current output 1 (or 2):		
EA1	PV input 1 PV input 2 Temperature input 1 Temperature input 2 Characteristic value Continuous controller (only at current output 2)	Select the measured value, which should be output at the current output. Selection possibilities related to the instrument variant and the selected output (see selection table above). <i>PV 1/2 (=primary value):</i> Selection of the primary measured value which you selected, (conduct., conc., resist.) <i>Temperature 1/2:</i> Selection of the temperature to be output to the current output. <i>Related (only for combined circuits):</i> The characteristic value from Field A3 is output at the current output. <i>Continuous controller (only at current output 2!):</i> The controller actuating variable is output via the current output (see also Controller menu page 54). Note! <i>Danger of data loss.</i> If you change the assignment for the current output from "continuous controller" to a different function after you have configured the controllers, the entire controller configuration (s. page 54) is reset to the default values.
EA2	!!Caution!! The configuration is changed.	Note in display (for changed setting): Cancel by pressing "PARAM" Continue (= confirm change) by pressing "E"
EA3	0 ... 20mA 4 ... 20 mA	Select current range
EA4	!!Caution!! Current output 0...20mA and error current = 2.4 mA leads to uncontrolled behaviour.	Note in display: Error current is in the measuring current range. When the current range is "0 ... 20 mA" and "Min" is selected under Alarm in Field H1, (see page 44). Recommended combinations: Current range 0...20 mA and error current max (22 mA) or Current range 4...20 mA and error current min (2.4 mA)
EA5	Linear Logarithmic	Select the characteristic Linear: The characteristic is linear from the lower to the upper value. Logarithmic The characteristic is logarithmic from the lower to the upper value.

CODE		CHOICE (default = bold)	INFO
		Linear:	
	EAA1	0/4 mA: 0.000 μS/cm / 00.00 % / -35.0°C 20 mA: 02000 mS/cm / 99.99 % / 250.0°C	Entry of the upper and lower measured value limits Entry of the measured values at which the minimum / maximum current value is applied to the outputs.
	EAA6	Linear characteristic active.	Note in display: The linear characteristic is activated after confirmation by pressing "E". Cancel by pressing "PARAM".
		Logarithmic:	
	EAB1	20 mA: 02000 mS/cm / 99.99 % / 100.0°C / 0500 MΩ·cm	Entry of the upper measured value limits Entry of the measured values at which the maximum current value is applied to the outputs. The 0/4 mA value is automatically set to 1 % of the 20 mA value. In fig. 13 you can see the course of the current output signal with logarithmic characteristic. (Distribution: see technical data, p. 101)
	EAB6	Logarithmic characteristic active	Note in display: The logarithmic characteristic is activated after confirming by "E". Cancel by pressing "PARAM".

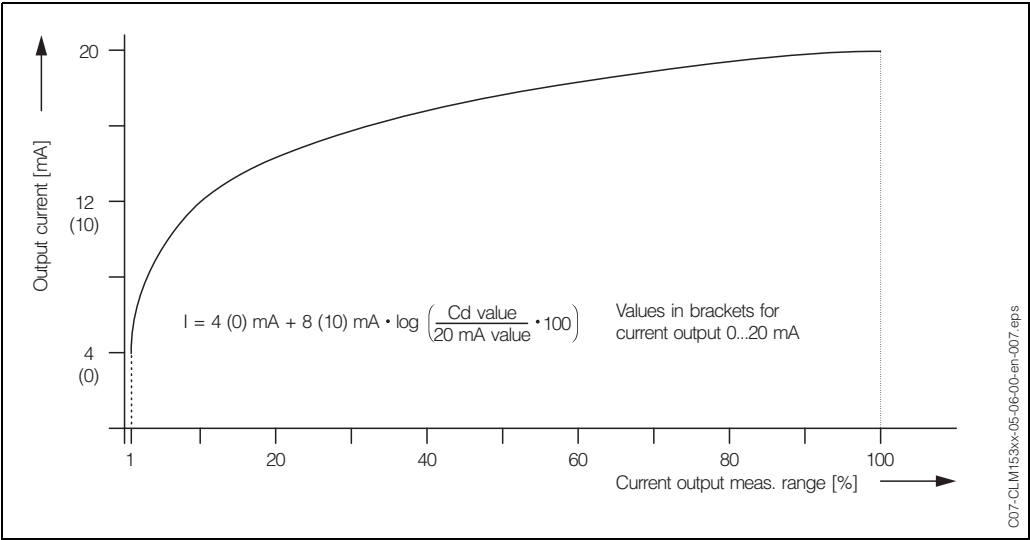


Abb. 12: Current output signal with logarithmic characteristic




Note!
The controller function "continuous controller" can only be assigned to current output 2.

One-circuit instrument		Two-circuit instrument	
Current output 1 (Terminals 31 +, 32 –)	Current output 2 (Terminals 33 +, 34 –)	Current output 1 (Terminals 31 +, 32 –)	Current output 2 (Terminals 33 +, 34 –)
Conduct./conc./resist. Temperature	Conduct./conc./resist. Temperature Continuous controller	Cond./conc./resist. 1 Cond./conc./resist. 2 Temperature input 1: Temperature input 2	Cond./conc./resist. 1 or 2 Temperature input 1 or 2 Characteristic value Continuous controller

6.4.5 Set up 1 – Relays

To enter the menu, proceed as follows:

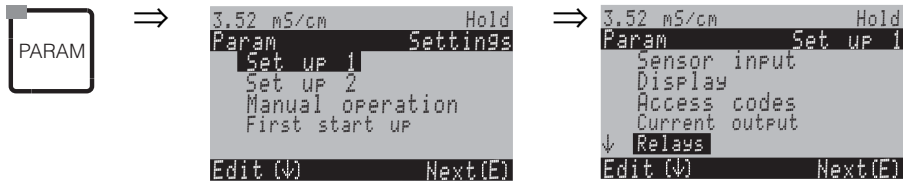

CODE	CHOICE (default = bold)	INFO
F1	NAMUR: Relay 1: Relay 2: Relay 3: Relay 4: Relay 5:	off free free free free free Contact functions Depending on the equipment available, you can assign the function of up to 5 relays here. When you switch on the status message acc. to NAMUR NA64, relays 1 and 2 are assigned and are not available for another function, (compare page 14). Selection: Free / Controller / LC1 / LC2 / LC3 / LC4 / LC5 / CCW / CCC <i>Controller:</i> Controller control using relay <i>LC:</i> Limit contactor function <i>CCW:</i> ChemoClean water. Water supply for the ChemoClean function. <i>CCC:</i> ChemoClean Cleaner. Cleaner supply for the ChemoClean function.(Together, CCC and CCW form the "ChemoClean" function. You can find information on ChemoClean on page 70). The limit value contacts are configured in the menu "PARAM" → "Set up 2" → "Limit switch". The controller contacts are configured in the menu "PARAM" → "Set up 2" → "Controller settings". Note! • <i>Danger of data loss.</i> If the controller is already completely configured for output via relay and you reduce the number of relays assigned to the controller, the entire controller configuration (s. page 54) is reset to the default values. • If you change the relay assignment for the controllers, you must use the controller menu (s. page 54) to reassign a relay all the functions selected there. <i>Example:</i> Relays 4 and 5 are assigned to the controller and you change the controller assignment to relays 5 and 6 (number of relays remains 2) (no data loss, providing the number of assigned relays is not reduced!). • You can only activate NAMUR if the required relays 1 and 2 (compare page 14) are free. • If you want to use the USP function, first select the limit contactor function n the menu "PARAM" → "Set up 1" → "Contacts" for a relay and configure this in the menu "PARAM" → "Set up 2" → "Limit switch" for USP. Activate the contact with "Function: on".

CODE	CHOICE (default = bold)	INFO
F2	NC contact NO contact	Selection acc. to NAMUR: (only, if NAMUR is activated) Assignment of NAMUR contacts as NC contact (= normally closed contact, opens when relay active) or NO contact (= normally open contact, closes when relay active). If the NAMUR function is enabled, the Alarm, Relay 1 and Relay 2 contacts are given the following functions: If the NAMUR function is enabled, the Alarm, Relay 1 and Relay 2 contacts are given the following functions: • "Failure" = Fault-signalling contact (terminals 41/42): Failure alarms are active if the measuring system is not working correctly or if process parameters have reached a critical value. • "Maintenance required" = Relay 1 (Terminals 47/48): Warning messages become active when the measuring system is working correctly but requires maintenance or a process parameter has reached a value which requires intervention. • "Function check" = Relay 2 (Terminals 57/58): This contact is active during calibration, maintenance, configuration and during the automatic cleaning/calibration cycle.
F3	NC contact NO contact	Select controller contacts as NC contact or NO contact.
F4	NC contact NO contact	Select limit values as NC contact or NO contact.
F5	Steady contact Wiping contact	Contact type: Fault-signalling contact (only, when NAMUR function = off) <i>Steady contact</i> = Active for as long as an error is present. <i>Wiping contact</i> = Active for 1 second when an alarm signal occurs
F6	Chemoclean is always a NO contact.	Note in display (only, when the full ChemoClean function is selected in field F1, which means CCC and CCW) With the ChemoClean function, the valves of injector CYR 10 are effected with a NO contact.

6.4.6 Set up 1 – Temperature

Temperature compensation must only be carried out in the conductivity operating mode (operating mode selection, Field A1, p. 31).



Note!

The settings described in this chapter are not effective for the concentration operating mode. If you use the predefined concentration tables, the temperature will be compensated without further configuration. If you use the customer specific tables, configure the temperature compensation as described in Chp. 6.4.7.

The *temperature coefficient* α indicates the relative change in conductivity per degree of temperature change. It depends on both the chemical composition of the solution as well as on the temperature itself.

To include the dependency, three different types of compensation can be selected in the Mycom S CLM 153 :

- Linear compensation
- NaCl compensation
- Compensation via table (four different tables are available).

Linear compensation

The conductivity change between two temperatures is taken as constant (i.e. $\alpha = \text{const.}$, see adjacent fig. 13.). You can edit this α value in linear compensation. Likewise, you can enter the associated reference temperature. Please refer to the data sheets for the reference temperature.

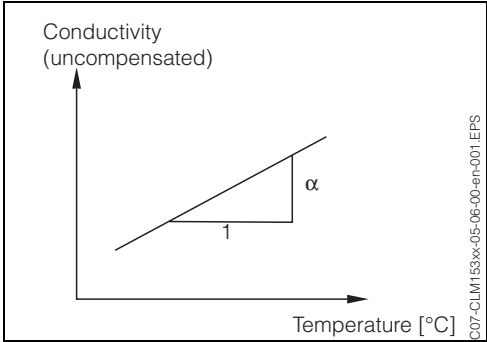


Fig. 13: Linear temperature compensation

NaCl compensation

For NaCl compensation (in accordance with IEC 60746), a fixed non-linear curve is stored which determines the relationship between the temperature coefficient and the temperature. This curve applies to low concentrations of approx. 0.1 ... 5% NaCl.

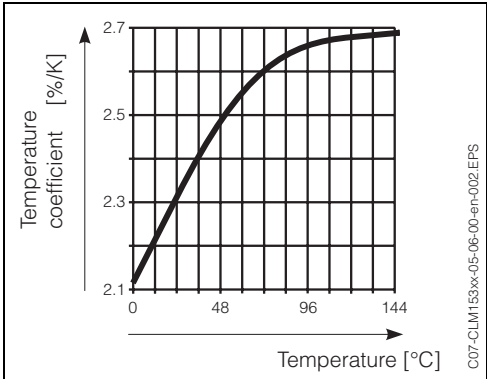


Fig. 14: NaCl compensation

Temperature compensation with table

The following conductivity data of the medium to be measured are required if using the alpha table function for temperature compensation:

- Value pairs of temperature T and conductivity k with:
- k for the reference temperature T_0 and
 - $k(T)$ for temperatures which occur in the process.

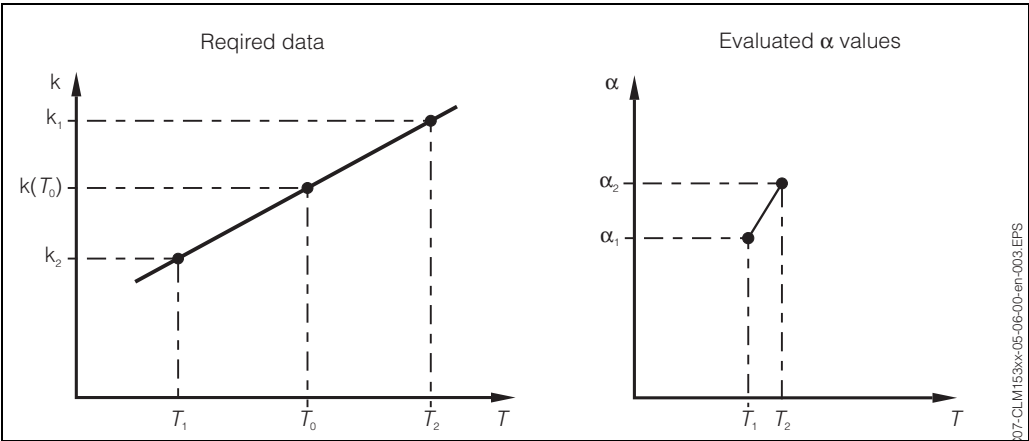


Fig. 15: Data required and α values determined with temperature compensation with table

Use the following formula to calculate the α values depending on the temperatures occurring in your process:

$$\alpha = \frac{100}{k(T_0)} \cdot \frac{k(T) - k(T_0)}{T - T_0}; (T \neq T_0)$$

Enter the α -T value pairs calculated with this formula into the table in Field GBB3. The transmitter is then ready for operation.

To enter the menu, proceed as follows:



CODE	CHOICE (default = bold)	INFO
G1	Temperature Create alpha table Reference temperature	Selection for temperature compensation <i>Temperature</i> = automatic (ATC) or manual (MTC) temperature compensation. <i>Create alpha table</i> : Enter conductivity/temperature value pairs for a temperature compensation by means of the table created. <i>Reference temperature</i> : The temperature to which you apply to.
	Temperature:	
GA1	Measuring circuit 1 Measuring circuit 2	Select the measuring circuit you wish to configure.
	Measuring circuit 1 (or 2, optional):	
	ATC CH1 ATC CH2 MTC MTC+Temp	Select temperature compensation channel 1/2 <i>ATC</i> : Automatic temperature compensation via temperature sensor <i>MTC</i> : Temperature compensation via manual value entry <i>MTC+Temp</i> : Temperature compensation via manual temperature entry. The displayed temperature, however, is measured by the temperature sensor.
GAA1	Pt 100 Pt 1000 NTC 30k	Select temperature sensor channel 1/2
GAA2	Temp.comp.: linear Alpha value: 2.10%/K Actual temp.: 25.0 °C Offset: 0.0 °C	Temperature compensation channel 1/2 <i>Temp. comp.</i> : Selection of the temperature compensation – none, linear, NaCl, Table 1 to 4 <i>Alpha value</i> : Entry of the conductivity coefficient α . <i>Actual temp.</i> : The measured temperature is displayed. <i>Offset</i> : Temperature difference between measured and output temperature (–10 ... +10 °C).

CODE		CHOICE (default = bold)	INFO
Create alpha table:			
	GB1	Table 1 Table 2 Table 3 Table 4	Select table Select a table to edit.
	GBB2	01 (1 ... 10)	Entry of the number of support points (value pairs) Value pair: Temperature and conductivity coefficient α .
	GBB3	°C %/K 000.0 00.00	Entry of the value pairs Enter temperature and conductivity coefficient, (number of value pairs required = number of support points desired in Field GBB2).
	GBB4	OK Delete element(s)	Selection: Are the value pairs OK or do you want to delete elements?
	GBB5	°C %/K 020.0 °C 02.00 025.0 °C 04.00	Delete: Select the rows to be deleted, delete them with  and confirm this with "E".
	GBB6	Valid table	Note in display: The table is active after confirmation by pressing "E". Cancel by pressing "PARAM".
Reference temperature:			
	GBC1	For laboratory measurement: 25.0 °C (-35 ... +250 °C)	Entry of the reference temperature to which the medium temperature should be compensated. Here, enter the temperature at which the α value was determined, (you can take this from the data sheets from which you also took the α value).

6.4.7 Set up 1 – Concentration

The transmitter can convert conductivity values to concentration values. To do so, you must first switch the operating mode to concentration measurement (s. page 31, Field A3).

Then select the basic data to which the concentration measurement should refer. These data are already stored in the transmitter for the most common substances. You can select one of these substances in Field A3 / AA1 (Chp. 6.4.1).

You can also determine the concentration of a sample which is not stored in the device. For this, you require the conductivity characteristics of the medium. To get the characteristics, you can either refer to the data sheets of the medium or *determine the characteristics your self*.

1. To do so, create samples of the medium with the *concentrations occurring in the process*.
2. Measure the uncompensated conductivity of these samples at temperatures which likewise occur in your process.
 - *For variable process temperature:*
If the variable process temperature should be taken into account for concentration measurement, you must measure the conductivity of each sample created at two different temperatures at least, (ideally at the lowest and highest process temperature). However, the difference between the temperatures must be at least 0.5 °C. A minimum of four samples is necessary, since the transmitter requires a minimum of four references.
 - *For constant process temperature:*
Measure the differently concentrated samples at this constant process temperature. Again, a minimum of four samples is necessary for four references.

Impermissible curve profiles

The characteristics received from the measuring points must be extremely monotone increasing or extremely monotone decreasing in the range of the process conditions. Therefore, neither maxima / minima nor ranges with a constant behaviour can occur. Curve profiles such as those in fig. 16 are not permitted.

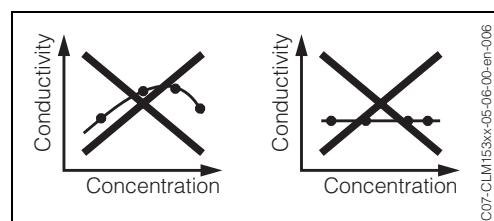


Fig. 16: Impermissible curve profiles

Finally you should have measuring data which are similar to those shown in the following illustrations:

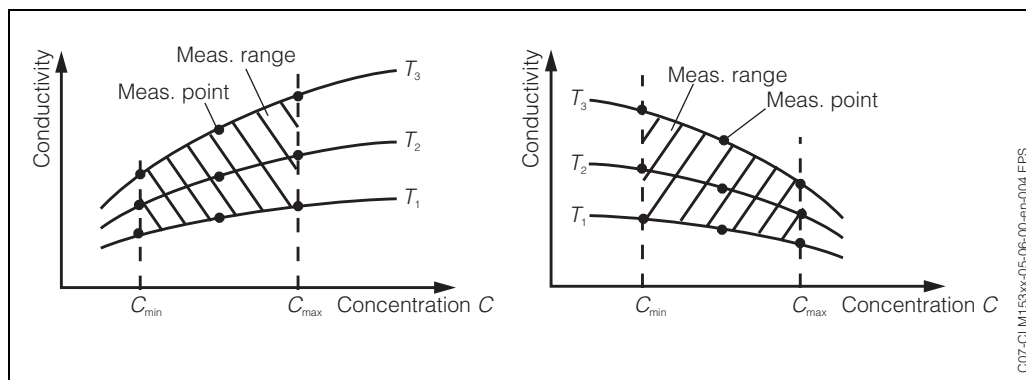


Fig. 17: Measuring data in the event of variable process temperature

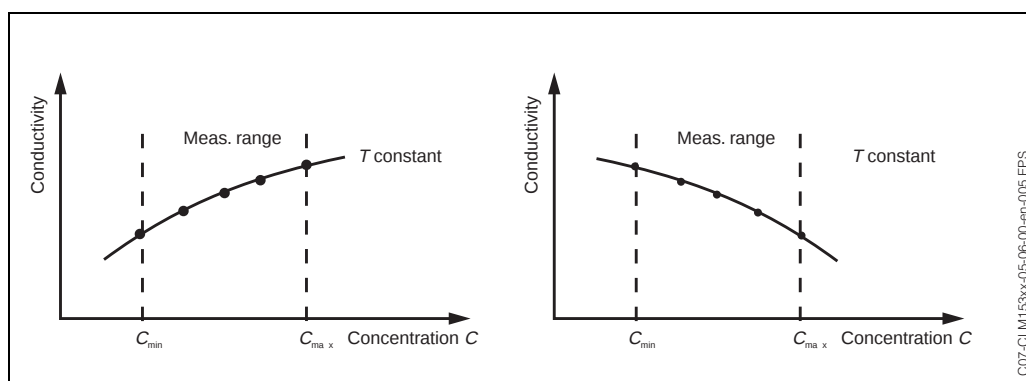


Fig. 18: Measuring data in the event of constant process temperature




Note!

- **Danger of inaccuracy.** Please ensure that the concentrations and temperatures measured for your samples also correspond to the measuring range of the process. If the measured values of the process are outside the range of your sample values, this considerably reduces the level of accuracy and the device generates an error message.
- You can work without error messages from the start of measuring range if you enter an additional triple value set with 0 $\mu\text{S}/\text{cm}$ and 0% for each temperature used, with ascending characteristic (see diagrams above).

Enter the three characteristic quantities (triple value set with conductivity, temperature and concentration) for each measured sample into the field Z5.

To enter the menu, proceed as follows:

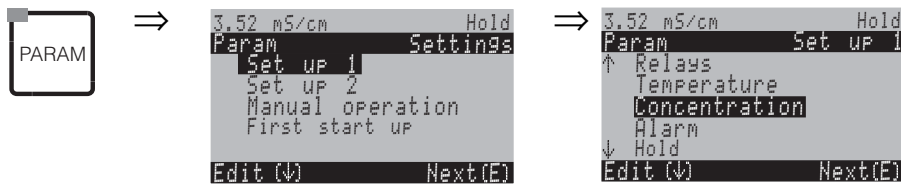

CODE	CHOICE (default = bold)	INFO
Z1	1 (0.5 ... 1.5)	Select the correction factor If it is necessary, you can select a correction factor for the user table here.
Z2	Table 1 Table 2 Table 3 Table 4	Select table Select the table to be read or edited. If you are editing a curve, you should select another curve for calculating the current readings.
Z3	% ppm mg/l TDS ohne	Select concentration unit
Z4	4 (4 ... 20)	Entry of the number of table support points Each support point consists of a set of three numbers (see above)
Z5	mS/cm ppm °C 000.00 00.00 000.0 000.00 00.00 000.0 000.00 00.00 000.0 000.00 00.00 000.0 Expl.: mS/cm % °C 223 94.0 50 331 94.0 75 450 94.0 100 212 95.0 50 315 95.0 75 429 95.0 100 157 98.0 50 236 98.0 75 322 98.0 100	Entry of triple pairs Entry of minimum 4 triple pairs for conductivity, concentration (with the unit selected above) and the correspondent temperature. Note! Enter the values in the order of increasing concentration (see opposite example).
Z6	OK Delete element(s)	Selection: Are the value pairs OK or do you want to delete elements?
Z7	Valid table	Note in display: The table is active after confirmation by pressing "E". Cancel by pressing "PARAM".

6.4.8 Set up 1 – Alarm

The transmitter continuously monitors the most important functions. If an error occurs, an error message (list of all error messages s. page 88) is set, which can trigger one of the following actions:


- The fault-signalling contact is made active
- Current output 1 outputs the set error current (2.4 or 22 mA).
Current output 2 outputs the set error current, if it has not been configured for the "Continuous controller" function.
- ChemoClean cleaning is started

In the list of error messages on page 88 you can see how the error numbers are assigned according to the factory settings. However, in the "ALARM" menu, you have the option of outputting the error messages individually to the alarm relay, the current output or as a cleaning trigger.



- Note!
- Please refer to page 88 for the complete list of possible error messages.
 - Errors E001 to E029 are assigned to NAMUR functions and cannot be assigned individually.

To enter the menu, proceed as follows:

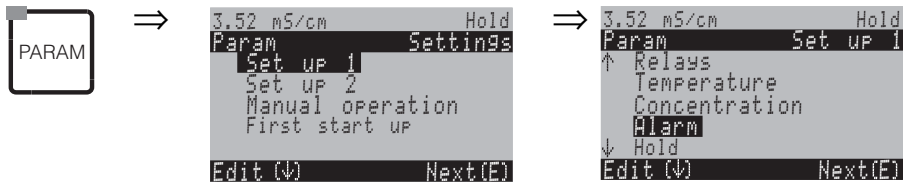

CODE	CHOICE (default = bold)	INFO
H1	Min (2.4 mA) Max (22 mA) off	Selection for error current Set the error current at which an error message is active.
H2	!!Caution!! Current output 0...20mA and error current = 2.4 mA leads to uncontrolled behaviour.	Note in display: Error current is in the measuring current range. If, in Field EA3, the current range is "0 ... 20 mA" and "Min" is selected under Alarm in Field H1. Recommended combinations: Current range 0...20 mA and error current max (22 mA) or Current range 4...20 mA and error current min (2.4 mA)
H3	0000 s (0 ... 2000s)	Entry of alarm delay Delay between error occurrence and alarm trigger.
H4	Function off Maintenance: 100 Failure 200	Alarm for characteristic value monitoring (only combined circuits) Monitoring of measured value difference for two-circuit measurement. Entry of the maximum permitted difference at which the maintenance or failure alarm should be triggered.

CODE	CHOICE (default = bold)	INFO
H5	No. E025 A On I On CC On	Error/contact assignment Each error can be assigned individually: <i>No.</i> = error number E025 (only display) <i>A</i> = Assignment to the alarm relay (activate/deactivate). An active error triggers an alarm. <i>I</i> = This error triggers an error current <i>CC</i> = ChemoClean®. This error message triggers cleaning.
H6	Function: off Time input: 0000 s (2...9999s)	Dosing time alarm <i>Function:</i> Switch on/off the function "Alarm when dosing time exceeded". <i>Time input:</i> Entry of the maximum allowed dosing time. After this time has elapsed, an error is output.

6.4.9 Set up 1 – Hold

Hold function = "Freezing the outputs"


The current outputs can be "frozen" for each menu. This means that the value which you define in this menu is output. With hold, "Hold" appears in the display. This function can also be activated externally via the hold input, (see wiring diagram on page page 12, digital input E1). The on-site hold has a higher priority than an external hold.



Note!

- If a hold is active, no programme can be started.
- If current output 2 is configured for the controller, it complies with the controller hold (see Field I5).

To enter the menu, proceed as follows:

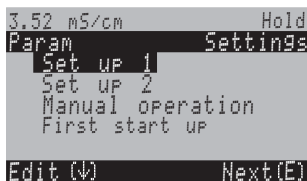

CODE	CHOICE (default = bold)	INFO
I1	CAL On DIAG On PARAM On	Selection: Automatic hold active when: CAL = Calibration DIAG = Service/Diagnosis PARAM = Parameter entry menu
I2	Last Set Min (0/4 mA) Max (22 mA)	Select the current for hold <i>Last</i> = The current value is "frozen" <i>Set</i> = The value set in Field I3 (below) is output for hold. <i>Min / Max</i> = The minimum or maximum current value is output.
I3	000% (0 ... 100%)	Enter Hold current (only for Set) Number settable from 0% = 0/4 mA to 100% = 20 mA
I4	010 s (0 ... 999s)	Enter hold delay time The hold remains active for the given hold delay time after leaving the CAL, PARAM, DIAG menus. During the hold delay time, the "Hold" indicator flashes in the display.
I5	Freeze actuating variable: Yes no	Controller hold Freeze actuating variable (dosing): <i>Yes</i> : During an active hold, the last actuating variable is output. <i>No</i> : During a hold, no dosing takes place. PWM or PFM relays remain in the dropped-out state. An actuator drive is controlled until it is closed. Note! If the set value is output via an actuating variable with feedback, the actuator remains active. It also reacts in the hold should the position suddenly change.

6.4.10 Set up 1 – Parameter sets

Use this item to enter complete parameter sets for a maximum of four media. You can set the following individually for each parameter set:

- Operating mode (conductivity, temperature, ...),
- Temperature compensation,
- Current output (main parameter and temperature),
- Concentration table,
- Limit relay.

Assignment of the binary inputs

You can switch the parameter sets (measuring ranges) externally by means of the binary inputs (MRS). To do so, in Field J1 select the number of inputs which should be controlled externally for measuring range switching:

Field J1: Number of inputs	Function
0	You can activate the four parameter sets by means of the local operation. The parameter set cannot be switched by means of the binary inputs. The binary input 1 can be used for external hold.
1	You can switch between two parameter sets by means of the binary input 2. The binary input 1 can be used for external hold. No measuring range can be activated by means of the local operation.
2	You can switch between four parameter sets by means of the binary inputs 1 and 2. No measuring range can be activated by means of the local operation.

Configuration of the four parameter sets (Example: CIP cleaning)

Field No.	Setting	Parameter set			
		1 (e.g.: beer)	2 (e.g.: water)	3 (e.g.: alkali)	4 (e.g.: acid)
	Operating mode	Conductivity	Conductivity	Concentration	Concentration
	Current output	1 ... 3 mS/cm	0.1 ... 0.8 mS/cm	0.5 ... 5 %	0.5 ... 1.5 %
	Temperature compensation	User tab. 1	Linear	–	–
	Concentration table	–	–	NaOH	User tab.
	Limit values	on: 2.3 mS/cm off: 2.5 mS/cm	on: 0.7 µS/cm off: 0.8 µS/cm	on: 2 % off: 2.1 %	on: 1.3 % off: 1.4 %
Binary input 1		0	0	1	1
Binary input 2		0	1	0	1



Note!

If the USP function and/or controller is activated, the parameter set cannot be switched since the inputs for parameter set switching (MRS) are no longer available. The menu is then no longer available. The parameter set 1 configured in the remaining "PARAM" menu is then automatically used.

To enter the menu, proceed as follows:




CODE	CHOICE (default = bold)	INFO
J1	No. inp.: 0 (0 ... 2) Edit MR: 1 Act. MR: 2	Select the parameter set (measuring range) <i>No. input:</i> Number of inputs by means of which parameter sets can be switched externally (0...2). <i>Edit MR:</i> Selection of the parameter set to be edited. The parameter sets are always configured by means of the local operation or the PC Tool (1...4, if inp.=0 or 2; 1...2, if inp.=1). <i>Act. MR:</i> Activation of a parameter set (1...4, if inp.=0; only display for inp.=1 or 2).
J2	Caution! Controller and/or USP is selected. MRS not possible.	Note in display: If the USP function and/or controller is activated, the parameter set cannot be switched externally since the inputs for parameter set switching (MRS) are no longer available.
J3	Input 1: Input 2 0/0: MR 1 MR 1 0/1: MR 1 MR 1 1/0: MR 1 MR 1 1/1: MR 1 MR 1	Configuration For both circuits, select the parameter sets (measuring ranges, MR) which should be selected by external control of the inputs. 0/0: Input 1 = 0, Input 2 = 0 0/1: Input 1 = 0, Input 2 = 1 1/0: Input 1 = 1, Input 2 = 0 1/1: Input 1 = 1, Input 2 = 1
J4	Measuring channel 1 Measuring channel 2 General	Selection
Measuring circuit 1 (or 2):		
JA1 / JB1	Conductivity Resistance Concentration	Select operating mode
JA2 / JB2	Temp.comp.: none Alpha value: %/K	Compensation (only conductivity and resistance) <i>Temp. comp.:</i> Selection of temperature compensation – none, linear, NaCl, Table 1 to 4 <i>Alpha value:</i> Entry of the conductivity coefficient α .
JA3 / JB3	NaOH HNO3 H2SO4 H3PO4 Table 1 Table 4	Medium (only concentration)

CODE	CHOICE (default = bold)	INFO
	General:	
JC1	Function: Linear 0/4 mA: 20 mA:	Select current output 1 / 2:
JC2	Function off Maintenance 100 Failure 200	Alarm for characteristic value (only combined circuits) Monitoring of measured value difference for two-circuit measurement. Entry of the maximum permitted difference at which the maintenance or failure alarm should be triggered.

6.4.11 Set up 1 – Emergency switching

If the hardware (e.g. sensor or transmitter) is defective, you can change the function of the transmitter using the emergency switching. You can set the sensor of one circuit to the transmitter of the other circuit.

To enter the menu, proceed as follows:

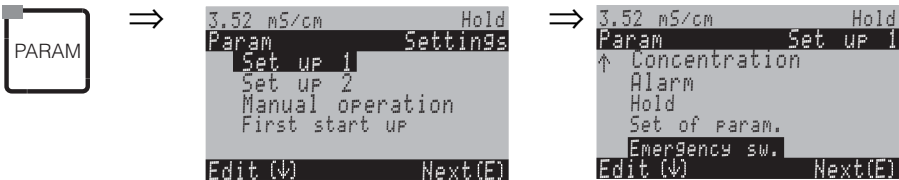


CODE	CHOICE (default = bold)	INFO
N1	Caution! Being switched to one-circuit measurement.	Note in display
N2	Switching off Sensor 1 --> input 2 Sensor 2 --> input 1	Emergency switching Sensor 1 is set to input 2 or vice versa. The settings you made for the circuits are kept. The circuit data apply after switching, with the exception of the sensor-specific data.

6.4.12 Set up 2 – Data log

The data logger records two freely selectable parameters with their date and time. You can start it using the measuring menus:
Use the arrow keys to scroll through the measuring menus until to you reach the Record mode of the data logger. Pressing the "Enter" key brings you to the Scroll mode of the data logger. Here you can open the saved measured values with their date and time.


To enter the menu, proceed as follows:

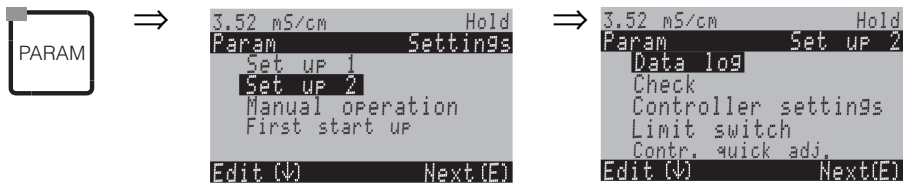

CODE	CHOICE (default = bold)	INFO
K1	Measuring interval Data logger 1 Data logger 2 View 1 View 2	Data logger settings Using the data logger you can - Record a parameter with 500 sequential measuring points or - two parameters each with 250 sequential measuring points. <i>View 1/2:</i> You can view the data recorded in the data logger.
Measuring interval:		
KA1	00005s (2 ... 36000s)	Enter measuring interval Enter the time interval after which the next measured value is recorded in the data logger.
Data logger 1 (or 2):		
KB1 / KC1	Measured value: Measured value input 1 Function: On	Selection Set the measured value for recording (measured value input 1, measured value input 2, temp. input 1, temp. input 2, characteristic value) and then activate by means of the "on" function. Note! The data logger starts recording the measured value when you return to operation.
KB2 / KC2	Min: 0,00 Max: 2000,00	Set recording range Values outside the defined range are not recorded.
View 1 (or 2):		
KD1 / KE1		View of the recorded data Using the date and time, you can call up data recorded in the past.

6.4.13 Set up 2 – Check

To enter the menu, proceed as follows:

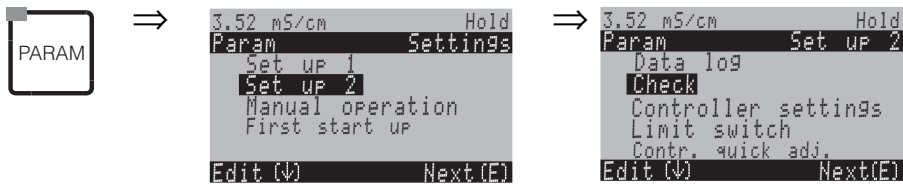

CODE	CHOICE (default = bold)	INFO
L1	PCS input 1: off PCS input 2: off	PCS (= Process check system) time If the measuring signal changes over the period entered, an alarm is signalled with error message E152. Settable times: off, 1h, 2h, 4h. Monitoring limit: 0.3 % of mean value over the set period of time. Note! An active PCS alarm signal will be deleted automatically as soon as the sensor signal changes.

6.4.14 Set up 2 – Controller settings

Requirements for controller configuration:

You have carried out the following settings **which are necessary for the controller settings** either in the Quick Setup, page 23 or on the appropriate menu page. If you have not yet made the settings, please do this **before** configuring the controller.

- Specify the relays available for the controllers (Field T18, page 28, or Field F1, page 36) and/or
- Current output **2** must be defined as a continuous controller if you want to control the actuator via a 20 mA interface. (Field T20, page 29, or Field EA1, page 34).



Note!

- *Danger of data loss.* If you assign the relays which are used by the controller with another function (Field F1, page 36), the **entire** controller configuration is reset to the default values.
- If you change the relay assignment for the controllers in the Contacts menu (Field F1, page 36), you must use the Controller menu to reassign a relay to all the functions selected there.
Example: Relays 4 and 5 are assigned to the controller and you change the controller assignment to relays 2 and 3 (number of relays remains 2)
(no data loss, provided the number of assigned relays is not reduced!)
- Relays 3, 4 and 5 are located on the additional plug-in card. If you have used one of these relays for the controller function and want/have to remove this card from the device, then we would recommend that you change the controller settings before removing the second card, so that all the relays used by the controller are located on card 1. Otherwise, you cannot use the controller function during the time in which the additional card is not plugged into the device, as the controller needs to access the relays on the second card.

Definition of terms	
Actuators:	Valves, gate valves, pumps and similar
Upward/ downward controller:	The terms "up" (=upward controller) and "down" (=downward controller) used in the menu are used in relation to the direction of action: <i>Down</i> = The control doses only if the measured value is greater than the setpoint. <i>Up</i> = The control doses only if the measured value is smaller than the setpoint.
Process:	The controller or the process (to simplify matters this will, from henceforth, be referred to as the "process") can be differentiated on account of their different features:
Direction of action, one or two-sided:	<i>One-sided</i> control only works in one of two directions. It influences the process in such a way that the measured value either rises (upward controller) or drops (downward controller). With a <i>two-sided</i> process, control can generally work in both directions, ("up" and "down"). This means that you can both increase and decrease the value of the controlled variable (here = measured value).
Batch or inline process arrangement:	With active control, the batch and inline processes are different in their relationship to the medium current: <i>Pure batch process:</i> The batch container is filled with the medium. During the subsequent batch process, no additional medium is fed in. The change in the measured value is caused only by the control. To be able to compensate for possible so-called "overshoots", use a two-sided control (see above). For as long as the actual value is within the neutral zone, no additional dosing agent is added. <i>Pure inline process:</i> Here, the control works with the medium flowing past. The measured value of the medium in the inflow may be subject to strong deviations for which the control should compensate. The volume of medium which has already flowed past can no longer be influenced by the controller. For as long as the actual value corresponds to the setpoint, the actuating variable has a constant value. The Mycom S controller takes this differing behaviour into account. It is the internal handling of the integral part of the PI or PID controller which is different for these settings. In practice, the most common option is the <i>semi-batch process</i>. Depending on the ratio of inflow to tank size, this process shows the behaviour of an inline or a batch process.
Look-ahead control	To be able to optimally resolve the general problems of a purely inline process, the CLM 153 is able to "look into the future" using a second sensor and a flowmeter. This means that the controller can react to strong variations in the inflow at an early stage.
Controlling the actuators	The CLM 153 has four different methods for controlling the actuators (see above.) 1. <i>PWM (Pulse-width modulation, "pulse-length controller")</i> Pulse-width modulated outputs aid control e.g. of solenoid valves. With PWM, one side (i.e. "up" or "down") of the internal, analog actuating variable is output to a relay as a rhythmic signal. The larger the calculated actuating variable, the longer the appropriate contact remains picked up (i.e. the longer the switch-on period t_{ON}; s. fig. 19 is). You can set the period length freely between 1 and 999.9 seconds. The minimum switch-on period is 0.4 seconds. A two-sided process requires two PWM relays or one PWM and a three-point step controller (see below.) One PWM relay on its own can only output an actuating variable of • -100% ... 0% or • of 0% +100%. To avoid pulses which are too short, enter a minimum switch-on period. Pulses which are too short are not given to the relay/or the actuators. This benefits the actuator.

2. PFM (pulse-frequency modulation; "pulse-frequency controller")

Pulse-frequency modulated outputs aid control e.g. of solenoid dosing pumps. As with PWM, PFM is output as a rhythmic signal by the relay.

The greater the calculated actuating variable, the higher the frequency of the related contact. The maximum settable frequency $1/T$ is 120 min^{-1} . The switch-on period t_{ON} is a constant factor of the entered frequency (s. fig. 19).

Here too, two PFM relays are required for a two-sided process.

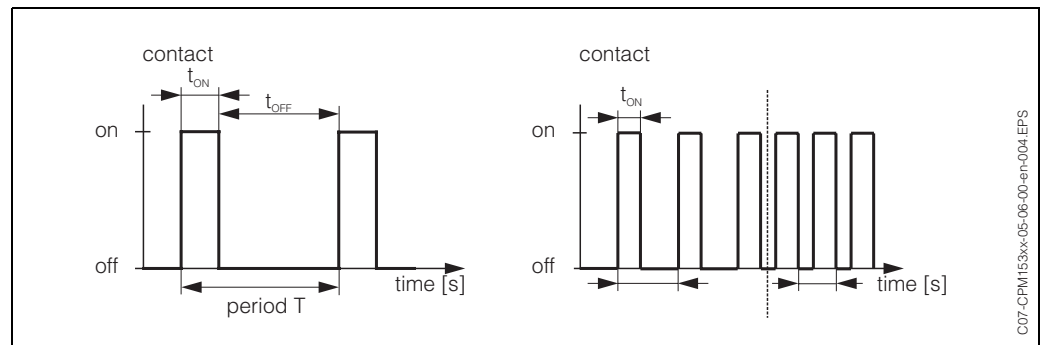


Fig. 19: left: pulse-width modulation (PWM)
Right: pulse-frequency modulation (PFM)

3. Three-point step controller

With Mycom S, this type of control is only possible for *one* process side ("Up" or "Down"). With two-sided processes, either PWM or PFM must be used for the other process side.

Select this type of control for actuator drives (e.g. valves, butterfly valves etc.), which must be controlled by means of two relays and which have position feedback. Only actuator drives with position feedback are supported. If the "+relay" picks up, the valve opens (flow increases) until the "+relay" drops out again. The "-relay" closes the valve in a similar way.

The Mycom S has an internal position controller which compares the set and actual positions of the valve, (set position from the primary controller and actual position from the position feedback). The relay in question picks up as soon as the position error exceeds the set switching differential X_{SD} . The actuator drive is controlled more frequently and more precisely, the smaller the X_{SD} selected. This also results in a more accurate overall control. However, if the switching differential is too small, there is the risk that the position control starts to oscillate.

For your process, you must find the optimum value between a large switching differential which protects the actuators and a small switching differential which ensures better control quality.

The set motor run time aids valve monitoring.



Note!

If using a driven valve, gate valve or similar, you must determine this motor run time *before* starting with the menu settings.

4. Analogue (via current output 2, 20 mA)

The current output can be used to output the *analogue* actuating variable for one or two-sided processes and *cannot* be combined with the method described above.

- With *one-sided* processes, the actuating variable range 0% ... 100% (or -100% ... 0%) is represented on the selected current range (0 ... 20 mA or 4 ... 20 mA). The output current is proportional to the actuating variable.
- With a *two-sided* process, the complete actuating variable range from -100% ... +100% is represented on the given current range. An actuating variable of 0% leads to a current of 10 mA (at 0 ... 20 mA) or 12 mA (at 4 ... 20 mA), (see fig. 20).



Note!
With a two-sided process, it should be noted that the actuator uses this method (also known as "split range").

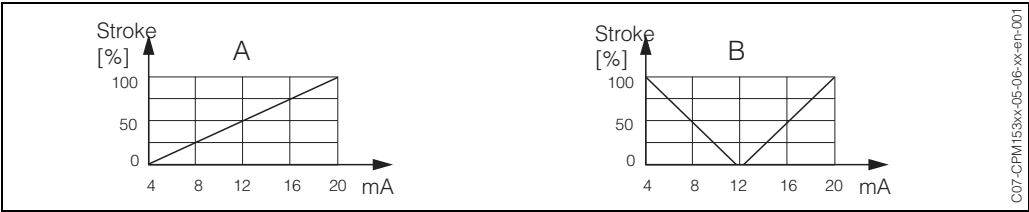


Fig. 20: A: Stroke diagram for a control valve
B: Stroke diagram for two contrarotating control valves ("split range")

You can refer to the following selection aids to find the required hardware equipment level for your process.
This selection is not complete. If you wish to use additional functions such as NAMUR or ChemoClean, please check to see if you require additional relays (NAMUR: Alarm relay + 2 relays; ChemoClean: 2 relays).

Selection aid for online processes						
Process	Path	Dosing actuators	Required hardware equipment for control			
			Circuits	Relay	Current inputs	Current outputs
2-sided control	looking-ahead · 2-circuit · flow	2 PWM	2	2	1	–
		2 PFM	2	2	1	–
		1 three-PS 1 PWM/PFM	2	with signal 3	2	–
				without signal 3	1	–
		current output split range	2	–	1	1
		2 PWM	1	2	–	–
	not looking-ahead	2 PFM	1	2	–	–
		1 three-PS 1 PWM/PFM	1	with signal 3	1	–
				without signal 3	–	–
		current output	1	–	–	1

Selection aid for online processes

Process	Path	Dosing actuators	Required hardware equipment for control			
			Circuits	Relay	Current inputs	Current outputs
2-sided control	looking-ahead · 2-circuit · flow	2 PWM	2	2	1	–
		2 PFM	2	2	1	–
		1 three-PS	2	3	2	–
		1 PWM/PFM	2	3	1	–
		current output split range	2	–	1	1
	not looking-ahead	2 PWM	1	2	–	–
		2 PFM	1	2	–	–
		1 three-PS	1	3	1	–
		1 PWM/PFM	1	3	–	–
		current output	1	–	–	1

C07-CLM153xx-16-12-00-en-001.EPS

Selection aid for batch processes

Process		Dosing actuators	Required hardware equipment for control			
			Circuits	Relays	Current inputs	Current outputs
1-sided control		1 PWM	1	1	–	–
		1 PFM	1	1	–	–
		1 three-PS	1	2	1	–
		1 PWM/PFM	1	2	–	–
		current output	1	–	–	1
2-sided control		2 PWM	1	2	–	–
		2 PFM	1	2	–	–
		1 three-PS	1	–	1	1
		1 PWM/PFM	1	3	–	–
		current output split range	1	3	–	–

PWM = pulse length proportional
 PFM = pulse frequency proportional
 Three PS = Three-point step controller

C07-CLM153xx-16-12-00-en-003.EPS

The controller in the CLM 153:

The CLM 153 contains a multi-faceted PID controller which can be adapted to the process. It has the following features:

- Separate configuration of both process sides,
- Simple adaptation to batch or inline processes,
- Switching option between constant and range-dependent modulation gain.

Relating to the effect on the gain factor, a difference is made between two standard implementations:

- The factor $K_R(X)$ is the total gain
(see fig. 21. This is implemented in the CLM 153).
- The gain factor $K_P(X)$ is the purely proportional gain.

The following diagram shows the schematic structure of the CLM 153 controller. Because of the simplicity of the diagram, the Laplace transform of subfunctions is given.

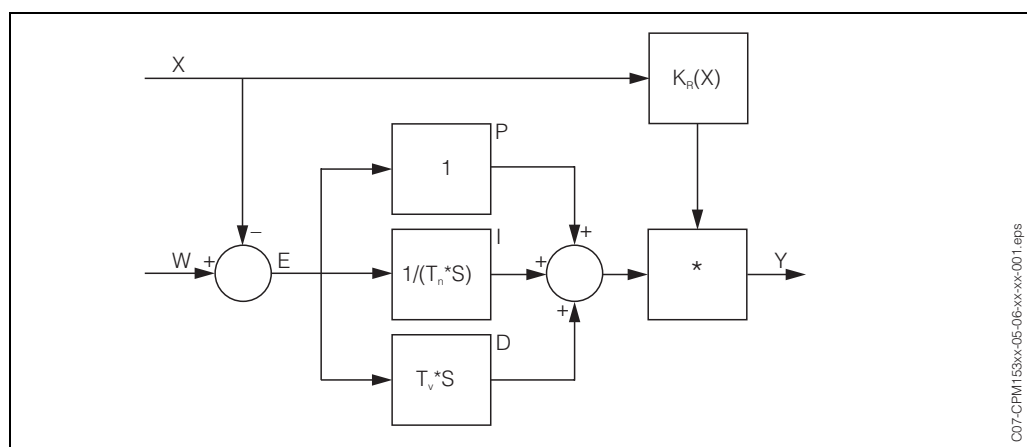


Fig. 21: Schematic diagram of the CLM 153 controller with $K_R(X)$ as the total gain

X	Actual value
W	Setpoint
E	Control difference
Y	Actuating variable
K_R	Modulation gain (total gain)
T_n	Integral action time (I component)
T_v	Derivative action time (D component)

Range-dependent modulation gain

In contrast to normal PID controllers, with Mycom S you have the option of setting a range-dependent modulation gain in addition to a constant controller gain. With range-dependent gain, the controller gain used depends on the “range”, i.e. on the present actual value.

Areas of application for range-dependent gain are:

- Compensation of non-linearities:
The conductivity process is no longer linear at medium and high concentrations (approx. > 15 %).
- For critical control systems,
you need a control which works very carefully near the setpoint and doses very powerfully in the event of large control difference. If *constant* controller gain cannot do this to your satisfaction, then you can achieve this by using range-dependent modulation gain.

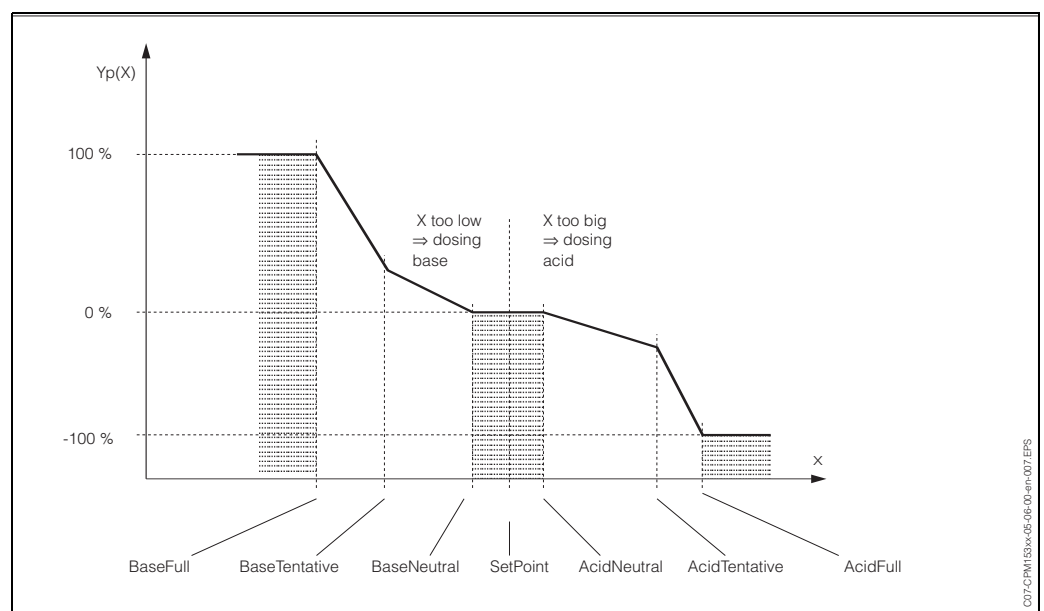


Fig. 22: Diagram to describe the most important corner points for control

With such a range-dependent characteristic, a set actuating variable is prescribed to the controller for each measured value.

Neutral zone:

If the actual value (X) is within the neutral zone, then

- the dosing does not take place for the Batch process type,
- also not for the Inline process type and without an I component ($T_n=0$).
- If the controller is configured as a PI or PID controller for the Inline type, the controller decides itself if dosing will be carried out or not. This is dependent on the measured value history.

Points of the characteristic:

For *constant control gain* ("linear characteristic"), you require:

- Setpoint W,
- Neutral zone
 - Two-sided: "Start of the neutral zone" and "End of neutral zone"
 - One-sided: only one of the two points

For *range-dependent modulation gain* ("segmented characteristic"), you require two-sided control of all the points.

A point usually consists of two coordinates: an x coordinate (here = measured value) and a y coordinate (here = actuating variable). You only need enter the y coordinates for the optimisation points. For the other points, the CLM 153 sets the y coordinates itself.

However, you cannot change the sequence of these defined points. It is, for example, not possible to enter a larger measured value for the "Start neutral zone" than for the setpoint.

Configuring the CLM 153

Please configure the relays in the following order:

1. Actuators
2. Sensor technology
3. Feedback (e.g. look-ahead control, position feedback with three-point step controller, if available)
4. Characteristic:


In the user settings (see below) you switch directly to a controller simulation and can check the settings made and change them if necessary.

To enter the menu, proceed as follows:




CODE	CHOICE (default = bold)	INFO
M1	off On	Select controller functions Note! You must activate the controller function after you have configured the controllers in this menu branch.
M2	Batch 1-s. up Batch 1-s. down Batch 2-sided Inline 1-s. up Inline 1-s. down Inline 2-sided	Select the process type, which describes your process. <i>1-s. = one-sided:</i> The control is either "up" or "down". <i>Two-sided:</i> The control is "up" and "down". You can only select this function if you have defined two controllers (in the "Contacts" menu and/or via the current output).

CODE	CHOICE (default = bold)	INFO
M3	Actuators Sensor technology Feedback Characteristic	Select external hardware For correct operation, you must completely configure these four submenus. <i>Actuators:</i> here, you can select and configure the methods which the controller uses to output the actuating variable. <i>Sensor technology:</i> Here you configure the look-ahead control or switch channels (only with two circuit). <i>Feedback:</i> Here you configure the position feedback of an actuator drive (only with the selection of three PS and position feedback = on; see Fields 162, 165 / 170, 165) <i>Characteristic:</i> Here, you enter the controller parameters (neutral zone, setpoint, etc.). With this selection, you can also reach the controller simulation (see Field ME6).
Actuators: With selection "one-sided" in Field M2:		
MA1	Up Down	Dosing Select the control type with which you wish to dose.
MA2	Pulse length Pulse frequency 3-point step controller Current output	Select control type
MA3	+relay n.c. -Relay n.c. Motor run time off Position feedback	Relay selection (for three-point step controller) <i>+Relay:</i> Open the valve further (= increase dosing) <i>-Relay:</i> Close the valve further (= reduce dosing) Selection: n.c. (= not connected). After this, those relays which are released in the Contacts menu are always offered as the default. <i>Motor run time:</i> The time the motor drive requires to move the valve from completely closed to completely open. The CLM 153 requires this to be able to calculate the required pick-up time of the relay for any required position change. <i>Position feedback:</i> Without position feedback, the current valve position is calculated using the entered motor run time and the relay activity. With switched-on position feedback, the CLM 153 expects feedback from the actuator drive about the current valve position via a current or resistance input.  Note! If you cannot select a relay here, use the "Contacts" menu to make relays available for the controller function.
MA4	Relay: n.c. max. pulse 120/min. frequency	Relay selection (for pulse frequency) <i>Relay:</i> Relay selection <i>Max. pulse frequency:</i> Input of the maximum pulse frequency. (Pulses with a higher frequency are not forwarded to the relay). (Maximum setting: 120 1/min)

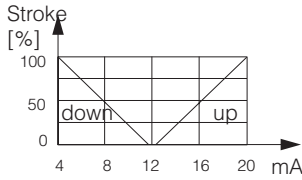CODE	CHOICE (default = bold)	INFO
MA5	Relay: n.c. Period: 000.0s t_E min: 000.0s	Relay selection (for pulse length) <i>Relay</i> : Relay selection <i>Period</i> : Period length T in seconds (Range 0.5 ... 999.9 s) t_E min: Minimum switch-on period. (Shorter pulses are not forwarded to the relay and treat therefore the actuators with care).
MA6	0 ... 20mA 4 ... 20 mA	Current output Selection of the current range, which should be output at the current output.
MA7	0/4 mA 20 mA	Current output Assign the current value which corresponds to 100 % dosing medium provision.
Actuators With selection "two-sided" in Field M2:		
MB1	Dosing via: 1 output 2 outputs	Control: (This is only if you selected the constant controller under current output 2.) <i>1 output</i> : for control using the current output in the "split range" method. Control logics are required which can control two valves/pumps over one current input. <i>2 outputs</i> : If the valves are controlled with two relays.
1 Output:		
MBA1	0 ... 20mA 4 ... 20 mA	Current output Selection of the current range, which should be output at current output 2. The neutral position (= current value which the controller outputs when it is not dosing) is in the middle of the selected range. For 0 ... 20 mA, the neutral position is at 10 mA, for 4 ... 20 mA at 12 mA.
MBA2	0 (or 4) mA 20 mA	Current output 2 Assign the current value, corresponding to 100 % dosing.  Note! From the current value selection for the dosing of 100 % dosing agent, you can derive the current ranges for up and down dosing, (see fig. 23) in the "split range" method.
		
Fig. 23: Two-sided control over one current output		

CODE		CHOICE (default = bold)		INFO
		2 outputs:		
	MBB1	Acid: Alkali:	I length I length	Select the control type Dosing can be carried out using: PWM (= pulse length proportional), PFM (= pulse frequency proportional) or 1x three-PS (= three-point step controller)
	MBB2	+relay –Relay Motor run time Xsd	n.c. n.c. %	Downward dosing: Relay selection (for three-point step controller) <i>Xsd: Switching differential Description see above.)</i>
	MBB3	Relay: max. pulse frequency	n.c. 1/min.	Downward dosing: Relay selection (for pulse frequency) <i>Description see above.)</i>
	MBB4	Relay: Period: t _E min:	n.c. 000.0s 000.0s	Downward dosing: Relay selection (for pulse length) <i>Description see above.)</i>
	MBB5	+relay –Relay Motor run time Position feedback	n.c. n.c. off	Upward dosing: Relay selection (for three-point step controller) <i>Description see above.)</i>
	MBB6	Relay: max. pulse frequency	n.c. 1/min.	Upward dosing: Relay selection (for pulse frequency) <i>Description see above.)</i>
	MBB7	Relay: Period: t _E min:	n.c. 000.0s 000.0s	Upward dosing: Relay selection (for pulse length) <i>Description see above.)</i>
Sensor technology:				
	MC1	Look-ahead control: Meas. value input 1 = controller Meas. value input 2 = look- ahead		Note in display: Look-ahead measurement (only look-ahead) In Quick Setup one process with look-ahead control was selected.  Note! Control with look-ahead measurement is only possible in conjunction with a flowmeter and a two-circuit transmitter.
	MC2	Control with: Meas. value input 1 Meas. value input 2		Electrical assignment: (only redundancy) Selection of with which measured value, control is effective.
	MC3	L _B : L _S : L _E :	0.5 m 0.5 m 1.5 m	System arrangement Enter sensor/dosing point distances: L _S : Distance between the controlling sensor and the acid dosing point L _B : Distance between the controlling sensor and the alkali dosing point L _E : Distance between the controlling sensor and the look-ahead sensor Notes on fig. : Sensor 1 is the controlling sensor, sensor 2 is the look-ahead el.

CODE	CHOICE (default = bold)	INFO
Two-sided pipe flow neutralisation (inline) with forward-locking conductivity measurement C:07-CLM153xx-16-06-00-ep-008-EPS		
Schematic diagram of a two-sided control with look-ahead control		
MC4	Unit: m ³ /h Unit: s 4 mA value: ____ 20 mA value: ____	Flowmeter volume flow <i>Unit:</i> Entry of the volume flow in m ³ /h or yd ³ /h <i>4 mA value:</i> Enter minimum flow velocity value. <i>20 mA value:</i> Enter maximum flow velocity value.
MC5	Diameter 00 mm	Pipe diameter Entry of the internal diameter of the pipe located between the two sensors.
MC6	Function On Limit value 050.0 Kdisturb=1: 050.0 Kmax: 1.7 Kdisconnect: 1.0	Feedforward control (only if 2 current inputs are available) Feedforward control has a multiplying effect, i.e. the controller actuating variable is multiplied by the gain Kdist (s. fig. 24). <i>Limit value</i> If the current input signal undershoots the value set here, dosing is stopped (actuating variable = 0). The dosing stop is not active if you enter 0 (= no limit value) here. (Range 0...100%) <i>K_{disturb} = 1:</i> Here, enter the current input value in % at which the feedforward gain should have the value 1. At this point the output actuating variable is the same for switched-on or switched-off feedforward control. (Range 0...100%) <i>K_{max}:</i> Here, the value of Kdisturb is displayed for a current input signal of 100%. <i>K_{disconnect}:</i> Here, the value of Kdisturb is displayed for current input signal which is equal to the limit value.

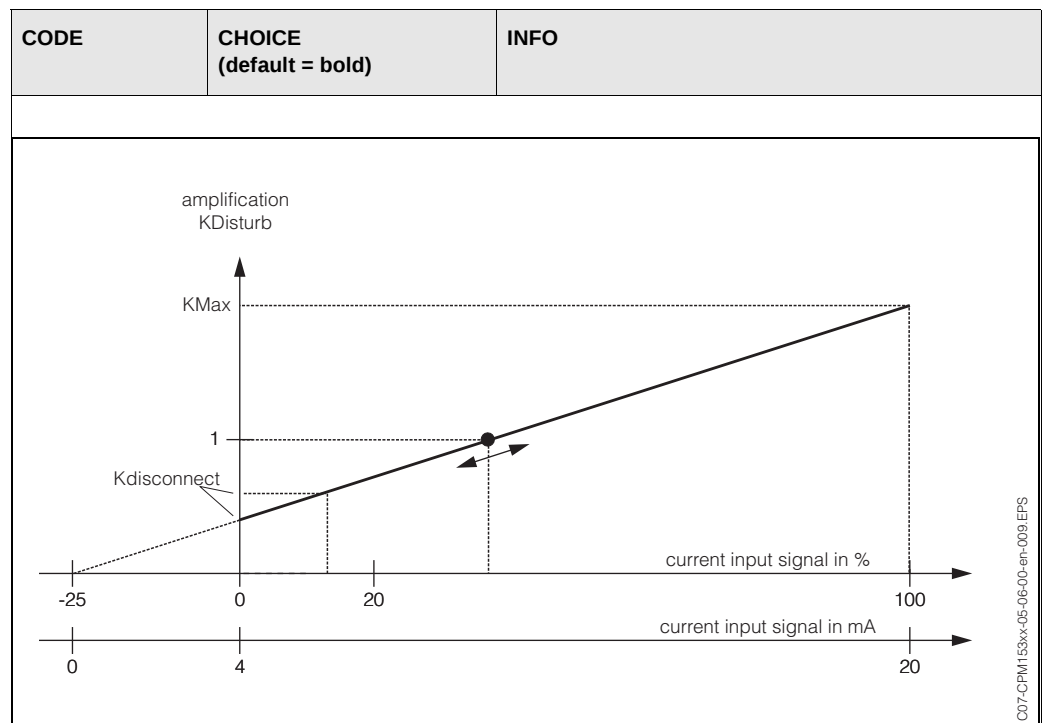

C07-CPM153xx-05-06-00-en-009.EPS

Fig. 24: Multiplying feedforward control

Feedback:

The following selection is dependent on whether you have a resistance or a current input.

With resistance input

MD1

0 ... 1 k Ω
0 ... 10 k Ω

Select range
for resistance.

MD2

act. resistance
____ k Ω

Assign a value for y = 0%
Drive the valve to y = 0%.
The current resistance is displayed. You can change the valve position either manually or by pressing the arrow keys on the transmitter. Confirm the position for y = 0 % by pressing the "E" key.



Note!
If you cannot change it using the arrow keys, please check the "Actuators" menu (Field 165) to see if the relays have been assigned to valve control.

MD3

act. resistance
____ k Ω

Assign a value for y = 100%
Drive the valve to y = 100%.
Proceeding as in the previous field.

For current input 1:

MD4

y = 0 ... 100 mA:
% 4 ... 20
 20 ... 4

Select current range
and assign the percentage range.

CODE	CHOICE (default = bold)	INFO
MD5	act. mA value: ____ mA	Assign a value for y = 0% Drive the valve to y = 0%. The current current value is displayed. You can change the valve position either manually or by pressing the arrow keys on the transmitter. Confirm the position for y = 0 % by pressing the "E" key.  Note! If you cannot change it using the arrow keys, please check the "Actuators" menu (Field 165) to see if the relays have been assigned to valve control.
MD6	act. mA value: ____ mA	Assign a value for y = 100% Drive the valve to y = 100%. Proceeding as in the previous field.
Characteristic:		
ME1	Constant characteristic Segmented characteristic	Characteristic type selection <i>Constant characteristic</i> : Corresponds to a constant control gain. <i>Segmented characteristic</i> : Corresponds to a range-dependent control gain.
ME2	Setpoint 1000 mS/cm St.ntr. zone 800 mS/cm End zone 1500 mS/cm K_R 1 200 mS/cm K_R 2 200 mS/cm	Characteristic values for constant characteristic (constant control gain) ; K_R <i>Setpoint</i>: The value which should be set. <i>St. ntr. zone</i>: Start neutral zone <i>End ntr. zone</i>: End neutral zone K_R 1 (only with alkali dosing): Modulation gain for alkali dosing K_R 2 (only with acid dosing): Modulation gain for acid dosing
ME3	Setpoint 1000 mS/cm St.ntr. zone 990 mS/cm End zone 1010 mS/cm O.pnt. X1 900 mS/cm 0.20 O.pnt. X2 1100 mS/cm -0.20 Ctrl.pnt. 1 800 mS/cm Ctrl.pnt. 2 1200mS/cm	Characteristic values for segmented characteristic (range-dependent control gain) <i>Setpoint</i>: The value which should be set. <i>St. ntr. zone</i>: Start neutral zone <i>End ntr. zone</i>: End neutral zone <i>Optimisation point 1 and 2</i>: Entry with x and y coordinates <i>Control point 1</i>: The dosing is 100% alkali for measuring values < control point 1. <i>Control point 2</i>: The dosing is 100% acid for measuring values > control point 2.
ME4	Rapid process Standard process Slow process User settings	Select process character If you have no experience in setting control parameters, the defaults <i>rapid / standard / slow process</i> are intended as an aid to adapting the controller behaviour to the process. Select a default and use the "controller simulation" (see below) to check if these settings are relevant for your process. Enter all the characteristic values yourself with the <i>user settings</i>.
ME5	K_R 1 = K_R 2 = T_n 1 = T_n 2 = T_v 1 = T_v 2 =	Characteristic values for user settings: (K_R 1 and K_R 2 only with linear characteristic; Index 1 only for alkali dosing, Index 2 only for acid dosing) K_R 1: Modulation gain for alkali dosing K_R 2: Modulation gain for acid dosing T_n: integral action time T_v: derivative action time

CODE	CHOICE (default = bold)	INFO
ME6	Simulation Off On	Select controller simulation Here, you can switch a configuration loop on or off. The hold is removed with an active controller simulation. <i>Simulation on:</i> The characteristic values entered in the previous field are used in the next field to simulate the controller behaviour. <i>Off:</i> Press "E" to leave the controller simulation.
ME7	Function auto Set: 1000 mS/cm act.: 1000 mS/cm y: 000	Controller simulation <i>Function:</i> Here, you set whether an actuating variable calculated by the controller ("auto"), or an actuating variable y entered by the user ("manual") is to be output. <i>Set:</i> Displays the current setpoint. If necessary, you can change the setpoint. The other points (start/end of neutral zone, optimization points, control points) change accordingly. <i>Actual:</i> Displays the current actual/measured value. <i>Y:</i> With the "auto" function: displays the actuating variable determined by the controller. With the "manual" function, you can enter an actuating variable here. Values < 0 % mean downward dosing, values > 0 % mean upward dosing.

To best adapt the controller parameters to the process, we recommend the following:

- Set values for controller parameter (Field ME5), activate simulation (Field ME6), deflect process:
Field ME7: set function to "manual" and enter an actuating variable. Using the actual value, you can observe how the process is deflected.
- Switch the function to "auto". Now you can observe how the controller returns the actual value to the setpoint.
- If you want to set other parameters, press the "Enter" key and you will return to Field ME5. During this time, the controller continues to run in the background.
- If you have made your settings, press the "Enter" key again to return to Field ME6. There, you can continue or exit the simulation.



Note!

Only exit the controller simulation in Field ME6 with "Simulation off". Otherwise, the simulation will continue to run in the background.

6.4.15 Set up 2 – Limit switch

The transmitter has several possibilities for assigning a relay contact. The limit contactor can be assigned an on and off point, as well as a pickup and dropout delay. In addition, an error message can be generated when an alarm threshold is set. You can trigger cleaning in connection with this error message (see error/contact assignment page 45). These functions can be used both for conductivity/concentration/resistance measurement and for temperature measurement.

To illustrate the contact states of any relay contact or fault-signalling contact, refer to fig. 25:

On-point > off-point (with increasing measured values):

- The relay contact closes after the on-point at t_1 is exceeded and the pickup delay ($t_2 - t_1$) expires.
- When the alarm threshold at t_3 is reached and the alarm delay ($t_4 - t_3$) also expires, the fault signalling contact switches.
- With returning measured values, the fault-signalling contact reopens when the alarm threshold is undershot at t_5 . The appropriate error message is deleted.
- The relay contact opens again after the off-point is reached at t_6 and the dropout delay has elapsed ($t_7 - t_6$).



Note!

- If the pickup and dropout delays are set to 0 s, the on and off points are the switch points of the contacts.
- You can make identical settings for a minimum function similar to the maximum function.

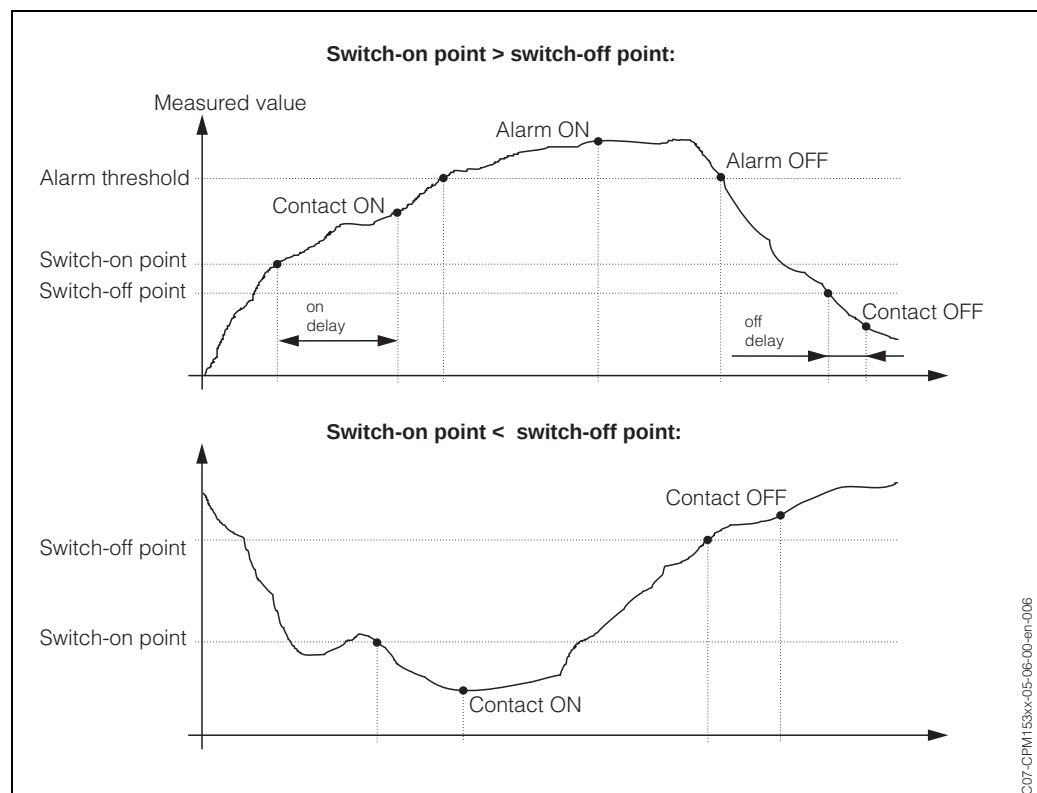


Fig. 25: Diagram of the relationship between on and off points and on and off delay


To enter the menu, proceed as follows:



CODE	CHOICE (default = bold)	INFO
O1	Limit switch 1 Limit switch 2 Limit switch 3 Limit switch 4 Limit switch 5	Selection of the limit switch which you wish to configure. There are five limit switches available.
Limit switch 1 / 2 / 3 / 4 / 5:		
OA1 / OB1 / OC1 / OD1 / OE1	Function off Assignment PV CH1 On point: 2000mS/cm / 0500 MΩ·cm / 99.99% Off point: 2000mS/cm / 0500 MΩ·cm / 99.99%	Limit switch configuration: <i>Function:</i> Activation of function as limit switch <i>Assignment:</i> Selection of the measured value to which the limit value should apply. Selection: primary value CH1, temperature CH1, primary value CH2, temperature CH2, USP CH1, USP CH2, related (only if operating mode = combined circuits) <i>On-point:</i> Entry of the value at which the limit function is activated. <i>Off-point:</i> Entry of the value at which the limit function is deactivated. (Settable range: 0 ... 2000 mS/cm / 0 ... 100% / 0 ... 100 MΩ / -50 ... +150°C)
OA2 / OB2 / OC2 / OD2 / OE2	On delay: 0000 s Off delay: 0000 s Alarm 2000mS/cm / threshold: 500 MΩ / 99.99%	Limit switch configuration: <i>On delay:</i> Entry of the switch-on delay of the (range 0 ... 2000 s) <i>Off delay:</i> Entry of the switch-off delay (range 0 ... 2000 s) <i>Alarm threshold:</i> Entry of the value (alarm threshold) at which the fault signalling contact switches.

6.4.16 Set up 2 – Controller quick adjustment

To enter the menu, proceed as follows:

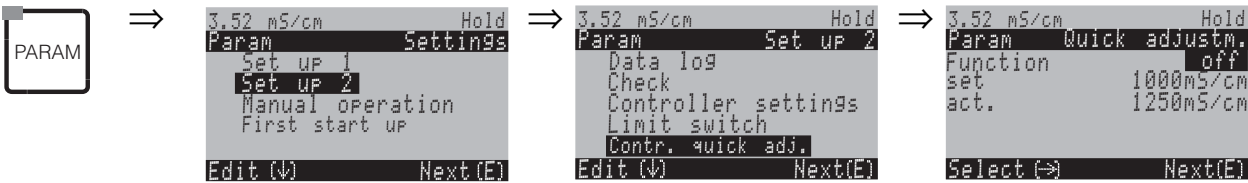

6.4.17 Set up 2 – ChemoClean

ChemoClean® is a system to automatically clean conductivity sensors. Water and cleaner are conveyed to the sensor by means of an injector (e.B. CYR 10).

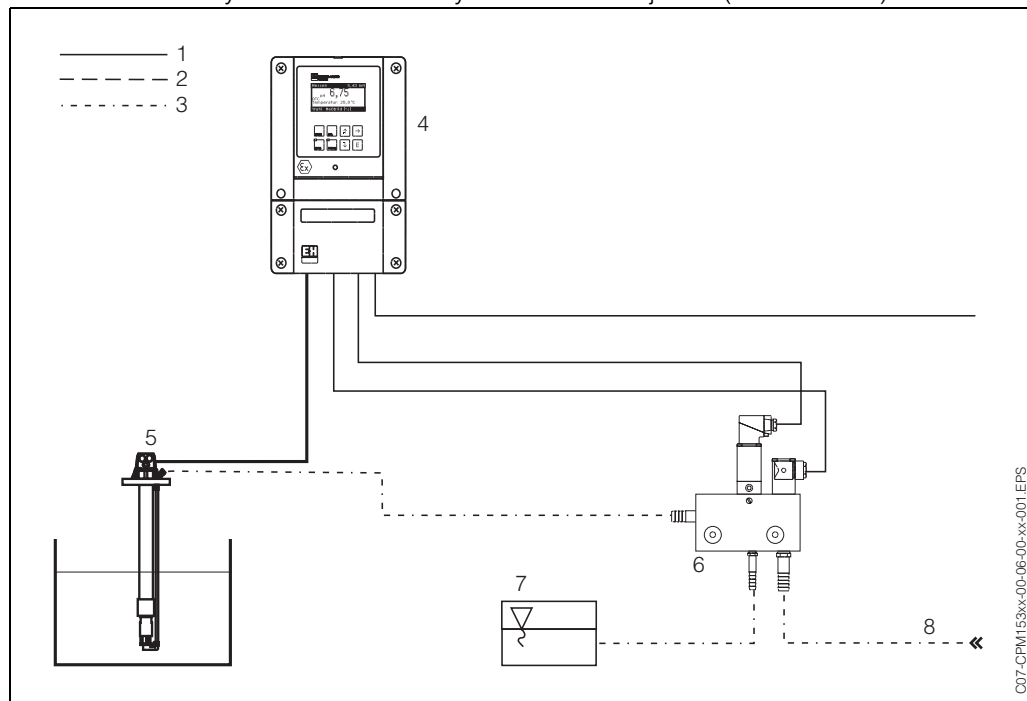


Fig. 26: 1: Electric line
2: Pressurised air
3: Water/cleaning liquid
4: CLM 153 transmitter
5: Immersion assembly
6: Injector CYR 10
7: Cleaning liquid
8: Motive water

Operation:

1. In the menu "Set up 1" → "Contacts" (Field F1, s. page 38), the ChemoClean® function must be switched on and the appropriate contacts connected to the injector.
2. The cleaning processes are configured in the menu "PARAM" → "Set up 2" → "ChemoClean". Here, the automatic or event-controlled cleaning can be adapted to the process conditions.
One or more of the following controls are possible:
 - Weekly programme (see below, Fields OA1 to OAA5): Any number of cleanings can be started on each weekday
 - External control: a start can be triggered via the digital input. For this, external control must be activated in Field O1, "Select control levels": Ext. control "on")
 - Clean trigger: Cleaning is carried out if an error with a cleaning trigger occurs, (see also Field LM1 under "Set up 2" → "Check systems")
 - Power failure: cleaning is started after a power failure.

Manual operation:

Rapid on-site cleaning can be carried out with the menu:
"PARAM" → "Manual operation" → "ChemoClean" → press "E" twice ("start cleaning")

Weekly programming:

"PARAM" → "Set up 2" → "ChemoClean":
Each day can be programmed individually. The following programmes are available

- "Clean": Cleaning started by entering the start time (s. fig. 27).
- "Clean Int": Cleaning is carried out at intervals with a defined spacing (s. fig. 27). This programme cannot be started via the binary inputs directly.
- "User": User-defined cleaning programmes (create in Programme Editor; from Field NAD1).

Programme sequences (cleaning example)

Monday:
2 x cleaning (at 11:00 and at 18:00) with 120 s. water, of which 60 s. additionally with cleaner.
Clean every 30 mins. between 18:20 and 24:00 (= 1800 s.) with 120 s. water, of which 60 s. additionally with cleaner.

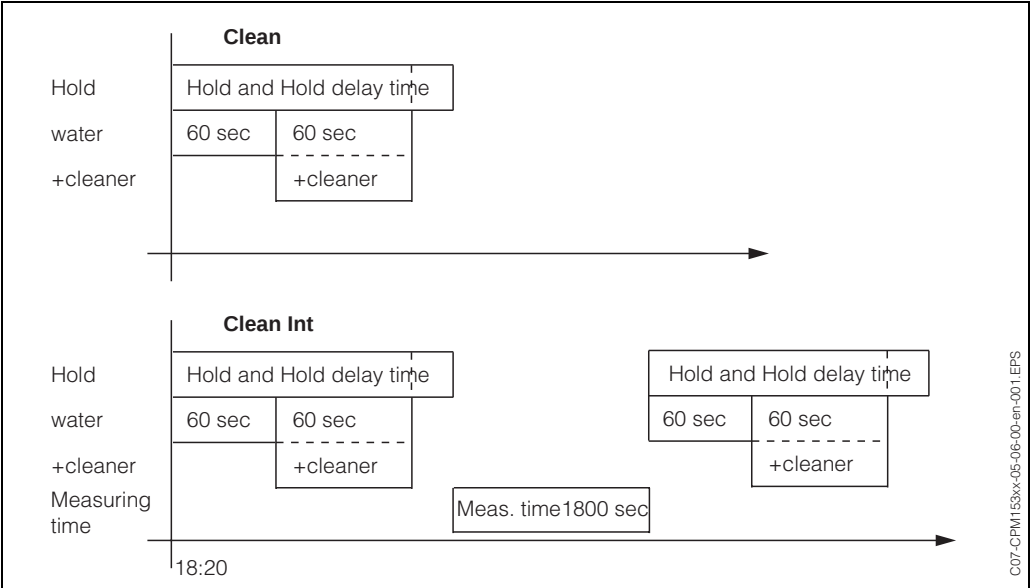


Fig. 27: Graphic representation of the above example

Required settings according to the example
(bold: to be set by user):

Field OAA1	Field OAA2 (with "Clean")	Field OAA2 (with "Clean Int")
Clean	01 Water 60 s	01 Water 60 s
11:00 11:02	02 +Cleaner 60 s	02 +Cleaner 60 s
Clean	03 Water 0s	03 Water 0s
18:00 18:02	04 Rep. Clean 0x	Measuring time 1800s
Clean Int		
18:20 24:00		

In this way, each day can be programmed (or copied) individually.

To enter the menu, proceed as follows:




CODE		CHOICE (default = bold)		INFO
P1		Weekly progr. Clean trigger Ext. Control	off off off	Select control levels Activate the function which should trigger ChemoClean cleaning.
P2		Weekly progr. Clean trigger Ext. Control	off off off	Note in display: Displays the current system status
P3		Weekly progr. User prg.		Select the configuration menu <i>Weekly programme:</i> Select only with "weekly programme on" <i>User programme:</i> Here you create customer-specific programmes using the Programme Editor (see Programme Editor, p. 71).
	Weekly programme:			
PA1		Monday Tuesday Sunday	1 2 ... 0	Weekday selection menu Select cleaning day. The number of cleaning triggers for the day is shown behind each day.
PA2		Edit day? Copy day?		Select day function <i>Edit day:</i> You edit the cleaning sequence for this day. <i>Copy day:</i> The day selected in OA1 is copied to the day selected in the field below.
	Edit day:			
	PAA1	Clean 18:22 18:23 No progr.		View/edit day programme You can see the complete daily programme or "No Progr.". You can overwrite the option and also the already set programmes by making a new selection. The start and finish times are always given. Example: Clean 18:22 (start time) 18:23 (finish time) User prog.: Use of a programme you created (see Programme Editor, p. 71)

CODE		CHOICE (default = bold)	INFO
	PAA2	01 Water 0 s 02 +Cleaner 30 s 03 Water 30 s 04 Rep. cleaning 0x	Select programme blocks The times for individual programme steps can be individually adjusted here. Select a block for editing by pressing "E". <i>+Cleaner:</i> Cleaner is conveyed in addition to water. <i>Rep. cleaning:</i> Number of repetitions of the previous steps 01 ... 03  Note! - When you change one of this programme blocks the changes will affect every cleaning. - Leave this selection by pressing "PARAM".
	PAA3	0010 s (0 ... 9999s)	Water / cleaner: Enter the time during which the valve remains open to allow the conveyance of water or cleaner.
	PAA4	Repeat x number of times 00 (0 ... 10)	Repeat cleaning How often should the previous step (cleaner or water) be repeated?
	Copy day:		
	PAB1	Tuesday Wednesday ... Sunday	? = Monday Select the day to which you want to copy Monday (example).  Note! Danger of data loss. When copying one day to another, the cleaning programmes of the <i>target day</i> are overwritten.
	User programme: (Programme Editor)		
	PAB1	User prog. 1	Select user programme With ChemoClean there is <i>one</i> user programme available.
	PAB1	Edit Insert template Enable Disable Rename	Select edit function <i>Insert template:</i> An installed programme (e.g. <i>Clean</i>) can be inserted into the user programme.  Note! - After a programme is disabled, it can be re-enabled at any time. - Leave this item by pressing "PARAM".
	Edit:		
	PBA1	01 02	Select rows The row with the selected position number can be edited with "E".  Note! Leave this selection by pressing "PARAM".

CODE		CHOICE (default = bold)	INFO
	PBA2	Change Insert Move to Delete	Select the edit function for the selected block <i>Change:</i> The function is changed for the selected position <i>Insert:</i> A new block is inserted before the highlighted position. <i>Move to:</i> The highlighted function is moved to a different position. <i>Delete:</i> The highlighted function is deleted (there is no query whether you really want to delete!)
		Change / insert:	
	PBAA1	Water +Cleaner Wait Back to ...	Select function <i>Back to :</i> You can create a programme loop with this function (for repeats). Possible selection: Water, +cleaner, wait, back to
		Move to:	
	PBAA2	(Displays blocks as list) 01 Water 02 +Cleaner 03 Wait	Select rows You move the function selected in Field NADA1 to the highlighted position.  Note! The highlighted function will be overwritten.
		Insert template:	
	PBB1	User prog. = ? No prog. Clean _____	Select the template you want to copy to the user programme.
		Enable programme:	
	PBC1	Programme is enabled	Note in display (no entry): The created or edited programme is enabled.
	PBC2	User prog. (0 ... 9; A ... Z)	Change name 9-character name for your user programme, freely selectable.
		Disable programme	
	PBD1	Do you want to disable the programme?	Query Pressing "E" (= Continue) disables the programme. Pressing "PARAM" (= Cancel) takes you back without disabling the programme.
	PBD2	The programme was disabled.	Note in display (no entry)
		Rename programme:	
	PBE1	User prog. (0 ... 9; A ... Z)	Change name 9-character name for your user programme, freely selectable.

6.4.18 Manual operation

To enter the menu, proceed as follows:

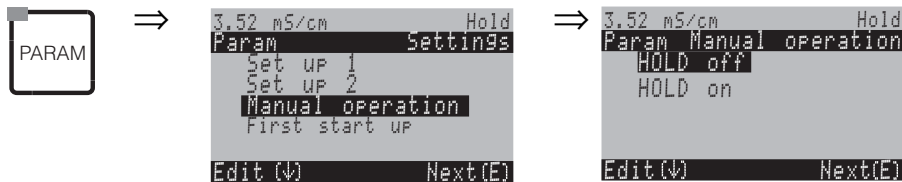

CODE	CHOICE (default = bold)	INFO
R1	ChemoClean Hold	Select manual operation Note! - Leave the manual operating menu by pressing "PARAM", "DIAG" or "MEAS". - The settings are only active in this menu. Nothing is saved when you leave.
R2	!!!Caution!! You are now leaving manual operation.	If you leave the manual operation: Note in display Confirm by pressing "Enter": Leave the manual operation. Cancel by pressing "PARAM": Continue with manual operation.
ChemoClean:		
RB1	Weekly progr. off Clean trigger off Ext. Control off	Note in display (no entry): System status
RB2	abort start	ChemoClean cleaning Start / Abort. Here, each external programme start is suppressed. Note! Leave this item by pressing "PARAM".
HOLD:		
RC1	HOLD off HOLD on	Select manual operation Activate / deactivate Hold The "HOLD" function freezes the current outputs as soon cleaning/calibration is undertaken. Note! If the controller function lies on current output 2, it follows the instructions of the defined "controller hold" (s. page 46).

6.4.19 Diagnosis

To enter the menu, proceed as follows:



CODE	CHOICE (default = bold)	INFO
U	Error list Error log Operation log Calibration log service	<i>Error list:</i> Displays the current active errors. (Complete error list with description s. page 88) <i>Error log:</i> Lists the last 30 signalled errors with date and time. <i>Operation log</i> (service code necessary): Lists the last 30 registered operating steps with date and time. <i>Calibration log:</i> Lists the last 30 calibrations undertaken with date and time.  Note! • Use the arrow keys to scroll through the lists. • Leave the lists by pressing "E".
Service:		
Y	Factory settings Simulation Instrument check Reset DAT handling Instrument version ChemoClean Factory function	Selection for service diagnosis <i>Factory settings:</i> Different data groups can be reset to the factory settings. <i>Simulation:</i> The transmitter behaviour can be simulated after entering various parameters. <i>Instrument check:</i> The instrument functions (display, keys, etc.) can be tested individually. <i>Reset:</i> Device reset ("warm start") <i>DAT handling:</i> Copy data into/out of the DAT module. <i>Instrument version:</i> Device internal data e.g. serial number can be queried. <i>ChemoClean</i> (only, if the complete ChemoClean function is activated): Inspecting programmes, inputs, mechanics. <i>Factory function:</i> Reset counter, write access

CODE		CHOICE (default = bold)	INFO
	Factory settings:		
	YA1	cancel Setting data Calibration data All data Service data Operation log Error log Calibration log	Set default Here you can select the data which you wish to reset to the factory settings.  Note! <i>Danger of data loss.</i> Selecting a point and confirming with "Enter" deletes all the settings you made in this area! Pressing <i>Cancel</i> leaves this field without changing the values. Calibration data: All the saved data for calibrations such as zero point, slope, and offset. Setting data: The remaining data to be set. All data: Calibration data + setting data Service data: All data + logbooks + reset counters. Service data / logbooks: These functions are only for authorised service personnel. The service code is required.
	Service data / logbooks:		
	YAA1	0000	Entry of the service code required  Note! For service code setting, see Field D1, p. 33.
	YAA2		Note in display: Incorrect service code entry (back to the last field)
	Simulations:		
	YB1	Simulation: off Output 1: 12.00 mA Output 2: 04.00 mA	Adapt simulation (current outputs) <i>Simulation off:</i> The frozen values from the last measurement are used for the simulation. <i>Simulation on:</i> The current values for the outputs can be changed (Output 1, Output 2)
	YB2	Simulation: off Measured value 1: 1mS/cm Temperature: 025.0 °C Measured value 2: 0mS/cm Temperature: 000.0 °C	Adapt simulation (measured value/temperature) <i>Simulation off:</i> The frozen values from the last measurement are used for the simulation. <i>Simulation on:</i> The values (measured value/temperature) can be changed.
	YB3	Simulation: off Failure contact: off Contact 1: off Contact 2: off	Adapt simulation (contacts) <i>Simulation off:</i> The last statuses are frozen and used for the simulation. <i>Simulation on:</i> The contacts can either be opened (on) or closed (off).  Note! If you return to the measurement mode with the simulation switched on, "Simul" and "Hold" flash in the display.

CODE		CHOICE (default = bold)	INFO
	Instrument check:		
	YC1	Display Keypad RAM EEPROM Flash	Selection for check <i>Display:</i> All the fields are queried alternately. Defective cells become visible. <i>Keypad:</i> All the keys must be pressed one after the other. If the system is functioning perfectly, the appropriate symbols appear in the display. <i>RAM:</i> "RAM O.K." message if there are no errors. <i>EEPROM:</i> "EEPROM O.K." message if there are no errors. <i>Flash (memory):</i> "Flash OK" message if there are no errors.  Note! Leave this item by pressing "PARAM".
	DAT handling:		
	YD1	Save to DAT Read from DAT Erase DAT	DAT selection <i>Save to DAT:</i> You can save the both the configuration and the logbooks of your transmitter to the DAT module. <i>Read from DAT:</i> Copy the configuration saved on the DAT module into the EEPROM of the transmitter. <i>Delete DAT:</i> Delete all data on the DAT module.  Note! - After the "Read from DAT" copying procedure, a reset is triggered automatically, and the device is configured with the copied values. (See below for reset). - If there is no DAT module inserted, a message appears on the display.
	Save to DAT:		
	YD2	!!Caution!! All the data on the DAT module will be deleted.	Note in display For safety reasons, you are asked if you really want to overwrite the existing data.
	Read from DAT:		
	YD3	in process	Data were written to the DAT module
	Erase DAT:		
	YD4	!!Caution!! All the data on the DAT module will be deleted.	Note in display For safety reasons, you are asked if you really want to overwrite the existing data.
	Reset		
	YE1		Reset You can restart the Mycom S with this function (similar to the "warm start" on your computer). You can use this function if the Mycom S does not react as expected.  Note! This reset does not change saved data.

CODE		CHOICE (default = bold)	INFO
		Instrument version:	
	YF1	SW Version: 1.2 HW Version: 1 Serial No.: 1234567 Card ID: 8 A1B	Controller data Open controller data and the hardware version.
	YF2	SW Version: 1.2 HW Version: 1 Serial No.: 1234567 Card ID: 8 A1B	Basic module data
	YF3	SW Version: 1.2 HW Version: 1 Serial No.: 1234567 Card ID: 8 A1B	Transmitter 1 data Open transmitter data (1).
	YF4	SW Version: 1.2 HW Version: 1 Serial No.: 1234567 Card ID: 8 A1B	Transmitter 2 data Open transmitter data (2).
	YF5	SW Version: 1.2 HW Version: 1 Serial No.: 1234567 Card ID: 8 A1B	DC-DC converter data (only for two circuit)) Module for power supply of transmitter 2
	YF6	SW Version: 1.2 HW Version: 1 Serial No.: 1234567 Card ID: 8 A1B	Relay data
	YF6	12345678901234	Enter serial number 14 digit number consisting of 0 ... 9 and A ... Z
	YF7	CLM153-A2B00A010	Order Code 15 digit number consisting of 0 ... 9 and A ... Z
		ChemoClean:	
	YH1	Weekly progr. off Clean trigger off Ext. Control off	Note in display (no entry): System status
	YH2	With E running programme is aborted.	Note in display (no entry): To be able to carry out the diagnosis, you must abort the programme currently running by pressing the "Enter" key.
	YH3	Ext. Inputs Mechanics	Selection ChemoClean diagnosis

CODE			CHOICE (default = bold)		INFO
			Ext. Inputs:		
		YHA1	Start Auto stop Wait trigger Ass. measurement Ass. service	Userprog On On On On On	Info field: status of external digital inputs
			Hardware:		
		YHB1	Water Cleaner Water and cleaner		Select mechanics Select a function which shall be tested.
		YHB2	Weekly progr. Clean trigger Ext. Control	off off off	Note in display (no entry): System status
			Factory functions:		
		YI1	0		Reset counter (only triggered by watchdog) Can be reset via Set Default → service data.
		YH2	0		Write access Number of write accesses to the EEPROM is reported here.

6.4.20 Calibration

The calibration can be protected with the maintenance and the specialist codes. No calibration can be carried out at the display level (compare with page 33).

Procedure:

1. Move assembly to service position (when a retractable assembly is used).
2. Remove sensor.
3. Clean sensor before calibration.

Calibration can be performed in two different ways:

- By measuring with a known conductivity (Fields xx to yy) in a calibration solution
- By entering the precise cell constant of the conductivity sensor (Field A5, p. 31).



Note!

- For the calibration described below, the transmitter must be in "Conductivity" operating mode. If the transmitter shows the resistance or concentration mode, you have to switch to conductivity mode throughout calibration.
- If automatic temperature compensation is selected for calibration (s. page 27), the corresponding temperature sensor must also be immersed in the calibration solution.
- The instrument switches automatically to Hold (factory setting) whenever it is calibrated.
- Cancel calibration by pressing the "MEAS" key.


```


3.52 mS/cm
Cal          Cancel Calib.
no
yes, Cancel Calib.
Edit (↑)    Next (E)



```

- If you confirm this with "yes, cancel cal.", you return to the measurement mode.
- If you select "no", calibration is continued.

To enter the menu, proceed as follows:

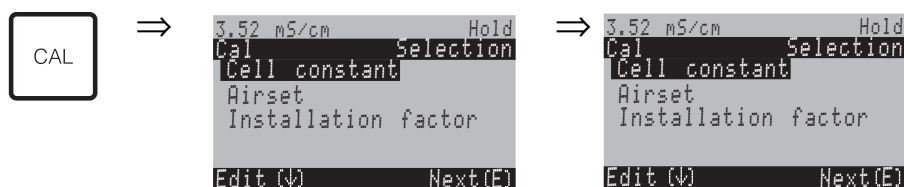

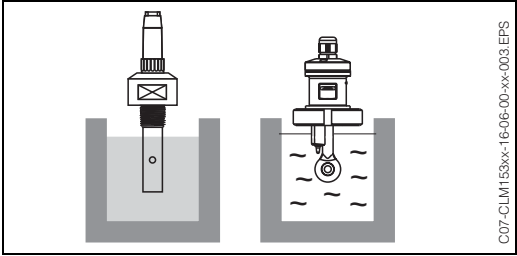CODE	CHOICE (default = bold)	INFO
C1	Sensor 1 Sensor 2 End calibration	Selection for calibration (only two circuit) Select sensor 1 or 2, and then run through calibration for each individual sensor.
C2	Cell constant Airset Installation factor (adaption factor)	Selection <i>Cell constant</i> : Calculate the cell constant of the sensor. <i>Airset</i> (only inductive): The sensor must be calibrated at air and in a dry state. <i>Installation factor (adaption factor)</i> (only inductive): Sensor calibration with compensation for the wall effect.
Cell constant:		
Immerse the sensor (inductive or conductive) into the calibration solution.  Note! Immerse the sensor in such a way that there is a minimum distance of 15 mm to the vessel wall, so that the installation factor does not play a role.		
CB1	025.0 °C (-35.0 ... 250°C)	Entry of MTC temperature (only MTC)
CB2	2.10 % / K (0.00 ... 20.00% / K)	Alpha value (TC value) Enter the α value of the calibration solution. This value is specified for the E+H calibration solutions or is calculated from the imprinted table
CB3	Current measured value (0.0 ... 9999 mS/cm)	Current measured value Enter the correct conductivity value of the calibration solution. It makes sense to use a calibration solution which is at >40 % of the measuring range of the sensor used. The display is always in mS/cm.
CB4	5.9 cm-1 (0.1 ... 9.99 cm-1)	Cell constant The calculated cell constant is displayed and applied to Field A5 (s. page 31).
CB5	ok	Calibration status
CB6	Accept Reject Recalibrate	End of calibration <i>Accept</i> : Pressing "E" accepts the new calibration data. <i>Reject</i> : The data are not accepted, a recalibration will not be started. <i>Recalibrate</i> : The data are rejected and a new calibration will be started.

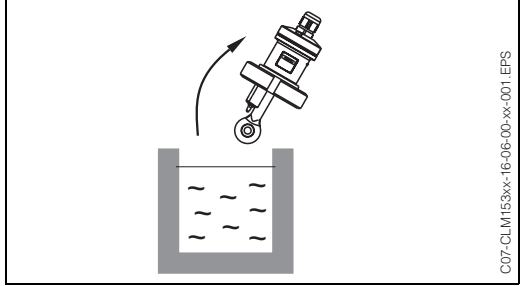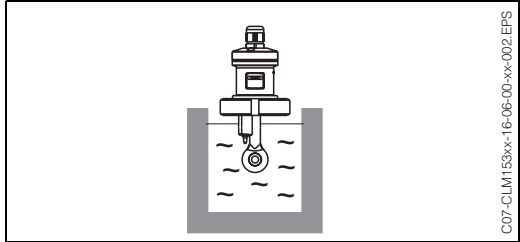CODE	CHOICE (default = bold)	INFO
	Proceed with E	
Airset (only inductive):		
	Remove sensor from the liquid and dry thoroughly.  Note! As long as the sensor is out of the medium during Airset, an error code referring to measuring range violation (E055/E056) can be ignored.	 C07-CLM153xx-16-06-00-xx-001.EPS
CA1	0.0µS/cm	Current measured value Start calibration residual coupling using CAL key.
CA2	42µS/cm (-80 ... 80 µS/cm)	Residual coupling The residual coupling of the system (sensor and transmitter) is displayed.
CA3	ok	Calibration status
CA4	Accept Reject Recalibrate	End of calibration <i>Accept:</i> Pressing "E" accepts the new calibration data. <i>Reject:</i> The data are not accepted, a recalibration will not be started. <i>Recalibrate:</i> The data are rejected and a new calibration will be started.
	Proceed with E	
Installation factor (adaption factor) (only inductive):		
	The sensor remains in the place of application.	 C07-CLM153xx-16-06-00-xx-002.EPS
CC1	025.0 °C (-35.0 ... 250°C)	Entry of MTC temperature (only MTC)
CC2	2.10 % / K (0.00 ... 20.00% / K)	Alpha value (TC value) Enter the α value of the calibration solution. This value is specified for the E+H calibration solutions or is calculated from the imprinted table
CC3	Current measured value (0.0 ... 9999 mS/cm)	Current measured value Enter the correct conductivity value of the calibration solution. It makes sense to use a calibration solution which is at >40 % of the measuring range of the sensor used. The display is always in mS/cm.
CC4	1 (0.10 ... 5.00)	Installation factor(Adaption factor) The calculated installation factor is displayed and applied to Field A5 (s. page 31).

CODE		CHOICE (default = bold)	INFO
	CC5	Accept Reject Recalibrate	End of calibration <i>Accept:</i> Pressing "E" accepts the new calibration data. <i>Reject:</i> The data are not accepted, a recalibration will not be started. <i>Recalibrate:</i> The data are rejected and a new calibration will be started.
		Proceed with E	

7 Maintenance

The transmitter Mycom S CLM 153 itself does not contain wear parts and is maintenance free.

Measuring point maintenance comprises:

- Cleaning of assembly and sensor,
- Inspecting cables and connections,
- Calibration (s. page 81).



Warning!

Danger to persons. If you have to remove the sensor for servicing or calibration work, pay attention to the hazards caused by pressure, temperature and contamination.



Caution!

Remember that any maintenance work on the instrument, assembly or sensors may have impacts on process control and the process itself.

7.1 Maintaining the measuring system

7.1.1 Cleaning

Depending on the process, and as far as necessary, the assembly, cables and sensor must be cleaned externally before inspection and calibration. For your own safety always follow the safety instructions (see above). If necessary wear protective clothing.

Remove dirt and deposits:

The selection of cleaning agent depends on the type of soiling. The most frequent soiling and the associated cleaning agents are listed in the table below:

Type of soiling	Cleaning agent
Greases and oils	Substances containing tensides (alkaline) or water-soluble organic solvents (e.g. alcohol)
 Warning! Danger of caustic burns! Protect your hands, eyes and clothing when you use the following detergents.	
Calciferous deposits, metal hydroxide deposits, heavy biological deposits Light biological deposits	3% HCl or with ChemoClean: HCl (10%) in injector thinned to approx. 3%
Sulphide deposits	Mixture of hydrochloric acid (3%) and thiocarbamide (commercially available)
Protein deposits	Mixture of hydrochloric acid (0.1 molar) and pepsin (commercially available)
Light biological deposits	Water under pressure

7.1.2 Inspecting cables and connections

Please check cables and connections using the following checklist. As there are many different combination possibilities, these instructions are kept to a general level and must be applied to the current installation.

- Check the sensor plug-in head for airtightness and humidity.
- Check the sensor cable and particularly the outer insulation for breaks.
- Sensor cables which have become damp on the inside must be replaced. Drying alone is not sufficient!
- If you are using a junction box: The inside of the box must be clean and dry. Moist dehydrating bags must be replaced.*
- Retighten the terminals in the junction box.*
- For in-field instruments:
Retighten the terminals in the instrument. Also check that the interior and the PCBs are clean, dry and free of corrosion (if not, check the seals and threaded joints for leaks and breaks). *, **
- For panel-mounted instruments:
Retighten the terminals on the instrument, check the BNC connector. *, **
- Cable screens must be connected exactly as shown in the wiring diagram. If the screen is connected incorrectly or not at all, the fail-safety of the instrument could be impaired.

*: The frequency of these checks is dependent on environmental influences. In a normal climate and non-aggressive environment, an annual check is sufficient.

**: This work may only be carried out on a voltage-free instrument, as some of the terminals carry mains voltage.

7.1.3 Simulation of conductive sensors for device test

You can check the transmitter for conductive conductivity by substituting resistances for the measurement section and temperature sensor. The accuracy of the simulation depends on the accuracy of the resistances.

Temperature

The temperature values in the table on the right apply if a temperature offset is not set at the Mycom S.

All temperature values are increased by factor 10 for temperature sensor type Pt 1000.

 Note!

- Connect the temperature equivalent resistance in three-wire technology.
- You can use the service kit "Cond. test adapter" (Order No.: 51500629) when connecting resistance decades instead of the cond. sensor.

Pt 100 equivalent resistances:

Temperature	Resistance value
-20 °C	92.13 Ω
-10 °C	96.07 Ω
-0 °C	100.00 Ω
10 °C	103.90 Ω
20 °C	107.9 Ω
25 °C	109.73 Ω
50 °C	119.40 Ω
80 °C	130.89 Ω
100 °C	138.50 Ω
200 °C	175.84 Ω

Conductivity

If the cell constant k is set to the value in the second column of the table on the right, then the conductivity values of this table apply.

Otherwise the following applies:

$$\text{Conductivity}[\text{mS/cm}] = k \cdot 1/R[\text{k}\Omega]$$

Resistance R	Cell constant k	Display with conductivity
10 Ω	1 cm-1	100 mS/cm
	10 cm-1	1000 mS/cm
100 Ω	0.1 cm-1	1 mS/cm
	1 cm-1	10 mS/cm
	10 cm-1	100 mS/cm
1000 Ω	0.1 cm-1	0.1 mS/cm
	1 cm-1	1 mS/cm
	10 cm-1	10 mS/cm
10 k Ω	0.01 cm-1	1 μ S/cm
	0.1 cm-1	10 μ S/cm
	1 cm-1	100 μ S/cm
	10 cm-1	1 mS/cm
100 k Ω	0.01 cm-1	0.1 mS/cm
	0.1 cm-1	1 μ S/cm
	1 cm-1	10 μ S/cm
1 M Ω	0.01 cm-1	0.01 μ S/cm
	0.1 cm-1	0.1 μ S/cm
	1 cm-1	1 μ S/cm
10 M Ω	0.01 cm-1	0.001 μ S/cm
	0.1 cm-1	0.01 μ S/cm

7.1.4 Simulation of inductive sensors for device test

An inductive sensor alone cannot be simulated using resistances. However, you can use equivalent resistances to check the entire system CLM 153 (inductive) including the sensor. Please pay attention to the cell constant k (e.g. $k_{\text{nominal}} = 2$ for CLS 50, $k_{\text{nominal}} = 5.9$ for CLS 52).

For an exact simulation, use the cell constant actually used (can be read off in Field C124) for calculating the reading:

$$\text{Display cond.}[\text{mS/cm}] = k \cdot 1/R[\text{k}\Omega]$$

Reference values for the simulation CLS 52 at 25 °C:	Simulation resistance R	Cell constant k	Display cond.
Carrying out the simulation: Guide a line through the opening of the sensor and connect it to a resistance decade, for example.	6.8 Ω	5.90 cm-1	8.68 mS/cm
	33 Ω	5.90 cm-1	178.8 mS/cm
	330 Ω	5.90 cm-1	17.88 mS/cm
	3.3 k Ω	5.90 cm-1	1.788 mS/cm

7.1.5 Checking conductive conductivity sensors

- Measuring surface connection:
The measuring surfaces are directly connected with connections of the sensor plug.
Check with ohmmeter at $< 1 \Omega$.
- Measuring surface shunt:
A shunt may not exist between the measuring surfaces. Check with ohmmeter at $> 20 M\Omega$.
- Temperature sensor shunt:
A shunt may not exist between the measuring surfaces and the temperature sensor.
Check with ohmmeter at $> 20 M\Omega$.
- Temperature sensor
Refer to the sensor nameplate for the type of temperature sensor used.
The sensor can be checked with an ohmmeter at the sensor plug:
 - Pt 100 at 25 °C = 109.79 Ω
 - Pt 1000 at 25 °C = 1097.9 Ω
 - NTC 10k at 25 °C = 10 k Ω
- Connection:
Make sure the terminals are correctly assigned for sensors with terminal connection (CLS 12/13). Check that the terminal screws are secure.

7.1.6 Checking inductive conductivity sensors

The following data apply to sensors CLS 50 and CLS 52.

- Test send coil and receive coil (white and red coaxial cable, each measured between inner connector and screen):
 - ohmic resistance approx. .5 ... 2 Ω
 - Inductance approx. 260 ... 450 mH (at 2 kHz).
- Test coil shunt:
A shunt may not exist between the coils (from red coax to white coax). Check with ohmmeter at $> 20 M\Omega$.
- Test temperature sensor:
You can use the table in chap. 7.1.3 to check the Pt 100. The resistance values between the green and white cores and green and yellow cores must be identical.
- Test temperature sensor shunt:
Shunts may not exist between the temperature sensor (green, white or yellow lines) and the coils (red coax or white coax). Check with ohmmeter at $> 20 M\Omega$.

7.1.7 Checking line extension and boxes

- Use the methods described in Chap. 8.7.2 or 8.7.3. to carry out a quick functional check from the sensor plug (for conductive sensors) or from the sensor (for inductive sensors) to the device. The easiest way to connect the resistance decades is with the "conductivity test adapter" service kit, Order No: 51500629.
- Check the junction boxes for:
 - moisture (impact at low conductivity, if necessary dry box, replace seals, insert dehydrating bag)
 - correct connection of all lines
 - connection of the outer screening
 - security of the terminal screws.

8 Troubleshooting

Trouble-shooting relates not only to measures which

- can be carried out without opening the instrument but also
- to instrument defects which require the replacement of components.

8.1 Troubleshooting instructions

In this chapter, you will find diagnosis information and information on eliminating errors which occur:

- | | | |
|---|---|--------------------------------------|
| chap. 8.1.1, p. 88: Error number list | → | List of all occurring error numbers. |
| chap. 8.1.2, p. 91: Process-specific errors | → | e.g. temperature value is incorrect. |
| chap. 8.1.3, p. 93: Device-specific errors | → | e.g. display is dark. |

Before starting the repair work, please note the following safety instructions:



Warning!

Danger to life.

- De-energise the instrument before you open it. Check that there is no voltage and secure the switch(es) against switch-on.
- If work is required under voltage, this may only be carried out by an electrician, but a second person must be present for safety reasons.
- Switching contacts may be powered by separate circuits. Also de-energise these circuits before you work on the terminals.



Caution!

Danger to components through electrostatic discharge (ESD).


- Electronic components are sensitive to electrostatic discharge. Take protective measures, e.g. remove the charge from your person by touching the PE or wear a permanent grounding in the form of a wrist strap.
Highly dangerous: Plastic floors at low air humidity and clothing made of synthetic materials.
- For your own safety, always use genuine spare parts. Only genuine spare parts ensure the correct function, accuracy and reliability after repairs.

8.1.1 Error number list: Troubleshooting and configuration

In the following error list, you can find a description of all the error numbers occurring. For each error number there is also data on whether the factory setting (= Fact.) of this error triggers

- an alarm,
- an error current or
- cleaning.

To enter the error list, proceed as follows:

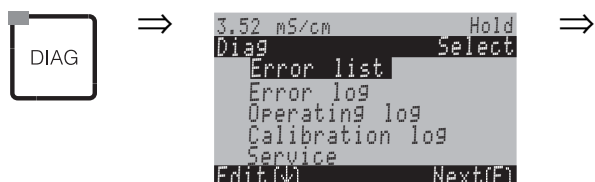

Note!

- Please process the errors as shown in Field H5 (Alarm menu) on page 45.
- The second column shows the assignment acc. to NAMUR work sheet NA64 (failure, maintenance, function control).

Error no.	NAMUR class	Error message	Possible causes / measures	Alarm contact		Error current		Automatic cleaning start	
				Fact.	User	Fact.	User	Fact.	User
E001	Failure	Memory error	Switch instrument off and back on.	yes		no		–	–
E002	Failure	User data invalid	Corrective maintenance in the factory, if necessary.	yes		no		–	–
E003	Failure	No valid configuration							
E004	Failure	Erro invalid hardware or software	The new software cannot recognise the module.						
E006	Failure	Transmitter 2 error	Test with new transmitter.	yes		no		–	–
E007	Failure	Transmitter 1 error		yes		no		–	–
E008	Failure	Sensor error 1	Check sensor and sensor connection (chap. 7.1.5 / chap. 7.1.6 or by E+H service)	yes		no		no	
E009	Failure	Sensor error 2		yes		no		no	
E010	Failure	Temperature sensor 1 defective	Check temperature sensor and connections; if necessary, check transmitter with temperature simulator.	yes		no		no	
E011	Failure	Temperature sensor 2 defective		yes		no		no	
E019	Failure	Delta exceeded failure	Check single measured values (input 1 / input 2) for plausibility	yes		no		–	–
E025	Failure	Limit Airset Offset CH 1 exceeded	Carry out airset again (only inductive; at air) or replace sensor. Clean and dry sensor before airset.						
E026	Failure	Limit Airset Offset CH 2 exceeded							
E034	Failure	Cell constant sensor 1 exceeded	Clean sensor and recalibrate; if necessary, check sensor, line and connections.	yes		no		–	–
E035	Failure	Cell constant sensor 1 undershot		yes		no		–	
E036	Failure	Cell constant sensor 2 exceeded		yes		no		–	
E037	Failure	Cell constant sensor 2 undershot		yes		no		–	

Error no.	NAMUR class	Error message	Possible causes / measures	Alarm contact		Error current		Automatic cleaning start	
				Fact.	User	Fact.	User	Fact.	User
E038	Maintenance	Delta limit exceeded	Check single measured values (input 1 / input 2) for plausibility. Measuring can still continue until failure error E019 occurs.	yes		no		–	–
E046	Failure	Installation factor CH 1 exceeded	Check pipe diameter, clean sensor and carry out calibration again (only for inductive).						
E047	Failure	Installation factor CH1 undershot							
E048	Maintenance	Installation factor CH 2 exceeded		yes		no		–	–
E049	Maintenance	Installation factor CH 2 undershot		yes		no		–	–
E053	Failure	Actuator error							
E054	Maintenance	Dosing time monitor	Feedback to controller defective	yes		no		–	–
E055	Failure	Display / measuring range of main parameter 1 undershot	Immerse sensor in conductive medium. For inductive: Carry out airset. As long as the sensor is out of the medium during Airset, an error code referring to measuring range violation can be ignored.	yes		no		no	
E056	Failure	Display / measuring range of main parameter 2 undershot		yes		no		no	
E057	Failure	Display / measuring range of main parameter 1 exceeded		yes		no		no	
E058	Failure	Display / measuring range of main parameter 2 exceeded		yes		no		no	
E059	Failure	Temperature measuring range 1 undershot	Temperature sensor defective; Sensor line interrupted or short-circuited; Incorrect sensor type selected Simulation s. chap. 7.1.3 / chap. 7.1.4.	yes		no		no	
E060	Failure	Temperature measuring range 2 undershot		yes		no		–	–
E061	Failure	Temperature measuring range 1 exceeded		yes		no		no	
E062	Failure	Temperature measuring range 2 exceeded		yes		no		–	–
E063	Failure	Current range current output 1 undershot	Measured value outside specified current range: Check measured value for plausibility, if necessary adjust current output assignment 0/4 mA and/or 20 mA.	yes		no		no	
E064	Failure	Current range current output 1 exceeded		yes		no		no	
E065	Failure	Current range current output 2 undershot		yes		no		–	–
E066	Failure	Current range current output 2 exceeded		yes		no		–	–
E067	Maintenance	Setpoint controller / LS 1 exceeded	Dosing devices defective; chemical supply empty; measured value incorrect → check for plausibility and function; Incorrect control direction set; incorrect contact assigned; Incorrect control function assigned	yes		no		–	–
E068	Maintenance	Setpoint controller / LS 2 exceeded		yes		no		–	–
E069	Maintenance	Setpoint controller / LS 3 exceeded		yes		no		–	–
E070	Maintenance	Setpoint controller / LS 4 exceeded		yes		no		no	
E071	Maintenance	Setpoint controller / LS 5 exceeded		yes		no		no	

Error no.	NAMUR class	Error message	Possible causes / measures	Alarm contact		Error current		Automatic cleaning start	
				Fact.	User	Fact.	User	Fact.	User
E072	Failure	Polarisation error 1	Clean sensor. Use higher cell constant.						
E073	Failure	Polarisation error 2		yes		no		no	
E074	Failure	Temperature out of alpha table 1	Check measurement and tables for plausibility; if necessary, adjust or extend table.	yes		no		no	
E075	Failure	Temperature out of conc table 1		yes		no		no	
E076	Failure	Cond out of conc table 1		yes		no		no	
E077	Failure	Temperature out of alpha table 2	Check measurement and tables for plausibility; if necessary, adjust or extend table.						
E078	Failure	Temperature out of conc. table 2							
E079	Failure	Cond out of conc. table 2							
E080	Funct. check	Range for current output 1 too small	Increase measuring range span for current output assignment	no		no		no	
E081	Funct. check	Range for current output 2 too small		no		no		no	
E100	Funct. check	Current simulation active	Check if functions were consciously selected	no		no		no	
E101	Funct. check	Service function active		no		no		no	
E106	Funct. check	Download active	Wait for download to end.	no		no		no	
E116	Failure	Download error	Repeat download.	no		no		no	
E117	Failure	DAT updownload error	Check with other DAT memory module; when writing to DAT: repeat write process	yes		no		–	–
E152	Maintenance	PCS circuit 1 alarm	Conductivity sensor defective or totally soiled; measured water flow in bypass interrupted; air cushion in assembly; measuring line interrupted	no		no		no	
E153	Maintenance	PCS circuit 2 alarm		no		no		no	
E154	Maintenance	USP error 1	Conductance too high, check process. Check temperature for plausibility.	no		no			
E155	Maintenance	USP temp error 1		no		no			
E156	Maintenance	USP error 2		no		no		no	
E157	Maintenance	USP temp error 2		no		no			
E171	Maintenance	Current/resistance input 1 below range	Measure input signal. Permitted: 4 ... 20 mA	no		no			
E172	Maintenance	Current/resistance input 1 above range	Resistance input: see controller configuration (feedback) also	no		no			
E173	Maintenance	Current input 2 below range	Cause is the connected device or the wiring.	no		no			
E174	Maintenance	Current input 2 above range		no		no			

8.1.2 Process-specific errors

Error	Possible cause	Remedial action	Equipment needed, spare parts
Instrument unconfigurable, Display for code prompt is 9999	Instrument hardware is locked via keypad (Keys "CAL" + "DIAG" simultaneously = security locking)	Press "MEAS" and "PARAM" simultaneously to unlock.	
Permanent, incorrect measured value	Sensor does not immerse completely Air cushion in assembly Earth fault at or in the instrument Instrument in impermissible operating state (no response on pressing key)	Check installation position Check assembly and installation position Test measurement in insulated vessel, possibly with calibration solution Switch instrument off and on	Plastic vessel, calibration solutions. Behaviour, when instrument is connected to process? EMC problem: If repeated, check grounding and wire routing
Incorrect temperature reading	Incorrect sensor connection Measuring cable defective Incorrect sensor type selected Sensor defective	Check connections using wiring diagram Check cable Set sensor type on instrument (Field 141) Check sensor	Wiring diagram s. chap. 4.1.1 Ohmmeter Check temperature sensor with Ohmmeter.
Measured values fluctuate	Interference in measuring cable Faults in signal output line	Connect cable screens as per terminal diagram Check line installation, possibly route line separately.	Wiring diagram s. chap. 4.1.1
Div. controller, timer or clean functions cannot be activated	Relay module not available for relay 3 - 5	Install 3 relay module M3R-3	Order number and installation s. page 95.
Controller / limit contact does not work	Controller switched off Controller in "Manual / Off" mode Pick-up delay setting too long "Hold" function active "Auto hold" during calibration "Hold" input activated Manual "hold" active using keypad "Hold" active during configuration	Activate controller s. chap. 6.4 Select "Auto" or "Manual on" mode. Switch off or shorten pick-up delay period Determine cause of hold and eliminate if not desired	Keypad / PARAM / manual operation / contacts "Hold" is indicated in display when active
Controller / limit contact work continuously	Contact in "Manual/on" mode Dropout delay setting too long Control circuit interrupted	Set controller to "Manual/off" or "Auto". Shorted dropout delay period Check measured variable, current output or relay contacts, actuators, chemical supply	
No conductivity/mV current output signal	Line open or short-circuited Output defective	Disconnect both (!) lines and measure directly on instrument Replace controller module	mA meter 0–20 mA DC
Fixed current output signal	Current simulation active Processor system inactive "Hold" is active.	Switch off simulation Switch instrument off and on "Hold" status see display.	s. DIAG / Service / Simulation EMC problem: If repeated, check installation

Error	Possible cause	Remedial action	Equipment needed, spare parts
Current output signal incorrect or different than expected	Incorrect current assignment Incorrect signal assignment Total load in current circuit too high (> 500 ohms)	Check current assignment: 0–20 mA or 4–20 mA selected? Any current output can be assigned to any measured value (conduct. 1 or 2, temp. 1 or 2, characteristic value) Disconnect output and measure current directly on instrument	Check under "PARAM" / current output. mA Meter for 0–20 mA DC
Feed forward control does not work	Additional module M3R-x missing Incorrect version	Additional module M3R-2I with 1 or M3R1I with 2 current inputs	See spare parts list in chap. 8.3 Resistance input only permissible with non-Ex.
Feedback input does not work	Additional module M3R-x missing		See spare parts list in chap. 8.3 Resistance input only permissible with non-Ex.
Feedback incorrect	Feedback potentiometer outside range Feedback range not set or not set correctly	Smallest permissible potentiometer 1 kOhm, largest permissible potentiometer 10 kOhms Set lower and upper range value in "PARAM" menu	
Feedback varies	Connecting cable in non-screened version Cable screening not applied to transmitter. Feedback cable is parallel to h.c. power line (inductive coupling).	Replace cables with screened cables. Apply cable screening to PE rail. Apply cable screening on PE, both sides.	
Data cannot be saved	No DAT memory module available		DAT available as accessory, s. chap. 9

8.1.3 Instrument-specific errors

Error	Possible cause	Tests and / or remedial action	Equipment, spare parts, personnel
Display dark, no LEDs active	No mains voltage Incorrect supply voltage or too low Connection defective Instrument fuse defective (non-Ex) Power unit defective Central module defective (if all 6 LEDs on the power unit are lit) Ribbon cable loose or defective	Check whether mains voltage is applied Compare actual mains voltage with nameplate data Terminal not picked-up; insulation clamped Replace fuse after comparing mains voltage and nameplate data Replace power unit, pay attention to variant Replace central module pay attention to variant Check ribbon cable	Electrician / e.g. multimeter Electrician / correct fuses; s. drawings in chap. 8.7 On-site diagnosis: all 6 red LEDs on the M3G module must be lit On-site diagnosis by E+H Service (test module required) Cable soldered onto the site of the M3G module
Display dark, but LED active	Central module defective (Module: M3Cx-x)	Replace central module M3Cx-x	On-site diagnosis by E+H service (test module required)
Display functioning, but not change in display and/or instrument cannot be operated	Instrument or module in instrument not correctly installed Operating system in impermissible state	Check module connections Switch instrument off and on	See device view on page 96 Possibly EMC problem: if problem persists, have installation checked by E+H Service
Instrument gets hot	Incorrect mains voltage or too high Power unit defective	Compare mains voltage and nameplate data Replace power unit	all 6 red LEDs on the M3G module must be lit
Incorrect conductivity measured value / and / or temperature measured value	Transmitter module defective (module: MKIC), first carry out tests and take measures as per chap. 8.1.2.	Test measuring inputs: Connect resistances as per simulation tables p. 85/p. 85 and check display. Temp.: Resistance 100 W of terminals 11 to 12+ 13. Display must be 0 °C	If test negative: Replace module MKIC, bushing using the device view on page 96
Current output, Current value incorrect	Calibration incorrect Load too high Shunt / short-circuit to frame in current circuit Incorrect operating mode	Test with integrated current simulation, connect mA meter directly to current output Check, whether 0–20 mA or 4–20 mA is selected	If simulation value incorrect: new module M3Cx-x required. If simulation value correct: check current circuit for load and shunts
No current output signal	Current output stage defective (Module: M3CH-x) Instrument with PROFIBUS® interface	Test with integrated current simulation, connect mA meter directly to current output PROFIBUS® instruments do not have a current output	If test negative: Replace module M3CH-x (Check variants, see spare parts list in chap. 8.3) For information, see "DIAG" / instrument version

8.2 Response of outputs to errors

8.2.1 Response of current outputs

If an error occurs in the system, an error current is output at the current outputs. You can adjust the value of this error current in the Alarm menu (see page 44).

If you have configured the controller for functioning with a current output, no error current is output on this current output should an error occur.

8.2.2 Response of contacts to errors

You can select the assignment of which instrument error messages trigger an alarm individually for each error message, (see table on page 88, editing errors on page 45). In "NAMUR" mode, failure messages (E 001 – E 029) always trigger an alarm.

Behaviour with standard setting

Instrument status	Alarm relay	Limit value / Controller
Normal operation	picked-up (Fail-safe behaviour)	Appropriate configuration and operating status
Alarm	Dropped out	
Voltage-free	Dropped out	Dropped out

Behaviour with NAMUR setting

Instrument status	Alarm relay	Maintenance relay	Function check	Limit value / Controller
Normal operation	picked-up (Fail-safe behaviour)			Appropriate configuration and operating status
Failure	Dropped out			
Maintenance required	Picked up			
Function check	Picked up			
Voltage-free	Dropped out			Dropped out

8.2.3 Response of contacts to power failure

In the "Set up 1" menu → "Contacts", you can define the contacts as NC contacts or NO contacts (s. page 38). In the case of a power failure, the contacts will act according to the setting you make.

8.3 Spare parts

For your own safety, always use genuine spare parts. Only genuine spare parts ensure the correct function, precision and reliability after repair.

You receive all spare parts in the form with a unique code, optimally adapted packaging including ESD protection for modules and a set of instructions.

Spare parts list

No.	Kit name	Contents / Use	Order code
10	Terminal module non-Ex	Module M3K	51507084
30	Power supply 100 ... 230 VAC non-Ex	Module M3G, power unit + 3 relay	51507087
30	Power supply 24 VAC/DC non-Ex	Module M3G, power unit + 3 relay	51507089
40	DC/DC convertor for measuring circuit 2	Module M3DC / Ex and non-Ex	51507091
50	Controller module cond., 2 x current output	Module M3CH-S / Ex + non-Ex	51509506
50	Controller module cond., 2 x current + HART	Module M3CH-H / Ex + non-Ex	51509507
50	Controller module cond., PROFIBUS-PA	Module M3CH-PA / Ex + non-Ex	51507094
50	Controller module cond., PROFIBUS-DP	Module M3CH-DP / Ex + non-Ex	51507095
60	Cond. input module	Module MKIC / Ex + non-Ex	51501206
70	Relay module 3 additional relays	Module M3R-3 / Ex and non-Ex	51507097
70	Relay module 2 Rel. + 1 current input	Module M3R-2 / Ex and non-Ex	51507098
70	Relay module 2 Rel. + 1 resistance input	Module M3R-2 / Ex and non-Ex	51509510
70	Relay module 1 Rel. + 2 current inputs	Module M3R-1 / Ex and non-Ex	51507099
70	Relay module 1 Rel. + 1 current input + 1 resistance input	Module M3R-1 / Ex and non-Ex	51509513
80	Terminal set for cond. input	6-pin terminal + two-pin terminal	xx
90	Jumper set	Five sets of all three jumper types	51507102
100	Partition plate for connection compartment	Five partition plates	51507103
110	Housing upper section non-Ex	Upper section with keypad sheet, connection compartment cover, hinge, des. sign	51507104
120	Housing lower section non-Ex	For one and two-circuit instruments, cpl.	51507106

8.4 Installation and removal of parts

Please observe the danger instructions in chap. 8.3.

The position designations relate to the spare parts list on page 94.

8.4.1 Instrument view

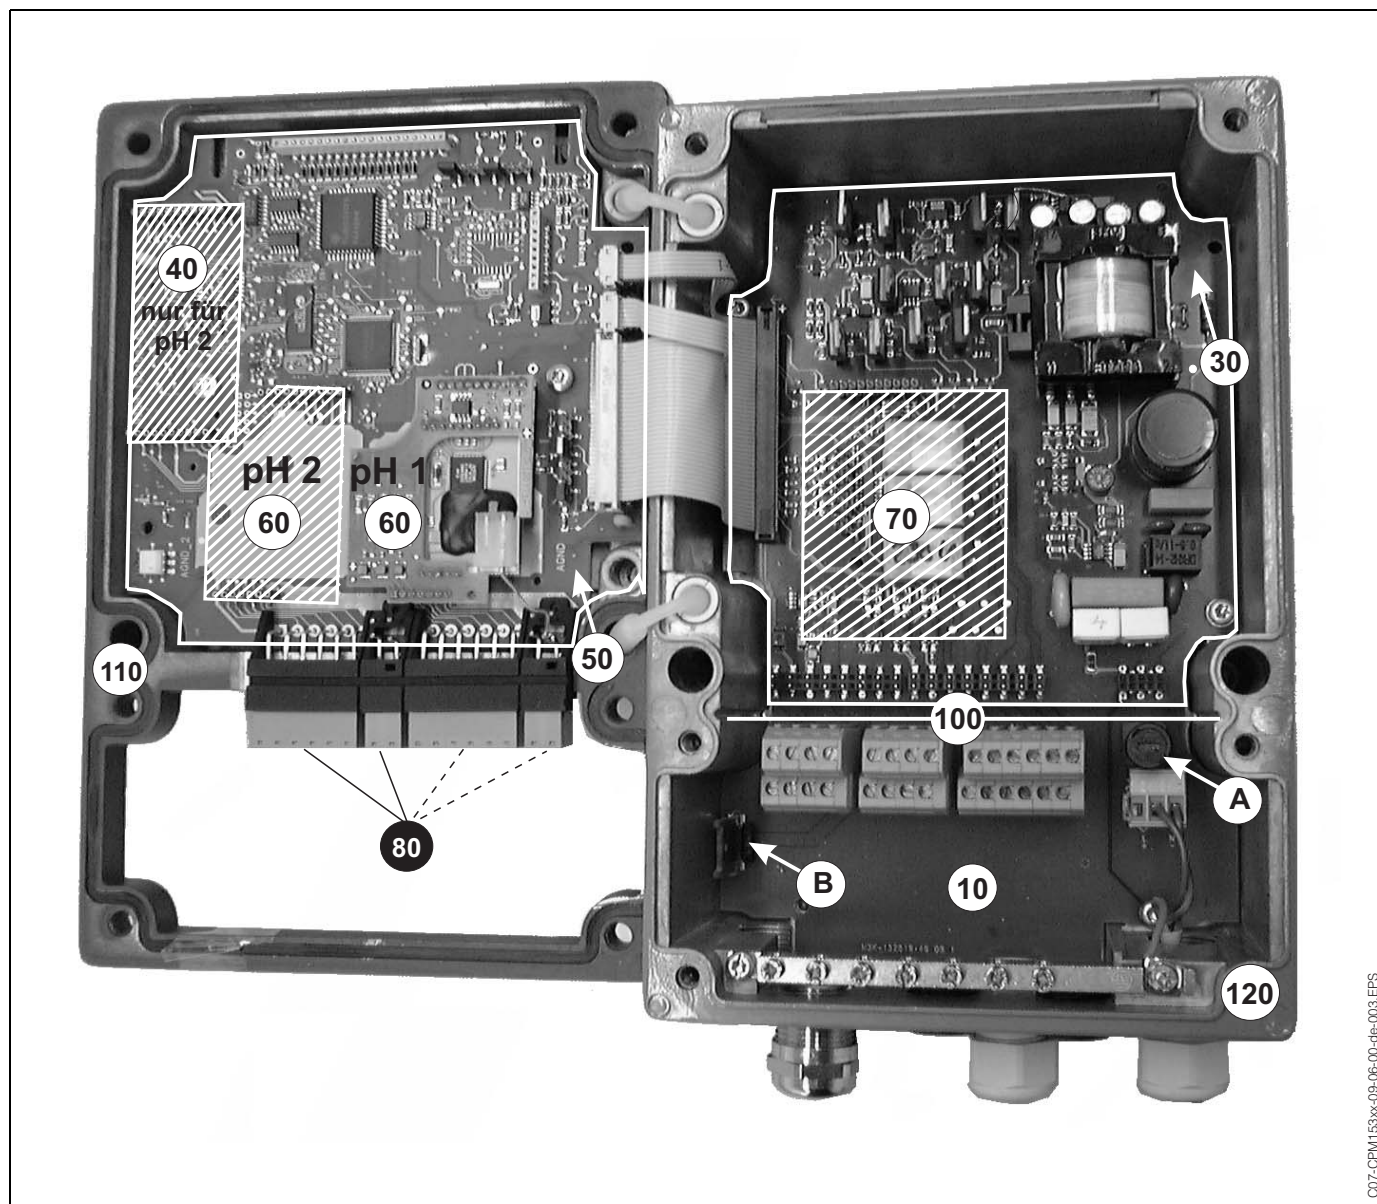


Fig. 28: Interior view of the transmitter Mycom S

Remarks:

A: The figure shows the non-Ex fuse.

B: Slot for DAT memory module

40 ... 70: Figure shows module 40. Modules 50, 60 and 70 look somewhat different.

90 ... 120: Figure shows module 90. Modules 100, 110 and 120 look somewhat different.

190: Partition plate (not shown in photo)

80, 130 and dotted position 170: Only available with two-circuit device

8.4.2 Coding

Current outputs active or passive:

For instrument versions CLM 153 xxA/Bxx (2 current outputs) and CLM 153 xxC/Dxx (2 current outputs with HART) the current outputs can be operated as active or passive. Jumpers on the controller module M3CH allow recoding.

For non-Ex instruments, these modules may be recoded to active outputs.



Warning!

Ex instruments must **not** be recoded. Doing so will cause loss of intrinsic safety!

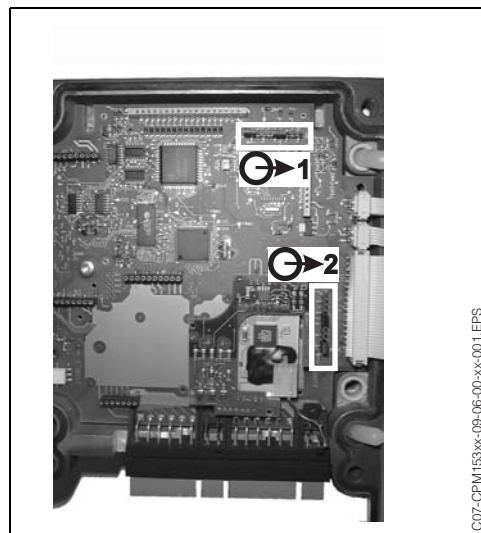


Fig. 29: Coding for current outputs
(Interior view of the housing upper section)

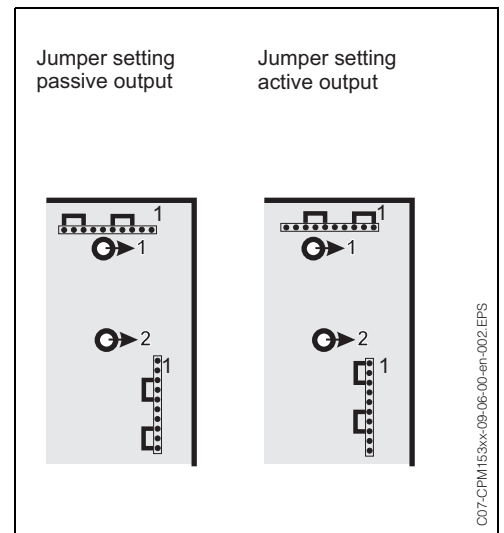


Fig. 30: Active/passive coding of the current outputs

8.5 Replacing the device fuses

For non-Ex devices



Warning!

Danger to persons. Before replacing the fuse, make sure the device is voltage-free.

- Position of the fuse holder: "A" in fig. 28
- Use only a 5 x 20 mm fine-wire fuse with 3.15 mA, semi time-lag fuse. All other fuses are not permitted.



Caution!

If the fuse should fail again, have the device checked.

8.6 Disposal

The Mycom S CLM 153 is a transmitter which contains electronic components and PCBs and therefore must be disposed of as electronic refuse. Please keep to the local regulations.

9 Accessories

Offline configuration

The PC tool provides you with a tool for configuring your measuring point at the PC using a simple and self-explanatory menu structure. Write the configuration to the DAT module using the RS232 interface on the PC. The module can then be plugged into the transmitter. You can switch the language via software. The offline configuration system consists of a DAT module, the DAT interface (RS 232) and the software for use with Windows NT/95/98/2000. Order No.: 51507133

DAT module

The DAT module is a memory device (EEPROM) which can be easily plugged into the connection compartment of the transmitter. Using the DAT module you can

- save the complete settings, the logbooks and the data logger of a transmitter and
- copy the complete settings to other CLM 153 transmitters with identical hardware functionality.

This considerably reduces the effort to install or service several measuring points.

Order No.: 51507175

Assemblies

Type	Properties	Applications
DipFit W CLA 111	Immersion and installation assembly with flange DN 100. The Chemoclean sensor cleaning system can be integrated without any conversion needed. Technical Information: TI 135C/07/en, Order No.: 50076858	• Water • Wastewater • Process industry
DipFit W CYA 611	Immersion assembly with thread G 1, G ¾ or NPT ¾". Technical Information: TI 166C/07/en, Order No.: 50085985	• Water • Wastewater
DipFit P CLA 140	Immersion assembly with flange DN 80 PN 16, ANSI 3" 150 lbs or JIS 10K 80A. Sensor holder in bayonet style. Technical Information: TI 1196C/07/en, Order No.: 51500081	• Wastewater, paper industry

Conductivity sensors

Type	Properties	Applications
ConduMax W CLS 12/13	Can be adapted to the process for optimum results thanks to different designs. Installation in pipe or flow vessel at temperatures to 250 °C and pressures to 40 bar. Sensor shaft made of die-cast aluminium, sensors of stainless steel 1.4571 (AISI 316 Ti). Technical Information: TI 082C/07/en, Order No.: 50059349	• Industry • Power plants (e.g. condensate measurement) • Low conductivities at high pressures and high temperatures
ConduMax W CLS 15	Sterilisable up to 150°C Polished shaft made of stainless steel 1.4435 (AISI 316L). High accuracy thanks to individually measured cell constant. Installation in pipe or flow vessel. Technical Information: TI 109C/07/en, Order No.: 50065950	• Monitoring ion exchangers • Reverse osmosis • WFI (Water for Injection) • Chip cleaning
ConduMax H CLS 16	Pure and ultrapure water sensor: Measuring range from 0.04 to 500 µS/cm. Water-proof connection TOP68 or fixed cable. Sterilisable up to 150°C EHEDG and 3A certificates. Technical Information: TI 227C/07/en, Order No.: 51503431	• Pure water • Ultrapure water • Electro-deionisation • Distillation • WFI (Water for Injection)
ConduMax W CLS 21	High chemical, thermal and mechanical stability. Sensor shaft in PES (polyethersulphon). Technical Information: TI 085C/07/en, Order No.: 50059352	• Monitoring low concentrated saline solutions • Potable water treatment • Wastewater treatment

Type	Properties	Applications
InduMax P CLS 50	Very chemically stable sensor thanks to PFA jacketing. PEEK version for high temperatures to 180 °C. With  approval. Overall cable length to 55 m. Technical Information: TI 182C/07/en, Order No.: 50090385	• Chemical industry: • Concentration measurement of acids and alkalis • Product monitoring • Phase separation of product/product mixtures
InduMax H CLS 52	Sensor shaft made of highly resistant, plastic (PEEK) which can be used with foodstuffs. Very short temperature response times ($t_{90} < 5s$). Measuring range from 10 $\mu S/cm$ to 2000 mS/cm . Technical Information: TI 167C/07/en, Order No.: 50086110	• Foodstuff industry • Control of CIP systems

Service adapter Optoscope

The service adapter aids communication between Endress+Hauser transmitters and the PC using the service interface. You can use it to load new firmware and to save/write customer data (using a PC with the Windows 95/98 or Windows NT operating system).

ChemoClean cleaning

Sensor cleaning can be automated with the injector CYR 10 and the appropriate accessories for the different assemblies.

Sensor measuring cable

- Sensor measuring cable CPK 9 with TOP68 plug-in head (for high temperature applications, IP 68 / NEMA 6X, also for Ex). Extension with cable CYK 71 possible, see table "Measuring cable as yard goods".
- Measuring cable CLK 5 for inductive sensors
- Measuring cable CYK 71 for conductive sensors
- *Junction box VBM*: Junction box for extending measuring cable connection between sensor and transmitter. Two threaded joints for e.g. combination sensor. Material: aluminium casting, ingress protection IP 65. Order No. 50003987

Measuring cable as yard goods


Cable	Description	Order number
CYK 71	Measuring cable for conductive conductivity sensors, consisting of a coaxial cable and 4 pilot wires	50085333
	Measuring cable for Ex applications	50085673
CLK 5	Extension measuring cable for inductive conductivity sensors CLS 50 and CLS 52. To be used with the connection box VBM.	50085473

Flat seal


Flat seal for sealing the front panel mounting of the CLM 153. Order No.: 50064975

**Weather protection cover
CYY 101** For installing the transmitter outdoors.

**Round post fixture for
weather protection cover** To fix the weather protection cover to vertical or horizontal posts with diameters of up to 60 mm. Order No.: 50062121

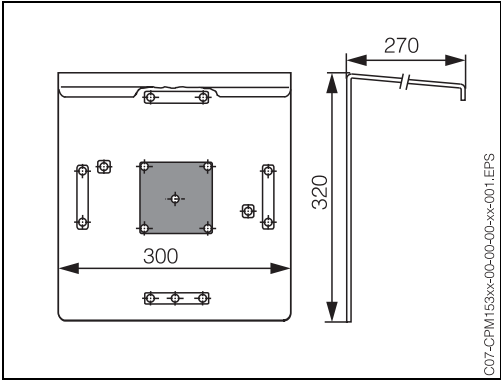

Weather protection cover CYY 101

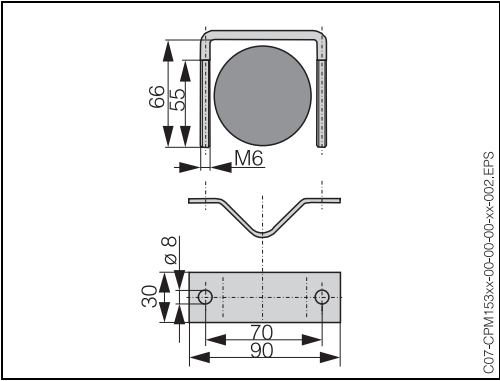

Round post fixture for CYY 101

Technical Information TI 092C/07/en, Order No. 50061228

10 Technical data

10.1 Input

Measured variable	Conductivity, temperature		
Conductivity, inductive	Measuring range, non-compensated	0.04 $\mu\text{S/cm}$... 2000 mS/cm	
	Measuring range, compensated	0.04 $\mu\text{S/cm}$... 1000 mS/cm	
Conductivity, conductive,	Cell constant k	Measuring range	Display range
	0.01 cm^{-1}	0.0 nS/cm ... 600.0 $\mu\text{S/cm}$	0.0 $\mu\text{S/cm}$... 200.0 $\mu\text{S/cm}$
	0.1 cm^{-1}	0.000 $\mu\text{S/cm}$... 6000 $\mu\text{S/cm}$	0.000 $\mu\text{S/cm}$... 2000 $\mu\text{S/cm}$
	1 cm^{-1}	0.00 $\mu\text{S/cm}$... 60.00 mS/cm	0.00 $\mu\text{S/cm}$... 20.00 mS/cm
	10 cm^{-1}	0.0 $\mu\text{S/cm}$... 600.0 mS/cm	0.0 $\mu\text{S/cm}$... 200.0 mS/cm
Resistance measurement	Cell constant k	Measuring range	Display range
	0.01 cm^{-1}	20.0 $\text{k}\Omega\cdot\text{cm}$... 80.0 $\text{M}\Omega\cdot\text{cm}$	20.0 $\text{k}\Omega\cdot\text{cm}$... 37.99 $\text{M}\Omega\cdot\text{cm}$
	0.1 cm^{-1}	2.00 $\text{k}\Omega\cdot\text{cm}$... 2000 $\text{k}\Omega\cdot\text{cm}$	2.00 $\text{k}\Omega\cdot\text{cm}$... 3799 $\text{k}\Omega\cdot\text{cm}$
	1 cm^{-1}	0.200 $\text{k}\Omega\cdot\text{cm}$... 200.0 $\text{k}\Omega\cdot\text{cm}$	0.200 $\text{k}\Omega\cdot\text{cm}$... 379.9 $\text{k}\Omega\cdot\text{cm}$
Concentration measurement	Selection	Conductivity range	Concentration
	NaOH	0.0 mS/cm ... 410 mS/cm	0 ... 15%
	HNO ₃	0.0 mS/cm ... 781 mS/cm	0 ... 20%
	H ₂ SO ₄	0.0 mS/cm ... 723 mS/cm	0 ... 20%
	H ₃ PO ₄	0.0 mS/cm ... 73 mS/cm	0 ... 12%
	User 1 ... 4	0.0 $\mu\text{S/cm}$... 2000 mS/cm	0 ... 99.99%
Temperature	Temperature sensor	Pt 100 (three-wire circuit) Pt 1000 NTC 30k	
	Measuring range (can also be displayed in °F)	-50 ... +150°C (NTC: -20 ... 100°C)	
	Measured value resolution	0.1 K	
	Temperature offset	± 5K	
Current inputs 1 / 2 (passive, optional)	Signal range	4 ... 20 mA	
	Measured error ¹	max. 1% of measuring range	
	Input voltage range	6 ... 30 V	

Resistance input (active, optional, only with non-Ex)	Resistance ranges (software switchable)	0 ... 1 k Ω 0 ... 10 k Ω
	Measured error ¹	max. 1% of measuring range
Digital inputs	Input voltage	10 ... 50 V
	Internal resistance	R _i = 5 k Ω

¹: acc. to IEC 746-1, under nominal operating conditions

10.2 Output

Output signal	Conductivity, resistance, concentration, difference, efficiency, temperature	
Current outputs	Current range	0 / 4 ... 20 mA
	Error current	2.4 mA or 22 mA
	Measured error ¹	< 0.2 % of current range maximum
	Transmission characteristic	Linear, bilinear
	Output distribution, temperature	17 ... 170 °C
	Output distribution, minimum (maximum up to 100% of the measuring range):	
	For conductivity measurement for measured values in the range of:	0 ... 19.99 μ S/cm: 2 μ S/cm 20 ... 199.9 μ S/cm: 20 μ S/cm 200 ... 1999 μ S/cm: 200 μ S/cm 2 ... 19.99 mS/cm: 2 mS/cm 20 ... 2000 mS/cm: 20 mS/cm
	For resistance measurement for measured values in the range of:	0 ... 199.9 k Ω ·cm: 20 k Ω ·cm 200 ... 1999 k Ω ·cm: 200 k Ω ·cm 2 ... 19.99 M Ω ·cm: 2.0 M Ω ·cm 20 ... 200 M Ω ·cm: 20 M Ω ·cm
	For concentration measurement	No minimum spacing
	Active current output (only non-Ex): Load	Max. 600 Ω
	Passive current output: Input voltage range	6 ... 30 V

¹: acc. to IEC 746-1, under nominal operating conditions

Auxiliary voltage output (for digital inputs E1-E3)	Voltage	15 V DC
	Output current	max. 9 mA
Limit value and alarm functions	Setpoint adjustments	0 ... 100% of display range
	Hysteresis for switching contacts	1 ... 10% of display range
	Alarm delay entry	0 ... 6000 s

Controller output	Function (selectable):	Pulse-length controller (PWM) Pulse-frequency controller (PFM) Three-point step controller (3-PS) Analogue (via current output)
	Switch behaviour	P / PI / PID
	Control gain K_R	0.01 ... 20.00
	Integral action time T_n	0.0 ... 999.9 min
	Derivative action time T_v	0.0 ... 999.9 min
	With the maximum settable frequency in PFM	120 min ⁻¹
	With the maximum settable period length in PWM	1 ... 999.9 s
	With PWM minimum switch-on period	0.4 s
Relay contacts	The NC/NO contact type can be set by software.	
	Switching voltage	max. 250 V AC / 125 V DC
	Switching current	max. 3 A
	Switching power	max. 750 VA
	Lifespan	≥ 5 million switching cycles
Galvanic isolation	At the same potential are: • Current output 1 and power supply • Current output 2 and resistance input.	
	The remaining circuits are galvanically isolated from each other.	
Electrical connection	Power supply for CLM 153-xxxx 0 xxxx	100 ... 230 V AC +10/-15%
	Frequency	47 ... 64 Hz
	Power supply for CLM 153-xxxx 8 xxxx	24 V AC/DC +20/-15%
	Power consumption	max. 10 VA
	Separation voltage between galvanically isolated circuits	276 V _{rms}
	Terminals, max. cable cross-sectional area	3 x 2.5 mm ²

10.3 Performance characteristics

Measured value resolution	Conductivity:	0.001 µS/cm
	Temperature:	0.1 K
Measured error ¹ display	Conductivity, resistance, concentration:	±0.5% ±2 digits of measured value
	Temperature:	< 0.5 K
Measured error ¹ current output	additionally max. 0.2% of current range maximum	
Repeatability ¹	Conductivity, resistance, concentration:	±0.2% ±2 digits of measured value
	Temperature:	max. 0.1% of measuring range

¹: acc. to IEC 746-1, under nominal operating conditions

10.4 Environment

Ambient temperature range	-10 ... +55 °C
Ambient temperature limits	-20 ... +60 °C
Storage and transport temperature	-30 ... +80 °C
Relative humidity	10 ... 95%, non-condensing
Degree of protection	IP 65
Electromagnetic compatibility	Interference emission to EN 61326: 1997 / A1:1998; Class B resource (Housing sector) Interference emission to EN 61326: 1997 / A1:1998; Appendix A (Industrial sector)
Safety requirements	Complies with general safety requirements acc.to EN 61010. Complies with NAMUR Recommendations NE 21,1998.

10.5 Mechanical construction

Design, dimensions

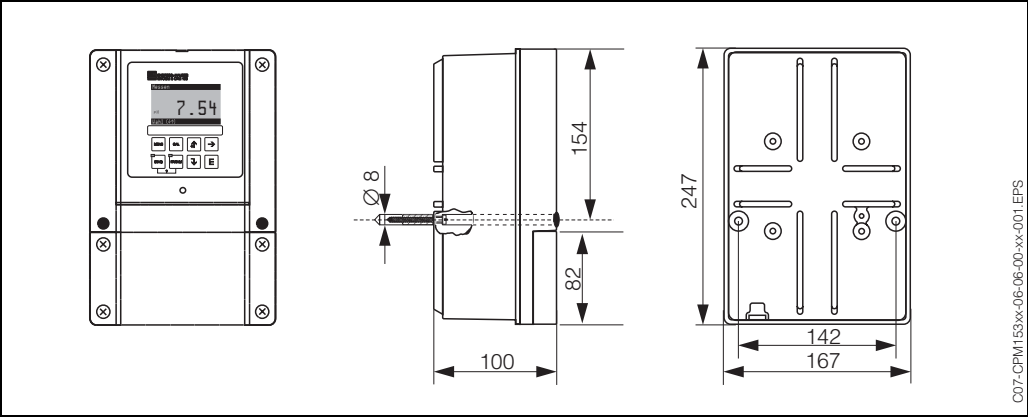



Fig. 31: Dimensions of transmitter Mycom S.


Weight	max. 6 kg
Material	Housing GD-ALSi 12 (Mg content 0.05%), plastic-coated Front Polyester, UV-resistant

11 Appendix


11.1 Operating matrix

The basic structure of the operating menu is shown below.

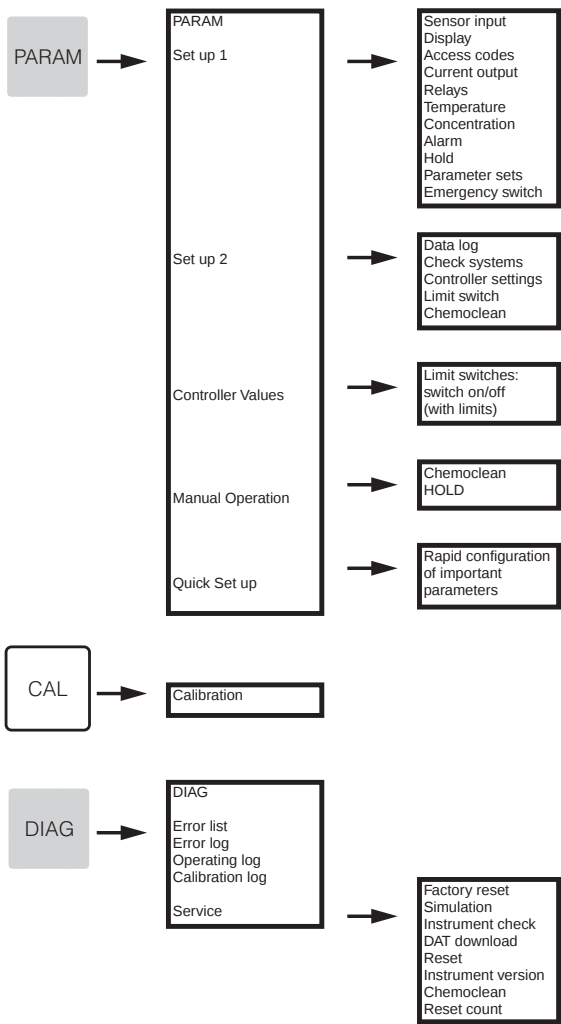

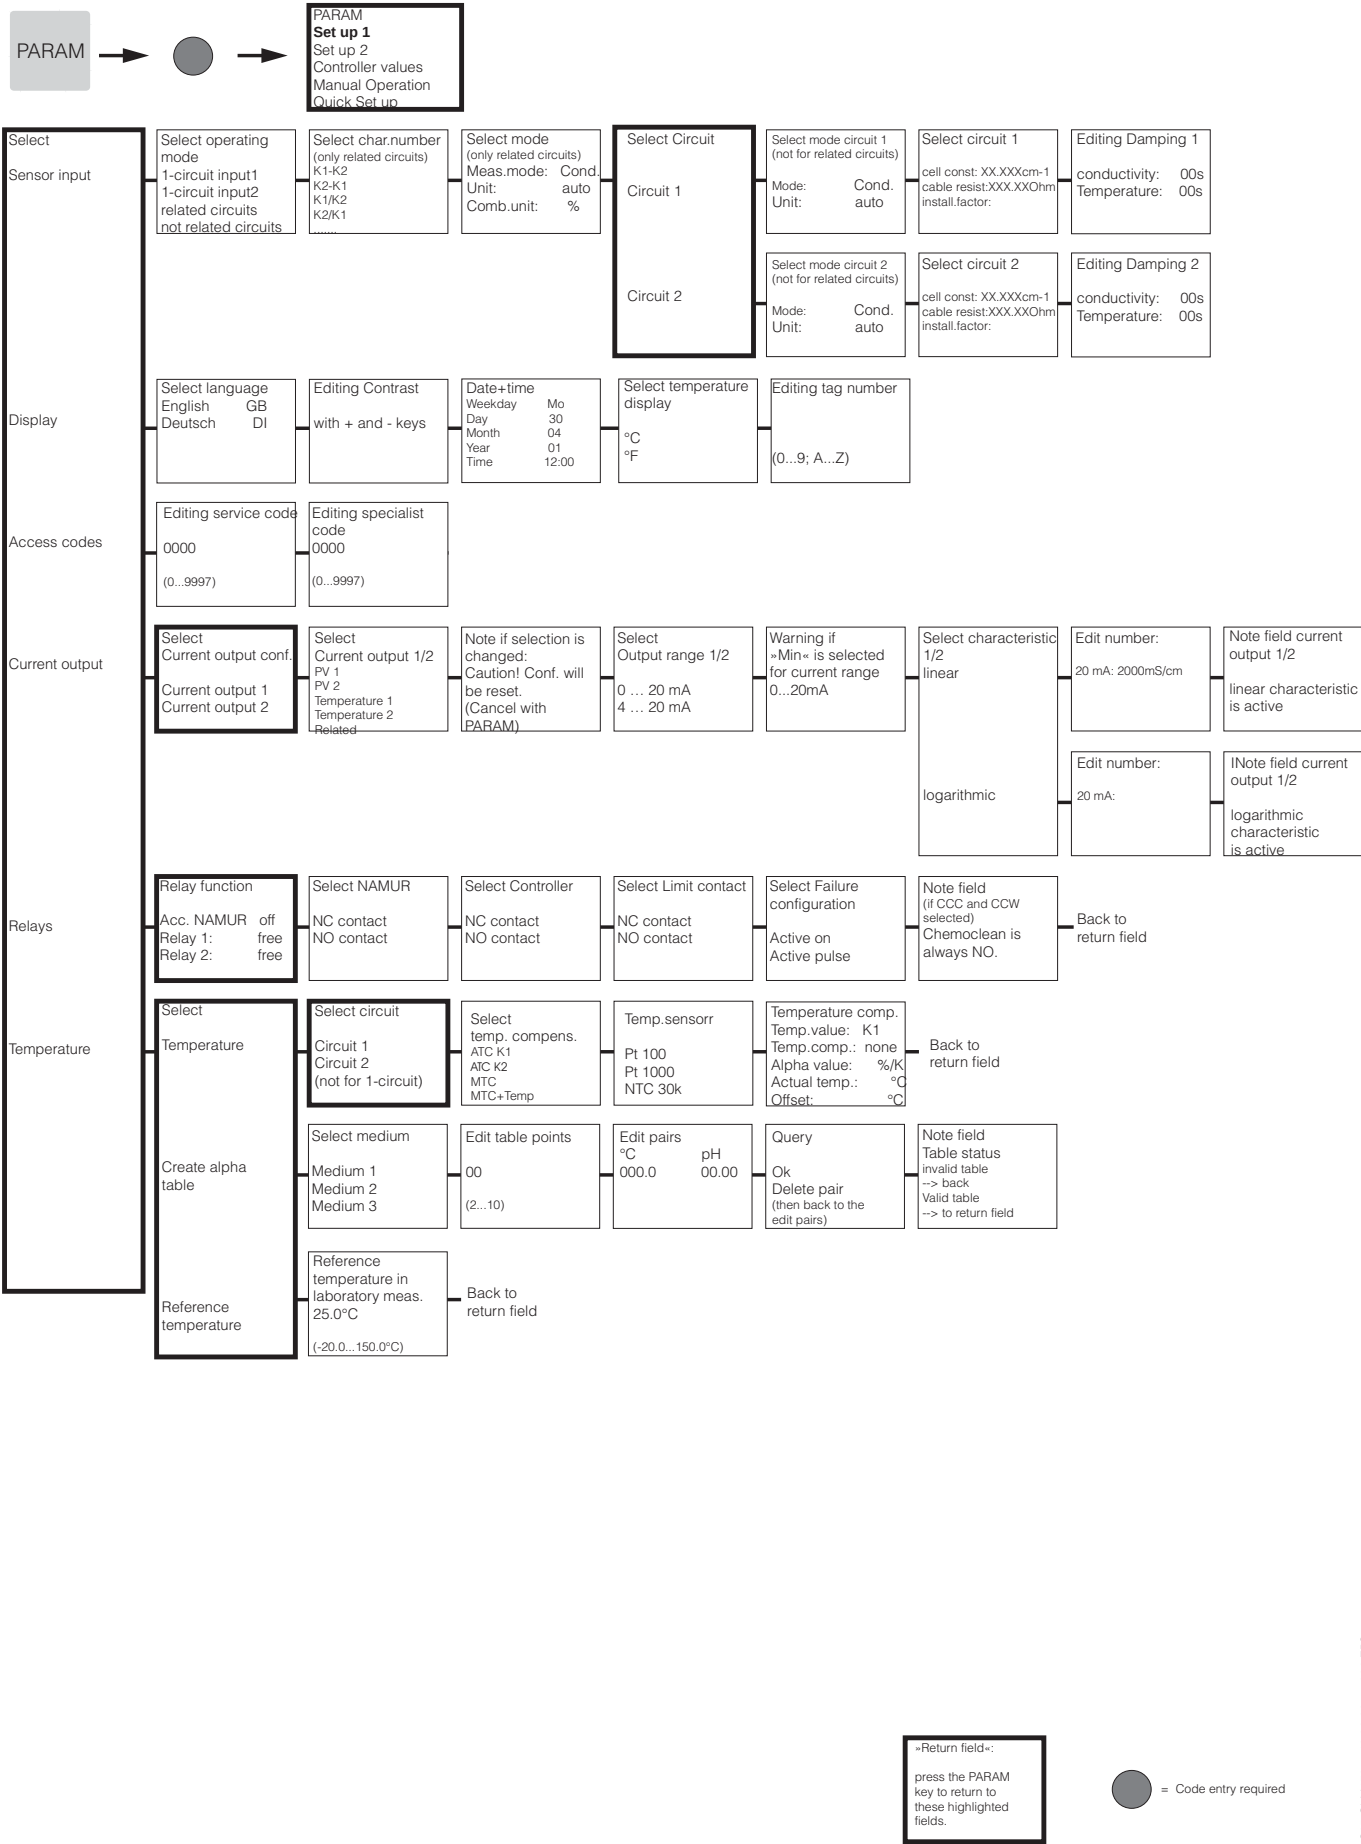



C07-CLM153xx-19-06-08-en-006.EPS

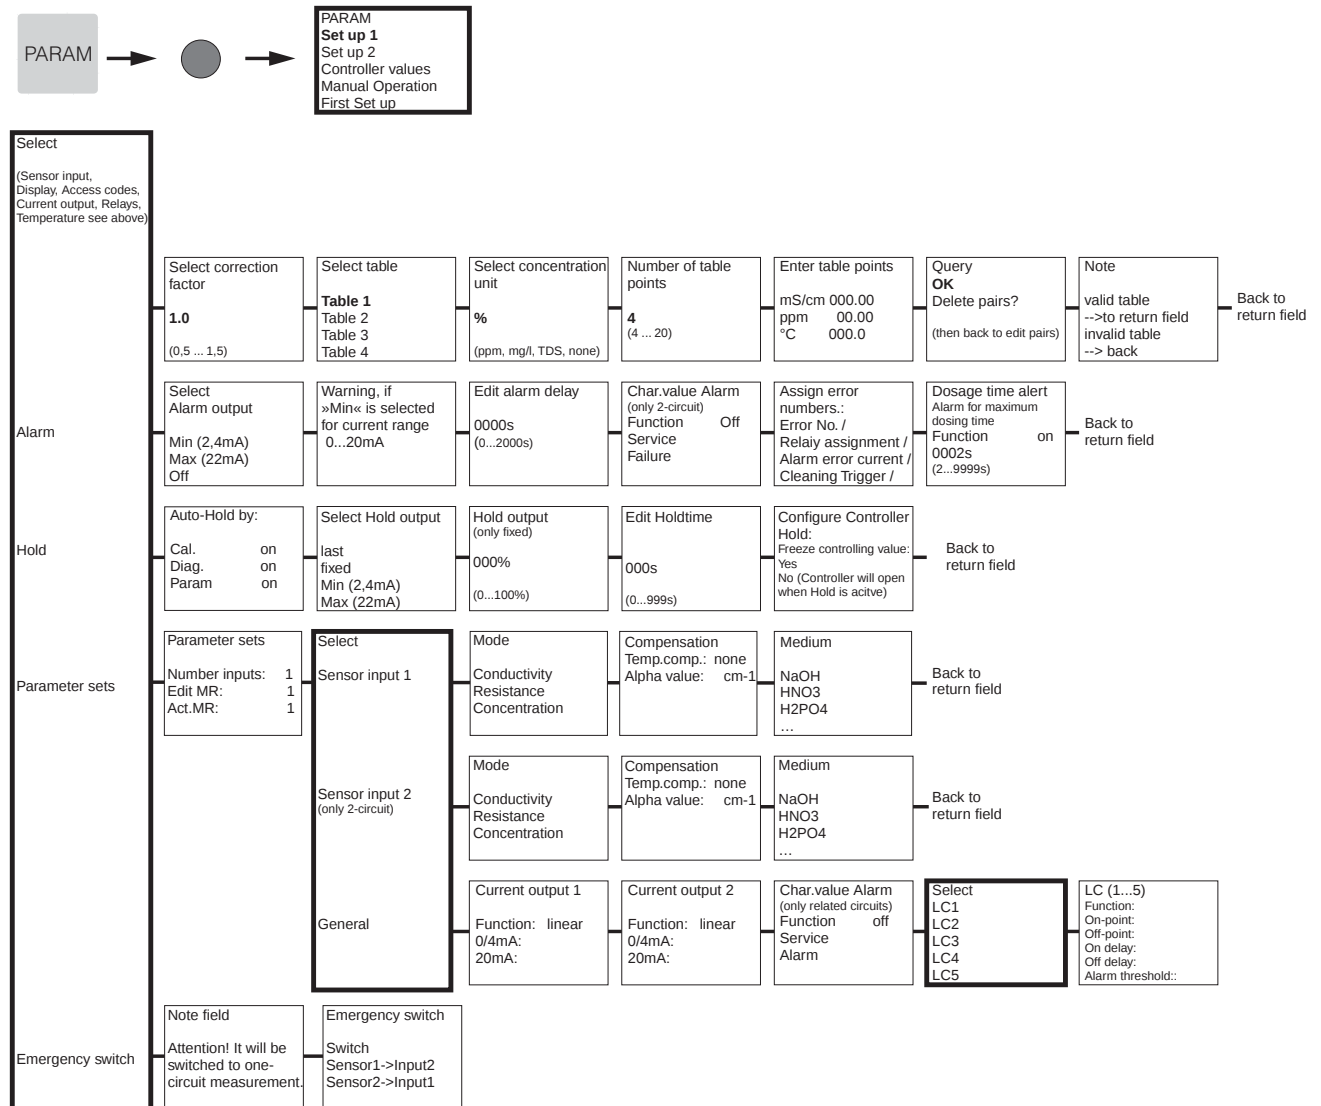

»Return field«:
press the PARAM
key to return to
these highlighted
fields.



● = Code entry required

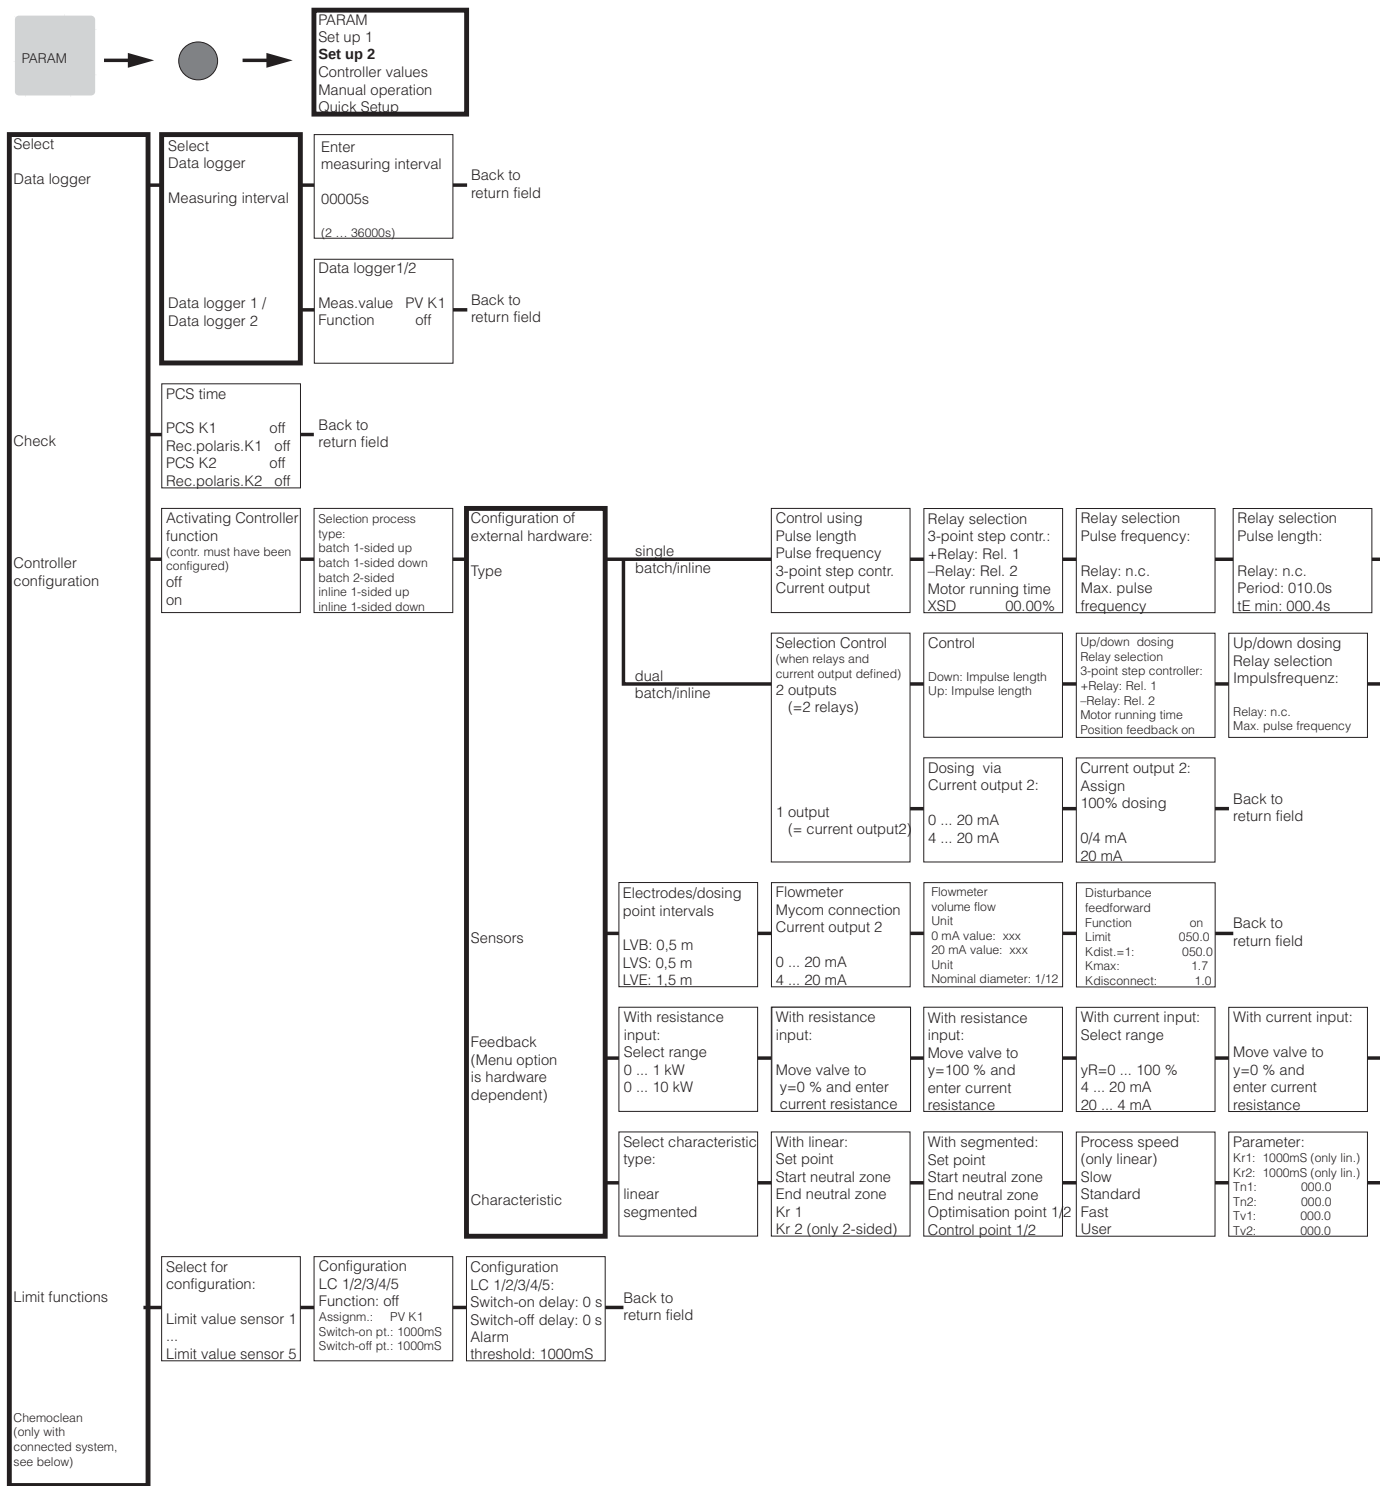

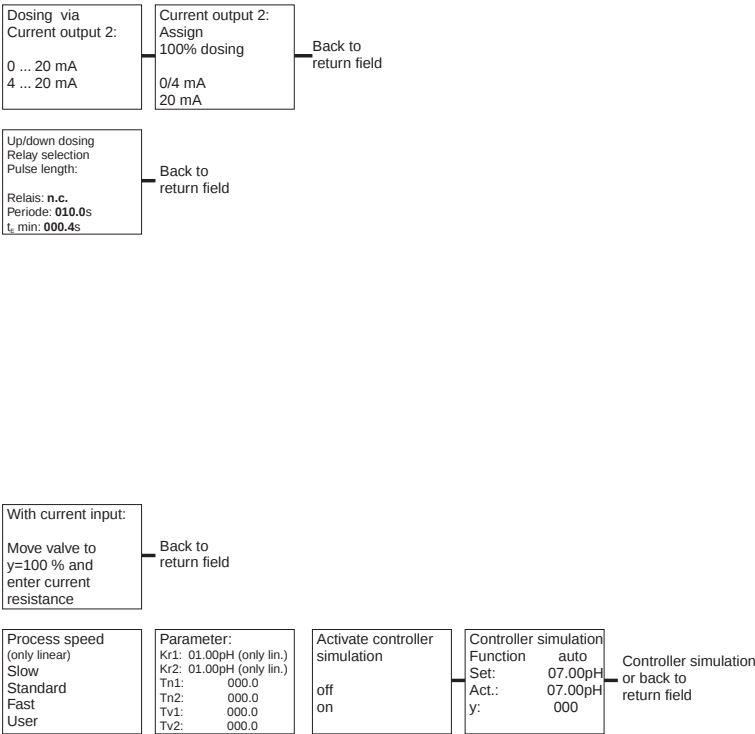

»Return field«:
press the PARAM
key to return to
the highlighted
fields.

 ● = Code entry required

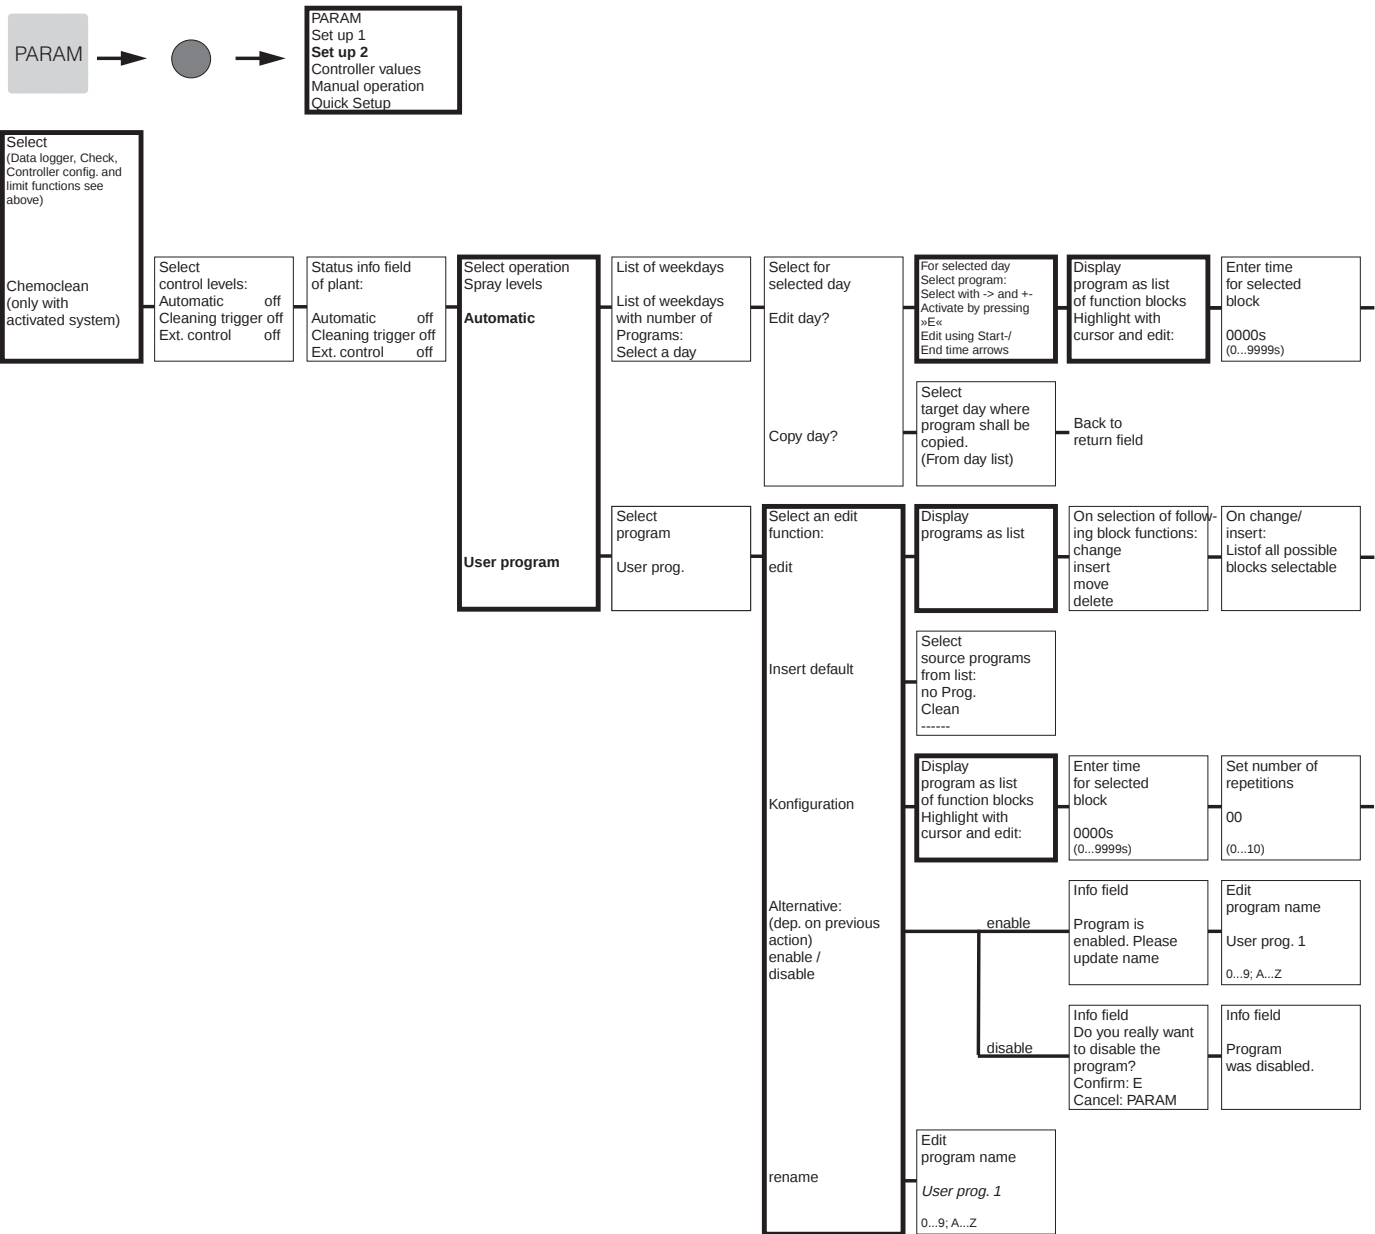

»Return field«:
press the PARAM
key to return to
the highlighted
fields.

● = Code entry required

C07-CLM153xx-19-06-08-en-014.EPS

Set number of repetitions

00

(0...10)

Back to return field

Display programs as list in changed form



Enter number of return lines

Back to return field

Back to return field

»Return field«:
press the PARAM
key to return to
the highlighted
fields.


 = Code entry required

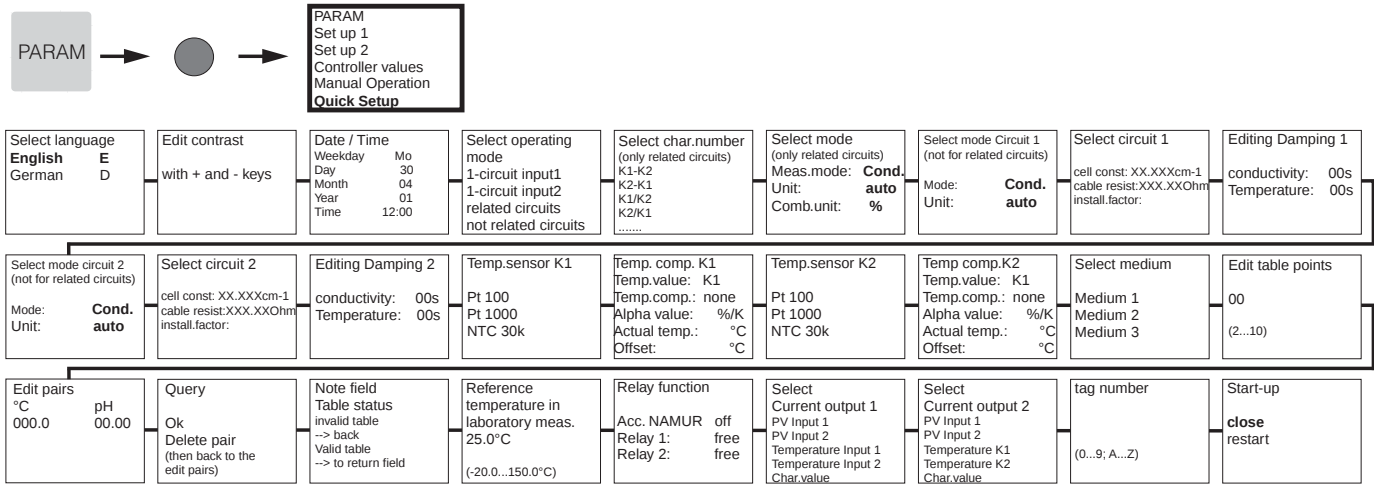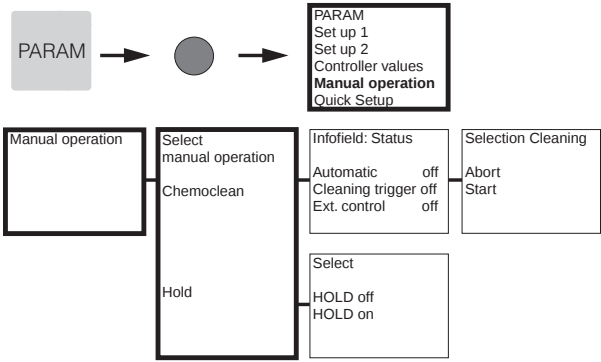

»Return field«:
press the PARAM
key to return to
the highlighted
fields.


[Menu Icon] = Code entry required

C07-CLM153xx-19-06-08-en-011.EPS

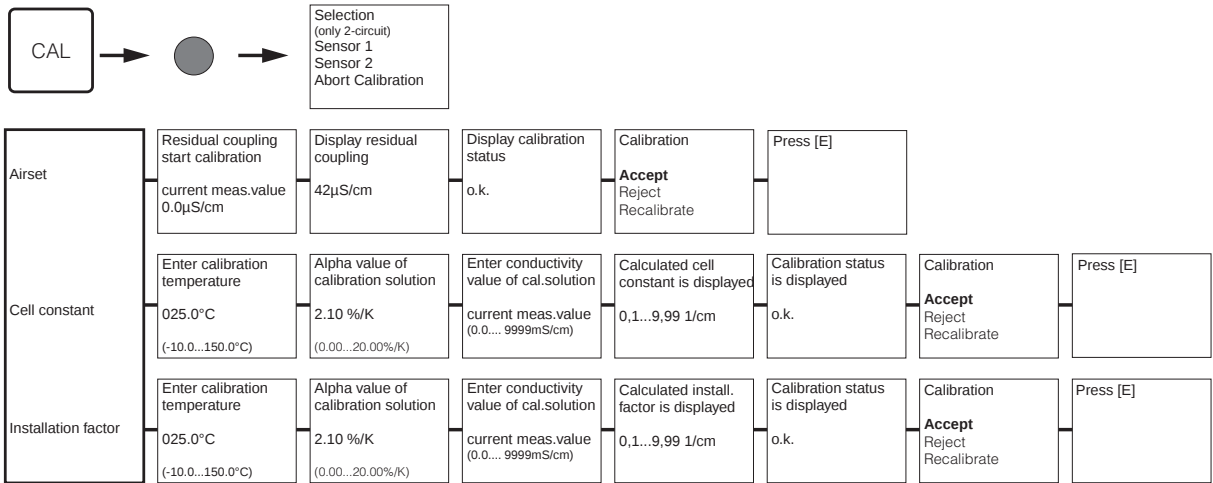

If you press the MEAS key, a message will appear asking if you want to abort the calibration.


 = Code entry required

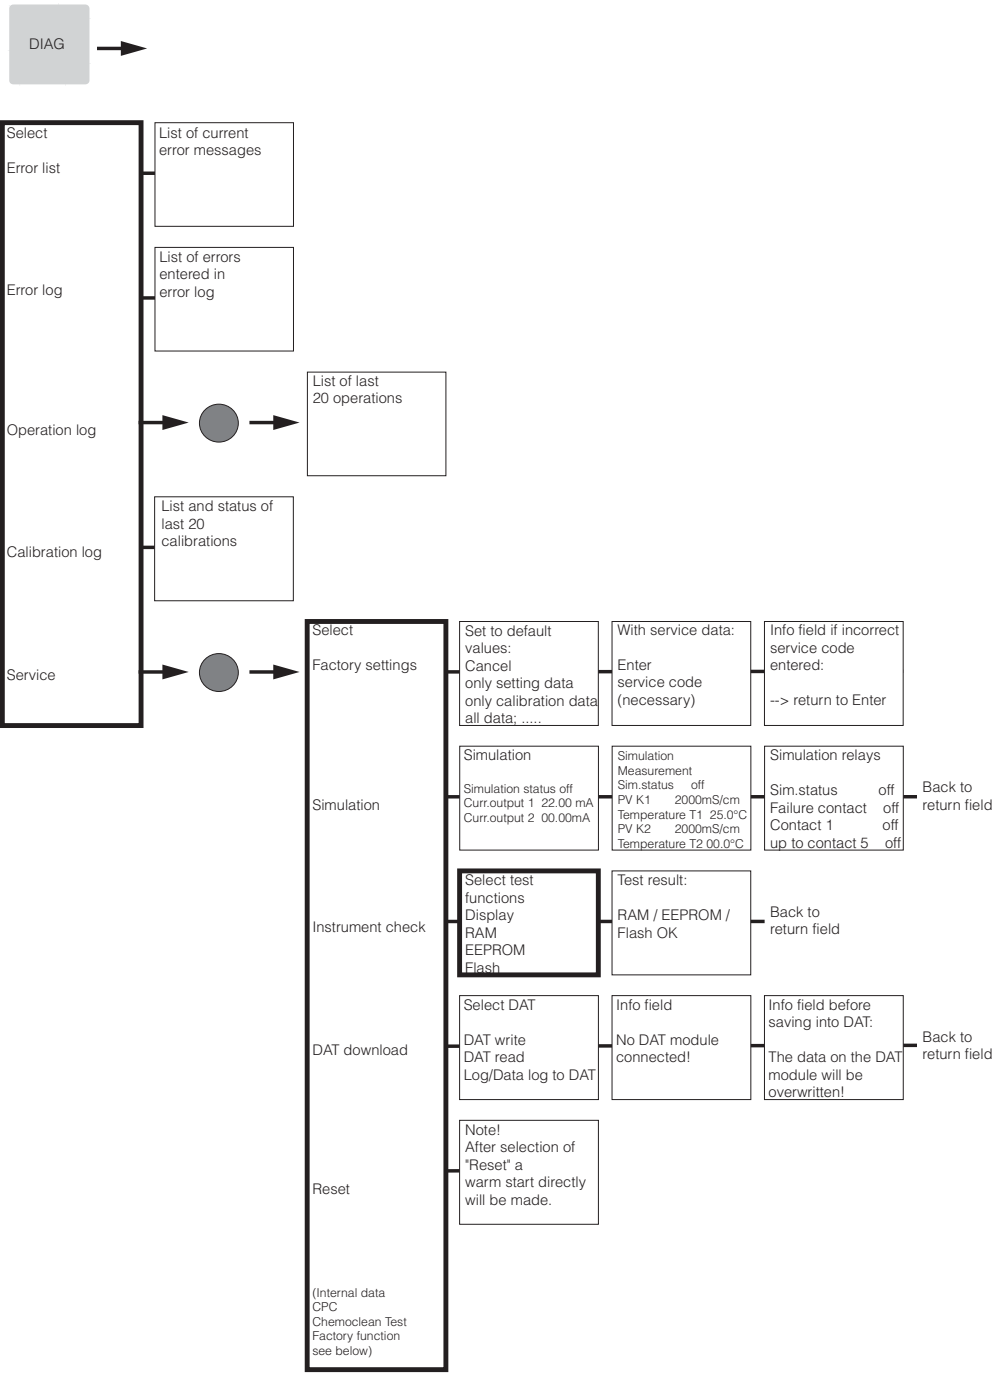

»Return field«:
press the PARAM
key to return to
the highlighted
fields.

= Code entry required

C07-CLM153xx-19-06-08-en-012.EPS

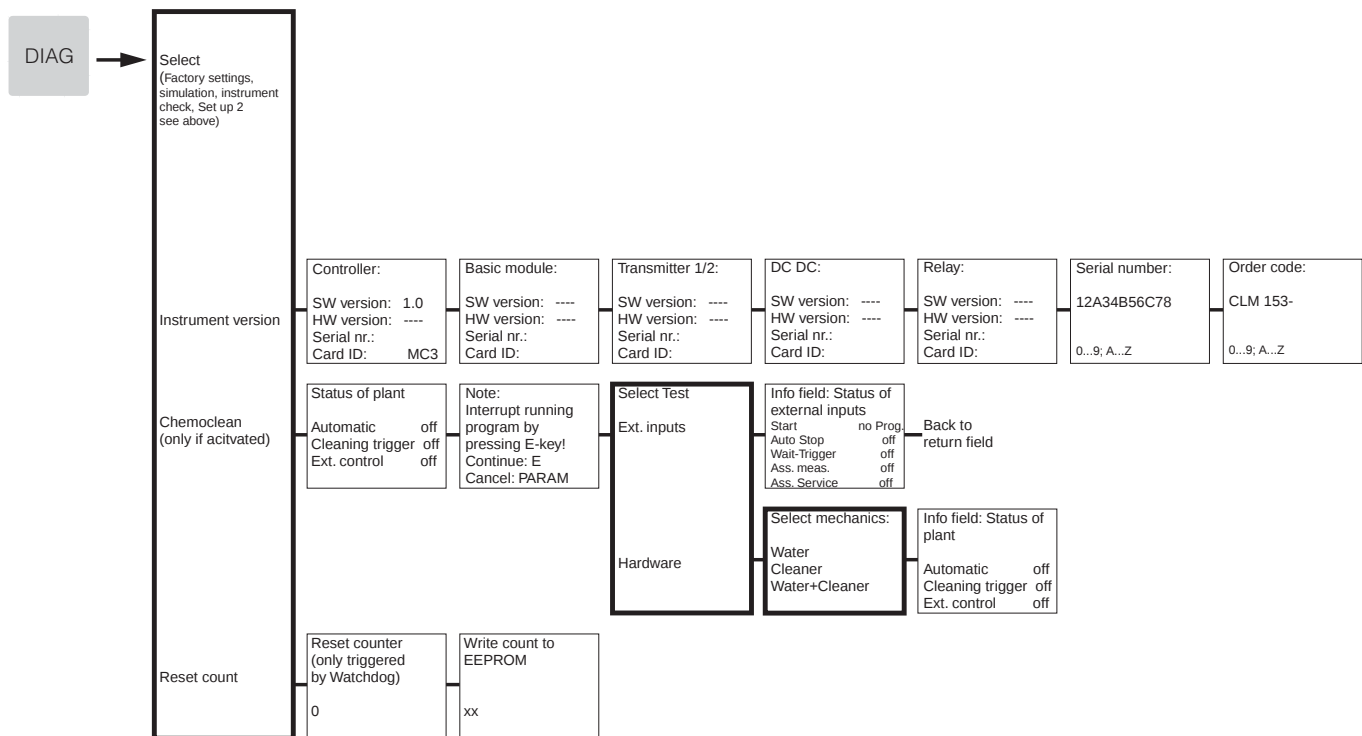

»Return field«:
press the PARAM
key to return to
the highlighted
fields.

● = Code entry required

12 Index

A

Abnormal transmitter behaviour	76
Access authorisation	20
Accessories	98
Actuator, control	
Analogue	53
Actuators	52, 59
One-sided	59
Two-sided	60
Actuators, control	
Pulse frequency, PFM	53
Pulse length, PWM	52
Three-point step controller	53
Adaption factor	26, 31, 80–81
Airset	81
Alarm	
Dosing time	45
Alarm delay	44, 66
Alarm error current	45
Alarm for characteristic value	44, 49
Alarm menu	44
Alarm relay	12
Alpha value	37
Formula	39
Ambient temperature	9
Analogue actuator control	53
Appendix	105
Arrow keys	19
Assemblies	98
Auxiliary voltage output	12

B

Batch process, pure	52
Boards, order numbers	95
Build-up on the sensor	83

C

Cable extension	16
Cable length, maximum	16
Cable resistance	26
Cable types	15
CAL key	19
Calibration	79
Cancelling	79
Protecting (by code)	79
Cancelling calibration	79
Cell constant	80
Certificates and approvals	8
Characteristic	34
Characteristic value	
Alarm	44, 49
Checking	
Conductive sensor	86
Inductive sensor	86
Line extension, boxes	86

ChemoClean	68, 99
Manual operation	69, 73
Cleaning	83
Day programme	70
Weekly programme	70
Cleaning example	69
Cleaning programme	
Edit	71
Cleaning trigger	45
Code	
Activation	20
Maintenance	20
Resetting	21
Specialist	20
Code forgotten?	20
Coding	
Current outputs	97
Commissioning	5, 23
First -	23
Conductivity characteristic	41
Conductivity sensors	98
Configuration	
Enabling	21
Locking	20
Connecting the measuring system	14
Connection compartment label	13
Constant control gain	64
Contact assignment	14, 45
Contact functions	36
Contacts	
Configuring to NAMUR	14
Response to errors	94
Response to power failure	94
Contrast	24, 32
Control gain, range-dependent	64
Control point	64
Control type	59
Controller	
characteristic values	64
Characteristic, constant characteristic	64
Relay assignment	14
Controller characteristic type	64
Controller hold	46
Controller in the CLM 153	56
Controller simulation	65
Controller: Checking the settings	65
Controlling actuators: see Actuators, control	
Current input	63
Current measured values	19
Current output	
controller	59
dosing alkali/acid	60
Response to errors	94
Current outputs	
Active/passive	97

D

Damping	31
DAT	
Slot	96
DAT handling	74
DAT module	22, 98
Data logger	
Call up, values	19
Record mode, Scroll mode	20
Date	24, 32
Day programme cleaning	70
Declaration of conformity	8
Delay time, hold	46
Delta alarm	44, 49
Deposits on sensor	83
Descriptions of functions	30
Designated use	5
Determining the characteristic	41
Device designation	7
Device fuse	97
Device reset	74
Device test	
Conductive	84
Inductive	85
DIAG key	18
Diagnosis	74
Digital inputs E1-E3	12, 47
Dimensions	9
Direction of action	52
Disabling programme	72
Display test	76
Displaying calibration log	74
Displaying error list	74
Displaying error log	74
Displaying operation log	74
Disposal	97
Distance electrode - dosing point	61
Dosing time alarm	45
Dosing via current output	60

E

E key	19
Edit day	70
Edit programme	71
Editor types	21
EEPROM test	76
Electrical connection	103
Electrode contamination	83
Electrode/dosing point distances	61
EMC	6
Enter key	19
Environment	104
Error assignment	45
Error codes	88
Error current	44
Error list	88

Error number list	88
External hold	46

F

Factory function	74
Factory settings	74
Fault-signalling contact	37
Feedback	63
Feedforward control	62
First commissioning	23
Flash test	76
Flat seal	99
Flow velocity	62
Flowmeter	62
Function check	23

G

Green LED	19
-----------	----

H

Help pages	18
Hold	
Controller	46
External	46
On-site	46
Hold current	46
Hold delay time	46
Hold priority	46

I

Identification	7
Incoming acceptance	9
Inline process, pure	52
Input	101
Installation	5, 9
Installation and removal of parts	96
Installation conditions	9
Installation factor	26, 31, 80–81
Installation instructions	9
Instrument check	74, 76
Instrument number	32
Instrument version	74

J

Junction box VBM	16
------------------	----

K

Key assignment	18
Keypad test	76
KR	64

L

Language	24, 32
LED	19
Linear characteristic	34
Locking the operation	21
Look-ahead pH measurement	52

M

Mains disconnecting device	13
Maintenance	83
Maintenance code	20
Entry	33
Manual operation	72
ChemoClean	69, 73
Maximum cable length	16
MEAS key	19
Measured value damping	31
Measured value difference monitoring	44, 49
Measured value display	19
Measuring cable	15
Measuring menu for controller	65
Measuring menus	19
Measuring principle	25, 30
Mechanical construction	104
Memory, replaceable (DAT)	22
Menu editor types	21
Modules, order no.	95
Motor run time	53

N

Nameplate	8
NAMUR	14
Class	88
Functions	37
Neutral zone	64

O

Offline configuration	98
One circuit	25, 30
One-sided actuators	59
One-sided process	
Batch	58
Inline	58
On-site hold	46
Operating matrix	105
Operating mode	25–26, 31
Operation	5, 18
Operational safety	5
Optimisation point	64
Optoscope	99
Ordering information	7
Output, technical data	
Output	102

P

Panel mounting	10
PARAM key	18
PCS	51
PCS time	51
Performance characteristics	103
PFM	53
Post mounting	10
Post-connection check	17
Post-installation check	11

Power supply	12
Process	52
one-sided	58
two-sided	58
Process check system	51
Product structure	7
Programme	
Enabling	72
Programme cleaning sequence	69
Programme editor	71
Pulse length	59
Pulse-frequency	59
Pulse-frequency controller	53
Pulse-frequency modulation	53
Pulse-length controller	52
Pulse-width modulation	52
PWM	52

Q

Quick Setup	24
Quick wiring guide	12

R

RAM test	76
Range-dependent control gain	64
Red LED	19
Reference temperature	
Temperature compensation	40
Related circuits	25, 30
Relay	
Configuring to NAMUR	14
Relay assignment	45
Relay contact status	19
Relay selection	59
Renaming programme	72
Replacing the device fuses	97
Reset	74, 76
Codes	21
Counter	78
Data	75
Resistance input	63
Response of contacts to errors	94
Response of contacts to power failure	94
Response of current output to errors	94
Return	6

S

Safety conventions	4
Safety icons	4
Safety instructions	4
Scope of delivery	8
Segmented characteristic	64
Semi-batch process	52
Sensor connection	15
Sensor technology	61
Serial numbers	74
Service adapter Optoscope	99

Service data	74
Service diagnosis	74
Set up 1	30
Set up 2	50
Simulation	74
Contacts	75
Current outputs	75
Measured value, temperature	75
Simulation f. device test	
Conductive sensors	84
Inductive sensors	85
Slot for DAT memory module	96
Soiling	83
Spare parts	
Order numbers	94
Spare parts list	95
Specialist code	20
Entry of -	33
Storage	9
Stromausgänge	34
Switching on the measuring device	23
T	
Table (characteristic)	34
Tag number	32
Technical data	101
Environment	104
Input	101
Performance characteristics	103
Temperature coefficient, alpha	37
Temperature compensation	27

Temperature sensor	27, 39
Temperature value	27
Terminal arrangement	14
Three-point step controller	53, 59
Time	24, 32
Transmitter dimensions	104
Transport	9
Troubleshooting	87
Troubleshooting instructions	87
Two circuit	25, 30
Two-sided actuators	60
Two-sided process	
Batch	58
Inline	58

U

Universal code	20
Unlocking the operation	21
User programme	71
USP	67

W

Wall mounting	9
Weather protection cover CYY 101	11, 100
Weekly cleaning programme	69
Weekly programme cleaning	70
Wiring	12
Wiring diagram	12
Write access	78

Declaration of contamination

Dear customer,

Because of legal determinations and for the safety of our employees and operating equipment we need this "Declaration of contamination" with your signature before your order can be handled. Please put the completely filled in declaration to the instrument and to the shipping documents in any case. Add also safety sheets and/or specific handling instructions if necessary.

type of instrument / sensor: _____ serial number: _____

medium / concentration: _____ temperature: _____ pressure: _____

cleaned with: _____ conductivity: _____ viscosity: _____

Warning hints for medium used:



radioactive



explosive



caustic



poisonous



harmful to
health



biologically
hazardous



inflammable



safe

Please mark the appropriate warning hints.

Reason for return:

Company data:

company:	_____	contact person:	_____
	_____		_____
	_____	department:	_____
address:	_____	phone number:	_____
	_____	fax / e-mail:	_____
	_____	your order no.:	_____

I hereby certify that the returned equipment has been cleaned and decontaminated acc. to good industrial practices and is in compliance with all regulations. This equipment poses no health or safety risks due to contamination.

(Date)

(company stamp and legally binding signature)



Europe	
Austria □ Endress+Hauser Ges.m.b.H. Wien Tel. (01) 88056-0, Fax (01) 88056-335	Netherland □ Endress+Hauser B.V. Naarden Tel. (035) 6958611, Fax (035) 6958825
Belarus □ Belorgsintez Minsk Tel. (0172) 263166, Fax (0172) 263111	Norway □ Endress+Hauser A/S Tranby Tel. (032) 859850, Fax (032) 859851
Belgium / Luxembourg □ Endress+Hauser N.V. Brussels Tel. (02) 2480600, Fax (02) 2480553	Poland □ Endress+Hauser Polska Sp. z o.o. Raszyn Tel. (022) 7201090, Fax (022) 7201085
Bulgaria INTERTECH-AUTOMATION Sofia Tel. (02) 664869, Fax (02) 9631389	Portugal Tecnisis - Tecnica de Sistemas Industriais Linda-a-Velha Tel. (21) 4267290, Fax (21) 4267299
Croatia □ Endress+Hauser GmbH+Co. Zagreb Tel. (01) 6637785, Fax (01) 6637823	Romania Romconseng S.R.L. Bucharest Tel. (01) 4101634, Fax (01) 4101634
Cyprus I+G Electrical Services Co. Ltd. Nicosia Tel. (02) 484788, Fax (02) 484690	Russia □ Endress+Hauser Moscow Office Moscow Tel. (095) 1587564, Fax (095) 1589871
Czech Republic □ Endress+Hauser GmbH+Co. Praha Tel. (026) 6784200, Fax (026) 6784179	Slovakia Transcom Technik s.r.o. Bratislava Tel. (7) 44888684, Fax (7) 44887112
Denmark □ Endress+Hauser A/S Søborg Tel. (70) 131132, Fax (70) 132133	Slovenia □ Endress+Hauser D.O.O. Ljubljana Tel. (061) 5192217, Fax (061) 5192298
Estonia ELVI-Aqua Tartu Tel. (7) 441638, Fax (7) 441582	Spain □ Endress+Hauser S.A. Sant Just Desvern Tel. (93) 4803366, Fax (93) 4733839
Finland □ Endress+Hauser Oy Espoo Tel. (09) 8676740, Fax (09) 86767440	Sweden □ Endress+Hauser AB Sollentuna Tel. (08) 55511600, Fax (08) 55511655
France □ Endress+Hauser S.A. Huningue Tel. (389) 696768, Fax (389) 694802	Switzerland □ Endress+Hauser Metso AG Reinach/BL 1 Tel. (061) 7157575, Fax (061) 7111650
Germany □ Endress+HauserMesstechnik GmbH+Co. Weil am Rhein Tel. (07621) 975-01, Fax (07621) 975-555	Turkey Intek Endüstriyel Ölçü ve Kontrol Sistemleri- tanbul Tel. (0212) 2751355, Fax (0212) 2662775
Great Britain □ Endress+Hauser Ltd. Manchester Tel. (0161) 2865000, Fax (0161) 9981841	Ukraine Photonika GmbH Kiev Tel. (44) 26881, Fax (44) 26908
Greece I & G Building Services Automation S.A. Athens Tel. (01) 9241500, Fax (01) 9221714	Yugoslavia Rep. Meris d.o.o. Beograd Tel.(11) 4441966, Fax (11) 4441966
Hungary Mile Ipari-Elektro Budapest Tel. (01) 4319800, Fax (01) 4319817	
Iceland BIL ehf Reykjavik Tel. (05) 619616, Fax (05) 619617	
Ireland Flomeaco Company Ltd. Kildare Tel. (045) 868615, Fax (045) 868182	
Italy □ Endress+Hauser S.p.A. Cernusco s/N Milano Tel. (02) 921921, Fax (02) 92107153	
Latvia Rino TK Riga Tel. (07) 312897, Fax (07) 312894	
Lithuania UAB "Agava" Kaunas Tel. (07) 202410, Fax (07) 207414	
Pakistan Speedy Automation Karachi Tel. (021) 7722953, Fax (021) 7736884	
Papua-Neuguinea SBS Electrical Pty Limited Port Moresby Tel. 3251188, Fax 3259556	
Philippines □ Endress+Hauser Philippines Inc. Metro Manila Tel. (2) 3723601-05, Fax (2) 4121944	
Singapore □ Endress+Hauser (S.E.A.) Pte., Ltd. Singapore Tel. 5668222, Fax 5666848	
South Korea □ Endress+Hauser (Korea) Co., Ltd. Seoul Tel. (02) 6587200, Fax (02) 6592838	
Taiwan Kingjarl Corporation Taipei R.O.C. Tel. (02) 27183938, Fax (02) 27134190	
Thailand □ Endress+Hauser Ltd. Bangkok Tel. (2) 9967811-20, Fax (2) 9967810	
Vietnam Tan Viet Bao Co. Ltd. Ho Chi Minh City Tel. (08) 8335225, Fax (08) 8335227	
Iran PATSA Co. Tehran Tel. (021) 8754748, Fax(021) 8747761	
Israel Instrumetrics Industrial Control Ltd. Netanya Tel. (029) 8357090, Fax (03) 8350619	
Jordan A.P. Parpas Engineering S.A. Amman Tel. (06) 4643246, Fax (06) 4645707	
Kingdom of Saudi Arabia Anasia Ind. Agencies Jeddah Tel. (02) 6710014, Fax (02) 6725929	
Lebanon Network Engineering Jbeil Tel. (3) 944080, Fax (9) 548038	
Sultanate of Oman Mustafa & Jawad Sience & Industry Co. L.L.C. Ruwi Tel. 602009, Fax 607066	
United Arab Emirates Descon Trading EST. Dubai Tel. (04) 2653651, Fax (04) 2653264	
Yemen YemenCompany for Ghee andSoapIndustry Taiz Tel. (04) 230664, Fax (04) 212338	
Australia + New Zealand	
Australia ALSTOM Australia Limited Milperra Tel. (02) 97747444, Fax (02) 97744667	
New Zealand EMC Industrial Group Limited Auckland Tel. (09) 4155110, Fax (09) 4155115	
All other countries □ Endress+Hauser GmbH+Co. Instruments International D-Weil am Rhein Germany Tel. (07621) 975-02, Fax (07621) 975345	

For more Endress+Hauser product please visit: www.ainstru.com
<http://www.endress.com>
 Mail: Sales@ainstru.com

