



Level



Pressure



Flow



Temperature



Liquid
Analysis



Registration



Systems
Components



Services




Solutions

Description of Instrument Functions

Micropilot S

FMR530/531/532/533

Level-Radar

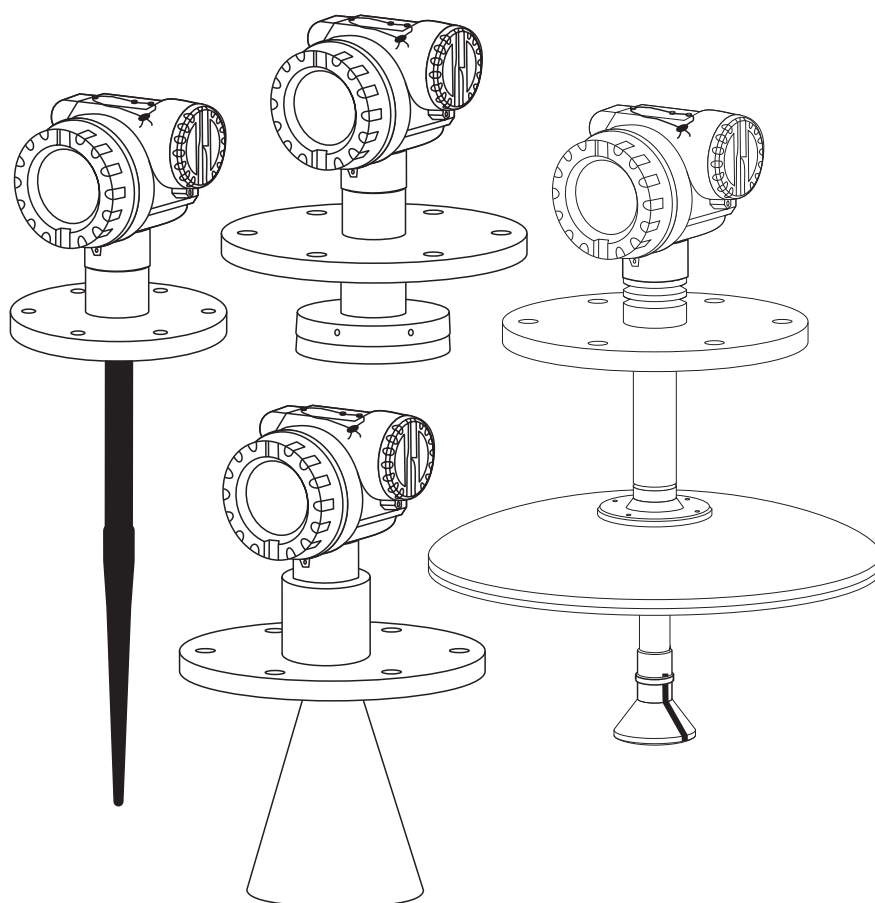

BA217F/00/en/04.09
71093905

gültig ab Software-Version:
V 01.02.00 (Messverstärker)
V 01.02.00 (Kommunikation)

Endress+Hauser

People for Process Automation

Basic Setup

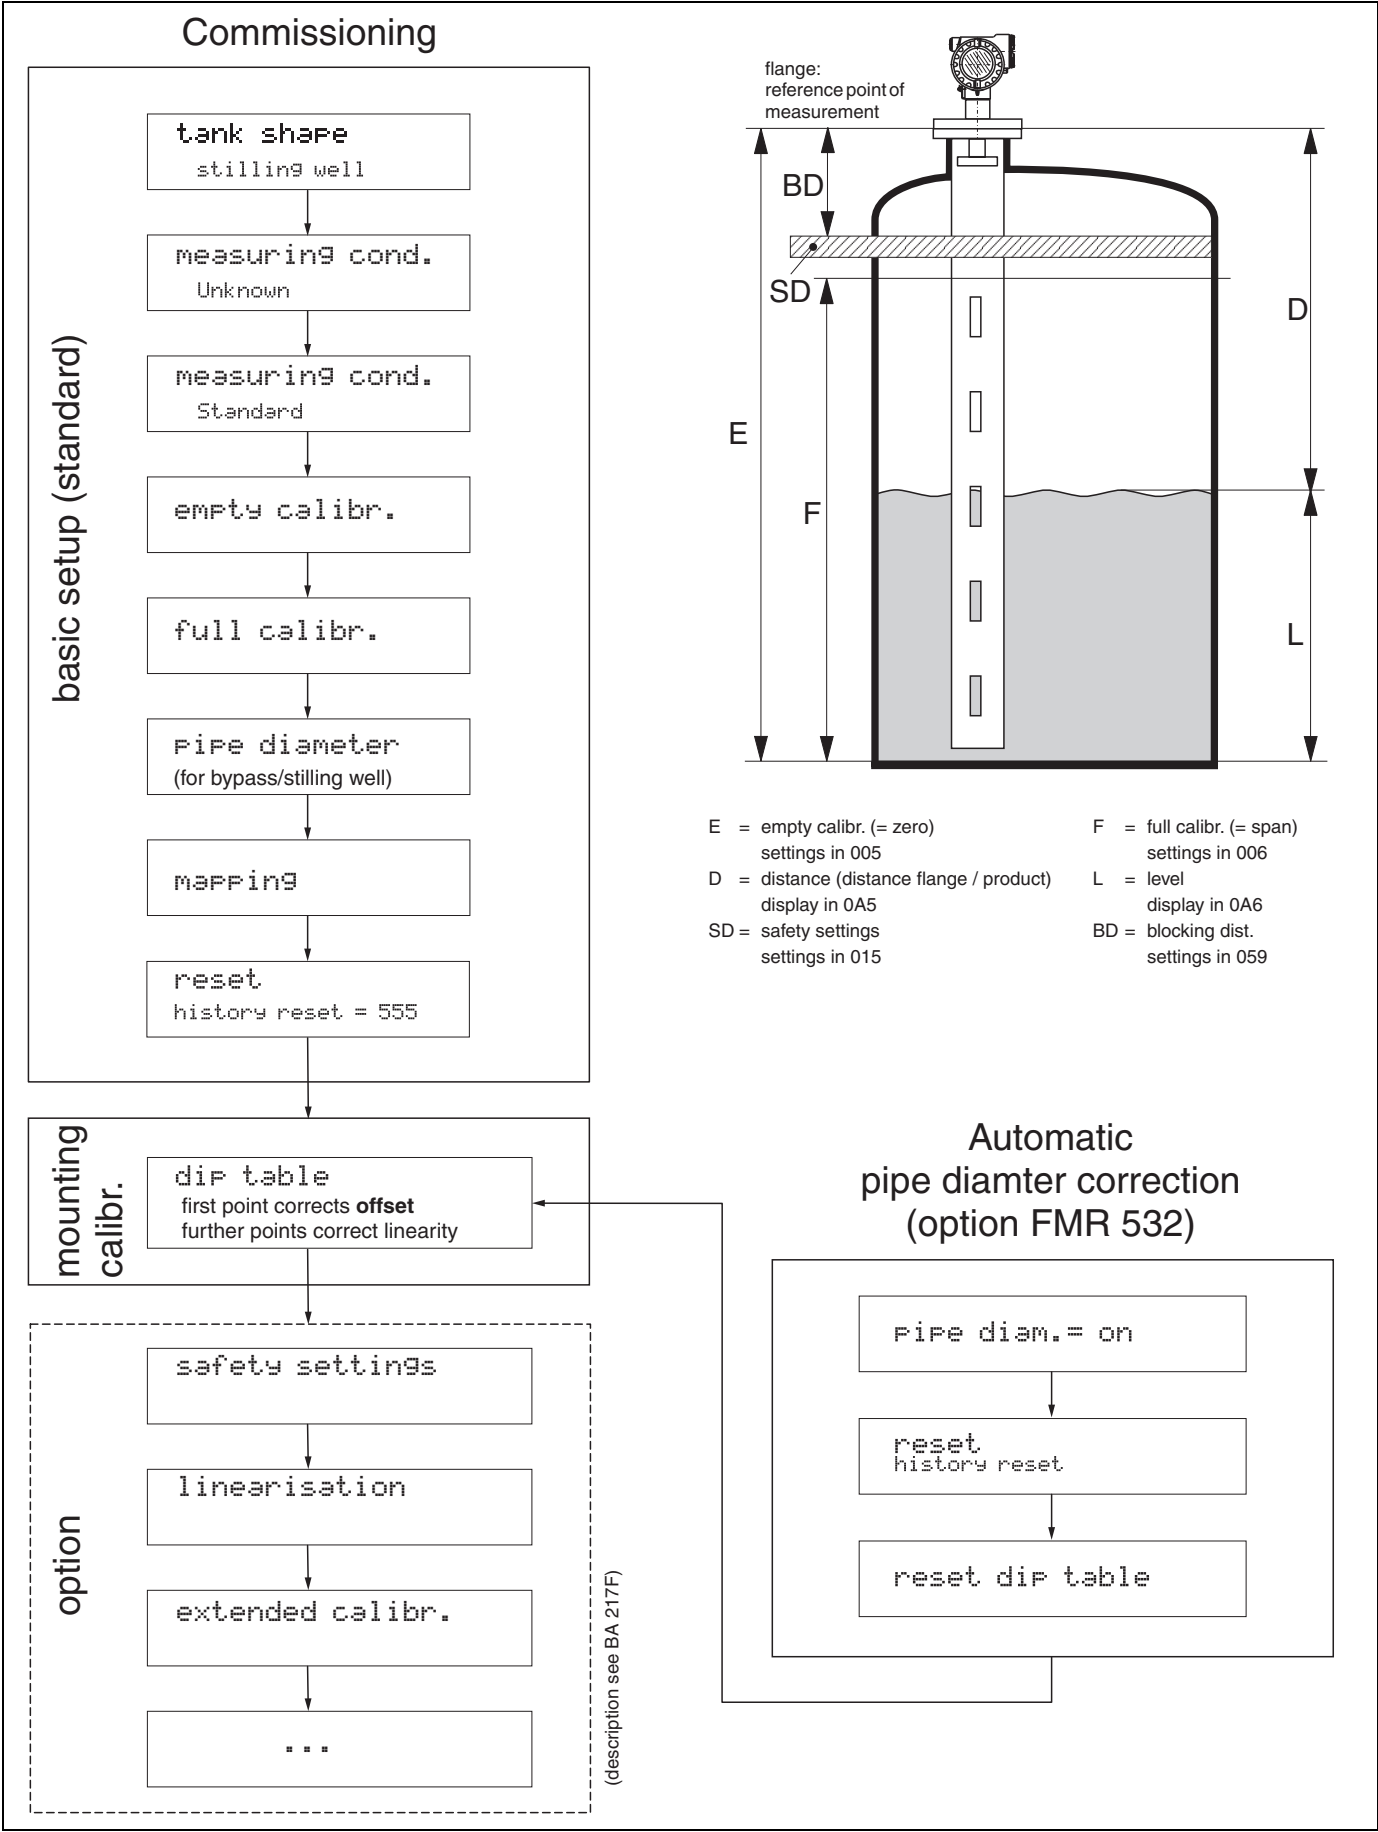


Table of contents

1	Notes on use	5	6	Function group "linearisation" (04) ..	37
1.1	Using the table of contents to locate a function description	5	6.1	Function "level/ullage" (040)	37
1.2	Using the graphic of the function menu to locate a function description	5	6.2	Function "linearisation" (041)	38
1.3	Using the index of the function menu to locate a function description	5	6.3	Function "customer unit" (042)	42
1.4	General structure of the operating menu	6	6.4	Function "table no." (043)	42
1.5	Display and operating elements	7	6.5	Function "input level" (044)	43
1.6	Commissioning	11	6.6	Function "input volume" (045)	43
2	Function menu Micropilot S	12	6.7	Function "max. scale" (046)	43
3	Function group "basic setup" (00)	14	6.8	Function "diameter vessel" (047)	44
3.1	Function "measured value" (000)	14	7	Function group	
3.2	Function "tank shape" (002)	14		"extended calibr." (05)	45
3.3	Function "medium property" (003)	15	7.1	Function "selection" (050)	45
3.4	Function "process cond." (004)	16	7.2	Function "check distance" (051)	45
3.5	Function "empty calibr." (005)	17	7.3	Function "range of mapping" (052)	46
3.6	Function "full calibr." (006)	17	7.4	Function "start mapping" (053)	46
3.7	Function "pipe diameter" (007)	18	7.5	Function "pres. map dist." (054)	47
3.8	Display (008)	18	7.6	Function "cust. tank map" (055)	47
3.9	Function "check distance" (051)	19	7.7	Function "echo quality" (056)	48
3.10	Function "range of mapping" (052)	20	7.8	Function "offset" (057)	48
3.11	Function "start mapping" (053)	20	7.9	Function "output damping" (058)	49
3.12	Display (008)	20	7.10	Function "blocking dist." (059)	49
3.13	Function "history reset" (009)	21	8	Function group "output" (06)	50
4	Function group "safety settings" (01) .	22	8.1	Function "commun. address" (060)	50
4.1	Function "output on alarm" (010)	22	8.2	Function "no. of preambels" (061)	50
4.2	Function "output on alarm" (011)	23	8.3	Function "thres. main val." (062)	50
4.3	Function "outp. echo loss" (012)	24	8.4	Function "fixed current" (063)	51
4.4	Function "ramp %span/min" (013)	25	8.5	Function "fixed cur. value" (064)	51
4.5	Function "delay time" (014)	25	8.6	Function "simulation" (065)	52
4.6	Function "safety distance" (015)	26	8.7	Function "simulation value" (066)	53
4.7	Function "in safety dist." (016)	26	8.8	Function "output current" (067)	53
4.8	Function "ackn. alarm" (017)	28	9	Function group "display" (09)	54
4.9	Function "overspill prot." (018)	28	9.1	Function "language" (092)	54
5	Function group		9.2	Function "back to home" (093)	54
	"mounting calibr." (03)	29	9.3	Function "format display" (094)	55
5.1	Function "tank gauging" (030)	29	9.4	Function "no.of decimals" (095)	55
5.2	Function "auto correction" (031)	29	9.5	Function "sep. character" (096)	55
5.3	Function "pipe diam.corr." (032) (only relevant for FMR 532)	30	9.6	Function "display test" (097)	56
5.4	Function "dip table mode" (033)	32	9.7	Function "plot settings" (09A)	56
5.5	Function "dip table" (034)	34	9.8	Function "recording curve" (09B)	56
5.6	Function "dip table" (035)	34	9.9	Function "envelope curve" (09C)	57
5.7	Function "dip table handl." (036)	35	9.10	Envelope curve - navigate mode	58
5.8	Function "dip table state" (037)	36	10	Function group "diagnostics" (0A) ...	59
			10.1	Function "present error" (0A0)	60
			10.2	Function "previous error" (0A1)	60
			10.3	Function "clear last error" (0A2)	60
			10.4	Function "reset" (0A3)	61
			10.5	Function "unlock parameter" (0A4)	62

10.6	Function "measured dist." (0A5)	63
10.7	Function "measured level" (0A6)	63
10.8	Function "application par." (0A8)	64
10.9	Function "custody mode" (0A9)	65

11	Function group	
	"system parameters" (0C)	66
11.1	Function "tag no." (0C0)	66
11.2	Function "protocol+sw-no." (0C2)	66
11.3	Funktion "software no." (0C3)	66
11.4	Function "serial no." (0C4)	67
11.5	Function "distance unit" (0C5)	67
11.6	Function "download mode" (0C8)	68

12	Function group "service" (0D)	69
-----------	--	-----------

13	Envelope curve	70
-----------	-----------------------------	-----------

14	Trouble-shooting	74
-----------	-------------------------------	-----------

14.1	Trouble-shooting instructions	75
14.2	System error messages	76
14.3	Application errors	78
14.4	Orientation of the Micropilot	80

Index function menu	83
----------------------------------	-----------

1 Notes on use

You have various options for accessing the descriptions of instrument functions or how to enter parameters.

1.1 Using the table of contents to locate a function description

All the functions are listed in the table of contents sorted by function group (e.g. "**basic setup**", "**safety settings**", etc.). You can access a more detailed description of a function by using a page reference / link.

The table of contents is on page 3.

1.2 Using the graphic of the function menu to locate a function description

This guides you step by step from the highest level, the function groups, to the exact function description you require.

All the available function groups and instrument functions are listed in the table (see page 12). Select your required function group or function. You can access an exact description of the function group or function by using a page reference / link.

1.3 Using the index of the function menu to locate a function description

To simply navigation within the function menu, each function has a position which is shown in the display. You can access each function via a page reference/link in the function menu index (see page 83) which lists all the function names alphabetically and numerically.

1.4 General structure of the operating menu

The operating menu is made up of two levels:

■ **Function groups (00, 01, 03, ..., 0C, 0D):**

The individual operating Selection of the instrument are split up roughly into different function groups. The function groups that are available include, e.g.: "**basic setup**", "**safety settings**", "**output**", "**display**", etc.

■ **Functions (001, 002, 003, ..., 0D8, 0D9):**


Each function group consists of one or more functions. The functions perform the actual operation or parameterisation of the instrument. Numerical values can be entered here and parameters can be selected and saved. The available functions of the "**basic setup (00)**" function group include, e.g.: "**tank shape (002)**", "**medium property (003)**", "**process cond. (004)**", "**empty calibr. (005)**", etc.

If, for example, the application of the instrument is to be changed, carry out the following procedure:

1. Select the "**basic setup (00)**" function group.
2. Select the "**tank shape (002)**" function (where the existing tank shape is selected).

1.4.1 Identifying the functions

For simple orientation within the function menus (see Page 12 ff.), for each function a position is shown on the display.

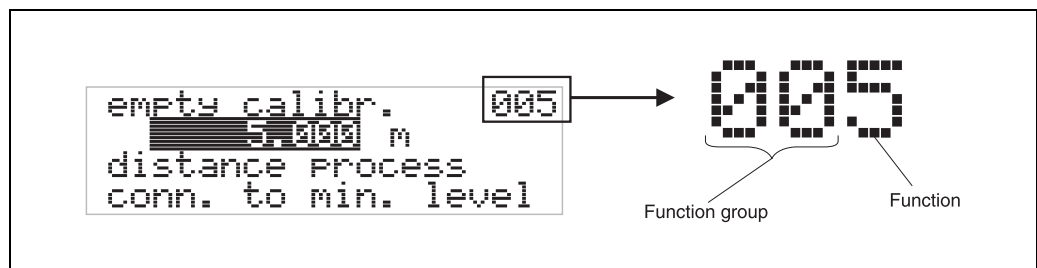

The first two digits identify the function group:

- **basic setup** 00
- **safety settings** 01
- **linearisation** 04

...


The third digit numbers the individual functions within the function group:

- **basic setup** 00 → ■ **tank shape** 002
- **medium property** 003
- **process cond.** 004

...

Hereafter the position is always given in brackets (e.g. "**tank shape**" (002)) after the described function.


1.5 Display and operating elements

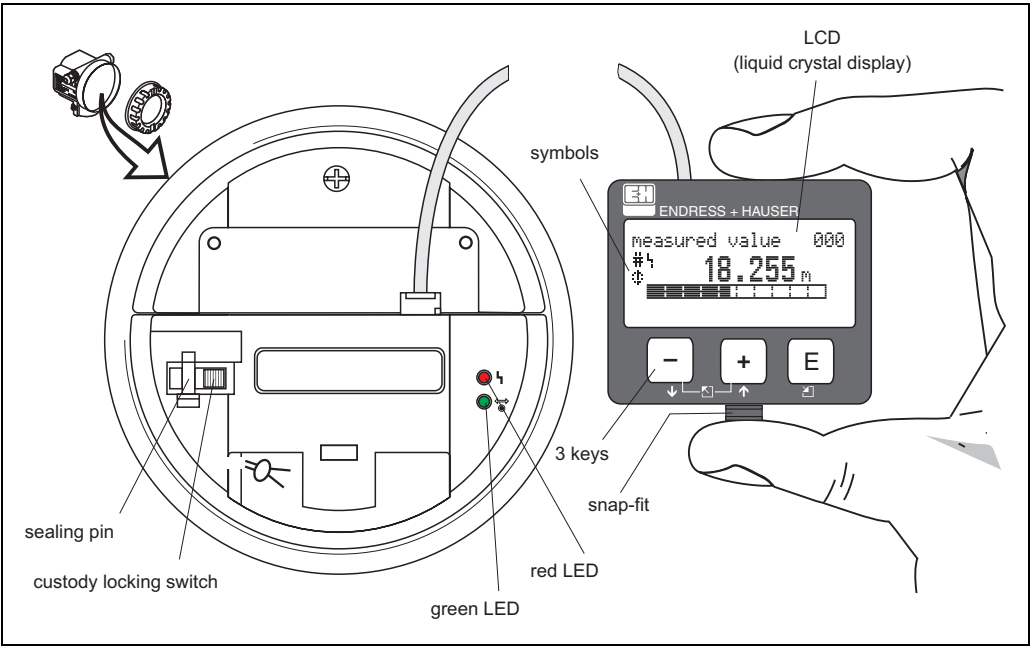

Note!
To access the display the cover of the electronic compartment may be removed even in hazardous area.

1.5.1 Display

Liquid crystal display (LCD):
Four lines with 20 characters each. Display contrast adjustable through key combination.

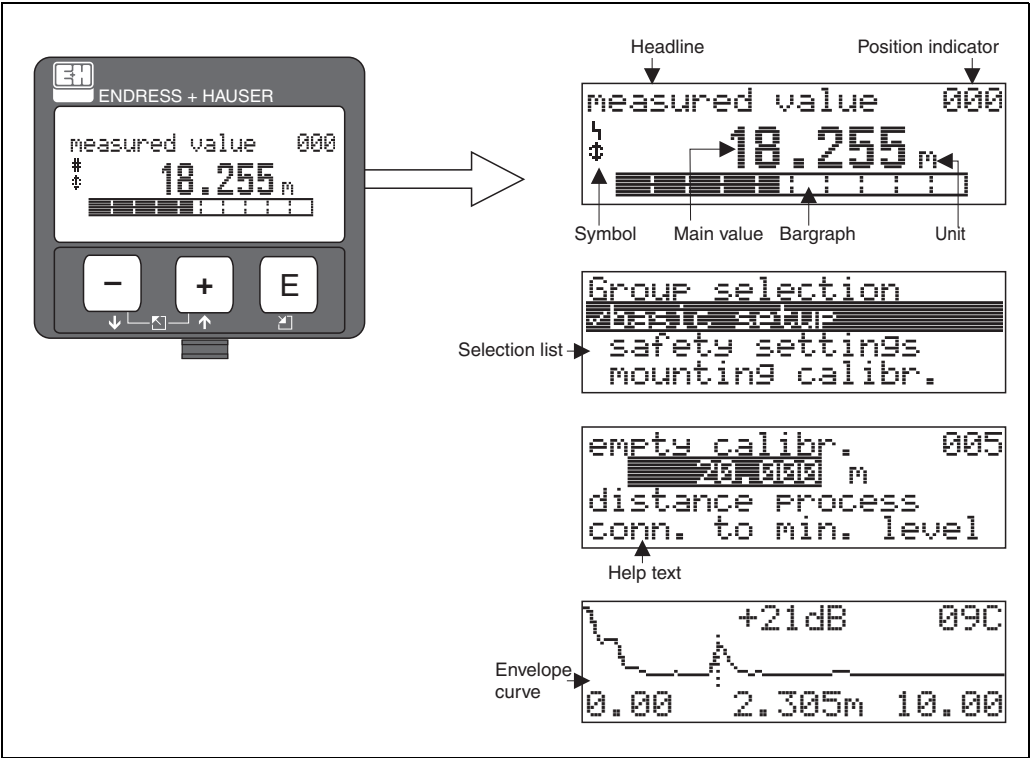

1.5.2 Display symbols

The following table describes the symbols that appear on the liquid crystal display:

Symbols	Meaning
	ALARM_SYMBOL This alarm symbol appears when the instrument is in an alarm state. If the symbol flashes, this indicates a warning.
	LOCK_SYMBOL This lock symbol appears when the instrument is locked, i.e. if no input is possible.
	COM_SYMBOL This communication symbol appears when a data transmission via e.g. HART is in progress.
	Calibration to regulatory standards disturbed If the instrument is not locked or it cannot guarantee the calibration to regulatory standards, the situation will be indicated on the display via the symbol.

Light emitting diodes (LEDs):

There is a green and a red LED besides the Liquid Crystal Display.

LED	Meaning
red LED continuously on	Alarm
red LED flashes	Warning
red LED off	No alarm
green LED continuously on	Operation
Green LED flashes	Communication with external device

1.5.3 Key assignment

The operating elements are located inside the housing and are accessible for operation by opening the lid of the housing.

Function of the keys

Key(s)	Meaning
 or 	Navigate upwards in the selection list Edit numeric value within a function
 or 	Navigate downwards in the selection list Edit numeric value within a function
 or 	Navigate to the left within a function group
 or 	Navigate to the right within a function group, confirmation.
 and  or  and 	Contrast settings of the LCD
 and  and 	Hardware lock / unlock After a hardware lock, an operation of the instrument via display or communication is not possible! The hardware can only be unlocked via the display. An unlock parameter must be entered to do so.

Custody locking switch

Access to the electronics can be prevented by means of a custody locking switch that locks the device settings. The custody locking switch can be sealed for custody transfer applications.


Software reliability

The software used in the radar instruments Micropilot S fulfills the requirements of OIML R85. This particularly includes:

- cyclical test of data consistency
- non-volatile memory
- segmented data storage

The radar instruments Micropilot S continuously monitor the compliance with accuracy requirements for custody transfer measurements according to OIML R85. If the accuracy cannot be maintained, a specific alarm is generated on the local display and via the digital communication.

1.5.4 Operation with the VU331

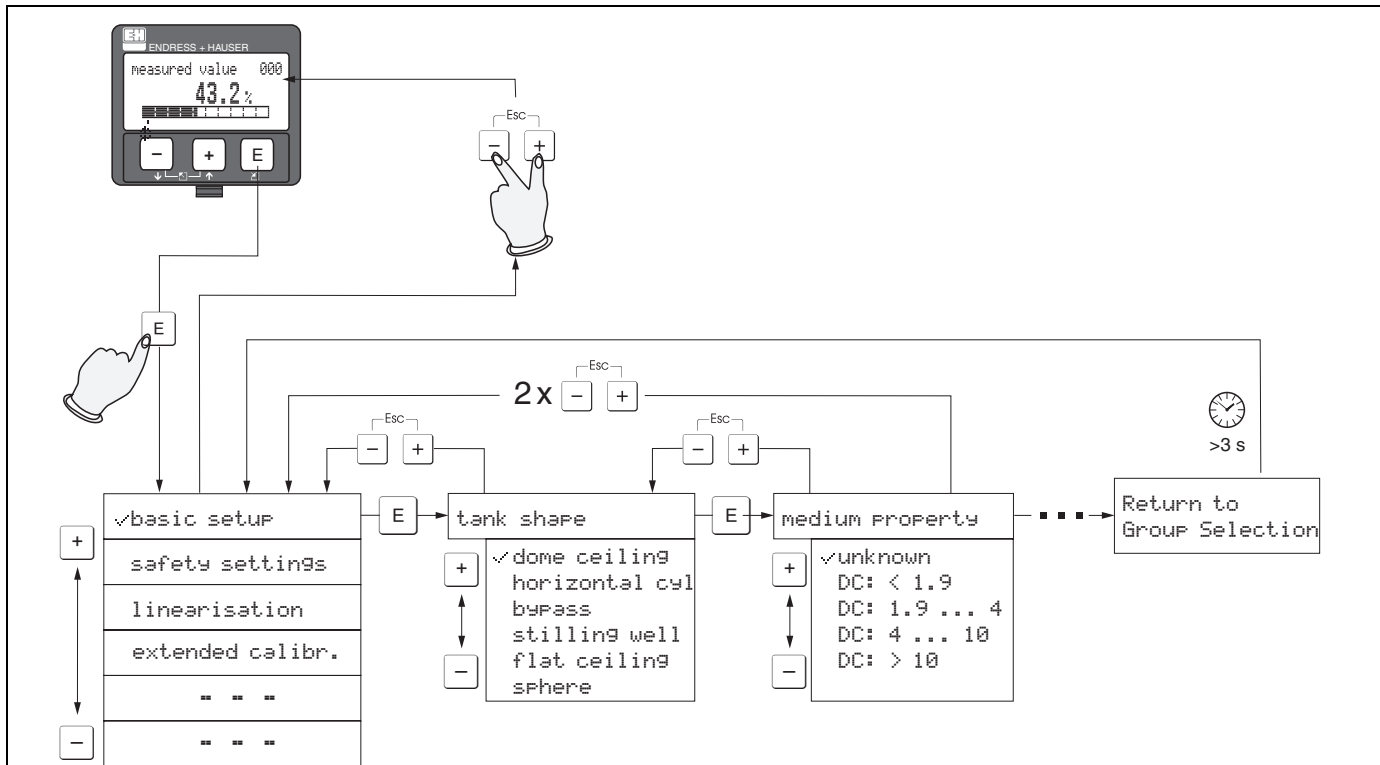

Selection and configuration in Operation menu:

- 1.) Change from Measured Value Display to **Group Selection** by pressing **E**
- 2.) Press **-** or **+** to select the required **Function Group** (e.g.. "basic setup (00)") and confirm by pressing **E** → **First function** (e.g. "tank shape (002)") is selected.

Note!

The active selection is marked by a '✓' in front of the menu text.

- 3.) Activate Edit mode with **+** or **-**.

Selection menus:

- a) Select the required **Parameter** in selected **function** (e.g. "tank shape (002)") with **-** or **+**.
- b) **E** confirms selection → '✓' appears in front of the selected parameter
- c) **E** confirms the edited value → system quits Edit mode
- d) **+** + **-** (= **Esc**) interrupts selection → system quits Edit mode

Typing in numerals and text:

- a) Press **+** or **-** to edit the first character of the **numeral / text** (e.g. "empty calibr. (005)")
- b) **E** positions the cursor at the next character → continue with (a) until you have completed your input
- c) if a **␣** symbol appears at the cursor, press **E** to accept the value entered → system quits Edit mode
- d) **+** + **-** (= **Esc**) interrupts the input, system quits Edit mode
- 4) Press **E** to select the next **function** (e.g. "medium property (003)")
- 5) Press **+** + **-** (= **Esc**) once → return to previous **function** (e.g. "tank shape (002)")
Press **+** + **-** (= **Esc**) twice → return to **Group selection**
- 6) Press **+** + **-** (= **Esc**) to return to **Measured value display**

1.6 Commissioning

1.6.1 Switching on the measuring device

When the instrument is switched on for the first time, the following messages appear on the display:



```
initialization
V 18.10.1999
```

After 5 s, the following message appears

```
FMR 53X
V01.02.00 HART
```

After 5 s, the following message appears

```
HART
FIELD COMMUNICATION
PROTOCOL
```

After 5 s or after you have pressed **E** the following message appears

```
language 092
English
Deutsch
Français
```

Select the language

(this message appears the first time the instrument is switched on)

```
distance unit 005
m
ft
mm
```

Select the basic unit

(this message appears the first time the instrument is switched on)

```
measured value 000
63.460 %
```

The current measured value is displayed

After **E** is pressed, you reach the group selection.

```
Group selection 003
basic setup
safety settings
linearisation
```


This selection enables you to perform the basic setup

2 Function menu Micropilot S


Function group		Function		Description
basic setup 00 (siehe Seite 14)	⇒	measured value 000	→	Seite 14
⇓		tank shape 002	→	Seite 14
		medium property 003	→	Seite 15
		process cond. 004	→	Seite 16
		empty calibr. 005	→	Seite 17
		full calibr. 006	→	Seite 17
		pipe diameter 007	→	Seite 18
		check distance 051	→	Seite 19
		range of mapping 052	→	Seite 20
		start mapping 053	→	Seite 20
		history reset 009	→	Page 21
safety settings 01 (siehe Seite 22)	⇒	output on alarm 010	→	Seite 22
⇓		output on alarm 011	→	Seite 23
		outp. echo loss 012	→	Seite 24
		ramp %span/min 013	→	Seite 25
		delay time 014	→	Seite 25
		safety distance 015	→	Seite 26
		in safety dist. 016	→	Seite 26
		ackn. alarm 017	→	Seite 28
		overspill prot. 018	→	Seite 28
mounting calibr. 03 (siehe Seite 29)	⇒	tank gauging 030	→	Seite 29
⇓		auto correction 031	→	Seite 29
		pipe diam.corr. 032	→	Seite 30
		dip table mode 033	→	Seite 32
		dip table 034	→	Seite 34
		dip table 035	→	Seite 34
		dip table handl. 036	→	Seite 35
		dip table state 037	→	Seite 36
linearisation 04 (siehe Seite 37)	⇒	level/ullage 040	→	Seite 37
⇓		linearisation 041	→	Seite 38
		customer unit 042	→	Seite 42
		table no. 043	→	Seite 42
		input level 044	→	Seite 43
		input volume 045	→	Seite 43
		max. scale 046	→	Seite 43
		diameter vessel 047	→	Seite 44

Function group	Function	Description
extended calibr. 05 (siehe Seite 45) ↓	selection 050 →	Seite 45
	check distance 051 →	Seite 45
	range of mapping 052 →	Seite 46
	start mapping 053 →	Seite 46
	pres. map dist. 054 →	Seite 47
	cust. tank map 055 →	Seite 47
	echo quality 056 →	Seite 48
	offset 057 →	Seite 48
	output damping 058 →	Seite 49
	blocking dist. 059 →	Seite 49
output 06 (siehe Seite 50) ↓	commun. address 060 →	Seite 50
	no. of preambels 061 →	Seite 50
	thres. main val. 062 →	Seite 50
	fixed current 063 →	Seite 51
	fixed cur. value 064 →	Seite 51
	simulation 065 →	Seite 52
	simulation value 066 →	Seite 52
	output current 067 →	Seite 52
display 09 (siehe Seite 54) ↓	language 092 →	Seite 54
	back to home 093 →	Seite 54
	format display 094 →	Seite 55
	no.of decimals 095 →	Seite 55
	sep. character 096 →	Seite 55
	display test 097 →	Seite 56
	plot settings 09A →	Seite 56
	recording curve 09B →	Seite 56
	envelope curve 09C →	Seite 57
diagnostics 0A (siehe Seite 59) ↓	present error 0A0 →	Seite 60
	previous error 0A1 →	Seite 60
	clear last error 0A2 →	Seite 60
	reset 0A3 →	Seite 61
	unlock parameter 0A4 →	Seite 62
	measured dist. 0A5 →	Seite 63
	measured level 0A6 →	Seite 63
	application par. 0A8 →	Seite 64
	custody mode 0A9 →	Seite 65
system parameter 0C (siehe Seite 66) ↓	tag no. 0C0 →	Seite 66
	protocol+sw-no. 0C2 →	Seite 66
	software no. 0C3 →	Seite 66
	serial no. 0C4 →	Seite 67
	distance unit 0C5 →	Seite 67
	download mode 0C8 →	Seite 68
service D00	service level D00 →	Seite 69

3 Function group "basic setup" (00)

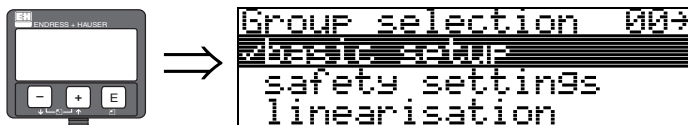

3.1 Function "measured value" (000)

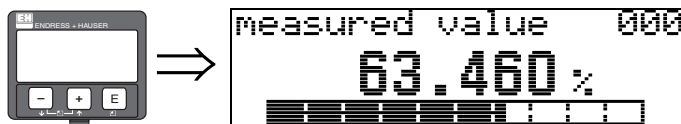

This function displays the current measured value in the selected unit (see "**customer unit**" (042) function). The number of places after decimal point can be selected in the "**no.of decimals**" (095) function. The length of the bargraph corresponds to the percental value of the present measured value with regard to the span.



Caution!

When using an FAR10 antenna extension, carry out an offset correction before the basic setup. Enter the value into the funktion "**offset**" (057) (see Page 48).

3.2 Function "tank shape" (002)



This function is used to select the tank shape.




Note!

For the application of the FMR532 the selection "**stilling well**" has to be chosen in the funktion "**tank shape**" (002).

Selection:

- dome ceiling
- horizontal cyl
- bypass
- **stilling well** (factory setting for FMR532)
- flat ceiling (factory setting for FMR530, FMR531, FMR533. Typical ceiling of storage tanks: a slight slope of only a few degrees can be neglected.)
- sphere

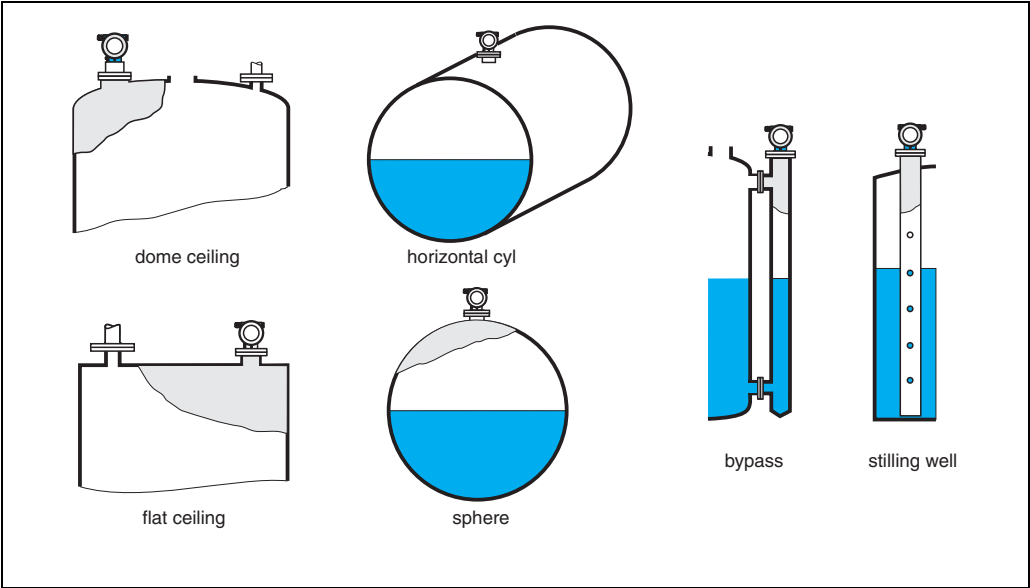

3.3 Function "medium property" (003)




This function is used to select the dielectric constant.

Selection:

- unknown
- < 1.9
- 1.9 ... 4
- 4 ... 10
- > 10



Media group	DC (ϵ_r)	Examples
A	1.4 ... 1.9	non-conducting liquids, e.g. liquefied gas (LPG). For more information please contact your Endress+Hauser representative.
B	1.9 ... 4	non-conducting liquids, e.g. benzene, oil, toluene, white products, black products, crudes, bitumen/asphalts, ...
C	4 ... 10	e.g. concentrated acids, organic solvents, esters, aniline, alcohol, acetone, ...
D	> 10	conducting liquids, e.g. aqueous solutions, dilute acids and alkalis

3.4 Function "process cond." (004)

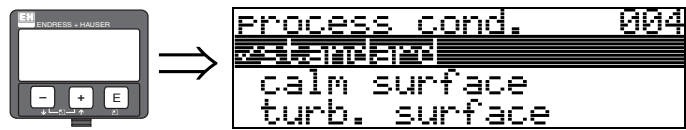

This function is used to select the process conditions.


- Selection:
- standard
 - calm surface
 - turb. surface
 - add. agitator
 - fast change
 - heavy conditions
 - test:no filter

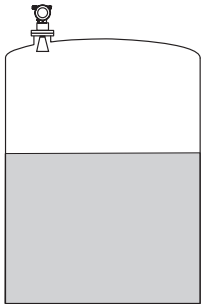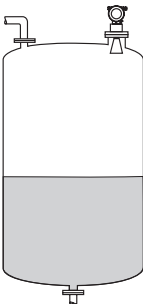standard	calm surface
For all applications that do not fit into any of the following groups.	Storage tanks with immersion tube or bottom filling
	
The filter and output damping are set to average values.	The averaging filters and output damping are set to high values. -> steady meas. value -> precise measurement -> slower reaction time




Note!
The phase evaluation of the Micropilot S (see »Function "auto correction" (031)« on page 29) is only activated if you select the measuring conditions "**standard**", "**calm surface**" or "**heavy conditions**". If, however, "**heavy conditions**" is selected, no index values are stored. We strongly recommend that, in the case of rough product surfaces or rapid filling, you activate the appropriate application parameters.

3.5 Function "empty calibr." (005)

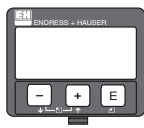

```
empty calibr. 005
5.000 m
distance Process
conn. to min. level
```


This function is used to enter the distance from the flange (reference point of the measurement) to the minimum level (=zero).

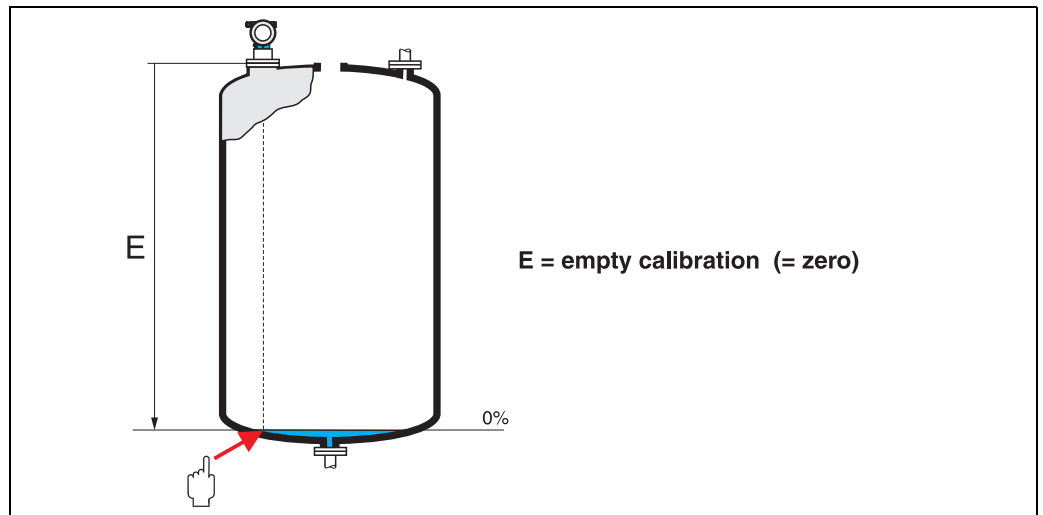

Caution!


For dish bottoms or conical outlets, the zero point should be no lower than the point at which the radar beam hits the bottom of the tank.

3.6 Function "full calibr." (006)

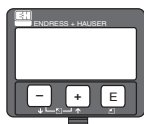

```
full calibr. 006
4.000 m
span
```

This function is used to enter the distance from the minimum level to the maximum level (=span).

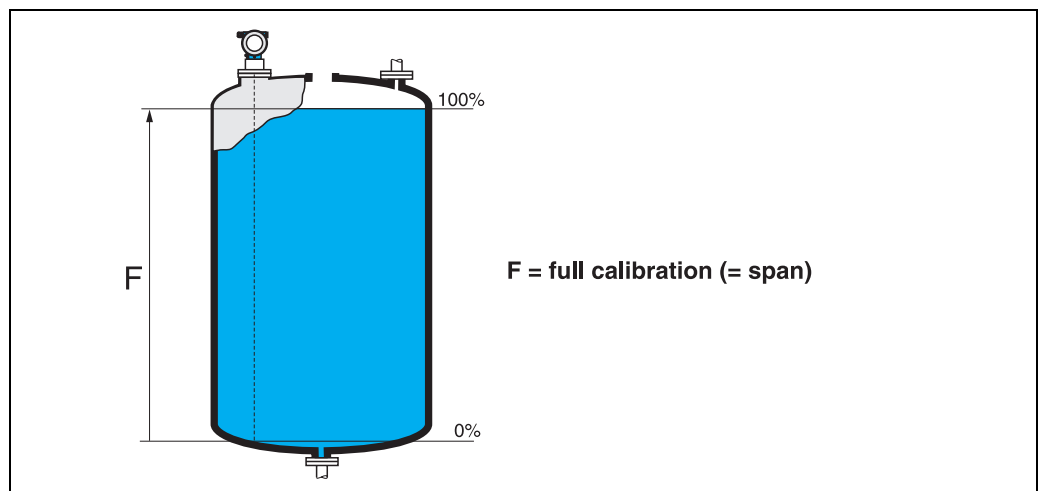


In principle, it is possible to measure up to the tip of the antenna. However, due to considerations regarding corrosion and build-up, the end of the measuring range should not be chosen any closer than 50 mm (2") to the tip of the antenna.



Note!

If **bypass** or **stilling well** was selected in the **"tank shape" (002)** function, the pipe diameter is requested in the following step.


3.7 Function "pipe diameter" (007)

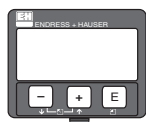

```


Pipe diameter      007
204.425 mm
inner diameter of
bypass/stilling well
  
```

This function is used to enter the pipe diameter of the stilling well or bypass pipe.

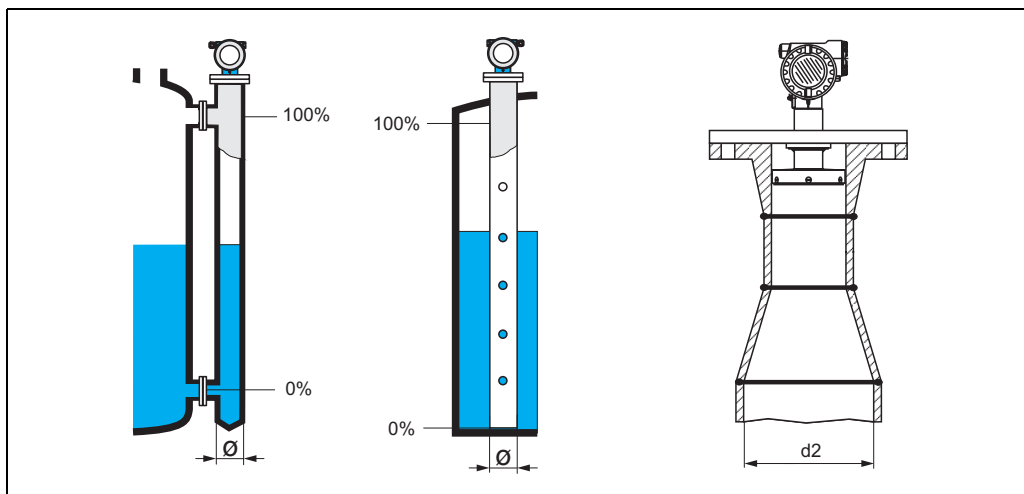

Microwaves propagate slower in pipes than in free space. This effect depends on the inside diameter of the pipe and is automatically taken into account by the Micropilot. It is only necessary to enter the pipe diameter for applications in a bypass or stilling well. If mounting the FMR532 on stilling wells with a widening of the pipe, the **inner** diameter of the lower part of the pipe (d2 in the Fig.) must be entered. This is the part of the stilling well, where the measurement is actually performed.

3.8 Display "dist./meas.value" (008)

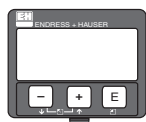


```

dist./meas.value 008
dist.      2.463 m
meas.v.    63.422 %
  
```

The distance measured from the reference point to the product surface and the level calculated with the aid of the empty adjustment are displayed. Check whether the values correspond to the actual level or the actual distance. The following cases can occur:

- Distance correct – level correct -> continue with the next function, **"check distance" (051)**
- Distance correct – level incorrect -> Check **"empty calibr." (005)**
- Distance incorrect – level incorrect -> continue with the next function, **"check distance" (051)**

3.9 Function "check distance" (051)

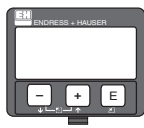


```
check distance 051
dist. unknown
manual
distance = ok
```

This function triggers the mapping of interference echoes. To do so, the measured distance must be compared with the actual distance to the product surface. The following options are available for selection:

Selection:

- distance = ok
- dist. too small
- dist. too big
- **dist. unknown**
- manual

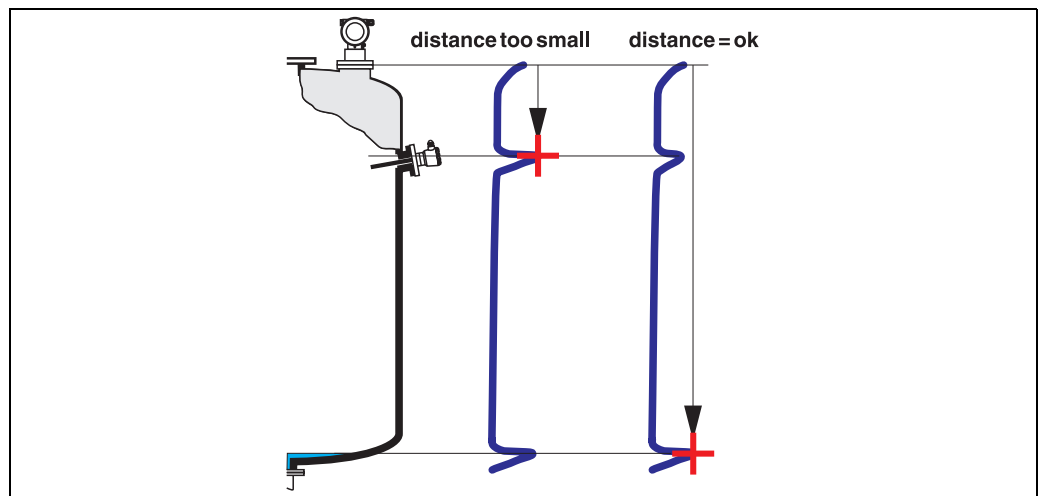

distance = ok

- mapping is carried out up to the currently measured echo
 - The range to be suppressed is suggested in the "**range of mapping (052)**" function
- Anyway, it is wise to carry out a mapping even in this case.

dist. too small

- At the moment, an interference is being evaluated
- Therefore, a mapping is carried out including the presently measured echoes
- The range to be suppressed is suggested in the "**range of mapping (052)**" function

dist. too big

- This error cannot be remedied by interference echo mapping
- Check the application parameters (002), (003), (004) and "**empty calibr.**" (005)

dist. unknown

If the actual distance is not known, no mapping can be carried out.

manual


A mapping is also possible by manual entry of the range to be suppressed. This entry is made in the "**range of mapping (052)**" function.



Caution!

The range of mapping must end 0.5 m (20") before the echo of the actual level. For an empty tank, do not enter E, but E – 0.5 m (20").

3.10 Function "range of mapping" (052)

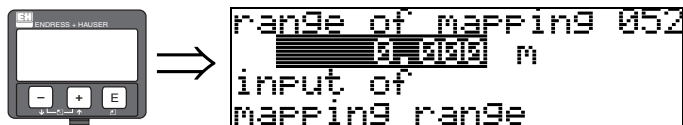

This function displays the suggested range of mapping. The reference point is always the reference point of the measurement (see Page 2 ff.). This value can be edited by the operator. For manual mapping, the default value is 0 m.

3.11 Funktion "start mapping" (053)



This function is used to start the interference echo mapping up to the distance given in **"range of mapping" (052)**.

Selection:

- **off:** no mapping is carried out
- **on:** mapping is started


During the mapping process the message **"record mapping"** is displayed.



Caution!

A mapping will be recorded only, if the device is not in alarm-state.

3.12 Display "dist./meas.value" (008)

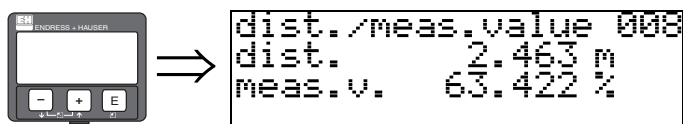

The distance measured from the reference point to the product surface and the level calculated with the aid of the empty alignment are displayed. Check whether the values correspond to the actual level or the actual distance. The following cases can occur:

- Distance correct – level correct → continue with the next function, **"check distance" (051)**.
- Distance correct . level incorrect → Check **"empty calibr" (005)**
- Distance correct – level incorrect → continue with the next function, **"check distance" (051)**.

3.13 Function "history reset" (009)



```
history reset 009
yes
```

By this function a history reset of the device is performed, i.e. the correspondance table between level an index values is deleted. A new correspondance table will be filled and stored after the history reset, cf. Page 29.




Caution!

A history reset must be performed after:

- first installation or
- change of basic setup or
- change of the installation situation.

In this case also effect a reset of the dip table in function "**dip table mode**" (033).

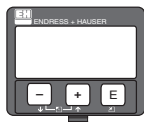

```
Return to
Group Selection
```



```
Group selection 009
/basic setup
safety settings
linearisation
```


After 3 s, the following message appears



Note!

After the basic setup, an evaluation of the measurement with the aid of the envelope curve ("**display**" (09) function group) is recommended.

4 Function group "safety settings" (01)

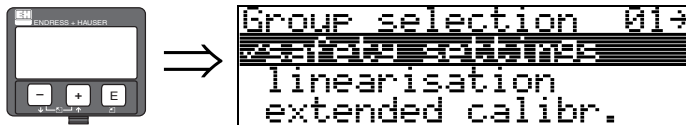

4.1 Function "output on alarm" (010)




This function is used to select the reaction of output on an alarm.

Selection:

- MIN -10% 3.6mA
- MAX 110% 22mA
- hold
- user specific


MIN -10% 3.6mA

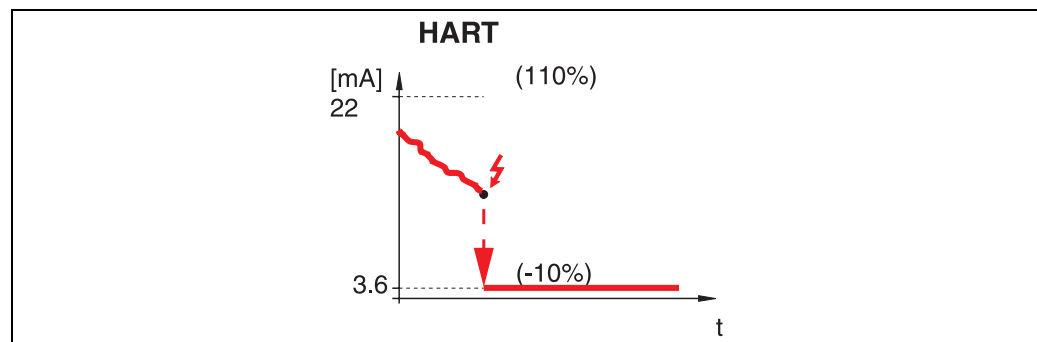

If the instrument is in alarm state, the output changes as follows:

- HART:MIN-Alarm 3.6 mA


MAX 110% 22mA

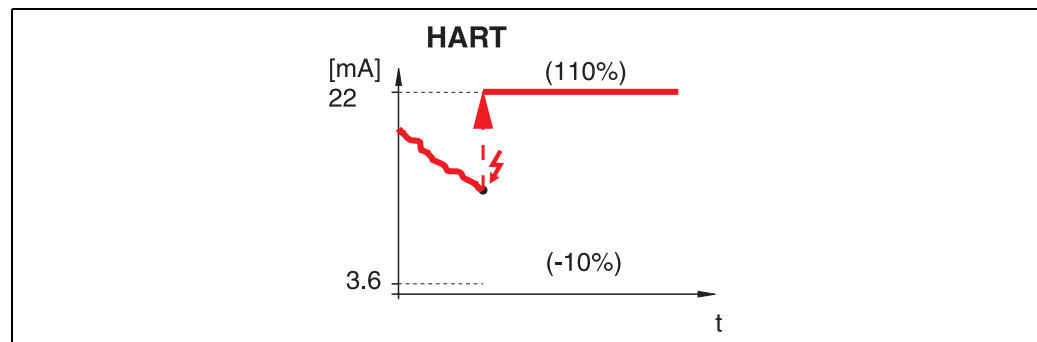

If the instrument is in alarm state, the output changes as follows:


- HART:MAX-Alarm 22 mA

hold

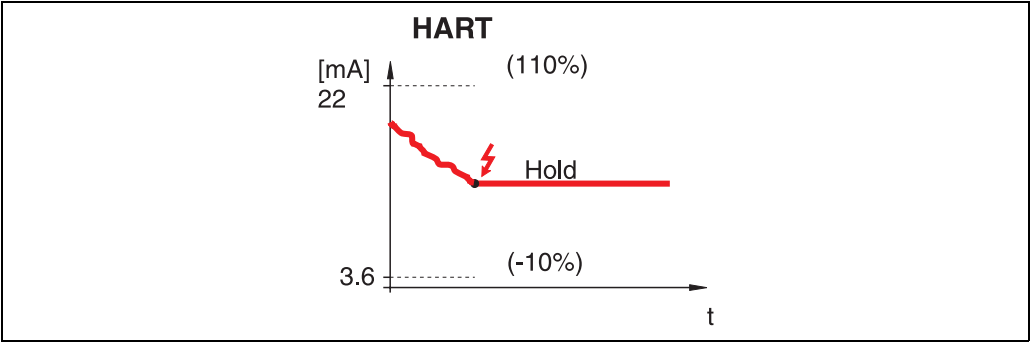


If the instrument is in alarm state, the last measured value is held.

user specific

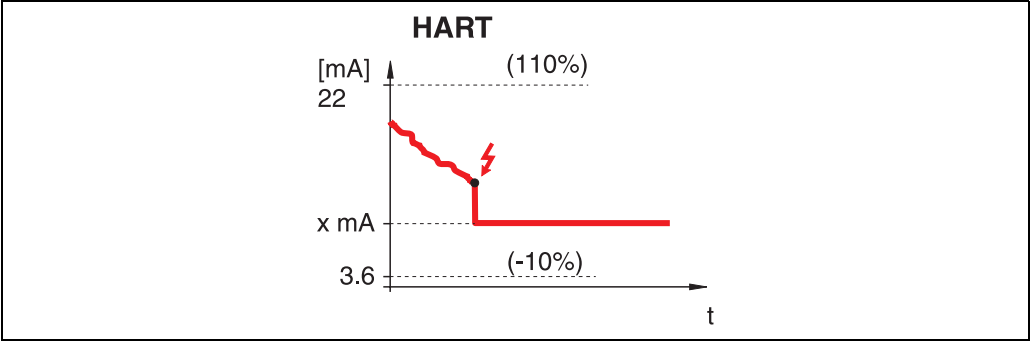

If the instrument is in alarm state, the output is set to the value configured in "output on alarm" (011) (x mA).

4.2 Function "output on alarm" (011)

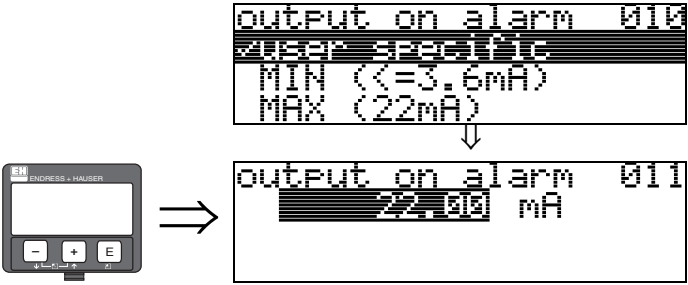

On alarm, the output current is in mA. This function is active when you selected "x mA" in the "output on alarm" (010) function.

4.3 Function "outp. echo loss" (012)




Use this function to set the output response on echo loss.

Selection:


- alarm
- **hold**
- ramp %/min

alarm

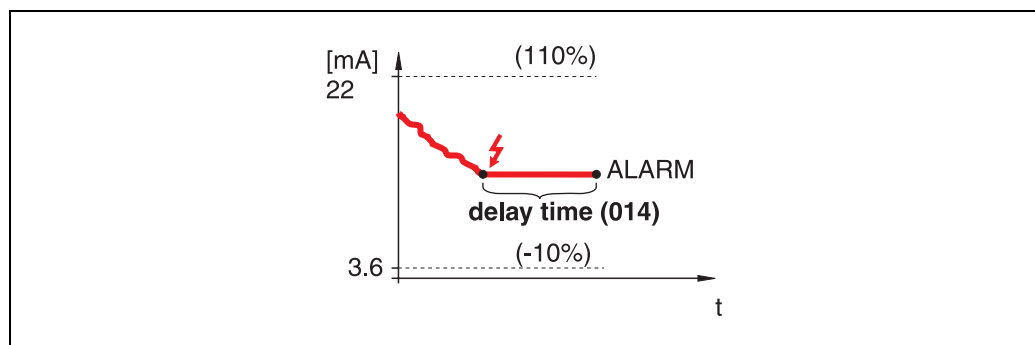


On echo loss, the instrument switches to alarm state after an adjustable "**delay time**" (014). The output response depends on the configuration set in "**output on alarm**" (010).

hold

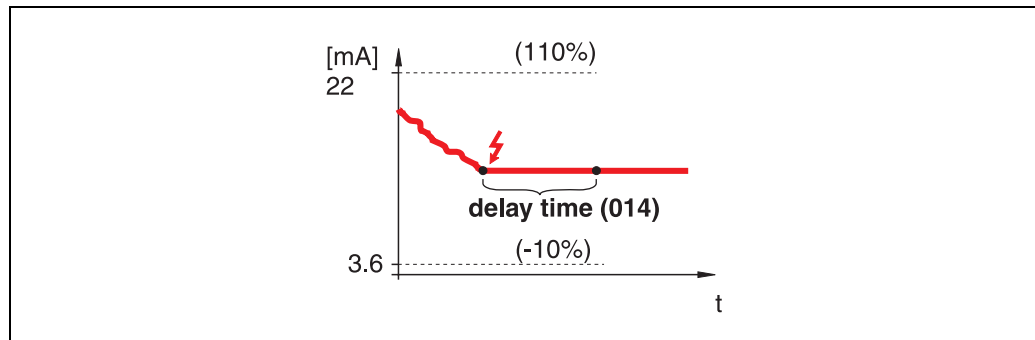


On echo loss, a warning is generated after a definable "**delay time**" (014). Output is held.

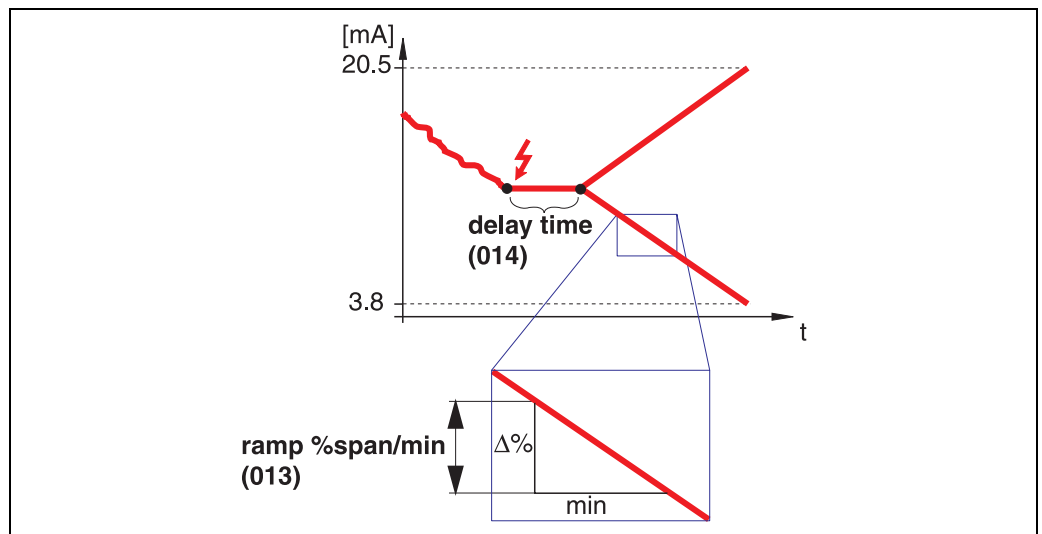ramp %/min


On echo loss, a warning is generated after a definable "**delay time**" (014). The output is changed towards 0% or 100% depending on the slope defined in "**ramp %span/min**" (013).

4.4 Function "ramp %span/min" (013)

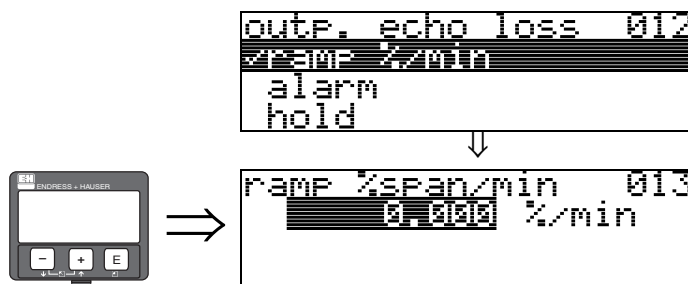

Ramp slope which defines the output value on echo loss. This value is used if "**ramp %span/min**" is selected in "**outp. echo loss**" (012). The slope is given in % of the measuring range per minute.


4.5 Function "delay time" (014)

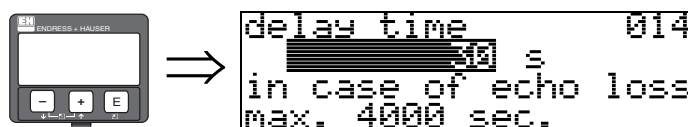

Use this function to enter the delay time (Default = 30 s) after which a warning is generated on echo loss, or after which the instrument switches to alarm state.


4.6 Function "safety distance" (015)

A configurable safety distance is placed before the "**blocking dist.**" (059) (see page 49). This distance warns you that any further level increase would make the measurement invalid, for example, when bordering the antenna area.

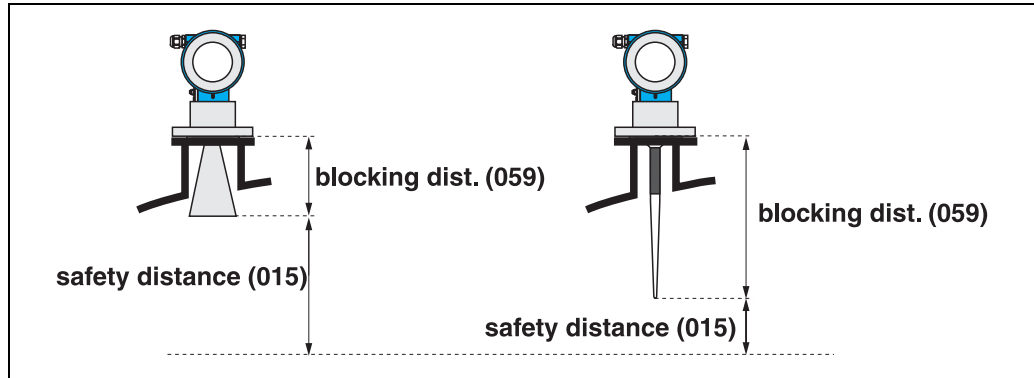

Enter the size of the safety distance here. The default value is: 0.1 m.


4.7 Function "in safety dist." (016)

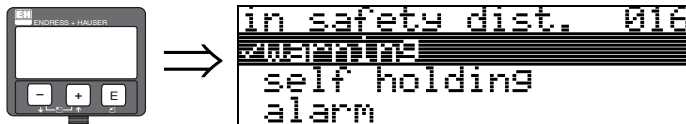

This function defines the response when the level enters the safety distance .


Selection:

- alarm
- **warning**
- self holding

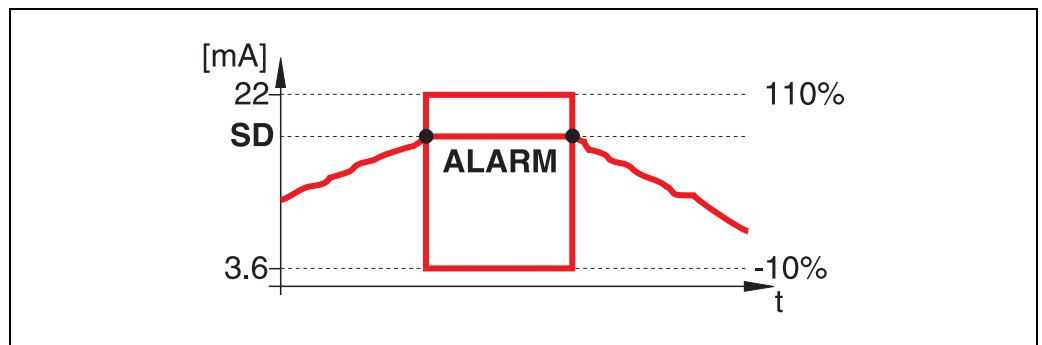
alarm

Instrument enters the defined alarm state ("output on alarm" (011)). The alarm message **E651** - "level in safety distance - risk of overspill" is displayed.

If the level drops out of the safety distance, the alarm warning disappears and the instrument starts to measure again.

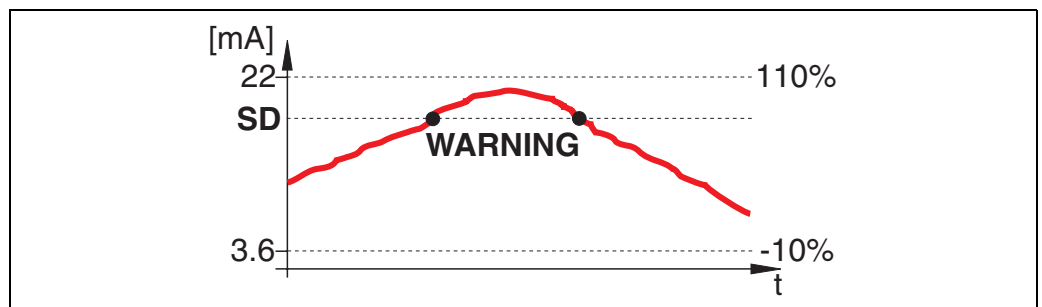warning

Instrument displays a warning **E651** - "level in safety distance - risk of overspill", but continues to measure. If the level leaves the safety distance, the warning disappears.

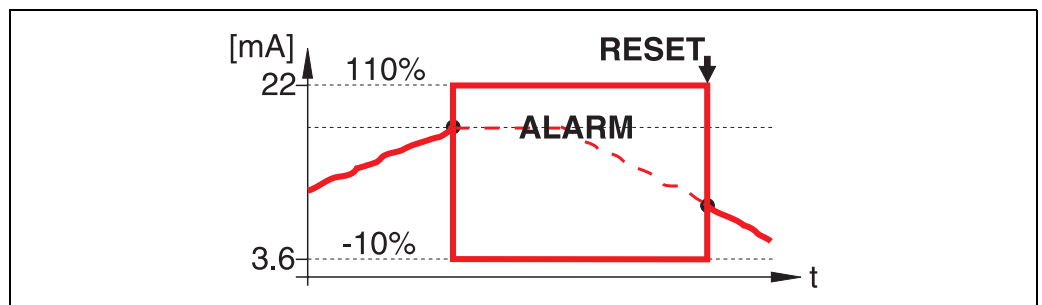self holding

Instrument switches to defined alarm state ("output on alarm" (011)). The alarm message **E651** - "level in safety distance - risk of overspill" is displayed.

If the level leaves the safety distance, the measurement continues only after a reset of the self holding (function: "ackn. alarm" (017)).

4.8 Function "ackn. alarm" (017)



This function acknowledges an alarm in case of "self holding".

Selection:

- no
- yes


no
The alarm is not acknowledged.

yes
Acknowledgement takes place.

4.9 Function "overspill prot." (018)




When "**german WHG**" is selected, various parameters relating to WHG overflow protection are defaulted and the instrument is locked against further operation. Select "**Standard**" to unlock.

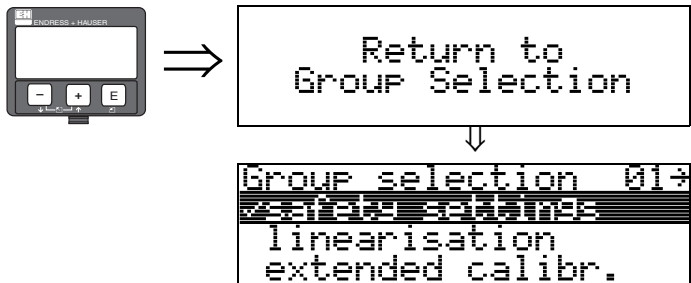

After 3 s, the following message appears

5 Function group "mounting calibr." (03)

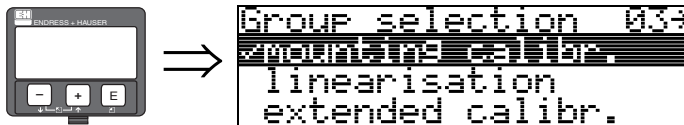

5.1 Function "tank gauging" (030)



Using this function, you can either enter a dip table or carry out an auto-correction.

5.2 Function "auto correction" (031)



When measuring levels with radar systems, so-called "multipath reflections" can affect the level signal giving rise to serious measuring errors. "Multipath reflections" include radar beams which are received by the radar system, which have not been reflected directly by the medium surface. They may reach the antenna via the basin wall and the medium surface. This phenomenon is particularly noticeable with devices mounted near to walls, as soon as the conical radar beam strikes the basin wall.

The Micropilot S can automatically discover and correct measuring errors due to this "multiple path" propagation. This is because it uses two independent sets of information when evaluating reflection signals:

- Firstly, it evaluates the **amplitude** of the reflected energy using the so-called envelope curve system.
- Secondly, it evaluates the **phase** of the reflected energy.

The decisive factor for a constant output signal is to assign the phase values to the associated level values. This assignment is ensured using a correspondence table (index correction table). The Micropilot S learns this for the specific application after installation (learning period).

Therefore, after mounting the device, and **after** completing the basic calibration, a **history reset** must be performed (enter "yes" in the "history reset" (009) function in the "basic setup" (00) function group).

Do not switch off the radar system during filling and emptying operations during the teach-in phase. Switching off when there are only negligible level changes produces no error.



Caution!

During the learning period, fast filling/emptying or turbulent surfaces can result in switching off and on the phase evaluation. Subsequently observed measurement errors will disappear as soon as tank levels come back to areas measured by Micropilot S previously with activated phase evaluation. If the observed measurement errors are corrected by dip table entries, the Micropilot S will take care of these corrections and automatically adjust the index correction table. Do **NOT** correct any settings in the basic calibration or the extended calibration.

**Note!**

Immediately after installation, the Micropilot S measures with the specified mm-accuracy. Until the level range has been completely covered by the medium (setting up the correction table), the maximum permissible filling speed is 100 mm level change / min. After this, the fill speed has no limitation.

5.3 Function "pipe diam.corr." (032) (only relevant for FMR532)




For level measurement in stilling wells, radar systems require highly precise pipe inner diameter data. An mm-exact level measurement cannot be guaranteed for deviations from the actual stilling well inner diameter of more than ± 0.1 mm to the value entered in the function group **"basic setup" (00)**. The errors which occur as a result are linear and can be corrected with a dip table containing at least two entries. The Micropilot S also has an automatic pipe inner diameter correction. This adjusts the entered stilling well inner diameter (input in the function group **"basic setup" (00)**) to the actual values. However, this presupposes that the value entered in the function group **"basic setup" (00)** matches the actual pipe inner diameter accurately as possible. The user-defined value entered in the function group **"basic setup" (00)** can be corrected with this value. Then, switch on the **"pipe diam. corr." (032)** function, after a level change **of at least 5 m** has occurred since start-up. The pipe diameter, which the instrument determines automatically, will then be transmitted to the **"pipe diameter" (007)** function.

**Note!**

Only if the **"pipe diameter" (007)** function has changed its value, it is necessary to perform a **"history reset" (009)** and to delete the dip table after activation of the **"pipe diam. corr." (032)** function. Otherwise the level change of 5 m has not yet been exceeded. The **"pipe diam. corr." (032)** function must be deactivated again and the procedure should be repeated at a later point of time.

5.3.1 Display "custody mode" (0A9)

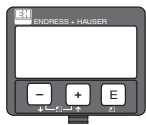

```

custody mode      0A9
✓inactive
  active pos.
  active neg.
  
```

This indicates the instrument calibration mode. The calibration mode (active) can be set using the hardware security lock on the electronics (see page 7).

Selection:

- **inactive**
- active pos.
- active neg.

inactive

The custody mode is not activated (switch for custody mode is open, see page 9)

active pos.

The custody mode (instrument is lead-sealed and accurate to the nearest mm) is active and is held.

active neg.


Custody mode (instrument is lead-sealed and accurate to the nearest mm) is activated and not held, e.g. because the signal-to-noise ratio is less than 5 dB (refer to "**echo quality**" (056) function in the "**extended calibr.**" (05) function group).



Caution!

After entering all the values and completing mounting and aligning work, enter the Reset Code "**555**" in the function "**reset**" (0A3) to reset the instrument history for auto-correction or set history reset to "**yes**" in order to reset the instrument history for the auto-correction.

5.4 Function "dip table mode" (033)

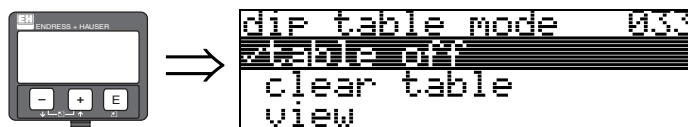

The dip table can be switched on or off using this function.

Selection:

- manual
- semi-automatic
- table on
- **table off**
- clear table
- view

manual

The value pairs in the dip table can be read and written. You can enter the measured value and the dip value.

- uncorrected measured value:
This is the measured value supplied by the instrument, **NOT** corrected by the dip table. The choice of measured value, level or remaining fill height is dependent on the instrument setting.
- Dip value:
This is the level or distance to flange respectively, given by the hand dip. This value should be used to correct the measured value.
The "manual mode" of the dip table can be used to enter collected data after a series of data pairs taken at different tank levels.



Note!

The bigger the distance between the different levels while taking hand dips, the more accurate the linearisation of the dip table will be.

semi-automatic

The value pairs in the dip table can be read. You can enter the dip value only. When there are new value pairs, the current level or distance is accepted as the measured value.

table on

The dip table is switched on.

table off

The dip table is switched off.

clear table

The complete dip table is deleted. The table is switched off. The number of free table entries is set to the maximum value (= 32).

view

The value pairs in the dip table can **only** be read. You can still select this menu option, even if there is no dip table available. In this case, the number of free table entries is at maximum value (= 32).

5.4.1 Dip table


The dip table is used to correct the level readings of the Micropilot S using independently taken hand dips. The dip table is used in particular to adapt the level gauge to the specific application conditions as mechanical offset and tank/stilling well design.

Depending on national regulations, national inspectors will dip the tank at one to three levels during a calibration run and check the level readings.

Only one value pair must be entered into the dip table to correct the measurement **offset**.

If a second value pair is entered into the dip table, the Micropilot S accepts the corrected measured values identically for both value pairs. All other measured values are determined by linear extrapolation.

If you enter more than two value pairs, the system carries out a linear interpolation between adjacent value pairs. Outside these value pairs, extrapolation is also linear.

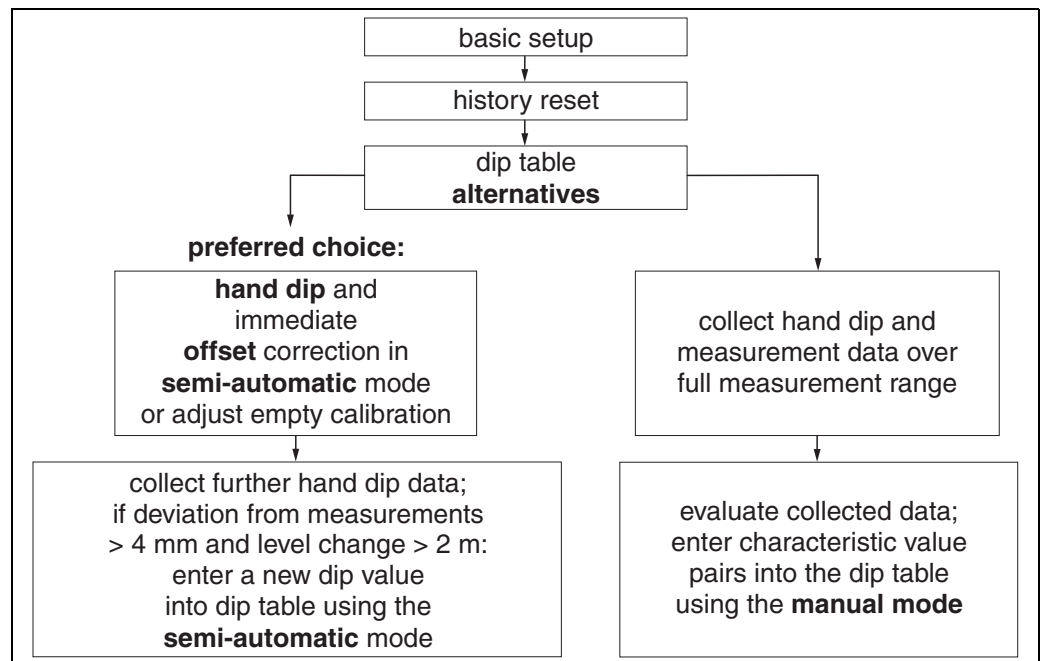

To collect and enter data into the dip table, two alternative procedures may be carried out. In order not to mix up measurement values corrected by the offset or linearisation of the dip table with uncorrected measurement values, it is recommended to use the semi-automatic mode of the dip table to enter new data pairs. In this case, the first dip value should be entered immediately after the basic calibration. Further linearization points should be entered only after a level change of at least 2 m (cf. upper figure, preferred choice) and a deviation between the "uncorrected measurement value" and the hand dip value of at least 4mm. If this procedure can not be followed, then **NO** value pair should be entered into the dip table after basic calibration. Measurement data and hand dip values should be collected over the full measurement range and be evaluated with regard to a good linear fit. Only then characteristic value pairs should be entered into the dip table using the "manual mode" (cf. upper figure, right side). If further linearisation is needed, further hand dip values should be entered **using only the "semi-automatic mode"**.



Note!

- The offset should NOT be determined and entered within the close range of the antenna (conf. definition of the safety distance) or immediately in the range of the tank bottom, because within these ranges interferences of the radar signal may occur.
- The dip table can be printed out using the ToF-Tool. Before doing this, the ToF Tool must be reconnected to the instrument in order to update the values within the ToF Tool.
- Make your inputs into the dip table in semi-automatic mode. We advise you to leave **"auto correction" (031)** activated ("on") while you enter your inputs.



Caution!

After entering one or more points into the dip table, make sure that the dip table is activated and left in the **"table on"** dip table mode.

5.5 Function "dip table" (034)



```
dip table 034
meas.v. 40.000m
dip val 40.000m
remain. 32
```

This function edits measured variable. The number behind the entry **"remain"** indicates the current number of remaining free value pairs. The maximum number of value pairs is 32; after each entry, the remaining number is decremented.



Note!

The uncorrected measured value is displayed in the **"dip table"** (034) function. This may differ considerably from the measured values when a dip table is activated.


5.6 Function "dip table" (035)



```
dip table 035
meas.v. 40.000m
dip val 40.000m
remain. 32
```

This function edits the dip value.

5.7 Function "dip table handl." (036)

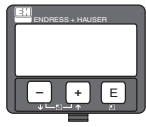

```
dip table handl. 036
new point
edit point
store point
```

Use this function to enter the dip value (level or distance) which will correct the measurement values.

Selection:

- **new point**
- edit point
- store point
- delete point
- return
- next point
- previous point

General procedure:

To enter a new point into the dip table, use
"new point" to enter the value (pairs) ,
"store point" to sort the new value (pairs)
"return" to go to the dip table mode and
"table on" to activate the dip table.

new point

You can enter a new point. Suggested values displayed for the measured value and dip value are the current uncorrected level or remaining fill height. The new value pair can be altered without selecting the **"edit point"** parameter. If the table is full, you can still select this parameter. In this case, the number of free table entries stands at minimum value (= 0).

edit point

The displayed value pair can be changed. Only the dip value can be changed with semi-automatic input mode.



Caution!

To accept the value pair in the table, confirm it with **"store point"**.

store point

The displayed value pair is sorted in the table.



Note!

For sorting, the following criteria must be met:

- Measured variables may not be equal but have different dip values.
- A measured variable available in the table is recognised as equal when it is closer than 1 mm to the sorting value.
- After successful sorting, the setting remains at **"edit point"** and the number of free table entries is decremented.



Caution!

If the value cannot be sorted, the setting remains at the previous menu option. No warning or error message is generated. However, the number of remaining table entries is not decremented.

delete point

The currently displayed point is deleted from the table. After deletion, the previous point is displayed. If the table only consisted of one point before deletion, then the current measured variable is displayed as a value pair.

return

By selecting this point, you return to the function "**dip table mode**" (033).

next point

This scrolls down in the table. If the table is empty, you can still select this option. However, the displayed value does not change.


previous point

This scrolls up in the table. If the table is empty, you can still select this option. However, the displayed value does not change.

**Caution!**

After entering one or more points into the dip table, make sure that the dip table is activated in the "**table on**" dip table mode.

5.8 Function "dip table state" (037)

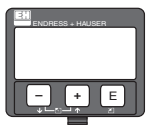

```
dip table state 037
✓table off
table on
```

This function displays the dip table status.

Display:

- table on
- **table off**

table on

Indicates whether the dip table is active.

table off

Indicates whether the dip table is not active.

6 Function group "linearisation" (04)



6.1 Function "level/ullage" (040)



Selection:

- level CU
- level DU
- ullage CU
- ullage DU

level CU

Level in customer units. The measured value can be linearised.
The "**linearisation**" (041) default value is set to a linear 0...100%.

level DU

Level in the selected "**distance unit**" (0C5).

ullage CU

Ullage in customer units. The value can be linearised.
The "**linearisation**" (041) default value is set to a linear 0...100%.


ullage DU

Ullage in the selected "**distance unit**" (0C5).



Note!

Reference point for the ullage is "full calibr." (=span).

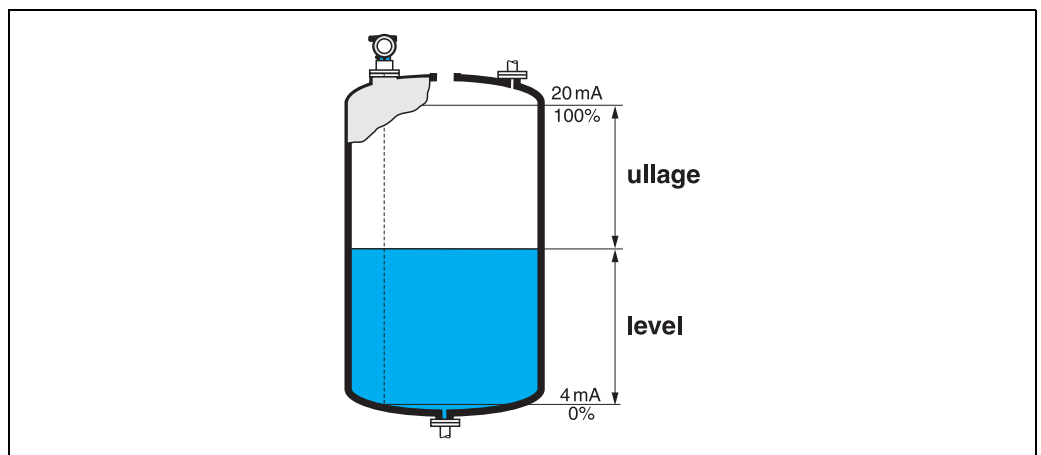

6.2 Function "linearisation" (041)

Linearisation defines the ratio of level to container volume or product weight and allows a measurement in customer units, e.g. metres, hectolitres etc. The measured value in (000) is then displayed in the selected unit.



This function is used to select the linearisation modes.


Selection:

- **linear**
- horizontal cyl
- manual
- semi-automatic
- table on
- clear table

linear


The tank is linear e.g. a cylindrical vertical tank. You can measure in customer units by entering a maximum volume/weight.

You can select the "**customer unit**" (042). Define the volume value corresponding to the calibration in "**max. scale**" (046). This value corresponds to an output of 100% (= 20 mA for HART).

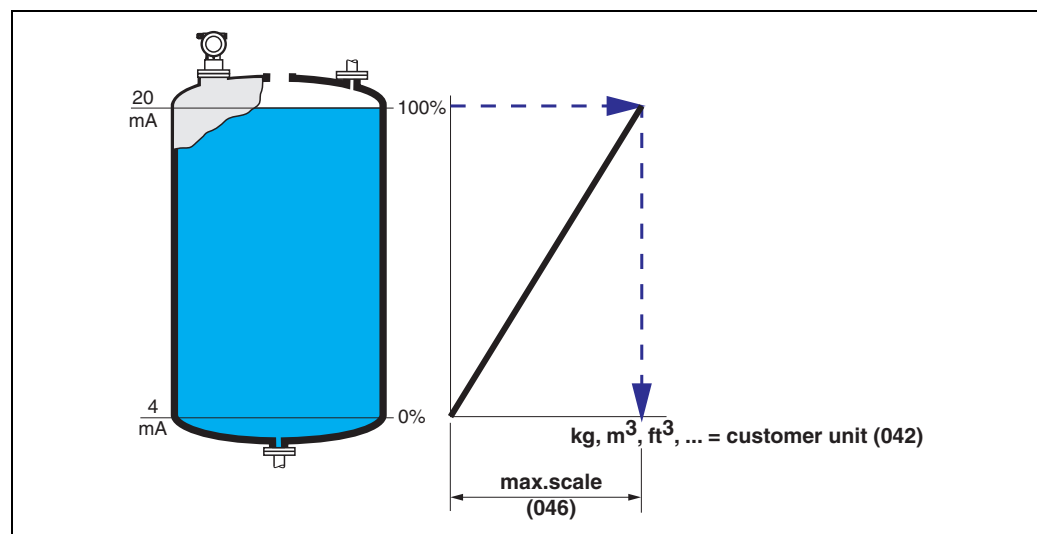


horizontal cyl

The volume, mass etc. are calculated automatically in cylindrical horizontal tanks by entering the "**diameter vessel**" (047), the "**customer unit**" (042) and the "**max. scale**" (046). The "**max. scale**" (046) corresponds to an output of 100% (= 20 mA for HART).

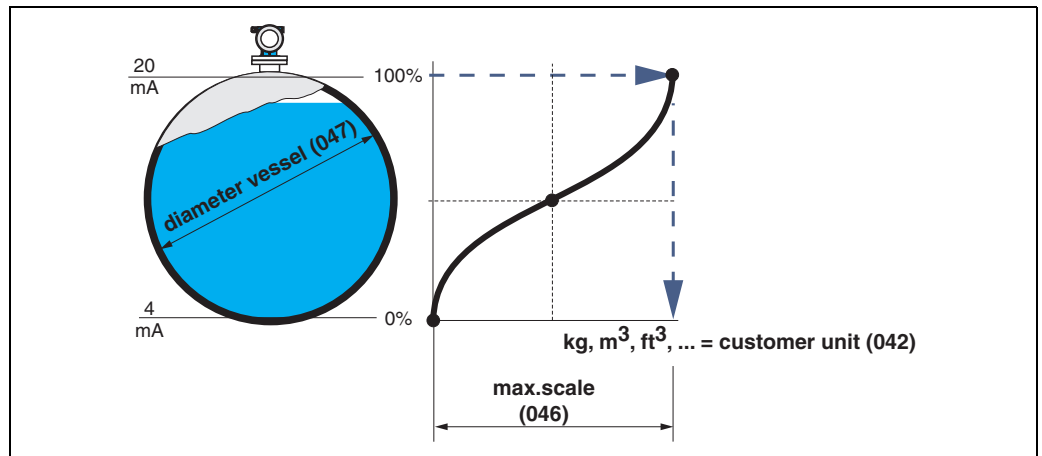
**manual**

If the level is not proportional to the volume or weight within the set measuring range, you can enter a linearisation table in order to measure in customer units. The requirements are as follows:

- The 32 (max.) value pairs for the linearisation curve points are known.
- The level values must be given in ascending order. The curve is monotonously increasing.
- The level heights for the first and last points on the linearisation curve correspond to empty and full calibration respectively.
- The linearisation takes place in the basic setup unit ("**distance unit**" (0C5)).

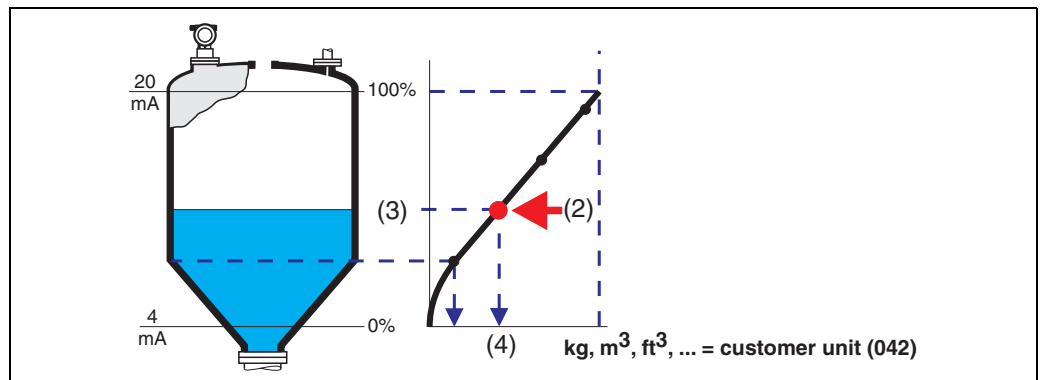

Each point (2) in the table is described by a value pair: level (3) and, for example, volume (4). The last value pair defines the 100% output (= 20 mA for HART).

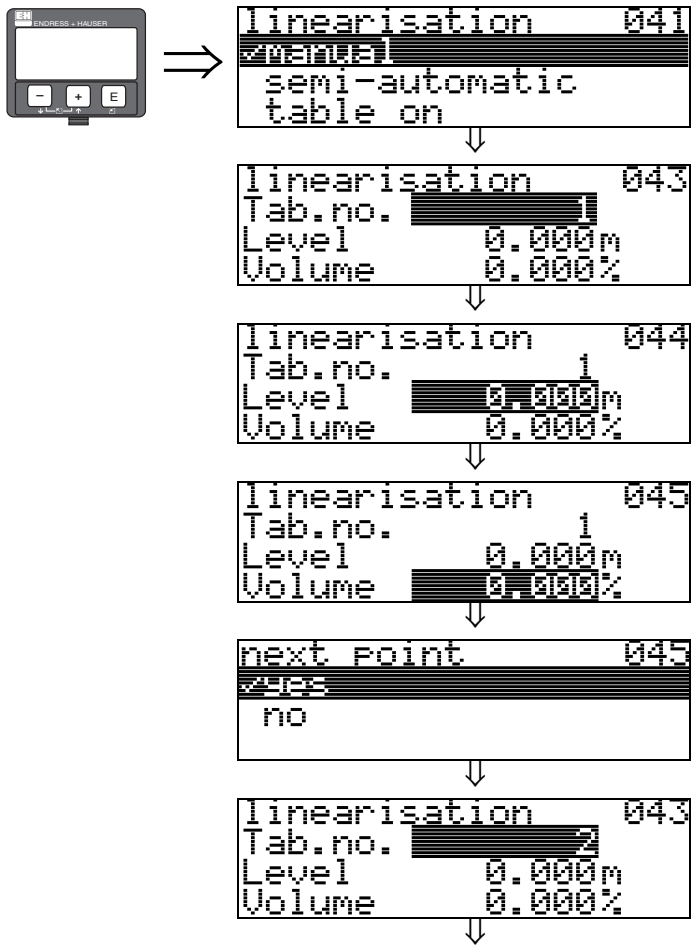

Select the table point (Point 1).

Enter the level belonging to Point 1.

Enter the corresponding volume.

Enter a further table point?

Next table point.

Continue until "next point" (045) is answered with no.



Note!
After making entries into the table, activate it with "table on".
The 100% value (=20 mA for HART) is defined by the last point in the table.



Note!
Before confirming 0.00 m as the level or 0.00% as the volume, activate the Edit mode with or .

Entries can be made into the linearisation table in ToF Tool using the table editor.
You can also display the contents graphically.

semi-automatic

The tank is filled in stages when the linearisation curve is entered semi-automatically. The Micropilot automatically detects the level and the corresponding volume/weight has to be entered. The procedure is similar to manual table entry, where the level value for each table point is given automatically by the instrument.



Note!

If the tank is emptied (out litres), pay attention to the following points:

- The number of points must be known in advance.
- The first table number = (32 - number of points).
- Entries in "**Tab. no.**" (**043**) are made in reverse order (last entry = 1).

table on

An entered linearisation table only becomes effective when activated.

clear table

Before making entries into the linearisation table, any existing tables must be deleted. The linearisation mode automatically switches to linear.



Note!

A linearisation table can be deactivated by selecting "**linear**" or "**horizontal cyl**" (or the "**level/ullage**" (**040**) function = "**level DU**", "**ullage DU**"). It is not deleted and can be reactivated at any time by selecting "**table on**".

6.3 Function "customer unit" (042)



You can select the customer unit with this function.

Selection:


- %
- l
- hl
- m3
- dm3
- cm3
- ft3
- us_gal
- i_gal
- kg
- t
- lb
- ton
- m
- ft
- mm
- inch

Dependence

The units of the following parameters are changed:

- measured value (000)
- input volume (045)
- max. scale (046)
- simulation value (066)

6.4 Function "table no." (043)

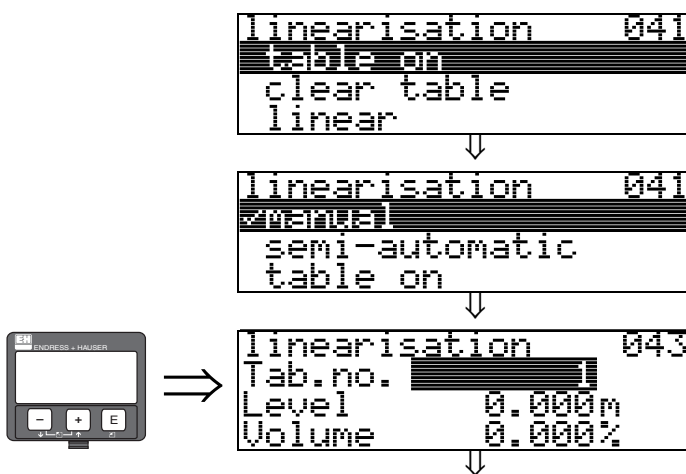

Position of the value pair in the linearisation table.

Dependence

Updates "input level" (044) , "input volume" (045).

6.5 Function "input level" (044)




You can enter the level for each point of the linearisation curve with this function. When the linearisation curve is entered semi-automatically, Micropilot detects the level automatically.

User input:

Level in "distance unit" (0C5).

6.6 Function "input volume" (045)

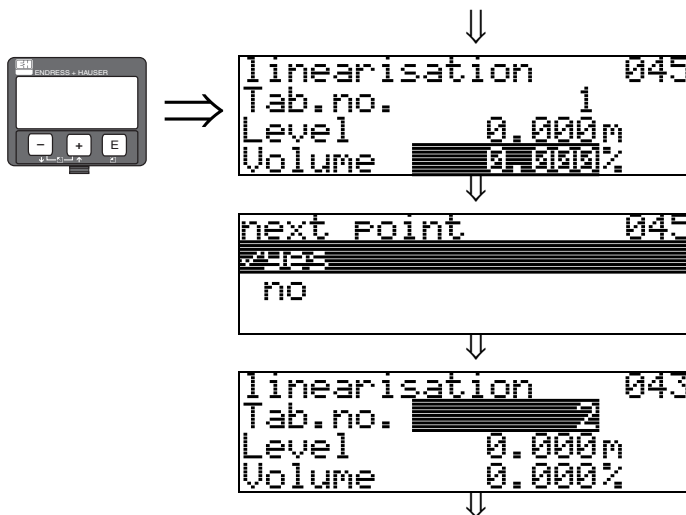

Specify the volume for each point of the linearisation curve with this function.

User input:


Volume in "customer unit" (042).

6.7 Function "max. scale" (046)




You can enter the end value of the measuring range with this function. This input is necessary if you selected "linear" or "horizontal cyl" in the "linearisation" (041) function.

6.8 Function "diameter vessel" (047)

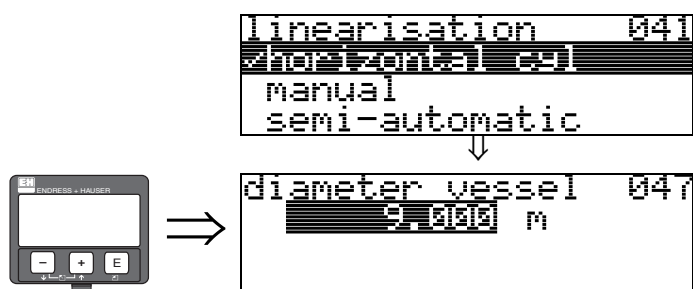

Enter the tank diameter with this function. This entry is necessary if you selected "**horizontal cyl**" in the "**linearisation**" (041) function.

7 Function group "extended calibr." (05)

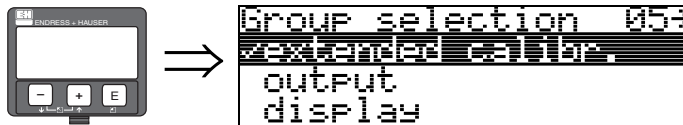

7.1 Function "selection" (050)



Select the function of the extended calibration.

Selection:

- **common** (e.g. "Level correction", "Output damping", etc.)
- mapping
- extended map.


7.2 Function "check distance" (051)



This function triggers the mapping of interference echoes. To do so, the measured distance must be compared with the actual distance to the product surface. The following options are available for selection:

Selection:

- distance = ok
- dist. too small
- dist. too big
- **dist. unknown**
- manual

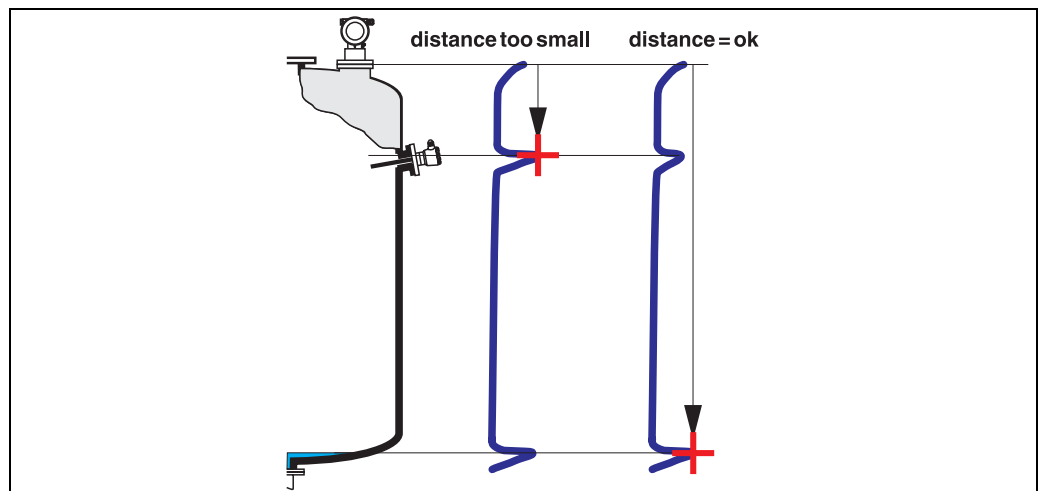

distance = ok

- mapping is carried out up to the currently measured echo
 - The range to be suppressed is suggested in the **"range of mapping (052)"** function
- Anyway, it is wise to carry out a mapping even in this case.

dist. too small

- At the moment, an interference is being evaluated
- Therefore, a mapping is carried out including the presently measured echoes
- The range to be suppressed is suggested in the **"range of mapping (052)"** function

dist. too big

- This error cannot be remedied by interference echo mapping
- Check the application parameters **(002)**, **(003)**, **(004)** and **"empty calibr." (005)**

dist. unknown

If the actual distance is not known, no mapping can be carried out.


manual

A mapping is also possible by manual entry of the range to be suppressed. This entry is made in the **"range of mapping (052)"** function.

**Caution!**

The range of mapping must end 0.5 m (20") before the echo of the actual level. For an empty tank, do not enter E, but $E - 0.5 \text{ m (20")}$.


7.3 Function "range of mapping" (052)

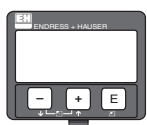

```
range of mapping 052
0.000 m
input of
mapping range
```

This function displays the suggested range of mapping. The reference point is always the reference point of the measurement (see Page 2 ff.). This value can be edited by the operator. For manual mapping, the default value is: 0 m.

7.4 Function "start mapping" (053)

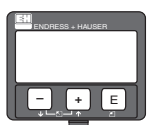


```
start mapping 053
off
on
```

This function is used to start the interference echo mapping up to the distance given in **"range of mapping" (052)**.

Selection:


- **off**: no mapping is carried out
- **on**: mapping is started

7.5 Function "pres. map dist." (054)

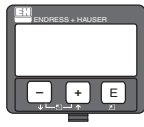


```
Pres. map dist. 054
0.000 m
```

Displays the distance up to which a mapping has been recorded.
A value of 0 indicates that no mapping was recorded so far.

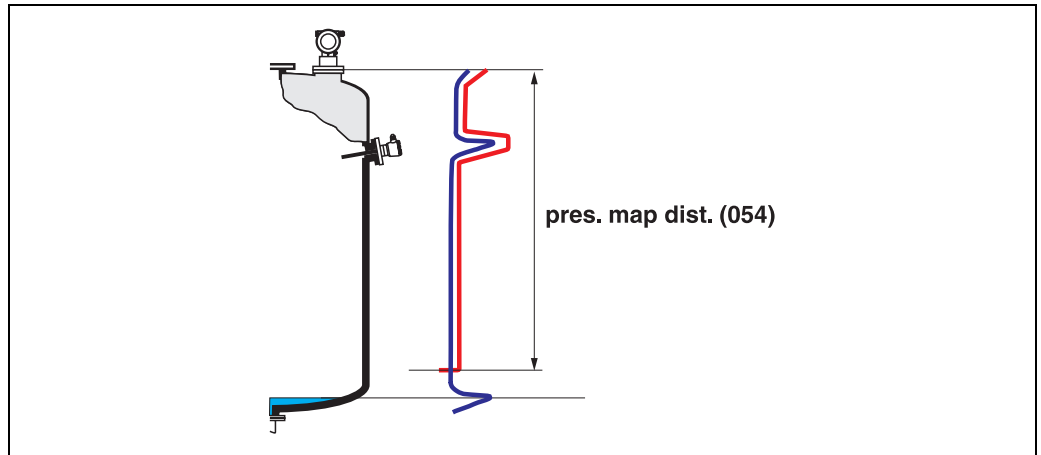

7.6 Function "cust. tank map" (055)

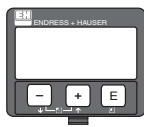

```
cust. tank map 055
inactive
active
reset
```

This function displays the evaluation mode using the customer tank map.

Selection:

- inactive
- active
- reset

inactive

No tank mapping has been recorded, or map is switched off. Evaluation is only using FAC (see page 73).



active

Evaluation is using the customer tank map (see page 72).

reset

Deletes the complete tank map.

7.7 Function "echo quality" (056)

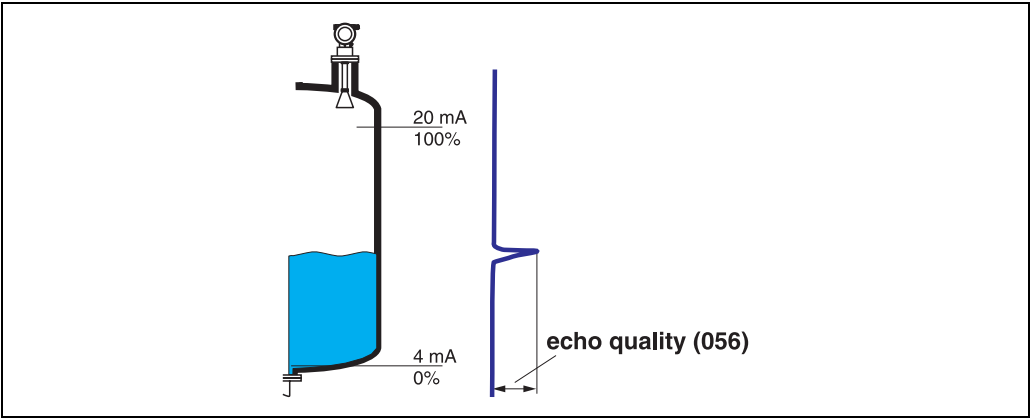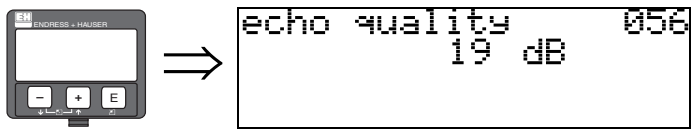

The echo quality is the benchmark for measurement reliability. It describes the amount of reflected energy and depends primarily on the following conditions:

- Dielectric constant of the medium
- Surface characteristics (waves, foam etc.)
- Distance between sensor and product

Low values increase the probability that the echo is lost through a change in measurement conditions, e.g. turbulent surface, foam, large measuring distance.



Caution!
Echo quality can be improved by orientation of the Micropilot (see page 80).

7.8 Function "offset" (057)



This function corrects the measured level by a constant value. The entered value is added to the measured level.
This function is primarily used for runtime correction when using an FAR10 antenna extension with FMR530.

$$\text{offset (m)} = 0.395 \cdot \text{length of the FAR10 in m}$$

For the standard lengths of the FAR10, this results in:

	Length of the FAR10			
	100 mm (4")	200 mm (8")	300 mm (12")	400 mm (16")
Correction value [m]	0.0395	0.0790	0.1185	0.1580

7.9 Function "output damping" (058)



```
output damping 058
5.00 s
```


Influences the time an output requires to react to a sudden level jump (63% of steady state). A high value attenuates, for example, the influences of rapid changes on the measured variable.

User input:

0...255 s

The default value depends on the selected application parameters **"tank shape" (002)**, **"medium property" (003)** and **"process cond." (004)**.


7.10 Function "blocking dist." (059)

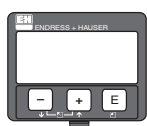

```
blocking dist. 059
0.500 m
```

A window below the antenna tip can be suppressed when there are strong reflections near the antenna of structures, welding joints or struts.

- The blocking distance is measured from the bottom edge of the process connection. Usually, the suppression reaches up to the tip of the antenna (see diagram on page 26).
- All echos are suppressed within this blocking distance.
- As the level echo could possibly be suppressed (and there is no guarantee that no other significant echo is available), a 10 cm long safety distance is placed in front of the suppression (see **"safety distance" (015)** function on page 26).
- The customer can set the Micropilot to respond to circumstances when the product is within this zone (safety distance) (see page 26).

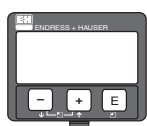

```
Return to
Group Selection
```



```
Group selection 059
extended calibr.
output
display
```

After 3 s, the following message appears

8 Function group "output" (06)

⇒

Group selection 06➤
output
display
diagnostics

Display at HART instrument

8.1 Function "commun. address" (060)

⇒

commun. address 060
1

Enter the communication address for the instrument with this function.

- Stand alone version: 0; output current 4...20 mA
- Standard: 1
- Multidrop: 1-15

The output current is constant at 4mA in multidrop mode.

8.2 Function "no. of preambels" (061)

⇒

no. of Preambels 061
5

Enter the number of preambles for the HART protocol with this function.
An increase in the value is advisable for "bad" lines with communications problems.

8.3 Function "thres. main val." (062)


⇒

low output limit 062
on
off

The output of negative level values can be suppressed with this function.

Selection:

- off minimum output -10% (3.8 mA for HART)
- on minimum output 0% (4 mA for HART)

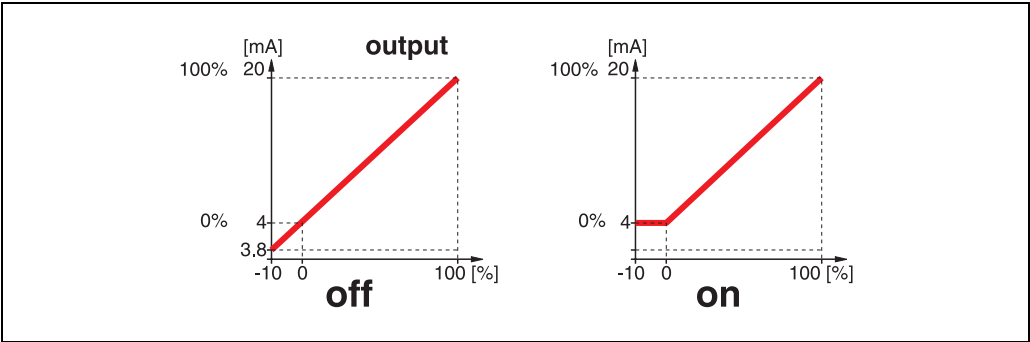




Note!

In order to display negative values and to transmit them via the HART protocol, this function must be switched off.


8.4 Function "fixed current" (063)

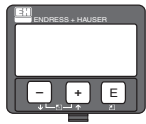



You can fix the output current to a configurable value with this function. The measured value is transferred via HART.

Selection:

- off
- on

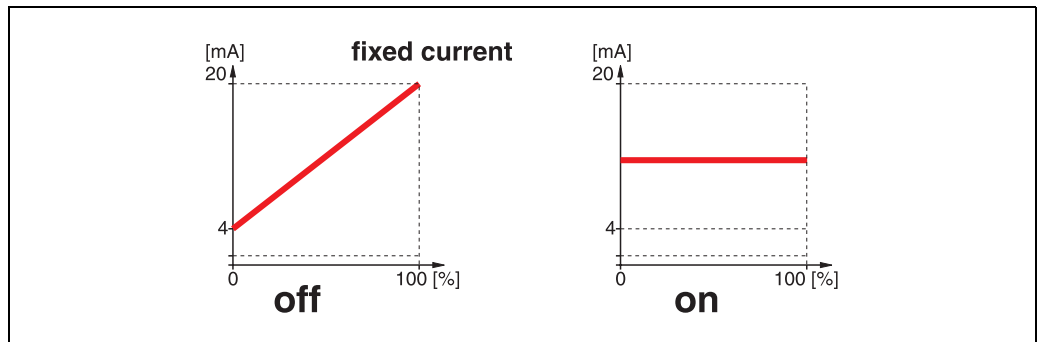

8.5 Function "fixed cur. value" (064)

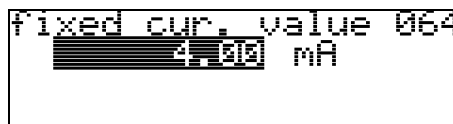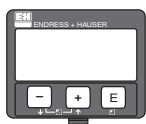


Set the fixed current value with this function. This entry is necessary when you have switched on the "**fixed current**" (063) function.

User input:

3,8...20,5 mA


8.6 Function "simulation" (065)

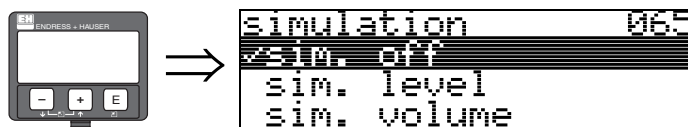

If necessary, linearisation, the output signal and the current output can be tested with the simulation function. You have the following simulation options:

Selection:

- **sim. off**
- sim. level
- sim. volume
- sim. current (HART only)

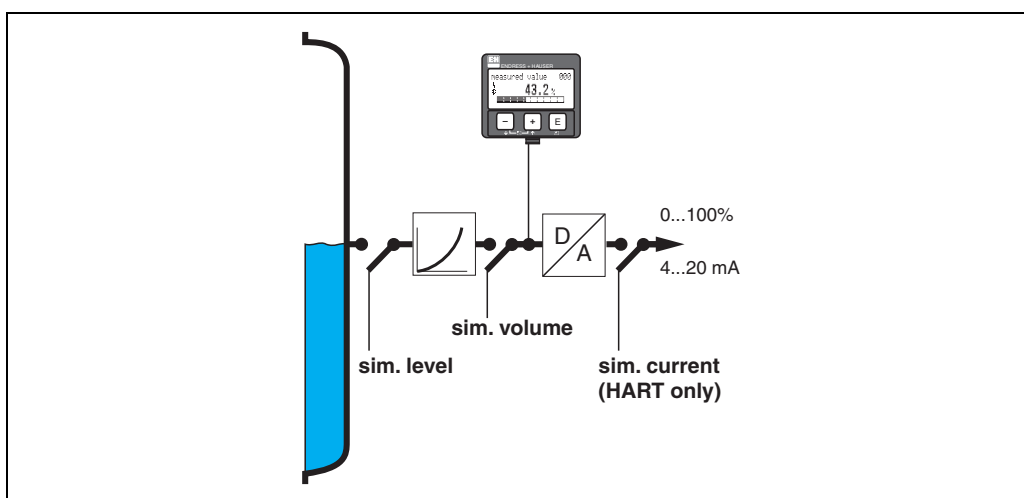

sim. off

Simulation is switched off.

sim. level

Enter the level value in "**simulation value**" (066).

The functions

- measured value (000)
 - measured level (0A6)
 - output current" (067) – only with HART instruments!
- follow the entered values.

sim. volume

Enter the volume value in "**simulation value**" (066).

The functions

- measured value (000)
 - output current" (067) – only with HART instruments!
- follow the entered values.


sim. current (HART only)

Enter the current value in "**simulation value**" (066).

The function


- output current" (067) – only with HART instruments!
- follows the entered values.

8.7 Function "simulation value" (066)

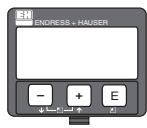


```
simulation value 066
2.54 m
```

After selecting the "**sim. level**" option in the "**simulation**" (065) function, the following message appears in the display: you can enter the level.

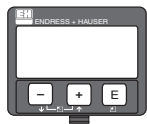

```
simulation value 066
23.16 %
```

After selecting the "**sim. volume**" option in the "**simulation**" (065) function, the following message appears in the display: you can enter the volume.

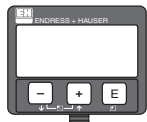

```
simulation value 066
8.00 mA
```

After selecting the "**sim. current**" option in the "**simulation**" (065) function, the following message appears in the display: Enter the output current (only for HART instruments).

8.8 Function "output current" (067)




```
output current 067
4.00 mA
```

Displays the output current in mA.

9 Function group "display" (09)



9.1 Function "language" (092)

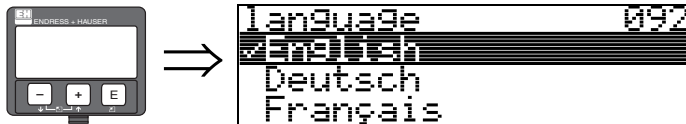

Selects the display language.

Selection:

- English
- Deutsch
- Français
- Español
- Italiano
- Nederlands

Dependence

All texts are changed.



Caution!
This function is not visualised in Commuwin II!

9.2 Function "back to home" (093)



If no entry is made using the display during the specified time period, the display returns to the measured value display.

0 s means that there is no return.

User input:

0...9999 s



Caution!
This function is not visualised in Commuwin II!

9.3 Function "format display" (094)



Selects the display format.

Selection:

- decimal
- 1/16"

decimal

The measured value is given in decimal form in the display (e.g. 10.70%).

1/16"

The measured value is given in the display in this format (e.g. 5'05-14/16").


This option is only possible for "**distance unit**" (0C5) - "**ft**" and "**in**"!



Caution!

This function is not visualised in Commuwin II!

9.4 Function "no.of decimals" (095)

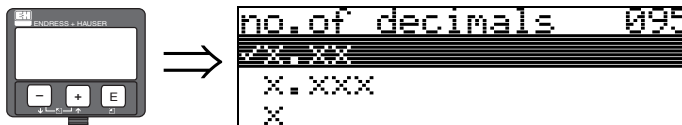

Selection:

- x
- x.x
- x.xx
- x.xxx
- x.xxxx

9.5 Function "sep. character" (096)



Selection:

- .
- ,

.

The decimal place is separated by a point.

,


The decimal place is separated by a comma.

9.6 Function "display test" (097)




All display pixels are switched on. If the whole LCD is dark, it is working correctly.

9.7 Function "plot settings" (09A)

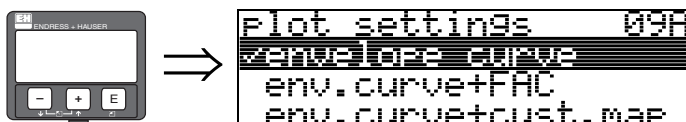

Here select which information is displayed in the LCD:

- **envelope curve**
- env.curve+FAC (on FAC siehe Seite 73)
- env.curve+cust.map (i.e. customer tank map is also displayed)

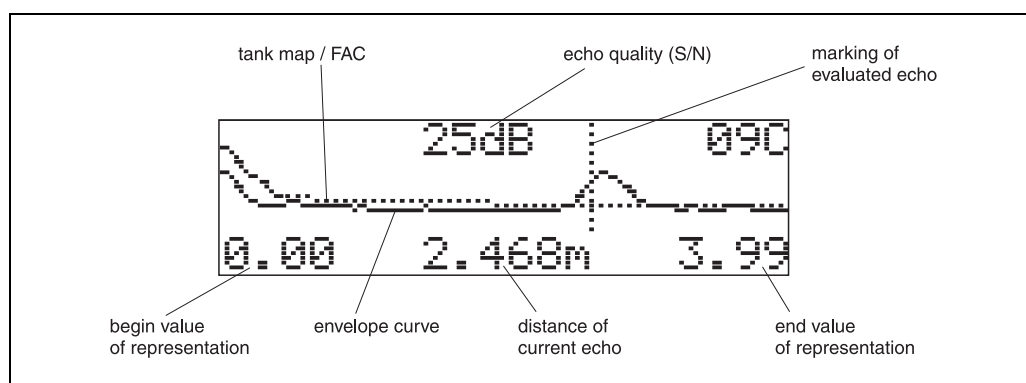

9.8 Function "recording curve" (09B)

This function defines whether the envelope curve is read as a

- **single curve**
- or
- **cyclic.**



Note!

If the cyclical envelope curve is active in the display, the measured variable is refreshed in a slower cycle time. It is therefore recommended to exit the envelope curve display after optimising the measuring point.




Note!

An **orientation** of the Micropilot can help to optimise measurement in applications with very weak level echos or strong interference echos by increasing the useful echo/reducing the interference echo (see »Orientation of the Micropilot« on page 80).

9.9 Function "envelope curve" (09C)



This functions shows the envelope curve in the display. The form shown is dependent on the settings in the "plot settings" (09A) function.

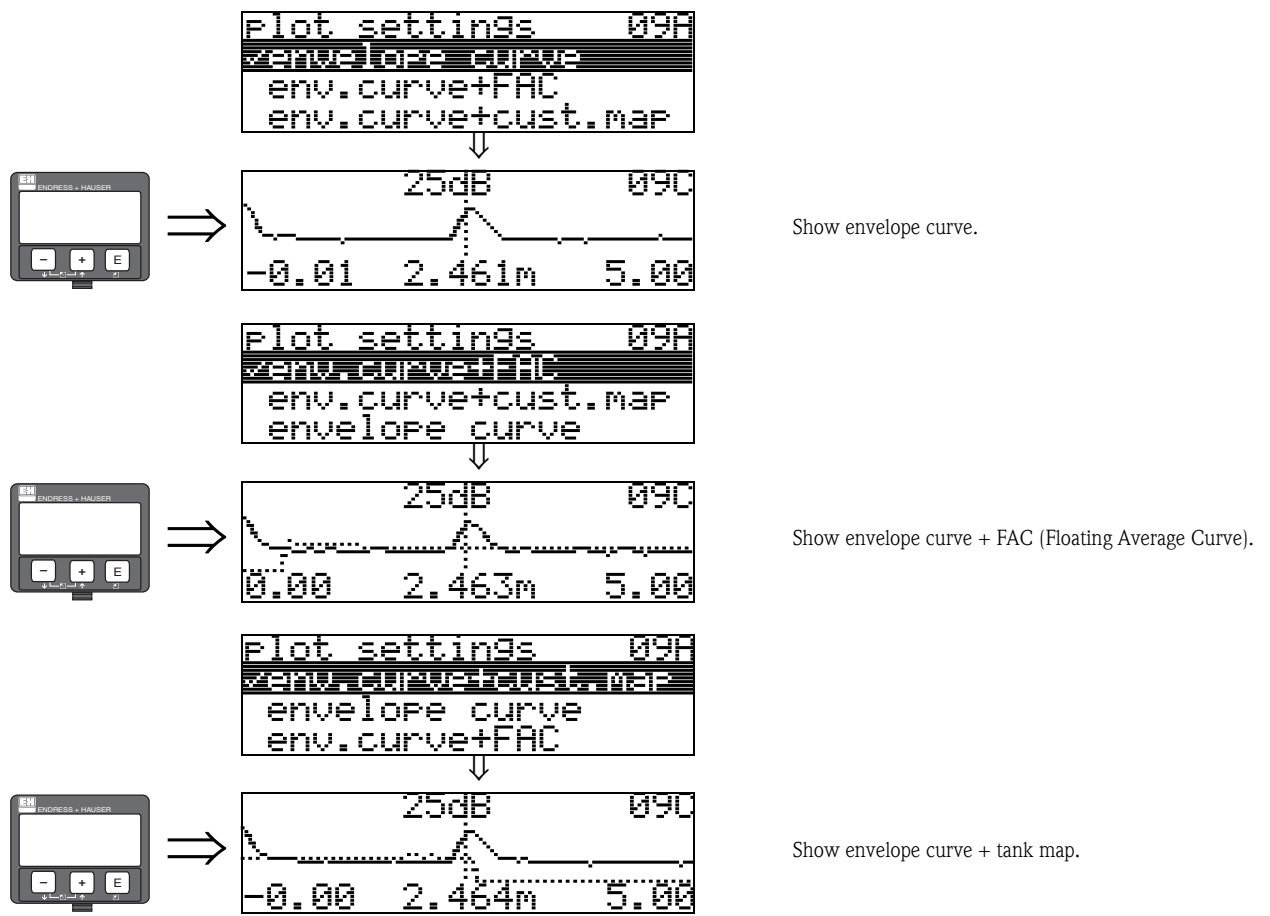

9.10 Envelope curve - navigate mode

In the envelope curve navigation mode , you can zoom in/out the curve (Zoom mode) or move it left or right.


The active mode is indicated by a symbol in the top left-hand corner of the display.

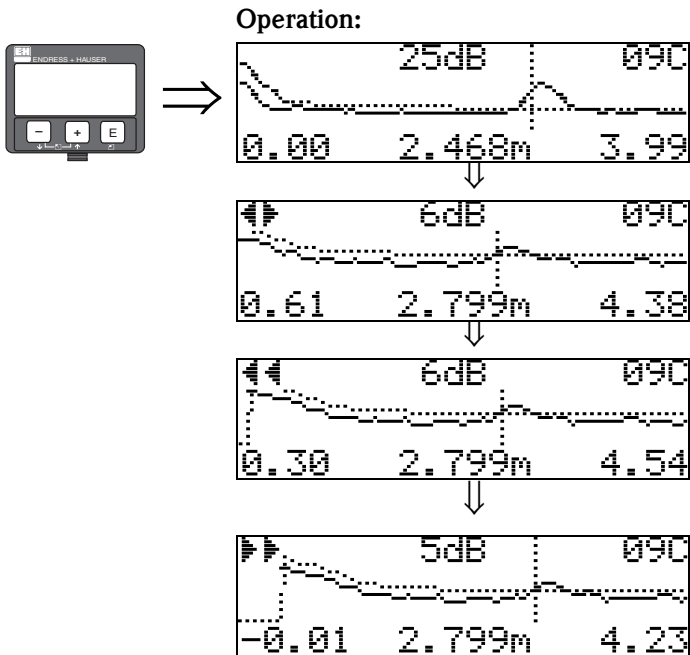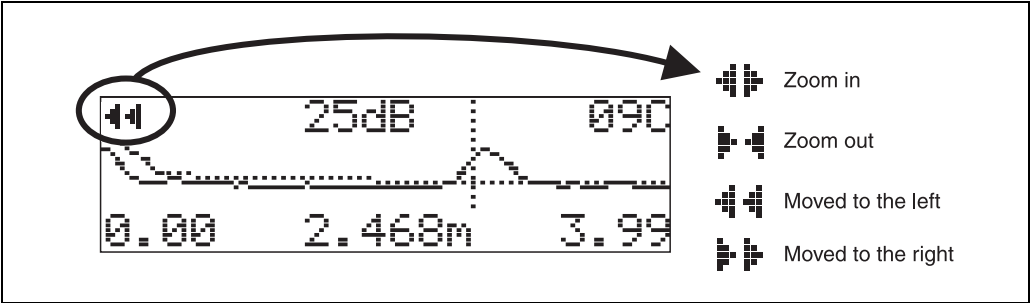

- ☐ or ☐ : switch to Zoom mode.
 - ☐ Zoom in -> is shown.
 - ☐ Zoom out -> is shown.
- Zoom mode!**
- ☐ Switch to Move mode.
- Move mode!**
- ☐ moves the curve to the right -> is shown.
 - ☐ moves the curve to the left -> is shown.


Move mode, curve moved to the right.

- ☐ : Toggle between Move and Zoom modes.
- ☐ : Exit Navigation mode.

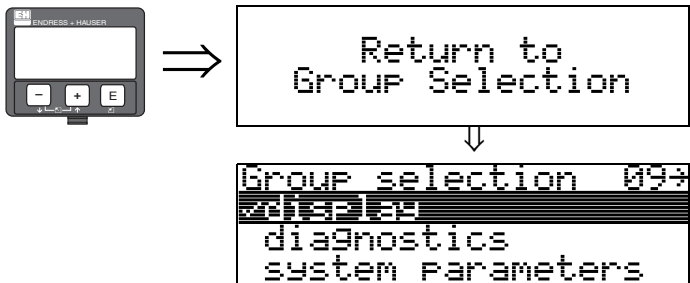

After 3 s, the following message appears

10 Function group "diagnostics" (0A)

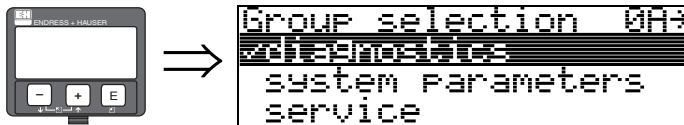

In the "**diagnostics**" function group, you can display and confirm error messages.

Type of error

Errors that occur during commissioning or measuring are displayed immediately on the local display. If two or more system or process errors occur, the error with the highest priority is the one shown on the display.

The measuring system distinguishes between two types of error:


- **A (Alarm):**
Instrument goes into a defined state (e.g. MAX)
Indicated by a constant  symbol.
(For a description of the codes, see Table 14.2 on Page 76)
- **W (Warning):**
Instrument continue measuring, error message is displayed.
Indicated by a flashing  symbol.
(For a description of the codes, see Table 14.2 on Page 76)
- **E (Alarm / Warning):**
Configurable (e.g. loss of echo, level within the safety distance)
Indicated by a constant/flashing  symbol.
(For a description of the codes, see Table 14.2 on Page 76)

Error messages

Error messages appear as four lines of plain text on the display. In addition, a unique error code is also output. A description of the error codes is given on Page 76.

- The "**diagnostics (0A)**" function group can display current errors as well as the last errors that occurred.
- If several current errors occur, use  or  to page through the error messages.
- The last occurring error can be deleted in the "**diagnostics (0A)**" function group with the funktion "**clear last error**" (**0A2**).

10.1 Function "present error" (0A0)

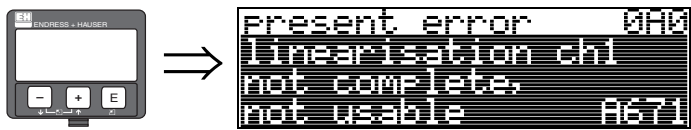

The present error is shown using this function.

10.2 Function "previous error" (0A1)



The last error presented is shown with this function.

10.3 Function "clear last error" (0A2)



Selection:

- keep
- erase



Caution!
This function can be performed on the display only!

10.4 Function "reset" (0A3)



Caution!

A reset sets the instrument back to the factory settings. This can lead to an impairment of the measurement. Generally, you should perform a basic setup again following a reset.

A reset is only necessary:

- if the instrument no longer functions
- if the instrument must be moved from one measuring point to another
- if the instrument is being de-installed / put into storage / installed



```
reset                                0A3
[REDACTED]
for reset code
see manual
```

Entry ("reset" (0A3)):

- 333 = customer parameters
- 555 = history reset

333 = reset customer parameters

This reset is recommended whenever an instrument with an unknown 'history' is to be used in an application:

- The Micropilot is reset to the default values.
- The customer specific tank map is not deleted.
- A linearisation is switched to "**linear**" although the table values are retained. The table can be reactivated in the "**linearisation**" (04) function group.

List of functions that are affected by a reset:

- | | |
|-------------------------|--------------------------|
| ■ tank shape (002) | ■ customer unit (042) |
| ■ empty calibr. (005) | ■ diameter vessel (047) |
| ■ full calibr. (006) | ■ range of mapping (052) |
| ■ pipe diameter (007) | ■ pres. Map dist (054) |
| ■ output on alarm (010) | ■ offset (057) |
| ■ output on alarm (011) | ■ low output limit (062) |
| ■ outp. echo loss (012) | ■ fixed current (063) |
| ■ ramp %span/min (013) | ■ fixed cur. value (064) |
| ■ delay time (014) | ■ simulation (065) |
| ■ safety distance (015) | ■ simulation value (066) |
| ■ in safety dist. (016) | ■ format display (094) |
| ■ level/ullage (040) | ■ distance unit (0C5) |
| ■ linearisation (041) | ■ download mode (0C8) |

The tank map can also be reset in the "**cust. tank map**" (055) function of the "**extended calibr.**" (05) function group.

This reset is recommended whenever an instrument with an unknown 'history' is to be used in an application or if a faulty mapping was started:

- The tank map is deleted. The mapping must be recommenced.

555 = History Reset

- After mounting and aligning the equipment, carry out a history reset.

10.5 Function "unlock parameter" (0A4)




Set-up can be locked and unlocked with this function.

10.5.1 Locking of the configuration mode

The Micropilot can be protected in two ways against unauthorised changing of instrument data, numerical values or factory settings:

"unlock parameter" (0A4):
A value $\neq 100$ for HART (e.g. 99) or $\neq 2457$ for PROFIBUS-PA (e.g. 2456) must be entered in "unlock parameter" (0A4) in the "diagnostics" (0A) function group. The lock is shown on the display by the ⌘ symbol and can be released again either via the display or by communication.

Hardware lock:
The instrument is locked by pressing the $\boxed{+}$ and $\boxed{-}$ and $\boxed{E}$ keys at the same time. The lock is shown on the display by the ⌘ symbol and can **only** be unlocked again via the display by pressing the $\boxed{+}$ and $\boxed{-}$ and $\boxed{E}$ keys at the same time again. It is **not** possible to unlock the hardware by communication. All parameters can be displayed even if the instrument is locked.

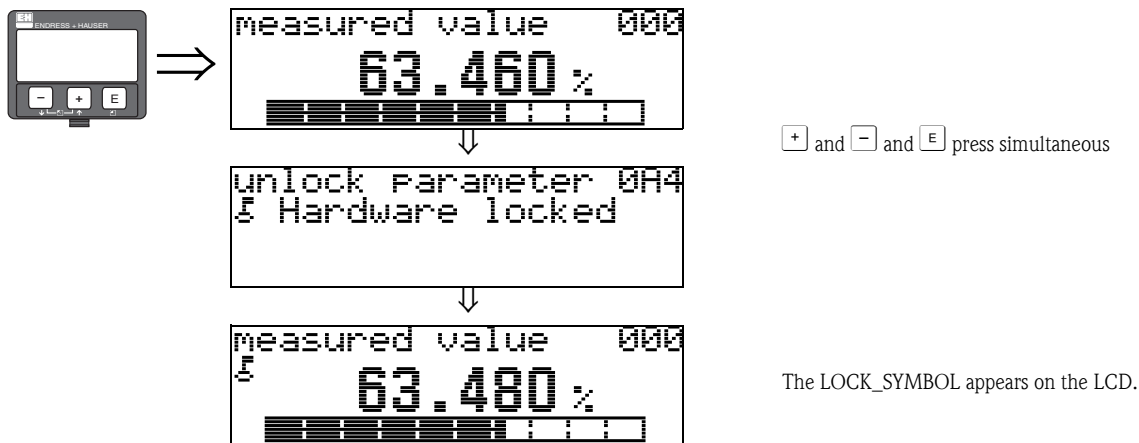

10.5.2 Unlocking of configuration mode

If an attempt is made to change parameters when the instrument is locked, the user is automatically requested to unlock the instrument:

"unlock parameter" (0A4):

By entering the unlock parameter (on the display or via communication)


100 = for HART devices

the Micropilot is released for operation.

Hardware-Verriegelung:

After pressing the  and  and  keys at the same time, the user is asked to enter the unlock parameter

100 = for HART devices

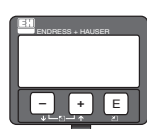

```
measured value    000
5
63.480 %
████████████████
```

 and  and  press simultaneous



```
unlock parameter 0A4
████████████████
100
```

Please enter unlock code and confirm with .




```
measured value    000
63.460 %
████████████████
```



Caution!

Changing certain parameters such as all sensor characteristics, for example, influences numerous functions of the entire measuring system, particularly measuring accuracy. There is no need to change these parameters under normal circumstances and consequently, they are protected by a special code known only to the E+H service organization. Please contact Endress+Hauser if you have any questions.


10.6 Function "measured dist." (0A5)

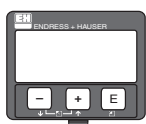

```
measured dist.    0A5
2.463 m
```


Display of measured distance in the selected "distance unit" (0C5).

10.7 Function "measured level" (0A6)

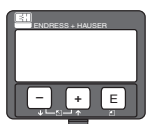


```
measured level    0A6
2.541 m
```

Display of measured level in the selected "distance unit" (0C5).

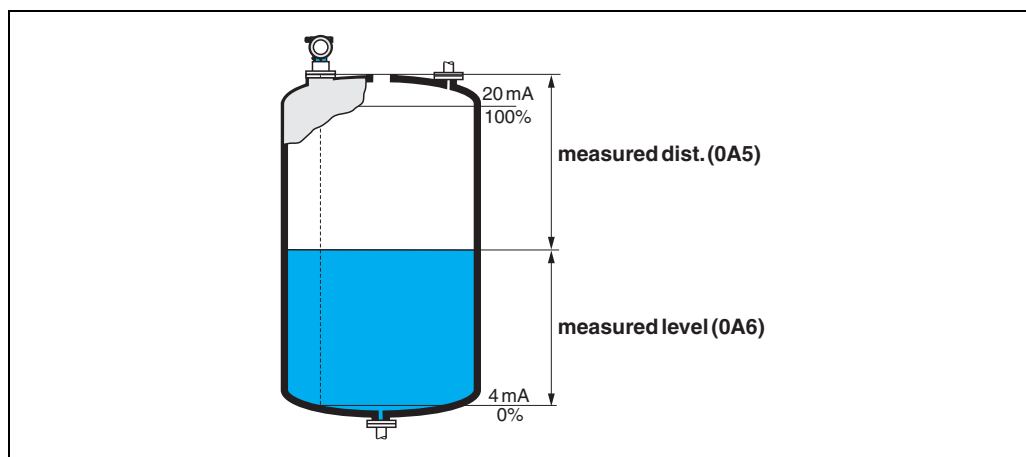

10.8 Function "application par." (0A8)

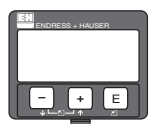

```
application par. 0A8
✓not modified
modified
```


Displays whether or not one of the settings dependent on the **"tank shape" (002)**, **"medium property" (003)** and **"process cond." (004)** application parameters has been changed or not.

If, for example, the **"output damping" (058)** is changed, the **"application par."** shows **"modified"**.

Selection:

- not modified
- modified

10.9 Function "custody mode" (0A9)

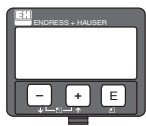

```
custody mode 0A9
✓inactive
  active pos.
  active neg.
```

This indicates the instrument calibration mode. The calibration mode (active) can be set using the hardware security lock on the electronics (see page 7).

Selection:

- inactive
- active pos.
- active neg.

inactive

The custody mode is not activated (switch for custody mode is open, see page 9)

active pos.

The custody mode (instrument is lead-sealed and accurate to the nearest mm) is active and is held.


active neg.

Custody mode (instrument is lead-sealed and accurate to the nearest mm) is activated and not held, e.g. because the signal-to-noise ratio is less than 10 dB (refer to "echo quality" (056) function in the "extended calibr." (05) function group).



Caution!

After entering all the values and completing mounting and aligning work, enter the Reset Code "555" in the "reset" 0A3) function to reset the instrument history for auto-correction.

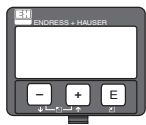


```
Return to
Group Selection
```



```
Group selection 0A9
✓diagnostics
  system parameters
  service
```

After 3 s, the following message appears

11 Function group "system parameters" (0C)

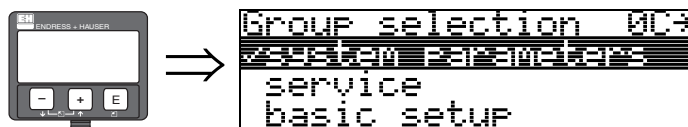

11.1 Function "tag no." (0C0)




You can define the tag number with this function.

User input:

- 16 alphanumeric characters for HART instruments (8 using the HART universal command)

11.2 Function "protocol+sw-no." (0C2)

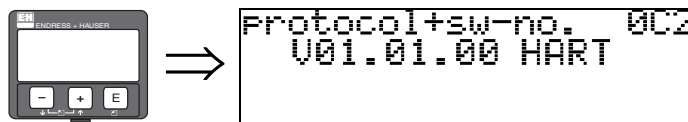

This function shows the protocol and the hardware and software version: Vxx.yy.zz.prot.

Display:


xx: hw-version

yy: sw-version

zz: sw-revision


prot: protocol type (e.g. HART)

11.3 Funktion "software no." (0C3)

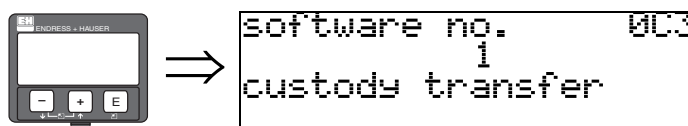

This function displays the version number of the weight and measure approved part of the Software.

11.4 Function "serial no." (0C4)

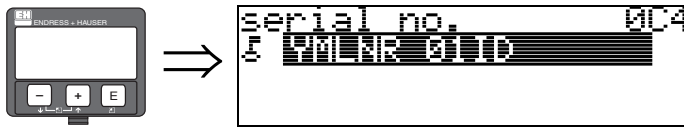

This function displays the instrument serial number.

11.5 Function "distance unit" (0C5)



You can select the basic distance unit with this function.

Selection:

- m
- ft
- mm
- inch

Dependence

m, mm: **"format display" (094)** can only be **"decimal"**.

The units are changed for the following parameters:

- empty calibr. (005)
- full calibr. (006)
- pipe diameter(007)
- safety distance (015)
- input level (044)
- diameter vessel (047)
- range of mapping (052)
- cust. tank map (055)
- offset (057)
- simulation value (066)
- measured dist. (0A5)
- measured level(0A6)

11.6 Function "download mode" (0C8)




This parameter defines which values are written to the instrument during a ToF Tool or Commuwinn II configuration download.

- Selection:
- **parameter only**
 - param+cust.map
 - mapping only



Note!
This parameter must not be described explicitly in ToF Tool. The various possibilities can be selected from the download dialog.

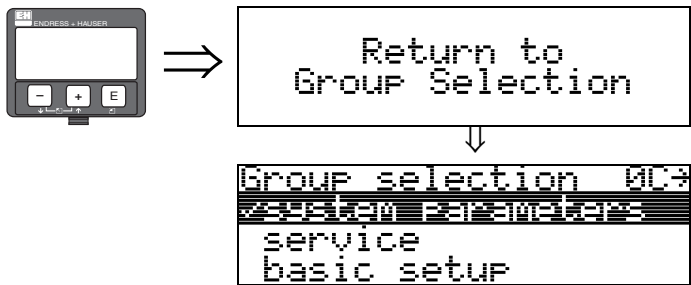

After 3 s, the following message appears


12 Function group "service" (0D)

The "Service" function group is not required for the operation of the instrument. It is only used by the Endress+Hauser service.

13 Envelope curve

13.0.1 Envelope curve with FieldCare

Signal analysis via envelope curve

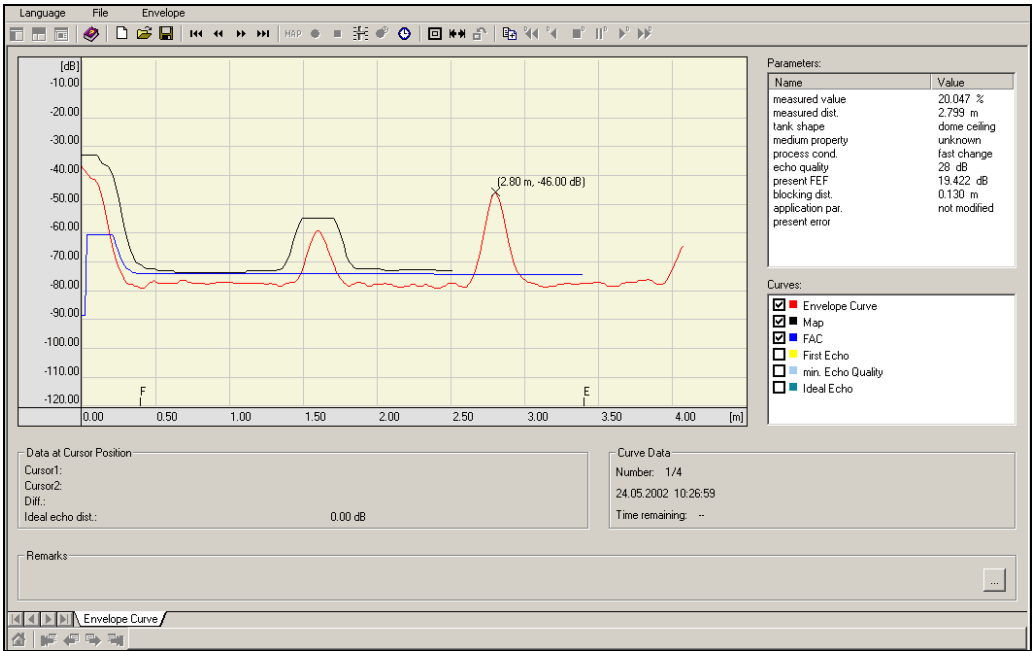

See page 56 ff. for the envelope curve in the local display.

13.0.2 Tank mapping

Generation of an envelope curve

Depending on the distance, the electromagnetic wave with a frequency of approx. 6 GHz requires a time-of-flight between 1 ns and 270 ns. The reflected signal is expanded by means of a sampling process to approximately 0.3 ms to 20 ms.


The sampling factor for 6 GHz is 81920; it is 163 840 for 26 GHz. The resulting carrier frequency is approx. 70 kHz, and 140 kHz at 26 GHz, respectively.

The envelope curve generated such is then demodulated, processed to a logarithmic scale, amplified and finally digitalized and evaluated by a microprocessor.

In chronological order, an envelope curve consists of the sending pulse, the electrical reverberation and one or more echoes.

The maximum measuring time depends on the maximum measuring distance. Afterwards, the next cycle starts with the sending pulse.

The envelope curve can be viewed on the local display. In order to do that, the function 09C must be selected in the operation menu. The display can be configured in function 09A and 09B. In addition, a laptop computer or PC in combination with the Endress+Hauser software “ToF Tool” and an interface adapter can be used for display and evaluation of an envelope curve. (see BA224F – Operating Instructions for ToF Tool).

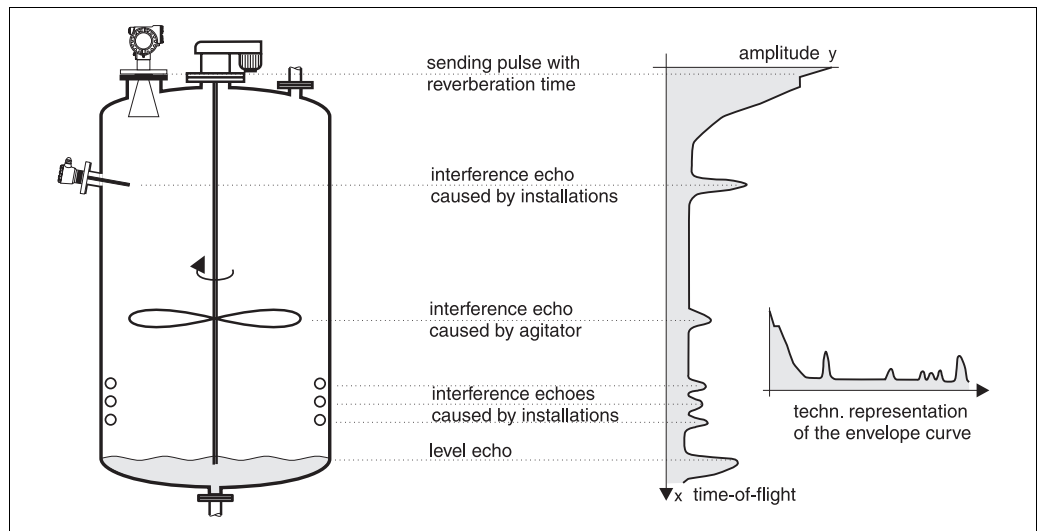


Tank mapping

It may be required to map interference reflections inside the tank. This map is preferably done with an empty tank. This way, all eventual interference reflections caused by installations in the tank are detected and stored in memory.

Only significant echoes will then exceed the tank map and be evaluated.

The mapping can also be performed up to the level or a defined distance, even if the tank is not empty. However, if the level drops below the mapping distance, additional reflections can interfere with the measurement.

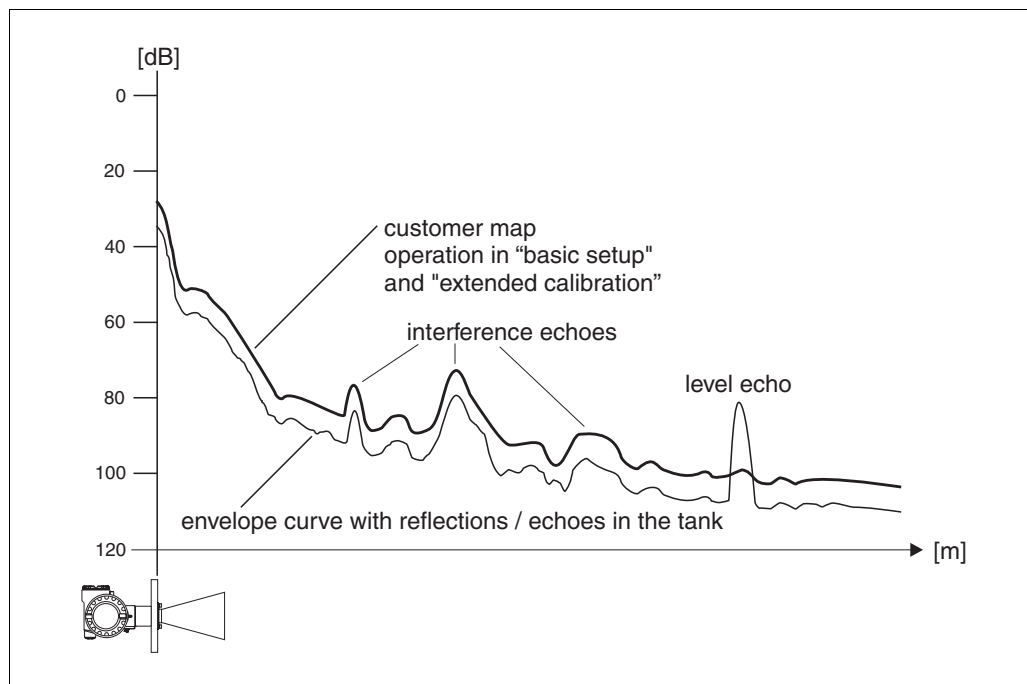


The FAC (Floating Average Curve)

The FAC is similar to the tank map, but automatically adapts itself to changing interference echoes in the tank, i.e. caused by buildup and turbulences. The FAC only covers small interference reflections, all signals below this curve are ignored.

The echo signal with the greatest distance to the FAC will be evaluated.


The FAC is not only recorded once, but newly calculated with every envelope curve. Thus, it continuously adapts itself to the conditions in the tank.

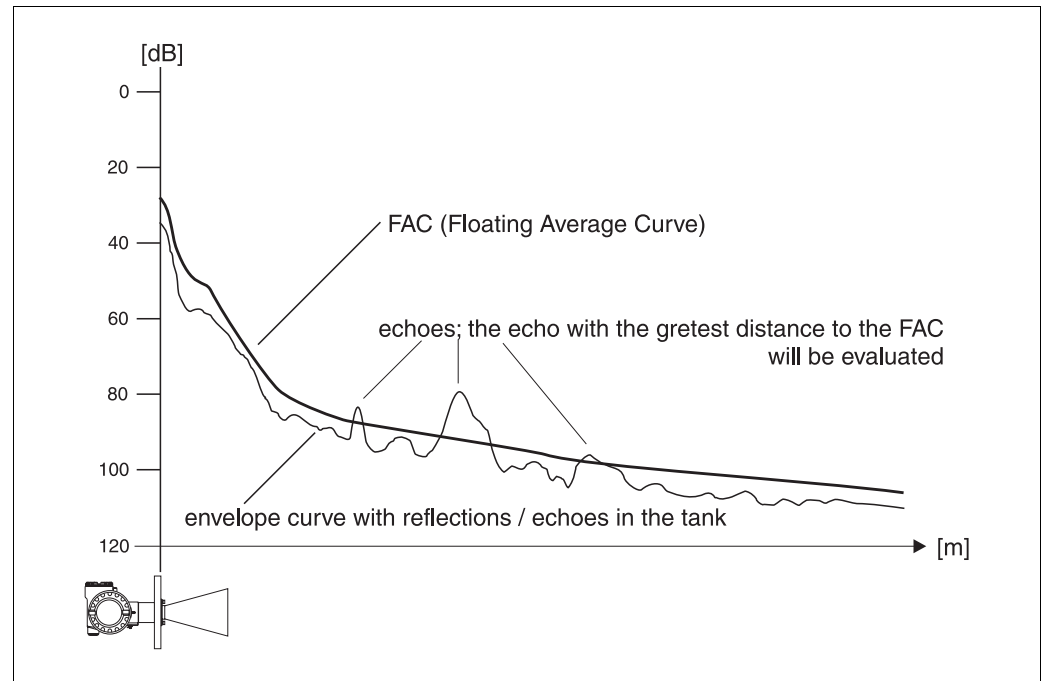

14 **Trouble-shooting**

If you have followed the instructions in this operating manual, the Micropilot should work correctly. If this is not the case, Micropilot has facilities for analysing and correcting errors. You can find a structured approach for locating errors on page 75 ff. or in the appropriate instrument operating manual.

14.1 Trouble-shooting instructions


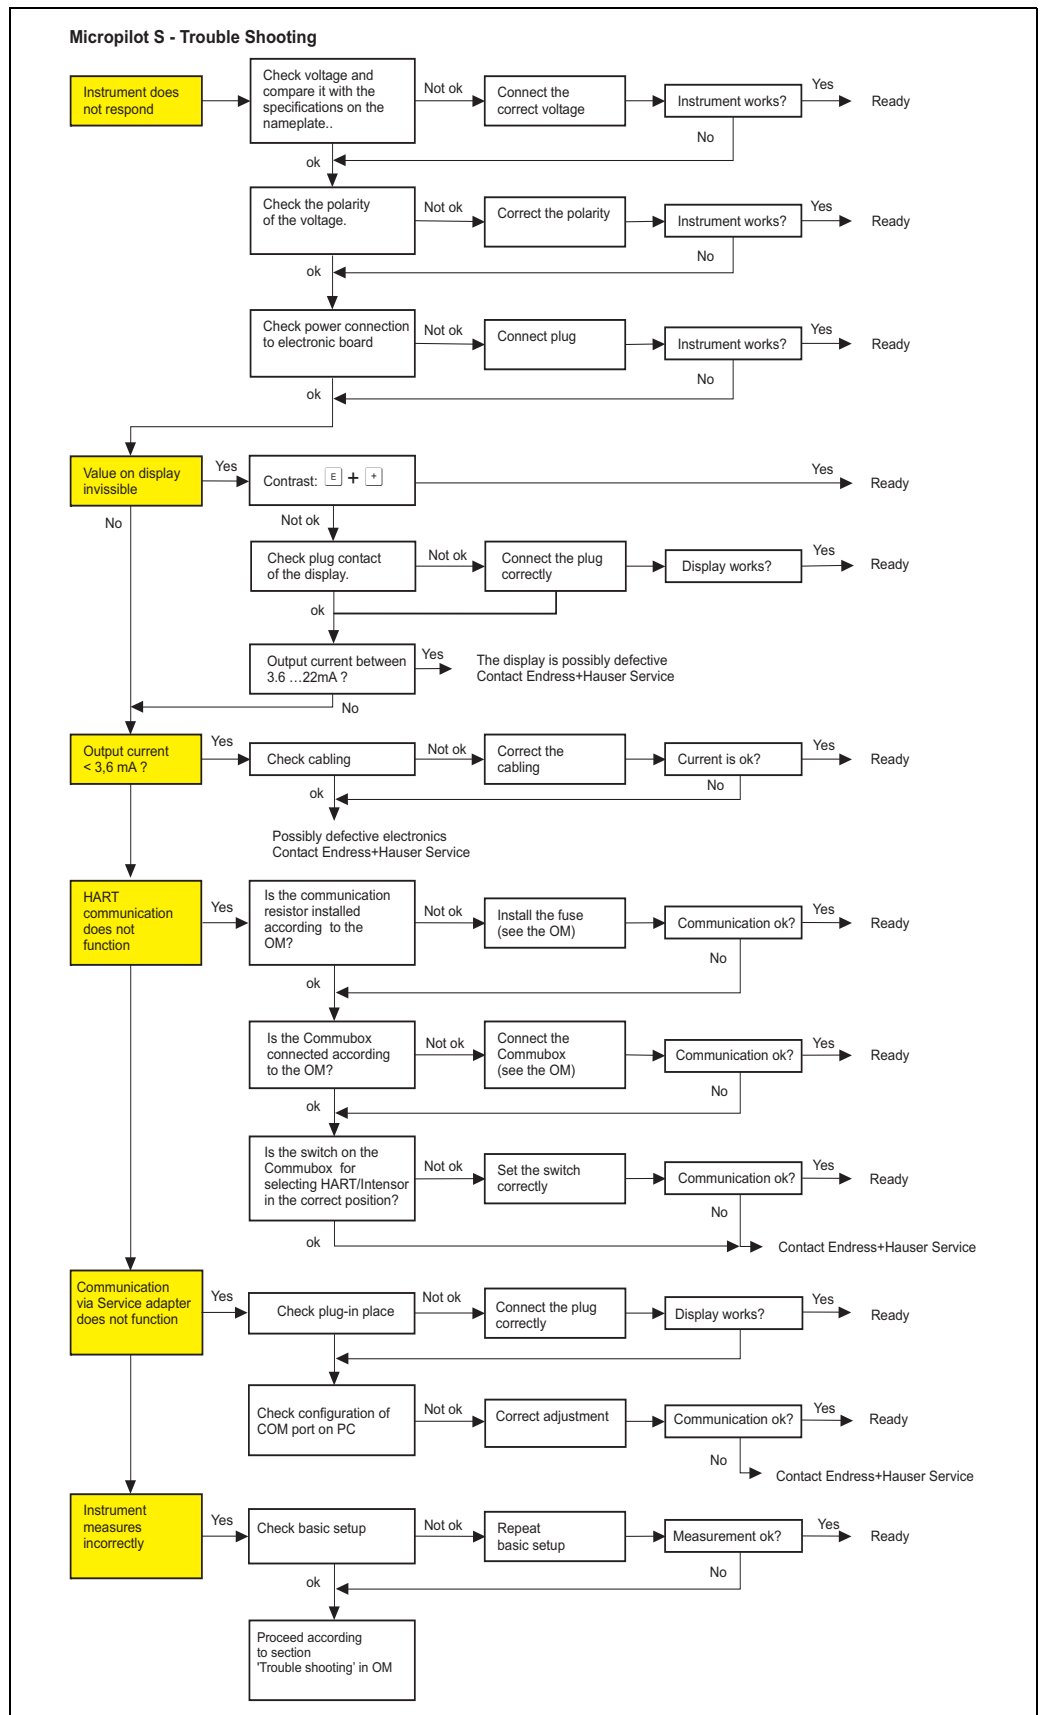


14.2 System error messages

Code	Description	Possible cause	Remedy
A101	checksum error general reset & new calibr.required		reset; if alarm prevails after reset, exchange electronics
A102	checksum error general reset & new calibr.required	device has been powered off before data could be stored; emc problem; E ² PROM defect	reset; avoid emc problem; if alarm prevails after reset, exchange electronics
W103	initialising - please wait	E ² PROM storage not yet finished	wait some seconds; if warning prevails, exchange electronics
A106	downloading please wait	processing data download	wait until warning disappears
A110	checksum error general reset & new calibr.required	device has been powered off before data could be stored; emc problem; E ² PROM defect	reset; avoid emc problem; if alarm prevails after reset, exchange electronics
A111	electronics defect	RAM defective	reset; if alarm prevails after reset, exchange electronics
A113	electronics defect	ROM defective	reset; if alarm prevails after reset, exchange electronics
A114	electronics defect	E2PROM defective	reset; if alarm prevails after reset, exchange electronics
A115	electronics defect	general hardware problem	reset; if alarm prevails after reset, exchange electronics
A116	download error repeat download	checksum of stored data not correct	restart download of data
A121	electronics defect	no factory calibration existant; E ² PROM defective	contact service
W153	initialising - please wait	initialisation of electronics	wait some seconds; if warning prevails, power off device and power on again
A155	electronics defect	hardware problem	reset; if alarm prevails after reset, exchange electronics
A160	checksum error general reset & new calibr.required	device has been powered off before data could be stored; emc problem; E ² PROM defect	reset; avoid emc problem; if alarm prevails after reset, exchange electronics
A164	electronics defect	hardware problem	reset; if alarm prevails after reset, exchange electronics
A171	electronics defect	hardware problem	reset; if alarm prevails after reset, exchange electronics
A231	sensor 1 defect check connection	HF module or electronics defective	exchange HF module or electronics
A270	custody switch undef check position	switch for custody transfer may be defective	check position of custody switch exchange electronics
#		inconsistency between phase and amplitude evaluation inconsistent microfactor inconsistent index mapping	check basic calibration check mounting calibration check echo quality reset history "555" check stilling pipe diameter switch off autocorrection

Code	Description	Possible cause	Remedy
A272	electronics defect amplifier	inconsistency in amplification	exchange electronics
W275	electronics defect factory setting	offset drift of A/D converter	exchange electronics
W511	no factory calibration ch1	factory calibration has been deleted	record new factory calibration
A512	recording of mapping please wait	mapping active	wait some seconds until alarm disappears
W601	linearisation ch1 curve not monotone	linearization not monotonously increasing	correct linearisation table
W611	less than 2 linearisation points for channel 1	number of entered linearization points < 2	correct linearisation table
W621	simulation ch. 1 on	simulation mode is active	switch off simulation mode
E641	no usable echo channel 1 check calibr.	echo lost due to application conditions of built up on antenna	check installation; optimize orientation of antenna; clean antenna (cf. Operating Instructions)
E651	level in safety distance - risk of overspill	level in safety distance	alarm will disappear as soon as level leaves safety distance;
A671	linearisation ch1 not complete, not usable	linearisation table is in edit mode	activate linearisation table
W681	current ch1 out of range	current out of range (3,8 mA ... 21,5 mA)	check calibration and linearisation

14.3 Application errors

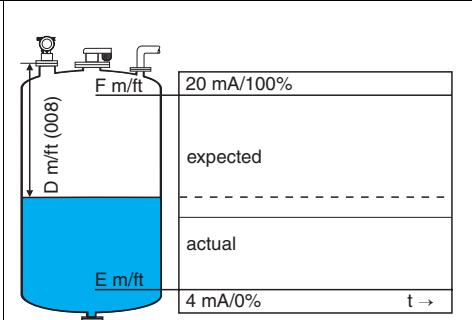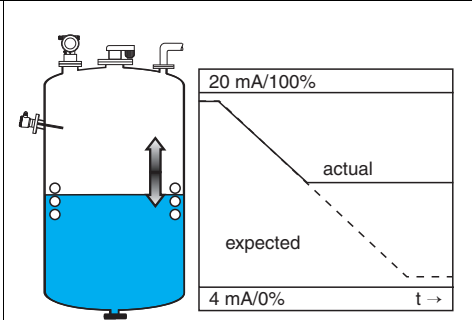Error	Output	Possible cause	Remedy
A warning or alarm has occurred.	Depending on the configuration	See table of error messages (see page 76)	1. See table of error messages (see page 76)
Measured value (00) is incorrect		Measured distance (008) OK? yes → no ↓ Measurement in bypass or stilling well? yes → no ↓ Is an FAR10 antenna extension being used? yes → no ↓ An interference echo may have been evaluated. yes →	1. Check empty calibr. (005) and full calibr. (006). 2. Check linearisation: → level/ullage (040) → max. scale (046) → diameter vessel (047) → Check table 1. Is bypass or stilling well selected in tank shape (002)? 2. Is the pipe diameter (007) correct? 1. offset (057) correctly set? (see page 48) 1. Carry out tank mapping → basic setup
No change off measured value on filling/emptying		Interference echo from installations, nozzle or extension on the antenna	1. Carry out tank mapping → basic setup 2. If necessary, clean antenna 3. If necessary, select better mounting position


Error	Output	Possible cause	Remedy
If the surface is not calm (e.g. filling, emptying, agitator running), the measured value jumps sporadically to a higher level		Signal is weakened by the rough surface — the interference echoes are sometimes stronger	1. Carry out tank mapping → basic setup 2. Set the process cond. (004) to "turb. surface" or "agitator" 3. Increase the output damping (058) 4. Optimise the orientation (see page 80) 5. If necessary, select a better mounting position and/or larger antenna
During filling/emptying the measured value jumps downwards		Multiple echoes	yes → 1. Check the tank shape (002), e.g. "dome ceiling" or "horizontal cyl" 2. In the range of the blocking dist. (059) there is no echo evaluation → Adapt the value 3. If possible, do not select central installation position 4. Perhaps use a stilling well
E 641 (loss of echo)		Level echo is too weak. Possible causes: ■ Rough surface due to filling/emptying ■ Agitator running ■ Foam	yes → 1. Check application parameters (002), (003) and (004) 2. Optimise alignment (see page 80) 3. If necessary, select a better installation position and/or larger antenna
E 641 (loss of echo) after turn on the power supply	If the instrument is configured to Hold by loss of echo the output is set to any value/current.	noise level during the initialisation phase to high.	Repeat once more empty calibr. (005). Caution! Before conformation change with or to the edit mode.

14.4 Orientation of the Micropilot




At mounting adjust the marking at the instrument flange!

Installation in tank (free space):
Mark on process connector facing the nearest tank wall!

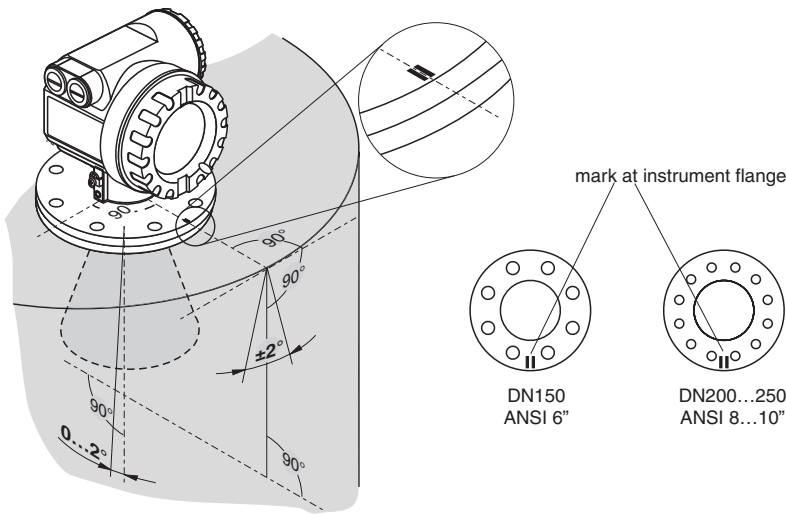


Installation in stilling well:
Mark on process connector of FMR530 pointed towards the slots or vent holes!

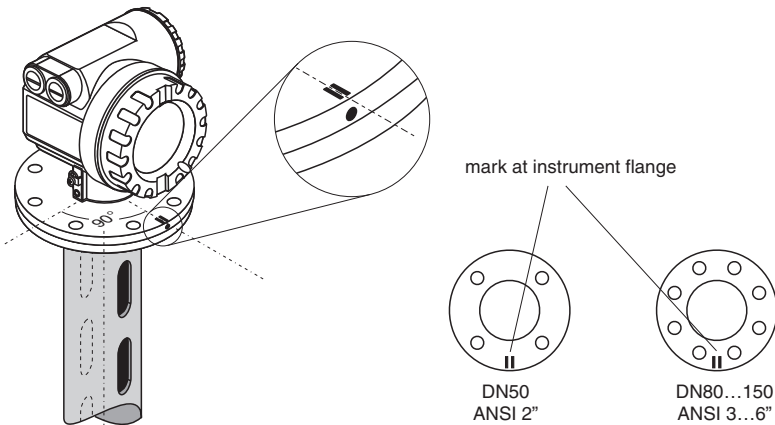

Turn housing

The housing can be turned 350°
in order to simplify access to the
display and the terminal compartment

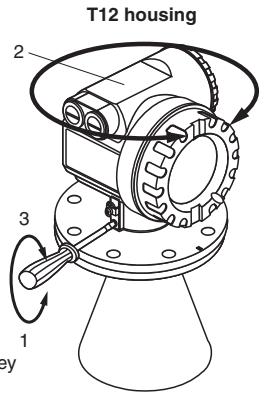

Allen key
4 mm
tighten strongly
by hand

For orientation a marker is found on the flange or threaded boss of the Micropilot FMR530/531/533. The measurement performance of the planar version FMR532 is independent of the orientation. During installation this must be oriented as follows (see page 80):

- In tanks: to the vessel wall
- In stilling wells: to the slots
- In bypass pipes: vertical to the tank connectors

After commissioning the Micropilot, the "**echo quality**" (056) indicates whether a sufficiently large measuring signal is obtained. If necessary, the quality can be optimised later. Vice versa, the presence of an interference echo can be used to minimise this by optimum orientation. The advantage of this is that the subsequent tank mapping uses a somewhat lower level that causes an increase in the strength of the measuring signal.

Proceed as follows:




Warning!


Subsequent alignment can lead to personal injury. Before you unscrew or loosen the process connection, make sure that the vessel is not under pressure and does not contain any injurious substances.

1. It is best to empty the container so that the bottom is just covered. However, alignment can be carried out even if the vessel is empty.
2. Optimisation is best carried out with the aid of the envelope graph in the display or the ToF Tool.
3. Unscrew the flange or loosen the threaded boss by a half a turn.
4. Turn the flange by one hole or screw the threaded boss by one eighth of a turn. Note the echo quality.
5. Continue to turn until 360° is reached.
6. Optimum alignment:


- a) Vessel partly full, no interference echo obtained:

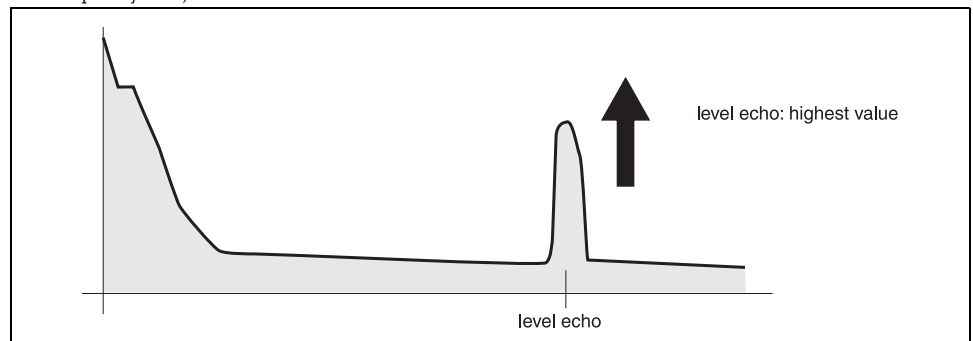


- b) Vessel partly full, interference echo obtained:

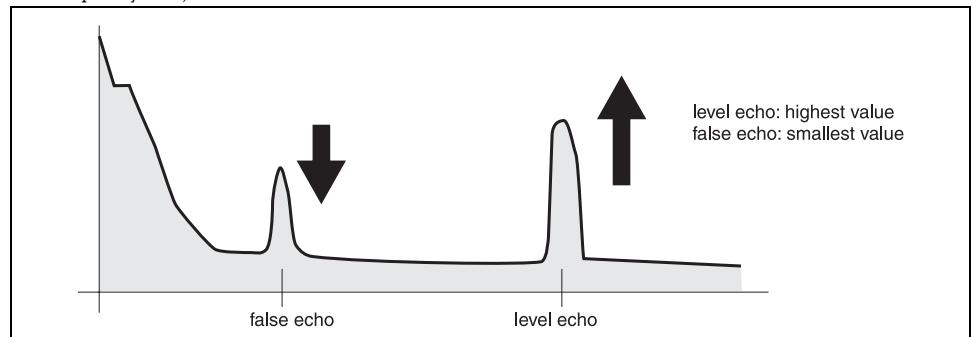

c) Vessel empty, no interference echo:

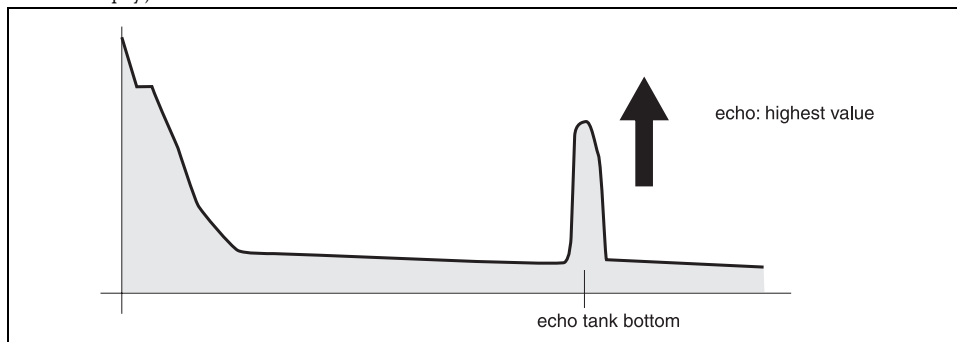

d) Vessel empty, interference echo obtained:

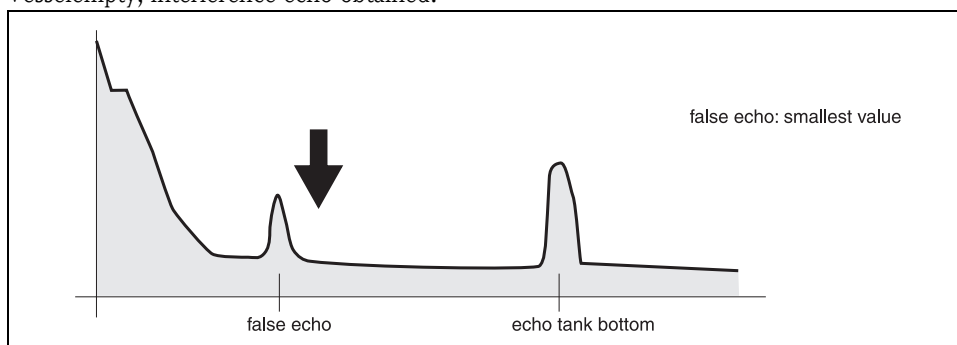

7. Fix the flange or threaded boss in this position.
If necessary, replace the seal.
8. Carry out tank mapping, see page 18 ff.

Index function menu

Function group

00 = basic setup	14
01 = safety settings	22
03 = mounting calibr.	29
04 = linearisation	37
05 = extended calibr.	45
06 = output	50
09 = display	54
0A = diagnostics	59
0C = system parameter	66

Function

000 = measured value.	14
002 = tank shape	14
003 = medium property	15
004 = process cond.	16
005 = empty calibr.	17
006 = full calibr.	17
007 = pipe diameter	18
008 = display	18
009 = history reset	21
010 = output on alarm	22
011 = output on alarm	23
012 = outp. echo loss	24
013 = ramp %span/min	25
014 = delay time.	25
015 = safety distance.	26
016 = in safety dist.	26
017 = ackn. alarm.	28
018 = overspill prot.	28
030 = tank gauging.	29
031 = auto correction	29
032 = pipe diam.corr.	30
033 = dip table mode	32
034 = dip table	34
035 = dip table	34
036 = dip table handl.	35
037 = dip table state	36
040 = level/ullage	37
041 = linearisation	38
042 = customer unit	42
043 = table no.	42
044 = input level	43
045 = input volume	43

046 = max. scale.	43
047 = diameter vessel	44
050 = selection	45
051 = check distance.	45
052 = range of mapping.	46
053 = start mapping	46
054 = pres. map dist.	47
055 = cust. tank map.	47
056 = echo quality	48
057 = offset.	48
058 = output damping.	49
059 = blocking dist.	49
060 = commun. address	50
061 = no. of preambels	50
062 = thres. main val.	50
063 = fixed current	51
065 = simulation	52
066 = simulation value	52
067 = output current.	52
092 = language	54
093 = back to home	54
094 = format display	55
095 = no.of decimals.	55
096 = sep. character	55
097 = display test	56
09A = plot settings	56
09B = recording curve	56
09C = envelope curve	57
0A0 = present error.	60
0A1 = previous error	60
0A2 = clear last error.	60
0A3 = reset	61
0A4 = unlock parameter	62
0A5 = measured dist.	63
0A6 = measured level	63
0A8 = application par.	64
0A9 = custody mode	65
0C0 = tag no.	66
0C2 = protocol+sw-no.	66
0C3 = software no.	66
0C4 = serial no.	67
0C5 = distance unit.	67
0C8 = download mode	68
D00 = service level	69

For more Endress+Hauser product please visit: www.ainstru.com
Mail: Sales@ainstru.com

www.endress.com/worldwide



Endress+Hauser 
People for Process Automation

