


# Operating Instructions

## Proline Promass P 100

### Modbus RS485

Coriolis flowmeter

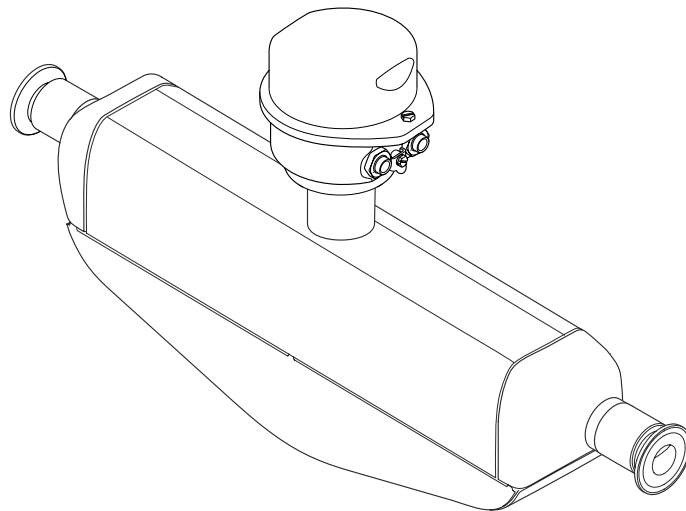

- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser sales organization will supply you with current information and updates to this manual.

# Table of contents

|          |                                                         |           |            |                                                                             |           |
|----------|---------------------------------------------------------|-----------|------------|-----------------------------------------------------------------------------|-----------|
| <b>1</b> | <b>About this document</b>                              | <b>6</b>  | <b>6.2</b> | Installing the device                                                       | 24        |
| 1.1      | Document function                                       | 6         | 6.2.1      | Required tools                                                              | 24        |
| 1.2      | Symbols                                                 | 6         | 6.2.2      | Preparing the measuring instrument                                          | 24        |
| 1.2.1    | Safety symbols                                          | 6         | 6.2.3      | Installing the measuring instrument                                         | 24        |
| 1.2.2    | Electrical symbols                                      | 6         | 6.3        | Post-installation check                                                     | 24        |
| 1.2.3    | Tool symbols                                            | 6         |            |                                                                             |           |
| 1.2.4    | Symbols for certain types of information                | 7         | <b>7</b>   | <b>Electrical connection</b>                                                | <b>26</b> |
| 1.2.5    | Symbols in graphics                                     | 7         | 7.1        | Electrical safety                                                           | 26        |
| 1.3      | Documentation                                           | 7         | 7.2        | Connecting requirements                                                     | 26        |
| 1.4      | Registered trademarks                                   | 8         | 7.2.1      | Required tools                                                              | 26        |
| <b>2</b> | <b>Safety instructions</b>                              | <b>9</b>  | 7.2.2      | Requirements for connection cable                                           | 26        |
| 2.1      | Requirements for the personnel                          | 9         | 7.2.3      | Terminal assignment                                                         | 27        |
| 2.2      | Intended use                                            | 9         | 7.2.4      | Pin assignment, device plug                                                 | 29        |
| 2.3      | Workplace safety                                        | 10        | 7.2.5      | Shielding and grounding                                                     | 30        |
| 2.4      | Operational safety                                      | 10        | 7.2.6      | Preparing the device                                                        | 30        |
| 2.5      | Product safety                                          | 10        | 7.3        | Connecting the device                                                       | 31        |
| 2.6      | IT security                                             | 10        | 7.3.1      | Connecting the transmitter                                                  | 31        |
| <b>3</b> | <b>Product description</b>                              | <b>11</b> | 7.3.2      | Connecting Safety Barrier Promass 100                                       | 33        |
| 3.1      | Product design                                          | 11        | 7.4        | Potential equalization                                                      | 33        |
| 3.1.1    | Device version with Modbus RS485 communication protocol | 11        | 7.4.1      | Requirements                                                                | 33        |
| <b>4</b> | <b>Incoming acceptance and product identification</b>   | <b>12</b> | 7.5        | Special connection instructions                                             | 34        |
| 4.1      | Incoming acceptance                                     | 12        | 7.5.1      | Connection examples                                                         | 34        |
| 4.2      | Product identification                                  | 12        | 7.6        | Hardware settings                                                           | 34        |
| 4.2.1    | Transmitter nameplate                                   | 13        | 7.6.1      | Activating the terminating resistor                                         | 34        |
| 4.2.2    | Sensor nameplate                                        | 14        | 7.7        | Ensuring the degree of protection                                           | 35        |
| 4.2.3    | Promass 100 safety barrier nameplate                    | 15        | 7.8        | Post-connection check                                                       | 36        |
| 4.2.4    | Symbols on the device                                   | 15        | <b>8</b>   | <b>Operation options</b>                                                    | <b>37</b> |
| <b>5</b> | <b>Storage and transport</b>                            | <b>16</b> | 8.1        | Overview of operation options                                               | 37        |
| 5.1      | Storage conditions                                      | 16        | 8.2        | Structure and function of the operating menu                                | 38        |
| 5.2      | Transporting the product                                | 16        | 8.2.1      | Structure of the operating menu                                             | 38        |
| 5.2.1    | Measuring devices without lifting lugs                  | 16        | 8.2.2      | Operating philosophy                                                        | 39        |
| 5.2.2    | Measuring devices with lifting lugs                     | 17        | 8.3        | Displaying the measured values via the local display (optionally available) | 40        |
| 5.2.3    | Transporting with a fork lift                           | 17        | 8.3.1      | Operational display                                                         | 40        |
| 5.3      | Packaging disposal                                      | 17        | 8.3.2      | User roles and related access authorization                                 | 41        |
| <b>6</b> | <b>Installation</b>                                     | <b>18</b> | 8.4        | Access to the operating menu via the operating tool                         | 42        |
| 6.1      | Installation requirements                               | 18        | 8.4.1      | Connecting the operating tool                                               | 42        |
| 6.1.1    | Installation position                                   | 18        | 8.4.2      | FieldCare                                                                   | 42        |
| 6.1.2    | Environmental and process requirements                  | 20        | 8.4.3      | DeviceCare                                                                  | 43        |
| 6.1.3    | Special installation instructions                       | 22        | <b>9</b>   | <b>System integration</b>                                                   | <b>44</b> |
|          |                                                         |           | 9.1        | Overview of device description files                                        | 44        |
|          |                                                         |           | 9.1.1      | Current version data for the device                                         | 44        |
|          |                                                         |           | 9.1.2      | Operating tools                                                             | 44        |
|          |                                                         |           | 9.2        | ModbusRS485 information                                                     | 44        |
|          |                                                         |           | 9.2.1      | Function codes                                                              | 44        |
|          |                                                         |           | 9.2.2      | Register information                                                        | 45        |
|          |                                                         |           | 9.2.3      | Response time                                                               | 45        |
|          |                                                         |           | 9.2.4      | Data types                                                                  | 45        |

|           |                                                |           |                  |                                          |           |
|-----------|------------------------------------------------|-----------|------------------|------------------------------------------|-----------|
| 9.2.5     | Byte transmission sequence .....               | 46        | 12.6             | Overview of diagnostic information ..... | 74        |
| 9.2.6     | Modbus data map .....                          | 47        | 12.7             | Pending diagnostic events .....          | 76        |
| <b>10</b> | <b>Commissioning .....</b>                     | <b>49</b> | 12.8             | Diagnostic list .....                    | 77        |
| 10.1      | Post-installation and post-connection check .. | 49        | 12.9             | Event logbook .....                      | 77        |
| 10.2      | Connecting via FieldCare .....                 | 49        | 12.9.1           | Reading out the event logbook .....      | 77        |
| 10.3      | Setting the operating language .....           | 49        | 12.9.2           | Filtering the event logbook .....        | 78        |
| 10.4      | Configuring the device .....                   | 49        | 12.9.3           | Overview of information events .....     | 78        |
| 10.4.1    | Defining the tag name .....                    | 49        | 12.10            | Resetting the device .....               | 79        |
| 10.4.2    | Setting the system units .....                 | 50        | 12.10.1          | Function scope of the "Device reset"     |           |
| 10.4.3    | Selecting and setting the medium ...           | 53        | parameter .....  | 79                                       |           |
| 10.4.4    | Configuring the communication                  |           | 12.11            | Device information .....                 | 79        |
| 10.4.5    | Configuring the low flow cut off .....         | 54        | 12.12            | Firmware history .....                   | 81        |
| 10.4.6    | Partially filled pipe detection .....          | 56        |                  |                                          |           |
| 10.5      | Advanced settings .....                        | 58        | <b>13</b>        | <b>Maintenance .....</b>                 | <b>82</b> |
| 10.5.1    | Using the parameter to enter the               |           | 13.1             | Maintenance work .....                   | 82        |
| 10.5.2    | access code .....                              | 58        | 13.1.1           | Cleaning .....                           | 82        |
| 10.5.3    | Calculated process variables .....             | 58        | 13.2             | Measuring and test equipment .....       | 82        |
| 10.5.4    | Carrying out a sensor adjustment ....          | 60        | 13.3             | Maintenance services .....               | 82        |
| 10.5.5    | Configuring the totalizer .....                | 61        |                  |                                          |           |
| 10.5.5    | Using parameters for device                    |           | <b>14</b>        | <b>Repair .....</b>                      | <b>83</b> |
| 10.6      | administration .....                           | 62        | 14.1             | General notes .....                      | 83        |
| 10.6      | Simulation .....                               | 62        | 14.1.1           | Repair and conversion concept .....      | 83        |
| 10.7      | Protecting settings from unauthorized access . | 63        | 14.1.2           | Notes for repair and conversion .....    | 83        |
| 10.7.1    | Write protection via write protection          |           | 14.2             | Spare parts .....                        | 83        |
| 10.7.1    | switch .....                                   | 63        | 14.3             | Repair services .....                    | 83        |
|           |                                                |           | 14.4             | Return .....                             | 83        |
|           |                                                |           | 14.5             | Disposal .....                           | 84        |
|           |                                                |           | 14.5.1           | Removing the measuring                   |           |
|           |                                                |           | instrument ..... | 84                                       |           |
|           |                                                |           | 14.5.2           | Disposing of the measuring               |           |
|           |                                                |           | instrument ..... | 84                                       |           |
| <b>11</b> | <b>Operation .....</b>                         | <b>65</b> | <b>15</b>        | <b>Accessories .....</b>                 | <b>85</b> |
| 11.1      | Reading the device locking status .....        | 65        | 15.1             | Device-specific accessories .....        | 85        |
| 11.2      | Adjusting the operating language .....         | 65        | 15.1.1           | For the sensor .....                     | 85        |
| 11.3      | Reading off measured values .....              | 65        | 15.2             | Communication-specific accessories ..... | 85        |
| 11.3.1    | "Measured variables" submenu .....             | 65        | 15.3             | Service-specific accessories .....       | 86        |
| 11.3.2    | "Totalizer" submenu .....                      | 67        | 15.4             | System components .....                  | 87        |
| 11.4      | Adapting the measuring device to the process   |           |                  |                                          |           |
| 11.5      | conditions .....                               | 68        |                  |                                          |           |
| 11.5.1    | Performing a totalizer reset .....             | 68        |                  |                                          |           |
| 11.5.1    | Function scope of "Control Totalizer"          |           | <b>16</b>        | <b>Technical data .....</b>              | <b>88</b> |
| 11.5.2    | parameter .....                                | 69        | 16.1             | Application .....                        | 88        |
| 11.5.2    | Function range of "Reset all                   |           | 16.2             | Function and system design .....         | 88        |
| 11.5.2    | totalizers" parameter .....                    | 69        | 16.3             | Input .....                              | 89        |
|           |                                                |           | 16.4             | Output .....                             | 90        |
|           |                                                |           | 16.5             | Power supply .....                       | 91        |
|           |                                                |           | 16.6             | Performance characteristics .....        | 93        |
|           |                                                |           | 16.7             | Installation .....                       | 96        |
|           |                                                |           | 16.8             | Environment .....                        | 96        |
|           |                                                |           | 16.9             | Process .....                            | 97        |
|           |                                                |           | 16.10            | Mechanical construction .....            | 100       |
|           |                                                |           | 16.11            | Operability .....                        | 103       |
|           |                                                |           | 16.12            | Certificates and approvals .....         | 103       |
|           |                                                |           | 16.13            | Application packages .....               | 106       |
|           |                                                |           | 16.14            | Accessories .....                        | 107       |
|           |                                                |           | 16.15            | Documentation .....                      | 107       |
| <b>12</b> | <b>Diagnostics and troubleshooting ...</b>     | <b>70</b> |                  |                                          |           |
| 12.1      | General troubleshooting .....                  | 70        |                  |                                          |           |
| 12.2      | Diagnostic information via LEDs .....          | 70        |                  |                                          |           |
| 12.2.1    | Transmitter .....                              | 70        |                  |                                          |           |
| 12.2.2    | Promass 100 safety barrier .....               | 71        |                  |                                          |           |
| 12.3      | Diagnostic information in FieldCare or         |           |                  |                                          |           |
| 12.3.1    | DeviceCare .....                               | 72        |                  |                                          |           |
| 12.3.1    | Diagnostic options .....                       | 72        |                  |                                          |           |
| 12.3.2    | Calling up remedy information .....            | 73        |                  |                                          |           |
| 12.4      | Diagnostic information via communication       |           |                  |                                          |           |
| 12.4.1    | interface .....                                | 73        |                  |                                          |           |
| 12.4.1    | Reading out diagnostic information ..          | 73        |                  |                                          |           |
| 12.4.2    | Configuring error response mode ....           | 73        |                  |                                          |           |
| 12.5      | Adapting the diagnostic information .....      | 74        |                  |                                          |           |
| 12.5.1    | Adapting the diagnostic behavior ....          | 74        |                  |                                          |           |

**Index ..... 109**

# 1 About this document

## 1.1 Document function

These Operating Instructions contain all the information required in the various life cycle phases of the device: from product identification, incoming acceptance and storage, to installation, connection, operation and commissioning, through to troubleshooting, maintenance and disposal.

## 1.2 Symbols

### 1.2.1 Safety symbols

#### **DANGER**

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

#### **WARNING**

This symbol alerts you to a potentially dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

#### **CAUTION**

This symbol alerts you to a potentially dangerous situation. Failure to avoid this situation can result in minor or medium injury.

#### **NOTICE**

This symbol alerts you to a potentially harmful situation. Failure to avoid this situation can result in damage to the product or something in its vicinity.


### 1.2.2 Electrical symbols

| Symbol                                                                              | Meaning                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Direct current                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|  | Alternating current                                                                                                                                                                                                                                                                                                                                                                                                                            |
|  | Direct current and alternating current                                                                                                                                                                                                                                                                                                                                                                                                         |
|  | <b>Ground connection</b><br>A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.                                                                                                                                                                                                                                                                                                                |
|  | <b>Protective earth (PE)</b><br>Ground terminals that must be connected to ground prior to establishing any other connections.<br><br>The ground terminals are located on the interior and exterior of the device:<br><ul style="list-style-type: none"> <li>▪ Interior ground terminal: protective earth is connected to the mains supply.</li> <li>▪ Exterior ground terminal: device is connected to the plant grounding system.</li> </ul> |


### 1.2.3 Tool symbols

| Symbol                                                                              | Meaning         |
|-------------------------------------------------------------------------------------|-----------------|
|  | Allen key       |
|  | Open-end wrench |

### 1.2.4 Symbols for certain types of information

| Symbol                                                                              | Meaning                                                                  |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------|
|    | <b>Permitted</b><br>Procedures, processes or actions that are permitted. |
|    | <b>Preferred</b><br>Procedures, processes or actions that are preferred. |
|    | <b>Forbidden</b><br>Procedures, processes or actions that are forbidden. |
|    | <b>Tip</b><br>Indicates additional information.                          |
|    | Reference to documentation                                               |
|    | Reference to page                                                        |
|    | Reference to graphic                                                     |
|    | Notice or individual step to be observed                                 |
|    | Series of steps                                                          |
|    | Result of a step                                                         |
|    | Help in the event of a problem                                           |
|  | Visual inspection                                                        |

### 1.2.5 Symbols in graphics

| Symbol                                                                              | Meaning                        |
|-------------------------------------------------------------------------------------|--------------------------------|
| 1, 2, 3, ...                                                                        | Item numbers                   |
|  | Series of steps                |
| A, B, C, ...                                                                        | Views                          |
| A-A, B-B, C-C, ...                                                                  | Sections                       |
|  | Hazardous area                 |
|  | Safe area (non-hazardous area) |
|  | Flow direction                 |

## 1.3 Documentation

-  For an overview of the scope of the associated Technical Documentation, refer to the following:
- *Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)): Enter the serial number from the nameplate
  - *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

The following document types are available in the Downloads area of the Endress+Hauser website ([www.endress.com/downloads](http://www.endress.com/downloads)), depending on the device version:

| Document type                                        | Purpose and content of the document                                                                                                                                                                                                                                                                                                                       |
|------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Technical Information (TI)                           | <b>Planning aid for your device</b><br>The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.                                                                                                                                                      |
| Brief Operating Instructions (KA)                    | <b>Guide that takes you quickly to the 1st measured value</b><br>The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.                                                                                                                                                                |
| Operating Instructions (BA)                          | <b>Your reference document</b><br>The Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.                     |
| Description of Device Parameters (GP)                | <b>Reference for your parameters</b><br>The document provides a detailed explanation of each individual parameter. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.                                                                                                             |
| Safety instructions (XA)                             | Depending on the approval, safety instructions for electrical equipment in hazardous areas are also supplied with the device. These are an integral part of the Operating Instructions.<br> The nameplate indicates which Safety Instructions (XA) apply to the device. |
| Supplementary device-dependent documentation (SD/FY) | Always comply strictly with the instructions in the relevant supplementary documentation. The supplementary documentation is a constituent part of the device documentation.                                                                                                                                                                              |

## 1.4 Registered trademarks

### Modbus®

Registered trademark of SCHNEIDER AUTOMATION, INC.

### TRI-CLAMP®

Registered trademark of Ladish & Co., Inc., Kenosha, USA

## 2 Safety instructions

### 2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ▶ Are authorized by the plant owner/operator.
- ▶ Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ▶ Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- ▶ Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

### 2.2 Intended use

#### Application and media

The measuring instrument described in this manual is intended only for the flow measurement of liquids.

Depending on the version ordered, the measuring instrument can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring instruments for use in hazardous areas, in hygienic applications, or where there is an increased risk due to pressure, are specially labeled on the nameplate.

To ensure that the measuring instrument remains in proper condition during the operating time:

- ▶ Only use the measuring instrument in full compliance with the data on the nameplate and the general conditions listed in the manual and supplementary documentation.
- ▶ Using the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area (e.g. explosion protection, pressure vessel safety).
- ▶ Use the measuring instrument only for media against which the materials in contact with the process are sufficiently resistant.
- ▶ Keep within the specified pressure and temperature range.
- ▶ Keep within the specified ambient temperature range.
- ▶ Protect the measuring instrument permanently against corrosion from environmental influences.

#### Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.

#### **WARNING**

#### **Danger of breakage due to corrosive or abrasive fluids and ambient conditions!**

- ▶ Verify the compatibility of the process fluid with the sensor material.
- ▶ Ensure the resistance of all wetted materials during the process.
- ▶ Keep within the specified pressure and temperature range.

**NOTICE****Verification for borderline cases:**

- ▶ For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

**Residual risks****⚠ WARNING**

**Risk of hot or cold burns! The use of media and electronics with high or low temperatures can produce hot or cold surfaces on the device.**

- ▶ Mount suitable touch protection.

## 2.3 Workplace safety

For work on and with the device:

- ▶ Wear the required personal protective equipment according to federal/national regulations.

## 2.4 Operational safety

Damage to the device!

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for the interference-free operation of the device.

**Modifications to the device**

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers!

- ▶ If modifications are nevertheless required, consult with the manufacturer.

**Repair**

To ensure continued operational safety and reliability:

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to the repair of an electrical device.
- ▶ Use only original spare parts and accessories.

## 2.5 Product safety

This state-of-the-art device is designed and tested in accordance with good engineering practice to meet operational safety standards. It left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EU directives listed in the device-specific EU declaration of conformity. The manufacturer confirms this by affixing the CE mark.

## 2.6 IT security

The manufacturer warranty is valid only if the product is installed and used as described in the Operating Instructions. The product is equipped with security mechanisms to protect it against any inadvertent changes to the settings.

IT security measures, which provide additional protection for the product and associated data transfer, must be implemented by the operators themselves in line with their security standards.

### 3 Product description


The device consists of a transmitter and a sensor. The Safety Barrier Promass 100 is part of the scope of supply and must be implemented to operate the device.

The device is available as a compact version:

The transmitter and sensor form a mechanical unit.

#### 3.1 Product design

##### 3.1.1 Device version with Modbus RS485 communication protocol

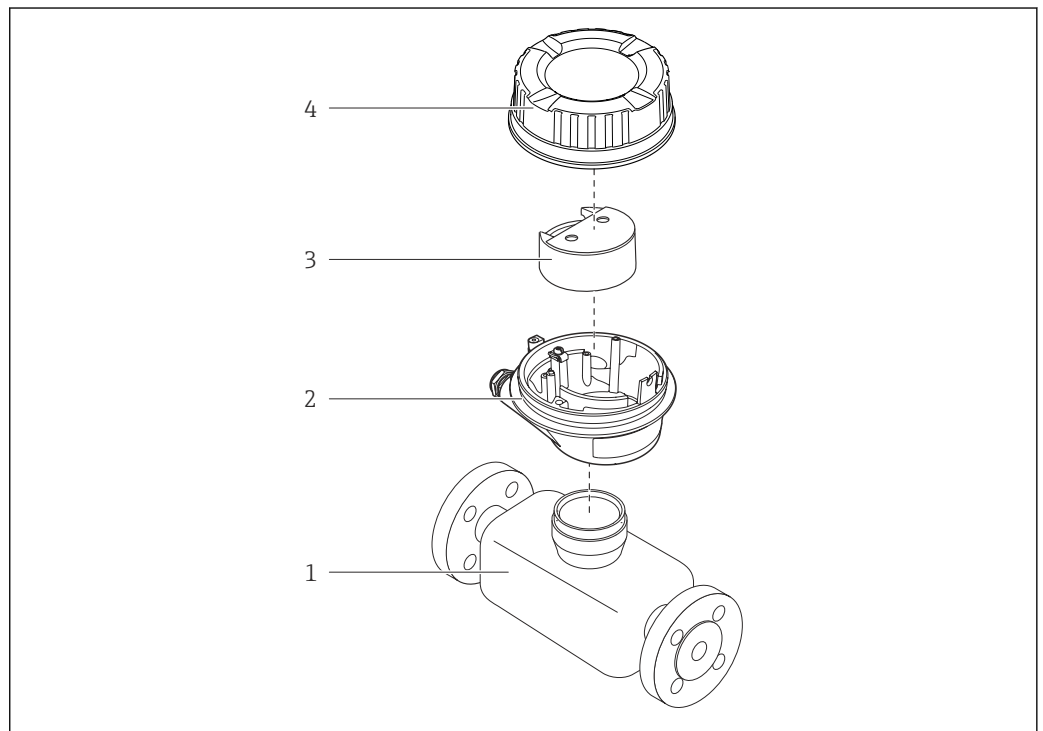

A0017609

#### 1 Important components of a measuring device

- 1 Sensor
- 2 Transmitter housing
- 3 Main electronics module
- 4 Transmitter housing cover

 In the case of the device version with Modbus RS485 intrinsically safe, the Safety Barrier Promass 100 forms part of the scope of supply.

## 4 Incoming acceptance and product identification

### 4.1 Incoming acceptance

On receipt of the delivery:

1. Check the packaging for damage.
  - ↳ Report all damage immediately to the manufacturer.  
Do not install damaged components.
2. Check the scope of delivery using the delivery note.
3. Compare the data on the nameplate with the order specifications on the delivery note.
4. Check the technical documentation and all other necessary documents, e.g. certificates, to ensure they are complete.



If one of the conditions is not satisfied, contact the manufacturer.

### 4.2 Product identification


The device can be identified in the following ways:

- Nameplate
- Order code with details of the device features on the delivery note
- Enter the serial numbers from the nameplates in the *Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)): all the information about the device is displayed.
- Enter the serial numbers from the nameplates into the *Endress+Hauser Operations app* or scan the DataMatrix code on the nameplate with the *Endress+Hauser Operations app*: all the information about the device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The "Additional standard device documentation" and "Supplementary device-dependent documentation" sections
- The *Device Viewer*: Enter the serial number from the nameplate ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer))
- The *Endress+Hauser Operations app*: Enter the serial number from the nameplate or scan the DataMatrix code on the nameplate.

### 4.2.1 Transmitter nameplate

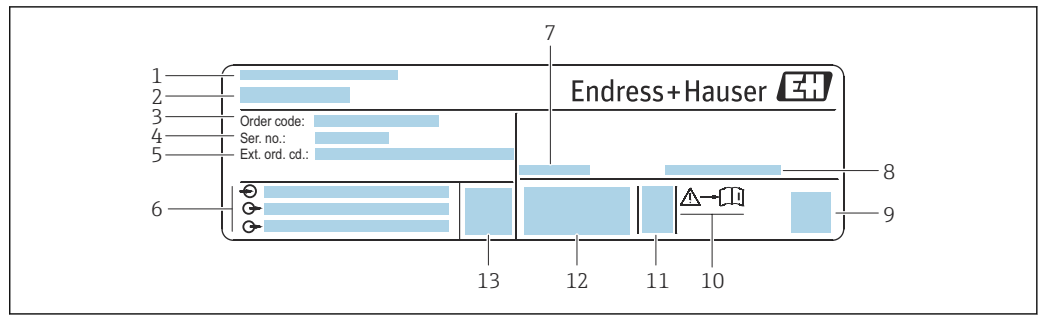


A0030222

 2 Example of a transmitter nameplate

- 1 Manufacturer address/certificate holder
- 2 Name of the transmitter
- 3 Order code
- 4 Serial number
- 5 Extended order code
- 6 Electrical connection data, e.g. available inputs and outputs, supply voltage
- 7 Permitted ambient temperature ( $T_a$ )
- 8 Degree of protection
- 9 2-D matrix code
- 10 Document number of safety-related supplementary documentation →  108
- 11 Date of manufacture: year-month
- 12 CE mark, RCM-Tick mark
- 13 Firmware version (FW)

## 4.2.2 Sensor nameplate

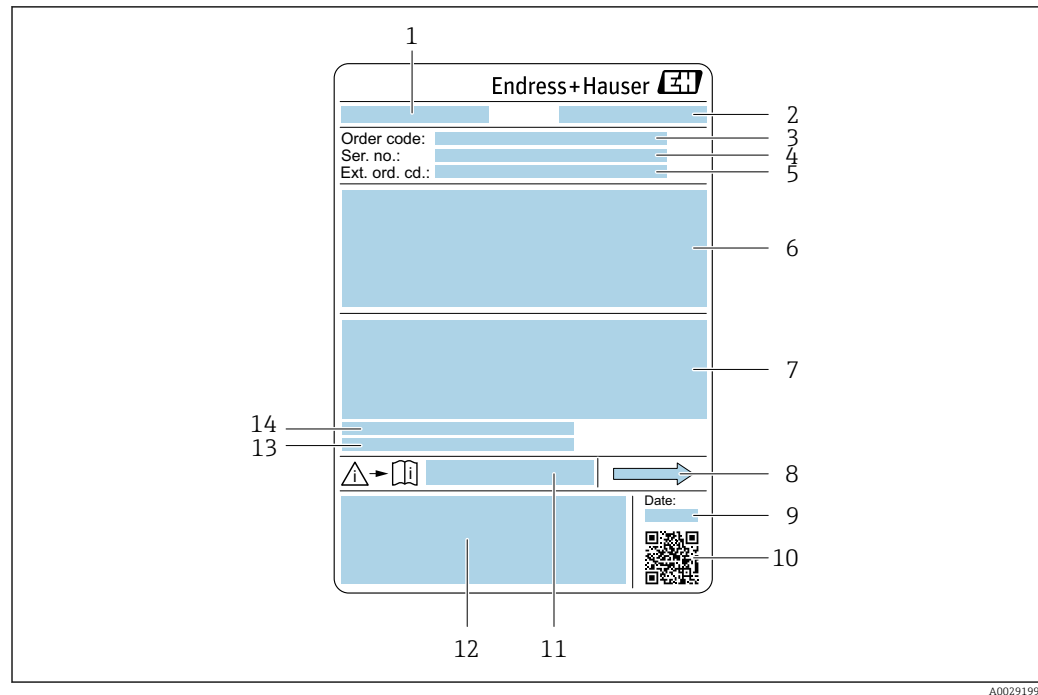

A0029199

3 Example of a sensor nameplate

- 1 Name of sensor
- 2 Manufacturer/certificate holder
- 3 Order code
- 4 Serial number (Ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Nominal diameter of the sensor; flange nominal diameter/nominal pressure; sensor test pressure; medium temperature range; material of measuring tube and manifold; sensor-specific information: e.g. pressure range of sensor housing, wide-range density specification (special density calibration)
- 7 Approval information for explosion protection, Pressure Equipment Directive and degree of protection
- 8 Flow direction
- 9 Manufacturing date: year-month
- 10 2-D matrix code
- 11 Document number of safety-related supplementary documentation
- 12 CE mark, RCM symbol
- 13 Surface roughness
- 14 Permitted ambient temperature ( $T_a$ )




### Order code

The measuring device is reordered using the order code.

#### Extended order code

- The device type (product root) and basic specifications (mandatory features) are always listed.
- Of the optional specifications (optional features), only the safety and approval-related specifications are listed (e.g. LA). If other optional specifications are also ordered, these are indicated collectively using the # placeholder symbol (e.g. #LA#).
- If the ordered optional specifications do not include any safety and approval-related specifications, they are indicated by the + placeholder symbol (e.g. XXXXXX-ABCDE +).

4.2.3 Promass 100 safety barrier nameplate

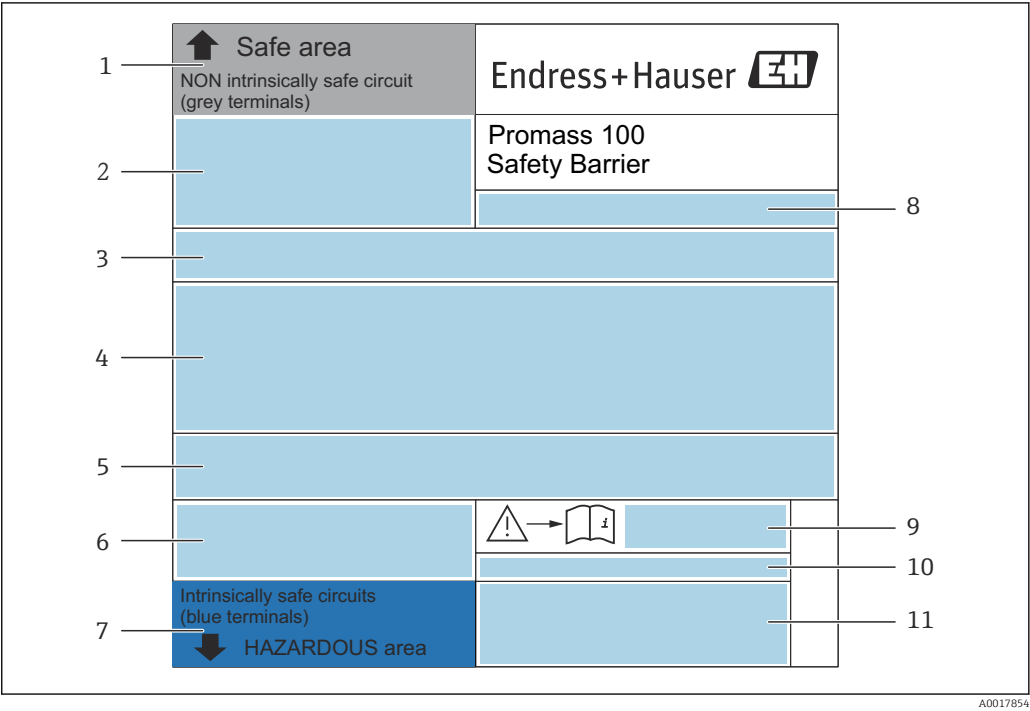

4 Example of a Promass 100 safety barrier nameplate

- 1 Non-hazardous area or Zone 2/Div. 2
- 2 Serial number, material number and 2-D matrix code of the Promass 100 safety barrier
- 3 Electrical connection data, e.g. available inputs and outputs, supply voltage
- 4 Approval information for explosion protection
- 5 Safety warning
- 6 Communication-specific information
- 7 Intrinsically safe area
- 8 Place of manufacture
- 9 Document number of safety-related supplementary documentation
- 10 Permitted ambient temperature ( $T_a$ )
- 11 CE mark, C-Tick

4.2.4 Symbols on the device

| Symbol | Meaning                                                                                                                                                                                                                                                                     |
|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|        | <b>WARNING!</b><br>This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury. Please consult the documentation for the measuring instrument to discover the type of potential danger and measures to avoid it. |
|        | <b>Reference to documentation</b><br>Refers to the corresponding device documentation.                                                                                                                                                                                      |
|        | <b>Protective ground connection</b><br>A terminal that must be connected to the ground prior to establishing any other connections.                                                                                                                                         |

## 5 Storage and transport

### 5.1 Storage conditions


Observe the following notes for storage:

- ▶ Store in the original packaging to ensure protection from shock.
- ▶ Do not remove protective covers or protective caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.
- ▶ Protect from direct sunlight. Avoid unacceptably high surface temperatures.
- ▶ Store in a dry and dust-free place.
- ▶ Do not store outdoors.

Storage temperature →  97

### 5.2 Transporting the product

Transport the measuring device to the measuring point in the original packaging.

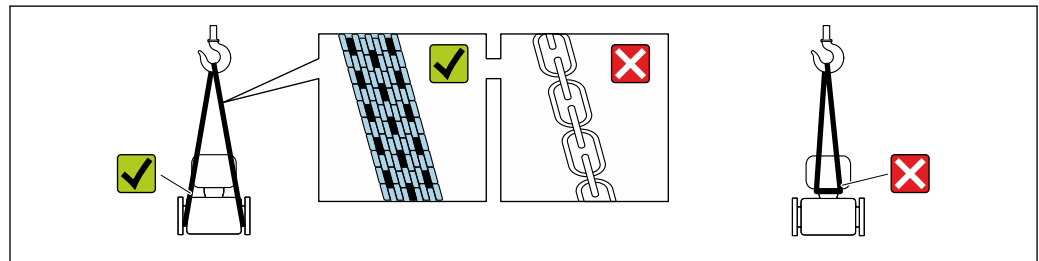

A0029252

 Do not remove protective covers or caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.


#### 5.2.1 Measuring devices without lifting lugs

##### WARNING

**Center of gravity of the measuring device is higher than the suspension points of the webbing slings.**

Risk of injury if the measuring device slips.

- ▶ Secure the measuring device against slipping or turning.
- ▶ Observe the weight specified on the packaging (stick-on label).

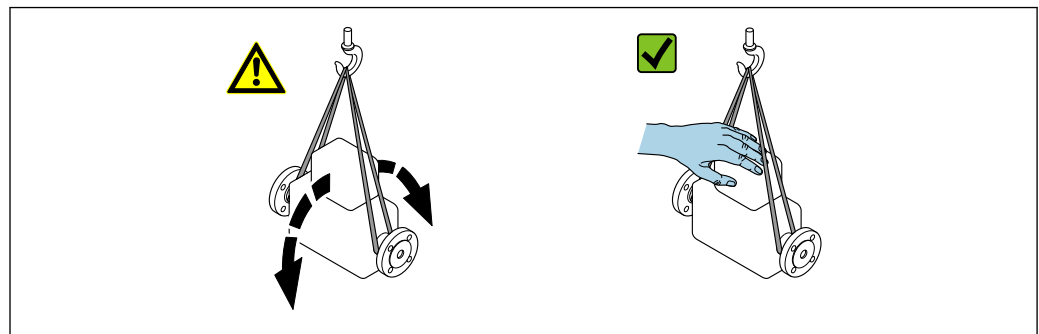

A0029214

### 5.2.2 Measuring devices with lifting lugs

#### CAUTION

##### Special transportation instructions for devices with lifting lugs

- ▶ Only use the lifting lugs fitted on the device or flanges to transport the device.
- ▶ The device must always be secured at two lifting lugs at least.

### 5.2.3 Transporting with a fork lift

If transporting in wood crates, the floor structure enables the crates to be lifted lengthwise or at both sides using a forklift.

## 5.3 Packaging disposal

All packaging materials are environmentally friendly and 100% recyclable:


- Outer packaging of device
  - Stretch wrap made of polymer in accordance with EU Directive 2002/95/EC (RoHS)
- Packaging
  - Wood crate treated in accordance with ISPM 15 standard, confirmed by IPPC logo
  - Cardboard box in accordance with European packaging guideline 94/62/EC, recyclability confirmed by Resy symbol
- Transport material and fastening fixtures
  - Disposable plastic pallet
  - Plastic straps
  - Plastic adhesive strips
- Filler material
  - Paper pads

## 6 Installation

### 6.1 Installation requirements

#### 6.1.1 Installation position

##### Mounting location

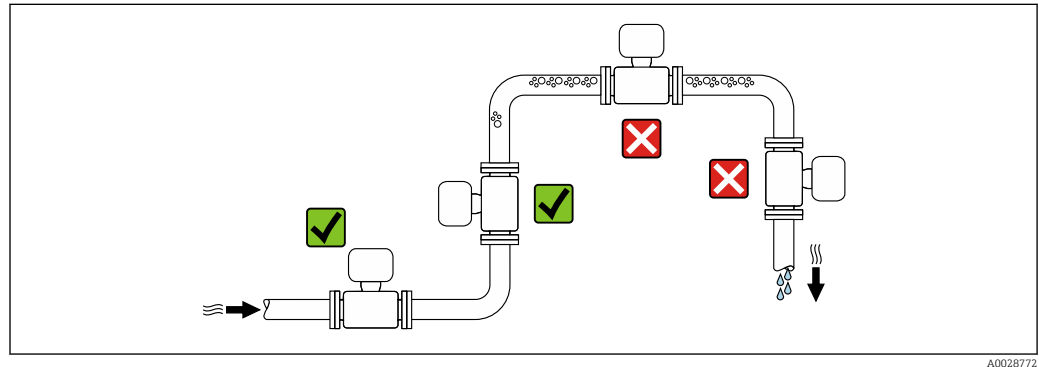


A0028772

To avoid measurement errors caused by gas bubble formation in the measuring tube, avoid the following installation locations in the pipe:

- Highest point of a pipeline
- Directly upstream of a free pipe outlet in a down pipe

##### Installation in down pipes

However, the following installation suggestion allows for installation in an open vertical pipeline. Pipe restrictions or the use of an orifice with a smaller cross-section than the nominal diameter prevent the sensor running empty while measurement is in progress.

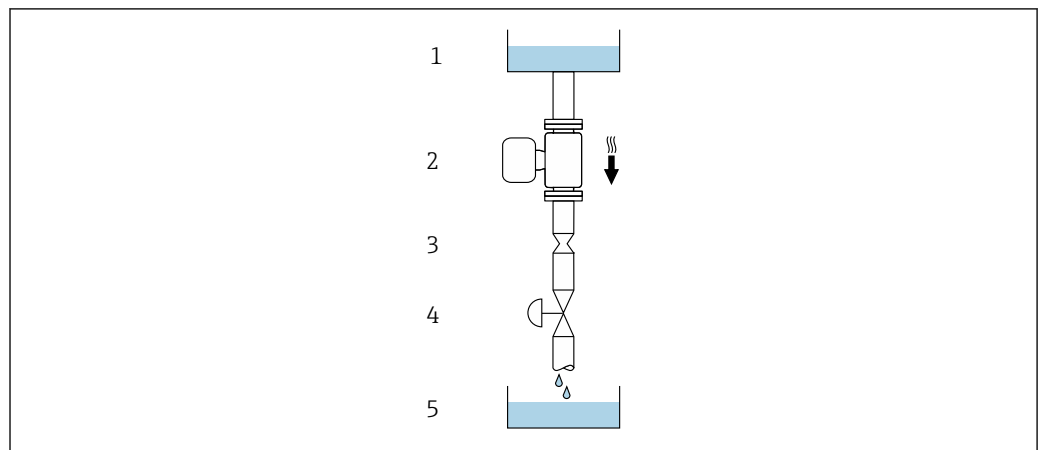

A0028773




 5 Installation in a down pipe (e.g. for batching applications)

- 1 Supply tank
- 2 Sensor
- 3 Orifice plate, pipe restriction
- 4 Valve
- 5 Filling container

| DN/NPS |       | Ø orifice plate, pipe restriction |      |
|--------|-------|-----------------------------------|------|
| [mm]   | [in]  | [mm]                              | [in] |
| 8      | 3⁄8   | 6                                 | 0.24 |
| 15     | 1⁄2   | 10                                | 0.40 |
| 25     | 1     | 14                                | 0.55 |
| 40     | 1 1⁄2 | 22                                | 0.87 |
| 50     | 2     | 28                                | 1.10 |


Orientation

The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

| Orientation |                                               |                                                                                                   | Recommendation                            |
|-------------|-----------------------------------------------|---------------------------------------------------------------------------------------------------|-------------------------------------------|
| A           | Vertical orientation                          | <br>A0015591   | ✓✓ <sup>1)</sup>                          |
| B           | Horizontal orientation, transmitter at top    | <br>A0015589   | ✓✓ <sup>2)</sup><br>Exception:<br>→ 6, 19 |
| C           | Horizontal orientation, transmitter at bottom | <br>A0015590 | ✓✓ <sup>3)</sup><br>Exception:<br>→ 6, 19 |
| D           | Horizontal orientation, transmitter at side   | <br>A0015592 | ✓✓                                        |

- 1) This orientation is recommended to ensure self-draining.
- 2) Applications with low process temperatures may reduce the ambient temperature. To maintain the minimum ambient temperature for the transmitter, this orientation is recommended.
- 3) Applications with high process temperatures may increase the ambient temperature. To maintain the maximum ambient temperature for the transmitter, this orientation is recommended.

If a sensor is installed horizontally with a curved measuring tube, match the position of the sensor to the medium properties.

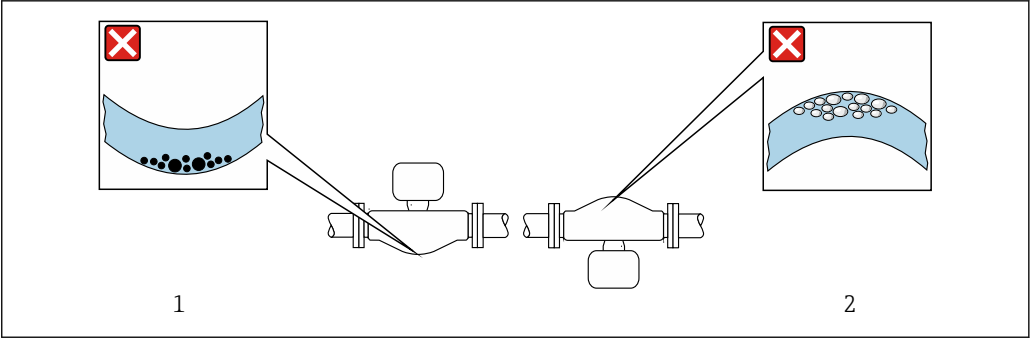


6 Orientation of sensor with curved measuring tube

- 1 Avoid this orientation for media with entrained solids: Risk of solids accumulating
- 2 Avoid this orientation for outgassing media: Risk of gas accumulating

Inlet and outlet runs

No special precautions need to be taken for fittings that create turbulence, such as valves, elbows or T-pieces, as long as no cavitation occurs → 20.

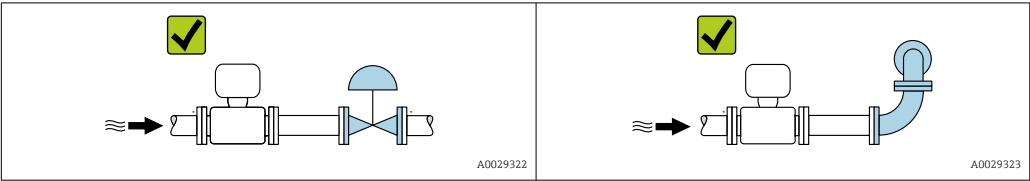

Installation dimensions

For the dimensions and installed lengths of the device, see the "Technical Information" document, "Mechanical construction" section

6.1.2 Environmental and process requirements

Ambient temperature range

|                            |                                                                                                                                                                          |
|----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Measuring instrument       | <ul style="list-style-type: none"><li>■ -40 to +60 °C (-40 to +140 °F)</li><li>■ Order code for "Test, certificate", option JM: -50 to +60 °C (-58 to +140 °F)</li></ul> |
| Safety Barrier Promass 100 | -40 to +60 °C (-40 to +140 °F)                                                                                                                                           |

- If operating outdoors:  
Avoid direct sunlight, particularly in warm climatic regions.

Static pressure


It is important that cavitation does not occur, or that gases entrained in the liquids do not outgas.

Cavitation is caused if the pressure drops below the vapor pressure:

- In liquids that have a low boiling point (e.g. hydrocarbons, solvents, liquefied gases)
- In suction lines
- Ensure the static pressure is sufficiently high to prevent cavitation and outgassing.

For this reason, the following mounting locations are recommended:

- At the lowest point in a vertical pipe
- Downstream from pumps (no danger of vacuum)

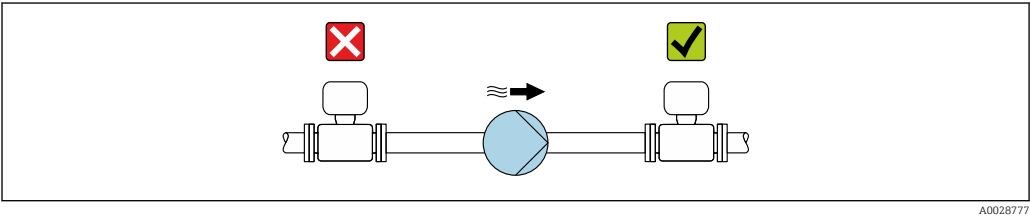

Thermal insulation

In the case of some fluids, it is important to keep the heat radiated from the sensor to the transmitter to a low level. A wide range of materials can be used for the required insulation.


The following device versions are recommended for applications with thermal insulation:

- Version with extended neck for insulation:  
Order code for "Sensor option", option CG with an extended neck length of 105 mm (4.13 in).
- Extended temperature version:  
Order code for "Measuring tube material", option TD or TG with an extended neck length of 105 mm (4.13 in).

#### NOTICE

##### Electronics overheating on account of thermal insulation!

- ▶ Recommended orientation: horizontal orientation, transmitter housing pointing downwards.
- ▶ Do not insulate the transmitter housing .
- ▶ Maximum permissible temperature at the lower end of the transmitter housing: 80 °C (176 °F)
- ▶ Thermal insulation with exposed extension neck: We recommend that you do not insulate the extension neck in order to ensure optimum dissipation of heat.

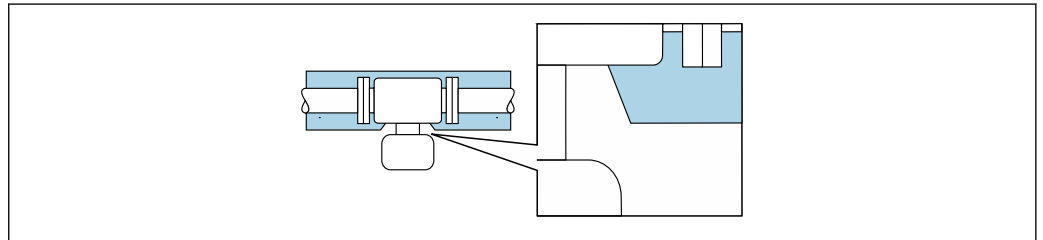

A0034391

 7 Thermal insulation with exposed extension neck

## Heating

#### NOTICE

##### Electronics can overheat due to elevated ambient temperature!

- ▶ Observe maximum permitted ambient temperature for the transmitter.
- ▶ Depending on the medium temperature, take the device orientation requirements into account.

#### NOTICE

##### Danger of overheating when heating

- ▶ Ensure that the temperature at the lower end of the transmitter housing does not exceed 80 °C (176 °F).
- ▶ Ensure that sufficient convection takes place at the transmitter neck.
- ▶ Ensure that a sufficiently large area of the transmitter neck remains exposed. The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.
- ▶ When using in potentially explosive atmospheres, observe the information in the device-specific Ex documentation. For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.
- ▶ Consider the behavior of the process diagnostics "830 Ambient temperature too high" and "832 Electronics temperature too high" if overheating cannot be avoided by a suitable system design.

### Heating options

If a medium requires that no heat loss should occur at the sensor, users can avail of the following heating options:

- Electrical heating, e.g. with electric band heaters <sup>1)</sup>
- Via pipes carrying hot water or steam
- Via heating jackets

### Vibrations


The high oscillation frequency of the measuring tubes ensures that the correct operation of the measuring system is not influenced by plant vibrations.

## 6.1.3 Special installation instructions

### Drainability

When installed vertically, the measuring tube can be drained completely and protected against buildup.

When the sensor is installed in a horizontal line, eccentric clamps can be used to ensure complete drainability. When the system is pitched in a specific direction and at a specific slope, gravity can be used to achieve complete drainability. The sensor must be mounted in the correct position to ensure full drainability in the horizontal position. Markings on the sensor show the correct mounting position to optimize drainability.

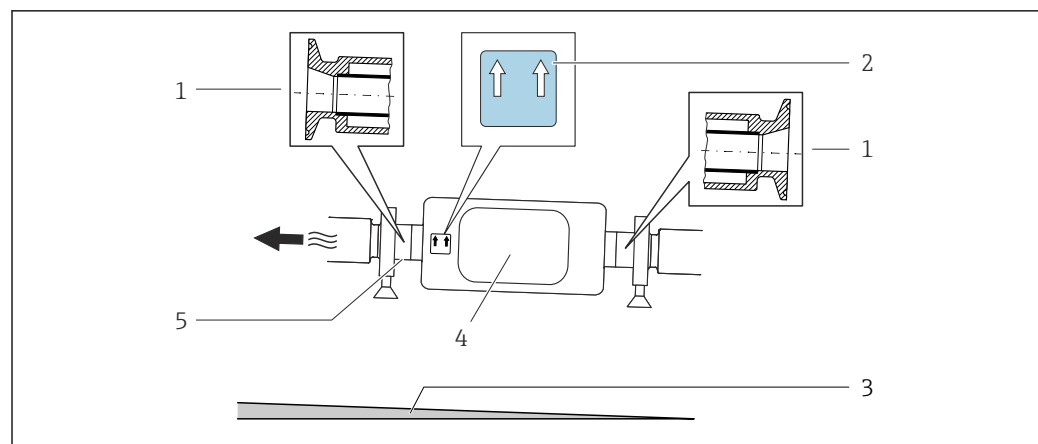

- 1 Eccentric clamp connection
- 2 "This side up" label indicates which side is up
- 3 For DN 8 to 25 (3/8 to 1"): Gradient: approx. 2% or 21 mm/m (0.24 in/ft); for DN 40 to 50 (1½ to 2"): Gradient approx. 2° or 35 mm/m (0.42 in/ft)
- 4 Transmitter
- 5 Line on the underside indicates the lowest point of the eccentric process connection.

### Hygienic compatibility


**i** When installing in hygienic applications, please refer to the information in the "Certificates and approvals/hygienic compatibility" section → 104

### Securing with mounting clamp in the case of hygiene connections

It is not necessary to provide additional support for the sensor for operational performance purposes. If, however, additional support is required for installation purposes, the following dimensions must be observed.

1) The use of parallel electric band heaters is generally recommended (bidirectional electricity flow). Particular considerations must be made if a single-wire heating cable is to be used. Additional information is provided in the document EA01339D "Installation instructions for electrical trace heating systems".

Use mounting clamp with lining between clamp and measuring instrument.

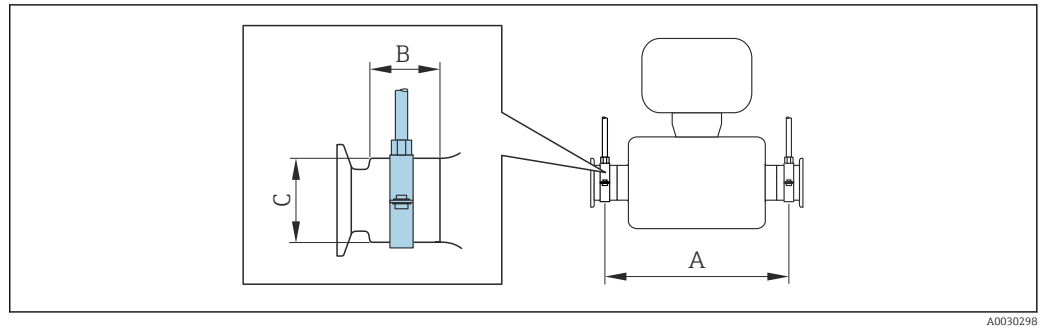

A0030298

| DN   |                 | A    |       | B    |      | C    |      |
|------|-----------------|------|-------|------|------|------|------|
| [mm] | [in]            | [mm] | [in]  | [mm] | [in] | [mm] | [in] |
| 8    | $\frac{3}{8}$   | 298  | 11.73 | 33   | 1.3  | 28   | 1.1  |
| 15   | $\frac{1}{2}$   | 402  | 15.83 | 33   | 1.3  | 28   | 1.1  |
| 25   | 1               | 542  | 21.34 | 33   | 1.3  | 38   | 1.5  |
| 40   | 1 $\frac{1}{2}$ | 658  | 25.91 | 36.5 | 1.44 | 56   | 2.2  |
| 50   | 2               | 772  | 30.39 | 44.1 | 1.74 | 75   | 2.95 |

### Zero point verification and zero adjustment

All measuring instruments are calibrated in accordance with state-of-the-art technology. Calibration takes place under reference conditions → 93. Therefore, a zero adjustment in the field is generally not required.

Experience shows that zero adjustment is advisable only in special cases:

- To achieve maximum measurement accuracy even with low flow rates.
- Under extreme process or operating conditions (e.g. very high process temperatures or very high-viscosity media).

**i** To achieve the highest possible measurement accuracy at low flow rates, the installation must protect the sensor from mechanical stress during operation.

To get a representative zero point, ensure that

- any flow in the device is prevented during the adjustment
- the process conditions (e.g. pressure, temperature) are stable and representative

Verification and adjustment cannot be performed if the following process conditions are present:

- Gas pockets

Ensure that the system has been sufficiently flushed with the medium. Repeat flushing can help to eliminate gas pockets

- Thermal circulation

In the event of temperature differences (e.g. between the measuring tube inlet and outlet section), induced flow can occur even if the valves are closed due to thermal circulation in the device

- Leaks at the valves

If the valves are not leak-tight, flow is not sufficiently prevented when determining the zero point

If these conditions cannot be avoided, it is advisable to keep the factory setting for the zero point.

## 6.2 Installing the device

### 6.2.1 Required tools

#### For sensor

For flanges and other process connections: Use a suitable mounting tool.

### 6.2.2 Preparing the measuring instrument

1. Remove all remaining transport packaging.
2. Remove any protective covers or protective caps present from the sensor.
3. Remove stick-on label on the electronics compartment cover.


### 6.2.3 Installing the measuring instrument

#### **⚠ WARNING**

#### **Danger due to improper process sealing!**

- ▶ Ensure that the inside diameters of the gaskets are greater than or equal to that of the process connections and piping.
- ▶ Ensure that the seals and sealing surfaces are clean and undamaged.
- ▶ Secure the seals correctly.

1. Ensure that the direction of the arrow on the nameplate of the sensor matches the flow direction of the medium.
2. Install the measuring instrument or turn the transmitter housing so that the cable entries do not point upwards.

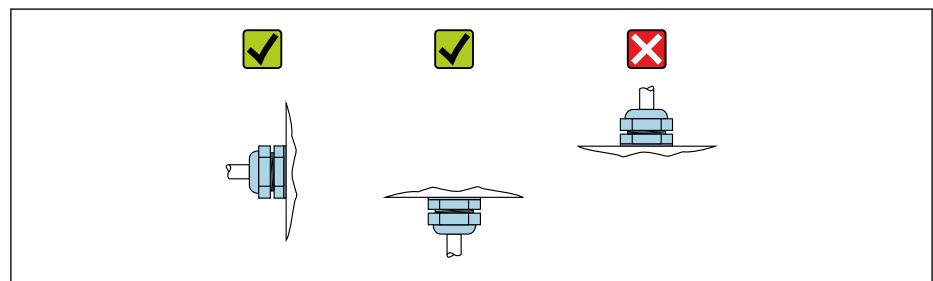

A0029263

## 6.3 Post-installation check

|                                                                                                                                                                                                                                                                                                                                                                   |                          |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------|
| Is the device undamaged (visual inspection)?                                                                                                                                                                                                                                                                                                                      | <input type="checkbox"/> |
| Does the measuring instrument correspond to the measuring point specifications?<br>For example:<br><ul style="list-style-type: none"> <li>■ Process temperature → 97</li> <li>■ Pressure (refer to the "Pressure-temperature ratings" section of the "Technical Information" document).</li> <li>■ Ambient temperature → 96</li> <li>■ Measuring range</li> </ul> | <input type="checkbox"/> |
| Has the correct orientation for the sensor been selected → 19?<br><ul style="list-style-type: none"> <li>■ According to sensor type</li> <li>■ According to medium temperature</li> <li>■ According to medium properties (outgassing, with entrained solids)</li> </ul>                                                                                           | <input type="checkbox"/> |
| Does the arrow on the sensor match the direction of flow of the medium? → 19?                                                                                                                                                                                                                                                                                     | <input type="checkbox"/> |
| Is the tag name and labeling correct (visual inspection)?                                                                                                                                                                                                                                                                                                         | <input type="checkbox"/> |

|                                                                              |                          |
|------------------------------------------------------------------------------|--------------------------|
| Is the device sufficiently protected from precipitation and direct sunlight? | <input type="checkbox"/> |
| Are the securing screw and securing clamp tightened securely?                | <input type="checkbox"/> |

## 7 Electrical connection

### WARNING

**Live parts! Incorrect work performed on the electrical connections can result in an electric shock.**

- ▶ Set up a disconnecting device (switch or power-circuit breaker) to easily disconnect the device from the supply voltage.
- ▶ In addition to the device fuse, include an overcurrent protection unit with max. 16 A in the plant installation.

### 7.1 Electrical safety

In accordance with applicable national regulations.

### 7.2 Connecting requirements

#### 7.2.1 Required tools

- For cable entries: Use corresponding tools
- For securing clamp (on aluminum housing): Allen screw 3 mm
- For securing screw (for stainless steel housing): open-ended wrench 8 mm
- Wire stripper
- When using stranded cables: crimper for wire end ferrule

#### 7.2.2 Requirements for connection cable

The connecting cables provided by the customer must fulfill the following requirements.

##### Permitted temperature range

- The installation guidelines that apply in the country of installation must be observed.
- The cables must be suitable for the minimum and maximum temperatures to be expected.

##### Power supply cable (incl. conductor for the inner ground terminal)

Standard installation cable is sufficient.

##### Signal cable

*Pulse/frequency/switch output*

Standard installation cable is sufficient.

*Modbus RS485*

Shielded twisted-pair cable.



See <https://modbus.org> "MODBUS over Serial Line Specification and Implementation Guide".

##### Cable diameter

- Cable glands supplied:  
M20 × 1.5 with cable  $\varnothing$  6 to 12 mm (0.24 to 0.47 in)
- Spring terminals:  
Wire cross-sections 0.5 to 2.5 mm<sup>2</sup> (20 to 14 AWG)
- With Safety Barrier Promass 100:  
Plug-in screw terminals for wire cross-sections 0.5 to 2.5 mm<sup>2</sup> (20 to 14 AWG)

7.2.3 Terminal assignment

Transmitter


Modbus RS485 connection version

 For use in the non-hazardous area and Zone 2/Div. 2

Order code for "Output", option **M**

Depending on the housing version, the transmitters can be ordered with terminals or device plugs.

| Order code for "Housing"                                                                                                                                                                                                                    | Connection methods available                                                                          |                                                                                                       | Possible options for order code "Electrical connection"                                                                                                                                                                                                   |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                                                                                                                                                                             | Output                                                                                                | Power supply                                                                                          |                                                                                                                                                                                                                                                           |
| Options <b>A, B</b>                                                                                                                                                                                                                         | Terminals                                                                                             | Terminals                                                                                             | <ul style="list-style-type: none"><li>▪ Option <b>A</b>: coupling M20x1</li><li>▪ Option <b>B</b>: thread M20x1</li><li>▪ Option <b>C</b>: thread G ½"</li><li>▪ Option <b>D</b>: thread NPT ½"</li></ul>                                                 |
| Options <b>A, B</b>                                                                                                                                                                                                                         | Device plug<br>→  29 | Terminals                                                                                             | <ul style="list-style-type: none"><li>▪ Option <b>L</b>: plug M12x1 + thread NPT ½"</li><li>▪ Option <b>N</b>: plug M12x1 + coupling M20</li><li>▪ Option <b>P</b>: plug M12x1 + thread G ½"</li><li>▪ Option <b>U</b>: plug M12x1 + thread M20</li></ul> |
| Options <b>A, B, C</b>                                                                                                                                                                                                                      | Device plug<br>→  29 | Device plug<br>→  29 | Option <b>Q</b> : 2 x plug M12x1                                                                                                                                                                                                                          |
| Order code for "Housing": <ul style="list-style-type: none"><li>▪ Option <b>A</b>: compact, coated aluminum</li><li>▪ Option <b>B</b>: compact, hygienic, stainless</li><li>▪ Option <b>C</b>: ultra-compact, hygienic, stainless</li></ul> |                                                                                                       |                                                                                                       |                                                                                                                                                                                                                                                           |

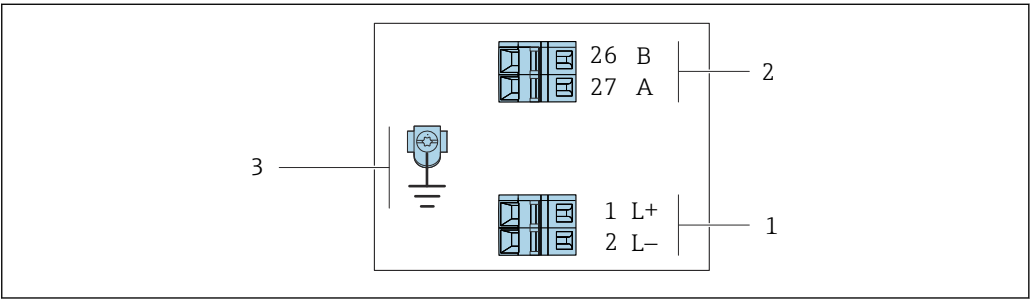

 8 Modbus RS485 terminal assignment, connection version for use in non-hazardous areas and Zone 2/Div. 2

- 1 Power supply: DC 24 V
- 2 Modbus RS485
- 3 Connection for cable shield (IO signals) if present and/or protective ground from the supply voltage if present. Not for option C "Ultra-compact, hygienic, stainless".

| Order code for<br>"Output"                                                                                   | Terminal number |        |              |        |
|--------------------------------------------------------------------------------------------------------------|-----------------|--------|--------------|--------|
|                                                                                                              | Power supply    |        | Output       |        |
|                                                                                                              | 1 (L+)          | 2 (L-) | 26 (B)       | 27 (A) |
| Option <b>M</b>                                                                                              | DC 24 V         |        | Modbus RS485 |        |
| Order code for "Output":<br>Option <b>M</b> : Modbus RS485, for use in non-hazardous areas and Zone 2/Div. 2 |                 |        |              |        |


Modbus RS485 connection version

 For use in the intrinsically safe area. Connection via Safety Barrier Promass 100.

Order code for "Output", option **M**

Depending on the housing version, the transmitters can be ordered with terminals or device plugs.

| Order code for "Housing"                                                                                                                                                                                               | Connection methods available                                                                          |              | Possible options for order code "Electrical connection"                                                                                                                       |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                                                                                                                                                        | Output                                                                                                | Power supply |                                                                                                                                                                               |
| Options A, B                                                                                                                                                                                                           | Terminals                                                                                             | Terminals    | <ul style="list-style-type: none"><li>■ Option A: coupling M20x1</li><li>■ Option B: thread M20x1</li><li>■ Option C: thread G ½"</li><li>■ Option D: thread NPT ½"</li></ul> |
| A, B, C                                                                                                                                                                                                                | Device plug<br>→  29 |              | Option I: plug M12x1                                                                                                                                                          |
| Order code for "Housing": <ul style="list-style-type: none"><li>■ Option A: compact, coated aluminum</li><li>■ Option B: compact, hygienic, stainless</li><li>■ Option C: ultra-compact, hygienic, stainless</li></ul> |                                                                                                       |              |                                                                                                                                                                               |

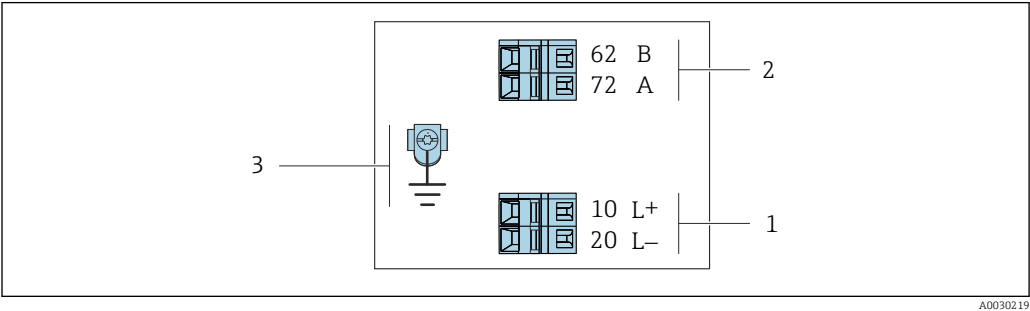


A0030219

-  9 Modbus RS485 terminal assignment, connection version for use in intrinsically safe areas (connection via Safety Barrier Promass 100)
- 1 Intrinsically safe power supply  
2 Modbus RS485  
3 Connection for cable shield (IO signals) if present and/or protective ground from the supply voltage if present. Not for option C "Ultra-compact, hygienic, stainless".

| Order code for "Output"                                                                                                                | 10 (L+)                           | 20 (L-) | 62 (B)                           | 72 (A) |
|----------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------|---------|----------------------------------|--------|
| Option M                                                                                                                               | Intrinsically safe supply voltage |         | Modbus RS485, intrinsically safe |        |
| Order code for "Output":<br>Option M: Modbus RS485, for use in the intrinsically safe area (connection via Safety Barrier Promass 100) |                                   |         |                                  |        |

Safety Barrier Promass 100

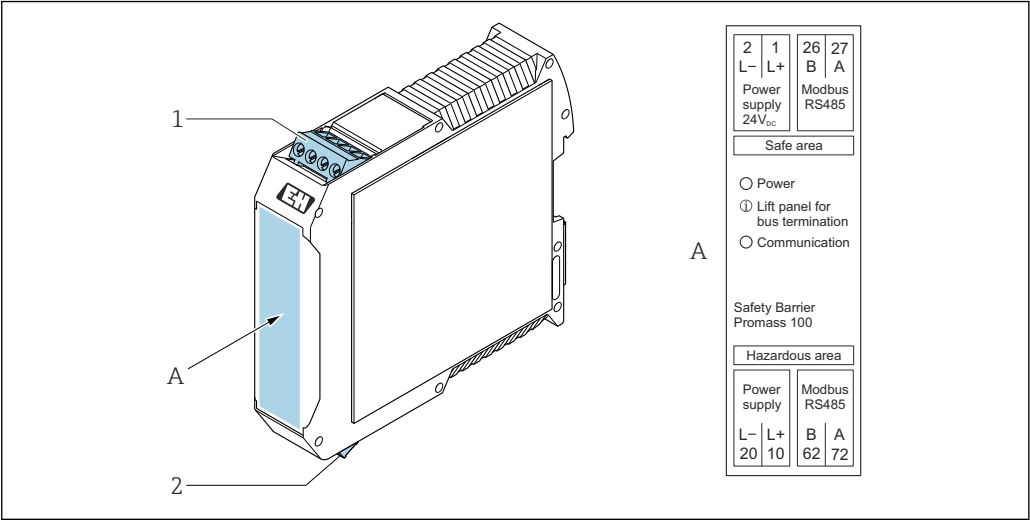

A0030220

10 Safety Barrier Promass 100 with terminals


- 1 Non-hazardous area: Zone 2; Class I, Division 2
- 2 Intrinsically safe area

7.2.4 Pin assignment, device plug

Supply voltage


Promass 100

Device plug for signal transmission with supply voltage (device side), MODBUS RS485 (intrinsically safe)
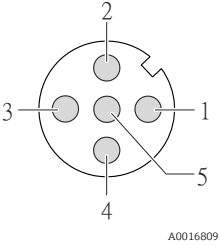
|  | Pin |             | Assignment                         |
|-------------------------------------------------------------------------------------|-----|-------------|------------------------------------|
|                                                                                     | 1   | L+          | Supply voltage, intrinsically safe |
|                                                                                     | 2   | A           | Modbus RS485, intrinsically safe   |
|                                                                                     | 3   | B           |                                    |
|                                                                                     | 4   | L-          | Supply voltage, intrinsically safe |
|                                                                                     | 5   |             | Grounding/shielding                |
| Coding                                                                              |     | Plug/socket |                                    |
|                                                                                     |     | A           | Plug                               |

Device plug for supply voltage (device side), MODBUS RS485 (not intrinsically safe)

 For use in the non-hazardous area and Zone 2/Div. 2.
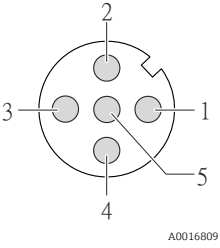
|  | Pin |             | Assignment          |
|-------------------------------------------------------------------------------------|-----|-------------|---------------------|
|                                                                                     | 1   | L+          | DC 24 V             |
|                                                                                     | 2   |             | Not used            |
|                                                                                     | 3   |             | Not used            |
|                                                                                     | 4   | L-          | DC 24 V             |
|                                                                                     | 5   |             | Grounding/shielding |
| Coding                                                                              |     | Plug/socket |                     |
|                                                                                     |     | A           | Plug                |


## Signal transmission

Promass

Device plug for signal transmission (device side), MODBUS RS485 (not intrinsically safe)



For use in the non-hazardous area and Zone 2/Div. 2.
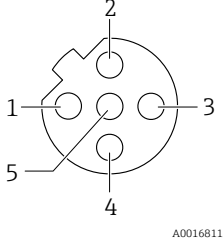
|  | Pin    | Assignment |                     |
|-----------------------------------------------------------------------------------|--------|------------|---------------------|
|                                                                                   | 1      |            | Not used            |
|                                                                                   | 2      | A          | Modbus RS485        |
|                                                                                   | 3      |            | Not used            |
|                                                                                   | 4      | B          | Modbus RS485        |
|                                                                                   | 5      |            | Grounding/shielding |
|                                                                                   | Coding |            | Plug/socket         |
|                                                                                   | B      |            | Socket              |

## 7.2.5 Shielding and grounding

### Shielding and grounding concept

1. Maintain electromagnetic compatibility (EMC).
2. Take explosion protection into consideration.
3. Pay attention to the protection of persons.
4. Comply with national installation regulations and guidelines.
5. Observe cable specifications .
6. Keep the stripped and twisted lengths of cable shield to the ground terminal as short as possible.
7. Shield cables fully.

### Grounding of the cable shield

#### NOTICE

**In systems without potential matching, the multiple grounding of the cable shield causes mains frequency equalizing currents!**

Damage to the bus cable shield.

- Only ground the bus cable shield to either the local ground or the protective ground at one end.
- Insulate the shield that is not connected.

To comply with EMC requirements:

1. Ensure the cable shield is grounded to the potential matching line at multiple points.
2. Connect every local ground terminal to the potential matching line.

## 7.2.6 Preparing the device

#### NOTICE

**Insufficient sealing of the housing!**

Operational reliability of the measuring device could be compromised.

- Use suitable cable glands corresponding to the degree of protection.

1. Remove dummy plug if present.
2. If the measuring instrument is supplied without cable glands:  
Provide suitable cable gland for corresponding connecting cable.

3. If the measuring instrument is supplied with cable glands:  
Observe requirements for connecting cables → 26.

## 7.3 Connecting the device

### NOTICE


#### An incorrect connection compromises electrical safety!

- ▶ Only properly trained specialist staff may perform electrical connection work.
- ▶ Observe applicable federal/national installation codes and regulations.
- ▶ Comply with local workplace safety regulations.
- ▶ Always connect the protective ground cable ⊕ before connecting additional cables.
- ▶ When using in potentially explosive atmospheres, observe the information in the device-specific Ex documentation.

### 7.3.1 Connecting the transmitter

The connection of the transmitter depends on the following order codes:


- Housing version: compact or ultra-compact
- Connection version: device plug or terminals

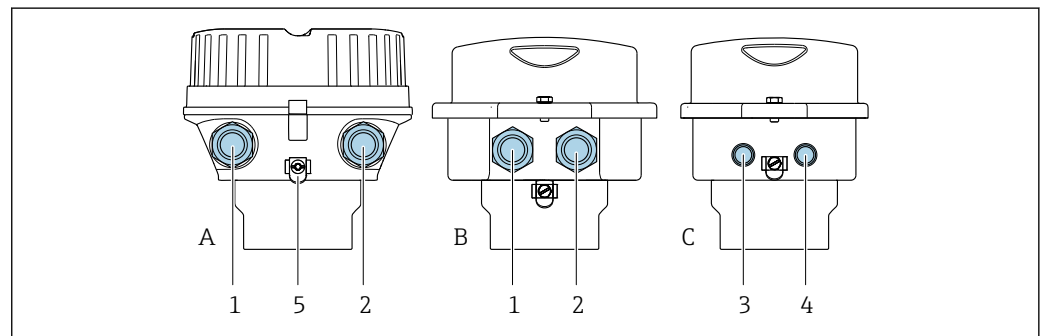

A0016924

11 Housing versions and connection versions

- A Housing version: compact, coated, aluminum  
 B Housing version: compact, hygienic, stainless  
 C Housing version: ultra-compact, hygienic, stainless  
 1 Cable entry or device plug for signal transmission  
 2 Cable entry or device plug for supply voltage  
 3 Device plug for signal transmission  
 4 Device plug for supply voltage  
 5 Ground terminal. Cable lugs, pipe clips or ground disks are recommended for optimization of the grounding/shielding.

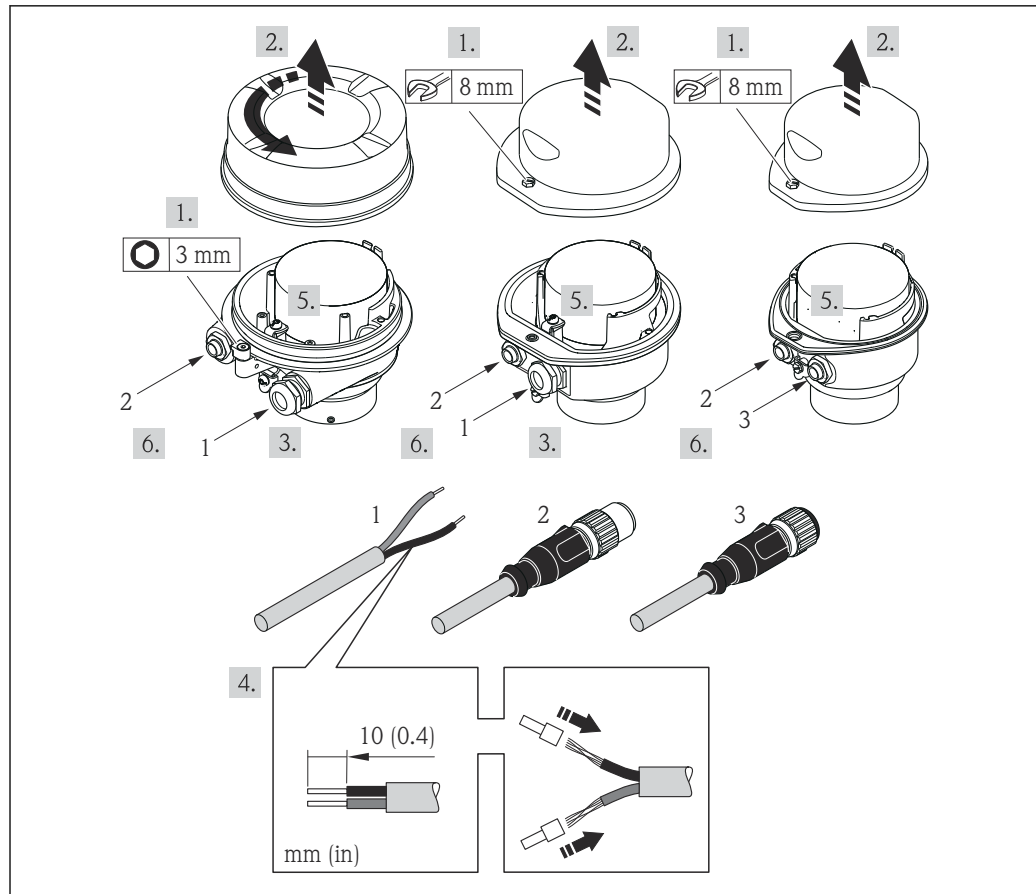

A0017844

12 Device versions with connection examples

- 1 Cable
- 2 Device plug for signal transmission
- 3 Device plug for supply voltage

For device version with device plug: follow step 6 only.

1. Depending on the housing version, loosen the securing clamp or fixing screw of the housing cover.
2. Depending on the housing version, unscrew or open the housing cover.
3. Push the cable through the cable entry. To ensure tight sealing, do not remove the sealing ring from the cable entry.
4. Strip the cable and cable ends. In the case of stranded cables, also fit wire end ferrules.
5. Connect the cable in accordance with the terminal assignment or the device plug pin assignment.
6. Depending on the device version, tighten the cable glands or insert the device plug and tighten.
7. Enable the terminating resistor if applicable.
8. **NOTICE**

**Housing degree of protection voided due to insufficient sealing of the housing.**


- Screw in the screw without using any lubricant. The threads on the cover are coated with a dry lubricant.

Reassemble the transmitter in the reverse order.

### 7.3.2 Connecting Safety Barrier Promass 100

In the case of the device version with Modbus RS485, intrinsically safe, the transmitter must be connected to Safety Barrier Promass 100.

1. Strip the cable ends. In the case of stranded cables, also fit wire end ferrules.
2. Connect the cable according to the terminal assignment → 27.
3. Where applicable, enable the terminating resistor in Safety Barrier Promass 100 → 34.

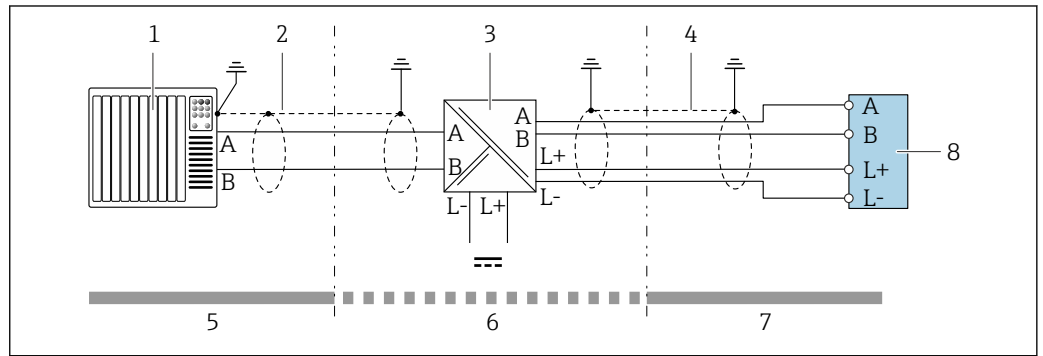

13 Electrical connection between the transmitter and Safety Barrier Promass 100

- 1 Automation system (e.g. PLC)
- 2 Observe cable specification → 26
- 3 Safety Barrier Promass 100: Terminal assignment → 29
- 4 Observe cable specification
- 5 Non-hazardous area
- 6 Non-hazardous area and Zone 2/Div. 2
- 7 Intrinsically safe area
- 8 Transmitter: Terminal assignment → 27

## 7.4 Potential equalization

### 7.4.1 Requirements


For potential equalization:

- Pay attention to in-house grounding concepts
- Take account of operating conditions like the pipe material and grounding
- Connect the medium, sensor and transmitter to the same electric potential
- Use a ground cable with a minimum cross-section of 6 mm<sup>2</sup> (10 AWG) and a cable lug for potential equalization connections

## 7.5 Special connection instructions

### 7.5.1 Connection examples

#### Pulse output/frequency output/switch output

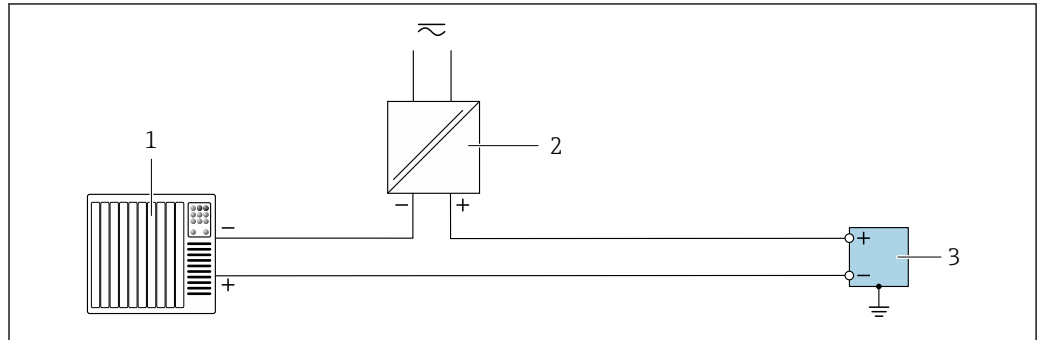


A0055855

14 Connection example for pulse output/frequency output/switch output (passive)

- 1 Automation system with pulse input/frequency input/switch input (e.g. PLC)
- 2 Power supply
- 3 Transmitter with pulse output/frequency output/switch output (passive)

#### Modbus RS485

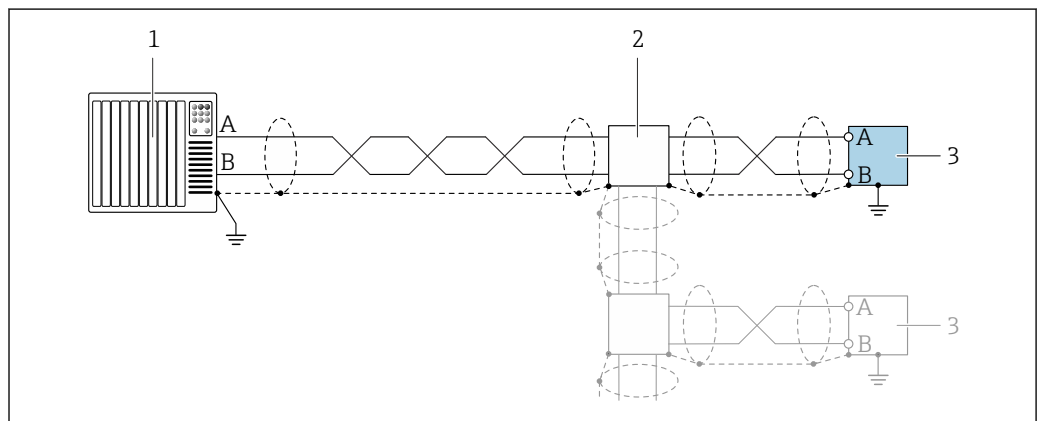

A0055863

15 Connection example for Modbus RS485

- 1 Automation system with Modbus master (e.g. PLC)
- 2 Optional distribution box
- 3 Transmitter with Modbus RS485


## 7.6 Hardware settings

### 7.6.1 Activating the terminating resistor

#### Modbus RS485


To avoid incorrect communication transmission caused by impedance mismatch, connect the Modbus RS485 cable correctly to the start and end of the bus segment.

*If the transmitter is used in the non-hazardous area or Zone 2/Div. 2*

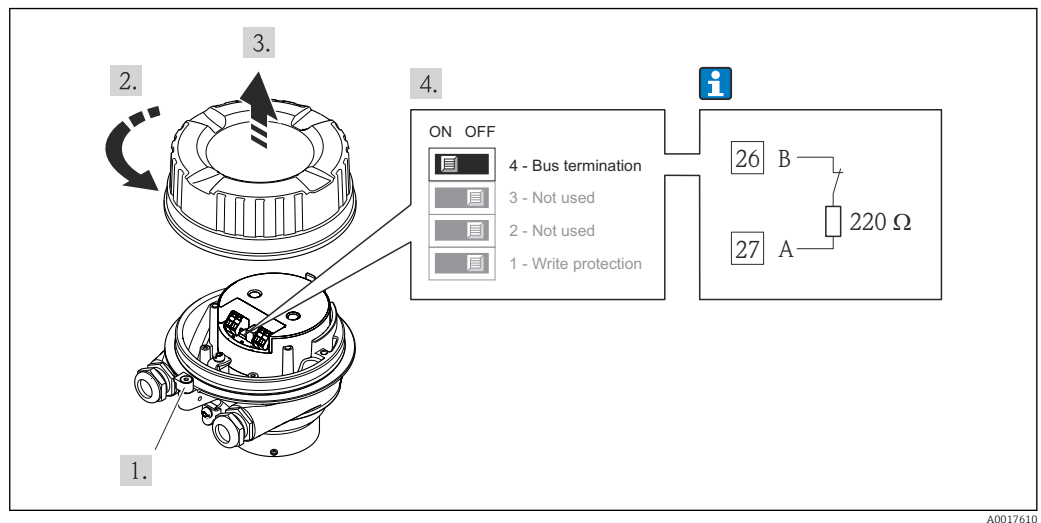

16 Terminating resistor can be enabled via DIP switch on the electronics module

*If the transmitter is used in the intrinsically safe area*

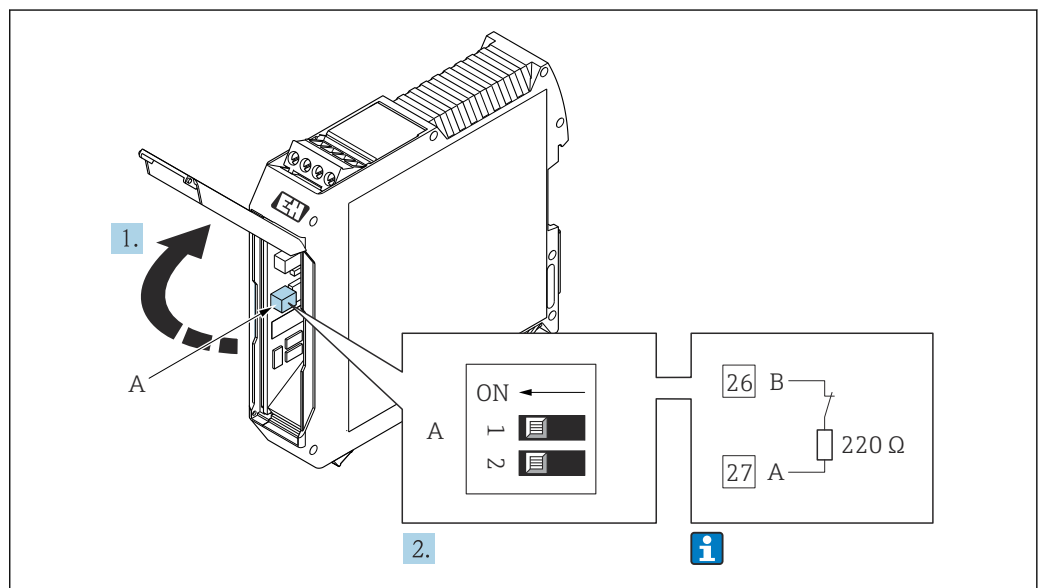

17 Terminating resistor can be enabled via DIP switch in the Safety Barrier Promass 100


## 7.7 Ensuring the degree of protection

The measuring instrument fulfills all the requirements for the degree of protection IP66/67, Type 4X enclosure.

To ensure degree of protection IP66/67, Type 4X enclosure, carry out the following steps after making the electrical connection:

1. Check that the housing seals are clean and fitted correctly.
2. Dry, clean or replace the seals if necessary.
3. Tighten all housing screws and screw covers.
4. Firmly tighten the cable glands.

5. To ensure that moisture does not enter the cable entry:  
Route the cable so that it loops down before the cable entry ("water trap").

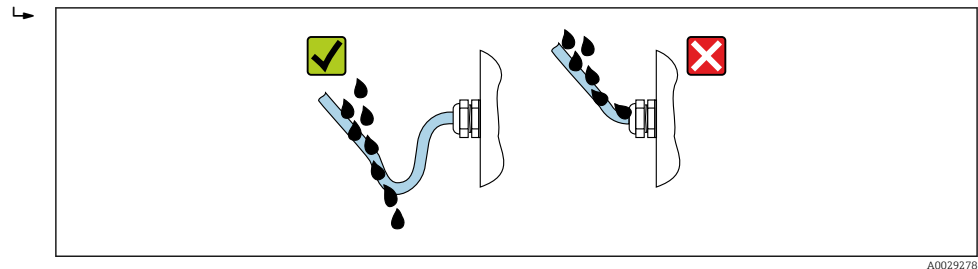


6. The supplied cable glands and plastic dummy plugs used for the threaded cable entries do not ensure degree of protection IP66/67, Type 4X enclosure. To achieve this degree of protection, cable glands and plastic dummy plugs that are not used must be replaced by threaded dummy plugs with the degree of protection IP66/67, Type 4X enclosure.

## 7.8 Post-connection check

|                                                                                                                                                                                                                                                                                                                            |                          |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------|
| Are the device and cable undamaged (visual inspection)?                                                                                                                                                                                                                                                                    | <input type="checkbox"/> |
| Do the cables used meet the requirements → 26?                                                                                                                                                                                                                                                                             | <input type="checkbox"/> |
| Are the mounted cables strain-relieved and fixed securely in place?                                                                                                                                                                                                                                                        | <input type="checkbox"/> |
| Are all cable glands installed, securely tightened and leak-tight? Cable run with "water trap" → 35?                                                                                                                                                                                                                       | <input type="checkbox"/> |
| Depending on the device version:<br>Are all the device plugs firmly tightened → 31?                                                                                                                                                                                                                                        | <input type="checkbox"/> |
| <ul style="list-style-type: none"> <li>Does the supply voltage match the specifications on the transmitter nameplate → 91?</li> <li>For device version with Modbus RS485 intrinsically safe: does the supply voltage match the specifications on the nameplate of the Safety Barrier Promass 100 → 91?</li> </ul>          | <input type="checkbox"/> |
| Is the terminal assignment → 27 or the device plug pin assignment → 29 correct?                                                                                                                                                                                                                                            | <input type="checkbox"/> |
| If supply voltage is present: <ul style="list-style-type: none"> <li>Is the power LED on the electronics module of the transmitter lit green → 11?</li> <li>For device version with Modbus RS485 intrinsically safe, if supply voltage is present, is the power LED on the Safety Barrier Promass 100 → 11 lit?</li> </ul> | <input type="checkbox"/> |
| Depending on the device version: <ul style="list-style-type: none"> <li>Have the fixing screws been tightened with the correct tightening torque?</li> <li>Is the securing clamp securely tightened?</li> </ul>                                                                                                            | <input type="checkbox"/> |

## 8 Operation options

### 8.1 Overview of operation options

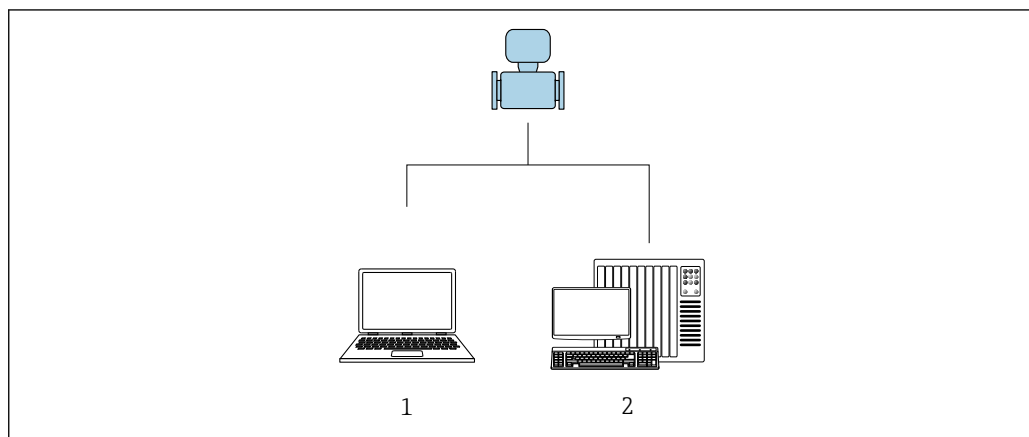


A0017760

- 1 Computer with "FieldCare" or "DeviceCare" operating tool via Commubox FXA291 and service interface
- 2 Automation system (e.g. PLC)

## 8.2 Structure and function of the operating menu

### 8.2.1 Structure of the operating menu

 For an overview of the operating menu for experts: see the "Description of Device Parameters" document supplied with the device →  107

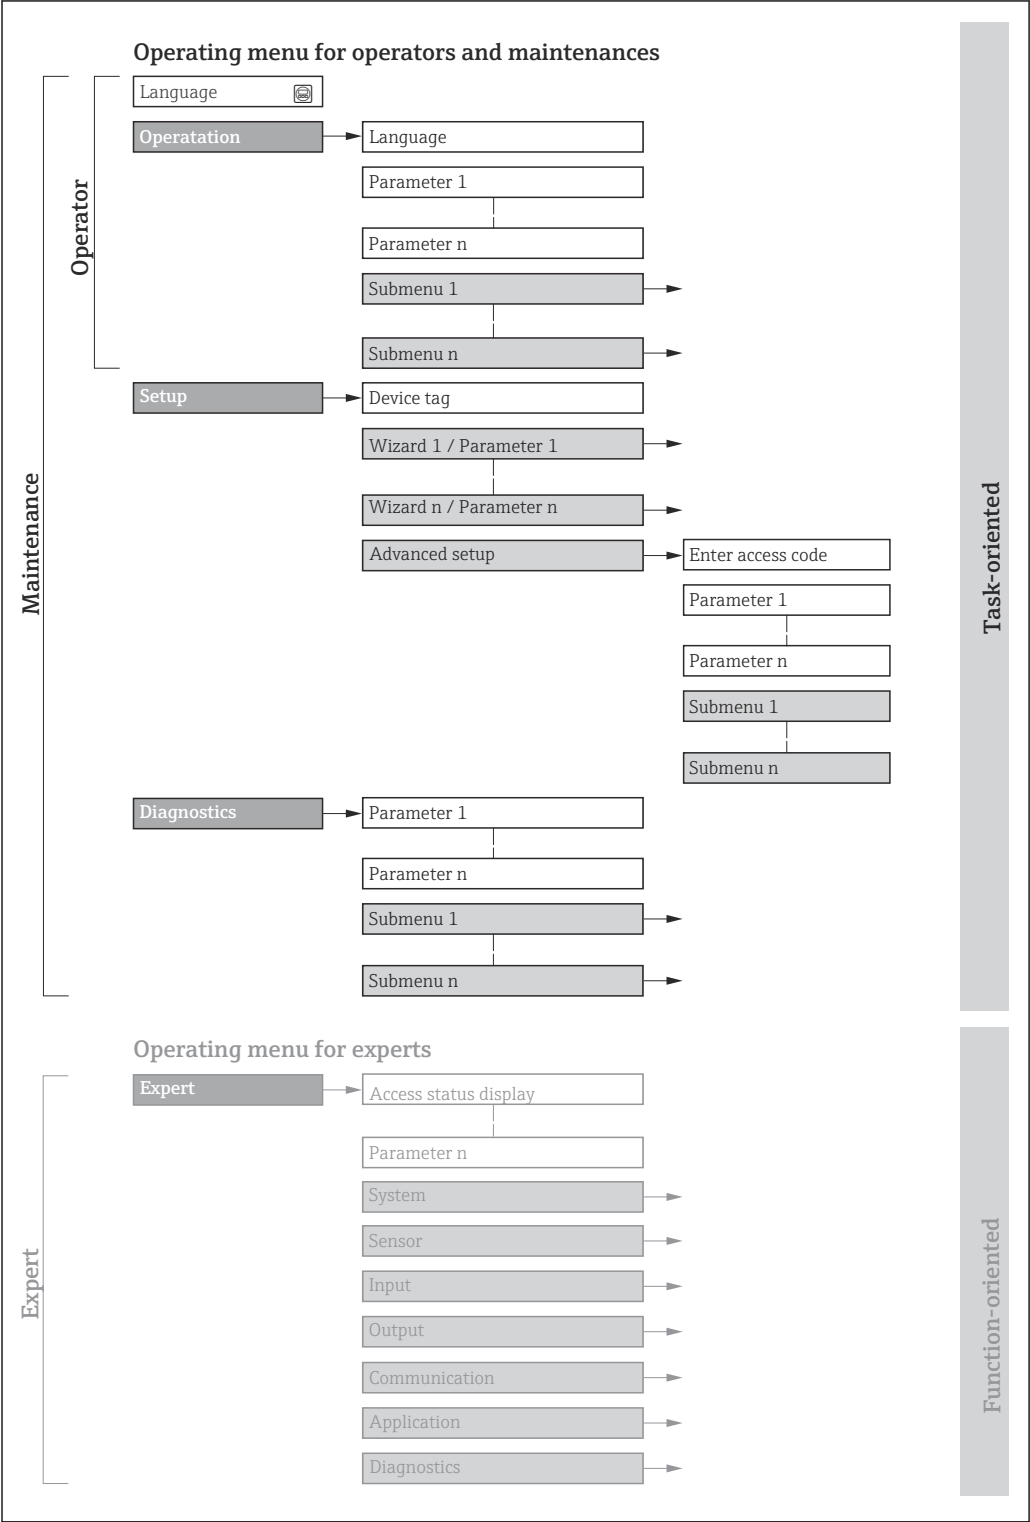

 18 Schematic structure of the operating menu

A0018237-EN

## 8.2.2 Operating philosophy


The individual parts of the operating menu are assigned to certain user roles (e.g. operator, maintenance etc.). Each user role contains typical tasks within the device life cycle.

| Menu/parameter |                   | User role and tasks                                                                                                                                                                                                                                                                                                                                              | Content/meaning                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|----------------|-------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Language       | Task-oriented     | <b>Role "Operator", "Maintenance"</b><br>Tasks during operation:<br>Reading measured values                                                                                                                                                                                                                                                                      | Defining the operating language                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Operation      |                   |                                                                                                                                                                                                                                                                                                                                                                  | <ul style="list-style-type: none"> <li>Defining the operating language</li> <li>Resetting and controlling totalizers</li> <li>Resetting and controlling totalizers</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Setup          |                   | <b>"Maintenance" role</b><br>Commissioning: <ul style="list-style-type: none"> <li>Configuring the measurement</li> <li>Configuring the communication interface</li> </ul>                                                                                                                                                                                       | Submenus for fast commissioning: <ul style="list-style-type: none"> <li>Configuring the system units</li> <li>Defining the medium</li> <li>Configuring the digital communication interface</li> <li>Configuring the operational display</li> <li>Configuring the low flow cut off</li> <li>Configuring the detection of partially filled and empty pipes</li> </ul> Advanced setup <ul style="list-style-type: none"> <li>For more customized configuration of the measurement (adaptation to special measuring conditions)</li> <li>Configuring totalizers</li> <li>Administration (define access code, reset measuring instrument)</li> </ul>                                                                                                                      |
| Diagnostics    |                   | <b>"Maintenance" role</b><br>Troubleshooting: <ul style="list-style-type: none"> <li>Diagnostics and elimination of process and device errors</li> <li>Measured value simulation</li> </ul>                                                                                                                                                                      | Contains all parameters for error detection and analyzing process and device errors: <ul style="list-style-type: none"> <li>Diagnostics list<br/>Contains up to 5 currently pending diagnostic messages.</li> <li>Event logbook<br/>Contains event messages that have occurred.</li> <li>Device information<br/>Contains information for identifying the device.</li> <li>Measured values<br/>Contains all current measured values.</li> <li>Heartbeat Technology<br/>The functionality of the device is checked on demand and the verification results are documented.</li> <li>Simulation<br/>Used to simulate measured values or output values.</li> <li>Testpoints</li> </ul>                                                                                    |
| Expert         | Function-oriented | Tasks that require detailed knowledge of the function of the device: <ul style="list-style-type: none"> <li>Commissioning measurements under difficult conditions</li> <li>Optimal adaptation of the measurement to difficult conditions</li> <li>Detailed configuration of the communication interface</li> <li>Error diagnostics in difficult cases</li> </ul> | Contains all the parameters of the device and makes it possible to access these parameters directly using an access code. The structure of this menu is based on the function blocks of the device: <ul style="list-style-type: none"> <li>System<br/>Contains all higher-level device parameters that do not affect measurement or measured value communication.</li> <li>Sensor<br/>Configuring the measurement.</li> <li>Communication<br/>Configuring the digital communication interface.</li> <li>Application<br/>Configuring the functions that go beyond the actual measurement (e.g. totalizer).</li> <li>Diagnostics<br/>Error detection and analysis of process and device errors and for device simulation and the Heartbeat Technology menu.</li> </ul> |

### 8.3     Displaying the measured values via the local display (optionally available)

#### 8.3.1     Operational display

 The local display is optionally available:  
Order code for "Display; operation", option B "4-line, illuminated; via communication".

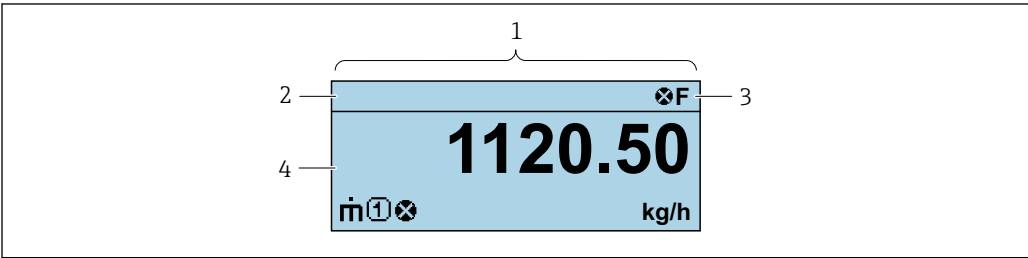

- 1     Operational display
- 2     Tag name
- 3     Status area
- 4     Display area for measured values (4-line)


#### Status area

The following symbols appear in the status area of the operational display at the top right:

- Status signals
  - **F**: Failure
  - **C**: Function check
  - **S**: Out of specification
  - **M**: Maintenance required
- Diagnostic behavior
  - : Alarm
  - : Warning
  - : Locking (the device is locked via the hardware )
  - : Communication (communication via remote operation is active)

#### Display area

In the display area, each measured value is prefaced by certain symbol types for further description:

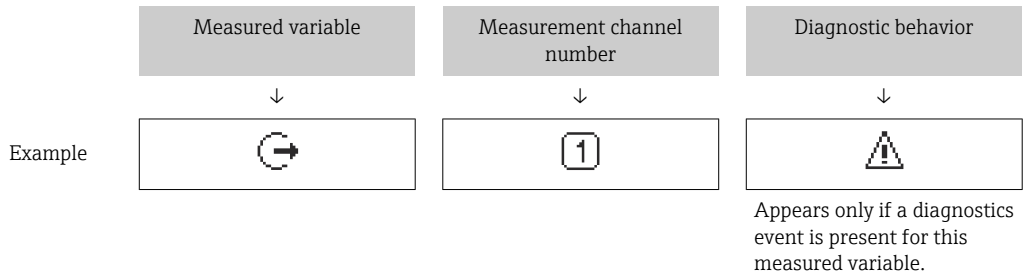

#### Measured variables

| Symbol                                                                              | Meaning                                                                                       |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------|
|  | Mass flow                                                                                     |
|  | <ul style="list-style-type: none"><li>■ Volume flow</li><li>■ Corrected volume flow</li></ul> |

|                                                                                   |                                                                                                                                                                                     |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <ul style="list-style-type: none"> <li>▪ Density</li> <li>▪ Reference density</li> </ul>                                                                                            |
|  | Temperature                                                                                                                                                                         |
|  | Totalizer<br> The measurement channel number indicates which of the three totalizers is displayed. |
|  | Output<br>                                                                                         |

#### Measurement channel numbers

| Symbol                                                                                                                                            | Meaning                    |
|---------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------|
|                                                                  | Measurement channel 1 to 4 |
| The measurement channel number is displayed only if more than one channel is present for the same measured variable type (e.g. Totalizer 1 to 3). |                            |

#### Diagnostic behavior

The diagnostic behavior pertains to a diagnostic event that is relevant to the displayed measured variable.  
For information on the symbols

 The number and display format of the measured values can only be configured via the control system.

### 8.3.2 User roles and related access authorization

The two user roles "Operator" and "Maintenance" have different write access to the parameters if the customer defines a user-specific access code. This protects the device configuration from unauthorized access .

#### Defining access authorization for user roles

An access code is not yet defined when the device is delivered from the factory. Access authorization (read and write access) to the device is not restricted and corresponds to the "Maintenance" user role.

- Define the access code.
  - ↳ The "Operator" user role is redefined in addition to the "Maintenance" user role. Access authorization differs for the two user roles.

#### Access authorization to parameters: "Maintenance" user role

| Access code status                                         | Read access | Write access    |
|------------------------------------------------------------|-------------|-----------------|
| An access code has not yet been defined (factory setting). | ✓           | ✓               |
| After an access code has been defined.                     | ✓           | ✓ <sup>1)</sup> |

1) The user only has write access after entering the access code.

Access authorization to parameters: "Operator" user role

| Access code status                     | Read access | Write access |
|----------------------------------------|-------------|--------------|
| After an access code has been defined. | ✓           | – 1)         |

1) Despite the defined access code, certain parameters can always be modified and thus are excluded from the write protection as they do not affect the measurement: write protection via access code


 The user role with which the user is currently logged on is indicated by the .  
Navigation path:

8.4 Access to the operating menu via the operating tool

8.4.1 Connecting the operating tool

Via service interface (CDI)

Modbus RS485

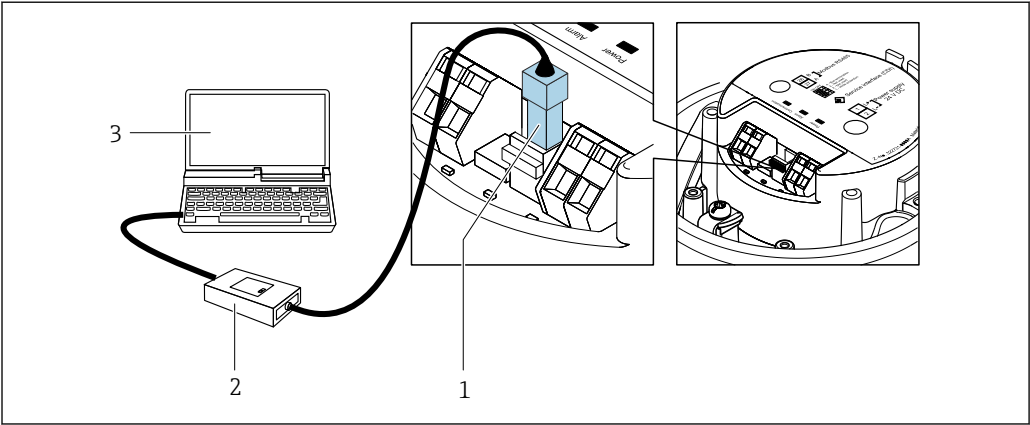

- 1 Service interface (CDI) of the measuring instrument
- 2 Commubox FXA291
- 3 Computer with FieldCare operating tool with COM DTM "CDI Communication FXA291"

8.4.2 FieldCare

Function range

FDT-based (Field Device Technology) plant asset management tool from Endress+Hauser. It can configure all smart field units in a system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.

Access is via:  
CDI service interface

Typical functions:

- Transmitter parameter configuration
- Loading and saving of device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook



■ Operating Instructions BA00027S

■ Operating Instructions BA00059S



Source for device description files → 44

### 8.4.3 DeviceCare

#### Function range

Tool for connecting and configuring Endress+Hauser field devices.

The fastest way to configure Endress+Hauser field devices is with the dedicated "DeviceCare" tool. Together with the device type managers (DTMs) it presents a convenient, comprehensive solution.



Innovation brochure IN01047S



Source for device description files → 44

## 9 System integration

### 9.1 Overview of device description files

#### 9.1.1 Current version data for the device

|                                  |          |                                                                                                                                                                                                                 |
|----------------------------------|----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Firmware version                 | 01.03.zz | <ul style="list-style-type: none"> <li>■ On the title page of the manual</li> <li>■ On the transmitter nameplate</li> <li>■ Firmware version<br/>Diagnostics → Device information → Firmware version</li> </ul> |
| Release date of firmware version | 10.2014  | ---                                                                                                                                                                                                             |

 For an overview of the various firmware versions for the device

#### 9.1.2 Operating tools

The suitable device description file for the individual operating tools is listed in the table below, along with information on where the file can be acquired.

|            |                                                                                                                                                                                                            |
|------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| FieldCare  | <ul style="list-style-type: none"> <li>■ <a href="http://www.endress.com">www.endress.com</a> → Downloads area</li> <li>■ USB stick (contact Endress+Hauser)</li> <li>■ E-mail → Downloads area</li> </ul> |
| DeviceCare | <ul style="list-style-type: none"> <li>■ <a href="http://www.endress.com">www.endress.com</a> → Downloads area</li> <li>■ E-mail → Downloads area</li> </ul>                                               |

## 9.2 ModbusRS485 information

### 9.2.1 Function codes

Function codes are used to define which read or write action is carried out via the Modbus protocol. The measuring instrument supports the following function codes:

| Code | Name                  | Description                                                                                                                                                                                                                                                                                                                                                                                                         | Application                                                                                 |
|------|-----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|
| 03   | Read holding register | <p>The controller reads one or more Modbus registers of the measuring instrument.<br/>A maximum of 125 consecutive registers can be read with one telegram: 1 register = 2 bytes</p> <p> The measuring instrument does not make a distinction between function codes 03 and 04; these codes therefore yield the same result.</p> | <p>Read device parameters with read and write access</p> <p>Example:<br/>Read mass flow</p> |
| 04   | Read input register   | <p>The controller reads one or more Modbus registers of the measuring instrument.<br/>A maximum of 125 consecutive registers can be read with one telegram: 1 register = 2 bytes</p> <p> The measuring instrument does not make a distinction between function codes 03 and 04; these codes therefore yield the same result.</p> | <p>Read device parameters with read access</p> <p>Example:<br/>Read totalizer value</p>     |

| Code | Name                          | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Application                                                                                             |
|------|-------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|
| 06   | Write single registers        | Controller writes a new value to <b>one</b> Modbus register of the measuring instrument.<br> Function code 16 can be used to write multiple registers with a single telegram.                                                                                                                                                                                                                                     | Writing only 1 device parameter<br>Example: Reset totalizer                                             |
| 08   | Diagnostics                   | Controller checks the communication connection to the measuring instrument.<br>The following "Diagnostics codes" are supported:<br>▪ Sub-function 00 = return query data (loopback test)<br>▪ Sub-function 02 = return diagnostics register                                                                                                                                                                                                                                                        |                                                                                                         |
| 16   | Write multiple registers      | Controller writes a new value to multiple Modbus registers of the measuring instrument.<br>A maximum of 120 consecutive registers can be written with one telegram.<br> If the required device parameters are not available as a group, yet must nevertheless be addressed with a single telegram, use Modbus data map →  47 | Writing multiple device parameters<br>Example:<br>▪ Mass flow unit<br>▪ Mass unit                       |
| 23   | Read/Write multiple registers | Controller reads and writes a maximum of 118 Modbus registers of the measuring instrument simultaneously with one telegram.<br>Write access is executed <b>before</b> read access.                                                                                                                                                                                                                                                                                                                 | Writing and reading multiple device parameters<br>Example:<br>▪ Read mass flow<br>▪ Reset the totalizer |

 Broadcast messages are only allowed with function codes 06, 16 and 23.

### 9.2.2 Register information

 For an overview of device parameters and their corresponding Modbus register information, refer to the "ModbusRS485 section in the "Description of Device Parameters" documentation.register information →  44.

### 9.2.3 Response time

Response time of the measuring instrument to the request telegram of the Modbus master: typically 3 to 5 ms

### 9.2.4 Data types

The measuring device supports the following data types:

| <b>FLOAT</b> (floating point number IEEE 754)<br>Data length = 4 bytes (2 registers) |          |          |          |
|--------------------------------------------------------------------------------------|----------|----------|----------|
| Byte 3                                                                               | Byte 2   | Byte 1   | Byte 0   |
| SEEEEEEE                                                                             | EMMMMMMM | MMMMMMMM | MMMMMMMM |
| S = sign, E = exponent, M = mantissa                                                 |          |          |          |

|                                                      |                              |
|------------------------------------------------------|------------------------------|
| <b>INTEGER</b><br>Data length = 2 bytes (1 register) |                              |
| Byte 1                                               | Byte 0                       |
| Most significant byte (MSB)                          | Least significant byte (LSB) |

|                                                                                                                                                     |         |     |        |                              |
|-----------------------------------------------------------------------------------------------------------------------------------------------------|---------|-----|--------|------------------------------|
| <b>STRING</b><br>Data length = depends on the device parameter, e.g. presentation of a device parameter with a data length = 18 bytes (9 registers) |         |     |        |                              |
| Byte 17                                                                                                                                             | Byte 16 | ... | Byte 1 | Byte 0                       |
| Most significant byte (MSB)                                                                                                                         |         | ... |        | Least significant byte (LSB) |

### 9.2.5 Byte transmission sequence

Byte addressing, i.e. the transmission sequence of the bytes, is not specified in the Modbus specification. For this reason, it is important to coordinate or match the addressing method between the master and slave during commissioning. This can be configured in the measuring device using the **Byte order** parameter.

The bytes are transmitted depending on the selection in the **Byte order** parameter:

|                                                           |                      |                      |                      |                      |
|-----------------------------------------------------------|----------------------|----------------------|----------------------|----------------------|
| <b>FLOAT</b>                                              |                      |                      |                      |                      |
|                                                           | Sequence             |                      |                      |                      |
| Options                                                   | 1.                   | 2.                   | 3.                   | 4.                   |
| 1 - 0 - 3 - 2 *                                           | Byte 1<br>(MMMMMMMM) | Byte 0<br>(MMMMMMMM) | Byte 3<br>(SEEEEEEE) | Byte 2<br>(EMMMMMMM) |
| 0 - 1 - 2 - 3                                             | Byte 0<br>(MMMMMMMM) | Byte 1<br>(MMMMMMMM) | Byte 2<br>(EMMMMMMM) | Byte 3<br>(SEEEEEEE) |
| 2 - 3 - 0 - 1                                             | Byte 2<br>(EMMMMMMM) | Byte 3<br>(SEEEEEEE) | Byte 0<br>(MMMMMMMM) | Byte 1<br>(MMMMMMMM) |
| 3 - 2 - 1 - 0                                             | Byte 3<br>(SEEEEEEE) | Byte 2<br>(EMMMMMMM) | Byte 1<br>(MMMMMMMM) | Byte 0<br>(MMMMMMMM) |
| * = factory setting, S = sign, E = exponent, M = mantissa |                      |                      |                      |                      |

|                                                                                |                 |                 |
|--------------------------------------------------------------------------------|-----------------|-----------------|
| <b>INTEGER</b>                                                                 |                 |                 |
|                                                                                | Sequence        |                 |
| Options                                                                        | 1.              | 2.              |
| 1 - 0 - 3 - 2 *<br>3 - 2 - 1 - 0                                               | Byte 1<br>(MSB) | Byte 0<br>(LSB) |
| 0 - 1 - 2 - 3<br>2 - 3 - 0 - 1                                                 | Byte 0<br>(LSB) | Byte 1<br>(MSB) |
| * = factory setting, MSB = most significant byte, LSB = least significant byte |                 |                 |

|                                                                                                        |                  |         |     |        |                 |
|--------------------------------------------------------------------------------------------------------|------------------|---------|-----|--------|-----------------|
| <b>STRING</b><br>Presentation taking the example of a device parameter with a data length of 18 bytes. |                  |         |     |        |                 |
|                                                                                                        | Sequence         |         |     |        |                 |
| Options                                                                                                | 1.               | 2.      | ... | 17.    | 18.             |
| 1 - 0 - 3 - 2 *<br>3 - 2 - 1 - 0                                                                       | Byte 17<br>(MSB) | Byte 16 | ... | Byte 1 | Byte 0<br>(LSB) |

|                                                                                |         |                  |     |                 |        |
|--------------------------------------------------------------------------------|---------|------------------|-----|-----------------|--------|
| 0 - 1 - 2 - 3<br>2 - 3 - 0 - 1                                                 | Byte 16 | Byte 17<br>(MSB) | ... | Byte 0<br>(LSB) | Byte 1 |
| * = factory setting, MSB = most significant byte, LSB = least significant byte |         |                  |     |                 |        |

## 9.2.6 Modbus data map

### Function of the Modbus data map

To ensure that retrieving device parameters via Modbus RS485 is no longer limited to individual device parameters or a group of consecutive device parameters, the measuring instrument provides a special memory area: the Modbus data map for a maximum of 16 device parameters.

Grouping of device parameters is flexible and the Modbus master can read or write to the entire data block simultaneously with a single request telegram.

### Structure of the Modbus data map

The Modbus data map consists of two data sets:

- **Scan list: Configuration area**  
The device parameters to be grouped are defined in a list by entering their ModbusRS485 register addresses in the list.
- **Data area**  
The measuring instrument reads out the register addresses entered in the scan list cyclically and writes the associated device data (values) to the data area.



For an overview of device parameters and their corresponding Modbus register information, refer to the "ModbusRS485 section in the "Description of Device Parameters" documentation. register information → 44.

### Scan list configuration

For configuration, the ModbusRS485 register addresses of the device parameters to be grouped must be entered in the scan list. Please note the following basic requirements of the scan list:

|                                    |                                                                                                                                                                                                |
|------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Max. entries</b>                | 16 device parameters                                                                                                                                                                           |
| <b>Supported device parameters</b> | Only parameters with the following characteristics are supported: <ul style="list-style-type: none"> <li>■ Access type: read or write access</li> <li>■ Data type: float or integer</li> </ul> |

### Configuration of the scan list via FieldCare or DeviceCare

Carried out using the operating menu of the measuring instrument:  
Expert → Communication → Modbus data map → Scan list register 0 to 15

| Scan list |                        |
|-----------|------------------------|
| No.       | Configuration register |
| 0         | Scan list register 0   |
| ...       | ...                    |
| 15        | Scan list register 15  |

*Configuration of the scan list via Modbus RS485*

Carried out using register addresses 5001-5016

| Scan list |                       |           |                        |
|-----------|-----------------------|-----------|------------------------|
| No.       | Modbus RS485 register | Data type | Configuration register |
| 0         | 5001                  | Integer   | Scan list register 0   |
| ...       | ...                   | Integer   | ...                    |
| 15        | 5016                  | Integer   | Scan list register 15  |

**Reading out data via Modbus RS485**

The Modbus master accesses the data area of the Modbus data map to read out the current values of the device parameters defined in the scan list.

|                            |                                  |
|----------------------------|----------------------------------|
| Master access to data area | Via register addresses 5051-5081 |
|----------------------------|----------------------------------|

| Data area                       |                       |                           |               |            |
|---------------------------------|-----------------------|---------------------------|---------------|------------|
| Device parameter value          | Modbus RS485 register |                           | Data type*    | Access**   |
|                                 | Start register        | End register (Float only) |               |            |
| Value of scan list register 0   | 5051                  | 5052                      | Integer/float | Read/write |
| Value of scan list register 1   | 5053                  | 5054                      | Integer/float | Read/write |
| Value of scan list register ... | ...                   | ...                       | ...           | ...        |
| Value of scan list register 15  | 5081                  | 5082                      | Integer/float | Read/write |

\* Data type depends on the device parameters entered in the scan list.  
 \*\* Data access depends on the device parameters entered in the scan list. If the device parameter entered supports read and write access, the parameter can also be accessed via the data area.

## 10 Commissioning

### 10.1 Post-installation and post-connection check

Before commissioning the device:

- Make sure that the post-installation and post-connection checks have been performed successfully.
- Checklist for "Post-installation" check →  24
- Checklist for "Post-connection" check →  36

### 10.2 Connecting via FieldCare

- For connecting FieldCare
- For connecting via FieldCare
- For user interface of FieldCare


### 10.3 Setting the operating language

Factory setting: English or ordered local language

The operating language can be set in FieldCare or DeviceCare: Operation → Display language

### 10.4 Configuring the device

The **Setup** menu with its submenus contains all the parameters needed for standard operation.

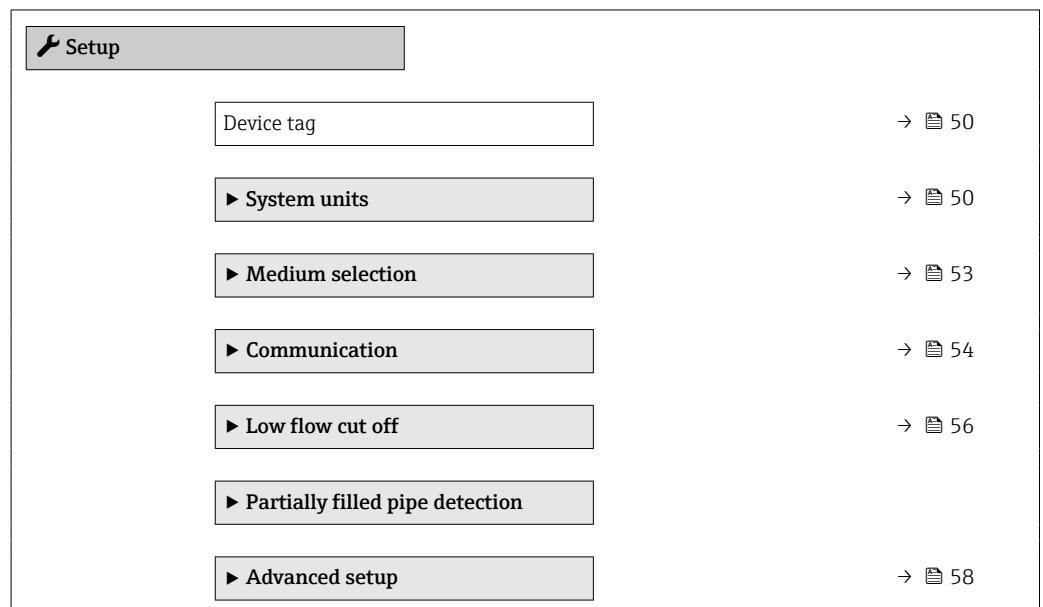

#### 10.4.1 Defining the tag name

To enable fast identification of the measuring point within the system, you can enter a unique designation using the **Device tag** parameter and thus change the factory setting.

 Enter the tag name in the "FieldCare" operating tool

**Navigation**  
"Setup" menu → Device tag

**Parameter overview with brief description**

| Parameter  | Description                             | User entry                                                                         |
|------------|-----------------------------------------|------------------------------------------------------------------------------------|
| Device tag | Enter the name for the measuring point. | Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /). |

**10.4.2    Setting the system units**

In the **System units** submenu the units of all the measured values can be set.

 The number of submenus and parameters can vary depending on the device version. Certain submenus and parameters in these submenus are not described in the Operating Instructions. Instead a description is provided in the Special Documentation for the device ("Supplementary documentation").

**Navigation**  
"Setup" menu → Advanced setup → System units

► System units

Mass flow unit

→  51

Mass unit

→  51

Volume flow unit

→  51

Volume unit

→  51

Corrected volume flow unit

→  51

Corrected volume unit

→  51

Density unit

→  51

Reference density unit

→  51

Temperature unit

→  52

Pressure unit

→  52

## Parameter overview with brief description

| Parameter                  | Description                                                                                                                                                                                                                  | Selection        | Factory setting                                                                                                                            |
|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| Mass flow unit             | Select mass flow unit.<br><i>Effect</i><br>The selected unit applies to:<br><ul style="list-style-type: none"> <li>Output</li> <li>Low flow cut off</li> <li>Simulation process variable</li> </ul>                          | Unit choose list | Country-specific:<br><ul style="list-style-type: none"> <li>kg/h</li> <li>lb/min</li> </ul>                                                |
| Mass unit                  | Select mass unit.                                                                                                                                                                                                            | Unit choose list | Country-specific:<br><ul style="list-style-type: none"> <li>kg</li> <li>lb</li> </ul>                                                      |
| Volume flow unit           | Select volume flow unit.<br><i>Effect</i><br>The selected unit applies to:<br><ul style="list-style-type: none"> <li>Output</li> <li>Low flow cut off</li> <li>Simulation process variable</li> </ul>                        | Unit choose list | Country-specific:<br><ul style="list-style-type: none"> <li>l/h</li> <li>gal/min (us)</li> </ul>                                           |
| Volume unit                | Select volume unit.                                                                                                                                                                                                          | Unit choose list | Country-specific:<br><ul style="list-style-type: none"> <li>l (DN &gt; 150 (6"): <b>m<sup>3</sup></b> option)</li> <li>gal (us)</li> </ul> |
| Corrected volume flow unit | Select corrected volume flow unit.<br><i>Effect</i><br>The selected unit applies to:<br><b>Corrected volume flow</b> parameter<br>(→  66) | Unit choose list | Country-specific:<br><ul style="list-style-type: none"> <li>NI/h</li> <li>Sft<sup>3</sup>/min</li> </ul>                                   |
| Corrected volume unit      | Select corrected volume unit.                                                                                                                                                                                                | Unit choose list | Country-specific:<br><ul style="list-style-type: none"> <li>NI</li> <li>Sft<sup>3</sup></li> </ul>                                         |
| Reference density unit     | Select reference density unit.                                                                                                                                                                                               | Unit choose list | Country-specific<br><ul style="list-style-type: none"> <li>kg/NI</li> <li>lb/Sft<sup>3</sup></li> </ul>                                    |
| Density unit               | Select density unit.<br><i>Effect</i><br>The selected unit applies to:<br><ul style="list-style-type: none"> <li>Output</li> <li>Simulation process variable</li> <li>Density adjustment (<b>Expert</b> menu)</li> </ul>     | Unit choose list | Country-specific:<br><ul style="list-style-type: none"> <li>kg/l</li> <li>lb/ft<sup>3</sup></li> </ul>                                     |
| Density 2 unit             | Select second density unit.                                                                                                                                                                                                  | Unit choose list | Country-specific:<br><ul style="list-style-type: none"> <li>kg/l</li> <li>lb/ft<sup>3</sup></li> </ul>                                     |

| Parameter        | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | Selection        | Factory setting                                                                                     |
|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|-----------------------------------------------------------------------------------------------------|
| Temperature unit | <p>Select temperature unit.</p> <p><i>Effect</i></p> <p>The selected unit applies to:</p> <ul style="list-style-type: none"> <li>▪ <b>Electronic temperature</b> parameter (6053)</li> <li>▪ <b>Maximum value</b> parameter (6051)</li> <li>▪ <b>Minimum value</b> parameter (6052)</li> <li>▪ <b>External temperature</b> parameter (6080)</li> <li>▪ <b>Maximum value</b> parameter (6108)</li> <li>▪ <b>Minimum value</b> parameter (6109)</li> <li>▪ <b>Carrier pipe temperature</b> parameter (6027)</li> <li>▪ <b>Maximum value</b> parameter (6029)</li> <li>▪ <b>Minimum value</b> parameter (6030)</li> <li>▪ <b>Reference temperature</b> parameter (1816)</li> <li>▪ <b>Temperature</b> parameter</li> </ul> | Unit choose list | <p>Country-specific:</p> <ul style="list-style-type: none"> <li>▪ °C</li> <li>▪ °F</li> </ul>       |
| Pressure unit    | <p>Select process pressure unit.</p> <p><i>Effect</i></p> <p>The unit is taken from:</p> <ul style="list-style-type: none"> <li>▪ <b>Pressure value</b> parameter (→  54)</li> <li>▪ <b>External pressure</b> parameter (→  54)</li> <li>▪ <b>Pressure value</b></li> </ul>                                                                                                                                                                                                                                                                           | Unit choose list | <p>Country-specific:</p> <ul style="list-style-type: none"> <li>▪ bar a</li> <li>▪ psi a</li> </ul> |

### 10.4.3 Selecting and setting the medium

The **Select medium** wizard submenu contains parameters that must be configured in order to select and set the medium.

#### Navigation

"Setup" menu → Medium selection

▶ **Medium selection**

Select medium

→ 53

Select gas type

→ 53

Reference sound velocity

→ 54

Temperature coefficient sound velocity

→ 54

Pressure compensation

→ 54

Pressure value

→ 54

External pressure

→ 54

#### Parameter overview with brief description

| Parameter       | Prerequisite                                                               | Description                                                                                                                                                                                                                            | Selection / User entry                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-----------------|----------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Select medium   | –                                                                          | Use this function to select the type of medium: "Gas" or "Liquid". Select the "Other" option in exceptional cases in order to enter the properties of the medium manually (e.g. for highly compressive liquids such as sulfuric acid). | <ul style="list-style-type: none"> <li>■ Liquid</li> <li>■ Gas</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Select gas type | In the <b>Medium selection</b> submenu, the <b>Gas</b> option is selected. | Select measured gas type.                                                                                                                                                                                                              | <ul style="list-style-type: none"> <li>■ Air</li> <li>■ Ammonia NH<sub>3</sub></li> <li>■ Argon Ar</li> <li>■ Sulfur hexafluoride SF<sub>6</sub></li> <li>■ Oxygen O<sub>2</sub></li> <li>■ Ozone O<sub>3</sub></li> <li>■ Nitrogen oxide NO<sub>x</sub></li> <li>■ Nitrogen N<sub>2</sub></li> <li>■ Nitrous oxide N<sub>2</sub>O</li> <li>■ Methane CH<sub>4</sub></li> <li>■ Hydrogen H<sub>2</sub></li> <li>■ Helium He</li> <li>■ Hydrogen chloride HCl</li> <li>■ Hydrogen sulfide H<sub>2</sub>S</li> <li>■ Ethylene C<sub>2</sub>H<sub>4</sub></li> <li>■ Carbon dioxide CO<sub>2</sub></li> <li>■ Carbon monoxide CO</li> <li>■ Chlorine Cl<sub>2</sub></li> <li>■ Butane C<sub>4</sub>H<sub>10</sub></li> <li>■ Propane C<sub>3</sub>H<sub>8</sub></li> <li>■ Propylene C<sub>3</sub>H<sub>6</sub></li> <li>■ Ethane C<sub>2</sub>H<sub>6</sub></li> <li>■ Others</li> </ul> |

| Parameter                              | Prerequisite                                                                                                                       | Description                                                | Selection / User entry                                                                                   |
|----------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|
| Reference sound velocity               | In the <b>Select gas type</b> parameter, the <b>Others</b> option is selected.                                                     | Enter sound velocity of gas at 0 °C (32 °F).               | 1 to 99 999.9999 m/s                                                                                     |
| Temperature coefficient sound velocity | In the <b>Select gas type</b> parameter, the <b>Others</b> option is selected.                                                     | Enter temperature coefficient for the gas sound velocity.  | Positive floating-point number                                                                           |
| Pressure compensation                  | –                                                                                                                                  | Select pressure compensation type.                         | <ul style="list-style-type: none"> <li>■ Off</li> <li>■ Fixed value</li> <li>■ External value</li> </ul> |
| Pressure value                         | In the <b>Pressure compensation</b> parameter, the <b>Fixed value</b> option or the <b>Current input 1...n</b> option is selected. | Enter process pressure to be used for pressure correction. | Positive floating-point number                                                                           |
| External pressure                      | In the <b>Pressure compensation</b> parameter, the <b>External value</b> option is selected.                                       |                                                            |                                                                                                          |

#### 10.4.4 Configuring the communication interface

The **Communication** submenu guides you systematically through all the parameters that have to be configured for selecting and setting the communication interface.

##### Navigation

"Setup" menu → Communication

► Communication

Bus address

Baudrate

Data transfer mode

Parity

Byte order

Assign diagnostic behavior

Failure mode

→ ⓘ 54

→ ⓘ 54

→ ⓘ 55

→ ⓘ 55

→ ⓘ 55

→ ⓘ 55

→ ⓘ 55

##### Parameter overview with brief description

| Parameter   | Description                 | User entry / Selection                                                                                                                                                                                                |
|-------------|-----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Bus address | Enter device address.       | 1 to 247                                                                                                                                                                                                              |
| Baudrate    | Define data transfer speed. | <ul style="list-style-type: none"> <li>■ 1200 BAUD</li> <li>■ 2400 BAUD</li> <li>■ 4800 BAUD</li> <li>■ 9600 BAUD</li> <li>■ 19200 BAUD</li> <li>■ 38400 BAUD</li> <li>■ 57600 BAUD</li> <li>■ 115200 BAUD</li> </ul> |

| Parameter                  | Description                                                                                                           | User entry / Selection                                                                                                                                                                                                                                                                                                                                                           |
|----------------------------|-----------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Data transfer mode         | Select data transfer mode.                                                                                            | <ul style="list-style-type: none"> <li>■ ASCII</li> <li>■ RTU</li> </ul>                                                                                                                                                                                                                                                                                                         |
| Parity                     | Select parity bits.                                                                                                   | Picklist <b>ASCII</b> option: <ul style="list-style-type: none"> <li>■ 0 = <b>Even</b> option</li> <li>■ 1 = <b>Odd</b> option</li> </ul> Picklist <b>RTU</b> option: <ul style="list-style-type: none"> <li>■ 0 = <b>Even</b> option</li> <li>■ 1 = <b>Odd</b> option</li> <li>■ 2 = <b>None / 1 stop bit</b> option</li> <li>■ 3 = <b>None / 2 stop bits</b> option</li> </ul> |
| Byte order                 | Select byte transmission sequence.                                                                                    | <ul style="list-style-type: none"> <li>■ 0-1-2-3</li> <li>■ 3-2-1-0</li> <li>■ 1-0-3-2</li> <li>■ 2-3-0-1</li> </ul>                                                                                                                                                                                                                                                             |
| Assign diagnostic behavior | Select diagnostic behavior for MODBUS communication.                                                                  | <ul style="list-style-type: none"> <li>■ Off</li> <li>■ Alarm or warning</li> <li>■ Warning</li> <li>■ Alarm</li> </ul>                                                                                                                                                                                                                                                          |
| Failure mode               | Select measured value output behavior when a diagnostic message occurs via Modbus communication.<br>NaN <sup>1)</sup> | <ul style="list-style-type: none"> <li>■ NaN value</li> <li>■ Last valid value</li> </ul>                                                                                                                                                                                                                                                                                        |

1) Not a Number

10.4.5    Configuring the low flow cut off

The **Low flow cut off** submenu contains the parameters that must be set in order to configure the low flow cut off.

Navigation

"Setup" menu → Low flow cut off

► Low flow cut off

Assign process variable

On value low flow cutoff

Off value low flow cutoff

Pressure shock suppression

→ 56

→ 56

→ 56

→ 56

Parameter overview with brief description

| Parameter                  | Prerequisite                                                                           | Description                                                                    | Selection / User entry                                                                              | Factory setting                         |
|----------------------------|----------------------------------------------------------------------------------------|--------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|-----------------------------------------|
| Assign process variable    | –                                                                                      | Select process variable for low flow cut off.                                  | <div>■ Off</div> <div>■ Mass flow</div> <div>■ Volume flow</div> <div>■ Corrected volume flow</div> | –                                       |
| On value low flow cutoff   | A process variable is selected in the <b>Assign process variable</b> parameter (→ 56). | Enter on value for low flow cut off.                                           | Signed floating-point number                                                                        | Depends on country and nominal diameter |
| Off value low flow cutoff  | A process variable is selected in the <b>Assign process variable</b> parameter (→ 56). | Enter off value for low flow cut off.                                          | 0 to 100.0 %                                                                                        | –                                       |
| Pressure shock suppression | A process variable is selected in the <b>Assign process variable</b> parameter (→ 56). | Enter time frame for signal suppression (= active pressure shock suppression). | 0 to 100 s                                                                                          | –                                       |

### 10.4.6 Partially filled pipe detection

The **Partially filled pipe detection** submenu contains parameters that have to be set for configuring empty pipe detection.

#### Navigation

"Setup" menu → Partially filled pipe detection

|                                          |      |
|------------------------------------------|------|
| ► Partially filled pipe detection        |      |
| Assign process variable                  | → 57 |
| Low value partial filled pipe detection  | → 57 |
| High value partial filled pipe detection | → 57 |
| Response time part. filled pipe detect.  | → 57 |

#### Parameter overview with brief description

| Parameter                                | Prerequisite                                                                           | Description                                                                                                                                                                                                          | Selection / User entry                                                                                  | Factory setting                                                                                                                   |
|------------------------------------------|----------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| Assign process variable                  | –                                                                                      | Select process variable for partially filled pipe detection.                                                                                                                                                         | <ul style="list-style-type: none"> <li>■ Off</li> <li>■ Density</li> <li>■ Reference density</li> </ul> | Density                                                                                                                           |
| Low value partial filled pipe detection  | A process variable is selected in the <b>Assign process variable</b> parameter (→ 57). | Enter lower limit value for deactivating partialy filled pipe detection.                                                                                                                                             | Positive floating-point number                                                                          | Depends on country: <ul style="list-style-type: none"> <li>■ 200 kg/m<sup>3</sup></li> <li>■ 12.5 lb/ft<sup>3</sup></li> </ul>    |
| High value partial filled pipe detection | A process variable is selected in the <b>Assign process variable</b> parameter (→ 57). | Enter upper limit value for deactivating partialy filled pipe detection.                                                                                                                                             | Signed floating-point number                                                                            | Depends on country: <ul style="list-style-type: none"> <li>■ 6 000 kg/m<sup>3</sup></li> <li>■ 374.6 lb/ft<sup>3</sup></li> </ul> |
| Response time part. filled pipe detect.  | A process variable is selected in the <b>Assign process variable</b> parameter (→ 57). | Use this function to enter the minimum time (hold time) the signal must be present before diagnostic message S962 "Pipe only partly filled" is triggered in the event of a partially filled or empty measuring pipe. | 0 to 100 s                                                                                              | –                                                                                                                                 |

## 10.5    Advanced settings

The **Advanced setup** submenu with its submenus contains parameters for specific settings.

 The number of submenus can vary depending on the device version, e.g. viscosity is available only with the Promass I.

**Navigation**

"Setup" menu → Advanced setup

▶ Advanced setup

Enter access code

→ ⓘ 58

▶ Calculated values

→ ⓘ 58

▶ Sensor adjustment

→ ⓘ 60

▶ Totalizer 1 to n

→ ⓘ 61

▶ Viscosity

▶ Concentration

▶ Heartbeat setup

▶ Administration

→ ⓘ 62

### 10.5.1    Using the parameter to enter the access code

**Navigation**

"Setup" menu → Advanced setup

**Parameter overview with brief description**

| Parameter         | Description                                                  | User entry                                                                        |
|-------------------|--------------------------------------------------------------|-----------------------------------------------------------------------------------|
| Enter access code | Enter access code to disable write protection of parameters. | Max. 16-digit character string comprising numbers, letters and special characters |

### 10.5.2    Calculated process variables

The **Calculated values** submenu contains parameters for calculating the corrected volume flow.

**Navigation**

"Setup" menu → Advanced setup → Calculated values

▶ Calculated values

▶ Corrected volume flow calculation

→ ⓘ 59

**"Corrected volume flow calculation" submenu****Navigation**

"Setup" menu → Advanced setup → Calculated values → Corrected volume flow calculation

| ► Corrected volume flow calculation      |  |      |
|------------------------------------------|--|------|
| Corrected volume flow calculation (1812) |  | → 59 |
| External reference density (6198)        |  | → 59 |
| Fixed reference density (1814)           |  | → 59 |
| Reference temperature (1816)             |  | → 59 |
| Linear expansion coefficient (1817)      |  | → 60 |
| Square expansion coefficient (1818)      |  | → 60 |

**Parameter overview with brief description**

| Parameter                         | Prerequisite                                                                                                          | Description                                                         | Selection / User interface / User entry                                                                                                                                                                | Factory setting                                                                                |
|-----------------------------------|-----------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|
| Corrected volume flow calculation | –                                                                                                                     | Select reference density for calculating the corrected volume flow. | <ul style="list-style-type: none"> <li>■ Fixed reference density</li> <li>■ Calculated reference density</li> <li>■ Reference density by API table 53</li> <li>■ External reference density</li> </ul> | –                                                                                              |
| External reference density        | In the <b>Corrected volume flow calculation</b> parameter, the <b>External reference density</b> option is selected.  | Shows external reference density.                                   | Floating point number with sign                                                                                                                                                                        | –                                                                                              |
| Fixed reference density           | The <b>Fixed reference density</b> option is selected in the <b>Corrected volume flow calculation</b> parameter.      | Enter fixed value for reference density.                            | Positive floating-point number                                                                                                                                                                         | –                                                                                              |
| Reference temperature             | The <b>Calculated reference density</b> option is selected in the <b>Corrected volume flow calculation</b> parameter. | Enter reference temperature for calculating the reference density.  | –273.15 to 99999 °C                                                                                                                                                                                    | Country-specific: <ul style="list-style-type: none"> <li>■ +20 °C</li> <li>■ +68 °F</li> </ul> |


| Parameter                    | Prerequisite                                                                                                                    | Description                                                                                                                                      | Selection / User interface / User entry | Factory setting |
|------------------------------|---------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------|-----------------|
| Linear expansion coefficient | The <b>Calculated reference density</b> option is selected in the <b>Corrected volume flow calculation</b> parameter parameter. | Enter linear, medium-specific expansion coefficient for calculating the reference density.                                                       | 0 to 1                                  | –               |
| Square expansion coefficient | The <b>Calculated reference density</b> option is selected in the <b>Corrected volume flow calculation</b> parameter parameter. | For media with a non-linear expansion pattern: enter the quadratic, medium-specific expansion coefficient for calculating the reference density. | 0 to 1                                  | –               |

### 10.5.3 Carrying out a sensor adjustment

The **Sensor adjustment** submenu contains parameters that pertain to the functionality of the sensor.

#### Navigation

"Setup" menu → Advanced setup → Sensor adjustment

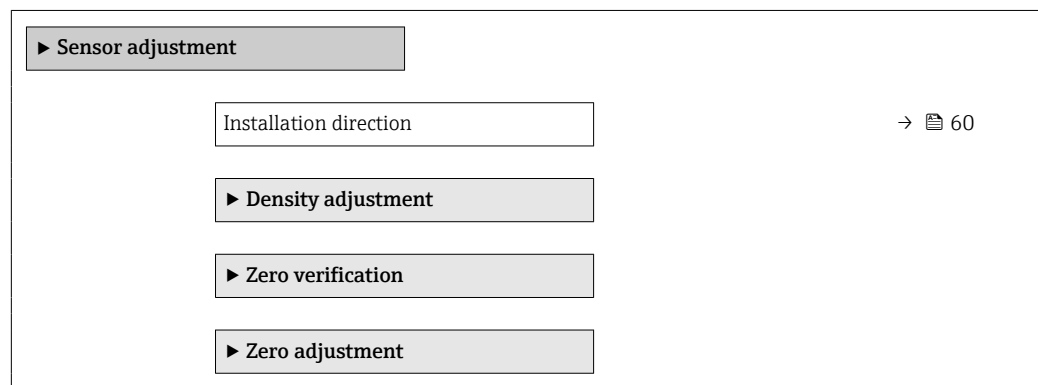

#### Parameter overview with brief description

| Parameter              | Description                                                                   | Selection                                                                                                           |
|------------------------|-------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|
| Installation direction | Set sign of flow direction to match the direction of the arrow on the sensor. | <ul style="list-style-type: none"> <li>■ Flow in arrow direction</li> <li>■ Flow against arrow direction</li> </ul> |

#### Zero verification and zero adjustment

All measuring instruments are calibrated in accordance with state-of-the-art technology. Calibration takes place under reference conditions → 93. Therefore, a zero adjustment in the field is generally not required.

Experience shows that zero adjustment is advisable only in special cases:

- To achieve maximum measurement accuracy even with low flow rates.
- Under extreme process or operating conditions (e.g. very high process temperatures or very high-viscosity media).

 To achieve the highest possible measurement accuracy at low flow rates, the installation must protect the sensor from mechanical stress during operation.

To get a representative zero point, ensure that:

- any flow in the device is prevented during the adjustment
- the process conditions (e.g. pressure, temperature) are stable and representative

- Zero verification and zero adjustment cannot be performed if the following process conditions are present:
- Gas pockets  
Ensure that the system has been sufficiently flushed with the medium. Repeat flushing can help to eliminate gas pockets
  - Thermal circulation  
In the event of temperature differences (e.g. between the measuring tube inlet and outlet section), induced flow can occur even if the valves are closed due to thermal circulation in the device
  - Leaks at the valves  
If the valves are not leak-tight, flow is not sufficiently prevented when determining the zero point

If these conditions cannot be avoided, it is advisable to keep the factory setting for the zero point.

Navigation

"Setup" menu → Advanced setup → Sensor adjustment → Zero point adjustment

► Zero point adjustment

Zero point adjustment control

→ 61

Progress

→ 61

Parameter overview with brief description

| Parameter                     | Description                        | Selection / User interface                                                                                                  | Factory setting |
|-------------------------------|------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|-----------------|
| Zero point adjustment control | Start zero point adjustment.       | <ul style="list-style-type: none"><li>■ Cancel</li><li>■ Busy</li><li>■ Zero point adjust failure</li><li>■ Start</li></ul> | –               |
| Progress                      | Shows the progress of the process. | 0 to 100 %                                                                                                                  | –               |

10.5.4 Configuring the totalizer

In the "Totalizer 1 to n" submenu, you can configure the specific totalizer.

Navigation

"Setup" menu → Advanced setup → Totalizer 1 to n

► Totalizer 1 to n

Assign process variable

→ 62

Unit totalizer

→ 62

Totalizer operation mode

→ 62

Failure mode

→ 62

### Parameter overview with brief description

| Parameter                | Prerequisite                                                                                                                  | Description                                   | Selection                                                                                                                                                                             | Factory setting                                                                      |
|--------------------------|-------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| Assign process variable  | –                                                                                                                             | Select process variable for totalizer.        | <ul style="list-style-type: none"> <li>Off</li> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Target mass flow *</li> <li>Carrier mass flow *</li> </ul> | –                                                                                    |
| Unit totalizer           | A process variable is selected in the <b>Assign process variable</b> parameter (→ 62) of the <b>Totalizer 1 to n</b> submenu. | Select process variable totalizer unit.       | Unit choose list                                                                                                                                                                      | Depends on country: <ul style="list-style-type: none"> <li>kg</li> <li>lb</li> </ul> |
| Totalizer operation mode | A process variable is selected in the <b>Assign process variable</b> parameter (→ 62) of the <b>Totalizer 1 to n</b> submenu. | Select totalizer calculation mode.            | <ul style="list-style-type: none"> <li>Net flow total</li> <li>Forward flow total</li> <li>Reverse flow total</li> </ul>                                                              | –                                                                                    |
| Failure mode             | A process variable is selected in the <b>Assign process variable</b> parameter (→ 62) of the <b>Totalizer 1 to n</b> submenu. | Define totalizer behavior in alarm condition. | <ul style="list-style-type: none"> <li>Stop</li> <li>Actual value</li> <li>Last valid value</li> </ul>                                                                                | –                                                                                    |


\* Visibility depends on order options or device settings

## 10.5.5 Using parameters for device administration

The **Administration** submenu systematically guides the user through all the parameters that can be used for device administration purposes.

### Navigation

"Setup" menu → Advanced setup → Administration

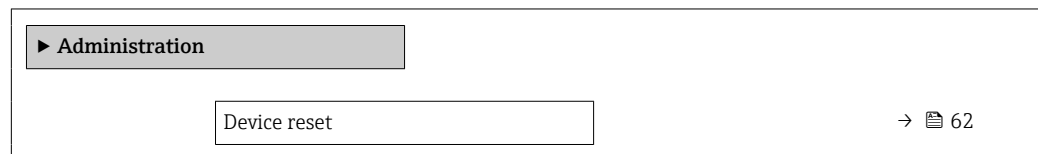

### Parameter overview with brief description


| Parameter    | Description                                                                       | Selection                                                                                                                                                                                                                           |
|--------------|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Device reset | Reset the device configuration - either entirely or in part - to a defined state. | <ul style="list-style-type: none"> <li>Cancel</li> <li>To delivery settings</li> <li>Restart device</li> <li>Delete powerfail storage</li> <li>Delete T-DAT</li> <li>Faulty device parameters</li> <li>DeleteFactoryData</li> </ul> |

## 10.6 Simulation

Via the **Simulation** submenu, it is possible to simulate various process variables in the process and the device alarm mode and verify downstream signal chains (switching valves or closed-control loops). The simulation can be performed without a real measurement (no flow of medium through the device).

**Navigation**

"Diagnostics" menu → Simulation

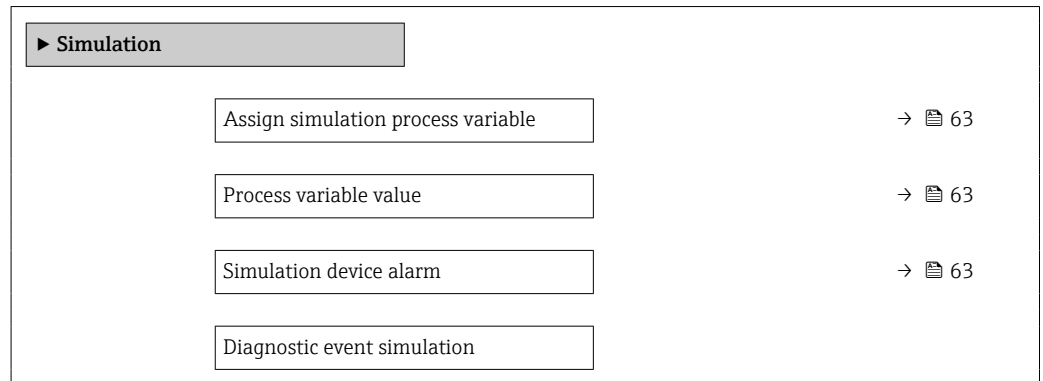**Parameter overview with brief description**

| Parameter                          | Prerequisite                                                                                      | Description                                                             | Selection / User entry                                                                                                                                                                                                                                                                              |
|------------------------------------|---------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Assign simulation process variable | –                                                                                                 | Select a process variable for the simulation process that is activated. | <ul style="list-style-type: none"> <li>■ Off</li> <li>■ Mass flow</li> <li>■ Volume flow</li> <li>■ Corrected volume flow</li> <li>■ Density</li> <li>■ Reference density</li> <li>■ Temperature</li> <li>■ Concentration *</li> <li>■ Target mass flow *</li> <li>■ Carrier mass flow *</li> </ul> |
| Process variable value             | A process variable is selected in the <b>Assign simulation process variable</b> parameter (→ 63). | Enter the simulation value for the selected process variable.           | Depends on the process variable selected                                                                                                                                                                                                                                                            |
| Simulation device alarm            | –                                                                                                 | Switch the device alarm on and off.                                     | <ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul>                                                                                                                                                                                                                               |

\* Visibility depends on order options or device settings

**10.7 Protecting settings from unauthorized access**

The following options exist for protecting the configuration of the measuring device from unintentional modification after commissioning:

Write protection via write protection switch → 63

**10.7.1 Write protection via write protection switch**

The write protection switch makes it possible to block write access to the entire operating menu with the exception of the following parameters:

- External pressure
- External temperature
- Reference density
- All parameters for configuring the totalizer


The parameter values are now read only and cannot be edited any more:

- Via service interface (CDI)
- Via Modbus RS485

1. Depending on the housing version, loosen the securing clamp or fixing screw of the housing cover.

2. Depending on the housing version, unscrew or open the housing cover.

3.

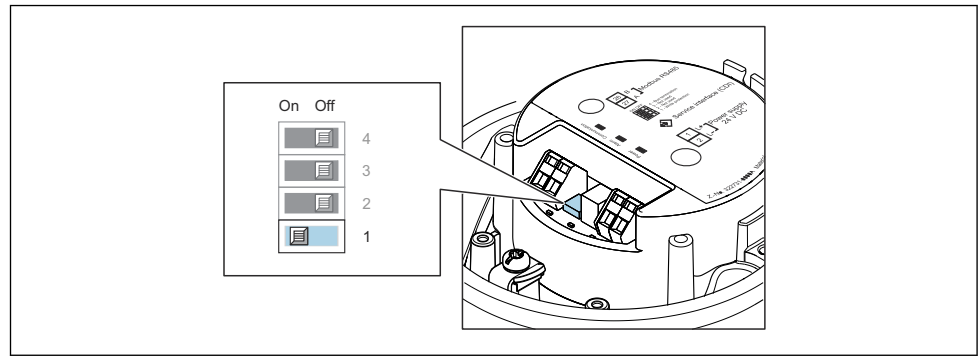

A0030224

Setting the write protection switch on the main electronics module to the **On** position enables hardware write protection. Setting the write protection switch on the main electronics module to the **Off** position (factory setting) disables hardware write protection.

↳ If hardware write protection is enabled: the **Locking status** parameter displays the **Hardware locked** option ; if disabled, the **Locking status** parameter does not display any option .

4. Reverse the removal procedure to reassemble the transmitter.

# 11 Operation

## 11.1 Reading the device locking status

Device active write protection: **Locking status** parameter

**Navigation**

"Operation" menu → Locking status

*Function scope of "Locking status" parameter*

| Options            | Description                                                                                                                                                                                                                                     |
|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Hardware locked    | The locking switch (DIP switch) for locking the hardware is activated on the main electronic module. This prevents write access to the parameters .                                                                                             |
| Temporarily locked | Write access to the parameters is temporarily locked on account of internal processes running in the device (e.g. data upload/download, reset etc.). Once the internal processing has been completed, the parameters can be changed once again. |

## 11.2 Adjusting the operating language



Detailed information:

- To configure the operating language → 49
- For information on the operating languages supported by the measuring device → 103

## 11.3 Reading off measured values

With the **Measured values** submenu, it is possible to read all the measured values.

**Navigation**

"Diagnostics" menu → Measured values

|                     |       |
|---------------------|-------|
| ► Measured values   |       |
| ► Process variables | →  65 |
| ► Totalizer         | →  67 |

### 11.3.1 "Measured variables" submenu

The **Process variables** submenu contains all the parameters needed to display the current measured values for each process variable.

**Navigation**

"Diagnostics" menu → Measured values → Measured variables

|                      |       |
|----------------------|-------|
| ► Measured variables |       |
| Mass flow            | →  66 |

|                               |                                                                                            |
|-------------------------------|--------------------------------------------------------------------------------------------|
| Volume flow                   | →  66   |
| Corrected volume flow         | →  66   |
| Density                       | →  66   |
| Reference density             | →  66   |
| Temperature                   | →  67   |
| Pressure                      | →  67   |
| Concentration                 | →  67   |
| Target mass flow              | →  67   |
| Carrier mass flow             | →  67   |
| Target corrected volume flow  | →  67   |
| Carrier corrected volume flow | →  67 |
| Target volume flow            | →  67 |
| Carrier volume flow           | →  67 |

### Parameter overview with brief description

| Parameter         | Prerequisite | Description                                                                                                                                                                                                                                               | User interface               |
|-------------------|--------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------|
| Measured values 1 | –            | Displays the mass flow that is currently measured.<br><i>Dependency</i><br>The unit is taken from: <b>Mass flow unit</b> parameter (→  51)                           | Signed floating-point number |
| Measured values 2 | –            | Displays the volume flow that is currently calculated.<br><i>Dependency</i><br>The unit is taken from the <b>Volume flow unit</b> parameter (→  51).                 | Signed floating-point number |
| Measured values 4 | –            | Displays the corrected volume flow that is currently calculated.<br><i>Dependency</i><br>The unit is taken from: <b>Corrected volume flow unit</b> parameter (→  51) | Signed floating-point number |
| Measured values 3 | –            |                                                                                                                                                                                                                                                           | Signed floating-point number |
| Measured values 5 | –            | Displays the reference density that is currently calculated.<br><i>Dependency</i><br>The unit is taken from: <b>Reference density unit</b> parameter (→  51)         | Signed floating-point number |

| Parameter                     | Prerequisite                                                                                                                                                                                                                                                                                          | Description                                                                                                                                                                                                                                         | User interface               |
|-------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------|
| Measured values 6             | –                                                                                                                                                                                                                                                                                                     |                                                                                                                                                                                                                                                     | Signed floating-point number |
| Pressure value                | –                                                                                                                                                                                                                                                                                                     | Displays either a fixed or external pressure value.<br><i>Dependency</i><br>The unit is taken from the <b>Pressure unit</b> parameter (→  52).                     | Signed floating-point number |
| Concentration                 | For the following order code:<br>Order code for "Application package", option <b>ED</b> "Concentration"<br> The software options currently enabled are displayed in the <b>Software option overview</b> parameter.   | Displays the concentration that is currently calculated.<br><i>Dependency</i><br>The unit is taken from the <b>Concentration unit</b> parameter.                                                                                                    | Signed floating-point number |
| Target mass flow              | With the following conditions:<br>Order code for "Application package", option <b>ED</b> "Concentration"<br> The software options currently enabled are displayed in the <b>Software option overview</b> parameter.  | Displays the mass flow that is currently measured for the target medium.<br><i>Dependency</i><br>The unit is taken from: <b>Mass flow unit</b> parameter (→  51)   | Signed floating-point number |
| Carrier mass flow             | With the following conditions:<br>Order code for "Application package", option <b>ED</b> "Concentration"<br> The software options currently enabled are displayed in the <b>Software option overview</b> parameter. | Displays the mass flow of the carrier medium that is currently measured.<br><i>Dependency</i><br>The unit is taken from: <b>Mass flow unit</b> parameter (→  51) | Signed floating-point number |
| Target corrected volume flow  | –                                                                                                                                                                                                                                                                                                     |                                                                                                                                                                                                                                                     | Signed floating-point number |
| Carrier corrected volume flow | –                                                                                                                                                                                                                                                                                                     |                                                                                                                                                                                                                                                     | Signed floating-point number |
| Target volume flow            | –                                                                                                                                                                                                                                                                                                     |                                                                                                                                                                                                                                                     | Signed floating-point number |
| Carrier volume flow           | –                                                                                                                                                                                                                                                                                                     |                                                                                                                                                                                                                                                     | Signed floating-point number |

### 11.3.2 "Totalizer" submenu

The **Totalizer** submenu contains all the parameters needed to display the current measured values for every totalizer.

#### Navigation

"Diagnostics" menu → Measured values → Totalizer

► Totalizer

Totalizer value 1 to n

→  68

Totalizer overflow 1 to n

→  68

Parameter overview with brief description

| Parameter                 | Prerequisite                                                                                                                                                                                                                                                                                                         | Description                                   | User interface               |
|---------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------|------------------------------|
| Totalizer value 1 to n    | One of the following options is selected in the <b>Assign process variable</b> parameter (→ 62) of the <b>Totalizer 1 to n</b> submenu: <ul style="list-style-type: none"><li>■ Volume flow</li><li>■ Mass flow</li><li>■ Corrected volume flow</li><li>■ Target mass flow *</li><li>■ Carrier mass flow *</li></ul> | Displays the current totalizer counter value. | Signed floating-point number |
| Totalizer overflow 1 to n | One of the following options is selected in the <b>Assign process variable</b> parameter (→ 62) of the <b>Totalizer 1 to n</b> submenu: <ul style="list-style-type: none"><li>■ Volume flow</li><li>■ Mass flow</li><li>■ Corrected volume flow</li><li>■ Target mass flow *</li><li>■ Carrier mass flow *</li></ul> | Displays the current totalizer overflow.      | Integer with sign            |

\* Visibility depends on order options or device settings

11.4 Adapting the measuring device to the process conditions

- The following are available for this purpose:
- Basic settings using the **Setup** menu (→ 49)
  - Advanced settings using the **Advanced setup** submenu (→ 58)

11.5 Performing a totalizer reset

- The totalizers are reset in the **Operation** submenu:
- Control Totalizer
  - Reset all totalizers

**Navigation**  
"Operation" menu → Totalizer handling

► Totalizer handling

Control Totalizer 1 to n

→ 69

Preset value 1 to n

→ 69

Reset all totalizers

→ 69

## Parameter overview with brief description

| Parameter                | Prerequisite                                                                                                                  | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | Selection / User entry                                                                                                                                                                 | Factory setting                                                                              |
|--------------------------|-------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------|
| Control Totalizer 1 to n | A process variable is selected in the <b>Assign process variable</b> parameter (→ 62) of the <b>Totalizer 1 to n</b> submenu. | Control totalizer value.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <ul style="list-style-type: none"> <li>■ Totalize</li> <li>■ Reset + hold</li> <li>■ Preset + hold</li> <li>■ Reset + totalize</li> <li>■ Preset + totalize</li> <li>■ Hold</li> </ul> | –                                                                                            |
| Preset value 1 to n      | A process variable is selected in the <b>Assign process variable</b> parameter (→ 62) of the <b>Totalizer 1 to n</b> submenu. | Specify start value for totalizer.<br><i>Dependency</i><br> The unit of the selected process variable is defined for the totalizer based on the selection made in the <b>Assign process variable</b> parameter: <ul style="list-style-type: none"> <li>■ <b>Volume flow</b> option: <b>Volume flow unit</b> parameter</li> <li>■ <b>Mass flow</b> option, <b>Target mass flow</b> option, <b>Carrier mass flow</b> option: <b>Mass flow unit</b> parameter</li> <li>■ <b>Corrected volume flow</b> option: <b>Corrected volume unit</b> parameter</li> </ul> | Signed floating-point number                                                                                                                                                           | Depends on country: <ul style="list-style-type: none"> <li>■ 0 kg</li> <li>■ 0 lb</li> </ul> |
| Reset all totalizers     | –                                                                                                                             | Reset all totalizers to 0 and start.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | <ul style="list-style-type: none"> <li>■ Cancel</li> <li>■ Reset + totalize</li> </ul>                                                                                                 | –                                                                                            |

## 11.5.1 Function scope of "Control Totalizer" parameter

| Options                         | Description                                                                                                                 |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| Totalize                        | The totalizer is started or continues running.                                                                              |
| Reset + hold                    | The totaling process is stopped and the totalizer is reset to 0.                                                            |
| Preset + hold <sup>1)</sup>     | The totaling process is stopped and the totalizer is set to its defined start value from the <b>Preset value</b> parameter. |
| Reset + totalize                | The totalizer is reset to 0 and the totaling process is restarted.                                                          |
| Preset + totalize <sup>1)</sup> | The totalizer is set to the defined start value in the <b>Preset value</b> parameter and the totaling process is restarted. |

1) Visible depending on the order options or device settings

## 11.5.2 Function range of "Reset all totalizers" parameter

| Options          | Description                                                                                                           |
|------------------|-----------------------------------------------------------------------------------------------------------------------|
| Cancel           | No action is executed and the user exits the parameter.                                                               |
| Reset + totalize | Resets all totalizers to 0 and restarts the totaling process. This deletes all the previously aggregated flow values. |

## 12 Diagnostics and troubleshooting

### 12.1 General troubleshooting

#### For output signals

| Fault                                                                     | Possible causes                                                       | Remedial action                                                                                             |
|---------------------------------------------------------------------------|-----------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
| Green power LED on the main electronics module of the transmitter is dark | Supply voltage does not match the voltage specified on the nameplate. | Apply the correct supply voltage → 31.                                                                      |
| Green power LED on the main electronics module of the transmitter is dark | Power supply cable connected incorrectly                              | Check the terminal assignment → 27.                                                                         |
| Green power LED on Safety Barrier Promass 100 is dark                     | Supply voltage does not match the voltage specified on the nameplate. | Apply the correct supply voltage → 31.                                                                      |
| Green power LED on Safety Barrier Promass 100 is dark                     | Power supply cable connected incorrectly                              | Check the terminal assignment → 27.                                                                         |
| Device is measuring incorrectly.                                          | Configuration error or device is operated outside the application.    | 1. Check and correct parameter configuration.<br>2. Observe limit values specified in the "Technical Data". |


#### For access

| Fault                                                                                                                        | Possible causes                                                                                                                                     | Remedial action                                                                                                                                                           |
|------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Write access to parameters is not possible.                                                                                  | Hardware write protection is enabled.                                                                                                               | Set the write protection switch on the main electronics module to the <b>OFF</b> position → 63.                                                                           |
| Connection via Modbus RS485 is not possible.                                                                                 | Modbus RS485 bus cable is connected incorrectly.                                                                                                    | Check the terminal assignment → 27.                                                                                                                                       |
| Connection via Modbus RS485 is not possible.                                                                                 | Device plug is connected incorrectly.                                                                                                               | Check the pin assignment of the device plugs → 29.                                                                                                                        |
| Connection via Modbus RS485 is not possible.                                                                                 | Modbus RS485 cable is incorrectly terminated.                                                                                                       | Check the terminating resistor → 34.                                                                                                                                      |
| Connection via Modbus RS485 is not possible.                                                                                 | Settings for the communication interface are incorrect.                                                                                             | Check the Modbus RS485 configuration → 54.                                                                                                                                |
| Connection via the service interface is not possible.                                                                        | <ul style="list-style-type: none"> <li>The USB port on the PC is incorrectly configured.</li> <li>The driver is not installed correctly.</li> </ul> | Observe the documentation for the Commubox FXA291:<br> Technical Information TI00405C |
| Connection to the web server is not possible.                                                                                | The IP address on the PC is incorrectly configured.                                                                                                 | Check the IP address: 192.168.1.212                                                                                                                                       |
| Operation with FieldCare or DeviceCare via service interface CDI-RJ45 (port 8000) is not possible.                           | Firewall of the PC or network is blocking communication.                                                                                            | Depending on the settings of the firewall used on the PC or in the network, the firewall must be adapted or disabled to allow FieldCare/DeviceCare access.                |
| Flashing the firmware with FieldCare or DeviceCare via service interface CDI-RJ45 (port 8000 or TFTP ports) is not possible. | Firewall of the PC or network is blocking communication.                                                                                            | Depending on the settings of the firewall used on the PC or in the network, the firewall must be adapted or disabled to allow FieldCare/DeviceCare access.                |

### 12.2 Diagnostic information via LEDs

#### 12.2.1 Transmitter

Various LEDs in the transmitter provide information on the device status.

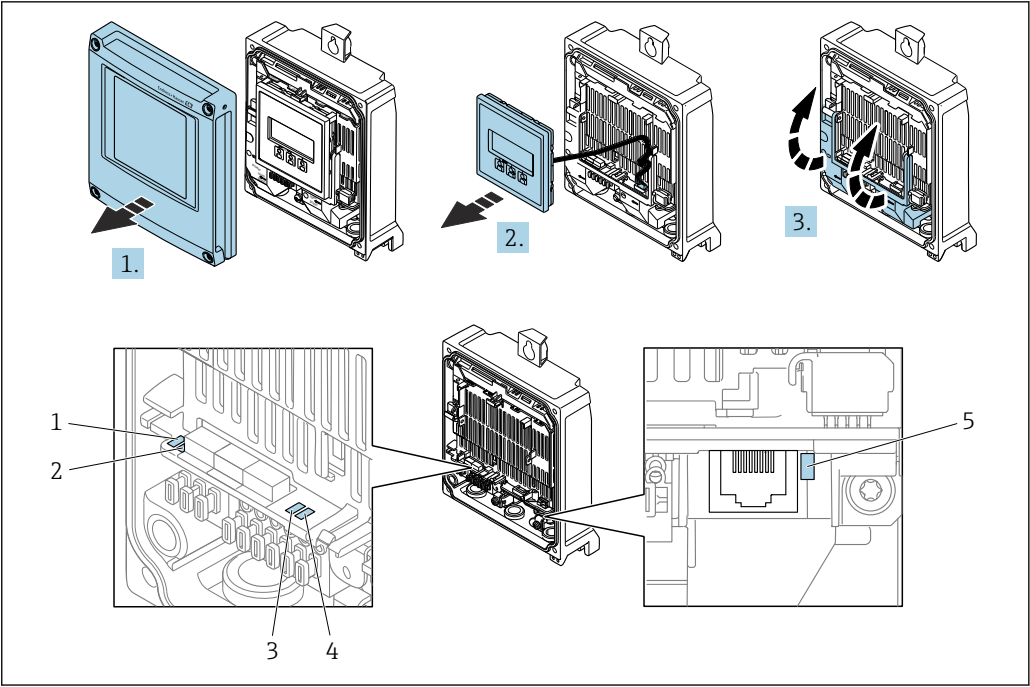

- 1 Supply voltage
- 2 Device status
- 3 Not used
- 4 Communication
- 5 Service interface (CDI) active

- 1. Open the housing cover.
- 2. Remove the display module.
- 3. Fold open the terminal cover.

| LED            | Color                          | Meaning                                                                                                                                      |
|----------------|--------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| Supply voltage | OFF                            | Supply voltage is off or too low                                                                                                             |
|                | Green                          | Supply voltage is ok                                                                                                                         |
| Alarm          | OFF                            | Device status is ok                                                                                                                          |
|                | Flashing red                   | A device error of diagnostic behavior "Warning" has occurred                                                                                 |
|                | Red                            | <ul style="list-style-type: none"><li>■ A device error of diagnostic behavior "Alarm" has occurred</li><li>■ Boot loader is active</li></ul> |
| Device status  | Green                          | Device status is ok                                                                                                                          |
|                | Flashing red                   | A device error of diagnostic behavior "Warning" has occurred                                                                                 |
|                | Red                            | A device error of diagnostic behavior "Alarm" has occurred                                                                                   |
|                | Alternately flashing red/green | Boot loader is active                                                                                                                        |
| Communication  | Flashing white                 | Modbus RS485 communication is active                                                                                                         |

12.2.2 Promass 100 safety barrier


Various LEDs on the Promass 100 safety barrier provide information on its status.

| LED           | Color          | Color                                 |
|---------------|----------------|---------------------------------------|
| Power         | OFF            | Supply voltage is off or too low.     |
|               | Green          | Supply voltage is OK.                 |
| Communication | Flashing white | Modbus RS485 communication is active. |

## 12.3 Diagnostic information in FieldCare or DeviceCare

### 12.3.1 Diagnostic options

Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

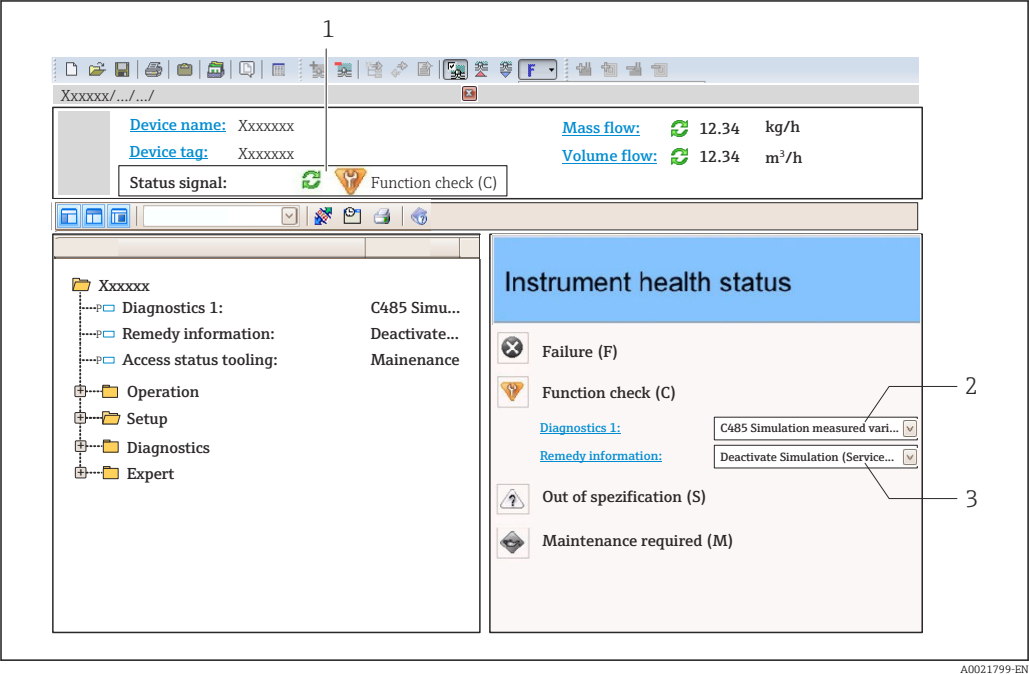

- 1 Status area with status signal
- 2 Diagnostic information → 73
- 3 Remedial actions with service ID

**i** In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:

- Via parameter → 76
- Via submenu → 77

#### Status signals


The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

| Symbol | Meaning                                                                                                                                                 |
|--------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
|        | <b>Failure</b><br>A device error has occurred. The measured value is no longer valid.                                                                   |
|        | <b>Function check</b><br>The device is in service mode (e.g. during a simulation).                                                                      |
|        | <b>Out of specification</b><br>The device is being operated:<br>Outside its technical specification limits (e.g. outside the process temperature range) |
|        | <b>Maintenance required</b><br>Maintenance is required. The measured value remains valid.                                                               |

**i** The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.

### Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault.

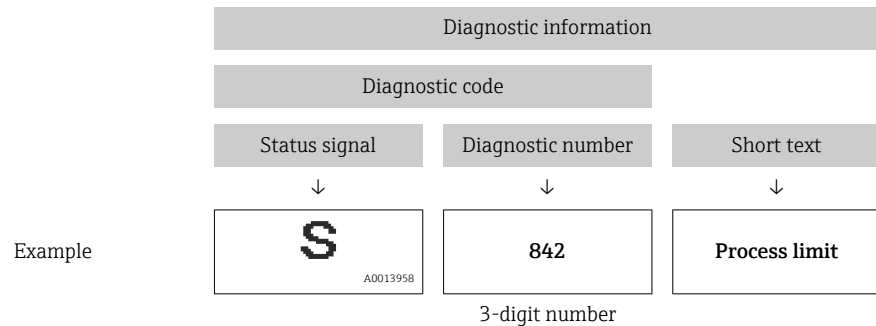

### 12.3.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

- On the home page  
Remedy information is displayed in a separate field below the diagnostics information.
- In the **Diagnostics** menu  
Remedy information can be called up in the working area of the user interface.

The user is in the **Diagnostics** menu.

1. Call up the desired parameter.
2. On the right in the working area, mouse over the parameter.  
↳ A tool tip with remedy information for the diagnostic event appears.

## 12.4 Diagnostic information via communication interface

### 12.4.1 Reading out diagnostic information

Diagnostic information can be read out via the ModbusRS485 register addresses.

- Via register address **6821** (data type = string): diagnostic code, e.g. F270
- Via register address **6859** (data type = integer): diagnostic number, e.g. 270

 For an overview of diagnostic events with diagnosis number and diagnosis code  
→  74

### 12.4.2 Configuring error response mode

The error response mode for Modbus RS485 communication can be configured in the **Modbus configuration** submenu using 1 parameter.

#### Navigation path

Setup → Communication

*Parameter overview with brief description*

| Parameter    | Description                                                                                                                                                                                                                                                                                                      | Selection                                                                                                                                                                                             | Factory setting |
|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| Failure mode | <p>Select measured value output behavior when a diagnostic message occurs via Modbus communication.</p> <p> The effect of this parameter depends on the option selected in the <b>Assign diagnostic behavior</b> parameter.</p> | <ul style="list-style-type: none"> <li>■ NaN value</li> <li>■ Last valid value</li> </ul> <p> NaN ≡ not a number</p> | NaN value       |

## 12.5 Adapting the diagnostic information

### 12.5.1 Adapting the diagnostic behavior

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for specific diagnostic information in the **Diagnostic behavior** submenu.

Expert → System → Diagnostic handling → Diagnostic behavior

You can assign the following options to the diagnostic number as the diagnostic behavior:

| Options            | Description                                                                                                                                                        |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Alarm              | The device stops measurement. The measured value output via Modbus RS485 and the totalizers assume the defined alarm condition. A diagnostic message is generated. |
| Warning            | The device continues to measure. The measured value output via Modbus RS485 and the totalizers are not affected. A diagnostic message is generated.                |
| Logbook entry only | The device continues to measure. The diagnostic message is entered only in the <b>Event logbook</b> submenu.                                                       |
| Off                | The diagnostic event is ignored, and no diagnostic message is generated or entered.                                                                                |

## 12.6 Overview of diagnostic information

 The amount of diagnostic information and the number of measured variables affected increase if the measuring device has one or more application packages.

 In the case of some items of diagnostic information, the diagnostic behavior can be changed. Adapting the diagnostic information →  74

| Diagnostic number           | Short text            | Remedy instructions                                  | Status signal [from the factory] | Diagnostic behavior [from the factory] |
|-----------------------------|-----------------------|------------------------------------------------------|----------------------------------|----------------------------------------|
| <b>Diagnostic of sensor</b> |                       |                                                      |                                  |                                        |
| 022                         | Sensor temperature    | 1. Change main electronic module<br>2. Change sensor | F                                | Alarm                                  |
| 046                         | Sensor limit exceeded | 1. Inspect sensor<br>2. Check process condition      | S                                | Alarm <sup>1)</sup>                    |
| 062                         | Sensor connection     | 1. Change main electronic module<br>2. Change sensor | F                                | Alarm                                  |
| 082                         | Data storage          | 1. Check module connections<br>2. Contact service    | F                                | Alarm                                  |

| Diagnostic number                  | Short text                   | Remedy instructions                                                                              | Status signal [from the factory] | Diagnostic behavior [from the factory] |
|------------------------------------|------------------------------|--------------------------------------------------------------------------------------------------|----------------------------------|----------------------------------------|
| 083                                | Memory content               | 1. Restart device<br>2. Contact service                                                          | F                                | Alarm                                  |
| 140                                | Sensor signal                | 1. Check or change main electronics<br>2. Change sensor                                          | S                                | Alarm <sup>1)</sup>                    |
| 144                                | Measuring error too high     | 1. Check or change sensor<br>2. Check process conditions                                         | F                                | Alarm <sup>1)</sup>                    |
| <b>Diagnostic of electronic</b>    |                              |                                                                                                  |                                  |                                        |
| 201                                | Device failure               | 1. Restart device<br>2. Contact service                                                          | F                                | Alarm                                  |
| 242                                | Software incompatible        | 1. Check software<br>2. Flash or change main electronics module                                  | F                                | Alarm                                  |
| 252                                | Modules incompatible         | 1. Check electronic modules<br>2. Change electronic modules                                      | F                                | Alarm                                  |
| 270                                | Main electronic failure      | Change main electronic module                                                                    | F                                | Alarm                                  |
| 271                                | Main electronic failure      | 1. Restart device<br>2. Change main electronic module                                            | F                                | Alarm                                  |
| 272                                | Main electronic failure      | 1. Restart device<br>2. Contact service                                                          | F                                | Alarm                                  |
| 273                                | Main electronic failure      | Change electronic                                                                                | F                                | Alarm                                  |
| 274                                | Main electronic failure      | Change electronic                                                                                | S                                | Warning <sup>1)</sup>                  |
| 302                                | Device verification active   | Device verification active, please wait.                                                         | C                                | Warning                                |
| 311                                | Electronic failure           | 1. Reset device<br>2. Contact service                                                            | F                                | Alarm                                  |
| 311                                | Electronic failure           | 1. Do not reset device<br>2. Contact service                                                     | M                                | Warning                                |
| 383                                | Memory content               | 1. Restart device<br>2. Check or change DAT module<br>3. Contact service                         | F                                | Alarm                                  |
| <b>Diagnostic of configuration</b> |                              |                                                                                                  |                                  |                                        |
| 410                                | Data transfer                | 1. Check connection<br>2. Retry data transfer                                                    | F                                | Alarm                                  |
| 411                                | Up-/download active          | Up-/download active, please wait                                                                 | C                                | Warning                                |
| 412                                | Processing Download          | Download active, please wait                                                                     | C                                | Warning                                |
| 437                                | Configuration incompatible   | 1. Restart device<br>2. Contact service                                                          | F                                | Alarm                                  |
| 438                                | Dataset                      | 1. Check data set file<br>2. Check device configuration<br>3. Up- and download new configuration | M                                | Warning                                |
| 453                                | Flow override                | Deactivate flow override                                                                         | C                                | Warning                                |
| 484                                | Simulation Failure Mode      | Deactivate simulation                                                                            | C                                | Alarm                                  |
| 485                                | Simulation measured variable | Deactivate simulation                                                                            | C                                | Warning                                |
| 495                                | Diagnostic event simulation  | Deactivate simulation                                                                            | C                                | Warning                                |

| Diagnostic number            | Short text                      | Remedy instructions                                                            | Status signal [from the factory] | Diagnostic behavior [from the factory] |
|------------------------------|---------------------------------|--------------------------------------------------------------------------------|----------------------------------|----------------------------------------|
| <b>Diagnostic of process</b> |                                 |                                                                                |                                  |                                        |
| 830                          | Sensor temperature too high     | Reduce ambient temp. around the sensor housing                                 | S                                | Warning                                |
| 831                          | Sensor temperature too low      | Increase ambient temp. around the sensor housing                               | S                                | Warning                                |
| 832                          | Electronic temperature too high | Reduce ambient temperature                                                     | S                                | Warning <sup>1)</sup>                  |
| 833                          | Electronic temperature too low  | Increase ambient temperature                                                   | S                                | Warning <sup>1)</sup>                  |
| 834                          | Process temperature too high    | Reduce process temperature                                                     | S                                | Warning <sup>1)</sup>                  |
| 835                          | Process temperature too low     | Increase process temperature                                                   | S                                | Warning <sup>1)</sup>                  |
| 842                          | Process limit                   | Low flow cut off active!<br>1. Check low flow cut off configuration            | S                                | Warning                                |
| 843                          | Process limit                   | Check process conditions                                                       | S                                | Warning                                |
| 862                          | Partly filled pipe              | 1. Check for gas in process<br>2. Adjust detection limits                      | S                                | Warning                                |
| 882                          | Input signal                    | 1. Check input configuration<br>2. Check external device or process conditions | F                                | Alarm                                  |
| 910                          | Tubes not oscillating           | 1. Check electronic<br>2. Inspect sensor                                       | F                                | Alarm                                  |
| 912                          | Medium inhomogeneous            | 1. Check process cond.<br>2. Increase system pressure                          | S                                | Warning <sup>1)</sup>                  |
| 912                          | Inhomogeneous                   |                                                                                | S                                | Warning <sup>1)</sup>                  |
| 913                          | Medium unsuitable               | 1. Check process conditions<br>2. Check electronic modules or sensor           | S                                | Alarm <sup>1)</sup>                    |
| 944                          | Monitoring failed               | Check process conditions for Heartbeat Monitoring                              | S                                | Warning <sup>1)</sup>                  |
| 948                          | Tube damping too high           | Check process conditions                                                       | S                                | Warning                                |

1) Diagnostic behavior can be changed.

## 12.7 Pending diagnostic events

The **Diagnostics** menu allows the user to view the current diagnostic event and the previous diagnostic event separately.



Accessing the remedial action for a diagnostic event:

- Via "FieldCare" operating tool → 72
- Via "DeviceCare" operating tool → 72



Other pending diagnostic events can be displayed in the **Diagnostic list** submenu → 77.

## Navigation

### "Diagnostics" menu

Diagnostics

Actual diagnostics

→  77

Previous diagnostics

→  77

Operating time from restart

→  77

Operating time

→  77

### Parameter overview with brief description

| Parameter                   | Prerequisite                                 | Description                                                                                                                                                                                                                                                                          | User interface                                                     |
|-----------------------------|----------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------|
| Actual diagnostics          | A diagnostic event has occurred.             | Shows the current occurred diagnostic event along with its diagnostic information.<br> If two or more messages occur simultaneously, the message with the highest priority is shown on the display. | Symbol for diagnostic behavior, diagnostic code and short message. |
| Previous diagnostics        | Two diagnostic events have already occurred. | Shows the diagnostic event that occurred prior to the current diagnostic event along with its diagnostic information.                                                                                                                                                                | Symbol for diagnostic behavior, diagnostic code and short message. |
| Operating time from restart | –                                            | Shows the time the device has been in operation since the last device restart.                                                                                                                                                                                                       | Days (d), hours (h), minutes (m) and seconds (s)                   |
| Operating time              | –                                            | Indicates how long the device has been in operation.                                                                                                                                                                                                                                 | Days (d), hours (h), minutes (m) and seconds (s)                   |

## 12.8 Diagnostic list

Up to 5 currently pending diagnostic events are displayed in the **Diagnostic list** submenu along with the associated diagnostic information. If more than 5 diagnostic events are pending, the events with the highest priority are shown on the display.

### Navigation path

Diagnostics → Diagnostic list

 Accessing the remedial action for a diagnostic event:

- Via "FieldCare" operating tool →  72
- Via "DeviceCare" operating tool →  72

## 12.9 Event logbook

### 12.9.1 Reading out the event logbook

A chronological overview of the event messages that have occurred is provided in the event logbook which contains a maximum of 20 message entries. This list can be displayed via FieldCare if necessary.

**Navigation path**

Edit tool bar: **F** → Additional functions → Event logbook

 The edit tool bar can be accessed via the FieldCare user interface →  42

This event history includes entries for:

- Diagnostic events →  74
- Information events →  78

In addition to the operating time of its occurrence and possible remedial action, each event is also assigned a symbol that indicates whether the event has occurred or has ended:

- Diagnostic event
  - ☹: Occurrence of the event
  - ⌚: End of the event
- Information event
  - ☹: Occurrence of the event

 Accessing the remedial action for a diagnostic event:

- Via "FieldCare" operating tool →  72
- Via "DeviceCare" operating tool →  72

 Filtering the displayed event messages →  78

**12.9.2 Filtering the event logbook**

Using the **Filter options** parameter you can define which category of event message is displayed in the **Events list** submenu.

**Navigation path**

Diagnostics → Event logbook → Filter options

**Filter categories**

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

**12.9.3 Overview of information events**

Unlike a diagnostic event, an information event is displayed in the event logbook only and not in the diagnostic list.

| Info number | Info name                    |
|-------------|------------------------------|
| I1000       | ----- (Device ok)            |
| I1079       | Sensor changed               |
| I1089       | Power on                     |
| I1090       | Configuration reset          |
| I1091       | Configuration changed        |
| I1111       | Density adjust failure       |
| I1137       | Electronic changed           |
| I1151       | History reset                |
| I1155       | Reset electronic temperature |
| I1157       | Memory error event list      |
| I1209       | Density adjustment ok        |
| I1221       | Zero point adjust failure    |

| Info number | Info name                                |
|-------------|------------------------------------------|
| I1222       | Zero point adjustment ok                 |
| I1256       | Display: access status changed           |
| I1335       | Firmware changed                         |
| I1397       | Fieldbus: access status changed          |
| I1398       | CDI: access status changed               |
| I1444       | Device verification passed               |
| I1445       | Device verification failed               |
| I1447       | Record application reference data        |
| I1448       | Application reference data recorded      |
| I1449       | Recording application ref. data failed   |
| I1450       | Monitoring off                           |
| I1451       | Monitoring on                            |
| I1457       | Measured error verification failed       |
| I1459       | I/O module verification failed           |
| I1460       | Sensor integrity verification failed     |
| I1461       | Sensor verification failed               |
| I1462       | Sensor electronic module verific. failed |
| I1512       | Download started                         |
| I1513       | Download finished                        |
| I1514       | Upload started                           |
| I1515       | Upload finished                          |
| I1649       | Hardware write protection activated      |
| I1650       | Hardware write protection deactivated    |

## 12.10 Resetting the device

The entire device configuration or some of the configuration can be reset to a defined state with the **Device reset** parameter (→  62).

### 12.10.1 Function scope of the "Device reset" parameter

| Options              | Description                                                                                                                                                                                                                                                                                                                                     |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Cancel               | No action is executed and the user exits the parameter.                                                                                                                                                                                                                                                                                         |
| To fieldbus defaults | Every parameter is reset to fieldbus default values.                                                                                                                                                                                                                                                                                            |
| To delivery settings | Every parameter for which a customer-specific default setting was ordered is reset to the customer-specific value. All other parameters are reset to the factory setting.<br> This option is not visible if no customer-specific settings have been ordered. |
| Restart device       | The restart resets every parameter with data stored in volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.                                                                                                                                                                     |

## 12.11 Device information

The **Device information** submenu contains all parameters that display different information for device identification.

Navigation  
"Diagnostics" menu → Device information

► Device information

|                       |                                                                                            |
|-----------------------|--------------------------------------------------------------------------------------------|
| Device tag            | →  80   |
| Serial number         | →  80   |
| Firmware version      | →  80   |
| Device name           | →  80   |
| Order code            | →  80   |
| Extended order code 1 | →  80   |
| Extended order code 2 | →  81   |
| Extended order code 3 | →  81   |
| ENP version           | →  81 |

Parameter overview with brief description

| Parameter             | Description                                                                                                                                                                                                                                                  | User interface                                                                        | Factory setting |
|-----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|-----------------|
| Device tag            | Shows name of measuring point.                                                                                                                                                                                                                               | Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /).    | –               |
| Serial number         | Shows the serial number of the measuring device.                                                                                                                                                                                                             | Max. 11-digit character string comprising letters and numbers.                        | –               |
| Firmware version      | Shows the device firmware version installed.                                                                                                                                                                                                                 | Character string in the format xx.yy.zz                                               | –               |
| Device name           | Shows the name of the transmitter.<br> The name can be found on the nameplate of the transmitter.                                                                         | Max. 32 characters such as letters or numbers.                                        | –               |
| Order code            | Shows the device order code.<br> The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.                                    | Character string composed of letters, numbers and certain punctuation marks (e.g. /). | –               |
| Extended order code 1 | Shows the 1st part of the extended order code.<br> The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field. | Character string                                                                      | –               |

| Parameter             | Description                                                                                                                                                                                                                                                | User interface   | Factory setting |
|-----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|-----------------|
| Extended order code 2 | Shows the 2nd part of the extended order code.<br> The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field. | Character string | –               |
| Extended order code 3 | Shows the 3rd part of the extended order code.<br> The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field. | Character string | –               |
| ENP version           | Shows the version of the electronic nameplate (ENP).                                                                                                                                                                                                       | Character string | –               |

## 12.12 Firmware history

| Release date | Firmware version | Order code for "Firmware version" | Firmware Changes                                                                                                                                                                                                                                       | Documentation type     | Documentation        |
|--------------|------------------|-----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------|----------------------|
| 06.2012      | 01.01.00         | Option 78                         | Original firmware                                                                                                                                                                                                                                      | Operating instructions | BA01059D/06/EN/01.12 |
| 04.2013      | 01.02.zz         | Option 74                         | Update                                                                                                                                                                                                                                                 | Operating instructions | BA01059D/06/EN/02.13 |
| 10.2014      | 01.03.zz         | Option 72                         | <ul style="list-style-type: none"> <li>■ New unit "Beer Barrel (BBL)"</li> <li>■ Use of an external pressure value for "liquid" medium type</li> <li>■ New parameter and diagnostic information for "oscillation damping" upper limit value</li> </ul> | Operating instructions | BA01059D/06/EN/03.14 |

-  It is possible to flash the firmware to the current version or an existing previous version via the service interface.
-  For the compatibility of the firmware version with the previous version, the installed device description files and operating tools, observe the information about the device in the "Manufacturer's information" document.
-  The manufacturer's information is available:
  - In the Download Area of the Endress+Hauser Web site: [www.endress.com](http://www.endress.com) → Downloads
  - Specify the following details:
    - Product root, e.g. 8E1B  
The product root is the first part of the order code: see the nameplate on the device.
    - Text search: Manufacturer's information
    - Media type: Documentation – Technical Documentation

## 13 Maintenance

### 13.1 Maintenance work

No special maintenance work is required.

#### 13.1.1 Cleaning

##### Cleaning of surfaces not in contact with the medium

1. Recommendation: Use a lint-free cloth that is either dry or slightly dampened using water.
2. Do not use sharp objects or aggressive cleaning agents that could damage surfaces (e.g. displays, housing) and seals.
3. Do not use high-pressure steam.
4. Ensure compliance with the protection class of the device.

##### NOTICE

##### Cleaning agents can damage the surfaces!

Incorrect cleaning agents can damage the surfaces!

- ▶ Do not use cleaning agents containing concentrated mineral acids, alkalis or organic solvents e.g. benzyl alcohol, methylene chloride, xylene, concentrated glycerol cleaners or acetone.

##### Cleaning of surfaces in contact with the medium

Note the following for cleaning and sterilization in place (CIP/SIP):

- Use only cleaning agents to which the materials in contact with the medium are sufficiently resistant.
- Observe the permitted maximum medium temperature.

### 13.2 Measuring and test equipment

Endress+Hauser offers a variety of measuring and testing equipment, such as Netilion or device tests.

 Your Endress+Hauser Sales Center can provide detailed information on the services.

List of some of the measuring and testing equipment: →  86

### 13.3 Maintenance services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.

 Your Endress+Hauser Sales Center can provide detailed information on the services.

## 14 Repair

### 14.1 General notes

#### 14.1.1 Repair and conversion concept

The Endress+Hauser repair and conversion concept provides for the following:

- The measuring devices have a modular design.
- Spare parts are grouped into logical kits with the associated Installation Instructions.
- Repairs are carried out by Endress+Hauser Service or by appropriately trained customers.
- Certified devices can only be converted to other certified devices by Endress+Hauser Service or at the factory.

#### 14.1.2 Notes for repair and conversion

For repair and conversion of a measuring device, observe the following notes:

- ▶ Use only original Endress+Hauser spare parts.
- ▶ Carry out the repair according to the Installation Instructions.
- ▶ Observe the applicable standards, federal/national regulations, Ex documentation (XA) and certificates.
- ▶ Document all repairs and conversions and enter the details in Netilion Analytics.

### 14.2 Spare parts

*Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)):

All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.



Measuring device serial number:

- Is located on the nameplate of the device.
- Can be read out via the **Serial number** parameter (→  80) in the **Device information** submenu.

### 14.3 Repair services

Endress+Hauser offers a wide range of services.



Your Endress+Hauser Sales Center can provide detailed information on the services.

### 14.4 Return

The requirements for safe device return can vary depending on the device type and national legislation.

1. Refer to the web page for information: <https://www.endress.com>
2. If returning the device, pack the device in such a way that it is reliably protected against impact and external influences. The original packaging provides the best protection.

## 14.5 Disposal



If required by the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), the product is marked with the depicted symbol in order to minimize the disposal of WEEE as unsorted municipal waste. Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to the manufacturer for disposal under the applicable conditions.

### 14.5.1 Removing the measuring instrument

1. Switch off the device.

#### **WARNING**

##### **Danger to persons from process conditions!**

- ▶ Beware of hazardous process conditions such as pressure in the measuring instrument, high temperatures or aggressive media.

2. Carry out the installation and connection steps from the "Installing the device" and "Connecting the device" sections in reverse order. Observe the safety instructions.

### 14.5.2 Disposing of the measuring instrument

#### **WARNING**

##### **Danger to personnel and environment from fluids that are hazardous to health.**

- ▶ Ensure that the measuring device and all cavities are free of fluid residues that are hazardous to health or the environment, e.g. substances that have permeated into crevices or diffused through plastic.

Observe the following notes during disposal:

- ▶ Observe valid federal/national regulations.
- ▶ Ensure proper separation and reuse of the device components.

## 15 Accessories

Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: [www.endress.com](http://www.endress.com).

### 15.1 Device-specific accessories

#### 15.1.1 For the sensor

| Accessories    | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Heating jacket | <p>Is used to stabilize the temperature of the fluids in the sensor. Water, water vapor and other non-corrosive liquids are permitted for use as fluids.</p> <p> If using oil as a heating medium, please consult with Endress+Hauser.</p> <ul style="list-style-type: none"> <li>■ If ordered together with the measuring device:<br/>Order code for "Accessory enclosed" <ul style="list-style-type: none"> <li>■ Option RB "Heating jacket, G 1/2" female thread"</li> <li>■ Option RC "Heating jacket, G 3/4" female thread"</li> <li>■ Option RD "Heating jacket, NPT 1/2" female thread"</li> <li>■ Option RE "Heating jacket, NPT 3/4" female thread"</li> </ul> </li> <li>■ If ordered subsequently:<br/>Use the order code with the product root DK8003.</li> </ul> <p> Special Documentation SD02160D</p> |

### 15.2 Communication-specific accessories

| Accessories       | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Commubox FXA291   | <p>Connects Endress+Hauser field devices with a CDI interface (= Endress+Hauser Common Data Interface) and the USB port of a computer or laptop.</p> <p> Technical Information TI00405C</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Fieldgate FXA42   | <p>Transmission of the measured values of connected 4 to 20 mA analog measuring instruments, as well as digital measuring instruments</p> <p> <ul style="list-style-type: none"> <li>■ Technical Information TI01297S</li> <li>■ Operating Instructions BA01778S</li> <li>■ Product page: <a href="http://www.endress.com/fxa42">www.endress.com/fxa42</a></li> </ul> </p>                                                                                                                                                                                                                                                                                                                                                                    |
| Field Xpert SMT50 | <p>The Field Xpert SMT50 tablet PC for device configuration enables mobile plant asset management in non-hazardous areas. It is suitable for commissioning and maintenance staff to manage field instruments with a digital communication interface and to record progress.</p> <p>This tablet PC is designed as an all-in-one solution with a preinstalled driver library and is an easy-to-use, touch-sensitive tool which can be used to manage field instruments throughout their entire life cycle.</p> <p> <ul style="list-style-type: none"> <li>■ Technical Information TI01555S</li> <li>■ Operating Instructions BA02053S</li> <li>■ Product page: <a href="http://www.endress.com/smt50">www.endress.com/smt50</a></li> </ul> </p> |

|                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|-------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Field Xpert SMT70 | <p>The Field Xpert SMT70 tablet PC for device configuration enables mobile plant asset management in hazardous and non-hazardous areas. It is suitable for commissioning and maintenance staff to manage field instruments with a digital communication interface and to record progress.</p> <p>This tablet PC is designed as an all-in-one solution with a preinstalled driver library and is an easy-to-use, touch-sensitive tool which can be used to manage field instruments throughout their entire life cycle.</p> <p> <ul style="list-style-type: none"> <li>■ Technical Information TI01342S</li> <li>■ Operating Instructions BA01709S</li> <li>■ Product page: <a href="http://www.endress.com/smt70">www.endress.com/smt70</a></li> </ul> </p> |
| Field Xpert SMT77 | <p>The Field Xpert SMT77 tablet PC for device configuration enables mobile plant asset management in areas categorized as Ex Zone 1.</p> <p> <ul style="list-style-type: none"> <li>■ Technical Information TI01418S</li> <li>■ Operating Instructions BA01923S</li> <li>■ Product page: <a href="http://www.endress.com/smt77">www.endress.com/smt77</a></li> </ul> </p>                                                                                                                                                                                                                                                                                                                                                                                   |

## 15.3 Service-specific accessories

| Accessory  | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Applicator | <p>Software for selecting and sizing Endress+Hauser measuring instruments:</p> <ul style="list-style-type: none"> <li>■ Choice of measuring instruments for industrial requirements</li> <li>■ Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, flow velocity and measurement accuracy.</li> <li>■ Graphic display of the calculation results</li> <li>■ Determining the partial order code. Administration, documentation and access to all project-related data and parameters over the entire life cycle of a project.</li> </ul> <p>Applicator is available:<br/>Via the Internet: <a href="https://portal.endress.com/webapp/applicator">https://portal.endress.com/webapp/applicator</a></p> |
| Netilion   | <p>IIoT ecosystem: Unlock knowledge</p> <p>With the Netilion IIoT ecosystem, Endress+Hauser allows you to optimize your plant performance, digitize workflows, share knowledge, and enhance collaboration.</p> <p>Based on decades of experience in process automation, Endress+Hauser offers the process industry an IIoT ecosystem that enables you to gain useful insights from data. These insights can be used to optimize processes, leading to increased plant availability, efficiency, and reliability - ultimately resulting in a more profitable plant.</p> <p><a href="http://www.netilion.endress.com">www.netilion.endress.com</a></p>                                                                                                                 |
| FieldCare  | <p>FDT-based plant asset management tool from Endress+Hauser.</p> <p>It can configure all intelligent field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.</p> <p> Operating Instructions BA00027S and BA00059S</p>                                                                                                                                                                                                                                                                                                                                               |
| DeviceCare | <p>Tool to connect and configure Endress+Hauser field devices.</p> <p> <ul style="list-style-type: none"> <li>■ Technical Information: TI01134S</li> <li>■ Innovation brochure: IN01047S</li> </ul> </p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

## 15.4 System components

| Accessories                      | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Memograph M graphic data manager | <p>The Memograph M graphic data manager provides information on all the relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.</p> <ul style="list-style-type: none"> <li> ■ Technical Information TI00133R</li> <li> ■ Operating Instructions BA00247R</li> </ul> |
| iTEMP                            | <p>The temperature transmitters can be used in all applications and are suitable for the measurement of gases, steam and liquids. They can be used to read in the medium temperature.</p> <ul style="list-style-type: none"> <li> "Fields of Activity" document FA00006T</li> </ul>                                                                                                                                                                                                                               |

# 16     Technical data

## 16.1    Application

The measuring device is intended only for the flow measurement of liquids.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

To ensure that the device remains in proper operating condition for its service life, use the measuring device only for media against which the process-wetted materials are sufficiently resistant.

## 16.2    Function and system design

|                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Measuring principle | Mass flow measurement based on the Coriolis measuring principle                                                                                                                                                                                                                                                                                                                                                                                   |
| Measuring system    | <p>The device consists of a transmitter and a sensor. The Safety Barrier Promass 100 is part of the scope of supply and must be implemented to operate the device.</p> <p>The device is available as a compact version:<br/>The transmitter and sensor form a mechanical unit.</p> <p>For information on the structure of the measuring instrument →  11</p> |

## 16.3 Input

### Measured variable

#### Direct measured variables

- Mass flow
- Density
- Temperature

#### Calculated measured variables

- Volume flow
- Corrected volume flow
- Reference density

### Measuring range

#### Measuring range for liquids

| DN   |                | Measuring range full scale values $\dot{m}_{\min(F)}$ to $\dot{m}_{\max(F)}$ |            |
|------|----------------|------------------------------------------------------------------------------|------------|
| [mm] | [in]           | [kg/h]                                                                       | [lb/min]   |
| 8    | $\frac{3}{8}$  | 0 to 2 000                                                                   | 0 to 73.50 |
| 15   | $\frac{1}{2}$  | 0 to 6 500                                                                   | 0 to 238.9 |
| 25   | 1              | 0 to 18 000                                                                  | 0 to 661.5 |
| 40   | $1\frac{1}{2}$ | 0 to 45 000                                                                  | 0 to 1 654 |
| 50   | 2              | 0 to 70 000                                                                  | 0 to 2 573 |

#### Recommended measuring range

 Flow limit →  99

### Operable flow range

Over 1000 : 1.

Flow rates above the preset full scale value do not override the electronics unit, with the result that the totalizer values are registered correctly.

### Input signal

#### External measured values

To increase the measurement accuracy of certain measured variables, the automation system can continuously write various measured values to the measuring instrument:

- Operating pressure to increase measurement accuracy (Endress+Hauser recommends the use of a pressure measuring instrument for absolute pressure, e.g. Cerabar M or Cerabar S)
- Medium temperature to increase measurement accuracy (e.g. iTEMP)

 Various pressure transmitters and temperature measuring instruments can be ordered from Endress+Hauser: see "Accessories" section →  87

It is recommended to read in external measured values to calculate the following measured variables:

- Mass flow
- Corrected volume flow

#### Digital communication

The measured values are written by the automation system via Modbus RS485.

## 16.4 Output

### Output signal

#### Modbus RS485

|                      |                                                                                                                                                                                                                                                                                                                                                            |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Physical interface   | In accordance with EIA/TIA-485-A standard                                                                                                                                                                                                                                                                                                                  |
| Terminating resistor | <ul style="list-style-type: none"> <li>For device version used in non-hazardous areas or Zone 2/Div. 2: integrated and can be activated via DIP switches on the transmitter electronics module</li> <li>For device version used in intrinsically safe areas: integrated and can be activated via DIP switches on the Safety Barrier Promass 100</li> </ul> |

### Signal on alarm

Depending on the interface, failure information is displayed as follows.

#### Modbus RS485

|              |                                                                                                                             |
|--------------|-----------------------------------------------------------------------------------------------------------------------------|
| Failure mode | Choose from: <ul style="list-style-type: none"> <li>NaN value instead of current value</li> <li>Last valid value</li> </ul> |
|--------------|-----------------------------------------------------------------------------------------------------------------------------|

#### Interface/protocol

- Via digital communication:  
Modbus RS485
- Via service interface  
Service interface CDI-RJ45
- Plain text display  
With information on cause and remedial actions

#### LEDs

|                    |                                                                                                                                                                                                                                                                                                                                                                                        |
|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Status information | Status indicated by various LEDs<br><br>The following information is displayed depending on the device version: <ul style="list-style-type: none"> <li>Supply voltage active</li> <li>Data transmission active</li> <li>Device alarm/error has occurred</li> </ul>  Diagnostic information via LEDs |
|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### Low flow cut off

The switch points for low flow cut off are user-selectable.

### Galvanic isolation

The following connections are galvanically isolated from each other:

- Outputs
- Power supply

### Protocol-specific data

#### Protocol-specific data

|                         |                                                 |
|-------------------------|-------------------------------------------------|
| Protocol                | Modbus Applications Protocol Specification V1.1 |
| Device type             | Slave                                           |
| Slave address range     | 1 to 247                                        |
| Broadcast address range | 0                                               |

|                            |                                                                                                                                                                                                                                                            |
|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Function codes</b>      | <ul style="list-style-type: none"> <li>03: Read holding register</li> <li>04: Read input register</li> <li>06: Write single registers</li> <li>08: Diagnostics</li> <li>16: Write multiple registers</li> <li>23: Read/write multiple registers</li> </ul> |
| <b>Broadcast messages</b>  | Supported by the following function codes: <ul style="list-style-type: none"> <li>06: Write single registers</li> <li>16: Write multiple registers</li> <li>23: Read/write multiple registers</li> </ul>                                                   |
| <b>Supported baud rate</b> | <ul style="list-style-type: none"> <li>1 200 BAUD</li> <li>2 400 BAUD</li> <li>4 800 BAUD</li> <li>9 600 BAUD</li> <li>19 200 BAUD</li> <li>38 400 BAUD</li> <li>57 600 BAUD</li> <li>115 200 BAUD</li> </ul>                                              |
| <b>Data transfer mode</b>  | <ul style="list-style-type: none"> <li>ASCII</li> <li>RTU</li> </ul>                                                                                                                                                                                       |
| <b>Data access</b>         | Each device parameter can be accessed via Modbus RS485.<br> For Modbus register information, see "Description of device parameters" documentation                         |

## 16.5 Power supply

|                     |                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Terminal assignment | <ul style="list-style-type: none"> <li>→ 28</li> <li>→ 27</li> <li></li> </ul>                                                                                                                                                                                                                                                                                                                                                         |
| Supply voltage      | <p>The power unit must be tested to ensure it meets safety requirements (e.g. PELV, SELV).</p> <p><b>Transmitter</b></p> <ul style="list-style-type: none"> <li>Modbus RS485, for use in non-hazardous areas and Zone 2/Div. 2:<br/>DC 20 to 30 V</li> <li>Modbus RS485, for use in intrinsically safe areas:<br/>Power supply via Safety Barrier Promass 100</li> </ul> <p><b>Promass 100 safety barrier</b></p> <p>DC 20 to 30 V</p> |

| Power consumption                                                              | <p><b>Transmitter</b></p> <table border="1"> <thead> <tr> <th>Order code for "Output"</th><th>Maximum Power consumption</th></tr> </thead> <tbody> <tr> <td>Option <b>M</b> Modbus RS485, for use in non-hazardous areas and Zone 2/Div. 2</td><td>3.5 W</td></tr> <tr> <td>Option <b>M</b>: Modbus RS485, for use in intrinsically safe areas</td><td>2.45 W</td></tr> </tbody> </table> | Order code for "Output" | Maximum Power consumption | Option <b>M</b> Modbus RS485, for use in non-hazardous areas and Zone 2/Div. 2 | 3.5 W | Option <b>M</b> : Modbus RS485, for use in intrinsically safe areas | 2.45 W |
|--------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|---------------------------|--------------------------------------------------------------------------------|-------|---------------------------------------------------------------------|--------|
| Order code for "Output"                                                        | Maximum Power consumption                                                                                                                                                                                                                                                                                                                                                                 |                         |                           |                                                                                |       |                                                                     |        |
| Option <b>M</b> Modbus RS485, for use in non-hazardous areas and Zone 2/Div. 2 | 3.5 W                                                                                                                                                                                                                                                                                                                                                                                     |                         |                           |                                                                                |       |                                                                     |        |
| Option <b>M</b> : Modbus RS485, for use in intrinsically safe areas            | 2.45 W                                                                                                                                                                                                                                                                                                                                                                                    |                         |                           |                                                                                |       |                                                                     |        |

### Safety Barrier Promass 100

| Order code for "Output"                                             | Maximum Power consumption |
|---------------------------------------------------------------------|---------------------------|
| Option <b>M</b> : Modbus RS485, for use in intrinsically safe areas | 4.8 W                     |

### Current consumption

#### Transmitter

| Order code for "Output"                                                        | Maximum current consumption | Maximum switch-on current |
|--------------------------------------------------------------------------------|-----------------------------|---------------------------|
| Option <b>M</b> Modbus RS485, for use in non-hazardous areas and Zone 2/Div. 2 | 90 mA                       | 10 A (< 0.8 ms)           |
| Option <b>M</b> : Modbus RS485, for use in intrinsically safe areas            | 145 mA                      | 16 A (< 0.4 ms)           |

### Safety Barrier Promass 100

| Order code for "Output"                                             | Maximum current consumption | Maximum switch-on current |
|---------------------------------------------------------------------|-----------------------------|---------------------------|
| Option <b>M</b> : Modbus RS485, for use in intrinsically safe areas | 230 mA                      | 10 A (< 0.8 ms)           |

### Device fuse

Fine-wire fuse (slow-blow) T2A

### Power supply failure

- Totalizers stop at the last value measured.
- Depending on the device version, the configuration is retained in the device memory or in the plug-in memory (HistoROM DAT).
- Error messages (incl. total operated hours) are stored.

### Electrical connection

→  31

### Potential equalization

→  33

### Terminals

#### Transmitter

Spring terminals for wire cross-sections 0.5 to 2.5 mm<sup>2</sup> (20 to 14 AWG)

#### Promass 100 safety barrier

Plug-in screw terminals for wire cross-sections 0.5 to 2.5 mm<sup>2</sup> (20 to 14 AWG)

### Cable entries

- Cable gland: M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)
- Thread for cable entry:
  - M20
  - G ½"
  - NPT ½"

### Cable specification

→  26

## 16.6 Performance characteristics

Reference operating conditions

- Error limits based on ISO 11631
  - Water
    - +15 to +45 °C (+59 to +113 °F)
    - 2 to 6 bar (29 to 87 psi)
  - Data as indicated in the calibration protocol
  - Accuracy based on accredited calibration rigs according to ISO 17025
-  To obtain measured errors, use the *Applicator* sizing tool →  86

Maximum measurement error

o.r. = of reading; 1 g/cm<sup>3</sup> = 1 kg/l; T = medium temperature

### Base accuracy

 Design fundamentals →  96

*Mass flow and volume flow (liquids)*

±0.10 % o.r.

*Density (liquids)*

| Under reference conditions | Standard density calibration <sup>1)</sup> | Wide-range Density specification <sup>2) 3)</sup> |
|----------------------------|--------------------------------------------|---------------------------------------------------|
| [g/cm <sup>3</sup> ]       | [g/cm <sup>3</sup> ]                       | [g/cm <sup>3</sup> ]                              |
| ±0.0005                    | ±0.01                                      | ±0.002                                            |

1) Valid over the entire temperature and density range

2) Valid range for special density calibration: 0 to 2 g/cm<sup>3</sup>, +10 to +80 °C (+50 to +176 °F)

3) order code for "Application package", option EE "Special density"

*Temperature*

±0.5 °C ± 0.005 · T °C (±0.9 °F ± 0.003 · (T – 32) °F)

### Zero point stability

| DN   |               | Zero point stability |          |
|------|---------------|----------------------|----------|
| [mm] | [in]          | [kg/h]               | [lb/min] |
| 8    | $\frac{3}{8}$ | 0.20                 | 0.007    |
| 15   | $\frac{1}{2}$ | 0.65                 | 0.024    |
| 25   | 1             | 1.80                 | 0.066    |
| 40   | 1½            | 4.50                 | 0.165    |
| 50   | 2             | 7.0                  | 0.257    |

### Flow values

Flow values as turndown parameters depending on nominal diameter.

*SI units*

| DN   | 1:1    | 1:10   | 1:20   | 1:50   | 1:100  | 1:500  |
|------|--------|--------|--------|--------|--------|--------|
| [mm] | [kg/h] | [kg/h] | [kg/h] | [kg/h] | [kg/h] | [kg/h] |
| 8    | 2 000  | 200    | 100    | 40     | 20     | 4      |
| 15   | 6 500  | 650    | 325    | 130    | 65     | 13     |
| 25   | 18 000 | 1 800  | 900    | 360    | 180    | 36     |
| 40   | 45 000 | 4 500  | 2 250  | 900    | 450    | 90     |
| 50   | 70 000 | 7 000  | 3 500  | 1 400  | 700    | 140    |

*US units*

| DN            | 1:1      | 1:10     | 1:20     | 1:50     | 1:100    | 1:500    |
|---------------|----------|----------|----------|----------|----------|----------|
| [inch]        | [lb/min] | [lb/min] | [lb/min] | [lb/min] | [lb/min] | [lb/min] |
| $\frac{3}{8}$ | 73.50    | 7.350    | 3.675    | 1.470    | 0.735    | 0.147    |
| $\frac{1}{2}$ | 238.9    | 23.89    | 11.95    | 4.778    | 2.389    | 0.478    |
| 1             | 661.5    | 66.15    | 33.08    | 13.23    | 6.615    | 1.323    |
| 1½            | 1 654    | 165.4    | 82.70    | 33.08    | 16.54    | 3.308    |
| 2             | 2 573    | 257.3    | 128.7    | 51.46    | 25.73    | 5.146    |

**Accuracy of outputs**

 The output accuracy must be factored into the measurement error if analog outputs are used; but can be ignored for fieldbus outputs (e.g. Modbus RS485, EtherNet/IP).

The outputs have the following base accuracy specifications:

---

Repeatability o.r. = of reading;  $1 \text{ g/cm}^3 = 1 \text{ kg/l}$ ; T = medium temperature

**Base repeatability**

 Design fundamentals →  96

*Mass flow and volume flow (liquids)*

$\pm 0.05 \text{ \% o.r.}$

*Density (liquids)*

$\pm 0.00025 \text{ g/cm}^3$

*Temperature*

$\pm 0.25 \text{ }^\circ\text{C} \pm 0.0025 \cdot T \text{ }^\circ\text{C} (\pm 0.45 \text{ }^\circ\text{F} \pm 0.0015 \cdot (T-32) \text{ }^\circ\text{F})$

---

Response time The response time depends on the configuration (damping).

---

Influence of medium temperature

**Mass flow**

o.f.s. = of full scale value

If there is a difference between the temperature during zero adjustment and the process temperature, the additional measurement error of the sensors is typically  $\pm 0.0002 \text{ \% o.f.s./}^\circ\text{C} (\pm 0.0001 \text{ \% o. f.s./}^\circ\text{F})$ .


The influence is reduced when the zero adjustment is performed at process temperature.

Density

If there is a difference between the density calibration temperature and the process temperature, the measurement error of the sensors is typically  $\pm 0.0001 \text{ g/cm}^3/^{\circ}\text{C}$  ( $\pm 0.00005 \text{ g/cm}^3/^{\circ}\text{F}$ ). Field density adjustment is possible.

Wide-range density specification (special density calibration)

If the process temperature is outside the valid range ( $\rightarrow$   93) the measurement error is  $\pm 0.0001 \text{ g/cm}^3/^{\circ}\text{C}$  ( $\pm 0.00005 \text{ g/cm}^3/^{\circ}\text{F}$ )

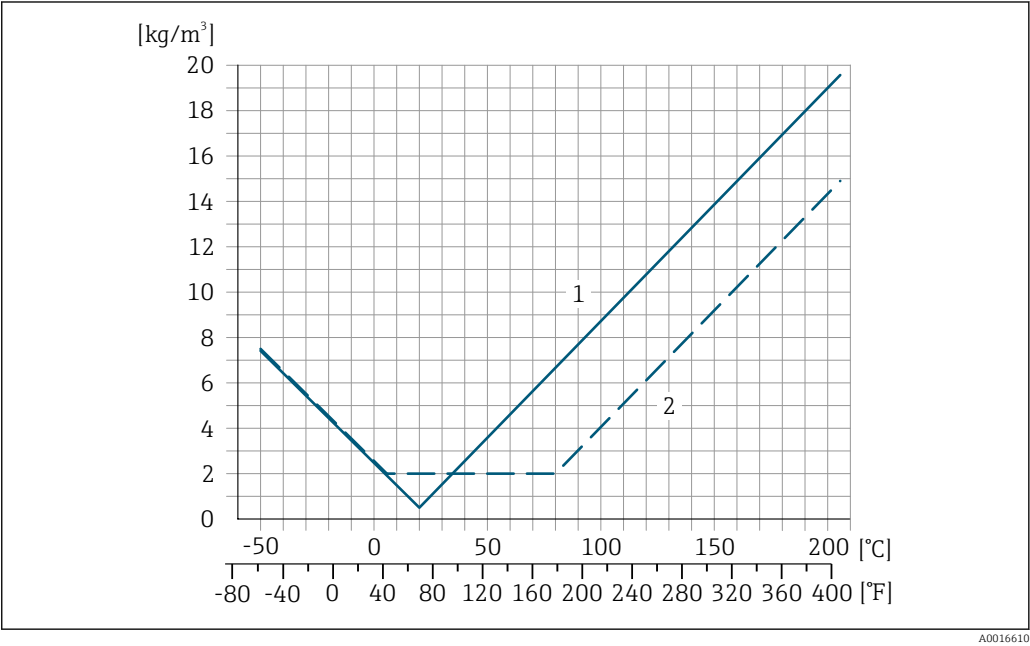

- 1 Field density adjustment, for example at +20 °C (+68 °F)
- 2 Special density calibration

Temperature

$\pm 0.005 \cdot T^{\circ}\text{C}$  ( $\pm 0.005 \cdot (T - 32)^{\circ}\text{F}$ )

Influence of medium pressure

The following shows how the process pressure (gauge pressure) affects the accuracy of the mass flow.

o.r. = of reading



- It is possible to compensate for the effect by:
- Reading in the current pressure measured value via the current input or a digital input.
  - Specifying a fixed value for the pressure in the device parameters.



Operating Instructions .

| DN   |               | [% o.r./bar] | [% o.r./psi] |
|------|---------------|--------------|--------------|
| [mm] | [in]          |              |              |
| 8    | $\frac{3}{8}$ | -0.002       | -0.0001      |
| 15   | $\frac{1}{2}$ | -0.006       | -0.0004      |
| 25   | 1             | -0.005       | -0.0003      |
| 40   | 1½            | -0.007       | -0.0005      |
| 50   | 2             | -0.006       | -0.0004      |

Design fundamentals

o.r. = of reading, o.f.s. = of full scale value  
BaseAccu = base accuracy in % o.r., BaseRepeat = base repeatability in % o.r.  
MeasValue = measured value; ZeroPoint = zero point stability


Calculation of the maximum measured error as a function of the flow rate

| Flow rate                                                                            | Maximum measured error in % o.r.                                                     |
|--------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| $\geq \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$<br><small>A0021332</small> | $\pm \text{BaseAccu}$<br><small>A0021339</small>                                     |
| $< \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$<br><small>A0021333</small>    | $\pm \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$<br><small>A0021334</small> |

Calculation of the maximum repeatability as a function of the flow rate

| Flow rate                                                                                                | Maximum repeatability in % o.r.                                                                        |
|----------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------|
| $\geq \frac{\frac{1}{2} \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$<br><small>A0021335</small> | $\pm \text{BaseRepeat}$<br><small>A0021340</small>                                                     |
| $< \frac{\frac{1}{2} \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$<br><small>A0021336</small>    | $\pm \frac{1}{2} \cdot \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$<br><small>A0021337</small> |

Example of maximum measurement error

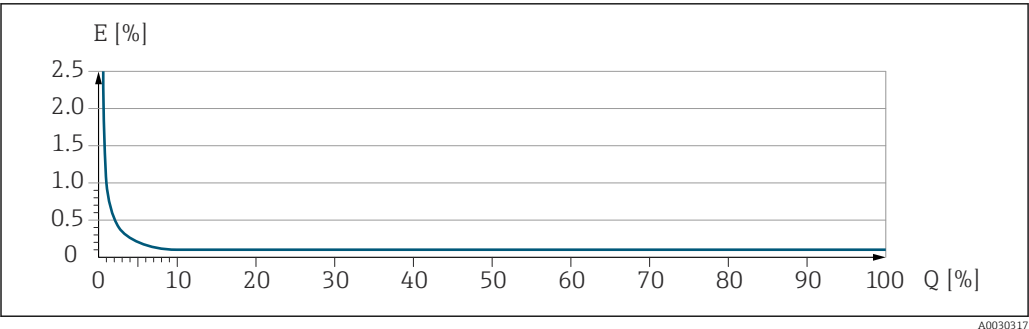

E    Maximum measurement error in % o.r. (example)  
Q    Flow rate in % of maximum full scale value

16.7    Installation

Installation requirements    → 18

16.8    Environment

Ambient temperature range    → 20 → 20

Temperature tables

- Observe the interdependencies between the permitted ambient and fluid temperatures when operating the device in hazardous areas.
- For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.


|                                           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|-------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Storage temperature                       | -40 to +80 °C (-40 to +176 °F), preferably at +20 °C (+68 °F) (standard version)<br>-50 to +80 °C (-58 to +176 °F) (Order code for "Test, certificate", option JM)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Climate class                             | DIN EN 60068-2-38 (test Z/AD)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Degree of protection                      | <b>Transmitter and sensor</b> <ul style="list-style-type: none"> <li>Standard: IP66/67, Type 4X enclosure, suitable for pollution degree 4</li> <li>With the order code for "Sensor options", option CM: IP69 can also be ordered</li> <li>When the housing is open: IP20, Type 1 enclosure, suitable for pollution degree 2</li> <li>Display module: IP20, Type 1 enclosure, suitable for pollution degree 2</li> </ul> <b>Safety Barrier Promass 100</b><br>IP20                                                                                                                                                                                                                                                                                                             |
| Vibration resistance and shock resistance | <b>Sinusoidal vibration similar to IEC 60068-2-6</b> <ul style="list-style-type: none"> <li>2 to 8.4 Hz, 3.5 mm peak</li> <li>8.4 to 2 000 Hz, 1 g peak</li> </ul> <b>Broadband random vibration similar to IEC 60068-2-64</b> <ul style="list-style-type: none"> <li>10 to 200 Hz, 0.003 g<sup>2</sup>/Hz</li> <li>200 to 2 000 Hz, 0.001 g<sup>2</sup>/Hz</li> <li>Total: 1.54 g rms</li> </ul> <b>Half-sine shocks similar to IEC 60068-2-27</b><br>6 ms 30 g<br><b>Rough handling shocks similar to IEC 60068-2-31</b>                                                                                                                                                                                                                                                     |
| Electromagnetic compatibility (EMC)       | <ul style="list-style-type: none"> <li>As per IEC/EN 61326</li> <li>As per NAMUR Recommendation 21 (NE 21), NAMUR Recommendation 21 (NE 21) is fulfilled when the device is installed in accordance with NAMUR Recommendation 98 (NE 98).</li> <li>As per IEC/EN 61000-6-2 and IEC/EN 61000-6-4</li> <li>Complies with emission limits for industry as per EN 55011 (class A)</li> </ul>  Details are provided in the Declaration of Conformity.<br> This unit is not intended for use in residential environments and cannot guarantee adequate protection of the radio reception in such environments. |

## 16.9 Process

### Medium temperature range

|                              |                                 |                                                                         |
|------------------------------|---------------------------------|-------------------------------------------------------------------------|
| Standard version             | -50 to +150 °C (-58 to +302 °F) | Order code for "Measuring tube mat., wetted surface", option BB, BC, BD |
| Extended temperature version | -50 to +205 °C (-58 to +401 °F) | Order code for "Measuring tube mat., wetted surface", option TD, TG     |

Dependency of ambient temperature on medium temperature

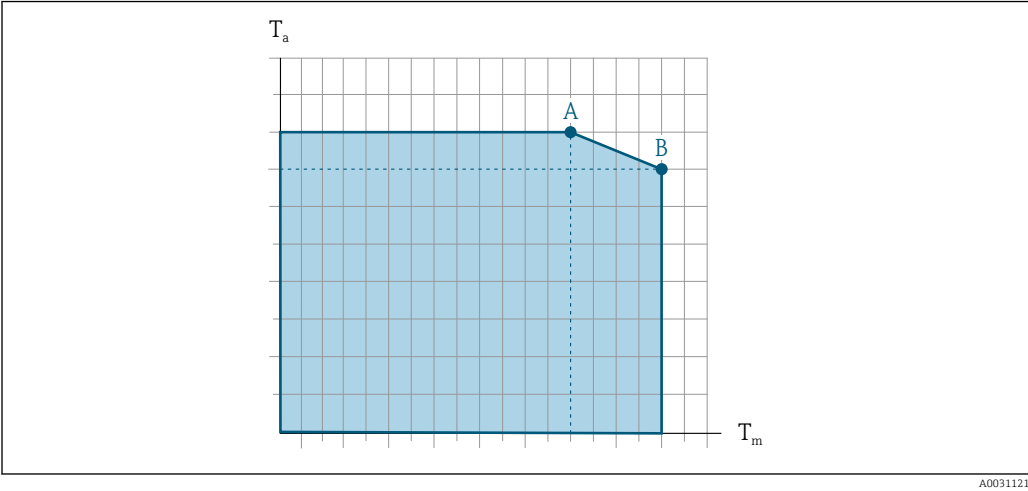

19 Exemplary representation, values in the table below.

T<sub>a</sub> Ambient temperature  
T<sub>m</sub> Medium temperature  
A Maximum permitted medium temperature T<sub>m</sub> at T<sub>a max</sub> = 60 °C (140 °F); higher medium temperatures T<sub>m</sub> require a reduction in the ambient temperature T<sub>a</sub>  
B Maximum permitted ambient temperature T<sub>a</sub> for the maximum specified medium temperature T<sub>m</sub> of the sensor

**i** Values for devices that are used in the hazardous area:  
Separate Ex documentation (XA) for the device .

| Version                      | Not insulated  |                 |                |                | Insulated      |                 |                |                 |
|------------------------------|----------------|-----------------|----------------|----------------|----------------|-----------------|----------------|-----------------|
|                              | A              |                 | B              |                | A              |                 | B              |                 |
|                              | T <sub>a</sub> | T <sub>m</sub>  | T <sub>a</sub> | T <sub>m</sub> | T <sub>a</sub> | T <sub>m</sub>  | T <sub>a</sub> | T <sub>m</sub>  |
| Standard version             | 60 °C (140 °F) | 150 °C (302 °F) | –              | –              | 60 °C (140 °F) | 110 °C (230 °F) | 55 °C (131 °F) | 150 °C (302 °F) |
| Extended temperature version | 60 °C (140 °F) | 205 °C (401 °F) | –              | –              | 60 °C (140 °F) | 110 °C (230 °F) | 50 °C (122 °F) | 205 °C (401 °F) |

Medium density 0 to 5 000 kg/m<sup>3</sup> (0 to 312 lb/cf)

Pressure/temperature ratings **b** For an overview of the pressure/temperature ratings for the process connections, see the Technical Information

Sensor housing

The sensor housing is filled with dry nitrogen gas and protects the electronics and mechanics inside.

**i** If a measuring tube fails (e.g. due to process characteristics like corrosive or abrasive fluids), the fluid will initially be contained by the sensor housing.

If the sensor is to be purged with gas (gas detection), it should be equipped with purge connections.

**i** Do not open the purge connections unless the containment can be filled immediately with a dry, inert gas. Use only low pressure to purge.

Maximum pressure: 5 bar (72.5 psi)

### Burst pressure of the sensor housing

The following sensor housing burst pressures are only valid for standard devices and/or devices equipped with closed purge connections (not opened/as delivered).

If a device fitted with purge connections (order code for "Sensor option", option CH "Purge connection") is connected to the purge system, the maximum pressure is determined by the purge system itself or by the device, depending on which component has the lower pressure classification.

The sensor housing burst pressure refers to a typical internal pressure which is reached prior to mechanical failure of the sensor housing and which was determined during type testing. The corresponding type test declaration can be ordered with the device (order code for "Additional approval", option LN "Sensor housing burst pressure, type test").

| DN   |                | Sensor housing burst pressure |       |
|------|----------------|-------------------------------|-------|
| [mm] | [in]           | [bar]                         | [psi] |
| 8    | $\frac{3}{8}$  | 190                           | 2 755 |
| 15   | $\frac{1}{2}$  | 175                           | 2 538 |
| 25   | 1              | 165                           | 2 392 |
| 40   | $1\frac{1}{2}$ | 152                           | 2 204 |
| 50   | 2              | 103                           | 1 494 |



For information on the dimensions: see the "Mechanical construction" section of the "Technical Information" document

### Internal cleaning

- CIP cleaning
- SIP cleaning
- Cleaning with pigs

#### Options

Oil- and grease-free version for wetted parts, without declaration

Order code for "Service", option HA <sup>2)</sup>

### Flow limit

Select the nominal diameter by optimizing between the required flow range and permissible pressure loss.



For an overview of the full scale values for the measuring range, see the "Measuring range" section → 89

- The minimum recommended full scale value is approx. 1/20 of the maximum full scale value
- For the most common applications, 20 to 50 % of the maximum full scale value can be considered ideal
- A low full scale value must be selected for abrasive media (such as liquids with entrained solids): flow velocity < 1 m/s (< 3 ft/s).



To calculate the flow limit, use the *Applicator* sizing tool → 86

### Pressure loss



To calculate the pressure loss, use the *Applicator* sizing tool → 86

### System pressure

→ 20

<sup>2)</sup> Cleaning only refers to the measuring instrument. Any accessories that have been supplied are not cleaned.

## 16.10 Mechanical construction

### Design, dimensions



For the dimensions and installed lengths of the device, see the "Technical Information" document, "Mechanical construction" section

### Weight

All values (weight exclusive of packaging material) refer to devices with EN/DIN PN 40 flanges. Weight specifications including transmitter: order code for "Housing", option A "Compact, aluminum coated".

#### Weight in SI units

| DN<br>[mm] | Weight [kg] |
|------------|-------------|
| 8          | 12          |
| 15         | 14          |
| 25         | 20          |
| 40         | 36          |
| 50         | 59          |

#### Weight in US units

| DN<br>[in] | Weight [lbs] |
|------------|--------------|
| 3/8        | 26           |
| 1/2        | 31           |
| 1          | 44           |
| 1 1/2      | 79           |
| 2          | 130          |

#### Safety Barrier Promass 100


49 g (1.73 ounce)

### Materials

#### Transmitter housing

- Order code for "Housing", option **A** "Compact, aluminum coated":  
Aluminum, AlSi10Mg, coated
- Order code for "Housing", option **B** "Compact, hygienic, stainless":  
Hygienic version, stainless steel 1.4301 (304)
- Order code for "Housing", option **C** "Ultra-compact, hygienic, stainless":  
Hygienic version, stainless steel 1.4301 (304)

Cable entries/cable glands

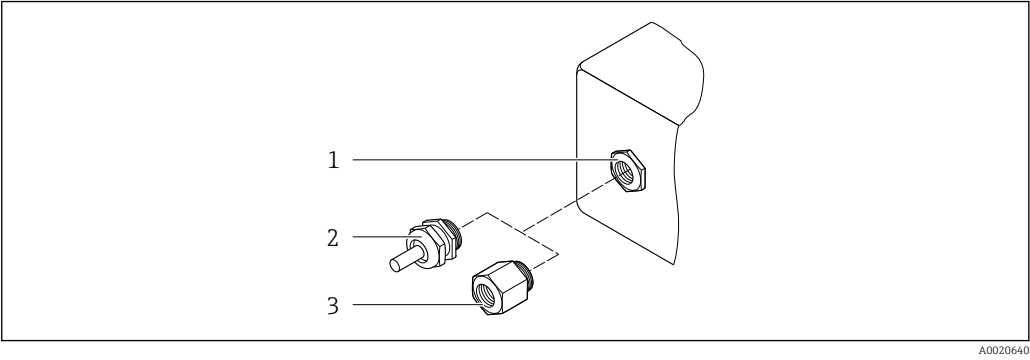

20 Possible cable entries/cable glands

- 1 Internal thread M20 × 1.5
- 2 Cable gland M20 × 1.5
- 3 Adapter for cable entry with internal thread G ½" or NPT ½"

Order code for "Housing", option A "Compact, aluminum, coated"

The various cable entries are suitable for hazardous and non-hazardous areas.

| Cable entry/cable gland                           | Material            |
|---------------------------------------------------|---------------------|
| Cable gland M20 × 1.5                             | Nickel-plated brass |
| Adapter for cable entry with female thread G ½"   |                     |
| Adapter for cable entry with female thread NPT ½" |                     |

Order code for "Housing", option B "Compact, hygienic, stainless"

The various cable entries are suitable for hazardous and non-hazardous areas.

| Cable entry/cable gland                           | Material                       |
|---------------------------------------------------|--------------------------------|
| Cable gland M20 × 1.5                             | Stainless steel, 1.4404 (316L) |
| Adapter for cable entry with female thread G ½"   |                                |
| Adapter for cable entry with female thread NPT ½" |                                |

Device plug

| Electrical connection | Material                                                                                                                                                      |
|-----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Plug M12x1            | <ul style="list-style-type: none"><li>Socket: Stainless steel, 1.4404 (316L)</li><li>Contact housing: Polyamide</li><li>Contacts: Gold-plated brass</li></ul> |

Sensor housing

- Acid and alkali-resistant outer surface
- Stainless steel 1.4301 (304)

Measuring tubes

Stainless steel, 1.4435 BN2 (316L)

### Process connections

- Flanges similar to EN 1092-1 (DIN 2501) / similar to ASME B16.5 / similar to JIS B2220:  
Stainless steel, 1.4404 (F316/F316L)
- All other process connections:  
Stainless steel, 1.4435 BN2 (316L)



Available process connections → 102

### Seals

Welded process connections without internal seals

### Accessories

*Safety Barrier Promass 100*

Housing: Polyamide

### Process connections

- Fixed flange connections:
  - EN 1092-1 (DIN 2501) flange
  - EN 1092-1 (DIN 2512N) flange
  - ASME B16.5 flange
  - JIS B2220 flange
  - DIN 11864-2 Form A flange, DIN 11866 series A, flange with notch
  - BBS flange small (sterile orbital), DIN 11866 series A, female
  - BBS flange small (sterile orbital), DIN 11866 series B, female
- Clamp connections:
  - Tri-Clamp (OD tubes), DIN 11866 series C
  - DIN 11864-3 Form A clamp, DIN 11866 series A, with notch
  - DIN 32676 clamp, DIN 11866 series A
  - ISO 2852 clamp, ISO 2037
  - ISO 2852 clamp, DIN 11866 series B
  - BBS Quick-Connect (sterile orbital), DIN 11866 series A, female
  - BBS Quick-Connect (sterile orbital), DIN 11866 series B, female
  - Neumo BioConnect clamp, DIN 11866 series A, clamp form R
- Eccentric clamp connections:
  - Eccen. Tri-Clamp, DIN 11866 series C
  - DIN 11864-3 Form A clamp, DIN 11866 series A, with notch
  - DIN 32676 clamp, DIN 11866 series A
  - ISO 2852 clamp, DIN 11866 series B
  - BBS Quick-Connect (sterile orbital), DIN 11866 series A, female
  - BBS Quick-Connect (sterile orbital), DIN 11866 series B, female
  - Neumo BioConnect clamp, DIN 11866 series A, clamp form R
- Thread:
  - DIN 11851 thread, DIN 11866 series A
  - SMS 1145 thread
  - ISO 2853 thread, ISO 2037
  - DIN 11864-1 Form A thread, DIN 11866 series A
  - BBS thread (sterile orbital), DIN 11866 series A
  - BBS thread (sterile orbital), DIN 11866 series B



Process connection materials

Surface roughness All data relate to parts in contact with medium.

The following surface roughness categories can be ordered:


| Category                              | Method                           | Option(s)/Order code<br>"Measuring tube mat., wetted surface" |
|---------------------------------------|----------------------------------|---------------------------------------------------------------|
| $Ra \leq 0.76 \mu m (30 \mu in)^{1)}$ | Mechanically polished            | BB, TD                                                        |
| $Ra \leq 0.38 \mu m (15 \mu in)^{1)}$ | Mechanically and electropolished | BC, TG                                                        |

1) Ra according to ISO 21920

### 16.11 Operability

Service interface Via service interface (CDI)

Modbus RS485

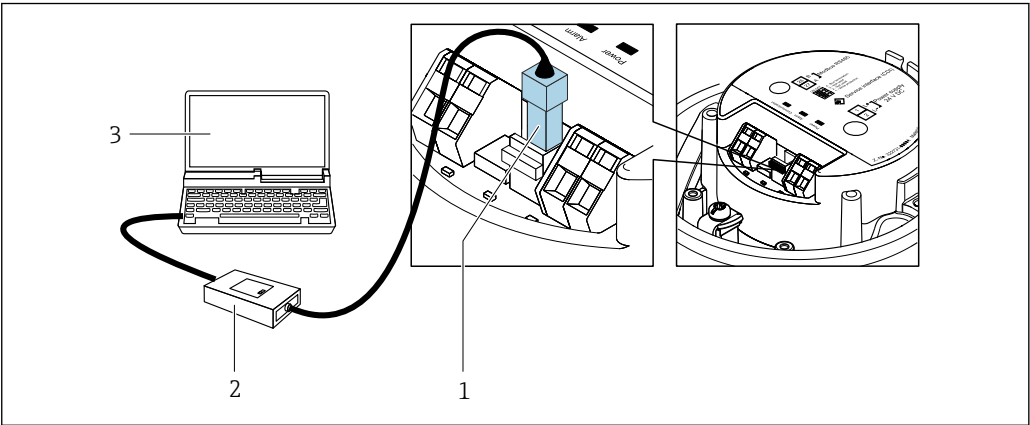

- 1 Service interface (CDI) of the measuring instrument
- 2 Commubox FXA291
- 3 Computer with FieldCare operating tool with COM DTM "CDI Communication FXA291"

Languages Can be operated in the following languages:  
Via "FieldCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese

### 16.12 Certificates and approvals

Current certificates and approvals for the product are available at [www.endress.com](http://www.endress.com) on the relevant product page:

1. Select the product using the filters and search field.
2. Open the product page.
3. Select **Downloads**.

CE mark The device meets the legal requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied.  
Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

UKCA marking The device meets the legal requirements of the applicable UK regulations (Statutory Instruments). These are listed in the UKCA Declaration of Conformity along with the

designated standards. By selecting the order option for UKCA marking, Endress+Hauser confirms a successful evaluation and testing of the device by affixing the UKCA mark.

Contact address Endress+Hauser UK:

Endress+Hauser Ltd.

Floats Road

Manchester M23 9NF

United Kingdom

[www.uk.endress.com](http://www.uk.endress.com)

|                              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| RCM marking                  | The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Ex-approval                  | The devices are certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Hygienic compatibility       | <ul style="list-style-type: none"> <li>■ 3-A approval <ul style="list-style-type: none"> <li>■ Only measuring instruments with the order code for "Additional approval", option LP "3A" have 3-A approval.</li> <li>■ The 3-A approval refers to the measuring instrument.</li> <li>■ When installing the measuring instrument, ensure that no liquid can accumulate on the outside of the measuring instrument.<br/>A remote display module must be installed in accordance with the 3-A Standard.</li> <li>■ Accessories (e.g. heating jacket, weather protection cover, wall holder unit) must be installed in accordance with the 3-A Standard.<br/>Each accessory can be cleaned. Disassembly may be necessary under certain circumstances.</li> </ul> </li> <li>■ EHEDG-tested (Type EL Class I) <ul style="list-style-type: none"> <li>Only devices with the order code for "Additional approval", option LT "EHEDG" have been tested and meet the requirements of the EHEDG.</li> <li>To meet the requirements for EHEDG certification, the device must be used with process connections in accordance with the EHEDG position paper entitled "Easy cleanable Pipe couplings and Process connections" (<a href="http://www.ehedg.org">www.ehedg.org</a>).</li> <li>To meet the requirements for EHEDG certification, the orientation of the device must ensure drainability.</li> <li>Test criteria for cleanability according to EHEDG is a flow velocity of 1.5 m/s in the process line. This speed must be ensured for EHEDG-compliant cleaning.</li> </ul> </li> <li>■ FDA CFR 21 <ul style="list-style-type: none"> <li>■ Food Contact Materials Regulation (EC) 1935/2004</li> <li>■ Food Contact Materials Regulation GB 4806</li> <li>■ The requirements of the Food Contact Material regulations must be observed when selecting the material versions.</li> </ul> </li> </ul> <p> Observe special installation instructions</p> |
| Pharmaceutical compatibility | <ul style="list-style-type: none"> <li>■ FDA 21 CFR 177</li> <li>■ USP &lt;87&gt;</li> <li>■ USP &lt;88&gt; Class VI 121 °C</li> <li>■ TSE/BSE Certificate of Suitability</li> <li>■ cGMP</li> </ul> <p>Devices with the order code for "Test, certificate", option JG "Conformity with cGMP-derived requirements, declaration" comply with the requirements of cGMP with regard to the surfaces of parts in contact with the medium, design, FDA 21 CFR material conformity, USP Class VI tests and TSE/BSE conformity.<br/>A serial number-specific declaration is generated.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |

|                                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|-----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Modbus RS485 certification        | The measuring instrument meets all the requirements of the MODBUS RS485 conformity test and has the "MODBUS RS485 Conformance Test Policy, Version 2.0". The measuring instrument has successfully passed all the test procedures carried out.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Pressure Equipment Directive      | <ul style="list-style-type: none"> <li>■ With the marking               <ul style="list-style-type: none"> <li>a) PED/G1/x (x = category) or</li> <li>b) PESR/G1/x (x = category)</li> </ul>               on the sensor nameplate, Endress+Hauser confirms compliance with the "Essential Safety Requirements"               <ul style="list-style-type: none"> <li>a) specified in Annex I of the Pressure Equipment Directive 2014/68/EU or</li> <li>b) Schedule 2 of Statutory Instruments 2016 No. 1105.</li> </ul> </li> <li>■ Devices not bearing this marking (without PED or PESR) are designed and manufactured according to sound engineering practice. They meet the requirements of               <ul style="list-style-type: none"> <li>a) Art. 4, Section 3 of the Pressure Equipment Directive 2014/68/EU or</li> <li>b) Part 1, Section 8 of Statutory Instruments 2016 No. 1105.</li> </ul>               The scope of application is indicated               <ul style="list-style-type: none"> <li>a) in diagrams 6 to 9 in Annex II of the Pressure Equipment Directive 2014/68/EU or</li> <li>b) in Schedule 3, Section 2 of Statutory Instruments 2016 No. 1105.</li> </ul> </li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| External standards and guidelines | <ul style="list-style-type: none"> <li>■ EN 60529<br/>Degrees of protection provided by enclosure (IP code)</li> <li>■ IEC/EN 60068-2-6<br/>Environmental influences: Test procedure - Test Fc: vibrate (sinusoidal).</li> <li>■ IEC/EN 60068-2-31<br/>Environmental influences: Test procedure - Test Ec: shocks due to rough handling, primarily for devices.</li> <li>■ EN 61010-1<br/>Safety requirements for electrical equipment for measurement, control and laboratory use - general requirements</li> <li>■ GB 30439.5<br/>Safety requirements for industrial automation products - Part 5: Flowmeter safety requirements</li> <li>■ EN 61326-1/-2-3<br/>EMC requirements for electrical equipment for measurement, control and laboratory use</li> <li>■ NAMUR NE 21<br/>Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment</li> <li>■ NAMUR NE 32<br/>Data retention in the event of a power failure in field and control instruments with microprocessors</li> <li>■ NAMUR NE 43<br/>Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.</li> <li>■ NAMUR NE 53<br/>Software of field devices and signal-processing devices with digital electronics</li> <li>■ NAMUR NE 80<br/>The application of the pressure equipment directive to process control devices</li> <li>■ NAMUR NE 105<br/>Specifications for integrating fieldbus devices in engineering tools for field devices</li> <li>■ NAMUR NE 107<br/>Self-monitoring and diagnostics of field devices</li> <li>■ NAMUR NE 131<br/>Requirements for field devices for standard applications</li> </ul> |

- NAMUR NE 132  
Coriolis mass meter
- ETSI EN 300 328  
Guidelines for 2.4 GHz radio components.
- EN 301489  
Electromagnetic compatibility and radio spectrum matters (ERM).

## 16.13 Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: [www.endress.com](http://www.endress.com).

 Detailed information on the application packages:  
Special Documentation →  108

---

### Heartbeat Technology

Order code for "Application package", option EB "Heartbeat Verification + Monitoring"

#### Heartbeat Verification

Meets the requirement for traceable verification in accordance with DIN ISO 9001:2015 Clause 7.6 a) "Control of monitoring and measuring equipment".

- Functional testing in the installed state without interrupting the process.
- Traceable verification results on request, including a report.
- Simple testing process via local operation or other operating interfaces.
- Clear measuring point assessment (pass/fail) with high total test coverage within the framework of manufacturer specifications.
- Extension of calibration intervals according to operator's risk evaluation.

#### Heartbeat Monitoring

Continuously supplies data, which are characteristic of the measuring principle, to an external condition monitoring system for the purpose of preventive maintenance or process analysis. These data enable the operator to:

- Draw conclusions - using these data and other information - about the impact the process influences (e.g. corrosion, abrasion, deposit buildup etc.) have on measuring performance over time.
- Schedule servicing in time.
- Monitor the process or product quality, e.g. gas pockets.

 Detailed information on Heartbeat Technology:  
Special Documentation →  108

---

### Concentration measurement

Order code for "Application package", option ED "Concentration"

Calculation and outputting of fluid concentrations.

The measured density is converted to the concentration of a substance of a binary mixture using the "Concentration" application package:

Concentration calculation from user-defined tables.

The measured values are output via the digital and analog outputs of the measuring instrument.

 For detailed information, see the Special Documentation for the device.

---

### Special density

Order code for "Application package", option EE "Special density"

Many applications use density as a key measured value for monitoring quality or controlling processes. The device measures the density of the fluid as standard and makes this value available to the control system.

The "Special Density" application package offers high-precision density measurement over a wide density and temperature range particularly for applications subject to varying process conditions.

The following information can be found in the calibration certificate supplied:

- Density performance in air
- Density performance in liquids with different density
- Density performance in water with different temperatures



For detailed information, see the Operating Instructions for the device.

## 16.14 Accessories



Overview of accessories available to order → 85

## 16.15 Documentation



For an overview of the scope of the associated Technical Documentation, refer to the following:

- *Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)): Enter the serial number from the nameplate
- *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

Standard documentation

### Brief Operating Instructions

*Brief Operating Instructions for the sensor*

| Measuring instrument | Documentation code |
|----------------------|--------------------|
| Proline Promass P    | KA01286D           |

### Transmitter Brief Operating Instructions

| Measuring device    | Documentation code |
|---------------------|--------------------|
| Proline Promass 100 | KA01335D           |

### Technical Information

| Measuring device      | Documentation code |
|-----------------------|--------------------|
| Proline Promass P 100 | TI01036D           |

### Description of Device Parameters

| Measuring device    | Documentation code |
|---------------------|--------------------|
| Proline Promass 100 | GP01035D           |

Supplementary device-  
dependent documentation

### Safety Instructions

| Content          | Documentation code |
|------------------|--------------------|
| ATEX/IECEX Ex i  | XA00159D           |
| ATEX/IECEX Ex nA | XA01029D           |
| cCSAus IS        | XA00160D           |
| INMETRO Ex i     | XA01219D           |
| INMETRO Ex nA    | XA01220D           |
| NEPSI Ex i       | XA01249D           |
| NEPSI Ex nA      | XA01262D           |

### Special Documentation

| Contents                                        | Documentation code |
|-------------------------------------------------|--------------------|
| Information on the Pressure Equipment Directive | SD01614D           |

### Installation Instructions

| Contents                                                      | Note                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Installation instructions for spare part sets and accessories | <ul style="list-style-type: none"> <li>Access the overview of all the available spare part sets via <i>Device Viewer</i> →  83</li> <li>Accessories available for order with Installation Instructions →  85</li> </ul> |

# Index

## 0 ... 9

3-A approval ..... 104

## A

Access authorization to parameters

    Read access ..... 41

    Write access ..... 41

Access code ..... 41

    Incorrect input ..... 41

Adapting the diagnostic behavior ..... 74

Ambient conditions

    Storage temperature ..... 97

    Vibration resistance and shock resistance ..... 97

Application ..... 88

Application packages ..... 106

Approvals ..... 103

Auto scan buffer

    see Modbus RS485 Modbus data map

## C

Cable entries

    Technical data ..... 92

Cable entry

    Degree of protection ..... 35

CE mark ..... 10, 103

Certificates ..... 103

cGMP ..... 104

Check

    Connection ..... 36

    Received goods ..... 12

Checklist

    Post-connection check ..... 36

    Post-installation check ..... 24

CIP cleaning ..... 99

Climate class ..... 97

Commissioning ..... 49

    Advanced settings ..... 58

    Configuring the device ..... 49

Configuring error response mode, Modbus RS485 ... 73

Connecting the device ..... 31

Connection

    see Electrical connection

Connection cable ..... 26

Connection preparations ..... 30

Connection tools ..... 26

Current consumption ..... 92

## D

Date of manufacture ..... 13

Declaration of Conformity ..... 10

Degree of protection ..... 35, 97

Design

    Measuring device ..... 11

Design fundamentals

    Measurement error ..... 96

    Repeatability ..... 96

Device

    Configuring ..... 49

    Preparing for electrical connection ..... 30

Device components ..... 11

Device description files ..... 44

Device fuse ..... 92

Device locking, status ..... 65

Device name

    Sensor ..... 14

    Transmitter ..... 13

Device repair ..... 83

Device revision ..... 44

Device type code ..... 44

Device Viewer ..... 83

DeviceCare ..... 43

    Device description file ..... 44

Diagnostic information

    Communication interface ..... 73

    Design, description ..... 73

    DeviceCare ..... 72

    FieldCare ..... 72

    LED ..... 70

    Overview ..... 74

    Remedial actions ..... 74

Diagnostic list ..... 77

DIP switch

    see Write protection switch

Disabling write protection ..... 63

Display area

    For operational display ..... 40

Display values

    For locking status ..... 65

Disposal ..... 84

Document

    Function ..... 6

    Symbols ..... 6

Document function ..... 6

Documentation ..... 107

Down pipe ..... 18

## E

EHEDG-tested ..... 104

Electrical connection

    Commubox FXA291 ..... 42, 103

    Degree of protection ..... 35

    Measuring instrument ..... 26

    Operating tools

        Via service interface (CDI) ..... 42, 103

Electromagnetic compatibility ..... 97

Enabling write protection ..... 63

Error messages

    see Diagnostic messages

Event logbook ..... 77

Ex-approval ..... 104

Extended order code

    Sensor ..... 14

|                                            |        |
|--------------------------------------------|--------|
| Transmitter .....                          | 13     |
| <b>F</b>                                   |        |
| FDA .....                                  | 104    |
| Field of application                       |        |
| Residual risks .....                       | 10     |
| FieldCare .....                            | 42     |
| Device description file .....              | 44     |
| Function .....                             | 42     |
| Filtering the event logbook .....          | 78     |
| Firmware                                   |        |
| Release date .....                         | 44     |
| Version .....                              | 44     |
| Firmware history .....                     | 81     |
| Flow direction .....                       | 19, 24 |
| Flow limit .....                           | 99     |
| Food Contact Materials Regulation .....    | 104    |
| Function codes .....                       | 44     |
| Functions                                  |        |
| see Parameter                              |        |
| <b>G</b>                                   |        |
| Galvanic isolation .....                   | 90     |
| <b>H</b>                                   |        |
| Hardware write protection .....            | 63     |
| Hygienic compatibility .....               | 104    |
| <b>I</b>                                   |        |
| I/O electronics module .....               | 11, 31 |
| Identifying the measuring instrument ..... | 12     |
| Incoming acceptance .....                  | 12     |
| Indication                                 |        |
| Current diagnostic event .....             | 76     |
| Previous diagnostic event .....            | 76     |
| Influence                                  |        |
| Medium pressure .....                      | 95     |
| Medium temperature .....                   | 94     |
| Information about this document .....      | 6      |
| Inlet runs .....                           | 20     |
| Input variables .....                      | 89     |
| Inspection                                 |        |
| Installation .....                         | 24     |
| Installation .....                         | 18     |
| Installation dimensions .....              | 20     |
| Installation requirements                  |        |
| Down pipe .....                            | 18     |
| Inlet and outlet runs .....                | 20     |
| Installation dimensions .....              | 20     |
| Mounting location .....                    | 18     |
| Orientation .....                          | 19     |
| Sensor heating .....                       | 21     |
| Thermal insulation .....                   | 20     |
| Vibrations .....                           | 22     |
| Intended use .....                         | 9      |
| Internal cleaning .....                    | 99     |
| <b>L</b>                                   |        |
| Languages, operation options .....         | 103    |

|                                       |     |
|---------------------------------------|-----|
| Local display                         |     |
| see Operational display               |     |
| Low flow cut off .....                | 90  |
| <b>M</b>                              |     |
| Main electronics module .....         | 11  |
| Maintenance work .....                | 82  |
| Manufacturer ID .....                 | 44  |
| Manufacturing date .....              | 14  |
| Materials .....                       | 100 |
| Maximum measurement error .....       | 93  |
| Measured variables                    |     |
| see Process variables                 |     |
| Measurement accuracy .....            | 93  |
| Measuring and test equipment .....    | 82  |
| Measuring device                      |     |
| Conversion .....                      | 83  |
| Design .....                          | 11  |
| Repairs .....                         | 83  |
| Measuring instrument                  |     |
| Disposal .....                        | 84  |
| Installing the sensor .....           | 24  |
| Preparing for mounting .....          | 24  |
| Removing .....                        | 84  |
| Measuring principle .....             | 88  |
| Measuring range                       |     |
| For liquids .....                     | 89  |
| Measuring range, recommended .....    | 99  |
| Measuring system .....                | 88  |
| Medium density .....                  | 98  |
| Medium pressure                       |     |
| Influence .....                       | 95  |
| Medium temperature                    |     |
| Influence .....                       | 94  |
| Menu                                  |     |
| Diagnostics .....                     | 76  |
| Operation .....                       | 65  |
| Setup .....                           | 49  |
| Menus                                 |     |
| For device configuration .....        | 49  |
| For specific settings .....           | 58  |
| Modbus RS485                          |     |
| Configuring error response mode ..... | 73  |
| Diagnostic information .....          | 73  |
| Function codes .....                  | 44  |
| Modbus data map .....                 | 47  |
| Read access .....                     | 44  |
| Reading out data .....                | 48  |
| Register addresses .....              | 45  |
| Register information .....            | 45  |
| Response time .....                   | 45  |
| Scan list .....                       | 47  |
| Write access .....                    | 44  |
| Modbus RS485 certification .....      | 105 |
| Mounting dimensions                   |     |
| see Installation dimensions           |     |
| Mounting location .....               | 18  |
| Mounting preparations .....           | 24  |

|                                             |        |                                                  |        |
|---------------------------------------------|--------|--------------------------------------------------|--------|
| Mounting requirements                       |        | Pressure loss                                    | 99     |
| Static pressure                             | 20     | Pressure/temperature ratings                     | 98     |
| Mounting tools                              | 24     | Process connections                              | 102    |
| <b>N</b>                                    |        | Process variables                                |        |
| Nameplate                                   |        | Calculated                                       | 89     |
| Promass 100 safety barrier                  | 15     | Measured                                         | 89     |
| Sensor                                      | 14     | Product safety                                   | 10     |
| Transmitter                                 | 13     | Protecting parameter settings                    | 63     |
| Netilion                                    | 82     | <b>R</b>                                         |        |
| <b>O</b>                                    |        | RCM marking                                      | 104    |
| Operable flow range                         | 89     | Read access                                      | 41     |
| Operating menu                              |        | Reading off measured values                      | 65     |
| Menus, submenus                             | 38     | Reading out diagnostic information, Modbus RS485 | 73     |
| Structure                                   | 38     | Recalibration                                    | 82     |
| Submenus and user roles                     | 39     | Reference operating conditions                   | 93     |
| Operating philosophy                        | 39     | Registered trademarks                            | 8      |
| Operation                                   | 65     | Repair                                           | 83     |
| Operation options                           | 37     | Notes                                            | 83     |
| Operational display                         | 40     | Repair of a device                               | 83     |
| Operational safety                          | 10     | Repeatability                                    | 94     |
| Order code                                  | 13, 14 | Replacement                                      |        |
| Orientation (vertical, horizontal)          | 19     | Device components                                | 83     |
| Outlet runs                                 | 20     | Requirements for personnel                       | 9      |
| Output signal                               | 90     | Response time                                    | 94     |
| Output variables                            | 90     | Return                                           | 83     |
| <b>P</b>                                    |        | <b>S</b>                                         |        |
| Packaging disposal                          | 17     | Safety                                           | 9      |
| Parameter settings                          |        | Safety Barrier Promass 100                       | 29     |
| Administration (Submenu)                    | 62     | Sensor                                           |        |
| Advanced setup (Submenu)                    | 58     | Installing                                       | 24     |
| Communication (Submenu)                     | 54     | Sensor heating                                   | 21     |
| Corrected volume flow calculation (Submenu) | 59     | Sensor housing                                   | 98     |
| Device information (Submenu)                | 79     | Serial number                                    | 13, 14 |
| Diagnostics (Menu)                          | 76     | Services                                         |        |
| Low flow cut off (Wizard)                   | 56     | Maintenance                                      | 82     |
| Measured variables (Submenu)                | 65     | Repair                                           | 83     |
| Medium selection (Submenu)                  | 53     | Setting the operating language                   | 49     |
| Partially filled pipe detection (Wizard)    | 57     | Settings                                         |        |
| Sensor adjustment (Submenu)                 | 60     | Adapting the measuring device to the process     |        |
| Setup (Menu)                                | 49     | conditions                                       | 68     |
| Simulation (Submenu)                        | 62     | Administration                                   | 62     |
| System units (Submenu)                      | 50     | Communication interface                          | 54     |
| Totalizer (Submenu)                         | 67     | Low flow cut off                                 | 56     |
| Totalizer 1 to n (Submenu)                  | 61     | Medium                                           | 53     |
| Totalizer handling (Submenu)                | 68     | Operating language                               | 49     |
| Zero point adjustment (Submenu)             | 60     | Partially filled pipe detection                  | 57     |
| Performance characteristics                 | 93     | Resetting the device                             | 79     |
| Pharmaceutical compatibility                | 104    | Resetting the totalizer                          | 68     |
| Post-connection check                       | 49     | Sensor adjustment                                | 60     |
| Post-connection check (checklist)           | 36     | System units                                     | 50     |
| Post-installation check                     | 49     | Tag name                                         | 49     |
| Post-installation check (checklist)         | 24     | Totalizer                                        | 61     |
| Potential equalization                      | 33     | Totalizer reset                                  | 68     |
| Power consumption                           | 91     | Signal on alarm                                  | 90     |
| Power supply failure                        | 92     | SIP cleaning                                     | 99     |
| Pressure Equipment Directive                | 105    | Software release                                 | 44     |
|                                             |        | Spare part                                       | 83     |

|                                                   |        |
|---------------------------------------------------|--------|
| Spare parts . . . . .                             | 83     |
| Special connection instructions . . . . .         | 34     |
| Special mounting instructions                     |        |
| Hygienic compatibility . . . . .                  | 22     |
| Standards and guidelines . . . . .                | 105    |
| Static pressure . . . . .                         | 20     |
| Status area                                       |        |
| For operational display . . . . .                 | 40     |
| Status signals . . . . .                          | 72     |
| Storage conditions . . . . .                      | 16     |
| Storage temperature . . . . .                     | 16     |
| Storage temperature range . . . . .               | 97     |
| Structure                                         |        |
| Operating menu . . . . .                          | 38     |
| Submenu                                           |        |
| Administration . . . . .                          | 62     |
| Advanced setup . . . . .                          | 58     |
| Calculated values . . . . .                       | 58     |
| Communication . . . . .                           | 54     |
| Corrected volume flow calculation . . . . .       | 59     |
| Device information . . . . .                      | 79     |
| Event logbook . . . . .                           | 77     |
| Measured values . . . . .                         | 65     |
| Measured variables . . . . .                      | 65     |
| Medium selection . . . . .                        | 53     |
| Overview . . . . .                                | 39     |
| Process variables . . . . .                       | 58     |
| Sensor adjustment . . . . .                       | 60     |
| Simulation . . . . .                              | 62     |
| System units . . . . .                            | 50     |
| Totalizer . . . . .                               | 67     |
| Totalizer 1 to n . . . . .                        | 61     |
| Totalizer handling . . . . .                      | 68     |
| Zero point adjustment . . . . .                   | 60     |
| Supply voltage . . . . .                          | 91     |
| Surface roughness . . . . .                       | 103    |
| Symbols                                           |        |
| For communication . . . . .                       | 40     |
| For diagnostic behavior . . . . .                 | 40     |
| For locking . . . . .                             | 40     |
| For measured variable . . . . .                   | 40     |
| For measurement channel number . . . . .          | 40     |
| For status signal . . . . .                       | 40     |
| In the status area of the local display . . . . . | 40     |
| System design                                     |        |
| Measuring system . . . . .                        | 88     |
| see Measuring device design                       |        |
| System integration . . . . .                      | 44     |
| <b>T</b>                                          |        |
| Technical data, overview . . . . .                | 88     |
| Temperature range                                 |        |
| Medium temperature . . . . .                      | 97     |
| Storage temperature . . . . .                     | 16     |
| Terminal assignment . . . . .                     | 27, 31 |
| Terminals . . . . .                               | 92     |
| Thermal insulation . . . . .                      | 20     |
| Tool                                              |        |
| Transportation . . . . .                          | 16     |

|                                                     |     |
|-----------------------------------------------------|-----|
| Tools                                               |     |
| Electrical connection . . . . .                     | 26  |
| For mounting . . . . .                              | 24  |
| Transmitter                                         |     |
| Connecting the signal cables . . . . .              | 31  |
| Transporting the measuring instrument . . . . .     | 16  |
| Troubleshooting                                     |     |
| General . . . . .                                   | 70  |
| TSE/BSE Certificate of Suitability . . . . .        | 104 |
| <b>U</b>                                            |     |
| UKCA marking . . . . .                              | 103 |
| Use of measuring instrument                         |     |
| Borderline cases . . . . .                          | 9   |
| Incorrect use . . . . .                             | 9   |
| see Intended use                                    |     |
| User roles . . . . .                                | 39  |
| USP Class VI . . . . .                              | 104 |
| <b>V</b>                                            |     |
| Version data for the device . . . . .               | 44  |
| Vibration resistance and shock resistance . . . . . | 97  |
| Vibrations . . . . .                                | 22  |
| <b>W</b>                                            |     |
| W@M Device Viewer . . . . .                         | 12  |
| Weight                                              |     |
| SI units . . . . .                                  | 100 |
| Transport (notes) . . . . .                         | 16  |
| US units . . . . .                                  | 100 |
| Wizard                                              |     |
| Low flow cut off . . . . .                          | 56  |
| Partially filled pipe detection . . . . .           | 57  |
| Workplace safety . . . . .                          | 10  |
| Write access . . . . .                              | 41  |
| Write protection                                    |     |
| Via write protection switch . . . . .               | 63  |
| Write protection switch . . . . .                   | 63  |





[www.addresses.endress.com](http://www.addresses.endress.com)

---

For more Endress+Hauser product please visit: [www.ainstru.com](http://www.ainstru.com)  
Mail: [Sales@ainstru.com](mailto:Sales@ainstru.com)