



Level



Pressure



Flow



Temperature



Liquid  
Analysis



Registration



Systems  
Components



Services



Solutions

Appendix to the operating manual

## RMx621 /FML621

DP-slave module (“PROFIBUS-coupler”) from V2.01.00

Connecting the RMx621 /FML621 to PROFIBUS DP via the  
RS485 serial interface using the external module  
(HMS AnyBus Communicator for PROFIBUS)





## Table of contents

|          |                                           |           |
|----------|-------------------------------------------|-----------|
| <b>1</b> | <b>General</b>                            | <b>4</b>  |
| 1.1      | Transport damage                          | 4         |
| 1.2      | Delivery                                  | 4         |
| 1.3      | Notes on safety conventions and icons     | 4         |
| 1.4      | Abbreviations/terminology explanation     | 4         |
| <b>2</b> | <b>Installation</b>                       | <b>5</b>  |
| 2.1      | Function description                      | 5         |
| 2.2      | Conditions                                | 5         |
| 2.3      | Connections and operating elements        | 6         |
| 2.4      | Installation on DIN rail                  | 6         |
| 2.5      | Connections and terminal layout           | 7         |
| 2.6      | PROFIBUS-DP terminal layout               | 8         |
| 2.7      | Bus address set-up                        | 8         |
| <b>3</b> | <b>Commissioning</b>                      | <b>8</b>  |
| 3.1      | Set-up for the RMx621 / FML621            | 8         |
| 3.2      | Set-up for the PROFIBUS-coupler           | 9         |
| 3.3      | Status display                            | 9         |
| <b>4</b> | <b>Data transmission</b>                  | <b>11</b> |
| 4.1      | General                                   | 11        |
| 4.2      | Usable data construction                  | 11        |
| <b>5</b> | <b>Installation in a Simatic S7</b>       | <b>13</b> |
| 5.1      | Network overview                          | 13        |
| 5.2      | GSD file EH_x153F.gsd                     | 13        |
| 5.3      | Projecting the RMx621 / FML621 as a slave | 13        |
| <b>6</b> | <b>Technical data</b>                     | <b>15</b> |

# 1 General

## 1.1 Transport damage

Please inform both your supplier and transport company.

## 1.2 Delivery

- These operating instructions
- The DP-slave module HMS AnyBus communicator for PROFIBUS
- Serial connection cable for the RMx621 / FML621
- CD-ROM containing the GSD-file and Bitmaps

Should anything be missing please inform your supplier immediately!

## 1.3 Notes on safety conventions and icons

The safety instructions in these Operating Instructions are labelled with the following safety icons and symbols:



Caution!

This symbol draws attention to activities or procedures that can lead to defective operation or to destruction of the device if not carried out properly.



Warning!

This symbol draws attention to activities or procedures that can lead to injuries to persons, to a safety risk or to destruction of the device if not carried out properly.



Note!

This symbol draws attention to activities or procedures that have an indirect effect on operation, or can trigger an unforeseen device reaction if not carried out properly.

## 1.4 Abbreviations/terminology explanation

PROFIBUS-coupler

In the following text the external DP-slave module HMS AnyBus communicator for PROFIBUS will be known as the PROFIBUS-coupler.

PROFIBUS-master


All units such as DCS, PLC, PC-plug in boards, that operate as a PROFIBUS-DP master, will be known as the PROFIBUS-master.

## 2 Installation

### 2.1 Function description

The Profibus-DP connection is made using an external PROFIBUS-coupler. This module is connected to the RMx621 / FML621 using the RS485-serial interface (RxTx1). The PROFIBUS-coupler operates as a master in the direction of the RMx621 / FML621 and reads out the process values in every second and then places these into its buffer memory. In the direction of the Profibus DP system the PROFIBUS-coupler operates with the function of a DP-slave for cyclic data transfer and on request makes the buffer stored process values available to the Bus.

Architecture, see the diagram below.

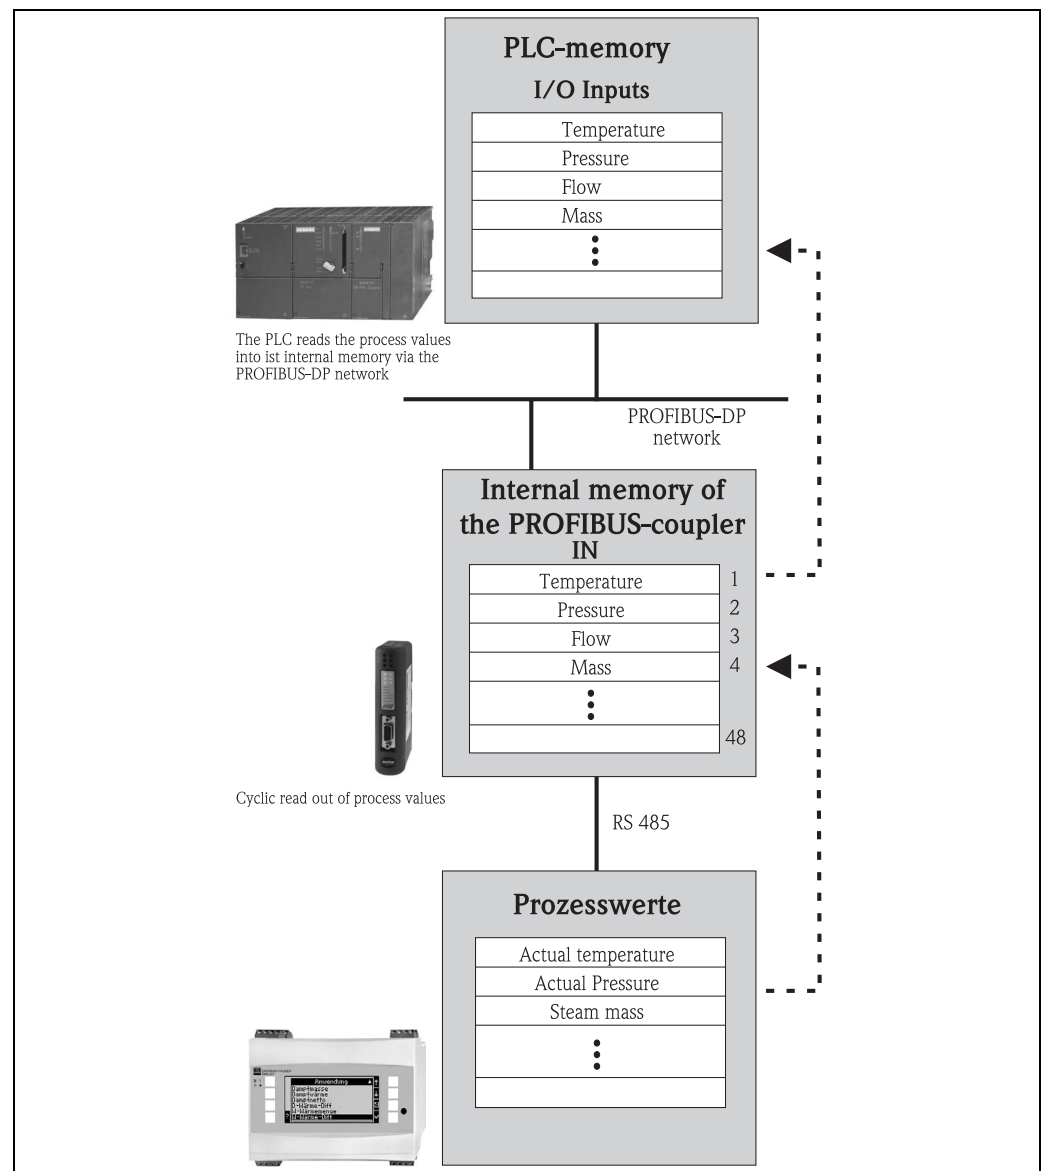

G09-RMC021ZZ-15-10-xx-de-004

### 2.2 Conditions

This option is available in the RMC621, RMM621 and FML621 from Firmware-Version V 1.00.00 and in the RMS621 from Firmware-Version V 2.00.04.

## 2.3 Connections and operating elements




G09-RMs621ZZ-04-10-xx-de-001

## 2.4 Installation on DIN rail

A - Snap ON


B - Snap OFF

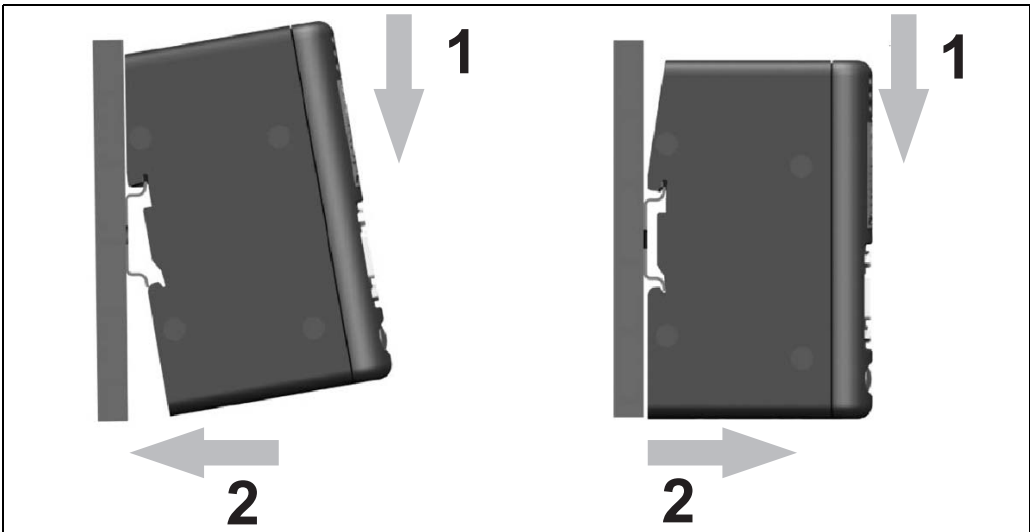

G09-RMs621xx-17-10-06-xx-001

## 2.5 Connections and terminal layout

Connecting the RMx621 / FML621 with the PROFIBUS-coupler

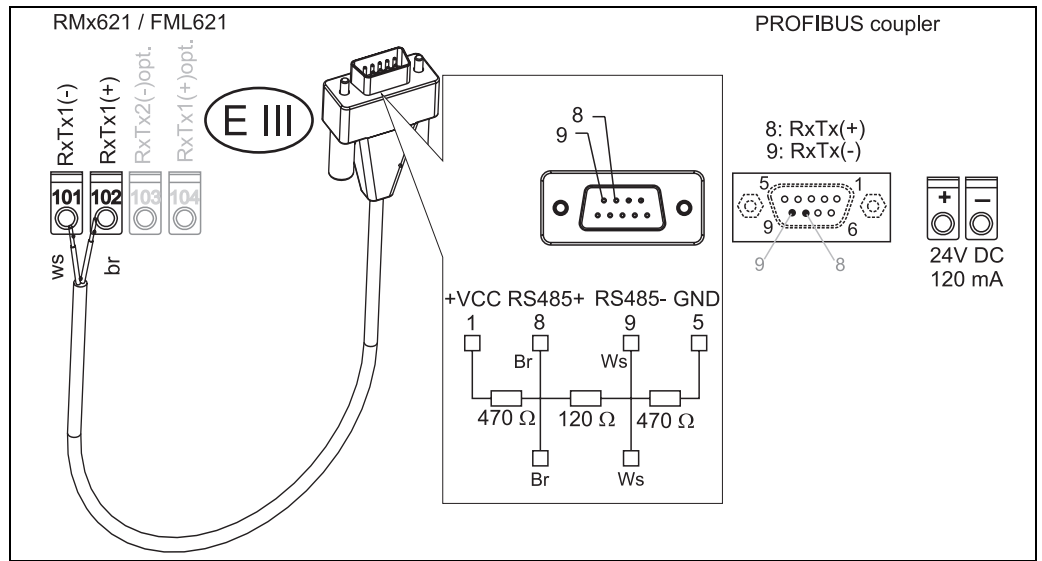

G09-RMx621ZZ-04-10-xx-de-004




Note!

The color indication is valid for the cable supplied.

### PROFIBUS DP connections (to the PROFIBUS-coupler)

For connection to the PROFIBUS we recommend the use of an EN 50170 compliant 9-pole Sub-D plug with an integrated Bus termination resistance.

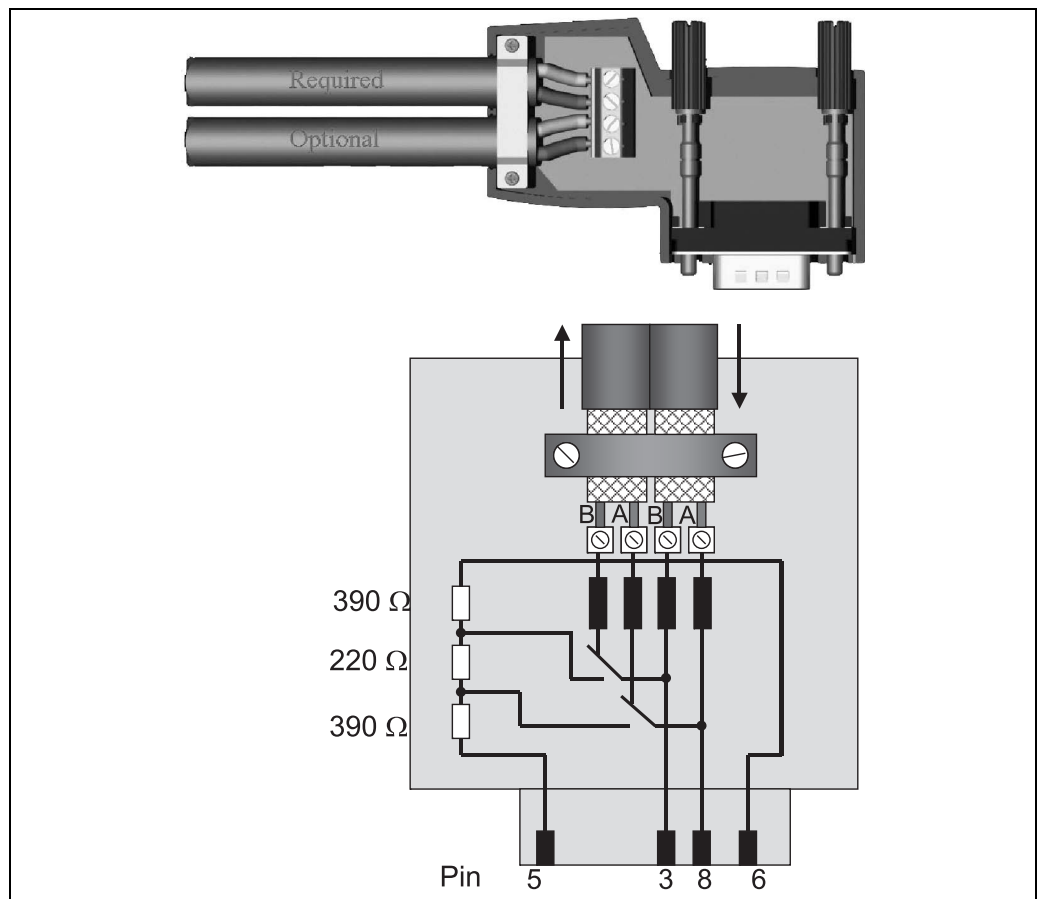


G09-RMx621ZZ-04-10-xx-xx-003

## 2.6 PROFIBUS-DP terminal layout

| Pin No. | Signal  | Description                          |
|---------|---------|--------------------------------------|
| Housing | Screen  | Functional ground                    |
| 3       | B-cable | RxTx (+)                             |
| 5       | GND     | Operational ground                   |
| 6       | VP      | Supply for the termination resistors |
| 8       | A-cable | RxTx (-)                             |

## 2.7 Bus address set-up

The two selector switches used for the set up of the Bus address are available after carefully opening the front cover.

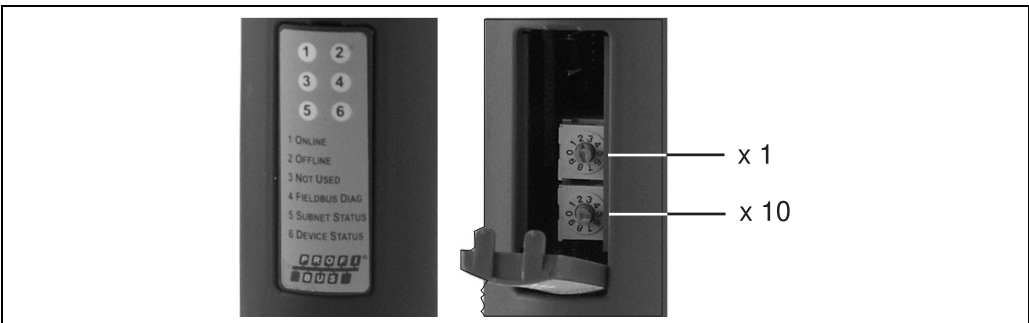

G09-RMx621xx-19-10-00-xx-000

Using these selector switches Bus addresses within a range of 00 to 99 can freely set up.




Note!  
Only use valid addresses.

# 3 Commissioning


## 3.1 Set-up for the RMx621 / FML621

In the main menu **Communication** → **RS485(1)** of the RMx621/ FML621 the parameters for the RS485 (1) interface should be set up as **Unit address** to 1 and **Baudrate** to 38400.

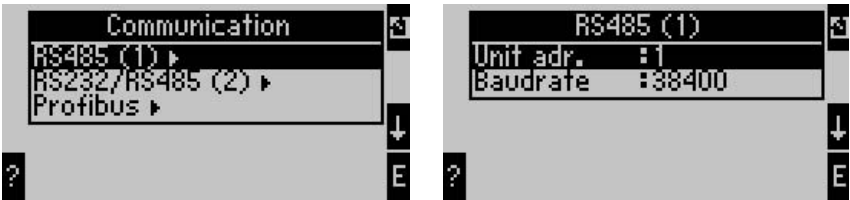

G09-RMx621xx-19-10-00-de-001

How many process values are to be transmitted can be set up in the main menu **Communication** → **PROFIBUS** → **Number**, whereby the maximum number is limited to 48. In further steps each offset address can be allocated to the required process value using selection lists.

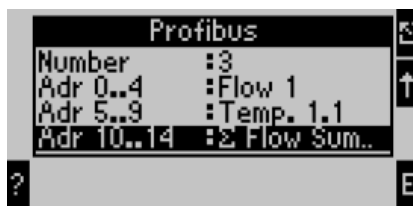

G09-RMx621xx-19-10-00-de-002

For simple and easy further evaluation of the process values the list of offset addresses can be printed out using the ReadWin® 2000 operating software..



#### Note!

When specifying the process values displayed with PROFIBUS DP, please note that the same process value can be set to more than one address.

If a PROFIBUS coupler labeled "Rev.B" is used, device software version V03.02.03 should be used for RMC621 and device software version V02.02.16 for RMS621.

PROFIBUS couplers labeled "Rev.B" have a fixed baudrate of 38,400 baud.


Set the baudrate to 57,600 for devices before "Rev.B".

## 3.2 Set-up for the PROFIBUS-coupler

The PROFIBUS-coupler is already set-up by the factory. Apart from the Bus addresses no further set-up is required. A match to the Profibus-DP data transmission rate is done automatically.

## 3.3 Status display

The 6 LEDs display the actual unit status and data exchange.

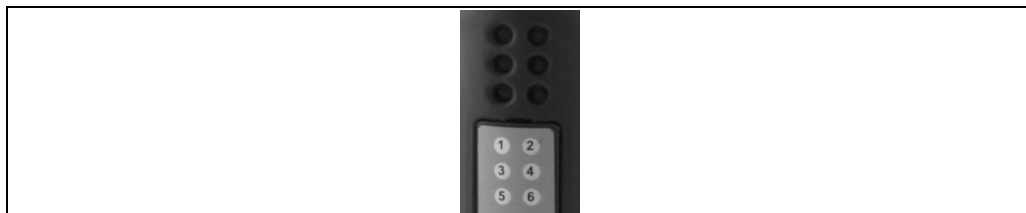

G09-RMx621xx-19-10-00-xx-003

| LED | Description   | Display        | Status                                   | Actions                                                            |
|-----|---------------|----------------|------------------------------------------|--------------------------------------------------------------------|
| 1   | ONLINE        | Green<br>Off   | PROFIBUS-coupler ready for operation     |                                                                    |
| 2   | OFFLINE       | Red<br>Off     | PROFIBUS-coupler not ready for operation | Check connector<br>Check Profibus network                          |
| 3   | NOT USED      |                |                                          |                                                                    |
| 4   | FIELDBUS DIAG | Red flashing   | Configuration error                      | Check PLC set-up                                                   |
|     |               | Off            | No Bus error detected                    |                                                                    |
| 5   | SUBNET STATUS | Green          | Data exchange running                    |                                                                    |
|     |               | Green flashing | Data exchange halted                     | Check connection between PROFIBUS-coupler and the RMx621 / FML621; |
|     |               | Red            | Data exchange not possible               | Check communication parameter in the RMx621 / FML621               |
|     |               | Off            | Power supply failure                     | Check the power supply                                             |

| LED | Description   | Display            | Status                     | Actions                |
|-----|---------------|--------------------|----------------------------|------------------------|
| 6   | DEVICE STATUS | Green              | Initialisation running     |                        |
|     |               | Green flashing     | PROFIBUS-coupler operating |                        |
|     |               | Red/Green flashing | Faulty set-up              | Unit defective         |
|     |               | Off                | Power supply failure       | Check the power supply |

## 4 Data transmission

### 4.1 General

In the RMx621 / FML621 various process values are calculated dependent on the preset applications and are then made available for read out.

In addition to the calculated values the input values can also be read out from the RMx621 / FML621.

### 4.2 Usable data construction

Each process value takes up 5 Bytes in the process picture.

The first 4 Bytes are compliant to an IEEE-754 (MSB first) 32-Bit floating point number

#### 32-Bit floating point number (IEEE-754)

| Octet | 8             | 7            | 6            | 5 | 4 | 3 | 2 | 1             |
|-------|---------------|--------------|--------------|---|---|---|---|---------------|
| 1     | VZ            | (E) $2^7$    | (E) $2^6$    |   |   |   |   | (E) $2^1$     |
| 2     | (E) $2^0$     | (M) $2^{-1}$ | (M) $2^{-2}$ |   |   |   |   | (M) $2^{-7}$  |
| 3     | (M) $2^{-8}$  |              |              |   |   |   |   | (M) $2^{-15}$ |
| 4     | (M) $2^{-16}$ |              |              |   |   |   |   | (M) $2^{-23}$ |

VZ = 0: Positive number

VZ = 1: Negative number

$$Number = -1^{VZ} \cdot (1 + M) \cdot 2^{E-127}$$

E = Exponent; M = Mantissa

Example: 40 F0 00 00 h = 0100 0000 1111 0000 0000 0000 0000 0000 b  
 Value =  $-1^0 \cdot 2^{129-127} \cdot (1 + 2^{-1} + 2^{-2} + 2^{-3})$   
 $= 1 \cdot 2^2 \cdot (1 + 0.5 + 0.25 + 0.125)$   
 $= 1 \cdot 4 \cdot 1.875 = 7.5$

#### The last Byte transmits the value's status:

80h = Valid value

81h = Valid value with alarm set point violation (linked to relay output)

10h = Faulty value (e.g. Cable open circuit)

00h = No value available (e.g. due to communication error in the sub-net)

For calculated values (e.g. mass flow), the alarm condition of all the inputs deployed and the application are checked. If a "fault" is displayed for one of these variables, the calculated value is given the status "10h", i.e. invalid value.

Example:

Temp1 cable open circuit; Alarm type: fault => calculated mass flow (10h)

Temp1 cable open circuit; Alarm type: notice => calculated mass flow (80h)



Note!

All values are transmitted in individual physical basic units with the RMC/RMS621 flow and energy computers. These units cannot be changed and are independent of the units of the display values!

Example: The volume flow is always output in l/s (e.g. 10 l/s) at the bus output even if the display value is shown on the display in m<sup>3</sup>/h (e.g. 36 m<sup>3</sup>/h).


Process values are always transmitted in the following basic units:

|                    |                   |
|--------------------|-------------------|
| Volume flow        | l/s               |
| Temperature        | °C                |
| Pressure           | bar               |
| Heat quantity      | kJ                |
| Heat flow (power)  | kW (kJ/s)         |
| Mass flow          | kg/s              |
| Corrected volume   | (N)l/s            |
| Flow sum           | l                 |
| Mass sum           | kg                |
| Corrected flow sum | (N)l              |
| Density            | kg/m <sup>3</sup> |
| Enthalpy           | kJ/kg             |

The number of process values transmitted is laid down in the energy manager set-up, see Section 3.1. The minimum number is 1 process value (5 Byte), the maximum is 48 process values (240 Byte).

## 5 Installation in a Simatic S7


### 5.1 Network overview

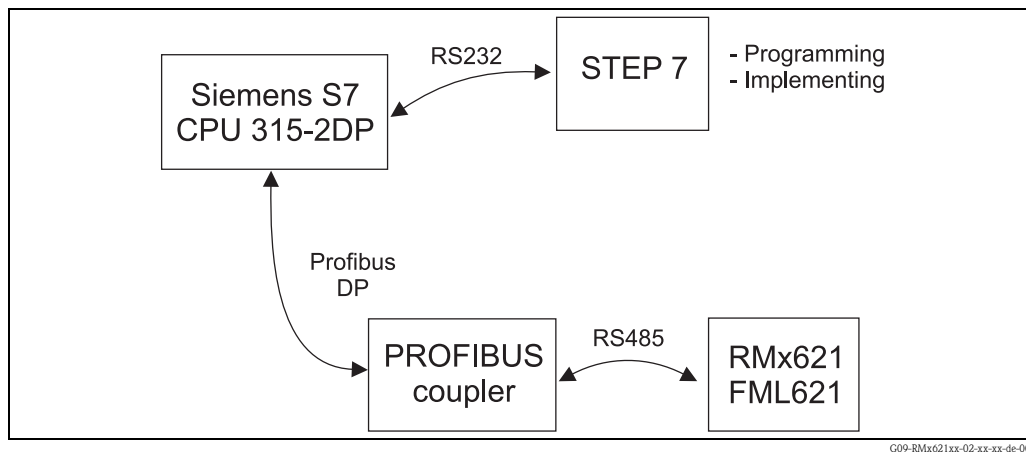

### 5.2 GSD file EH\_x153F.gsd

- Either install using Extras/install new GSD
- or copy the GSD- and BMP- files into the required directory of the Software STEP 7.  
 e.g.: c:\...\Siemens\Step7\S7data\GSD  
 c:\...\Siemens\Step7\S7data\NSBMP


Example for Energy Manager

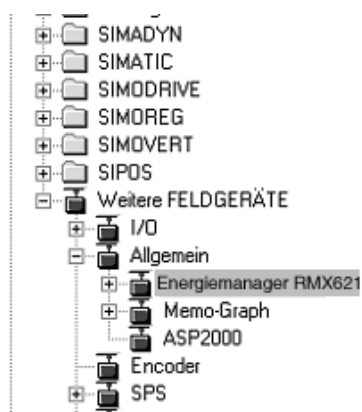

### 5.3 Projecting the RMx621 / FML621 as a slave

Hardware configuration (e.g. Energy Manager RMS/RMC621):

- Pull out the Energy manager RMX621 unit from the hardware catalogue -> PROFIBUS DP -> further field units -> General in the PROFIBUS DP network
- Set the user addresses

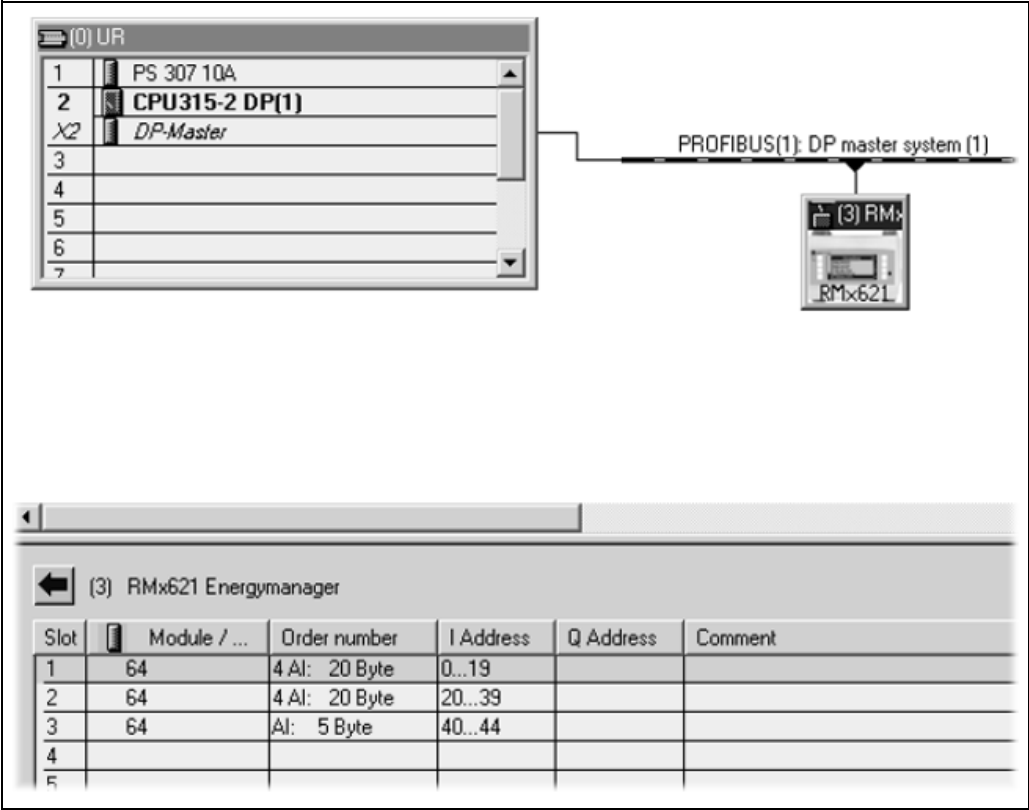

G09-RMx621-xx-02-xx-xx-de-001

The GSD-File has two modules defined:

| Input (SPS)    | RMx621 → PROFIBUS master             | Config string |
|----------------|--------------------------------------|---------------|
| AI: 5 bytes    | One numeric value + status           | 0x40, 0x84    |
| 4 AI: 20 bytes | Four numeric values with status each | 0x40, 0x93    |

Assign as many modules to the individual slots as is necessary for the number of process values to match the number set in the energy manager. A maximum of 12 modules can be used here. The "4 AI: 20 Byte" module can be used instead of four individual "AI: 5 Byte" modules.



**Note!**  
The projected unit address must correspond with the actual set up hardware addresses. The address range of the process values must be uninterrupted.

## 6 Technical data

|                                    |                                                                    |
|------------------------------------|--------------------------------------------------------------------|
| <b>Dimensions:</b>                 | 120mm x 75mm x 27mm (height, depth, width)                         |
| <b>Power supply:</b>               | 24V DC +/-10%                                                      |
| <b>Power consumption:</b>          | Typ. 120mA, Max. 280mA                                             |
| <b>PROFIBUS-DP Baud rate:</b>      | 9.600, 19.200, 45.450, 93.750, 187.500, 500.000, 1.5M, 3M, 6M, 12M |
| <b>RS485 interface parameters:</b> | Baud rate 38400, 8 data bits, 1 stop bit, unit address 01          |
| <b>Ambient temperature:</b>        | +5 ... +55 °C                                                      |
| <b>Storage temperature:</b>        | -55 ... +85 °C                                                     |
| <b>Air humidity:</b>               | 5 .. 95%, no condensation                                          |
| <b>Ingress protection:</b>         | IP 20                                                              |
| <b>Ground cable connection:</b>    | Grounded internally via the DIN rail                               |
| <b>Approvals:</b>                  | UL - E214107                                                       |

For more Endress+Hauser product please visit: [www.ainstru.com](http://www.ainstru.com)  
Mail: [Sales@ainstru.com](mailto:Sales@ainstru.com)

[www.endress.com/worldwide](http://www.endress.com/worldwide)

---

**Endress+Hauser**   
People for Process Automation

---