

Technical Information

Liquiport CSP44

Automatic sampler for liquid media; integrated multi-parameter controller with two measuring channels and optional digital Memosens technology



Applications

The Liquiport 2010 CSP44 is a portable sampler designed for the fully automated sampling and defined distribution of liquid media.

- Communal and industrial wastewater treatment plants
 - Self-monitoring
 - Process monitoring
 - Monitoring of indirect dischargers
 - Monitoring of canal networks
- Authorities and water management offices:
 - Water pollution control and water quality
 - Monitoring of indirect/direct dischargers
 - Laboratories and hydrological institutes

Depending on the version ordered, one or two digital sensors with Memosens technology can be connected to the CSP44. In addition, two 0/4 to 20 mA analog inputs/outputs, two binary inputs/outputs as well as a cleaning function are optionally available.

Your benefits

- Easy and user-friendly:
 - Swift menu guidance, navigator and large display
 - Parts carrying medium are easy to disassemble, making cleaning and maintenance tasks easier
 - Sampler base can be locked and carried separately
- Flexible:
 - Practice-oriented programs ranging from simple time programs to event programs
 - Functionality can be extended by installing modular electronic components
- Communicative:
 - Integrated data logger for recording measured values
 - Service interface for data transmission
- Safe:
 - Lockable sampler base for tamper-proof samples

Table of contents


Function and system design	3	Environment	15
Sampler Liquiport CSP44	3	Ambient temperature range	15
Mode of operation with a peristaltic pump	4	Storage temperature	15
Sample distribution	5	Degree of protection	15
Sample preservation	5	Electromagnetic compatibility	15
Sampling control	6	Electrical safety	15
Intake speed with different suction lines	6	Relative humidity	15
Sampler housing	7		
Dependability	8	Process	16
Reliability	8	Process temperature	16
Maintainability	8	Process characteristics	16
Safety	10	Process pressure	16
		Process connection	16
Input	10	Mechanical construction	17
Types of input	10	Dimensions	17
Measured values	10	Weight	17
		Materials	18
Temperature inputs	10	Operability	19
Measuring range	10	Operating concept	19
Type of input	10	Display	19
Accuracy	10	Local operation	19
		Communication	20
Binary input, passive	11	Software	20
Span	11		
Signal characteristics	11	Certificates and approvals	21
Accuracy	11	CE mark	21
		MCERTS	21
Analog input, passive/active	11	cCSAus General purpose	21
Span	11		
Accuracy	11	Ordering information	22
Output optional	11	Product page	22
Communication	11	Product Configurator	22
		Scope of delivery	22
Power supply	12		
Electrical connection	12	Accessories	23
Supply voltage	12	Measuring cable	24
Power consumption	12	Sensors	24
Capacity of battery	12		
Fuses	12		
Performance characteristics	13		
Sampling methods	13		
Dosing volume	13		
Dosing accuracy	13		
Repeatability	13		
Intake speed	13		
Suction height	13		
Hose length	13		
Installation	14		
Mounting conditions	14		

Function and system design

Sampler Liquiport CSP44

A complete sampling unit comprises:


- Controller with display, soft keys and navigator
- Vacuum or peristaltic pump for sampling
- PE or glass sample bottles for sample preservation
- Sampling chamber temperature regulator (optional) for safe sample storage
- Suction line with suction head

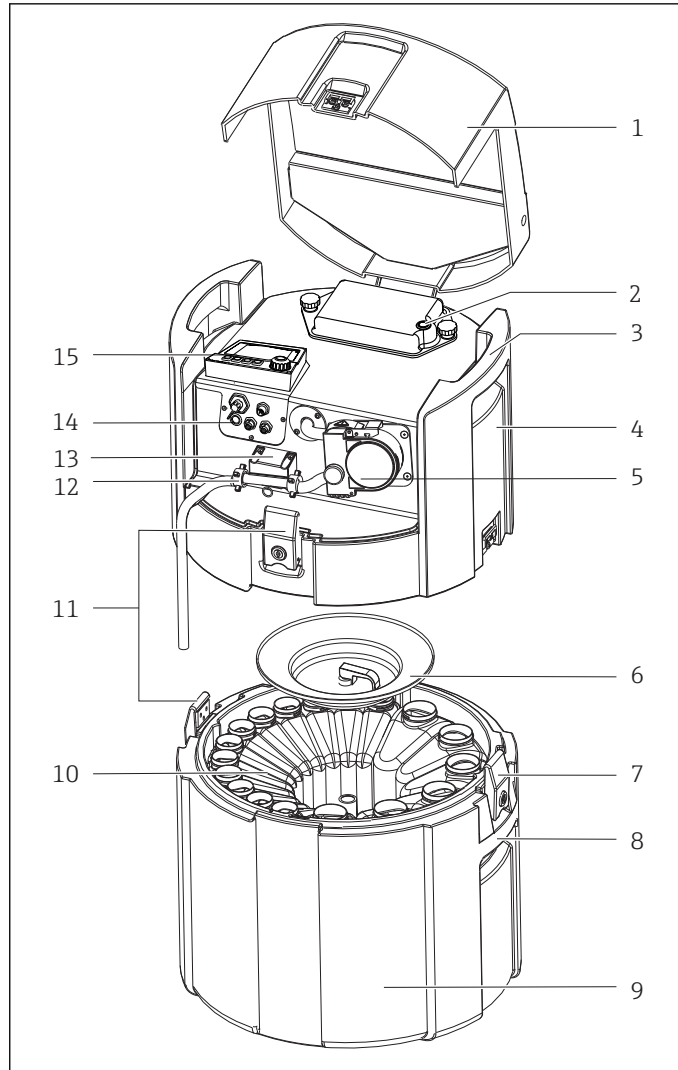

- 1 Device cover
- 2 Battery compartment cover with switch
- 3 Upper carrying handles
- 4 Unit upper compartment
- 5 Peristaltic pump with pump tubing
- 6 Bottle retaining cover
- 7 Lockable latches
- 8 Lower carrying handles
- 9 Unit lower compartment
- 10 Bottle distribution
- 11 Lockable latches
- 12 Hose connection
- 13 Medium detection
- 14 Electrical connections
- 15 Controller

A0013533

Mode of operation with a peristaltic pump

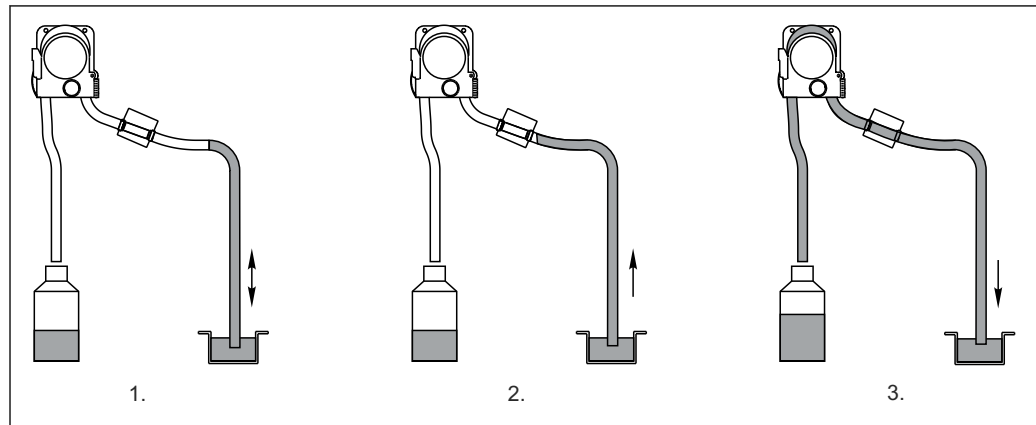


A0024341

1 Sampling steps with a peristaltic pump

Sampling takes place in three steps:

1. Rinse
 - ↳ The peristaltic pump runs in reverse and forces medium back to the sampling point.
2. Intake
 - ↳ The peristaltic pump runs forward and draws in medium. If the medium detection system detects the sample, the pump is controlled by the flow and the specified sample volume is calculated automatically.
3. Drain
 - ↳ The pump runs in reverse again and forces the medium back to the sampling point.

One advantage this system offers for obtaining a representative sample is the possibility of rinsing the suction line several times: Medium is initially drawn in until the medium detection system reacts, then the pump switches and forces the medium back to the sampling point. This process can be repeated a maximum of three times. The sample is then taken as described.

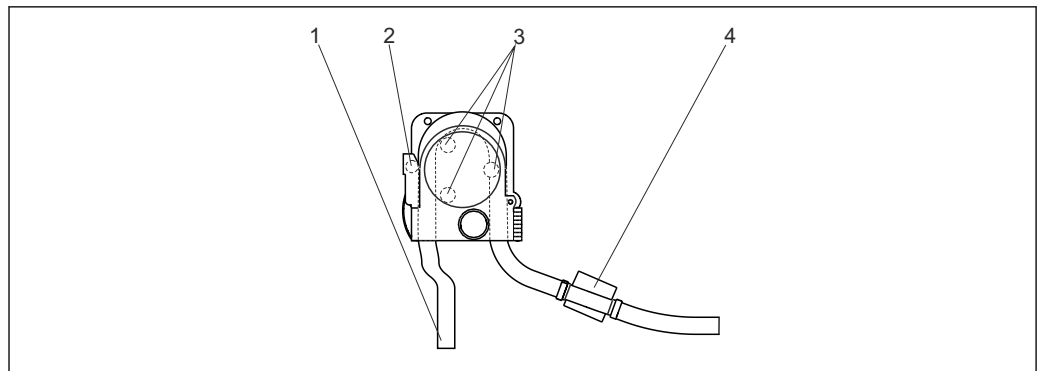

A0024343

2 Peristaltic pump

- 1 Pump tube
- 2 Safety switch (optional)
- 3 Pump rollers
- 4 Medium detection system (patented)

The pump rollers deform the hose, thereby causing a negative pressure and the suction effect. The medium detection system is based on a pressure sensor which detects the difference between a pipe that is filled and not filled. Thanks to a patented process for automatically detecting the suction height, the user does not have to enter the suction height or suction line length. The self-learning software guarantees that the sample volume remains constant. An optional safety switch integrated in the pump housing immediately switches off the pump when the pump is opened (recommended if third-party staff are performing maintenance work).


Sample distribution

The Liquiport 2010 CSP44 allows flexible configuration of the sample distribution. Users can define individual bottles and bottle groups as they wish for the main, switchover and event programs.

A distribution arm transfers the sample liquid into the individual bottles. In addition to a 20-liter composite container made of PE, there are different bottle distributions available. The distribution versions can be replaced easily and without the need for tools.


Sample preservation

The sample bottles are located in the sample compartment. This is fitted with a seamless plastic dish to ensure easy cleaning. All parts that transport medium (distribution arm, dosing system...) can be removed and cleaned easily without the need for tools.

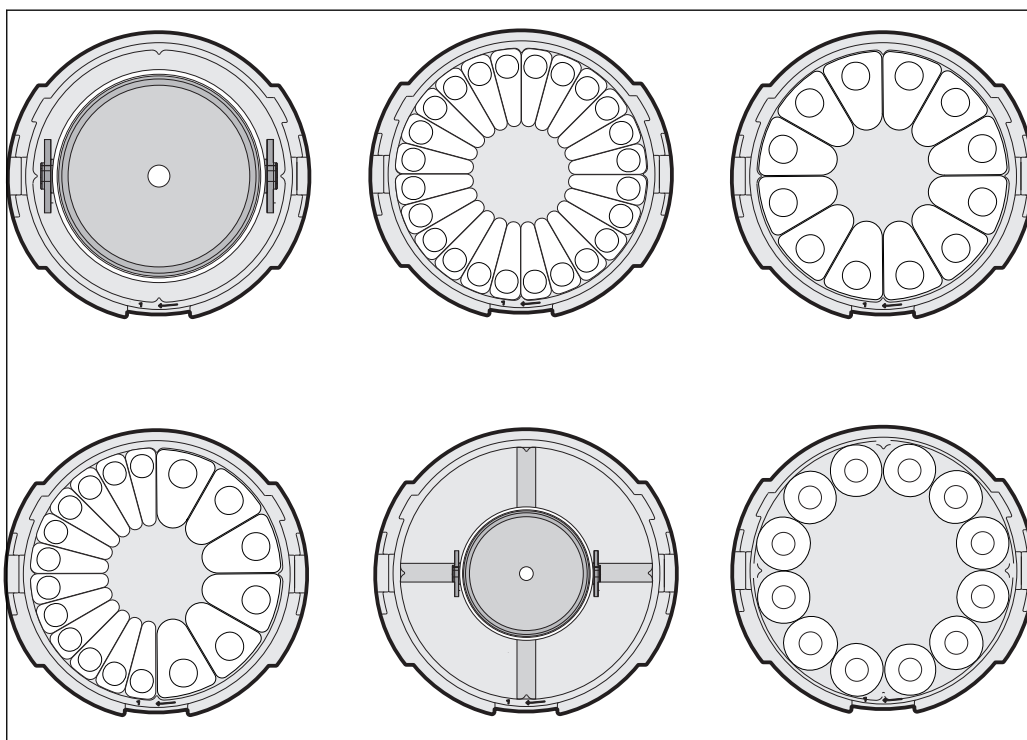

A0013470

Sampling control

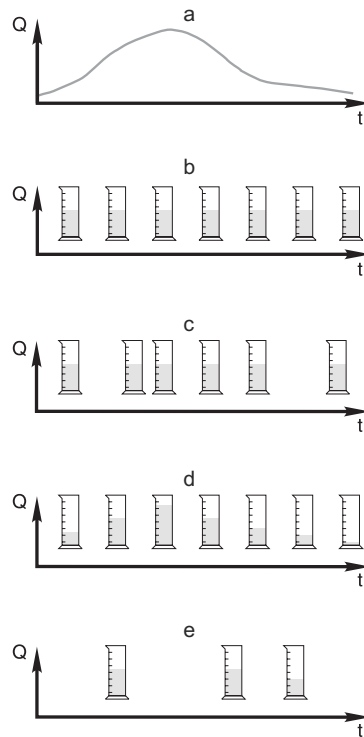

- Flow curve**
- Time-proportional sampling (CTCV)**
A constant sample volume (e.g. 50 ml) is taken at regular intervals (e.g. every 5 minutes).
- Volume-proportional sampling (VTCV)**
A constant sample volume is taken at variable intervals (depending on the inflow volume).
 Time override can be enabled in an advanced program. This allows long, flow-controlled sample intervals to be interrupted if the flow rate is low. A time-controlled sample is collected.
- Flow-proportional sampling (CTVV)**
A variable sample volume (the sample volume depends on the flow rate) is taken at regular intervals (e.g. every 10 min).
 Only in version with peristaltic pump.
- Event-controlled sampling**
Sampling is triggered by an event (e.g. pH limit value). Sampling can be time-paced, volume-paced or flow-paced, or single samples can be taken.


A0014045



Sampling control

Single and multiple samples can also be grouped in a program in addition to the sampling methods listed. Furthermore, the software allows interval sampling, switchover and event functions. The latter permit up to 24 subprograms to be active simultaneously for a variety of applications. A sampling table makes it possible for users to program the bottle assignment, time interval and sample volume. Signals for external control can be connected via 2 analog inputs and 2 binary inputs in the standard version of the product. Customized text is entered to ensure the correct assignment of the inputs in the memory.

Intake speed with different suction lines

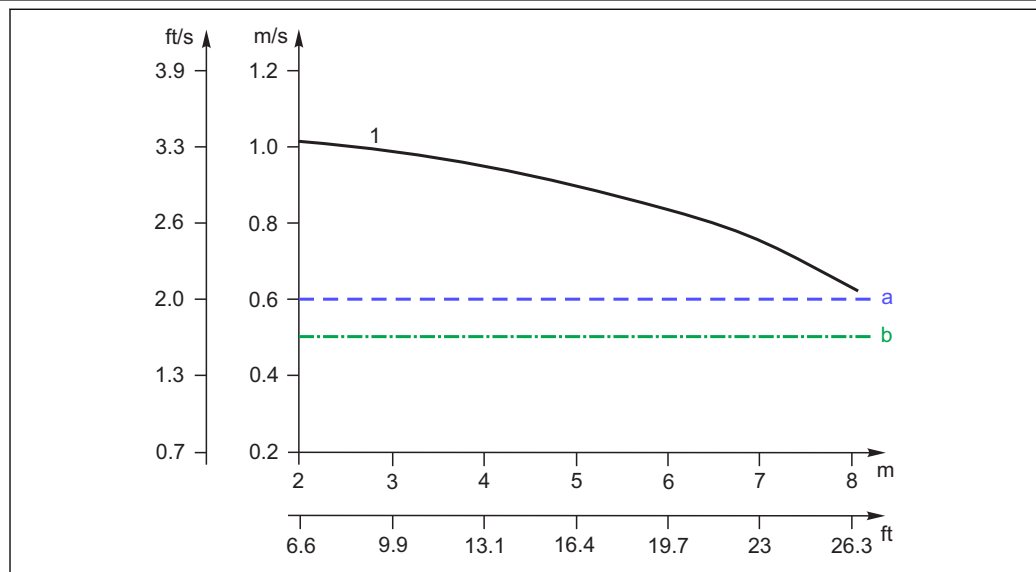

A0013534

4 Intake speed in m/s with suction height in m

- a Intake speed as per Ö 5893, US EPA
 b Intake speed as per EN 25667, ISO 5667
 1 ID 10 mm (3/8") peristaltic pump

Sampler housing

Pay attention to the installation conditions in the "Installation" section and the information on the materials of the different housing types in the "Mechanical construction" section.

NOTICE

The plastic material polystyrene VO can discolor if exposed directly to sunlight.

In the case of stainless steel housings, the frame around the window can discolor if exposed directly to sunlight.

- The plastic material ASA+PC VO is recommended for outdoor installations where a sun guard is not used. The discoloring does not affect the function and operation of the device.

Dependability

Reliability

Memosens technology



Memosens makes your measuring point safer and more reliable:

- Non-contact, digital signal transmission enables optimum galvanic isolation
- No contact corrosion
- Completely watertight
- Laboratory sensor calibration possible, thus increasing measured value availability
- Predictive maintenance thanks to recording of sensor data, e.g.:
 - Total hours of operation
 - Hours of operation with very high or very low measured values
 - Hours of operation at high temperatures
 - Number of steam sterilizations
 - Sensor condition



A0024356

Sensor check system (SCS)

The sensor check system (SCS) monitors the high impedance of the pH glass. An alarm is triggered if a minimum impedance value is undershot or a maximum impedance is exceeded.

- Glass breakage is the main reason for a drop in high impedance values.
- The causes of increasing impedance values are:
 - Dry sensor
 - Worn pH glass membrane

Process check system (PCS)

The process check system (PCS) checks the measuring signal for stagnation. An alarm is triggered if the measuring signal does not change over a certain period (several measured values).

The main causes of stagnating measured values are:

- Sensor fouled or outside the medium
- Sensor defective
- Process error (e.g. through control system)

Sensor condition check (SCC)

This function monitors the electrode condition and the degree of electrode aging. The status is indicated by the messages "SCC electrode condition bad" or "SCC electrode condition OK". The electrode condition is updated after every calibration.

Maintainability

Modular design


The modular sampler can be easily adapted to suit your needs:

Retrofit extension modules for new or extended range of functions, e.g. current outputs and relays

Memory

- Independent, integrated ring memories (FIFO) or stack memories for recording:
 - An analog value (e.g. flow, pH value, conductivity)
 - Events (e.g. power failure)
 - Sample statistics (e.g. sampling volume, filling times, bottle assignment)
- Program memory: max. 100 programs
- Data logbooks:
 - Adjustable scan time: 1 to 3600 s (1 h)
 - Max. 8 data logbooks
 - 150,000 entries per logbook
 - Graphic display (load curves) or numerical list
- Calibration logbook: max. 75 entries
- Hardware logbook:
 - Hardware configuration and modifications
 - Max. 125 entries

- Version logbook:
 - Including software updates
 - Max. 50 entries
- Operations logbook: max. 250 entries
- Diagnostic logbook: max. 250 entries

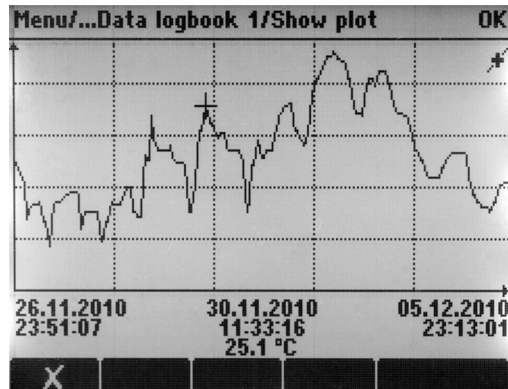

A0024359

 5 Data logbook: Graphic display

Mathematical functions (virtual process values)

In addition to "real" process values, which are provided by connected physical sensors or analog inputs, mathematical functions can be used to calculate a maximum of 6 "virtual" process values.

The "virtual" process values can be:

- Output via a current output or a fieldbus
- Used as a regulating control variable
- Assigned as a measured variable to a limit contactor
- Used as a measured variable to trigger cleaning
- Displayed in user-defined measuring menus

The following mathematical functions are possible:

- Calculation of pH from two conductivity values according to VGB Standard 405, e.g. in boiler feedwater
- Difference between two measured values from different sources, e.g. to monitor membranes
- Differential conductivity, e.g. to monitor the efficiency of ion exchangers
- Degassed conductivity, e.g. for process controls in power plants
- Redundancy to monitor two or three redundant sensors
- rH calculation from the measured values of a pH and an ORP sensor

FieldCare and Field Data Manager

FieldCare


Configuration and asset management software based on FDT/DTM technology

- Complete device configuration when connected via FXA291 and service interface
- Access to a number of configuration parameters and identification, measuring and diagnostic data when connected via HART modem
- Logbooks can be downloaded in CSV format or binary format for "Field Data Manager" software

Field Data Manager

Visualization software and database for measuring, calibration and configuration data

- SQL database which is protected against manipulation
- Functions to import, save and print out logbooks
- Load curves to display measured values
- All the logbooks can be read out and saved online

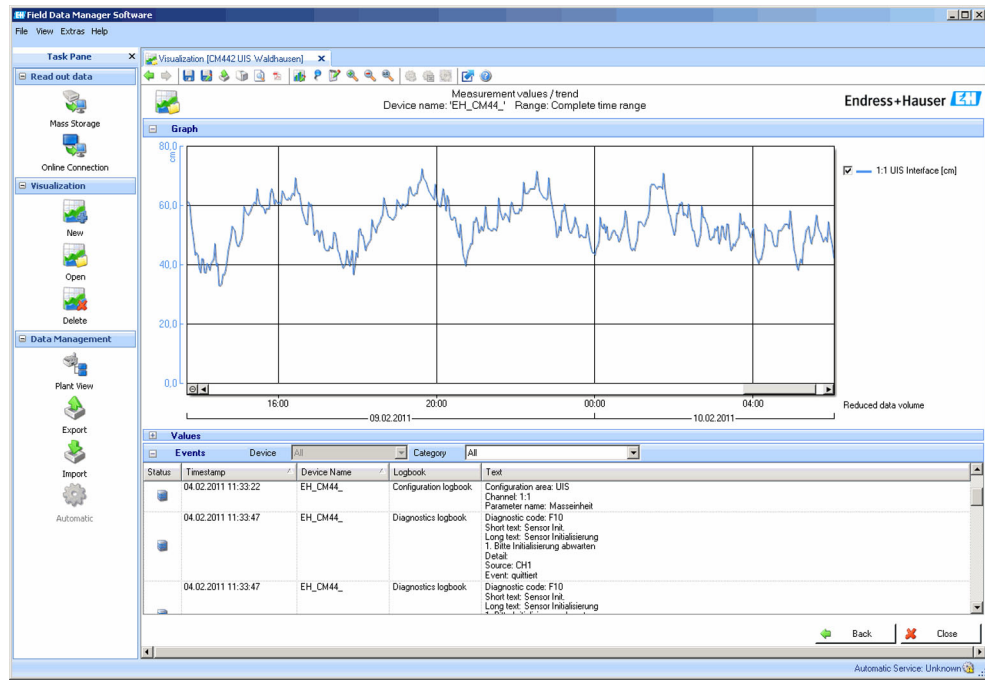

A0016009

6 Field Data Manager: Load curves

Safety

Real-time clock

The device has a real-time clock, which is backed up by a button cell in the event of a power failure. This ensures that the device continues to keep the correct time and date if it is restarted and that the time stamp for the logbooks is correct.

Data security

All settings, logbooks etc. are stored in a non-volatile memory to ensure that the data are retained even in the event of a disruption to the power supply.

Input

i Inputs and outputs must be selected in the structure if necessary. Installation at a later stage is possible only at the place of manufacture.

Types of input

- Up to two analog inputs
- Up to two binary inputs
- 1 to 2 digital inputs for sensors with Memosens protocol (optional)

Measured values

→ Documentation of the connected sensor

Temperature inputs

Measuring range

Measuring range
-30 to 70 °C (-20 to 160 °F)

Type of input

Pt1000

Accuracy

± 0.5 K

Binary input, passive

Span	12 to 30 V, galvanically isolated
Signal characteristics	Minimum pulse width: 100 ms
Accuracy	± 0.5 K

Analog input, passive/active

Span	0/4 to 20 mA, galvanically isolated
Accuracy	±0.5 % of measuring range


Output optional

Communication	▪ 1 service interface ▪ Accessible via front panel connection (optional) ▪ Commubox FXA291 (accessory) required for communication with the PC
---------------	---

Power supply

Electrical connection

--> For a detailed connection plan, see the Operating Instructions for Liquiport CSP44

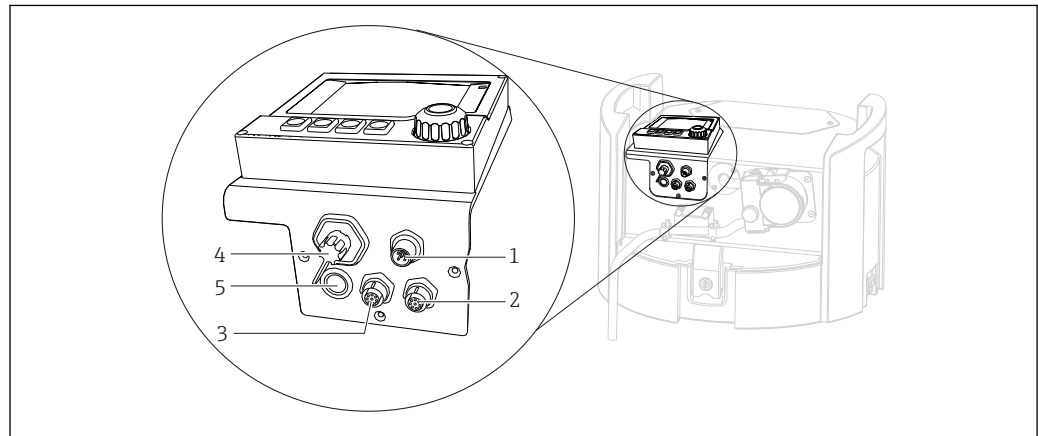

A0013532

7 Electrical connections of the controller

- 1 Connection socket for charger
- 2 Socket for M12 sensor connector (optional)
- 3 Socket for M12 sensor connector (optional)
- 4 Connection socket for signal cable (optional)
- 5 Service interface

Supply voltage

 The sampler cannot be operated without the battery.

Internal 24 V DC, 7.2 Ah lead-acid battery

Field-suitable IP 67	100 to 240 V AC; charge current 2.0 A; also suitable for mains operation
Indoor use	100 to 240 V AC; charge current 2.0 A; also suitable for mains operation
 Mains operation means that the sampler is in operation during the charging process.	

Specification of charger for Liquiport 2010 CSP44:

- Max. output current = 2 A
- Max. output voltage = 29.5 V
- Double/reinforced insulation
- Constant current
- CSA or UL recognized according to UL 60950-1, UL 60601-1 or UL 61010-1 or the relevant CSA standards

Power consumption

Max. 60 W (only when using the battery chargers indicated by the manufacturer)

Capacity of battery

42 hours for 168 samples (at a sampling interval of 15 minutes, a sampling volume of 100 ml and a suction height of 4 meters)

Standby capacity: 144 hours

 Data applicable if analog input is switched off and for devices without a Memosens input.

Fuses

Input fuse:

T3.15A (behind the plate of the distribution arm in the black box)

Electronics fuse:


T4.0A (in the controller)

Performance characteristics

Sampling methods	Vacuum pump/peristaltic pump/sampling assembly: ■ Event sampling ■ Single and multiple samples ■ Sampling table Peristaltic pump: ■ Time-paced ■ In proportion to volume ■ Flow proportional sampling/time override (CTVV)
Dosing volume	Peristaltic pump: 10 to 10000 ml (0.3 to 340 fl.oz.)  The dosing accuracy and the repeatability of a sample volume < 20 ml can vary, depending on the specific application.
Dosing accuracy	Peristaltic pump: ± 5 ml (0.17 fl.oz.) or 5 % of the set volume
Repeatability	5 %
Intake speed	> 0.5 m/s (> 1.6 ft/s) for ≤ 13 mm (1/2") ID, as per EN 25667, ISO 5667, CEN 16479-1 > 0.6 m/s (> 1.9 ft/s) for 10 mm (3/8") ID, in accordance with Ö 5893; US EPA
Suction height	Peristaltic pump: Max. 8 m (26 ft)
Hose length	Max. 30 m (98 ft)

Installation

Mounting conditions

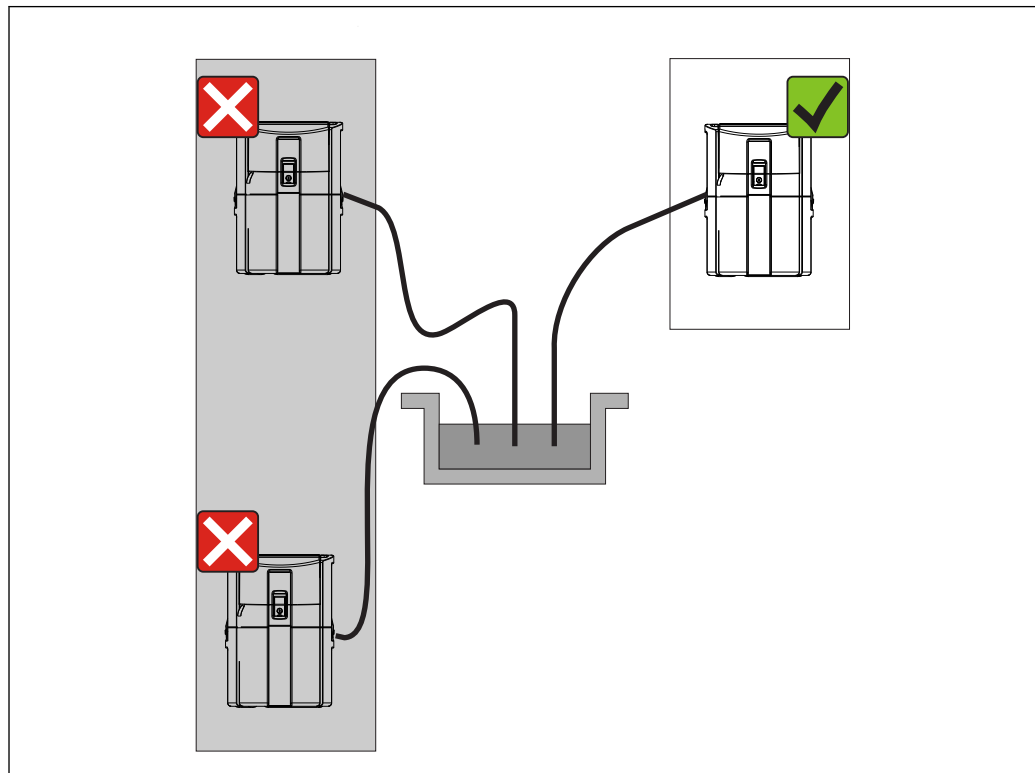

A0013474

 8 Installation site, example

 The suction line must be routed with a downward slope to the sampling point. Avoid siphon formation!

Note the following when erecting the device:

- Erect the device on a level surface.
- Securely connect the device at the fastening points to the surface underneath.
- Protect the device against additional heating (e.g. heater or direct sunlight in the case of PS housing).
- Protect the device against mechanical vibrations.
- Protect the device against strong magnetic fields.

Environment

Ambient temperature range	0 to 40 °C (32 to 104 °F)  Do not install the device in areas with high temperature and direct sunlight!
Storage temperature	-20 to 60 °C (-4 to 140 °F)
Degree of protection	■ Sample compartment: IP 54 ■ Sampler with cover closed: IP 54 ■ Controller: IP 65
Electromagnetic compatibility	Interference emission and interference immunity as per EN 61326-1:2006, class A for industry
Electrical safety	In accordance with EN 61010-1, protection class I, environment ≤ 2000 m (6500 ft) above MSL. The device is designed for pollution degree 2.
Relative humidity	10 to 95%, not condensing

Process

Process temperature	2 to 50 °C (36 to 122 °F)
---------------------	---------------------------

Process characteristics	Peristaltic pump Sample media has to be free of abrasive substances. Pay attention to the material compatibility of the wetted parts.
-------------------------	--




Process pressure	Unpressurized, open channel (unpressurized sampling)
------------------	--

Process connection	■ Vacuum pump: Suction line ID 10 mm (3/8"), 13 mm (1/2"), 16 mm (5/8") or 19 mm (3/4") ■ Peristaltic pump: Intake hose ID 10 mm (3/8")
--------------------	---

Mechanical construction

Dimensions

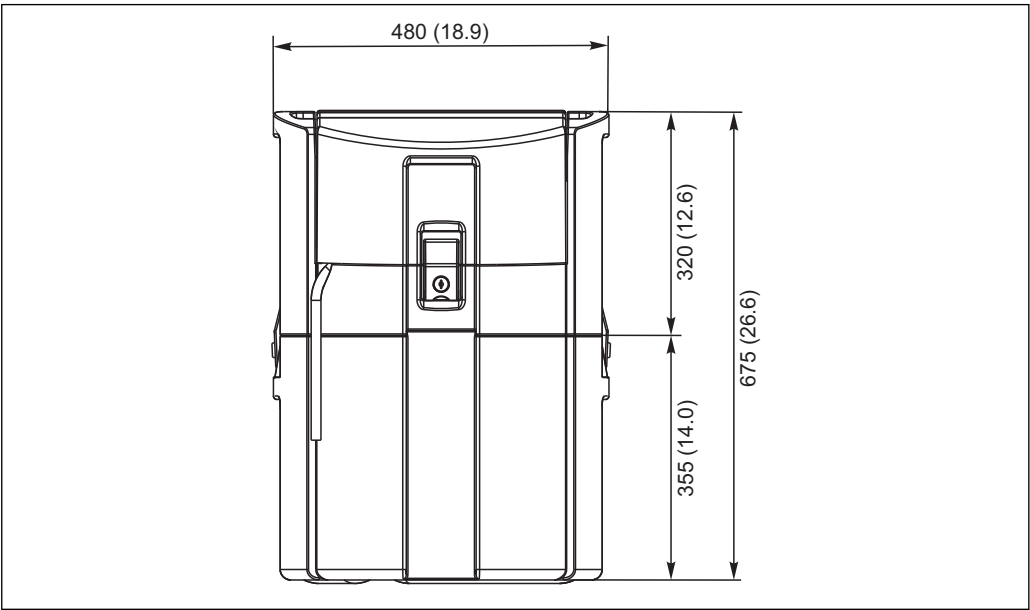

9 CSP44 standard version, dimensions in mm (in)

Weight

Sampler version	Weight
Empty weight	15 kg (33 lbs)
Overall weight with battery and 24 x 1 l bottles	19 kg (42 lbs)
Upper compartment with battery	10 kg (22 lbs)
Lower compartment with 24 x 1 l bottles	9 kg (20 lbs)

i With full bottles the weight of the sampler is more than 25 kg (55 lbs). To comply with ISO 11228-1 only transport the sampler together with a second person.

Materials

Plastic polystyrene VO can change color when exposed to direct sunlight. For outdoor use without a weather protection cover, the use of Plastic ASA+PC VO is recommended. The functionality is not affected by the discoloration.

Wetted parts	Peristaltic pump
Dosing tube	-
Dosing chamber cover	-
Conductivity sensors	-
Conductivity sensors	-
Dosing chamber	-
Dosing system outflow hose	-
Pump tubing	Silicone
Process seal	-
Distribution arm	Plastic PP
Distribution arm cover	Plastic PE
Distribution plate	Plastic PS
Composite container/bottles	Plastic PE, glass (depending on version)
Intake hose	Plastic PVC, EPDM (depending on version)
Hose connection	Plastic PP
Rinse connection	-



Choose process seal depending on the application. Viton is recommended for standard applications involving watery samples.

Liquiport 2010 CSP44	
Housing	Plastic PE
Housing parts	Plastic PE
Bottles	Plastic PE, glass (depending on version)
Distribution arm	Plastic PE
Sensor housing	Plastic PP
Pump tubing	Silicone
Intake hose	Plastic PVC reinforced braided, EPDM black


Operability

Operating concept

- The simple and structured operating concept sets new standards:
- Intuitive operation with the navigator and soft keys
 - Fast configuration of application-specific measurement options
 - Easy configuration and diagnosis thanks to plain-text display
 - All languages that can be ordered are available in every device




10 Easy operation

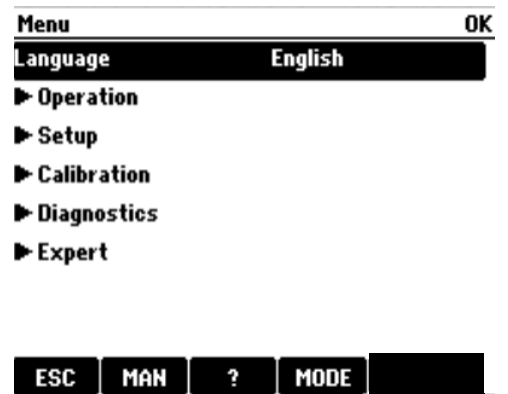


11 Plain-text menu

Display

- Graphic display:
- Resolution: 240 x 160 pixel
 - Back light with switch-off function
 - Red display background for alarms alerts users to errors
 - Transflective display technology for maximum contrast even in bright environments
 - User-definable measuring menus mean you can always keep track of the values that are important for your application.

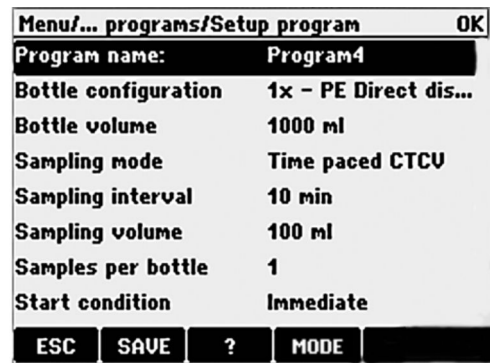

12 Example of program setup

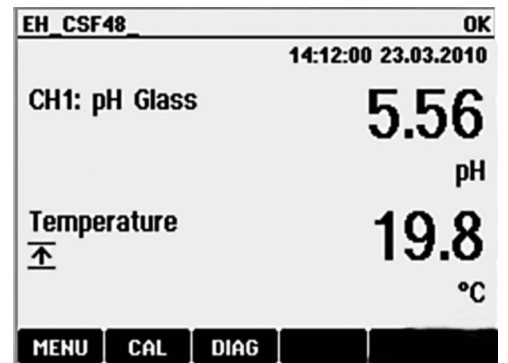

13 Example of measuring menu

Local operation



- LCD, illuminated (with red background in the event of an error)
- 160 x 240 pixels
- 4 operating keys (soft key function) and navigator (jog/shuttle and press/hold function)
- Menu-guided operation

Communication

- 1 service interface
- Commubox FXA291 (accessory) required for communication with the PC

Software**Field Data Manager**

- Standardized user interface under Windows®
- Read-out of internal memory containing the measured flow rate, sample volume taken etc.

FieldCare

- Device settings saved in a database
- Configuration

Certificates and approvals

CE mark	Declaration of Conformity The product meets the requirements of the harmonized European standards. As such, it complies with the legal specifications of the EU directives. The manufacturer confirms successful testing of the product by affixing to it the CE mark.
MCERTS	The device has been assessed by Sira Certification Service and complies with "MCERTS Performance Standards for Water Monitoring Equipment Part 1, Version 2.1 dated November 2009"; certificate no.: Sira MC100176/02.
cCSAus General purpose	The product meets the requirements in accordance with "Class 8721 05, laboratory equipment, electrical; Class 8721 85, laboratory equipment, electrical, certified to US standards" for indoor use. Certificate no.: 2318018

Ordering information

Product pagewww.endress.com/CSP44**Product Configurator**

On the product page there is a **Configure** button to the right of the product image.

1. Click this button.
 - ↳ The Configurator opens in a separate window.
2. Select all the options to configure the device in line with your requirements.
 - ↳ In this way, you receive a valid and complete order code for the device.
3. Export the order code as a PDF or Excel file. To do so, click the appropriate button on the right above the selection window.



For many products you also have the option of downloading CAD or 2D drawings of the selected product version. Click the **CAD** tab for this and select the desired file type using picklists.

Scope of delivery

The scope of delivery comprises:

- 1 Liquiport 2010 CSP44 with:
 - The ordered bottle configuration
 - Optional hardware
- 1 print version of Brief Operating Instructions in the language ordered
- Optional accessories

Accessories

The following are the most important accessories available at the time this documentation was issued.

- For accessories not listed here, please contact your Service or Sales Center.

Order no.	Complete suction line
71111233	Suction line ID 10 mm (3/8"), PVC clear, reinforced fabric, length 10 m (33 ft), suction head V4A
71111234	Suction line ID 10 mm (3/8"), EPDM black, length 10 m (33 ft), suction head V4A
71111235	Suction line ID 13 mm (1/2"), PVC green, reinforced spiral wire, length 10 m (33 ft), suction head V4A
71111236	Suction line ID 13 mm (1/2"), EPDM black, length 10 m (33 ft), suction head V4A
71111237	Suction line ID 16 mm (5/8"), PVC green, reinforced spiral wire, length 10 m (33 ft), suction head V4A
71111238	Suction line ID 16 mm (5/8"), EPDM black, length 10 m (33 ft), suction head V4A
71111239	Suction line ID 19 mm (3/4"), PVC green, reinforced spiral wire, length 10 m (33 ft), suction head V4A
71111240	Suction line ID 19 mm (3/4"), EPDM black, length 10 m (33 ft), suction head V4A
71111482	... m; suction line coil ID 10 mm (3/8"), PVC
71111484	... m; suction line coil ID 10 mm (3/8"), EPDM

Order no.	Base, complemented
71111864	CSP44 base + 1 x 20 liter (5.28 US gal.), PE
71111866	CSP44 base + 12 x 2 liter (0.53 US gal.), PE
71111867	CSP44 base + 12 x 0.7 liter (0.18 US gal.), glass
71111868	CSP44 base + 24 x 1 liter (0.26 US gal.), PE
71111870	CSP44 base + 12 x 1 liter (0.26 US gal.) + 6 x 2 liter (0.53 US gal.), PE

Order no.	Bottles + covers
71112221	20 liter (5.28 US gal.) PE + cover, 1 pc.
71111178	2 liter (0.53 US gal.) PE wedge-shaped bottle + cover, 12 pcs
71111176	1 liter (0.26 US gal.) PE wedge-shaped bottle + cover, 24 pcs.
71111874	0.7 liter (0.18 US gal.) glass + cover, 12 pcs.

Order no.	Accessories base
71111878	Kit CSP44 base cover, transporting
71111880	Kit CSP44 freezer cartridge

Order no.	Tubing customized
71114701	Pump tubing, 2 pcs.
71114702	Pump tubing, 25 pcs.

Order no.	Installation
71111881	CSP44 suspension kit, for use in 500 to 600 mm diameter manhole

Order no.	Power supply
71111872	Lead-acid battery 24 V DC
71111882	Kit CSP44 charger adapter cable, battery for power unit
71111883	Kit CSP44 power unit/charger for indoor use, 100 to 120/200 to 240 V AC $\pm 10\%$, 50/60 Hz
71111884	Kit CSP44 power unit/charger for outdoor use, IP 65, 100 to 120/200 to 240 V AC $\pm 10\%$, 50/60 Hz

Order no.	Retrofit kits
71111879	Kit CSP44 retrofit distribution system (distribution arm, distribution drive)
71251042	Kit CSP44 power unit/charger for outdoors; UL, IP65, 115VAC, US connector
71389506	Kit CSP44 battery cover with switch

Order no.	Suction head
71111184	Suction head V4A for ID 10 mm (3/8"), 1 pc.

Order no.	Communication; software
51516983	Commubox FXA291 + FieldCare Device Setup
71129799	Field Data Manager software; 1 license, analysis report
	Activation code for PROFIBUS DP

Measuring cable

Memosens data cable CYK10

- For digital sensors with Memosens technology
- Product Configurator on the product page: www.endress.com/cyk10



Technical Information TI00118C

Measuring cable CYK81

- Underterminated cable for extending sensor cables (e.g. Memosens, CUS31/CUS41)
- 2 x 2 cores, twisted with shielding and PVC sheath (2 x 2 x 0.5 mm² + shielding)
- Sold by meter, Order No.: 51502543

Sensors



You can only connect sensors with M12 plug.

Glass electrodes

Orbisint CPS11D

- pH sensor for process technology
- Optional SIL version for connecting to SIL transmitter
- With dirt-repellent PTFE diaphragm
- Product Configurator on the product page: www.endress.com/cps11d



Technical Information TI00028C

Memosens CPS31D

- pH electrode with gel-filled reference system with ceramic diaphragm
- Product Configurator on the product page: www.endress.com/cps31d



Technical Information TI00030C

Ceraliquid CPS41D

- pH electrode with ceramic junction and KCl liquid electrolyte
- Product Configurator on the product page: www.endress.com/cps41d



Technical Information TI00079C

Ceragel CPS71D

- pH electrode with reference system including ion trap
- Product Configurator on the product page: www.endress.com/cps71d

 Technical Information TI00245C

Orbipore CPS91D

- pH electrode with open aperture for media with high dirt load
- Product Configurator on the product page: www.endress.com/cps91d

 Technical Information TI00375C

Orbipac CPF81D

- Compact pH sensor for installation or immersion operation
- In industrial water and wastewater
- Product Configurator on the product page: www.endress.com/cpf81d

 Technical Information TI00191C

PfauDler electrodes

Ceramax CPS341D

- pH electrode with pH-sensitive enamel
- Meets highest demands of measuring accuracy, pressure, temperature, sterility and durability
- Product Configurator on the product page: www.endress.com/cps341d

 Technical Information TI00468C

ORP sensors

Orbisint CPS12D

- ORP sensor for process technology
- Product Configurator on the product page: www.endress.com/cps12d

 Technical Information TI00367C

Ceraliquid CPS42D

- ORP electrode with ceramic junction and KCl liquid electrolyte
- Product Configurator on the product page: www.endress.com/cps42d

 Technical Information TI00373C

Ceragel CPS72D

- ORP electrode with reference system including ion trap
- Product Configurator on the product page: www.endress.com/cps72d

 Technical Information TI00374C

Orbipac CPF82D

- Compact ORP sensor for installation or immersion operation in process water and wastewater
- Product Configurator on the product page: www.endress.com/cpf82d

 Technical Information TI00191C

Orbipore CPS92D

- ORP electrode with open aperture for media with high dirt load
- Product Configurator on the product page: www.endress.com/cps92d

 Technical Information TI00435C

pH ISFET sensors

Tophit CPS441D

- Sterilizable ISFET sensor for low-conductivity media
- Liquid KCl electrolyte
- Product Configurator on the product page: www.endress.com/cps441d

 Technical Information TI00352C

Tophit CPS471D

- Sterilizable and autoclavable ISFET sensor for food and pharmaceuticals, process engineering
- Water treatment and biotechnology
- Product Configurator on the product page: www.endress.com/cps471d



Technical Information TI00283C

Tophit CPS491D

- ISFET sensor with open aperture for media with high dirt load
- Product Configurator on the product page: www.endress.com/cps491d



Technical Information TI00377C

Conductivity sensors with inductive measurement of conductivity**Indumax CLS50D**

- High-durability inductive conductivity sensor
- For standard and hazardous area applications
- With Memosens technology
- Product Configurator on the product page: www.endress.com/cls50d



Technical Information TI00182C

Conductivity sensors with conductive measurement of conductivity**Condumax CLS15D**

- Conductive conductivity sensor
- For pure water, ultrapure water and hazardous area applications
- Product Configurator on the product page: www.endress.com/CLS15d



Technical Information TI00109C

Condumax CLS16D

- Hygienic, conductive conductivity sensor
- For pure water, ultrapure water and Ex applications
- With EHEDG and 3A approval
- Product Configurator on the product page: www.endress.com/CLS16d



Technical Information TI00227C

Condumax CLS21D

- Two-electrode sensor in plug-in head version version
- Product Configurator on the product page: www.endress.com/CLS21d



Technical Information TI00085C

Memosens CLS82D

- Four-electrode sensor
- With Memosens technology
- Product Configurator on the product page: www.endress.com/cls82d



Technical Information TI01188C

Oxygen sensors**Oxymax COS22D**

- Sterilizable sensor for dissolved oxygen
- With Memosens technology or as an analog sensor
- Product Configurator on the product page: www.endress.com/cos22d



Technical Information TI00446C

Oxymax COS51D

- Amperometric sensor for dissolved oxygen
- With Memosens technology
- Product Configurator on the product page: www.endress.com/cos51d



Technical Information TI00413C

Oxymax COS61D

- Optical oxygen sensor for drinking water and industrial water measurement
- Measuring principle: quenching
- With Memosens technology
- Product Configurator on the product page: www.endress.com/cos61d

 Technical Information TI00387C

Memosens COS81D

- Sterilizable, optical sensor for dissolved oxygen
- With Memosens technology
- Product Configurator on the product page: www.endress.com/cos81d

 Technical Information TI01201C

Chlorine sensors

CCS142D

- Membrane-covered amperometric sensor for free chlorine
- Measuring range 0.01 to 20 mg/l
- With Memosens technology
- Product Configurator on the product page: www.endress.com/ccs142d

 Technical Information TI00419C

Ion-selective sensors

ISEmax CAS40D

- Ion selective sensors
- Product Configurator on the product page: www.endress.com/cas40d

 Technical Information TI00491C

Turbidity sensors

Turbimax CUS51D

- For nephelometric measurements of turbidity and solids in wastewater
- 4-beam scattered light method
- With Memosens technology
- Product Configurator on the product page: www.endress.com/cus51d

 Technical Information TI00461C

SAC and nitrate sensors

Viomax CAS51D

- SAC and nitrate measurement in drinking water and wastewater
- With Memosens technology
- Product Configurator on the product page: www.endress.com/cas51d

 Technical Information TI00459C

Interface measurement

Turbimax CUS71D

- Immersion sensor for interface measurement
- Ultrasonic interface sensor
- Product Configurator on the product page: www.endress.com/cus71d

 Technical Information TI00490C

www.addresses.endress.com

For more Endress+Hauser product please visit: www.ainstru.com
Mail: Sales@ainstru.com