

Technical Information

Memocheck CYP02E

Service tool for fast checking of measuring systems



Application

Memocheck CYP02E is a service tool for fast on-site checking of measuring systems incorporating Memosens technology.

Typical applications include:

- Installation check of transmitters with Memosens technology
- Fast configuration check of transmitter and process control system
- Troubleshooting by performing sensor simulation with fixed values

Your benefits

- Increased plant safety thanks to sensor and error simulation
- Time savings thanks to quick and easy installation check during commissioning
- Quick and easy checking of transmitter and PLC configuration
- Robust sensor simulator for a variety of applications


Other advantages provided by Memosens technology:

- No contact corrosion
- Water-tight (degree of protection IP65)
- No interference from external potential thanks to galvanic isolation of simulator and transmitter

Function and system design

Sensor simulation in a complete measuring system consists of:

- Memocheck CYP02E
- Transmitter with Memosens technology, e.g. Liquiline M CM42 or Liquiline CM44x
- Memosens data cable CYK10

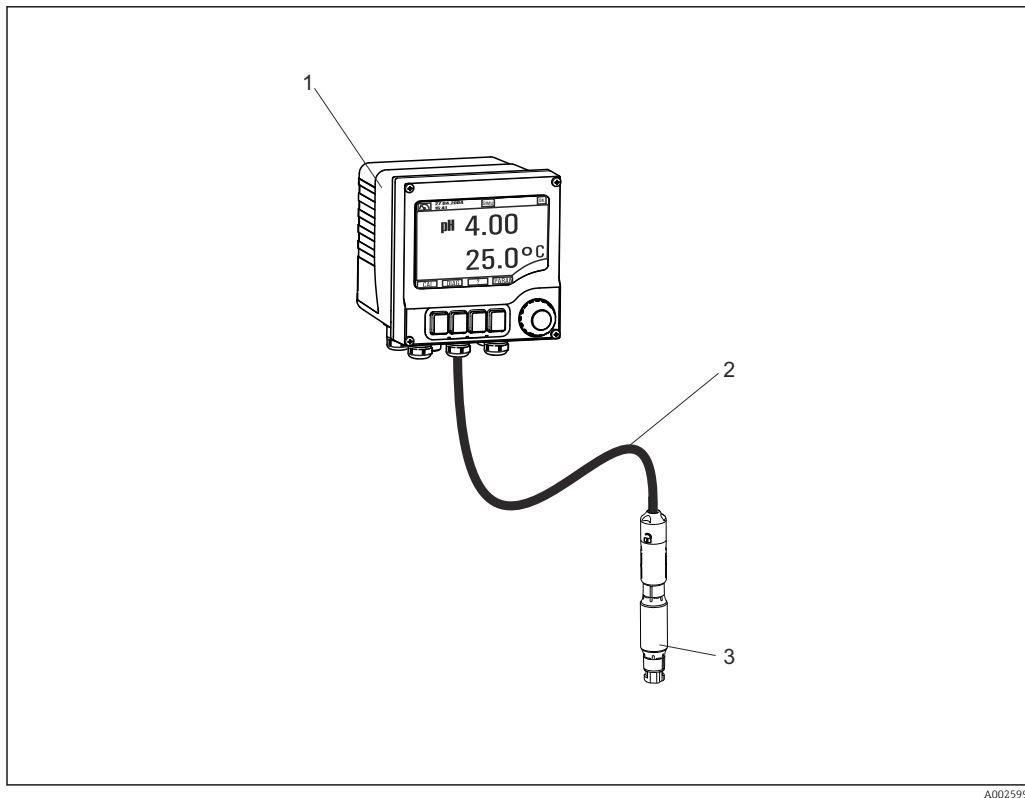

A0025994

 1 Measuring system with Memocheck CYP02E

- 1 Liquiline M CM42 transmitter
 2 Memosens data cable CYK10
 3 Memocheck CYP02E

Performance characteristics

Memocheck CYP02E consists of two interconnected sensor plug-in heads which are independent of one another, and which each supply one specific parameter. You can simulate the following values depending on your order:

Simulation values output for pH glass and pH ISFET

	Fixed simulation value	Temperature
pH glass	4	25 °C (77 °F)
pH ISFET	7	60 °C (140 °F)

Simulation values output for pH glass and pH glass

	Fixed simulation value	Temperature
pH glass	4	25 °C (77 °F)
pH glass	7	60 °C (140 °F)

Simulation values output for pH glass and ORP

	Fixed simulation value	Temperature
pH glass	4	25 °C (77 °F)
ORP potential	750 mV	90 °C (194 °F)

Simulation values output for pH glass and oxygen

	Fixed simulation value	Temperature
pH glass	4	25 °C (77 °F)
Oxygen	60 nA ¹⁾	60 °C (140 °F)

1) Sensor current

Simulation values output for pH glass and conductive measurement of conductivity

	Fixed simulation value	Temperature
pH glass	4	25 °C (77 °F)
Conductivity	20 µS/cm	60 °C (140 °F)

Simulation values output for pH glass and chlorine

	Fixed simulation value	Temperature
pH glass	4	25 °C (77 °F)
Chlorine	60 nA ¹⁾	25 °C (77 °F)

1) Sensor current

The data listed above are displayed on the transmitters.

Memocheck CYP02E is maintenance-free.

Environment


Ambient temperature range	–15 to 70 °C (5 to 158 °F)
Storage temperature range	–15 to 70 °C (5 to 158 °F)
Degree of protection	IP65
Electromagnetic compatibility	Interference emission and interference immunity as per EN 61326-1:2013, Class A for Industry

Process

Process conditions	NOTICE Memocheck CYP02E is not suitable for use directly in the process. The device can be damaged or destroyed in the process. ► Only use the device to simulate measured values outside the process! The sensor simulators must not be operated under electrostatically critical process conditions. Avoid strong steam or dust currents that act directly on the connection system.
--------------------	--

Mechanical construction

Dimensions

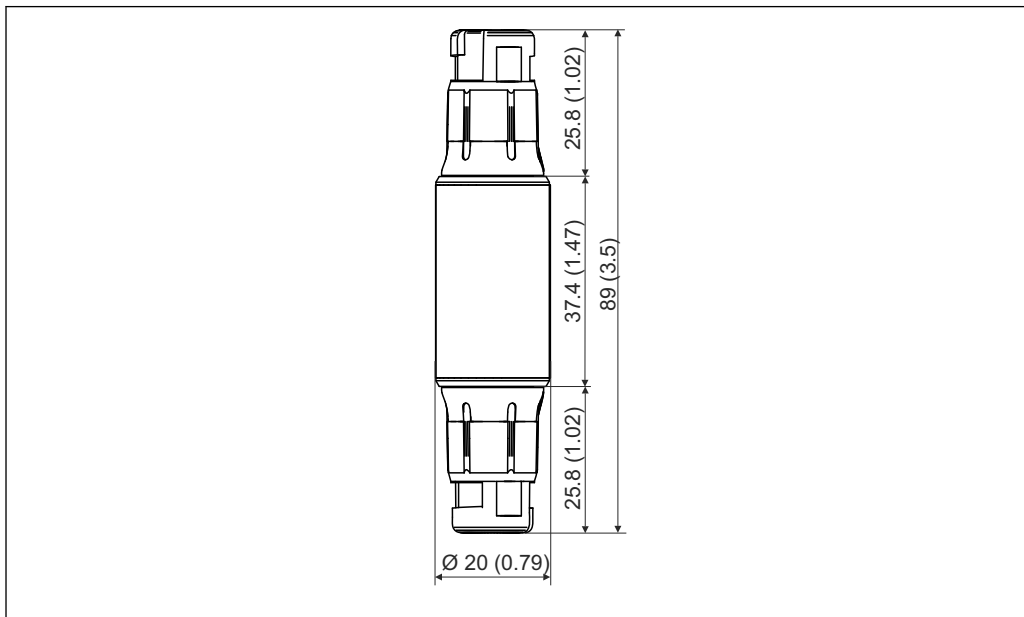

A0026004

2 Dimensions in mm (in)

Weight 40 g

Materials White plastic: PET
Blue plastic: PPS GF 40

Certificates and approvals

CE mark The product meets the requirements of the harmonized European standards. As such, it complies with the legal specifications of the EU directives. The manufacturer confirms successful testing of the product by affixing to it the **CE** mark.

Hazardous area approvals

ATEX
II 2G Ex ia IIC T6 Gb

IECEX
Ex ia IIC T6 Gb

NEPSI
NEPSI Ex ia IIC T6 Gb

CSA C/US
■ CSA C/US IS Cl. I Div. 1 GP A-D T6
■ CSA C/US IS Cl. I Zone 0 AEx ia IIC T6

Japan Ex
JPN Ex ia IIC T6 Gb

INMETRO
INMETRO Ex ia IIC T6 Gb



Ex versions of digital sensor simulators with Memosens technology are identified by an orange-red ring on the plug-in head.

Ordering information

Product page	www.endress.com/CYP02E
Product Configurator	On the product page there is a Configure button to the right of the product image. 1. Click this button. ↳ The Configurator opens in a separate window. 2. Select all the options to configure the device in line with your requirements. ↳ In this way, you receive a valid and complete order code for the device. 3. Export the order code as a PDF or Excel file. To do so, click the appropriate button on the right above the selection window.  For many products you also have the option of downloading CAD or 2D drawings of the selected product version. Click the CAD tab for this and select the desired file type using picklists.
Scope of delivery	Memocheck Plus CYP02E ■ 1 Memocheck CYP02E with 2 plug-in heads ■ 1 x Operating Instructions

Accessories

The following are the most important accessories available at the time this documentation was issued.

- For accessories not listed here, please contact your Service or Sales Center.

Measuring cable	Memosens data cable CYK10 ■ For digital sensors with Memosens technology ■ Product Configurator on the product page: www.endress.com/cyk10  Technical Information TI00118C Memosens laboratory cable CYK20 ■ For digital sensors with Memosens technology ■ Product Configurator on the product page: www.endress.com/cyk20
------------------------	---



www.addresses.endress.com

For more Endress+Hauser product please visit: www.ainstru.com
Mail: Sales@ainstru.com