

Technical Information

Ceraphant T PTC31, PTP31, PTP35

Process pressure

Pressure switch for safe measurement and monitoring of absolute and gauge pressures



Application

Pressure switch for monitoring absolute and gauge pressures in gases, vapours, liquids and dust:

Ceraphant T PTC31

– with ceramic process isolating diaphragm;

Ceraphant T PTP31

– with metallic process isolating diaphragm;

Ceraphant T PTP35

– for hygienic applications

- Finely graduated measuring ranges from vacuum to 400 bar (6000 psi)
- Versions for use in hygienic applications
- Electronic versions
 - one PNP switch output
 - two PNP switch outputs
 - PNP switch output with additional analog output 4...20 mA (active)

Your benefits

This compact pressure switch impresses with the latest in technology being used:




- Integrated switching electronics for decentral and economic process monitoring and control
- Quick and flexible process integration thanks to modular connections
- High reproducibility and long-term stability
- Function check and information on site thanks to LEDs and digital display
- Ceraphire® process isolating diaphragm: corrosion-proof, abrasion-proof and extremely overload-resistant
- Excellent accuracy and briefest response time right to the smallest measuring range
- Operation and visualisation also with personal computer and ReadWin® 2000 or FieldCare®
- Upper part of housing can be rotated by 310°, therefore best readability of measured values in all orientations
- DESINA compliant
- 3A and EHEDG approved

Table of contents

Function and system design	3	Material (not wetted)	16
Device selection	3	Material (wetted)	17
Measuring principle	3		
Measuring system	4	Human interface	18
Input	4	Operating elements	18
Measured variable	4	On-site operation	18
Measuring range	4	Operation with PC	21
Output	4	Certificates and approvals	22
Output signal	4	CE mark	22
Range of adjustment	5	UL listing	22
Switching capacity	5	Pressure Equipment Directive (PED)	22
Inductive load	5	Suitability for hygienic processes	22
Signal on alarm	5	Standards and guidelines	22
Load	5	Ordering Information	23
Power supply	6	Ceraphant T PTC31	23
Electrical connection	6	Ceraphant T PTP31	25
Supply voltage	7	Ceraphant T PTP35	27
Current consumption	7	Questionnaire on customer- specific configuration	28
Power supply failure	7	Accessories	29
Performance characteristics	8	Welding boss	
Reference operating conditions	8	– with sealing taper	29
Switch output	8	Welding boss	
Analog output	8	– with sealing surface	29
Influences of air pressure changes	8	Thread adapter	29
Long-term drift	8	Clamp adapter	29
Long-term reliability	8	Hygiene adapter	30
Thermal change	8	Plug-in jack	30
Operating conditions (installation)	9	Connecting cable	30
Installation instructions	9	Configuration kit	31
Operating conditions (environment)	9	Power supply RNB130	31
Ambient temperature range	9	Documentation	31
Storage temperature	9	Field of Activities	31
Degree of protection	9	Technical Information	31
Shock resistance	9	Operating instructions	31
Vibration resistance	9		
Electromagnetic compatibility	9		
Operating conditions (Process)	10		
Medium temperature range	10		
Limiting medium pressure range	10		
Pressure specifications	10		
Mechanical construction	11		
Design, dimensions	11		
Process connection PTC31 Sensor module with ceramic process isolating diaphragm	12		
Process connection PTP Sensor module with metallic process isolating diaphragm	13		
Weight	15		

Function and system design

Device selection

Ceraphant T - product family	PTC31	PTP31	PTP35
	 P01-PTC31xxx-14-xx-xx-xx-001	 P01-PTP31xxx-14-xx-xx-xx-001	 P01-PTP35xxx-14-xx-xx-xx-001
Measuring cell	With capacitive measuring cell and ceramic process isolating diaphragm (Ceraphire®)	With piezoresistive measuring cell and metallic process isolating diaphragm	With piezoresistive measuring cell and metallic process isolating diaphragm for hygienic applications
Field of application	Measurement and monitoring of absolute and gauge pressures	Measurement and monitoring of absolute and gauge pressures	Measurement and monitoring of absolute and gauge pressures in hygienic processes
Process connection	Thread – G ¼ female – G ¼A and G ½A – G ½A, hole 11.4 mm – M12x1,5 – 7/16-20 UNF – ¼ FNPT and ½ MNPT	Thread – G ¼ female – G ¼A and G ½A – G ½A, hole 11.4 mm – M12x1,5 – 7/16-20 UNF – ¼ FNPT and ½ MNPT – G ½A flush mounted	Hygiene – Clamp ½" - 2" – G 1A – Varivent F, N – DIN 11851 – APV inline – SMS 1½"
Measuring range	0 to 0.1 bar (1.5 psi) to 0 to 40 bar (600 psi)	0 to 1 bar (15 psi) to 0 to 400 bar (6000 psi)	0 to 1 bar (15 psi) to 0 to 40 bar (600 psi)
Process temperature	–40°C to +100°C (–40°F to +212°F)	–40°C to +100°C (–40°F to +212°F)	–40°C to +100°C (–40 °F to +212 °F) 135°C (275°F) max. 1 hour

Measuring principle

Ceraphant T PTC31


The process pressure acts on the ceramic process isolating diaphragm and the pressure-dependent change in capacitance of the ceramic sensor is measured. A microprocessor evaluates the signal and switches the output or outputs the corresponding measured value.

The ceramic sensor is a dry sensor i.e. no fill fluid is needed for pressure transmission. This means that the sensor can fully support a vacuum. Extremely high durability, on a par with the material Alloy, is achieved through the use of the highly pure material Ceraphire® as a ceramic.

Ceraphant T PTP31 and PTP35

The process pressure acting upon the metallic process isolating diaphragm of the sensor is transmitted to a resistance bridge via a fluid. The change in the output voltage of the bridge is proportional to the pressure and can be measured directly.

Measuring system

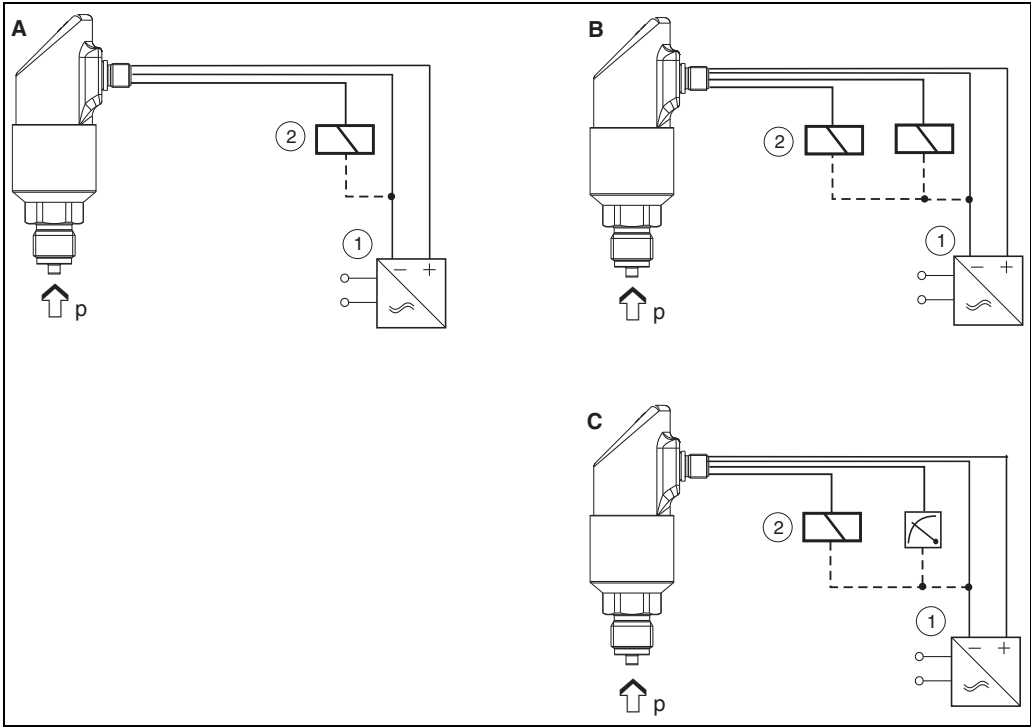

A: 1x PNP switch output
B: 2x PNP switch output
C: PNP switch output with additional analog output 4...20 mA (active).
① Transmitter power supply unit
② Load (e.g. programmable logic controller, process control system, relay)

Input

Measured variable	The measured variable for the pressure switch can be selected as either gauge pressure or absolute pressure.
Measuring range	Measuring ranges up to 400 bar (6000 psi), see "Ordering information" section.

Output


Output signal	DC voltage version: Positive voltage signal (rate depends on power supply voltage) at electronics switch output (PNP). Short-circuit proof version. ■ 1x PNP switch output ■ 2x PNP switch output ■ PNP switch output with additional active analog output 4...20 mA. The analog output continuously represents the measuring range configured or specified by the sensor.
---------------	--

Range of adjustment	■ Switch output: Switch point (SP): 0.5...100 % in increments of 0.1 % (min. 1 mbar * (0.015 psi)) of the upper range limit (URL) Switch-back point (RSP): 0...99.5 % in increments of 0.1 % (min. 1 mbar * (0.015 psi)) of the upper range limit (URL) Min. distance between SP and RSP: 0.5% URL * measuring ranges with negative gauge pressure up to 4 bar (60 psi) in increments of min. 10 mbar (0.15 psi) ■ Analog output (if available): Lower range value (LRV) and upper range value (URV) can be set anywhere within the sensor range (LRL – URL). Turn down of the analog output up to 4:1 of the upper range limit (URL). ■ Damping: can be set anywhere between 0...40 s in increments of 0.1 s ■ Factory setting (if no customer-specific settings have been ordered): Switch point SP 1: 45 %; Switch-back point RSP 1: 44.5 % Switch point SP 2: 55 %; Switch-back point RSP 2: 54.5 % Analog output: LRV 0 %; URV 100 % LRL = Lower Range Limit / URL = Upper Range Limit LRV = Lower Range Value / URV = Upper Range Value
Switching capacity	DC voltage version: ■ Switch status ON: $I_a \leq 250$ mA, switch status OFF: $I_a \leq 1$ mA ■ Switching cycles: >10,000,000 ■ Voltage drop PNP: ≤ 2 V ■ Overload resistance: Automatic load check of switching current; max. capacitance load: 14 μF at max. supply voltage (without resistive load) max. period length: 0.5 s; min. t_{on}: 40 μs Periodic disconnection from a protective circuit in event of overcurrent ($f = 2$ Hz) and indication of "Warning"
Inductive load	To prevent electrical interference, only operate an inductive load (relays, contactors, solenoid valves) when directly connected to a protective circuit (free-wheeling diode or capacitor).
Signal on alarm	■ Analog output $\leq 3,6$ mA / last current value / $\geq 21,0$ mA adjustable (if setting ≥ 21.0 mA the output is ≥ 21.5 mA) ■ Switch outputs: In safe state (switch normally open)
Load	Max. ($U_{Supply} - 6.5$ V) / 0.22 A (analog output)

Power supply

Electrical connection

Connector and cable connection

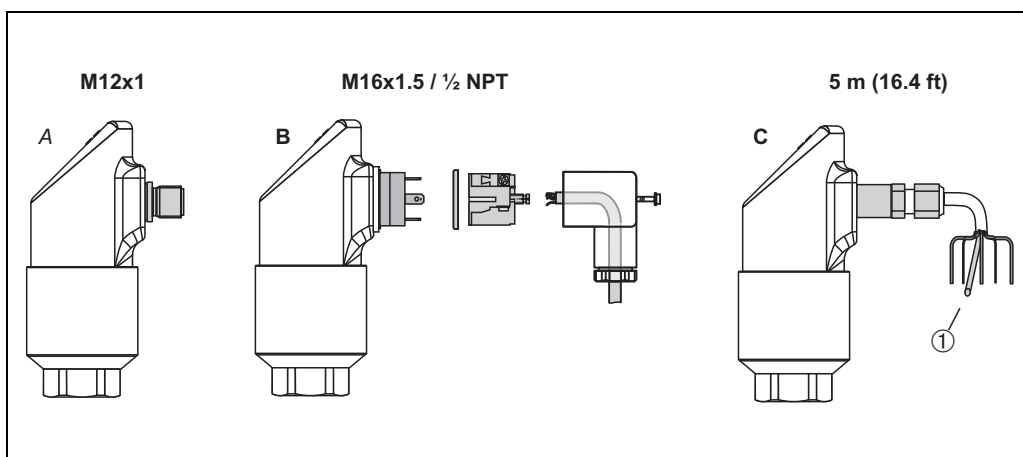


P01-PTx3xxxx-04-xx-xx-xx-001

A: M12x1 connector;
 B: M16x1.5 or 1/2 NPT valve plug
 C: cable, 5 m (16.4 ft) long, 5-core
 ① reference pressure supply

Device connection


■ DC voltage version with M12x1 connector

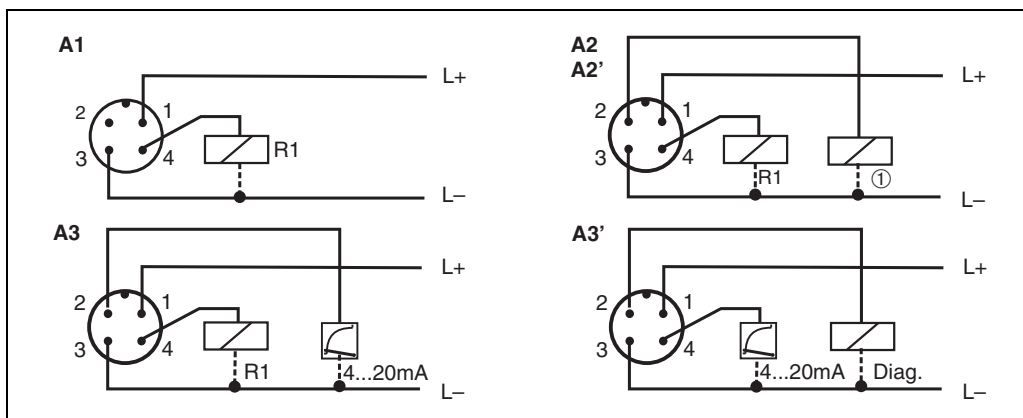

P01-PTx3xxxx-04-xx-xx-xx-002

A1: 1x PNP switch output
 A2: PNP switch outputs R1 and ① (R2)
 A2': PNP switch outputs R1 and ① (diagnosis/break contact with adjustment "DESINA")
 A3: PNP switch output with additional analog output
 A3': PNP switch output with additional analog output (PIN assignment with "DESINA" setting)


■ DC voltage version with M16x1.5 or 1/2 NPT valve plug

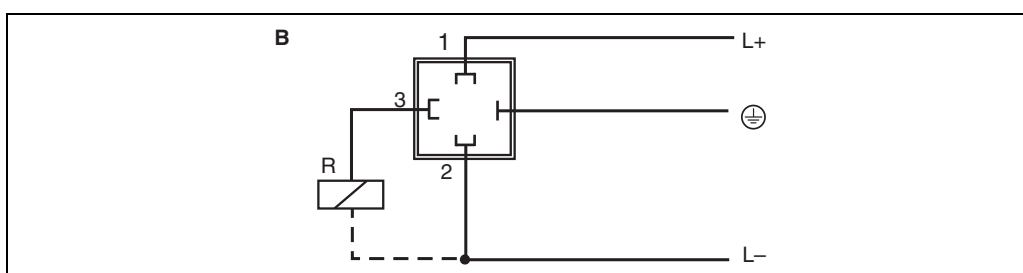

P01-PTx3xxxx-04-xx-xx-xx-003

B: 1x PNP switch output

■ DC voltage version with cable

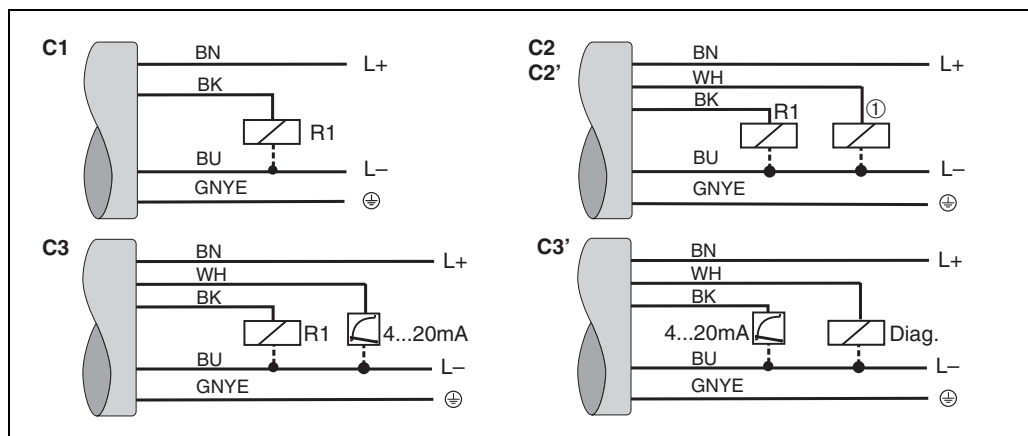

P01-PTx3xxxx-04-xx-xx-xx-004

C1: 1x PNP switch output

C2: 2x PNP switch output

C2': PNP switch outputs R1 and ① (diagnosis/break contact with adjustment "DESINA")

C3: PNP switch output with additional analog output

C3': PNP switch output with additional analog output (assignment with "DESINA" setting)

Cable specification: all three connection versions 5-core; 4 x 0.2 mm² (AWG25), PE 0.75 mm² (AWG18)

– Core colours: BN = brown, BK = black, WH = white, BU = blue, GNYE = green/yellow

Supply voltage

- DC voltage version
12...30 V DC

Current consumption

Without load < 60 mA, with reverse polarity protection

Power supply failure

- Behaviour in case of overvoltage (>30 V)
The device works continuously without any damage up to 34 V DC.
The specific properties are no longer guaranteed if the supply voltage is exceeded.
No damage is caused to the device in case of a short-term overvoltage up to 1 kV (as per EN 6100-4-5)
- Behaviour in case of undervoltage
If the supply voltage drops below the minimum value, the device switches off (status as if not supplied with power = switch open).

Performance characteristics

The percentage information in the "Performance characteristics" section refer to the upper range limit (URL).

Reference operating conditions	To DIN IEC 60770 or DIN IEC 61003 T = 25 °C (77 °F), relative humidity 45 to 75 %, ambient air pressure 860 to 1060 hPa
Switch output	■ Accuracy: deviation <0.5 % ■ Non-repeatability: <0.2 % ■ Response time: ≤20 ms
Analog output	■ Maximum measured error: Non-linearity + hysteresis + non-repeatability: ≤0.5 % (as per limit point method) ■ Non-linearity: ≤0.2 % (as per limit point method) ■ Rise time T₉₀: ≤200 ms ■ Settling time T₉₉: ≤400 ms
Influences of air pressure changes	In the case of air pressure changes the following additional measuring errors might occur: 400 bar (6000 psi): max. 0.0275 % 100 bar (1500 psi): max. 0.1 %
Long-term drift	≤0.15 % per year
Long-term reliability	Mean time between failure (MTBF) > 100 years (calculated according to "British Telecom Handbook of Reliability Data No. 5)
Thermal change	≤ ± 1.5 % (-20 to +45°C (-4 to +113°F)) ≤ ± 2.0 % (-40 to +85°C (-40 to +185°F)) ≤ ± 2.5 % (-40 to +100°C (-40 to +212°F))

Operating conditions (installation)

Installation instructions

- Any orientation
- Any position-dependent zero shift can be corrected. Offset: ± 20 % URL
- Housing can be rotated up to 310°

Oxygen applications

Oxygen and other gases can react explosively to oils, grease and plastics, such that, among other things, the following precautions must be taken:

- All components of the system, such as measuring devices, must be cleaned in accordance with BAM requirements (DIN 19247). (BAM = Federal Institute for Materials Research and Testing).
- Depending on the materials used, a certain maximum temperature and a maximum pressure must not be exceeded in oxygen applications. The maximum temperature $T_{\max}$ for oxygen applications is 60°C (140°F).

The devices suitable for gaseous oxygen applications are listed in the following table, indicated by $p_{\max}$.

Order code for devices cleaned for oxygen applications	$p_{\max}$ for oxygen applications
PTC31 – * * * * * 6 *, for devices with sensors, nominal value < 10 bar (150 psi)	Overpressure limit (OPL) of sensor ¹⁾
PTC31 – * * * * * 6 *, for devices with sensors, nominal value ≥ 10 bar (150 psi)	30 bar (450 psi)

1) → See Page 23 ff "Ordering information", feature 80 "Sensor seal".

Operating conditions (environment)

Ambient temperature range

-20 to $+70^\circ\text{C}$ (-4 to $+158^\circ\text{F}$), briefly up to $+100^\circ\text{C}$ (212°F)
Extended temperature application range (-40°C to $+85^\circ\text{C}$ (-40°F to $+185^\circ\text{F}$)) with restrictions in optical properties such as display speed and contrast.

Storage temperature

-40 to $+85^\circ\text{C}$ (-40 to 185°F)

Degree of protection

- M12x1 connector
Gauge pressure sensors IP 65; Absolute pressure sensors: IP 66
- M16x1.5 or $\frac{1}{2}$ NPT valve plug
IP 65
- Cable: IP 66

For applications where the device is installed outdoor or cleaned from outside we recommend the use of a protection cap.

Shock resistance

50 g to DIN IEC 68-2-27 (11 ms)

Vibration resistance

20 g to DIN IEC 68-2-6 (10-2000Hz)

Electromagnetic compatibility

- Interference emission as per EN 61326, class B electrical equipment
- Interference immunity as per EN 61326, appendix A (industrial use)

Operating conditions (Process)

Medium temperature range

- PTC31: -20 °C...+100 °C (-4 °F to +212 °F)
- PTP31: -40°C...+100°C (-40°F to +212°F)
- PTP35: -40°C...+100°C (-40°F to +212°F), +135°C (+275°F) for max. 1 hour

Please also note the temperature limits of the seal in the following table.

Seal	Temperature limits
FKM	-20...+100 °C (-4 °F to +212 °F)
EPDM, FDA-Nummer 21 CFR 177.2600, Class II 3A Sanitary Standard 18, USP Class VI	-20...+100 °C (-4 °F to +212 °F)
FKM for O2 usage (70C3 CO2 - 70 - 0041V)	-10...60 °C (+14 °F to 140 °F)

With applications involving saturated steam, a Ceraphant T with a metallic process isolating diaphragm must be used, or a siphon for temperature isolation should be provided during installation. Extreme jumps in temperature can result in temporary errors. Temperature compensation takes effect after several minutes. Internal temperature compensation is faster the smaller the temperature jump and the longer the time interval

Limiting medium pressure range

- For overload resistance see "Ordering information" section
- Vacuum resistance
 - For ceramic sensor with nominal value >100 mbar (1.5 psi): 0 mbar_{abs} (0 psi)
 - For ceramic sensor 100 mbar (1.5 psi): 700 mbar_{abs} (10.5 psi)
 - For metallic sensor: 10 mbar_{abs} (0.15 psi) (The vacuum resistance applies for the measuring cell under reference operating conditions.)

Pressure specifications

The maximum pressure for the measuring device is dependent on the weakest element with regard to pressure, see the following sections "Ordering information: Measuring range" and "Mechanical construction"

The MWP (maximum working pressure) is specified on the nameplate. This value refers to a reference temperature of +20 °C (-68°F) and may be applied to the device for an unlimited time.

The test pressure (Over Pressure Limit OPL) corresponds to 1.5 times the MWP and may be applied for a limited time only in order to avoid lasting damage.


Avoid steam hammering! Steam hammering can cause zero point drift.

Recommendation: Residue (such as condensation or drops of water) can remain at the process isolating diaphragm after CIP cleaning and lead to local steam hammering if immediately steam is introduced. In practice, drying the process isolating diaphragm (e.g. by blowing off excess moisture) has proven to be a successful way of avoiding steam hammering.

Mechanical construction

Design, dimensions

Dimensions

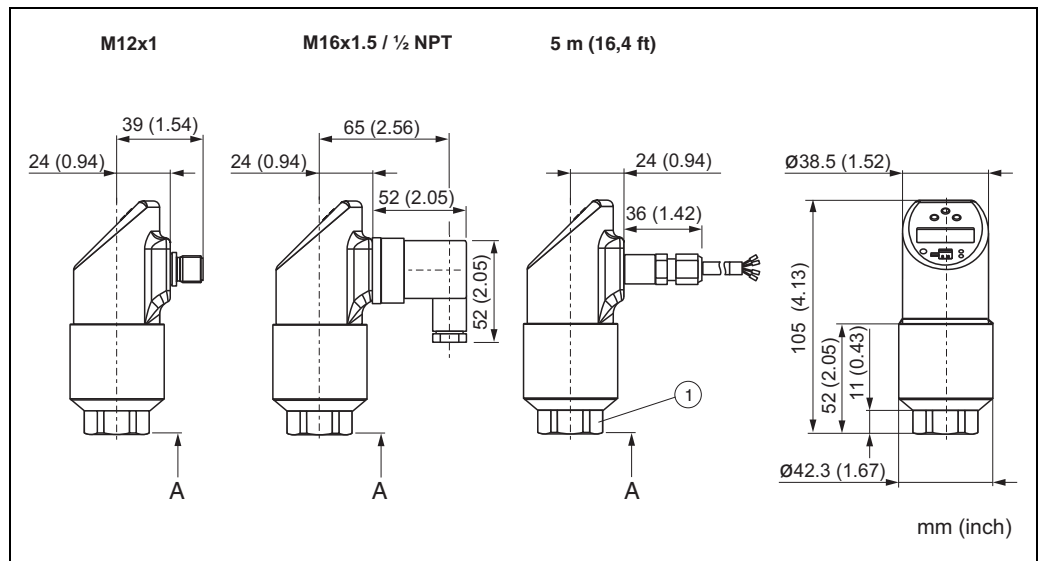

P01-PTx3xxxx-06-xx-xx-xx-001


M12x1 connector as per IEC 60947-5-2

M16x1.5 or 1/2 NPT valve plug as per DIN 43650A/ISO 4400

Cable 5 m (16 ft) long, cable outer diameter 7.7 mm (0.3 in); cores 4 x 0.2 mm² (AWG 24), PE 0.75 mm² (AWG 18)
reference pressure hose with outer diameter 2.5 mm (0.1 in)

① Across flats AF 27 mm (for 400 bar (6000 psi) sensor AF 32 mm)
A = height dimension of process connections – see next diagrams

Process connection

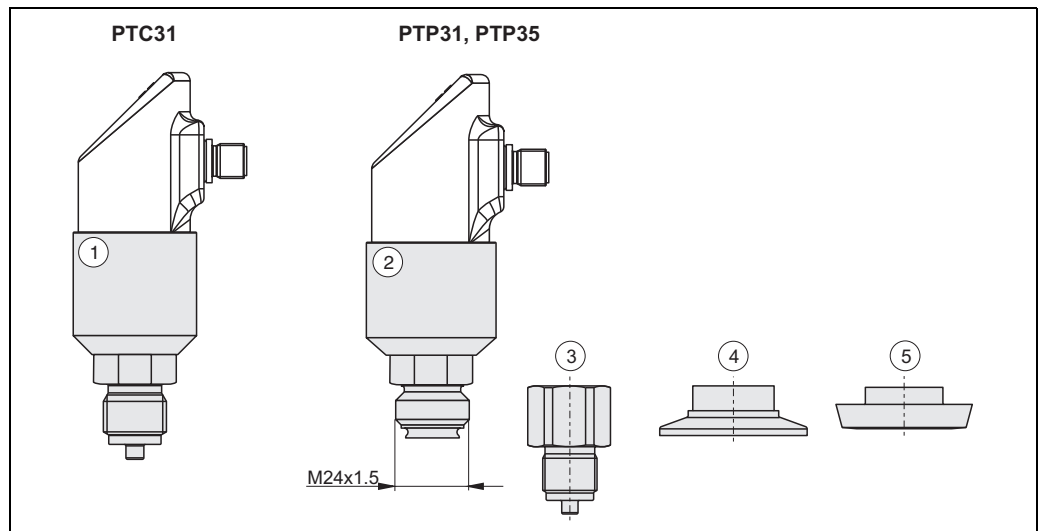

P01-PTx3xxxx-06-xx-xx-xx-006

PTC31: sensor module ① with process connection.

PTP31/35: sensor module ② with M24x1.5 adapter thread for adapters with process connection.


Adapter (mounted onto sensor module at the factory, 400 bar (6000 psi) thread adapter welded onto sensor module)

③ Adapter with thread connection

④ Adapter with clamp connection (except 1/2" clamp)

⑤ Adapter with hygienic connection (except G 1A)

Process connection PTC31 Sensor module with ceramic process isolating diaphragm

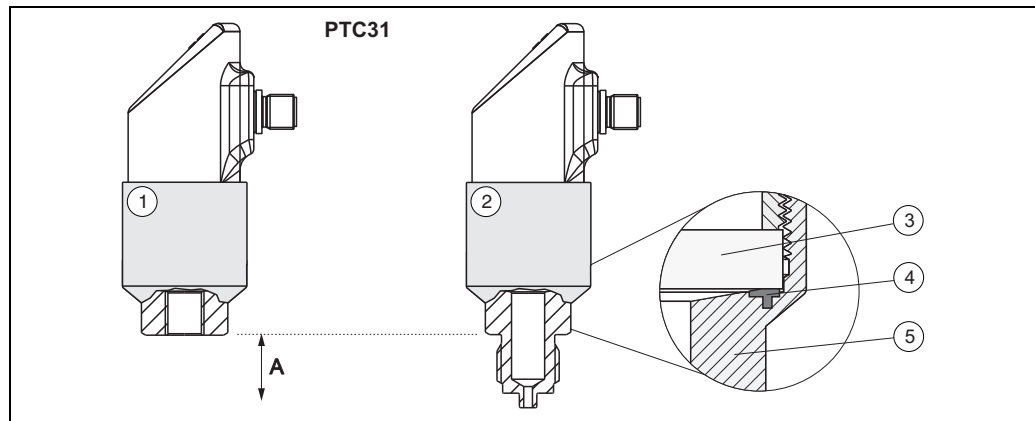

P01-PTx3xxxx-14-xx-xx-xx-003


PTC31; sensor module with process connection

- ① with internal thread
- ② with external thread

"Seal" detail: ③ Ceraphire ceramic sensor, ④ moulded seal, in contact with process, ⑤ sensor module

Dimension A: see the following dimension drawings (dimension with *)

Thread connections

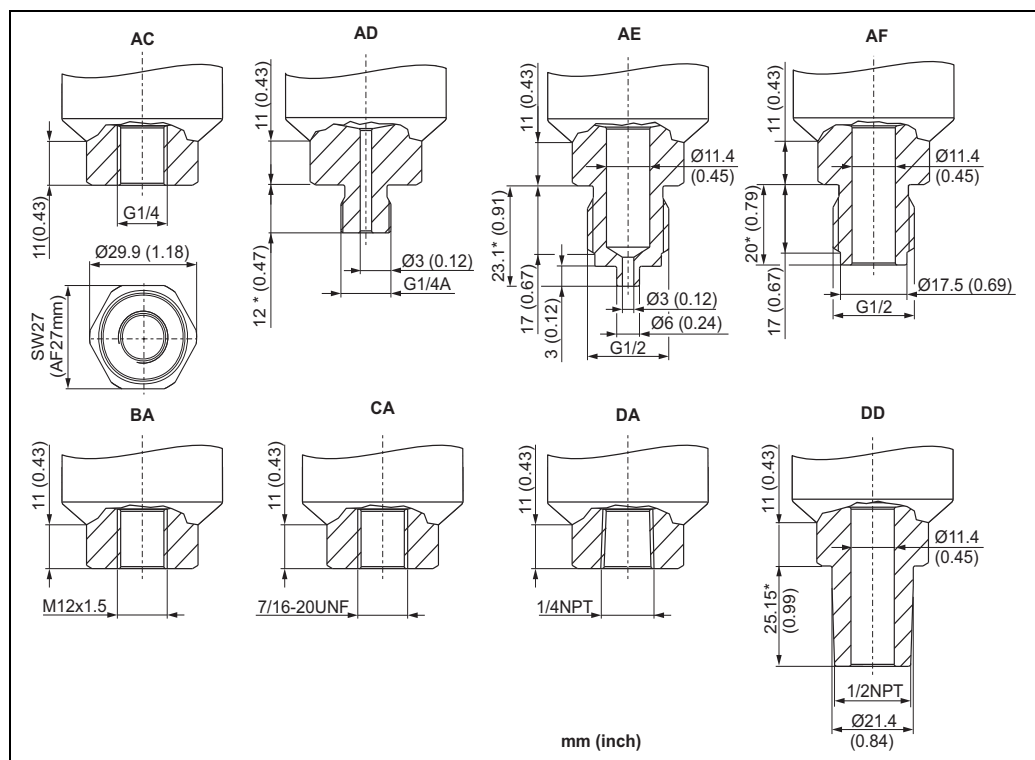

P01-PTx3xxxx-06-xx-xx-xx-002

Process connection versions (see also "Ordering information" section)

AC: thread ISO 288, G $\frac{1}{4}$ (female)

AD: thread ISO 288, G $\frac{1}{4}$ A

AE: thread ISO 288, G $\frac{1}{2}$ A

AF: thread ISO 288, G $\frac{1}{2}$ A, bore 11 mm (0.43 in)


BA: Thread DIN 13, M12x1.5

CA: thread 7/16-20 UNF (SAE)

DA: thread ANSI $\frac{1}{4}$ FNPT

DD: thread ANSI $\frac{1}{2}$ MNPT

Process connection PTP
Sensor module with metallic
process isolating diaphragm

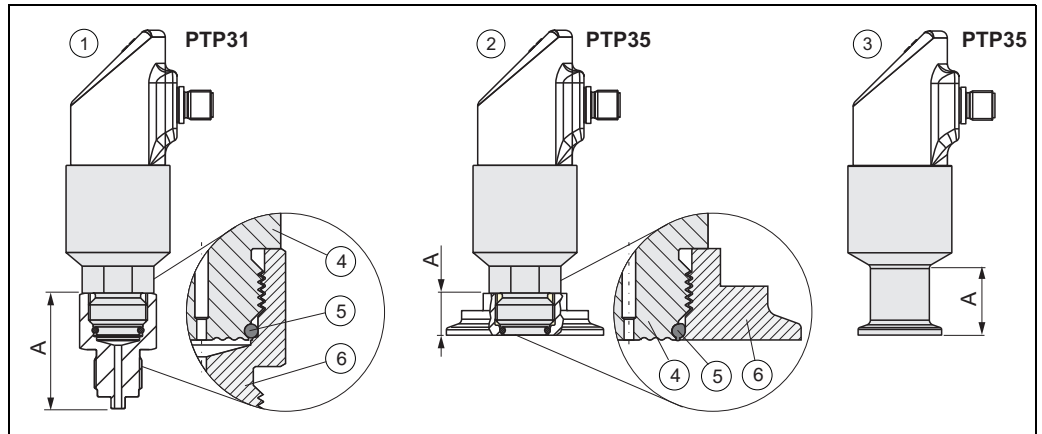


P01-PTx3xxxx-14-xx-xx-xx-002

- ① Sensor module with adapter thread for adapters with thread connection
- ② Sensor module with adapter thread for adapters with clamp or hygiene connection
- ③ Sensor module with clamp or hygiene connection (only versions DA, BA, BB)

"Seal" detail: ④ sensor module, ⑤ Standard O-ring, in contact with process, ⑥ adapter

Dimension A: see the following dimension drawing (dimension with *). For 400 bar (6000 psi) sensor see also Page 12.

Process connection PTP31 Thread connections

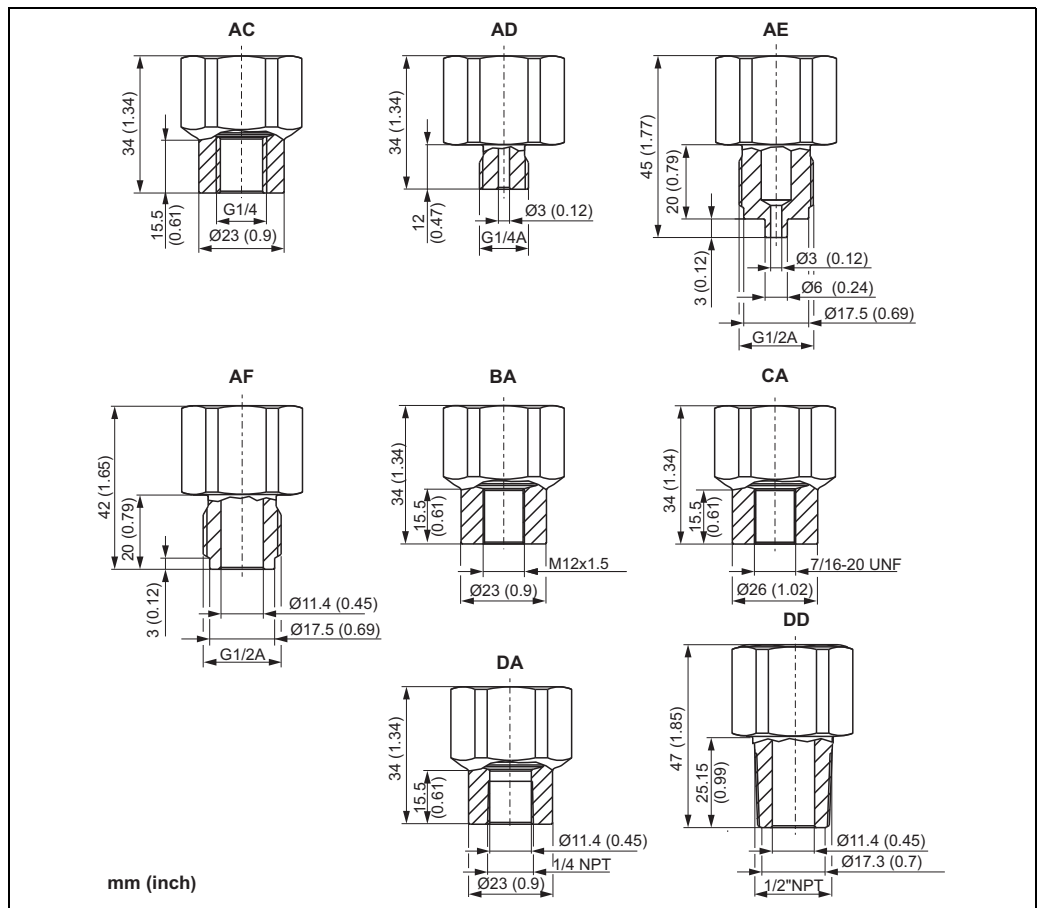

P01-PTx3xxxx-06-xx-xx-xx-020

Process connection versions: sensor module with adapter (see also "Ordering information" section)

AC: thread ISO 228, G $\frac{1}{4}$ (female)

AD: thread ISO 228, G $\frac{1}{4}$ A

AE: thread ISO 228, G $\frac{1}{2}$ A

AF: thread ISO 228, G $\frac{1}{2}$ A, bore 11 mm (0.43 in)


BA: Thread DIN 13, M12x1.5

CA: thread 7/16-20 UNF (SAE)

DA: thread ANSI $\frac{1}{4}$ FNPT

DD: thread ANSI $\frac{1}{2}$ MNPT

Process connection PTP31 Flush-mounted nozzle

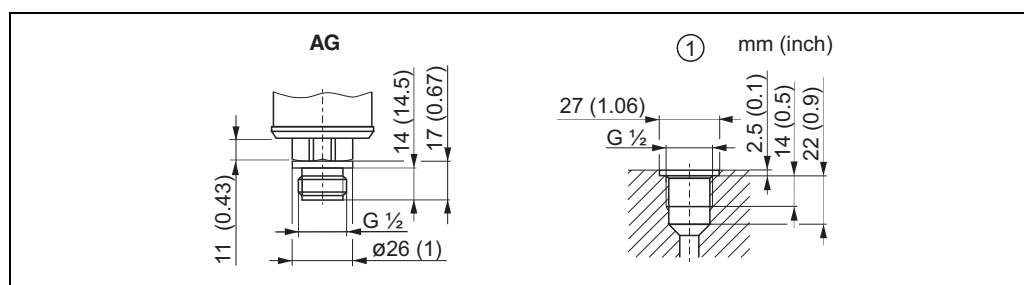


P01-PMP131xx-06-09-xx-xx-002

Process connection PTP31; Version AG. Diameter of the process isolation diaphragm 17.2 mm (0.68 in).

AG: Thread ISO 228 G 1/2, seal DIN 3852 flush-mounted, Weld-in adapter 52002643

①: Dimensions for tapped hole G 1/2 as per DIN 3852-11 form X

Process connection PTP35 Hygiene connections

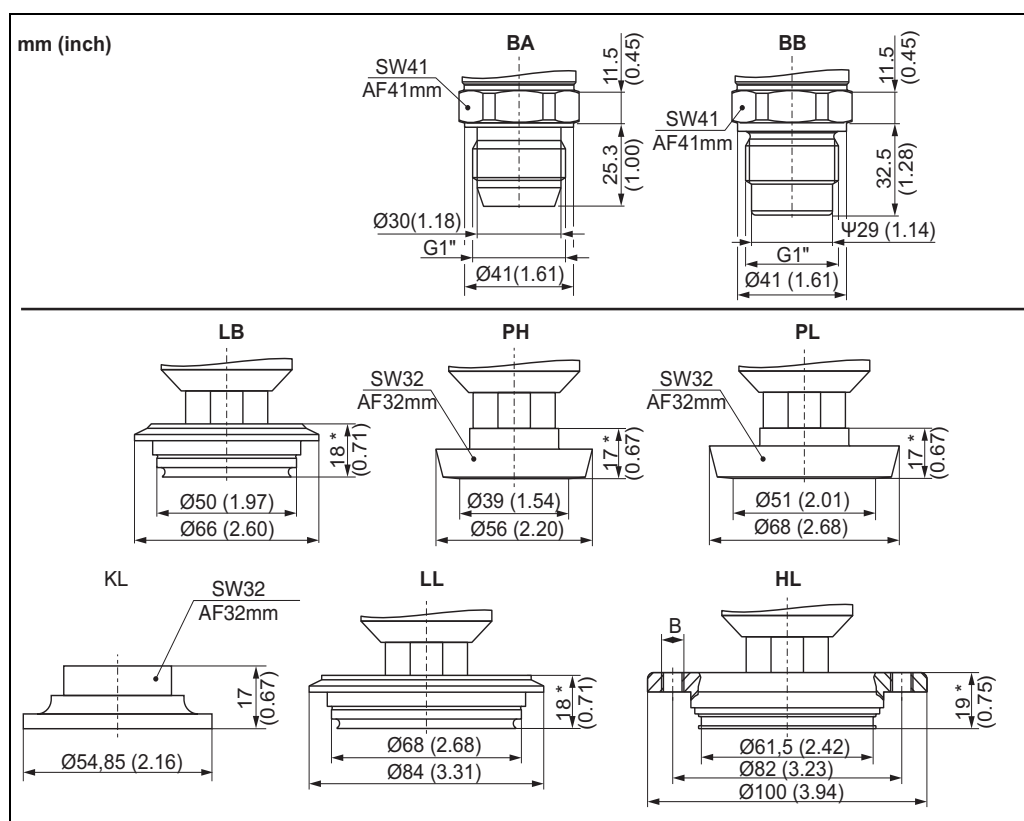

P01-PTX3xxxx-06-xx-xx-xx-004

Process connection versions. Diameter of the process isolation diaphragm 17.2 mm (0.68 in).

BA: thread ISO 228 G1A, metallic taper seal

BB: thread ISO 228 G1A (EHEDG, 3A), O-ring seat seal

Process connection versions (sensor module with adapter). Diameter of the process isolation diaphragm 17.2 mm (0.68 in).

LB: Varivent F pipe DN 25-32, PN 40 (EHEDG, 3A)

LL: Varivent N pipe DN 40-162, PN 40 (EHEDG, 3A)

PH: DIN 11851, DN 40, PN 40 (including slotted nut) (EHEDG, 3A)


PL: DIN 11851, DN 50, PN 25 (including slotted nut) (EHEDG, 3A)

HL: APV inline, DN 50, PN 40, (B = bores 6 x Ø8.6 + 2 x M8 thread) (EHEDG, 3A)

KL: SMS 1 1/2 PN 25, 316L (EHEDG, 3A)

See also "Ordering information" section

Process connection PTP35 Clamp connections

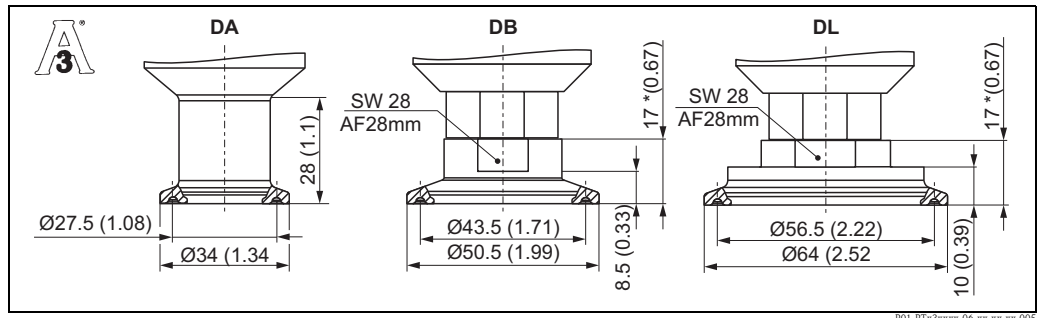

Process connection version Diameter of the process isolation diaphragm 17.2 mm (0.68 in).
DA: Clamp ISO 2852 DN 22 (3/4") or DN 20 (DIN 32676) (EHEDG, 3A)

Process connection versions (sensor module with adapter). Diameter of the process isolation diaphragm 17.2 mm (0.68 in).
DB: Tri-Clamp ISO 2852 DN 25...DN 38 (1"...1 1/2") or DN 25...DN 40 (DIN 32676) (EHEDG, 3A)
DL: Tri-Clamp ISO 2852 DN 40...DN 51 (2") or DN 50 (DIN 32676) (EHEDG, 3A)

See also "Ordering information" section

PTP31 with 400 bar (6000 psi) sensor


- Across flats on sensor module AF 32 mm
- Sensor module welded to thread adapter
- For 1/4 NPT thread connections, M12x1.5, 7/16-20UNF: dimension A 5 mm (0.2 in) longer
For 1/2 NPT thread connections, G 1/2A: dimension A 1 mm (0.04 in) longer

Weight

- PTC31: approx. 0.32 kg (0.71 lbs)
- PTP31: approx. 0.37 kg (0.82 lbs)
- PTP35: approx. 0.58 kg (1.28 lbs) with clamp process connection 1...1 1/2"

Material (not wetted)

Housing

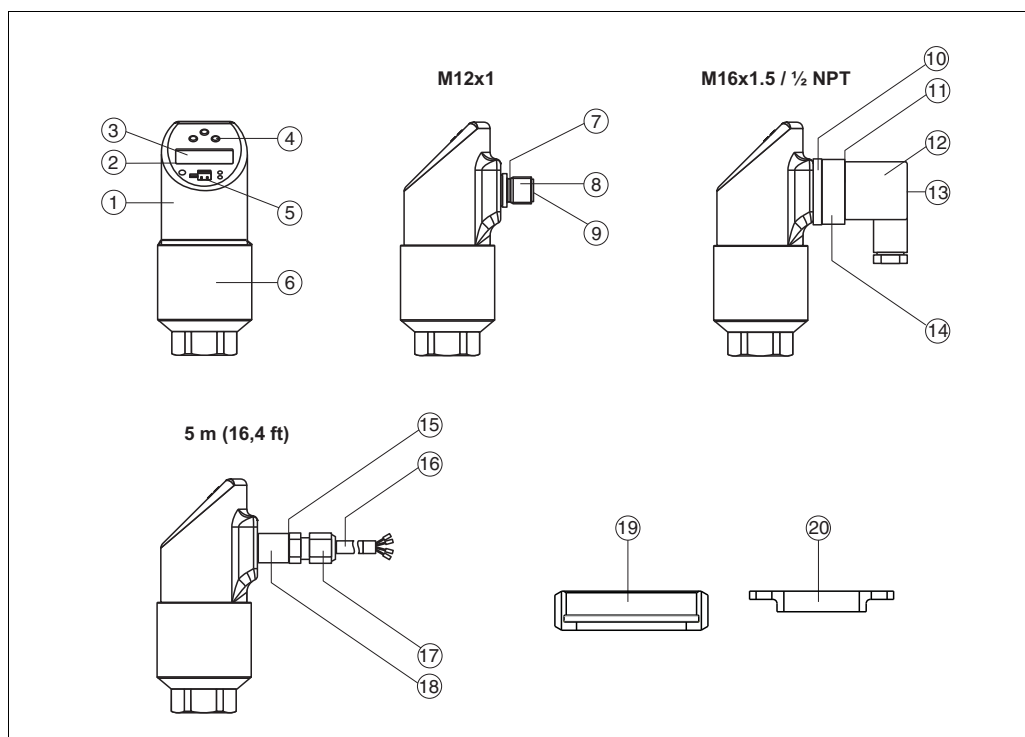

P01-PTx3xxxx-06-xx-xx-xx-012

Front view, left-hand side view


Item number	Component part	Material
1	Housing F25	AISI 316 L (1.4404) with electropolished surface $R_a \leq 0,8 \mu\text{m}$ (31,5 μin)
2	Seal between display and housing	Closed-cell acrylate adhesive
3	Display	PC-FR LEXAN 943A
4	Keys	PC-FR LEXAN
5	CDI cover	TPE SANTOPRENE 151-60
6	Sensor jack	1.4435
7	O ring	FKM
8	M-12 jack	316L (1.4404/1.4435)
9	Inner jack	PA; contacts CuZn nickel-plated
10	Valve jack	316L (1.4404/1.4435)
11	Seal jack	NBR
12	ISO plug	PA
13	Screw	V2A
14	Jack	PBT-FR
15	O ring	EPDM
16	Cable	PUR/UL 94 V0
17	Cable gland	PA
18	M16 jack	316L (1.4404/1.4435)
19	Coupling nut SMS 11861	1.4307
20	Coupling nut DRD	1.4301

Filling oil

Filling oil for PTP31 and PTP35: synthetic oil, FDA number 21 CFR 178.3570

Devices with M12 plug

PIN assignment for M12 connector

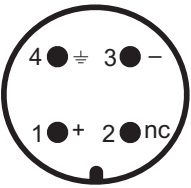	PIN	Meaning
	1	Signal +
	2	Not assigned
	3	Signal –
	4	Earth

Endress+Hauser offers the following accessories for devices with an M12 plug:

Plug-in jack M12x1, straight

- Material: body PA; slotted nut CuZn, nickel-plated
- Degree of protection (fully locked): IP67
- Order number: 52006263

Plug-in jack M12x1, elbowed

- Material: body PBT/PA; slotted nut GD-Zn, nickel-plated
- Degree of protection (fully locked): IP67
- Order number: 71114212

Cable 4x0.34 mm² (20 AWG) with M12 socket, elbowed, screw plug, length 5 m (16 ft)

- Material: body PUR; slotted nut CuSn/Ni; cable PVC
- Degree of protection (fully locked): IP67
- Order number: 52010285

Material (wetted)

Note!

Process wetted device components are listed in the "Mechanical construction" (→  11) and "Ordering Information" (→  23) sections.

TSE Certificate of Suitability

The following applies to all process wetted device components:

- They do not contain any materials derived from animals.
- No auxiliaries or operating materials derived from animals are used in production or processing.

Process connection

- Process connection: AISI 316L (1.4435)
Surfaces in contact with the process for PTP35 $R_a \leq 0,8 \mu\text{m}$ (31,5 μin)
- "Clamp connections" and "Hygienic connections" (see also "Ordering information" section):
AISI 316L (DIN/EN material number 1.4435)

Process isolating diaphragm

- PTC31: Ceraphire® (99,9 % Al₂O₃). The US Food & Drug Administration (FDA) has no objections to the use of ceramics made from aluminum oxide as a surface material in contact with foodstuffs. This declaration is based on the FDA certificates of our ceramic suppliers.
- PTP31/35: AISI 316L (1.4435)


Seals

- FKM
- EPDM: FDA number 21 CFR 177.2600, Class II 3A Sanitary Standard 18, USP Class VI,
- FKM for O₂ applications (70C3 CO2-70-0041V)

Human interface

Operating elements

Position and meaning of display and operating elements.

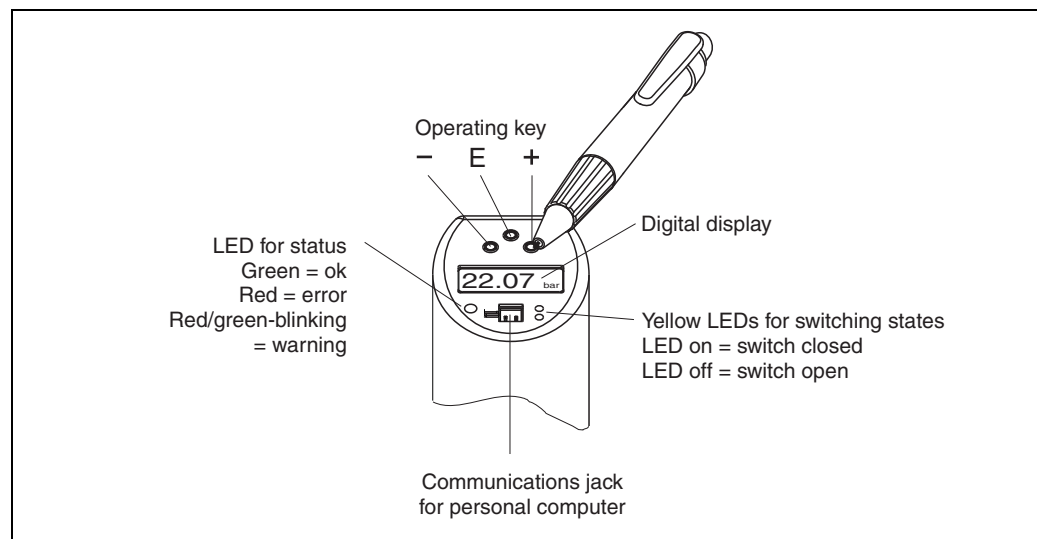

P01-PTx3xxxx-19-xx-xx-en-003

The background illumination of the digital display indicates the status of the device:
white = ok; red = error

On-site operation

Menu-guided operation using operating keys.

Function group	Operating options
BASE (basic functions)	Selection of unit: bar, psi, kPa/MPa
	Offset: ± 20 % URL
	Damping display value, output signal: anywhere between 0...40 s (in increments of 0.1 s)
	Display: – Display of measured value or configured switch point – Rotation of display by 180° – Switching off display
	Behaviour according to DESINA: The PIN assignment of the M12 connector is in accordance with the guidelines of DESINA (DESINA = distributed and standardised installation technology for machine tools and manufacturing systems)
OUT (Configuration of 1st output)	Output function: – Hysteresis function or window function – NC contact or NO contact (see next diagram) – Analog output 4...20 mA
	Switch point: – Input value – Acceptance of applied value Switch point anywhere between 0.5...100 % URL (in increments of 0.1 %, min. 0.001 bar (0.015 psi))
	Switch-back point: – Input value – Acceptance of applied value Switch-back point anywhere between 0...99.5 % URL (in increments of 0.1 %, min. 0.001 bar (0.015 psi))
	Switch output delay: anywhere between 0...99 s (in increments of 0.1 s)

Function group	Operating options
OUT 2 (Configuration of 2nd output, only for corresponding electronics version)	Output function: – Hysteresis function or window function – NC contact or NO contact (see next diagram) – Analog output 4...20 mA
	Switch point 2: – Input value – Acceptance of applied value Switch point anywhere between 0.5...100 % URL (in increments of 0.1 %, min. 0.001 bar (0.015 psi))
	Switch-back point 2: – Input value – Acceptance of applied value Switch-back value anywhere between 0...99.5 % URL (in increments of 0.1 %, min. 0.001 bar (0.015 psi))
	Switch output delay: anywhere between 0...99 s (in increments of 0.1 s)
4-20 (configuration of analog output, only for corresponding electronic version)	Lower range value (LRV) and upper range value (URV) of analog output: – Input value – Acceptance of applied value Anywhere within sensor range (in increments of 0.1 %); turn down up to 4 : 1
	Setting of error current: choice of ≤ 3.6 mA / ≥ 21.0 mA / last current value
SERV (service functions)	Resetting of all settings to factory settings
	Static Revision Counter (configuration counter; increases by one with every change in configuration)
	Locking by means of freely selectable code
	Display of last error to occur
	Simulation of switch output and analog output
	Display of max. measured pressure value
	Display of min. measured pressure value
Note	Measuring ranges with negative gauge pressure up to 4 bar (60 psi) in increments of min. 0.01 mbar (0.15 psi)

Functions of switch output

- Hysteresis function

The hysteresis function enables two-point control via a hysteresis. Depending on the pressure p , the hysteresis can be set via the switch point SP and the switch-back point RSP.


- Window function

The window function enables the monitoring of a process pressure range.

The hysteresis of the switch points SP and RSP is less than 0.1 % URL. Under rough EMC conditions quick switching is possible if the measured value is near to SP or RSP. Setting a damping of 0.1 s will avoid this effect.

- NO contact or NC contact

This switch function is freely selectable.

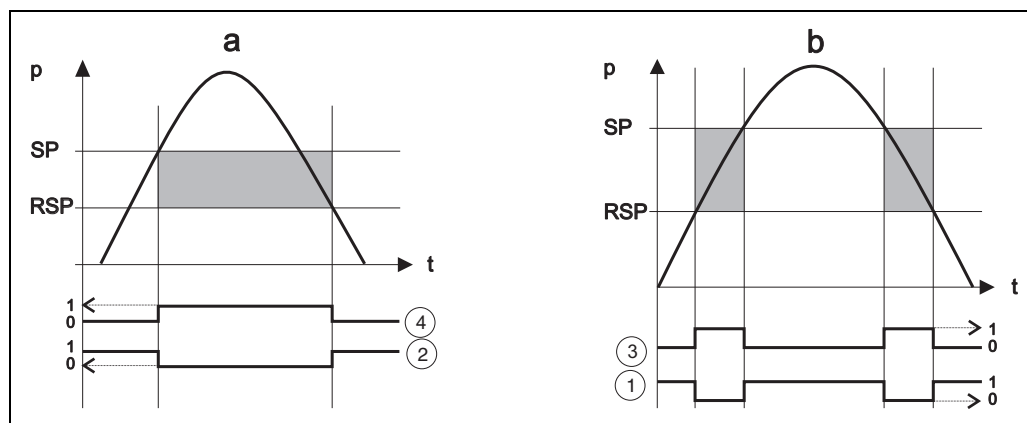

a Hysteresis function

b Window function

① Window NC contact switch status

② Hysteresis NC contact switch status

③ Window NO contact switch status


④ Hysteresis NO contact switch status

SP Switch point

RSP Switch-back point

Operation with PC

The device can be configured with the configuration software ReadWin® 2000 or FieldCare®. For the connection between the USB port of the computer and the device a configuration kit (e. g. TXU10 or FXA291) is necessary.

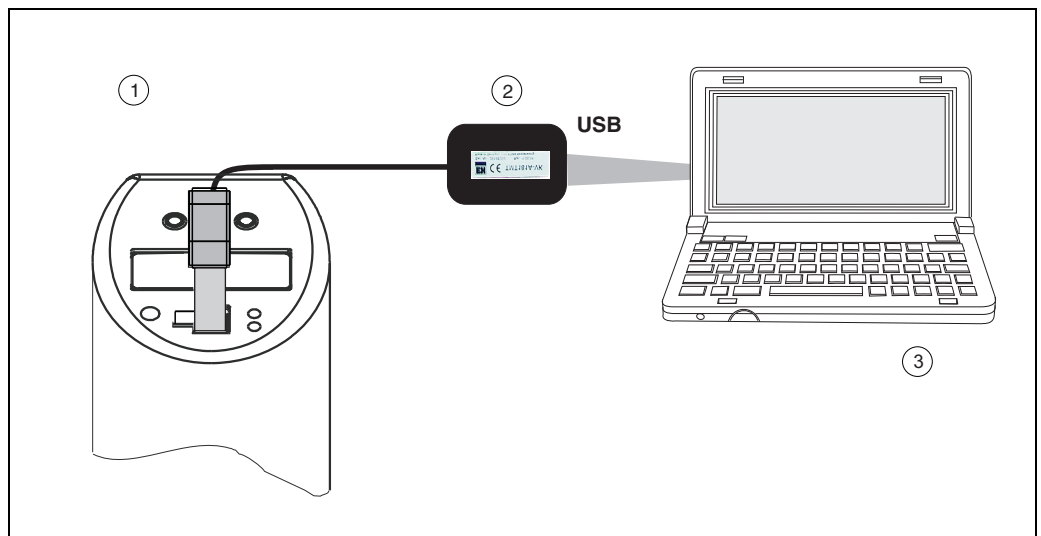

- ① Ceraphant T with communication jack
 ② Configuration kit TXU10-AA or FXA291(USB interface)
 ③ Personal computer with ReadWin® 2000 or FieldCare® configuration software

In addition to the operating options listed in the previous "On-site operation" section, the ReadWin® 2000 or FieldCare® configuration software provides further information on the Ceraphant T (reset only via on-side display):

Function group	Description
SERVICE	Number of switch changes
	Device status/error
INFO	Tag number
	Order code
	Device serial number
	Sensor serial number
	Electronics serial number
	Device release (change status)
	Hardware version
	Software version

Comprehensive information on the ReadWin® 2000 configuration software may be found in the Operating Instructions BA00137R/09/en.

The configuration kit TXU10-AA is available as an accessory (see chapter Accessories). For the order of the configuration kit FXA291 or software FieldCare please ask your E+H sales organisation.

Certificates and approvals

CE mark	The device meets the legal requirements of the EC directives. Endress+Hauser confirms that the device has been successfully tested by applying the CE mark.
UL listing	The device was examined by Underwriters Laboratories Inc. USA (UL) in accordance with the standards UL 61010B-1 and CSA C22.2 No. 1010.1-92 and listed under the number E225237 UL for Canada and the USA.
Pressure Equipment Directive (PED)	This measuring device corresponds to Article 3 (3) of the EC Directive 97/23/EC (Pressure Equipment Directive) and has been designed and manufactured according to good engineering practice.
Suitability for hygienic processes	All materials in contact with foodstuffs comply with framework Regulation (EC) 1935/2004. The device is available with hygienic process connections (overview: see order code). Caution! Risk of contamination if incorrect seals and parts are used! ■ To avoid the risk of contamination, when installing the device comply with the design principles of EHEDG, Guideline 37 "Hygienic Design and Application of Sensors" and Guideline 16 "Hygienic Pipe Couplings". ■ Suitable assemblies and seals must be used to ensure hygienic design in accordance with 3-A SSI and EHEDG specifications. ■ The leak-proof connections can be cleaned with the cleaning methods typical of this industry (CIP and SIP). Attention must be paid to the pressure and temperature specifications of the sensor and process connections for CIP and SIP processes (clean in place/sterilize in place).
Standards and guidelines	DIN EN 60770 (IEC 60770): Transmitters for use in industrial-process control systems Part 1: Methods for performance evaluation. DIN EN 61003-1, publication date:1993-12 Industrial-process control systems - Instruments with analog inputs and two- or multi-state outputs - Part 1: Methods of evaluating the performance. DIN 16086 Electrical pressure measuring instruments; pressure sensors, pressure transmitters, pressure measuring instruments; concepts, specifications on data sheets IEC 60529 Degrees of protection provided by enclosures (IP code). EN 61326 Electrical equipment for measurement, control and laboratory use - EMC requirements. IEC 61010 Safety requirements for electrical equipment for measurement, control and laboratory use. EN 61000-4-5 Electromagnetic compatibility (EMC) - Part 4: Testing and measurement techniques; Section 5: Surge immunity test



Ordering Information

Ceraphant T PTC31

This overview does not mark options which are mutually exclusive.

10	Certificate				
	A	For non-hazardous areas			
20	Electrical connection				
	1	M 12x1 connector: IP 65; with sensors for gauge pressure and absolute pressure: IP 66			
	2	M16x1.5 valve plug, ISO 4400: IP 65			
	3	½NPT valve plug, ISO 4400: IP 65			
	4	5 m (16.4 ft) cable: IP 66			
30	Electronics, output signal				
	A	12...30V DC, PNP switch, 3-wire			
	B	12...30V DC, 2 PNP switch, 4-wire			
	C	12...30 V DC, PNP switch + 4...20mA, 4-wire			
40	Display				
	1	With digital display			
50	Sensor				
		Gauge pressure		Max. working pressure MWP	Overload OPL
	1C	0...0.1bar / 0...10 kPa		2.7 bar	4 bar
	1F	0...0.4 bar / 0...40 kPa		5.3 bar	8 bar
	1H	0...1 bar / 0...100 kPa		6.7 bar	10 bar
	1M	0...4 bar / 0...400 kPa		16.7 bar	25 bar
	1P	0...10 bar / 0...1000 kPa		26.7 bar	40 bar
	1S	0...40 bar / 0...4000 kPa		40 bar	60 bar
		Negative gauge pressure		Max. working pressure MWP	Overload OPL
	5C	-0.1...0.1 bar / -10...10 kPa		2.7 bar	4 bar
	5F	-0.4...0.4 bar / -40...40 kPa		5.3 bar	8 bar
	5H	-1...1 bar / -100...100 kPa		6.7 bar	10 bar
	5M	-1...4 bar / -100...400 kPa		16.7 bar	25 bar
	5P	-1...10 bar / -100...1000 kPa		26.7 bar	40 bar
		Absolute pressure		Max. working pressure MWP	Overload OPL
	2F	0...0.4 bar / 0...40 kPa		5.3 bar	8 bar
	2H	0...1 bar / 0...100 kPa		6.7 bar	10 bar
	2M	0...4 bar / 0...400 kPa		16.7 bar	25 bar
	2P	0...10 bar / 0...1000 kPa		26.7 bar	40 bar
	2S	0...40 bar / 0...4000 kPa		40 bar	60 bar
60	Configuration and unit				
	1	Sensor range: bar			Calibration in sensor range
	2	Sensor range: kPa/MPa			Calibration in sensor range
	3	Sensor range: psi			Calibration in sensor range
	S	Switch output 1, see additional specification			Calibration in sensor range
	T	Switch output 1 + 2, see additional specification			Calibration in sensor range
	U	Switch and analog output, see additional specification			Calibration in sensor range
	V	Switch output 1, switch output 2 DESINA, see add. spec.			Calibration in sensor range
	W	Analog output, switch output DESINA, see add. spec.			Calibration in sensor range
70	Process connection, material				
	AC	Thread ISO 288, G¾ (female), 316L			
	AD	Thread ISO 228, G¾A, 316L			
	AE	Thread ISO 228, G½A, 316L			
	AF	Thread ISO 228, G½A, bore 11.4 mm, 316L			
	BA	Thread DIN 13, M 12x1.5, 316L			
	CA	Thread 7/16-20 UNF (SAE), 316L			
	DA	Thread ANSI ¼ FNPT, 316L			
	DD	Thread ANSI ½ MNPT, 316L			
80	Sensor seal (in contact with process)				
	1	FKM sensor seal			
	4	EPDM sensor seal			
	6	FKM sensor seal, cleaned for O₂ service			
90	Additional equipment				
	A	Without additional equipment			
	B	Final inspection report			
	C	3.1 (process connection), inspection certificate to EN 10204			

[illegible]

Ceraphant T PTP31

This overview does not mark options which are mutually exclusive.

10	Certificate				
	A	For non-hazardous areas			
20	Electrical connection				
	1	M 12x1 connector: IP 65; with sensors for gauge pressure and absolute pressure: IP 66			
	2	M16x1.5 valve plug, ISO 4400: IP 65			
	3	½NPT valve plug, ISO 4400: IP 65			
	4	5 m (16.4 ft) cable: IP 66			
30	Electronics, output signal				
	A	12...30V DC, PNP switch, 3-wire			
	B	12...30V DC, 2 PNP switch, 4-wire			
	C	12...30 V DC, PNP switch + 4...20mA, 4-wire			
40	Display				
	1	With digital display			
50	Sensor				
		Gauge pressure	Max. working pressure MWP	Overload OPL	
	3H	0...1 bar / 0...100 kPa	2.7 bar	4 bar	
	3M	0...4 bar / 0...400 kPa	10.7 bar	16 bar	
	3P	0...10 bar / 0...1000 kPa	26.7 bar	40 bar	
	3S	0...40 bar / 0...4000 kPa	100 bar	160 bar	
	3U	0...100 bar / 0...10 MPa	100 bar	160 bar	
	3Z	0...400 bar / 0...40 MPa	400 bar	600 bar	
		Negative gauge pressure	Max. working pressure MWP	Overload OPL	
	7H	-1...1 bar / -100...100 kPa	2.7 bar	4 bar	
	7M	-1...4 bar / -100...400 kPa	10.7 bar	16 bar	
	7P	-1...10 bar / -100...1000 kPa	26.7 bar	40 bar	
		Absolute pressure	Max. working pressure MWP	Overload OPL	
	4H	0...1 bar / 0...100 kPa	2.7 bar	4 bar	
	4M	0...4 bar / 0...400 kPa	10.7 bar	16 bar	
	4P	0...10 bar / 0...1000 kPa	26.7 bar	40 bar	
	4S	0...40 bar / 0...4000 kPa	100 bar	160 bar	
	4U	0...100 bar / 0...10 MPa	100 bar	160 bar	
	4Z	0...400 bar / 0...40 MPa	400 bar	600 bar	
60	Configuration and unit				
	1	Sensor range: bar			Calibration in sensor range
	2	Sensor range: kPa/MPa			Calibration in sensor range
	3	Sensor range: psi			Calibration in sensor range
	S	Switch output 1, see additional specification			Calibration in sensor range
	T	Switch output 1 + 2, see additional specification			Calibration in sensor range
	U	Switch and analog output, see additional specification			Calibration in sensor range
	V	Switch output 1, switch output 2 DESINA, see add. spec.			Calibration in sensor range
	W	Analog output, switch output DESINA, see add. spec.			Calibration in sensor range
70	Process connection, material				
	AC	Thread ISO 288, G¼ (female), 316L			
	AD	Thread ISO 228, G¼A, 316L			
	AE	Thread ISO 228, G½A, 316L			
	AF	Thread ISO 228, G½A, bore 11.4 mm, 316L			
	AG	Thread ISO 228, G½A, seal DIN 3852, 316L, flush-mounted			
	BA	Thread DIN 13, M 12x1.5, 316L			
	CA	Thread 7/16-20 UNF (SAE), 316L			
	DA	Thread ANSI ¼FNPT, 316L			
	DD	Thread ANSI ½MNPT, 316L			
80	Seal, filling fluid				
	1	O-ring FKM synthetic oil			
	4	O-ring EPDM, synthetic oil			
	7	Welded, synthetic oil (only for 400 bar sensor)			
90	Additional equipment				
	A	Without additional equipment			
	B	Final inspection report			
	C	3.1 (process connection), inspection certificate to EN 10204			
	D	Final inspection report + 3.1 (process connection), inspect. certificate to EN 10204			

[illegible]

Ceraphant T PTP35

This overview does not mark options which are mutually exclusive.

10	Certificate				
	A	For non-hazardous areas			
20	Electrical connection				
	1	M 12x1 connector: IP 65; with sensors for gauge pressure and absolute pressure: IP 66			
	2	M16x1.5 valve plug, ISO 4400: IP 65			
	3	½NPT valve plug, ISO 4400: IP 65			
	4	5 m (16.4 ft) cable: IP 66			
30	Electronics, output signal				
	A	12...30V DC, PNP switch, 3-wire			
	B	12...30V DC, 2 PNP switch, 4-wire			
	C	12...30 V DC, PNP switch + 4...20mA, 4-wire			
40	Display				
	1	With digital display			
50	Sensor				
		Gauge pressure	Max. working pressure MWP	Overload OPL	
	3H	0...1 bar / 0...100 kPa	2.7 bar	4 bar	
	3M	0...4 bar / 0...400 kPa	10.7 bar	16 bar	
	3P	0...10 bar / 0...1000 kPa	26.7 bar	40 bar	
	3S	0...40 bar / 0...4000 kPa	100 bar	160 bar	
		Negative gauge pressure	Max. working pressure MWP	Overload OPL	
	7H	-1...1 bar / -100...100 kPa	2.7 bar	4 bar	
	7M	-1...4 bar / -100...400 kPa	10.7 bar	16 bar	
	7P	-1...10 bar / -100...1000 kPa	26.7 bar	40 bar	
		Absolute pressure	Max. working pressure MWP	Overload OPL	
	4H	0...1 bar / 0...100 kPa	2.7 bar	4 bar	
	4M	0...4 bar / 0...400 kPa	10.7 bar	16 bar	
	4P	0...10 bar / 0...1000 kPa	26.7 bar	40 bar	
	4S	0...40 bar / 0...4000 kPa	100 bar	160 bar	
60	Configuration and unit				
	1	Sensor range: bar			Calibration in sensor range
	2	Sensor range: kPa/MPa			Calibration in sensor range
	3	Sensor range: psi			Calibration in sensor range
	S	Switch output 1, see additional specification			Calibration in sensor range
	T	Switch output 1 + 2, see additional specification			Calibration in sensor range
	U	Switch and analog output, see additional specification			Calibration in sensor range
	V	Switch output 1, switch output 2 DESINA, see add. spec.			Calibration in sensor range
	W	Analog output, switch output DESINA, see add. spec.			Calibration in sensor range
70	Process connection, material				
		Clamp connections			
	DA	ISO 2852 DN12-22 (¾") (EHEDG ²⁾ , 3A ¹⁾), 316L, DIN32676, DN10-20			
	DB	ISO 2852 DN25-38 (1...1½") (EHEDG ²⁾ , 3A ¹⁾), 316L, DIN32676, DN25-40			
	DL	ISO 2852 DN40-51 (2") (EHEDG ²⁾ , 3A ¹⁾), 316L, DIN32676, DN50			
		Hygienic connections			
	BA	Thread ISO 228 G1A, metallic taper seal, 316L, flush-mounted for sleeve 52005087			
	BB	Thread ISO 228 G1A (EHEDG ²⁾ , 3A ¹⁾), O-ring seat seal, 316L, flush-mounted for sleeve 52001051			
	KL	SMS 1½" PN 25 (EHEDG ¹⁾ , 3A ²⁾), 316L			
	LB	Varivent F pipe DN 25-32 (EHEDG ²⁾ , 3A ¹⁾), PN 40, 316L, 3A			
	LL	Varivent N pipe DN 40-162 (EHEDG ²⁾ , 3A ¹⁾), PN 40, 316L, 3A			
	PH	DIN 11851 DN 40 PN 40 (EHEDG ²⁾ , 3A ¹⁾), slotted nut, 316L			
	PL	DIN 11851 DN 50 PN 25 (EHEDG ²⁾ , 3A ¹⁾), slotted nut, 316L			
	HL	APV Inline DN 50 PN 40 (EHEDG ²⁾ , 3A ¹⁾), 316L			
1) Suitable fittings and seals must be used for hygienic design in accordance with EHEDG specifications.					
2) Suitable fittings and seals must be used for hygienic design in accordance with 3A specifications.					
80	Seal, filling fluid				
	4	O-ring EPDM, oil conform to FDA			
	8	Without O-ring, oil conform to FDA (only for process connections BA, BB, DA)			

1) Suitable fittings and seals must be used for hygienic design in accordance with EHEDG specifications.

2) Suitable fittings and seals must be used for hygienic design in accordance with 3A specifications.

[illegible]

Questionnaire on customer-specific configuration

The Ceraphant T pressure switch can also be ordered with customised settings. For this purpose, please use the questionnaire below. Information on the desired switch point (SP), switch-back point (RSP), lower range value and upper range value always refer to the pressure unit selected. The possible range of adjustment is indicated in the questionnaire in % of the upper range limit (URL). The bold-printed specifications are the factory settings.


Questionnaire for Ceraphant PTC31, PTP31, PTP35 for customer-specific setup																																																	
Pressure unit	☐ bar	☐ kPa/MPa	☐ psi																																														
Output 1 (Application 1)																																																	
Function:	☐ 1 = Window normally closed	☐ 3 = Window normally open																																															
	☐ 2 = Hysteresis normally closed	☐ 4 = Hysteresis normally open																																															
SP:		Range of adjustment: 0,5...100 % URL (in increments of 0.1 %, min. 1 mbar *)																																															
RSP:		Range of adjustment: 0...99,5 % URL (in increments of 0.1 %, min. 1 mbar *)																																															
Min. difference SP – RSP: 0,5% URL * increments of min. 10 mbar with neg. gauge pressure up to 4 bar																																																	
Output 2 (Application 2) (only if available)																																																	
Function:	☐ 1 = Window normally closed	☐ 3 = Window normally open	☐ 5 = 4...20 mA (only if available)																																														
	☐ 2 = Hysteresis normally closed	☐ 4 = Hysteresis normally open																																															
SP:		Range of adjustment: 0,5...100 % URL (in increments of 0.1 %, min. 1 mbar *)																																															
RSP:		Range of adjustment: 0...99,5 % URL (in increments of 0.1 %, min. 1 mbar *) * increments of min. 10 mbar with neg. gauge pressure up to 4 bar																																															
Analogue output (only if output 2 = 4...20 mA output available)																																																	
Range low scale:		Range of adjustment: 0....100 % URL																																															
Range high scale:		Range of adjustment: 0....100 % URL Turn down up to 4 : 1																																															
Failure mode:	☐ 1 = ≤ 3.6 mA	☐ 2 = ≥ 21.0 mA	☐ 3 = last current value																																														
Connection conform to DESINA (only for 2 outputs): ☐ no ☐ yes																																																	
Hint: See section “Devices Connection”																																																	
TAG (max. 2 x 18 characters) <table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <tr><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td></tr> <tr><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td><td style="width: 20px; height: 20px;"></td></tr> </table>																																																	

P01-PTx3xxxx-16-xx-xx-en-001

Accessories

Welding boss – with sealing taper


- Welding boss for flush mounting process connection G1 A with metallic sealing taper (version BA for PTP35)
Material: AISI 316L
Order number: 52005087
- Optional with inspection certificate 3.1
Order number: 52010171
- Welding aid (Dummy) for welding the welding boss without any problems, order number 52005087 or 52010171
Material: brass
Order number: 52005272

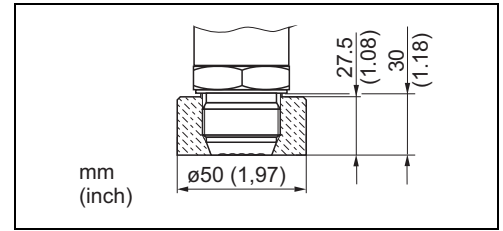

P01-Pxxxxxx-00-xx-00-xx-001

Welding boss – with sealing surface

- Welding boss for flush mounting process connection G1 A with sealing surface (version BB for PTP35)
Material: AISI 316L
Order number: 52001051
- Seal (enclosed): silicone O-ring
FDA approved materials according to 21 CFR Part 177.1550/2600
- Optional with inspection certificate 3.1:
Order number: 52011896

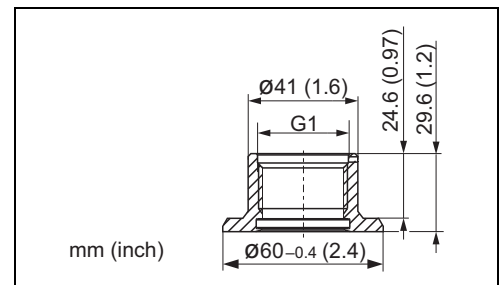

P01-PMP13xxx-00-xx-00-xx-002

Thread adapter

- PTP31: order numbers for thread adapter versions

Version AC: order no. 52023980
Version AD: order no. 52023981
Version AE: order no. 52023982
Version AF: order no. 52023983
Version BA: order no. 52023984
Version CA: order no. 52023985
Version DA: order no. 52023986
Version DD: order no. 52023987

See chapter "Process connection PTP31 Thread connections" → 13.

Clamp adapter

- PTP35: Order numbers for clamp adapter versions

Version DB: order no. 52023994
Version DL: order no. 52023995

Optional with inspection certificate 3.1:
Version DB: order no. 52024001
Version DL: order no. 52024002

See chapter "Process connection PTP35 Clamp connections" → 15.

Hygiene adapter

■ PTP35: order numbers for hygiene adapter versions

Version KL (EHEDG, 3A): order no. 52026997
 Version LB (EHEDG, 3A): order no. 52023996
 Version LL (EHEDG, 3A): order no. 52023997
 Version PH (EHEDG, 3A): order no. 52023999
 Version PL (EHEDG, 3A): order no. 52023998
 Version HL (EHEDG, 3A): order no. 52024000


Optional with inspection certificate 3.1:
 Version KL (EHEDG, 3A): order no. 52026999
 Version LB (EHEDG, 3A): order no. 52023996
 Version LL (EHEDG, 3A): order no. 52024004
 Version PH (EHEDG, 3A): order no. 52024006
 Version PL (EHEDG, 3A): order no. 52024005
 Version HL (EHEDG, 3A): order no. 52024007

See chapter "Process connection PTP35 Hygiene connections" → 14.

Plug-in jack

■ M12x1 plug-in jack


Self-made connection to M12x1 plug
 Materials: Body PA
 Coupling nut: Cu Zn, brass, nickeled
 Protection: IP 67 (fully locked)
 Order number: 52006263

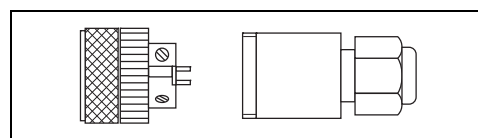

P01-PMP13xxx-00-xx-00-xx-003

■ M12x1 plug-in jack, elbowed

Self-made connection to M12x1 plug
 Materials: Body PA
 Coupling nut: GD-Zn, brass, nickeled
 Protection: IP 67 (fully locked)
 Order number: 71114212

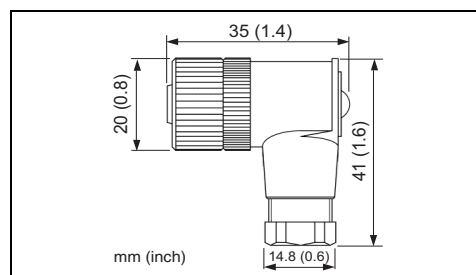

P01-Pxxx-00-xx-00-xx-002


Connecting cable

■ Cable, 4 x 0.34 mm² (AWG 21) with M12 socket, elbowed, screw plug, length 5 m (16 ft), sprayed cable

Materials: Body PUR
 Coupling nut: Cu Zn/Ni, brass, nickeled
 Cable: PVC
 Protection: IP 67 (fully locked)
 order number: 52010285

■ Cable, 4 x 0.34 mm² (AWG 21) with M12 socket, with LED, elbowed, sprayed cable, length 5 m (16 ft), specially for hygiene applications (For devices with switch output only)


Materials: Body: PVC
 Coupling nut: 316L
 Cable: PVC
 Protection: IP 69K (fully locked)
 Order number: 52018763
 Display: gn: device operational;
 ye1: switch status; ye 2: switch status 2

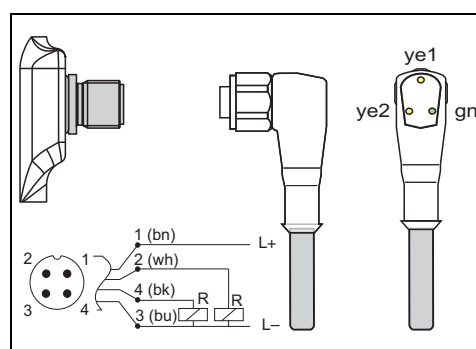

P01-PTx3xxx-07-xx-xx-xx-001

Configuration kit

- Configuration kit for PC-programmable transmitters. Setup program and interface cable for PCs with USB port. Adapter for transmitters with 4-pin post connector.
Order code: TXU10-AA
- ReadWin® 2000 is supplied with the configuration kit or it can be downloaded free of charge directly from the internet at the following address:
www.readwin2000.com

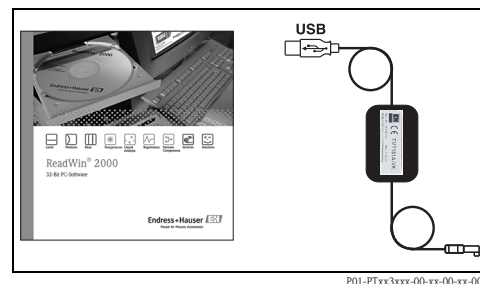

P01-PTxx3xxx-00-xx-00-xx-001

Power supply RNB130

- Primary switched-mode power supply for sensors
- Space saving DIN rail mounting as per IEC 60715.
- Nominal input voltage: 100-240 V AC (wide-range voltage input)
- Output voltage: 24 V DC, max. 30 V in the event of a fault
- Nominal output current: 1.5 A
- Connection to monophased a.c. networks or to two phase conductors of three-phase supply networks

Documentation

This supplementary documentation can be found on our product pages on www.endress.com

Field of Activities

Pressure measurement, Powerful instruments for process pressure, differential pressure, level and flow:
FA00004P/00/EN

Technical Information

Technical Information on the Thermophant T temperature switch:

- Thermophant T TTR31, TTR35: TI00105R/09/EN
- Flowphant T DTT31, DTT35: TI00125R/09/EN

Operating instructions

- Ceraphant T PTC31, PTP31, PTP35: KA00225P/00/EN
- Operating software ReadWin 2000: BA00137R/09/EN
- Operating software FieldCare: BA00027S/04/C4

For more Endress+Hauser product please visit: www.ainstru.com

Mail: Sales@ainstru.com

Instruments International

Endress+Hauser
Instruments International AG
Kaegenstrasse 2
4153 Reinach
Switzerland

Tel.+41 61 715 81 00
Fax+41 61 715 25 00
www.endress.com
info@ii.endress.com

Endress+Hauser 
People for Process Automation

