


Operating Instructions Gas Module

for Series GMS800

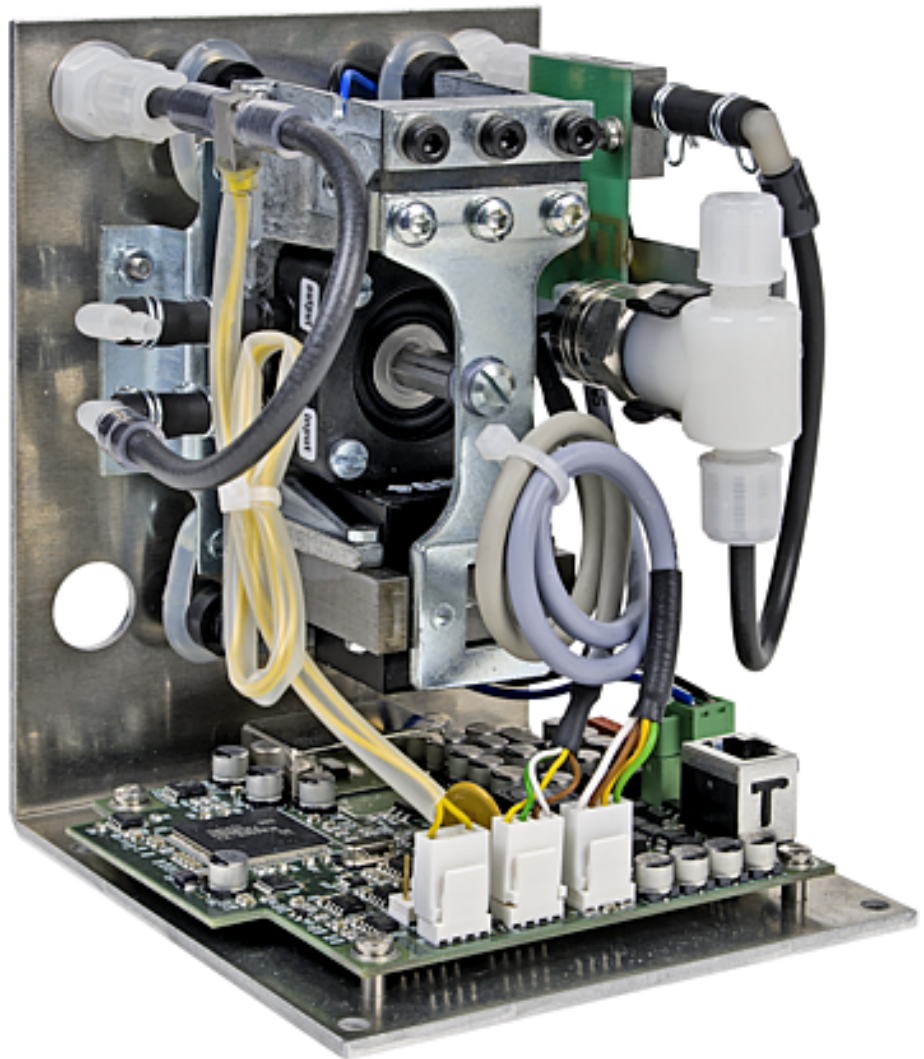

Described product

Product name: Gas Module
Basic device: Series GMS800 gas analyzers

Manufacturer

Endress+Hauser SICK GmbH+Co. KG
Bergener Ring 27
01458 Ottendorf-Okrilla
Germany

Legal information

This work is protected by copyright. Any rights derived from the copyright shall be reserved for Endress+Hauser SICK GmbH+Co. KG. Reproduction of this document or parts of this document is only permissible within the limits of the legal determination of Copyright Law.

Any modification, abridgment or translation of this document is prohibited without the express written permission of Endress+Hauser SICK GmbH+Co. KG.

The trademarks stated in this document are the property of their respective owner.

© Endress+Hauser SICK GmbH+Co. KG. All rights reserved.

Original document

This document is an original document of Endress+Hauser SICK GmbH+Co. KG.



Glossary

PC	Personal Computer
PVDF	Polyvinylidene fluoride
SOPAS	SICK Open Portal for Applications and Systems: Family of computer programs to set parameters, capture and calculate data.
SOPAS ET	SOPAS Engineering Tool: PC application program to configure modular system components.

Warning symbols



Hazard (general)



Hazard by toxic substances

Warning levels / signal words

WARNING

Risk or hazardous situation which *could* result in severe personal injury or death.

CAUTION

Hazard or unsafe practice which *could* result in personal injury or property damage.

NOTICE

Hazard which *could* result in property damage.

Information symbols



Important technical information for this product



Supplementary information



Link to information at another place

1	Important information	5
1.1	Main safety information	6
1.2	Main operating information	6
1.3	Additional documentation/information	6
2	Product description	7
2.1	Intended use	8
2.2	Product variants	8
2.3	Product components	8
2.4	Function description	9
2.5	Electronic functions	9
2.5.1	Sensor data output	9
2.5.2	Automatic gas pump safety switch-off	9
2.5.3	Connecting the OXOR-E Analyzer module	9
3	Functions in SOPAS ET	11
3.1	Menu tree in SOPAS ET	12
3.2	Explanation of the menus in SOPAS ET	14
3.3	Menu functions explanations	15
3.3.1	Upload (data synchronization)	15
3.4	Possible function expansions	15
4	Explanation of functions	17
4.1	Software administration	18
4.1.1	Logbook in SOPAS ET	18
4.1.2	Upload (data synchronization)	18
4.2	Measured value functions	19
4.2.1	Damping	19
4.2.2	Drift limit values	19
5	Maintenance	21
5.1	Maintenance plan	22
5.2	Adjustment (information)	22
6	Technical data	23
6.1	Gas flow plan	24
6.2	Dimensions	24
6.3	Gas connections	25
6.4	Module components specifications	25

Gas Module

1 Important information

Main safety information

Additional information

1.1

Main safety information**NOTICE: Gas analyzer systems are incompatible with liquids**

The gas analyzer is usually unusable when liquids penetrate the internal analyzer gas paths. Liquids can be produced by condensation.

- ▶ Prevent condensation in the sample gas path of the gas analyzer.

If the sample gas contains condensable components:

- ▶ Only operate the gas analyzer with an appropriate sample gas conditioning system.
- ▶ Before shutting the analyzer down, always purge its internal gas path with a neutral gas which does not contain condensable components.

**WARNING: Mortal/health danger as a result of gas path leakage**

When the gas analyzer processes noxious gases: Escaping gas can be an acute danger for persons.

Before opening the gas path:

- ▶ Flush gas paths with a neutral gas until the dangerous gases have been completely purged.
- ▶ Take breathing protection precautions as necessary for safety.

1.2

Main operating information**Start-up**

- ▶ Observe permissible operating values for gas pressure and volume flow.
- ▶ Pay attention to gas leak tightness (external gas lines, filters, valves etc.).
- ▶ Prevent condensation in the sample gas path of the gas analyzer.

Shutdown

- ▶ *Before shutting down:* Purge the sample gas path with a dry neutral gas to prevent condensation in the measuring system.

1.3

Additional documentation/information

This document supplements the Operating Instructions for GMS800 gas analyzers. It extends the “GMS800” Operating Instructions with technical information on the Gas Module.

- ▶ Observe the Operating Instructions delivered with the “GMS800”.



The “GMS800” Operating Instructions also specify all further documents belonging to the individual device.

**NOTICE:**

- ▶ Pay primary attention to any individual information provided.
- ▶ *When the OXOR-E Analyzer module is fitted to the gas analyzer:* Observe the Supplementary Operating Instructions “Series GMS800 – OXOR-E Analyzer module”.

Gas Module

2 Product description

Intended use

Components

Functions

Integration

2.1 Intended use

The Gas Module is an installation module for GMS800 series gas analyzers.

2.2 Product variants

Gas paths

- Version with internal hosing
- Version with internal piping

Gas connections

- Plastic screw fittings (PVDF) for hose connection
- Stainless steel screw fittings (Swagelok) for pipe connection


Optional equipment

- Gas pump
- Gas humidity sensor
- Gas pressure sensor
- Gas flow sensor

2.3 Product components

Fig. 1

Gas module components

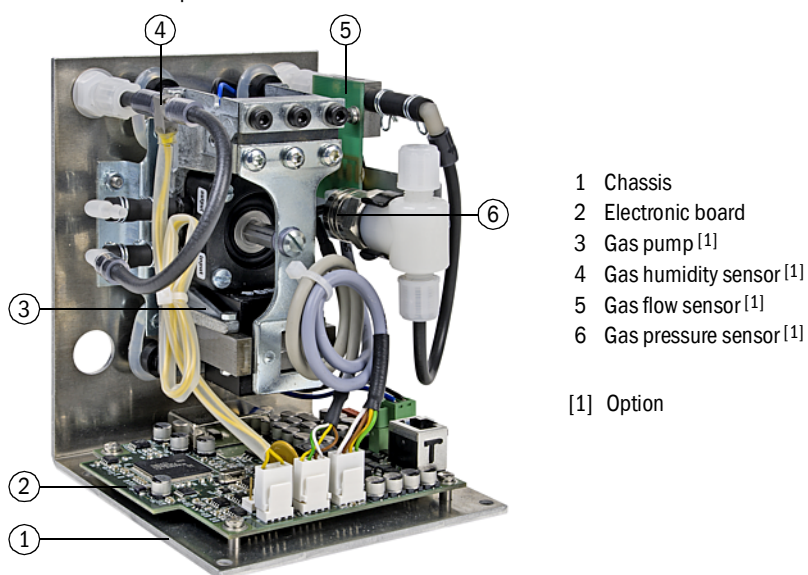

2.4 Function description

Gas pump

Oscillating diaphragm pump.

»» Independent sample gas suction.

Gas humidity sensor

Generates a malfunction message when conductive liquids penetrate the sample gas path. The gas pump of the Gas module is then switched off automatically.

»» Protects the gas pump and measuring system against liquids.

Gas pressure sensor

Measures the sample gas pressure or ambient pressure (depending on the module configuration). The measured value serves to compensate the physical influences of gas pressure.

»» High measuring precision with fluctuating pressure.

Gas flow sensor

Measures the sample gas volume flow. Limit value for malfunction message is adjustable.

»» Automatic monitoring of sample gas volume flow.



Gas pump + Gas humidity sensor: Automatic safety switch-off possible.

2.5 Electronic functions

2.5.1 Sensor data output

Identification data and actual operating data of the Gas module are transferred automatically to the operating unit or SOPAS ET. The values can be displayed and evaluated there.

2.5.2 Automatic gas pump safety switch-off

The gas pump will automatically remain switched off

- when a gas analyzer has not yet reached its operating temperature
- when the condensate sensor triggers (when fitted)
- during adjustment gas feed [1]
- when a control input for the gas pump is available in the I/O module and has status “gas pump off”. [1]

2.5.3 Connecting the OXOR-E Analyzer module

The Gas module can manage electronic connection of the OXOR-E Analyzer module. In this case, the OXOR-E Analyzer module is connected to the Gas module electronics board and the OXOR-E module menu functions are shown in the Gas module menu branch (→ p. 12, §3.1).

[1] Only when this function is installed

Gas Module

3 Functions in SOPAS ET

Operating functions in the PC program “SOPAS ET”

Menu tree

Explanations



- Instructions for SOPAS ET → User Information for the program
- Exemplary menu representations → Technical Information “Basic Control Unit (BCU)” (contains information for operating with SOPAS ET)

3.1 Menu tree in SOPAS ET

User level:	0	Operator (standard)	A	Authorized operator	
Access rights:	○	Viewing	●	Setting up/starting	
Directory	Menu contents		0	A	Explanation
Gas Module			○	○	
Measured value display			○	○	
Gas pressure [1]	Component		○	○	→ p. 14 [1]
	Measured value		○	○	→ p. 14 [2]
	Unit		○	○	→ p. 14 [3]
Gas flow [1][2]			○	○	
Gas humidity [1] [2]			○	○	
Oxygen [2][3]			○	○	
Diagnosis			○	○	
Module state	Failure		○	○	→ p. 14 [4]
	Maintenance request		○	○	
	Function(s) active		○	○	
	Uncertain state		○	○	
Logbook	Pos. Date Source ...		-	○	→ p. 18, § 4.1.1
Operating hours	h		-	○	→ p. 14 [5]
Gas pressure [1]			○	○	
Name / unit	Component		○	●	→ p. 14 [1]
	Unit		○	○	→ p. 14 [2]
State	Failure		○	○	→ p. 14 [4]
	Maintenance request		○	○	
	Function(s) active		○	○	
	Uncertain state		○	○	
Gas flow [1] [2]			○	○	
Gas humidity [1] [2]			○	○	
Oxygen [3]			○	○	
Name / unit	Component		○	●	→ p. 14 [1]
	Unit		○	○	→ p. 14 [2]
State	Failure		○	○	→ p. 14 [4]
	Maintenance request		○	○	
	Function(s) active		○	○	
	Uncertain state		○	○	
Validation measurement (QAL3)	Zero point		○	○	
	Reference point		○	○	
Parameter			○	○	
Sampling point	Description		-	●	→ p. 14 [6]
RS485 interface	Module address		-	●	→ p. 14 [7]
	Baud rate		-	●	→ p. 14 [8]
	Data bits		-	●	
	Stop bits		-	●	
	Parity		-	●	
Gas pressure [1]			○	○	
Physical meas. range	Component		○	●	→ p. 14 [1]
	Unit		○	○	→ p. 14 [3]
	Start value		○	○	→ p. 14 [9]
	End value		○	○	→ p. 14 [10]
	Base value		○	○	→ p. 14 [11]
	Measuring channel		○	○	→ p. 14 [12]
Damping			-	●	
Damping (el. T90%)	Time constant [s]		-	●	→ p. 19, § 4.2.1
Gas flow [1] [2]			○	○	
Gas humidity [1] [2]			○	○	
Oxygen [2] [3]			○	○	

Directory	Menu contents	O	A	Explanation
Adjustment [3]		○	○	
Oxygen [3]		○	○	
Drift limit value	Zero point	-	○	→ p. 19, § 4.2.2
	Reference point	-	○	
Adjustment results		○	○	
Adjustment result	Zero point	○	○	→ p. 14 [13]
	Reference point	○	○	
Drift values	Zero point	○	○	→ p. 14 [13]
	Reference point	○	○	
Delete results	[Delete]	-	●	→ [4]
Maintenance		-	○	
Maintenance flag	[On]/[Off]	-	●	→ p. 14 [14]
Configuration		-	○	
User settings	[Backup]	-	●	→ p. 14 [15]
	[Restore user settings]	-	●	
	[Restore next to last user settings]	-	●	
Factory settings	[Restore]	-	●	→ p. 14 [16]
Factory settings		○	○	
Identification		○	○	
ID numbers	Serial number	○	○	→ p. 15 [17]
	Material number	○	○	
	Hardware version	○	○	
	Software version	○	○	
	Software date	○	○	
Production release	Year	-	○	→ p. 15 [18]
	Month	-	○	
	Day	-	○	

[1] Only displayed when the associated sensor is fitted in the Gas module

[2] Subordinate menu function as for "Gas pressure"

[3] Only displayed when the OXOR-E Analyzer module is connected to the Gas module

[4] See Supplementary Operating Instructions "Analyzer Module OXOR-E".

3.2

Explanation of the menus in SOPAS ET

No.	Description	Explanation
1	Component	Name of measuring component
2	Measured value	Actual measured value of measuring component
3	Unit	Physical unit of measured value
4	Failure	LED symbol ● <i>Significance</i>: Module not ready for operation ● <i>Possible causes</i>: Malfunction, defect
	Maintenance request	LED symbol ● <i>Significance</i>: Advance warning before internal technical limits reached. ● <i>Possible causes</i>: Drift limit, operating hours, lamp intensity
	Function(s) active	LED symbol ● <i>Significance</i>: At least one internal function active that impairs or hinders normal module measuring function. ● <i>Possible causes</i>: Adjustment procedure running, validation measurement running
	Uncertain state	LED symbol ● <i>Significance</i>: Actual measured values are unreliable. ● <i>Possible causes</i>: Heating up phase, internal over/under temperature, adjustment procedure programming not plausible
5	Operating hours	Number of operating hours of Analyzer module OXOR-E (option)
6	Description	Freely selectable text for module name
7	Module address	Internal CAN bus address of module (defined by hardware setting in module)
8	Baud rate	Transfer speed (standard: 9600)
	Data bits	Number of data bits (standard: 8) The GMS800 only uses the 7-bit range (ASCII code 0 ... 127) but can also communicate in 8-bit format.
	Stop bits	Number of stop bits (1 or 2; standard: 2)
	Parity	Additional identification for automatic monitoring of character transfers; [Even], [Odd], [None] – standard: None
9	Start value	Start value of physical measuring range
10	End value	End value of physical measuring range
11	Base value	Internal physical base value of measuring range
12	Measuring channel	Internal measuring channel for measuring component
13	Drift values	● Last = since last adjustment ● Total = since last drift calculation initialization
14	Maintenance flag	[On] = Status "Maintenance" is activated (here as signal for active maintenance work)
15	User settings	● Backup = Save a copy of the actual module settings. ● Restore = Overwrite the actual module settings with a saved copy. [1]
16	Factory settings	Overwrite the actual module settings with the original settings from the factory.[1] ► <i>Recommendation</i> : Save the current module settings first (→ "User settings").

No.	Description	Explanation
17	Serial number	Individual module serial number
	Material number	Identification number of module version
	Hardware version	Module electronics version number
	Software version	Module software version number
	Software date	Module software revision
18	Production release	Module date of manufacture

[1] A warm start is then done automatically.

3.3 Menu functions explanations

3.3.1 Upload (data synchronization)

Only applicable when the "SOPAS ET" PC software is used. Not applicable for systems without control unit (special versions).

The new data are not transferred automatically to "SOPAS ET" after settings for a module have been changed with the menu functions of the control unit. "SOPAS ET" continues using the previous data.

► *To transfer the current data of a module to "SOPAS ET":* Start the "Upload all parameters from device" function in "SOPAS ET" once.

3.4 Possible function expansions

Programmed formulas can be used to set logical and mathematical function links. Possible uses include:

- Flow monitoring with the gas flow sensor using the gas flow limit value.
- Gas volume flow regulation (through combination of gas flow measured value and pump capacity control)



Formula information → Technical Information "Basic Control Unit (BCU)"

Gas Module

4 Explanation of functions

Logbook

Upload

Measured value damping

Drift limit values

Adjustment

4.1 Software administration

4.1.1 Logbook in SOPAS ET

The Logbook Table shows the last 20 internal messages.

Fig. 2 Menu "[Module name]/Diagnosis/Logbook" in PC program "SOPAS-ET" (example)

Logbook						
①	②	③	④	⑤	⑥	⑦
Position	Date	Time	Source	Message No.	Status	Count
1	12-07-02	08:19:10	UNOR-MUL...	E gas pump off	Off	1
2	12-07-02	08:19:09	UNOR-MUL...	U temperatures	Off	1
3	12-07-02	08:19:09	UNOR-MUL...	U heater 1	Off	1
4	12-07-02	08:11:47	UNOR-MUL...	U heater 2	Off	1
5	12-07-02	08:10:21	UNOR-MUL...	U heater 3	Off	1
6	12-07-02	08:09:04	UNOR-MUL...	U heater 5	Off	1
7	12-07-02	08:08:05	UNOR-MUL...	U heater 4	Off	1
8	12-07-02	08:06:32	UNOR-MUL...	C start check	Off	1
9	12-07-02	08:06:32	UNOR-MUL...	U start check	Off	1
10	12-07-02	08:04:37	UNOR-MUL...	C adjustment cuvette ac...	Off	1
11						0
12						n

Column	Meaning
1	Sequential number in Logbook
2	Time of last message change
3	
4	"System" = measuring system (hardware) "MV" = measuring component (measurement)
5	Short message text, e.g. "F measured value". The character prefix classifies the message: F = Failure C = Check (adjustment/validation) U = Uncertain (extra information) M = Maintenance E = Extended (status message)
6	Current message status
7	Total count of activations

4.1.2 Upload (data synchronization)

Only applicable when the "SOPAS ET" PC software is used. Not applicable for systems without control unit (special versions).

The new data are not transferred automatically to "SOPAS ET" after settings for a module have been changed with the menu functions of the control unit. "SOPAS ET" continues using the previous data.

- *To transfer the current data of a module to "SOPAS ET":* Start the "Upload all parameters from device" function in "SOPAS ET" once.

4.2 Measured value functions

4.2.1 Damping

When “damping” has been programmed, the average value from the actual measured value and the previous measured values (rolling averaging) are displayed instead of the actual measured value.

Possible uses include:

- Damping metrological measured value fluctuations (noise)
- Smoothing fluctuating measured values when only the average value is relevant

Damping is done in the Gas module and therefore affects all measured value displays and outputs. It is also active during an adjustment procedure.



- Increasing damping normally increases the reaction time (90% time) of the gas analysis system accordingly.
- Reducing damping can possibly increase the measurement signal “noise” (measuring turbulence).
- Time constant = 0 s means: No damping.



CAUTION: Risk of incorrect adjustment

The “Measuring time, test gas” must be at least 150% of the set damping time constant during adjustments.

- *When damping has been set up anew or increased:* Check whether adjustment settings need to be adapted.

4.2.2 Drift limit values

Purpose

Analyzer module drifts are caused, for example, by contamination, mechanical changes or aging effects. The total drift (i.e. the deviation from original state) increases gradually. It is not practical to keep compensating an ever increasing total drift through computation. Inspect and reset the Analyzer module when total drift has become very large.

Drift limit values monitor total drift automatically. These also protect against erroneous adjustments.

Functionality

After every adjustment, an Analyzer module compares the calculated total drift with the drift limit value. Drift limit value violation is reported in two stages:

- Status “M” (Maintenance request) is activated when the total drift reaches 100 ... 120% of the drift limit value.
- Status “F” (Failure) is activated when the total drift reaches more than 120% of the drift limit value.
- When an adjustment procedure shows that a calculated drift has reached more than 150% of the drift limit value, the result from this adjustment procedure is ignored and the previous adjustment remains valid.



- The drift limit values are set in the factory (standard value: 10%).
- A Service function is available to reset all drift values to “0” (Drift reset). This is useful after Analyzer module maintenance when this has established a new original state.

Gas Module

5 Maintenance

Maintenance plan

5.1

Maintenance plan

Maintenance interval ^[1]				Maintenance work	Note
6M	1Y	2Y	10Y		
☐	☐	☐	☐	► Check/service fitted gas pump ^[2]	a
☐	☐	☐	☐	► Check gas flow sensor function ^[3]	a
	☐	☐	☐	► Check gas paths for leak tightness	

[1] M = month(s), Y = year(s)

[2] Only for Gas module with gas pump

[3] Only for Gas module with gas flow sensor

Note	Explanation
a	Maintenance interval depends on the individual application

5.2

Adjustment (information)

- Information on adjusting the oxygen sensor → Supplementary Operating Instructions “OXOR-E Analyzer module“

Gas Module

6 Technical data

Internal gas flow

Dimensions


Component specifications

6.1

Gas flow plan

Fig. 3

Gas flow GMS800 with Gas module

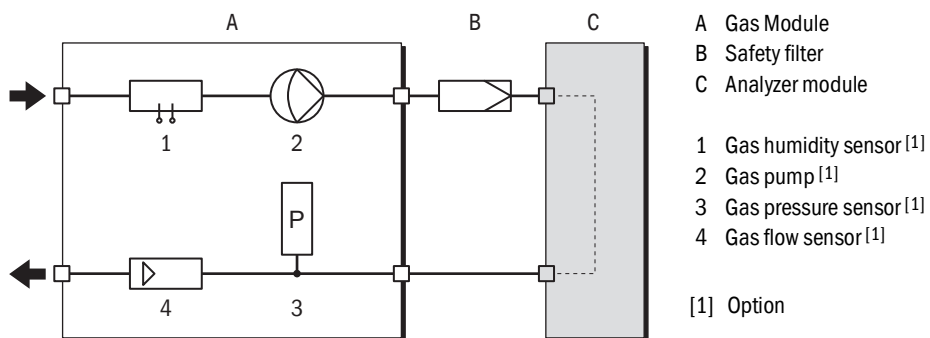


6.2

Dimensions

Fig. 4

Dimensions

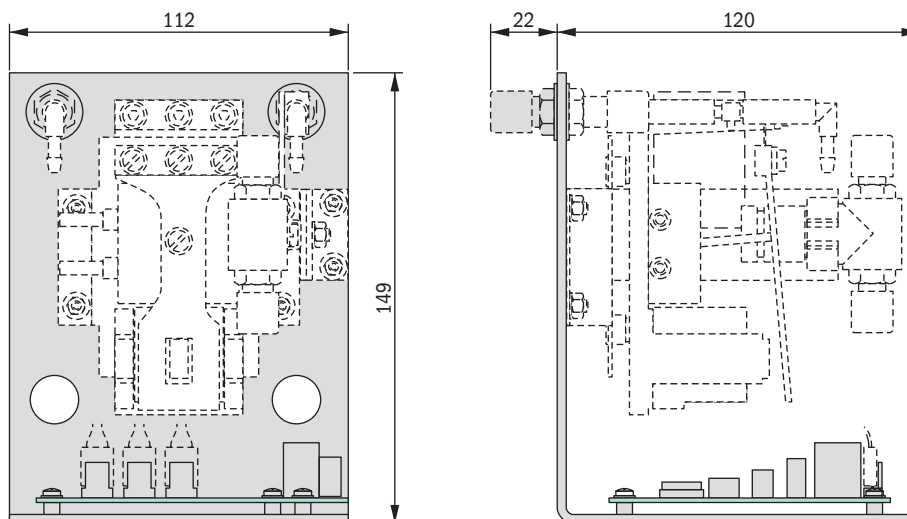

6.3

Gas connections

Version	Material	Suitable for
Plastic clamping ring screw connection	PVDF	Hose 6x1 mm
Swagelok 6 mm	Stainless steel	Metal tube with 6 mm outer Ø
Swagelok ¼"	Stainless steel	Metal tube with ¼" outer Ø



Technical gas specifications (pressure, volume flow etc.) → Supplementary Operating Instructions for the Analyzer modules fitted

6.4

Module components specifications

Gas pressure sensor	
Measuring range:	500 ... 1500 hPa (±1 %)
Materials with sample gas contact:	
– T-connection:	Stainless steel 1.4571
– Diaphragm:	Stainless steel
Gas flow sensor	
Measuring range:	0 ... 100 l/h (±20 %)
Monitoring the internal gas pump:	– Actual value < 90% of setpoint value of pump capacity – Setpoint value - actual value > 2 l/h
Materials with sample gas contact:	
– Housing:	Stainless steel 1.4571
– Sensors:	Glass (coating of the Pt100 resistors)
– Adhesive:	Adhesive: 2-component special adhesive
Gas humidity sensor	
Materials with sample gas contact:	
– Housing:	Stainless steel 1.4571
– Sensors:	Platinum, chemically pure
– Adhesive:	Adhesive: 2-component special adhesive
Gas pump	
Design:	Oscillating diaphragm pump
Flow rate:	0 ... 60 l/h at 100 kPa partial vacuum
Materials with sample gas contact:	
– Pump body:	PVDF
– Diaphragm, valves, seal	Fluorocarbon rubber "Viton"

8029913/W793/V2-0/2012-12

www.addresses.endress.com

For more Endress+Hauser product please visit: www.ainstru.com
Mail: Sales@ainstru.com